



SIMPLE MANUAL

GAMING SPEAKER

GP9



MFL71805578

2203_Rev01



www.lg.com

Copyright © 2021-2022 LG Electronics Inc.
All Rights Reserved.



Download Manual


⟨Android⟩




⟨iOS⟩



Download App

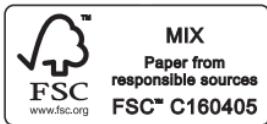

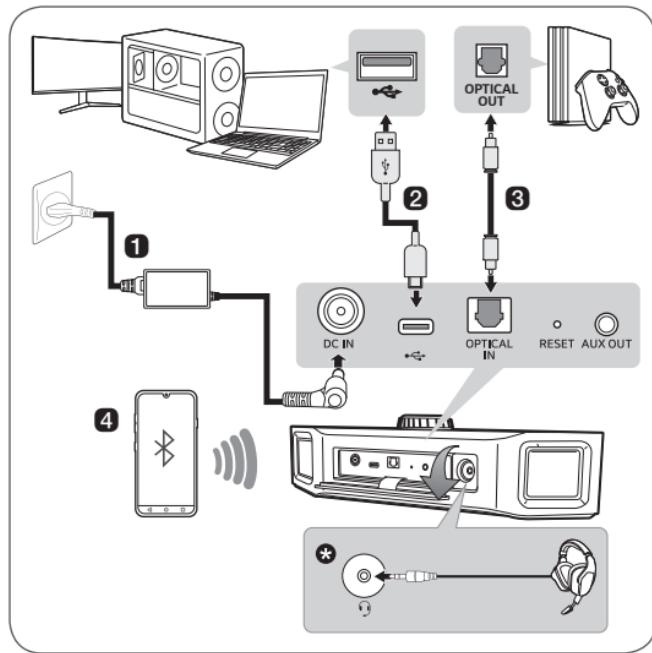

ENGLISH

Connecting and Using the Speaker

- ① Charge the speaker before using it by opening the rear cover and connecting the speaker to the charging adapter.
- ② Connect the speaker to the PC via a USB cable

★ If there is no audio output when the speaker and device (PS4/PS5/PC, etc.) are connected with a USB cable, turn off the UAC 2.0 option in the XBOOM App or PC App menu. The setting is applied when the speaker is turned off and then on.

- ① Connect the speaker to the PC via a USB C-type cable.
- ② Press the **Power**  button on the speaker to turn it on.

③ Press the **Function**  button on the speaker repeatedly until the Function LED turns white.

① If you are using a voice chat through integrated microphone or headset, press the **Microphone**  button.

③ Connect the speaker to the Game Console via an optical cable

- ① Connect the speaker to the Game Console via an optical cable.
- ② Press the **Power**  button on the speaker to turn it on.
- ③ Press the **Function**  button on the speaker repeatedly until the Function LED turns red.

④ Connect the speaker to a smartphone via Bluetooth

- ① Press the **Power**  button on the speaker to turn it on.
- ② Press the **Function**  button on the speaker repeatedly until the Function LED flashes blue.

- ③ Press the **Settings**  button on the smartphone and select **Bluetooth** . Turn on the Bluetooth function.
(Off  > On )
- ④ Find "LG-GP9 (XX)" on the device list on the smartphone and connect to it. Once the smartphone is connected via Bluetooth, the Function LED turns blue.
- ⑤ On the smartphone, play a music of your choice.
- 5 Connecting the LG XBOOM App**
- ① Find **LG XBOOM** app on the **Google Play** or **App Store** and install it on your smartphone.
- ② Run the **LG XBOOM** app and use more features (EQ, Voice Chat, Setting etc.)
- ③ For EQ of Headset mode, the sound effects button on the top of the product may be different depending on the product S/W version.

- After product S/W update, you can use the DTS Headphone: X or Custom EQ with the EQ button while the **Headset**  button is On. FPS or RTS cannot be selected in Headset mode.

Press and hold the **Headset**  button for 2 seconds to turn the front lighting on or off.

★ For using a headset or earphones connect it to the  terminal.

- Design and specifications are subject to change without notice.
- For more information, download the online owner's manual <http://www.lg.com>

ENGLISH

Specification

Power Supply:

- 19 V  2.1 A (AC Adapter)
- Built-in rechargeable battery

Power consumption

- Refer to the main label.

AC adapter

- Model : ADS-45SN-19-2 19040G
- Manufacturer : SHENZHEN HONOR ELECTRONIC CO.,LTD
- Input : 100 - 240 V ~ 50/60 Hz
- Output : 19 V  2.1 A

Dimensions (W x H x D):

Approx. 376 mm x 86 mm x 108 mm

Operating Temperature: 5 °C to 35 °C

Operating Humidity: 5 % to 60 %

Attaching the ferrite core (optional)

Wind the headset's wire once around the ferrite core.



Safety Information

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING:

- TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
- Do not install this equipment in a confined space such as a book case or similar unit.
- This unit contains magnets which can be harmful to some kind of object (Ex : Magnetic card, Pacemaker etc.).

CAUTION:

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.
- The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- To avoid fire or electric shock, do not open the unit. contact to qualified personnel only.
- Do not leave the unit in a place near the heating appliances or subject to direct sunlight, moisture, or mechanical shock.
- The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.
- To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.
- Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.
- Do not place the unit over the vehicle's air bag. When the air bag deploys, it may result in injury. Before using in the car, fix the unit.
- Do not use the handsfree function during driving a car.

- Do not leave the unit on an unstable place such as high shelves. it may fall down because of the vibration of the sound.
- Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION when using this product in environments of low humidity.

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION: Only use the AC adapter supplied with this device. Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

Symbols

	Refers to alternating current (AC).
	Refers to direct current (DC).
	Refers to class II equipment.
	Refers to stand-by.
	Refers to "ON" (power).
	Refers to dangerous voltage.

For models using a built-in battery

Do not store or transport at pressures lower than 11.6 kPa and at above 15,000 m altitude.

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

For models using a battery

This device is equipped with a portable battery or accumulator.

CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect type.

How to Safely remove the batteries or the battery pack from the equipment: To Remove the old batteries or battery pack, follow the assembly steps in reverse order. To prevent contamination of the environment and bring on possible threat to human and/or animal health, the old batteries or the battery pack must be put in an appropriate container at designated collection points. Do not dispose of batteries or battery pack together with other waste. It is recommended that you use local, free reimbursement systems batteries or battery packs, (may not be available in your area). The batteries or the battery pack should not be exposed to excessive heat such as sunshine, fire or the like.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

[For Saudi Arabia]

- 1) All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 2) The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health.
- 3) For more detail information about disposal of your old batteries, please contact your city office, waste disposal service or the shop where you purchased the product. Also You can contact our LG Support Representative Call center from below Link
https://www.lg.com/sa_en/support/contact/telephone

SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The working life of this set is 7 years since the date of delivery to consumer. Upon the expiry of the said period, it might be unsuitable for the use according to their designation.

PRECAUTIONS

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.
- Avoid using near a magnetic field. (This will adversely affect the units performance.)
- Be careful when the surface of the case is wiped with a volatile agent such as benzene, alcohol, thinner, etc. or a chemically processed cloth, the surface finish may deteriorate or its coating may peel.
- Use the unit only in a horizontal position, and do not place anything heavy on it.
- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids should spill into unit, serious damage could occur. In that case, please consult qualified service personnel.
- Do not obstruct the ventilation holes: they prevent overheating. Even soft materials such as paper and cloth may prevent proper ventilation of the unit.
- **There are no serviceable parts inside. For service, please contact your service centre.**

**JEDDAH MAIN SERVICE CENTER
P.O.BOX 704, JEDDAH 21421 KINGDOM OF SAUDI ARABIA
TEL) 02-629-2929**

**JEDDAH QUICK SERVICE CENTER
TEL) 02-663-3888 EXT. 340,343**

**RIYADH BRANCH SERVICE CENTER
TEL) 01-461-5559**

**AL KHOBAR BRANCH SERVICE CENTER
TEL) 03-857-2629/2637**



الدليل المبسط

مكبر صوت الألعاب



GP9




MFL71805578

2203_Rev01

www.lg.com

حقوق النشر والتاليف © لعام ٢٠٢١ - ٢٠٢٢ LG Electronics Inc.
جميع الحقوق محفوظة.



تنزيل الدليل




<iOS>



تنزيل التطبيق

<Android>



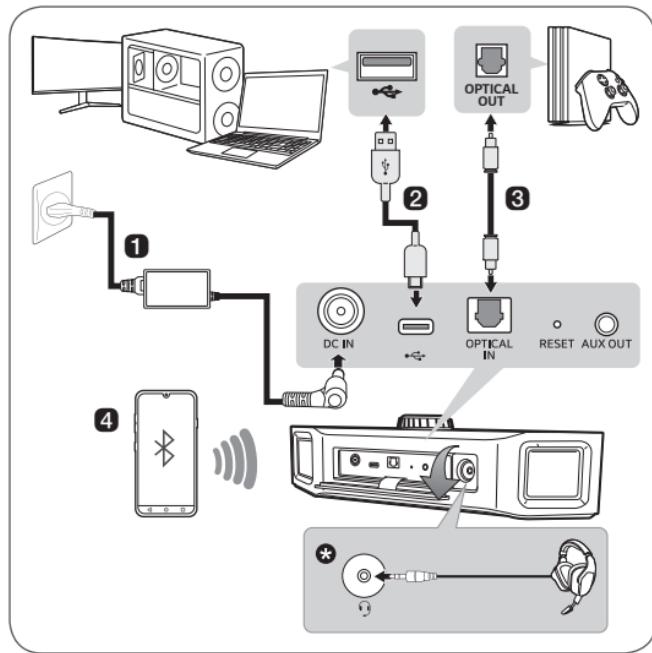

العربية

توصيل مكبر الصوت واستخدامه

١ شحن مكبر الصوت قبل استخدامه عن طريق فتح الغطاء الخلفي وتوصيله بمدول الشحن.

٢ توصيل مكبر الصوت بجهاز الكمبيوتر باستخدام كبل USB

* في حالة عدم وجود اخراج صوتي عند توصيل مكبر الصوت والجهاز (PS4/PC/USB)، يكفي ادخال كبل USB، فارتفع خيار 2.0 UAC في تطبيق **XBOOM** أو قائمة تطبيقات الكمبيوتر. يُطلق الإعداد عند إيقاف تشغيل مكبر الصوت ثم تشغيله.

١ توصيل مكبر الصوت بجهاز الكمبيوتر باستخدام كبل USB من النوع C.

٢ اضغط على زر التشغيل (٤) في مكبر الصوت لتشغيله.

٣ اضغط على زر الوظائف (٣) الموجود في مكبر الصوت حتى يضيء ضوء LED الخاص بالوظائف باللون الأبيض.

٤ إذا كنت تستخدم محاتة صوتية من خلال الميكروفون أو سماعة الرأس المتكاملة، اضغط على زر الميكروفون (٥).

٥ توصيل مكبر الصوت بوحدة التحكم في اللعبة باستخدام كبل بصري

٦ توصيل مكبر الصوت بوحدة التحكم في اللعبة باستخدام كبل بصري.

٧ اضغط على زر التشغيل (٤) في مكبر الصوت لتشغيله.

٨ اضغط على زر الوظائف (٣) الموجود في مكبر الصوت حتى يضيء ضوء LED الخاص بالوظائف باللون الأحمر.

٩ توصيل مكبر الصوت بهاتف ذكي باستخدام **Bluetooth**

١٠ اضغط على زر التشغيل (٤) في مكبر الصوت لتشغيله.

١١ اضغط على زر الوظائف (٣) الموجود في مكبر الصوت حتى يضيء ضوء LED الخاص بالوظائف باللون الأزرق.

مخصص باستخدام زر EQ أثناء تشغيل زر سماعة الرأس [١]. ينذر تحديد FPS أو RTS في وضع سماعة الرأس.

اضغط مطولاً على زر سماعة الرأس [٤] لمدة ثانيةين لتشغيل الضوء الأمامي أو إيقاف تشغيله. ★ لاستخدام سماعة الرأس أو سماعات الأذن قم بتنصيبهم بالوحدة الطرفية [٥].

- يخضع التصميم والمواصفات للتغيير دون إشعار مسبق.
- ولزيادة المعلومات، يمكنك تحميل دليل المالك عبر الإنترنت من خلال موقعنا <http://www.lg.com>.

③ انقر فوق زر الإعدادات [٦] في الهاتف الذكي وحدد **Bluetooth** وظيفة **Bluetooth**.

(  > تشغيل ( ))
④ اعثر على "LG-GP9 (XX)" في قائمة الأجهزة على الهاتف الذكي واتصل به. بمجرد اتصال الهاتف الذكي عبر LED، سيسقط ضوء **Bluetooth** الخاص بالوظائف باللون الأزرق.

⑤ على الهاتف الذكي، قم بتشغيل موسيقى من اختيارك.

⑤ التوصيل بتطبيق LG XBOOM

① ابحث عن تطبيق **LG XBOOM** على **App Store** أو **Google Play** وتنبه على هاتفك الذكي.

② قم بتشغيل تطبيق **LG XBOOM**، واستخدم المزيد من الميزات (EQ، والدردشة الصوتية، والإعدادات وغيرها).

③ بالنسبة لـ EQ الخاص بوضع سماعة الرأس، قد يختلف زر المؤثرات الصوتية الموجود أعلى المنتج وفقاً لإصدار S/W الخاص بالمنتج.
- بعد تحديث S/W الخاص بالمنتج، يمكنك استخدام سماعة رأس X EQ أو DTS X.

العربية

معلومات السلامة

تنبيه: لتنقيل خطر حدوث صدمة كهربائية، لا تتنزع الغطاء (الغطاء الخلفي). لا توجد أجزاء داخلية يمكن صيانتها من جانب المستخدم، يجب إخاله أمر الصيانة إلى فني خدمة مؤهل.

يهدف الرمز الذي يحتوي على صاعقة  برأس سهم داخل مثلث متساوي الأضلاع إلى تحذير المستخدم إلى وجود جهد كهربائي خطير غير معزول داخل حاوية المنتج والذي قد يكون كافياً بحيث يشكل خطراً يعرض الأشخاص لصدمة كهربائية.

كما يشير الرمز الذي يحتوي على علامة  توجب دلائل مثلث متساوي الأضلاع إلى تنبيه المستخدم إلى وجود تعليمات تشغيل وصيانة (خدمة) مهمة في الكتيب المرفق مع المنتج.

المواصفة

مصدر الطاقة:

- ١٩ فولت ٢,١ أمبير (محول تيار متعدد)
- بطارية مدمجة قابلة لإعادة الشحن
- استهلاك الطاقة
- رائع التسمية الرئيسية.

محول تيار متعدد

- الطاراز: ADS-45SN-19-2 19040G
- الجهة المصنفة: SHENZHEN HONOR

ELECTRONIC CO.,LTD

- الدخل: ١٠٠ - ٢٤٠ فولت ~ ٦٠/٥٠ هرتز
- الخرج: ١٩ فولت ٢,١ أمبير

الأبعاد (ع × ط × ع):

- تقريباً ٣٧٦ ملم × ٨٦ ملم × ١٠٨ ملم
- درجة حرارة التشغيل: ٥ درجات مئوية إلى ٣٥ درجة مئوية
- درجة رطوبة التشغيل: ٥% إلى ٦٠%
- تركيب حلقة حديبية (اختياري)

قم بلف سلك ساعة الراي حول الحلقة الحديبية مرة واحدة.



- ينفي عدم وضع مصادر الهيب المكشوف، مثل التسخين المنشطة، على الجهاز.
 - لا تفتح الوحدة لتجنب الحرائق أو الصدمة الكهربائية.
 - اتصال بشخص مؤهل فقط.
 - لا ترك الوحدة في مكان يقرب من أجهزة التلفزيون أو تعرضاً لأشعة الشمس المباشرة أو الرطوبة أو الصدمة الميكانيكية.
 - قابس الكهرباء هو الأداة المستخدمة في الفصل. يجب أن يكون قابس الكهرباء متصلة بالوصول إليه باستقرار في حالات الطوارئ.
 - انتظف الطاقة، استخدم قطعة قماش ناعمة وجافة. إن كانت الأسطح متخصصة للغاية، استخدم قطعة قماشية ناعمة مبللة بمحلول منظف معتمد. لا تستخدم المنيات القوية مثل الكلور أو البنزين أو التتر نظراً لأن هذه المنيات قد تتسبب في تلف سطح الوحدة.
 - لا تستخدم السواقي المتطربة مثل رذاذ المبيد الحشري قرب الوحدة، قد يتسبب الماسح مع شدة الضغط في تلف السطح. لا تترك منتجات مطاطية أو بلاستيكية على اتصال بالوحدة لفترة طويلة من الوقت.
 - لا تضع الوحدة على الوسادة الهرمية بالسياقة. عندما تعمل الوسادة الهرمية، يمكن أن يسبب ذلك أصابة. قد يتسبب التلف في قلب الاستخدام في السيارة.
 - لا تستخدم وظيفة التحدث حر اليدين أثناء قيادة السيارة.
 - ينفي عدم خطر نشوب الحرائق أو حدوث الصدمات الكهربائية، لا تعرض الجهاز للخطر أو الرطوبة.
 - لا تثبت هذا الجهاز في مكان ضيق مثل مكتبة أو وحدة مشابهة.
 - تتحيز هذه الوحدة على قطع مغناطيسية قد تسبب الضرر لبعض الأشياء (مثلاً: البطاقات المغنة، منظم ضربات القلب إلخ.).
 - تبيه: لا تقم ببس أي من تحذيرات التهوية. ينفي تركيب الجهاز وفقاً لتعليمات المصمم.
 - ويرجى الانتهاء إلى أن وظيفة التقويم والفتحات الموجودة في الحجارة تتمثل في توفير التهوية وضمان التشغيل الآمن للمنتج وحمايةه من السخونة الزائدة.
 - ينفي عدم سد الفتحات بوضع المنتج على سرير أو أريكة أو أي سطح آخر غيره بذلك. ينفي عدم وضع هذا المنتج في التجهيزات المدججة مثل المكتبة أو الرف أو ملأ يتم توفير التهوية المناسبة أو يتم الالتزام بتعليمات الشركة المصنعة.
 - لا يجب تعريض المنتج للماء (قطارات الماء أو الرذاذ) ولا يجب وضع أي شيء ملوءة بالماء، مثل الهرمية، فوق الجهاز.

الرموز	
يشير إلى التيار المتردد (AC).	\sim
يشير إلى التيار المباشر (DC).	\equiv
يشير إلى معدات الفئة الثانية.	\square
يشير إلى الاستعداد.	\odot
يشير إلى "تشغيل" (الطاقة).	$ $
يشير إلى جهد خطير.	\triangle

• لا تترك الوحدة على مكان غير ثابت مثل الأرفف العالية. يمكن أن تقع بسبب الاهتزاز الناتج عن الصوت.

• لا تستخدم منتجات ذات جهد عال حول هذا المنتج.

(مثلا، منطة كهربائية) قد يتغطى المنتج بسبب صدمة كهربائية.

تبية عند استخدام هذا المنتج في بيئة منخفضة الرطوبة.

حيث قد يتسبب في إنتاج شحنات كهربائية استاتيكية في البيئات منخفضة الرطوبة.

يُنصح باستخدام هذا المنتج بعد لمس أي سطح معدني يوصل الكهرباء.

إخطار: لمعرفة المعلومات المتعلقة بإرشادات السلامة بما في ذلك هوية المنتج وتصنيفات الإمداد، يرجى الرجوع إلى المصنف الرئيسي الموجود في الجزء السفلي أو الجانب الآخر من المنتج.

تبية: استخدم فقط ممول التيار المتردد الموجود مع الجهاز. لا تستخدم مصدر طاقة خاص بجهاز آخر أو مصنع آخر. إن استخدام أي كابل أو مصدر آخر للطاقة قد يتسبب في حدوث ثلف بالجهاز وإبطال الضمان.

للهواتف التي تستخدم بطارية
هذا الجهاز مزود ببطارية محمولة أو بطارية مختزنة.
تنبيه: هناك خط حوث حريق أو انفجار إذا أسيئت
البطارية بنوع غير صحيح.
كيفية إزالة البطاريات أو مجموعة البطارية بشكل آمن
من الجهاز: إزالة البطاريات القديمة أو مجموعة
البطارية، أتبع خطوات التجميع بترتيب تكعيبي، لمنع
تلوث البيئة وإحداث تهديد محتمل لصحة الإنسان وأو
الحيوان، يجب وضع البطاريات القديمة أو مجموعة
البطارية في حاوية مناسبة باتفاق التجمع المختص.
لا تخلص من البطاريات أو مجموعة البطارية مع
المخلفات الأخرى، يوصى بأن تستخدم بطاريات أو
مجموعات بطارية أنظمة السداد المائية والمجانية، (قد لا
توفر في منطقتك)، ينبغي لا تتعرض البطاريات أو
مجموعة البطارية للحرارة الزائدة مثل أشعة الشمس أو
الحرق أو ما شابه ذلك.

- للهواتف التي تستخدم بطارية مدمجة
لا تخزن أو تنقل تحت قيم ضغط أقل من 11,6 كيلو
باسكال وعلى ارتفاع أكبر من 1000 م.
- استبدال البطارية بنوع غير صحيح قد يضعف الحماية
(على سبيل المثال، في حالة بعض أنواع بطاريات
اللithium)؛
 - التخلص من البطارية بالقلتها في النار أو الفرن
الساخن، أو بسحقها أو قصها ميكانيكياً قد يؤدي إلى
حوث انفجار؛
 - ترك البطارية في بيئة محاطة بدرجة حرارة عالية
للغاية يمكن أن يؤدي إلى انفجار أو تسرب سائل أو
غاز قابل للاشتعال؛
 - تعرض البطارية لضغط هواء منخفض للغاية قد ينتج
عنه انفجار أو تسرب سائل أو غاز قابل للاشتعال.

[للمملكة العربية السعودية]

ملاحظة سلامة هامة

- (١) يجب التخلص من جميع البطاريات بشكل منفصل عن مهاري التقنيات البلدية عن طريق مرفق الجمع المعينة التي تعينها الحكومة أو السلطات المحلية.
- (٢) يساعد الشخص الصحيح من البطاريات القديمة في منع الآثار السلبية المحتملة على البيئة وصحة الحيوان والبشر.
- (٣) لمزيد من المعلومات التفصيلية حول التخلص من البطاريات القديمة ، يرجى الاتصال بمكتب خدمة التخلص من التقنيات في مدينتك أو المتجر الذي اشتريت منه المنتج. كما يمكنك الاتصال بمركز اتصال مثل دعم LG عن طريق الدخول على الرابط التالي
- لا تستعمل مرة أخرى هذا القابس .
يجب استخدام قابس جديد للتأكد على سلامتك بصورة متواصلة وذلك عن طريق إدخال القابس إلى الوصلة الكهربائية طبقاً للواحة القابس والمقبس للعام 1994.

[https://www.lg.com/sa_en/support/
contact/telephone](https://www.lg.com/sa_en/support/contact/telephone)

تحذير من أجل السلامة

يجب فصل هذا الجهاز عن مخرج التيار الكهربائي الرئيسي أثناء عدم استخدامه. لا تسمح لهذا الجهاز بالاتصال
للأمطار أو الرطوبة.

تحذير تحذير

من أجل منع وقوع الصدمة الكهربائية، لا تسحب عن الغطاء. لا يوجد في الداخل أجزاء للاستخدام. التصليح
يجب أن يقوم به الشخص المختص.

فترة تشغيل هذا الجهاز سبع سنوات من تاريخ التسليم إلى الزبون. عند انتهاء الفترة المحددة أعلاه ربما لا تعود
صالحة للاستخدام بسبأ للمواصفات.

تحذيرات للوقاية

اقرأ هذه التعليمات قبل تشغيل الجهاز

- تجنب درجات الحرارة أو البرودة العالية والرطوبة والغبار.
- تجنب الاستخدام قريباً من حقل مغناطيسي (سيؤثر سلباً على إنجاز الجهاز).
- حاذر عند مسح الغطاء بمادة متطهيرة كالبنزين والكحول إلخ أو قطعة قماش معالجة بماء كيماوية. ربما يؤدي ذلك إلى إتلاف سطح الغطاء أو تغير الطلاء.
- استخدم هذا الجهاز فقط بوضع أقفي و لا تتضع فوقه أي شيء تقلي.
- حافظ على وضع الجهاز بعيداً عن أحواض الزهور و أنابيب الماء و حوض الغسيل، إذا سقط عليه أي مادة سائلة فقد يحدث تلف كبير للجهاز. في مثل هذه الحالة قم بعرضه على خبير فني متخصص.
- لا تحرز منطقة التهوية، تقويب التهوية تمنع زيادة السخونة. وحتى المواد الخفيفة أو الناعمة كالورق أو القماش قد تنسد تقويب التهوية.
- لا يوجد أجزاء للاستخدام من الداخل. من أجل الإصلاح والصيانة اعرضه على الفني المتخصص.

مركز جدة الرئيسي للخدمات
ص. ب ٢٢٤٢١، جدة ٧٠٤، المملكة العربية السعودية
هاتف: ٦٢٩-٢٩٢٩٠٢٠

مركز جدة للخدمات السريعة
هاتف: ٣٤٣-٣٨٨٨-٠٢٦٦٣٠٢٠

مركز الرياض الفرعى للخدمات
هاتف: ١٤٦١٥٥٥٩٠

مركز الخبر الفرعى للخدمات
هاتف: ٣٨٥٧-٢٦٣٧/٢٦٢٩٠٣٠