

SIMPLE MANUAL

DVD Home Theater System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
LHD427




MFL70721749
1903_Rev01

www.lg.com
Copyright © 2019 LG Electronics Inc. All Rights Reserved.

ENGLISH




Front Panel




MIC 1/2 Connect a microphone.
PORT. IN Connect to a Portable device.
USB Port Connect a USB device.
▲ Disc Tray Open / Close
>II Starts / Pauses playback.
□ Stops playback.
F Changes the input source or function.
VOL. Adjusts volume.
⏻ Power On / Off

1 Speaker Connection

1 Speaker design and connection method may be different according to models.

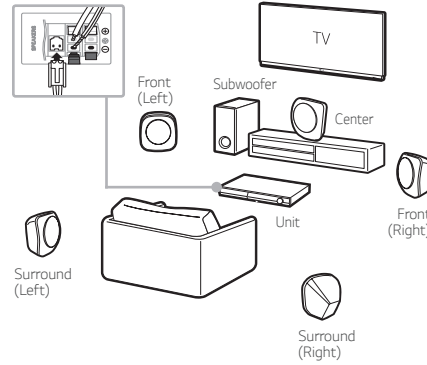

Rear Panel




SPEAKERS Connect to speakers.
HDMI OUT TO TV Connect to TV.
AUX (L/R) INPUT Connect to analogue device.
VIDEO OUT Connect to TV.
ANTENNA FM Connect to radio antenna.

2 TV Connection

HDMI Connection

- 1 Connect the unit to the TV using HDMI cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Follow the instructions on the TV screen using remote control.

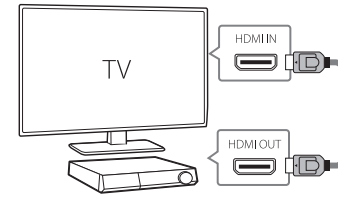

For more information, download the online owner's manual. <http://www.lg.com>

3 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the unit.




Additional Information

Specification

Power requirements	Refer to main label.
Power consumption	Refer to main label.
Dimensions (W x H x D) (With foot)	360 mm x 62 mm x 304 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	330 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

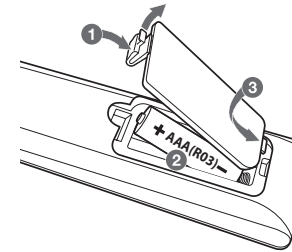

دليل بسيط

نظام DVD المسرح المنزلي

يُرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز الذي بحوزتك واحتفظ به للرجوع إليه في المستقبل.

لعرض تعليمات الخصائص المتقدمة، تفضل بزيارة موقعنا <http://www.lg.com> وقم بتحميل دليل المالك. يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز

LHD427




MFL70721749
1903_Rev01

www.lg.com
حقوق النشر والتأليف © لعام ٢٠١٩ لـ LG Electronics Inc. جميع الحقوق محفوظة.

الرجاء،




اللوحة الأمامية




- MIC 1/2** أوصل ميكروفون.
- PORT. IN** أوصل بجهاز محمول.
- منفذ USB** يُستخدم للتوصيل بجهاز USB.
- △ فتح / غلق درج الأقراص.
- >|| بدء التشغيل / الإيقاف المؤقت.
- إيقاف التشغيل.
- F** تغيير مصدر أو وظيفة الإدخال.
- VOL.** يضبط مستوى الصوت.
- ⏻ تشغيل/إيقاف تشغيل الطاقة.

توصيل السماعة

❗ يختلف تصميم السماعة وطريقة توصيلها حسب الطرز.

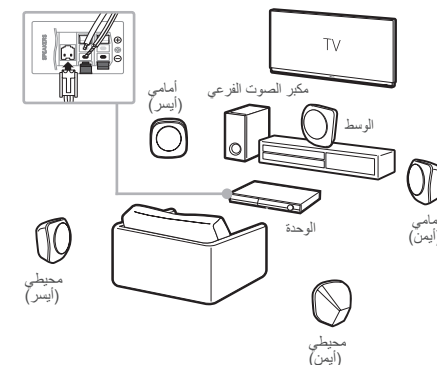

اللوحة الخلفية




- SPEAKERS** الاتصال بالسماعات.
- HDMI OUT TO TV** الاتصال بالتلفاز.
- AUX (L/R) INPUT** الاتصال بجهاز تناظري.
- VIDEO OUT** الاتصال بالتلفاز.
- ANTENNA FM** الاتصال بهوائي اللاسلكي.

توصيل التلفاز

HDMI اتصال

- ❶ قم بتوصيل جهاز التشغيل بالتلفاز باستخدام كبل HDMI.
- ❷ اضمن بط زر تحديد الإدخالات على HDMI في التلفاز.
- ❸ اتبع التعليمات التي تظهر على شاشة التلفاز باستخدام جهاز التحكم عن بعد.

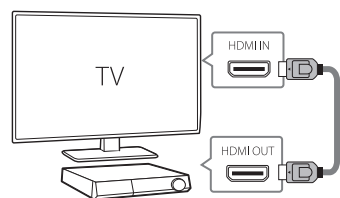

للمزيد من المعلومات، قم بتنزيل دليل المالك عبر شبكة الإنترنت. <http://www.lg.com>

القائمة الرئيسية

تظهر القائمة الرئيسية على شاشة التلفاز. تمتع بالوظائف المتنوعة في جهاز التشغيل.



معلومات إضافية

المواصفات

متطلبات الطاقة	ارجع إلى الملصق الرئيسي
استهلاك الطاقة	ارجع إلى الملصق الرئيسي
الأبعاد الخارجية (العرض x الارتفاع x العمق)	حوالي ٣٦٠ مم x ٦٢ مم x ٣٠٤ مم (مع قدم)
وحدة التغذية بالطاقة (النافذة USB)	٥ فولت === ٥٠٠ مللي أمبير
مضخم الصوت (إجمالي طاقة مخرج RMS)	٣٣٠ وات RMS

التصميمات والمواصفات عرضة للتغيير دون إشعار مُسبق.

استبدال البطارية

