ENGLISH

SIMPLE MANUAL

HIGH POWER SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

RN5


MFL71668552
2004_Rev02

www.lg.com

Copyright © 2021 LG Electronics Inc. All Rights Reserved.



Top panel

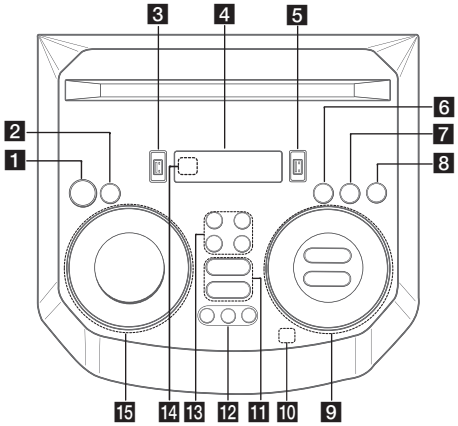

1 ⏻ (Standby)
Turns the power on or off.

2 USB REC / DEMO
- Records to USB.
- Stops recording.
- In power off status, if you press **USB REC / DEMO**, show demo mode.

3 USB 1 Port
You can play sound files by connecting the USB device.

4 Display window

5 USB 2 Port
You can play sound files by connecting the USB device.

6 **F** (Function)
Selects the function and input source.

7 LIGHTING
Selects the lighting mode.

8 TWIN
Connects two units for TWIN mode in WIRELESS PARTY LINK.

9 ⏮/⏭ (Skip/Search)
- Skips backward or forward.
- Searches for a section within a file.
- Selects the radio stations.

⏯ (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.
- **Bluetooth** connection lock (BT LOCK): Select the **Bluetooth** function by pressing **F** repeatedly. And long press ⏯ to limit **Bluetooth** connection to only BT and LG TV.

AUTO DJ
Selects the AUTO DJ mode.

VOL (Volume) **-/+**
Adjusts speaker volume.

MIC (Microphone) **/ GUITAR -/+**
Adjusts Microphone volume or Guitar volume.

10 (Auto Music Play)
Plays the audio currently playing by tagging the mobile (with "LG XBOOM" App) to this unit. (Android Only)

11 VOICE CANCELLER
You can reduce the vocal tones during music playback from various input sources.

EQ
Chooses sound impressions.

12 **CLUB, DRUM, USER** (DJ PAD)
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "LG XBOOM" app.(Android Only))

1, 2, 3 (DJ PAD)
Press a desired sound pad.

13 **MIC** (Microphone) **ECHO**
Selects ECHO mode.

VOCAL EFFECTS
Selects various vocal effects mode.

KEY CHANGER (♭/#)
Changes the key to suit your vocal range.

14 Remote sensor

15 **SPECIAL EQ / BASS BLAST** (or **BASS BLAST+**)
- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.


SEARCH
Moves to folder or file in selection mode.


OK
Selects a folder when searching a file.

USER EQ
Selects the equalizer created by your own.

Multi jog
- Searches a folder or a file.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Chooses special equalizer.

Front panel / Rear panel

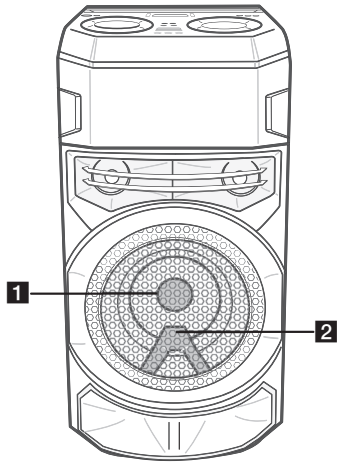

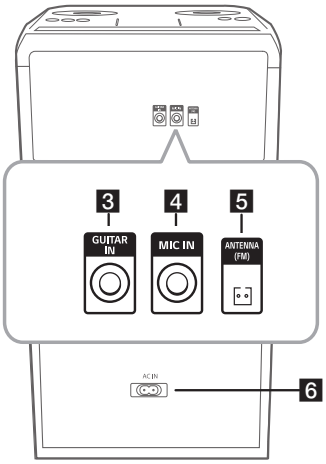

1 Lighting
2 Remote sensor

3 **GUITAR IN:** Connect a guitar.
4 **MIC** (Microphone) **IN:** Connect a microphone.
5 **ANTENNA** (FM)
6 **AC IN** socket

Controller App

Android iOS

Download the **LG XBOOM** App to your device.

LG Sound Sync (Wireless)



For more information, download the online owner's manual. **http://www.lg.com**

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330.0 mm x 685.0 mm x 344.0 mm
Bus Power Supply (USB)	5 V ⎓ 500 mA

Design and specifications are subject to change without notice.


Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

Replacement of battery

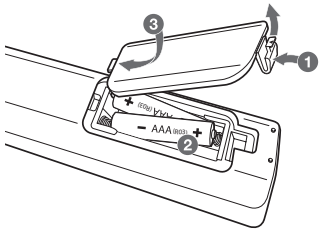

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.



SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

PRECAUTIONS

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.
- Avoid using near a magnetic field. (This will adversely affect the units performance.)
- Be careful when the surface of the case is wiped with a volatile agent such as benzene, alcohol, thinner, etc. or a chemically processed cloth, the surface finish may deteriorate or its coating may peel.
- Use the unit only in a horizontal position, and do not place anything heavy on it.
- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids should spill into unit, serious damage could occur. In that case, please consult qualified service personnel.
- Do not obstruct the ventilation holes: they prevent overheating. Even soft materials such as paper and cloth may prevent proper ventilation of the unit.
- **There are no serviceable parts inside. For service, please contact your service centre.**

العربية

LG
Life's Good

دليل مبسط

نظام السماعات ذي القوة العالية

يرجى قرأه هذا الدليل بعناية قبل تشغيل جهازك واحتفظ به للرجوع إليه في المستقبل.
لعرض تعليمات الميزات المتقدمة، تفضل بزيارة موقع الويب http://www.lg.com، ثم قم بتنزيل دليل المالك.
يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز

RN5


MFL71668552
2004_Rev02

www.lg.com

حقوق النشر والتأليف © لعام ٢٠٢١ لـ LG Electronics Inc. جميع الحقوق محفوظة.



اللوحة العلوية

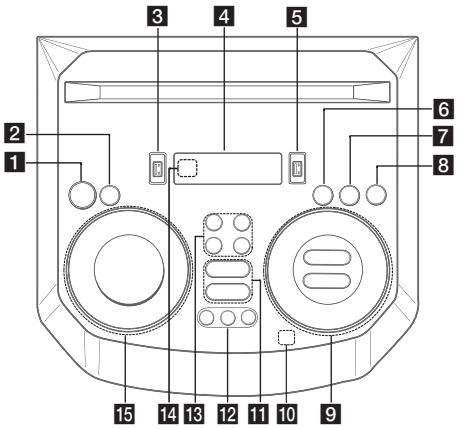

1 ⏻ (الاستعداد)
يشغل السماعة أو يوقف تشغيلها.

2 USB REC / DEMO
- التسجيل إلى الذاكرة المتنقلة USB.
- إيقاف التسجيل.
- في حالة إيقاف التشغيل، إذا ضغطت على زر **USB REC / DEMO**، سيتم عرض الوضع التجريبي.

3 منفذ USB1
يمكن تشغيل ملفات الصوت عن طريق توصيل جهاز USB.

4 نافذة العرض

5 منفذ USB2
يمكن تشغيل ملفات الصوت عن طريق توصيل جهاز USB.

6 F (الوظيفة)
اختيار الوظيفة ومصدر الإدخال.

7 LIGHTING
اختيار وضع الإضاءة.

8 TWIN
يوصل سماعتين من أجل وضع TWIN في WIRELESS PARTY LINK.

9 ⏮/⏭ (تخطي/بحث)
- التخطي للأمام أو الخلف.
- البحث عن مقطع داخل ملف.
- تحديد محطة الراديو.

⏯ (تشغيل/إيقاف)
- يبدأ التشغيل أو يوقفه مؤقتا.
- اختيار ستيريو/ أحادي.
- تأمين اتصال **Bluetooth** (BT LOCK): اختر وظيفة البلوتوس بالضغط على مفتاح **F** بشكل متكرر. ثم اضغط ضغطة طويلة على ⏯ لتحجيم اتصال البلوتوس ليتصل بـ BT وLG TV وحسب.

AUTO DJ
لاختيار الوضع AUTO DJ.

+/- VOL (الصوت)
اضبط مستوى صوت السماعة.

+/- GUITAR / MIC (مايكروفون)
اضبط مستوى صوت المايكروفون أو صوت الغيتار.

10 (تشغيل موسيقى تلقائي)
يشغل الصوت الذي يتم تشغيله حاليًا عبر تمييز الهاتف الجوال لهذه الوحدة (باستخدام تطبيق "LG XBOOM"). (أجهزة Android فقط)

11 VOICE CANCELLER
يمكنك تقليل النغمات الصوتية أثناء تشغيل الموسيقى من مصادر الإدخال المختلفة.

EQ
يختار مرات ظهور الصوت.

12 USER ,DRUM ,CLUB (DJ PAD)
تحديد المؤثر الصوتي CLUB أو DRUM أو USER للمزج.
(إذا كنت ترغب باستخدام USER، عليك تسجيل مصدر من خلال تطبيق "LG XBOOM". (أندرويد فقط))

1, 2, 3 (DJ PAD)
اضغط على لوحة الصوت المراد.

13 ECHO (مايكروفون) **MIC**
تحديد وضع ECHO.

VOCAL EFFECTS
اختيار وضع المؤثرات الصوتية المتعددة.

KEY CHANGER (♭/#)
تغيير المفتاح ليناسب نطاقك الصوتي.

14 أداة الاستشعار عن بعد

15 SPECIAL EQ / BASS BLAST (**BASS BLAST+** أو)
- اختيار المعادل الخاص.
- اضغط مع الاستمرار في الضغط لتحديد مؤثرات BASS (أو BASS+) مباشرة.


SEARCH
الانتقال إلى مجلد أو ملف في وضع التحديد.


OK
اختيار مجلد عند البحث عن ملف.

USER EQ
اختيار المعادل الذي قمت أنت بعمله.

Multi jog
- البحث في مجلد أو ملف.
- يدور في اتجاه حركة عقارب الساعة أو عكسها للتحكم في مستوى USER EQ.
- اختيار المعادل الخاص.

اللوحة الأمامية / اللوحة الخلفية

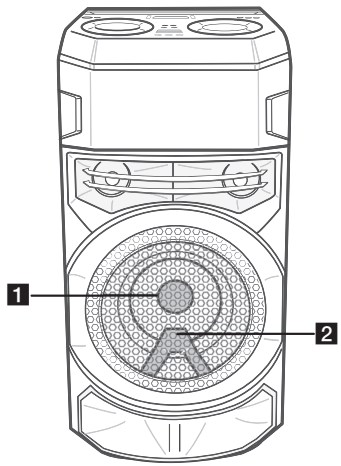

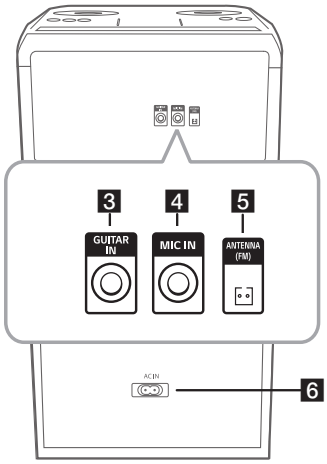

1 مصباح LED

2 مستشعر جهاز التحكم عن بعد

3 **GUITAR IN:** اتصل بالغيتار.

4 **IN** (مايكروفون) **MIC:** اتصل بالمايكروفون.

5 **ANTENNA** (FM)

6 مقبس **AC IN**

تطبيق المتحكم

أندرويد iOS

تحميل تطبيق **LG XBOOM** على جهازك.

مزامن صوت LG (لاسلكي)



لمزيد من المعلومات، حمل دليل المالك عبر الإنترنت.
http://www.lg.com

المواصفات

متطلبات الطاقة	يرجى الرجوع إلى الملصق الرئيسي الموجود على الوحدة.
استهلاك الطاقة	يرجى الرجوع إلى الملصق الرئيسي الموجود على الوحدة.
الأبعاد الخارجية (العرض × الارتفاع × العمق)	حوالي ٣٣٠,٠ مم x ٦٨٥,٠ مم x ٣٤٤,٠ مم
وحدة التغذية بالطاقة الناقلة (USB)	دخل التيار المباشر بجهد ٥ فولت ⎓ ٥٠٠ ملي أمبير

التصميمات والمواصفات عرضة للتغيير دون إشعار مُسبق.


تنبيه

- وصل سلك الطاقة بمأخذ التيار مباشرة إن أمكن وفي حالة استخدام كبل تمديد. فإنه ينصح بشدة استخدام كبل تمديد ١١٠ فولت/١٥ أمبير أو ٢٣٠ فولت/١٥ أمبير وإلا قد لا تعمل الوحدة بشكل مناسب بسبب النقص في توريد الطاقة.
- لا تحمل سلك التمديد بحمل كهربي مفرط.

ملحوظة

- لا تنظر إلى الإضاءة الصادرة من الجزء مباشرة عند تشغيل LIGHTING.
- إذا كان سطوع الإضاءة متوهجًا، قم بتشغيل إضاءة الغرفة أو إيقاف تشغيل LIGHTING بالوحدة.

استبدال البطارية

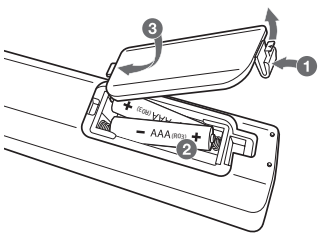

ملاحظة سلامة هامة

كلابة الوصلة للقابس مزودة مع هذا المنتج وتم تثبيتها داخل الوصلة الكهربائية الموجودة التي تم تزويدها ، إذا كان لأي سبب

احتجت لتقصير الوصلة.

لا تستعمل مرة أخرى هذا القابس
يجب استعمال قابس جديد للتأكيد على سلامتك بصورة متواصلة وذلك عن طريق إحكام إدخال القابس إلى الوصلة الكهربائية طبقا للوائح القابس والمقبس للعام 1994.



تحذير من أجل السلامة

يجب فصل هذا الجهاز عن مخرج التيار الكهربائي الرئيسي أثناء عدم استخدامه. لا تسمح لهذا الجهاز بالتعرض للأمطار أو الرطوبة.

تحذير تحذير

من أجل منع وقوع الصدمة الكهربائية، لا تسحب عنه الغطاء. لا يوجد في الداخل أجزاء للاستخدام. التصليح يجب أن يقوم به الشخص المختص.

تحذيرات للوقاية

اقرأ هذه التعليمات قبل تشغيل الجهاز

- تجنب درجات الحرارة أو البرودة العالية والرطوبة والغبار.
- تجنب الاستخدام قريباً من حقل مغناطيسي (سيؤثر سلبياً على إنجاز الجهاز).
- حاذر عند مسح الغطاء بمادة متطايرة كالبنزين والكحول إلخ أو قطعة قماش معالجة بمواد كيماوية. ربما يؤدي ذلك إلى إتلاف سطح الغطاء أو تقشير الطلاء.
- استخدم هذا الجهاز فقط بوضع أفقي ولا تضع فوقه أي شيء ثقيل.
- حافظ على وضع الجهاز بعيداً عن أحواض الزهور وأنابيب الماء وحوض الغسيل، إذا سقط عليه أي مادة سائلة فقد يحدث تلف كبير للجهاز. في مثل هذه الحالة قم بعرضه على خبير فني متخصص.
- لا تحجز منطقة التهوية، ثقوب التهوية تمنع زيادة السخوزنة. وحتى المواد الخفيضة أو الناعمة كالورق أو القماش قد تسد ثقوب التهوية.
- **لا يوجد أجزاء للاستخدام من الداخل. من أجل الإصلاح والصيانة اعرضه على الفني المتخصص.**