ENGLISH

SIMPLE MANUAL

Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL

SN5R

MFL71672762
2105_Rev02

www.lg.com

Copyright © 2022 LG Electronics Inc. All Rights Reserved.

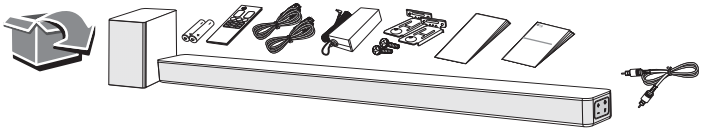

Front Panel



⏻ (Standby) ····· Switches the unit ON or OFF.
F (Function) ····· Selects function.
—/+ (Volume) ····· Adjusts volume.

Rear Panel

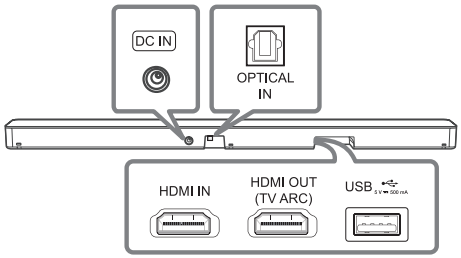

DC IN ····· Connect to the AC adapter.
OPTICAL IN ····· Connect to an optical device.
HDMI IN ····· Connect to device with HDMI OUT.
HDMI OUT (TV ARC) ····· Connect to a TV.
USB Port ····· Connect to a USB device.

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
2. Turn on the sound bar.
   - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

1. Press **PAIRING** on the rear of the wireless subwoofer.
   - The green LED on the rear of the wireless subwoofer blinks quickly.
     (If the green LED does not blink, press and hold the **PAIRING**.)
2. Turn on the sound bar.
   - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

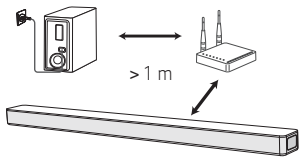

TV Connection

Connect the sound bar and TV using Optical (Ⓐ) or HDMI ARC (Ⓑ).

Ⓐ Optical Connection

1. Connect the sound bar to the TV using Optical cable.
2. Set up [External Speaker (Optical)] on your TV setting menu.

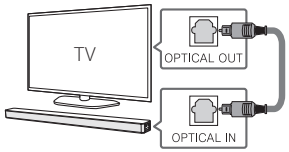

Ⓑ HDMI (ARC) Connection

1. Connect the sound bar to the TV using HDMI cable.
2. Set up [External Speaker (HDMI ARC)] on your TV setting menu.

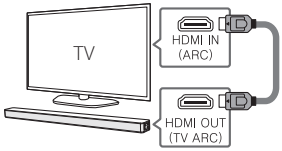

- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.

Additional Device Connection

1. Connect to the external device like as follow.

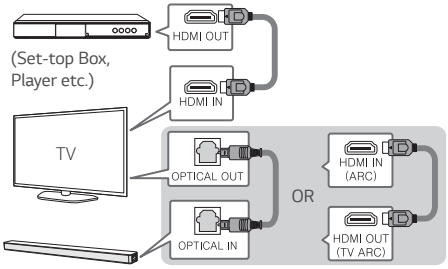

2. Set the input source by pressing **F** repeatedly.

Remote control

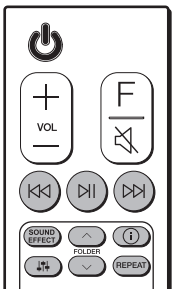

Replacement of Battery

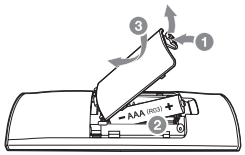

⏮/⏭: Skip/Search

⏯: Play/Pause

- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing **F** repeatedly. Long press ⏯ and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.

- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER ∧/∨: Searches a folder.

ⓘ: Displays the information of a file, an input source or connected **Bluetooth** device name.

- **Auto Power ON/OFF:** Long press ⓘ and press it again.

: Adjusts sound level of each speaker.

- **Surround sound:** Long press and press it again.

REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Specification

Power consumption	Refer to the main label.
AC adapter	• Model : DA-50F25 • Manufacturer : Asian Power Devices Inc. • Input : 100 - 240 V ~ 50 - 60 Hz • Output : 25 V ⎓ 2 A
	• Model : MS-Z2000R250-050D0-P • Manufacturer : MOSO POWER SUPPLY TECHNOLOGY CO., LTD. • Input : 100 - 240 V ~ 50/60 Hz • Output : 25 V ⎓ 2 A
Dimensions (W x H x D)	Approx. 890.0 mm X 57.0 mm X 85.0 mm With foot
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier (Total RMS Output power)	520 W RMS

Design and specifications are subject to change without notice.

Rear Surround sound

Wireless Rear Speakers Kit included for real surround sound. (SPJ4-S)

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit https://opensource.lge.com.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE



SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The working life of this set is 7 years since the date of delivery to consumer. Upon the expiry of the said period, it might be unsuitable for the use according to their designation.

PRECAUTIONS

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.
- Avoid using near a magnetic field. (This will adversely affect the units performance.)
- Be careful when the surface of the case is wiped with a volatile agent such as benzene, alcohol, thinner, etc. or a chemically processed cloth, the surface finish may deteriorate or its coating may peel.
- Use the unit only in a horizontal position, and do not place anything heavy on it.
- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids should spill into unit, serious damage could occur. In that case, please consult qualified service personnel.
- Do not obstruct the ventilation holes: they prevent overheating. Even soft materials such as paper and cloth may prevent proper ventilation of the unit.
- **There are no serviceable parts inside. For service, please contact your service centre.**

JEDDAH MAIN SERVICE CENTER
P.O.BOX 704, JEDDAH 21421 KINGDOM OF SAUDI ARABIA
TEL) 02-629-2929

JEDDAH QUICK SERVICE CENTER
TEL) 02-663-3888 EXT. 340,343

RIYADH BRANCH SERVICE CENTER
TEL) 01-461-5559

AL KHOBAR BRANCH SERVICE CENTER
TEL) 03-857-2629/2637

LG
Life's Good

ENGLISH

SIMPLE MANUAL

Wireless Rear Speakers Kit

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

SPJ4-S

MFL71723862
2005_Rev02

www.lg.com

Copyright © 2022 LG Electronics Inc. All Rights Reserved.



1 Rear Speakers Connection

Speaker design and connection method may be different according to models.

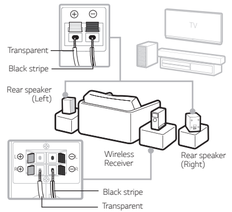

1. Connect the speaker cables to rear speakers correctly.
2. Connect the Wireless Receiver and the rear speakers (Blue: left, Grey: right) with the speaker cables.
3. Turn on the Surrond function to enjoy surround sound.

2 Wireless Receiver Connection

1. Connect the power cord of wireless receiver to the outlet.
2. Turn on the unit: The unit and wireless receiver will be **automatically** connected. The receiver's yellow - green LED turns on.

Wireless Receiver Connection Manually

If the rear speakers do not make sound, try to connect manually.

1. Press PAIRING button on the rear of the wireless receiver.
   - The yellow - green LED on the wireless receiver blinks quickly.
2. Turn on the main unit.
3. Pairing is completed.
   - The yellow - green LED on the wireless receiver turns on.

Set the distance between the sound bar and the wireless receiver as close as possible and keep them away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.



Surround Sound On/Off

When you turn on surround function, you can enjoy magnificent surround sound for all the input sound source with rear speakers.

The initial setting for the surround function is OFF, turn the surround function ON to use it.

Surround On: Press and hold button on the remote control about 3 seconds and then press button repeateadly to select ON - SURROUND in the display window.

Surround Off: Press and hold button on the remote control about 3 seconds and then press button repeateadly to select OFF - SURROUND in the display window.

Additional Information

Specification of Wireless reciever

Power requirement	Refer to the main label on the wireless receiver.
Power consumption	Refer to the main label on the wireless receiver.
Dimensions (W x H x D)	Approx. 60 mm x 220 mm x 175 mm

Design and specifications are subject to change without notice.

About Ferrite Core (Optional)



IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The working life of this set is 7 years since the date of delivery to consumer. Upon the expiry of the said period, it might be unsuitable for the use according to their designation.

PRECAUTIONS

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.
- Avoid using near a magnetic field. (This will adversely affect the units performance.)
- Be careful when the surface of the case is wiped with a volatile agent such as benzene, alcohol, thinner, etc. or a chemically processed cloth, the surface finish may deteriorate or its coating may peel.
- Use the unit only in a horizontal position, and do not place anything heavy on it.
- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids should spill into unit, serious damage could occur. In that case, please consult qualified service personnel.
- Do not obstruct the ventilation holes: they prevent overheating. Even soft materials such as paper and cloth may prevent proper ventilation of the unit.
- **There are no serviceable parts inside. For service, please contact your service centre.**

JEDDAH MAIN SERVICE CENTER
P.O.BOX 704, JEDDAH 21421 KINGDOM OF SAUDI ARABIA
TEL) 02-629-2929
JEDDAH QUICK SERVICE CENTER
TEL) 02-663-3888 EXT. 340,343
RIYADH BRANCH SERVICE CENTER
TEL) 01-461-5559
AL KHOBAR BRANCH SERVICE CENTER
TEL) 03-857-2629/2637

LG
Life's Good

طيسبلا ليلدلا

طاقم السماعات الخلفية اللاسلكية

يُرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز الذي بحوزتك واحتفظ به للرجوع إليه في المستقبل.
لعرض تعليمات الخصائص المتقدمة، تفضل بزيارة موقعنا http://www.lg.com وقم بتحميل دليل المالك. يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز
SPJ4-S

www.lg.com
حقوق النشر والتأليف © لعام ٢٠٢٢ لـ LG Electronics Inc. جميع الحقوق محفوظة.

MFL71723862
2005_Rev02

العربية



١ توصيل السماعات الخلفية

قد يختلف تصميم السماعة وطريقة التوصيل بحسب الطراز.

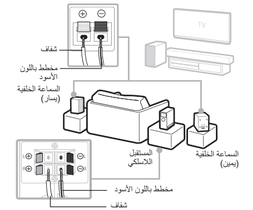

١ وصل كابلات السماعة بالسماعات الخلفية بشكل صحيح.
٢ وصل المستقبل اللاسلكي والسماعات الخلفية (أزرق : يسار، رمادي :يمين) باستخدام كابلات السماعة.
٣ قم بتشغيل وظيفة الصوت المحيطي للاستمتاع بصوت محيطي.

٢ توصيل المستقبل اللاسلكي

١ وصل كابل الطاقة الخاص بالمستقبل اللاسلكي بمنفذ الطاقة.
٢ شغل الوحدة الرئيسية؛ سيتم توصيل المستقبل اللاسلكي والوحدة بشكل تلقائي. يضيئ المؤشر الأصفر - أخضر الخاص بالمستقبل.

توصيل المستقبل اللاسلكي يدويًا

إذا لم يصدر صوت عن السماعات الخلفية حاول توصيلها يدويًا.

١ اضغط على زر **PAIRING** الموجود خلف المستقبل اللاسلكي.
• أصفر - أخضر يومض مؤشر LED على المستقبل اللاسلكي بسرعة.
٢ شغل الوحدة الرئيسية
٣ اكتمل الاقتران.
• أصفر - أخضر يضيئ مؤشر LED على المستقبل اللاسلكي كدليل على التشغيل.

اضبط المسافة بين شريط الصوت وجهاز الاستقبال اللاسلكي لتكون أقرب ما يمكن وأبعده عن الجهاز (على سبيل المثال، الموجه اللاسلكي، فرن الميكروويف، إلخ) أكثر من ١ م لمنع تداخل الأمواج اللاسلكية.



تشغيل/إيقاف تشغيل الصوت المحيطي

عند تشغيل وظيفة الصوت المحيط يمكنك الاستمتاع بالصوت المحيط الرائع من جميع مصادر دخل الصوت عن طريق السماعات الخلفية.

الإعداد الأولي لوظيفة الصوت المحيطي هو إيقاف التشغيل، فقم بتشغيل وظيفة الصوت المحيطي لاستخدامها.

تشغيل الصوت المجسم: إضغط مطولاً لمدة 3 ثواني على زر الموجود على جهاز التحكم عن بعد ثم إضغط بشكل متكرر على زر لاختيار ON - SURROUND من نافذة العرض.

إيقاف الصوت المجسم: إضغط مطولاً لمدة ثلاث ثواني على زر الموجود على جهاز التحكم عن بعد، ثم إضغط بشكل متكرر على زر لاختيار OFF - SURROUND من نافذة العرض.

معلومات إضافية

مواصفات المستقبل اللاسلكي

متطلبات الطاقة	ارجع إلى الملصق الرئيسي الموجود على المستقبل اللاسلكي.
استهلاك الطاقة	ارجع إلى الملصق الرئيسي الموجود على المستقبل اللاسلكي.
الأبعاد (العرض × الارتفاع × العمق)	تقريبًا ٦٠ مم × ٢٢٠ مم × ١٧٥ مم

يخضع التصميم والمواصفات للتغيير دون إخطار مسبق.

معلومات عن الحلقة الحديدية (اختياري)



ملاحظة سلامة هامة

كلابة الوصلة للقابس مزودة مع هذا المنتج وتم تثبيتها داخل الوصلة الكهربائية الموجودة التي تم تزويدها ، إذا كان لأي سبب

احتجت لتقصير الوصلة.

لا تستعمل مرة أخرى هذا القابس
يجب استعمال قابس جديد للتأكيد على سلامتك بصورة متواصلة وذلك عن طريق إحكام إدخال القابس إلى الوصلة الكهربائية طبقا للوائح القابس والمقيس للعام 1994.

تحذير من أجل السلامة

يجب فصل هذا الجهاز عن مخرج التيار الكهربائي الرئيسي أثناء عدم استخدامه. لا تسمح لهذا الجهاز بالتعرض للأمطار أو الرطوبة.

تحذير تحذير

من أجل منع وقوع الصدمة الكهربائية، لا تسحب عنه الغطاء. لا يوجد في الداخل أجزاء للاستخدام. التصليح يجب أن يقوم به الشخص المختص.

فترة تشغيل هذا الجهاز سبع سنوات من تاريخ التسليم إلى الزبون. عند انتهاء الفترة المحددة أعلاه ربما لا تعود صالحة للاستخدام تبعاً للمواصفات.

تحذيرات للوقاية

اقرأ هذه التعليمات قبل تشغيل الجهاز

- تجنب درجات الحرارة أو البرودة العالية والرطوبة والغبار.
- تجنب الاستخدام قريباً من حقل مغناطيسي (سيؤثر سلبياً على إنجاز الجهاز).
- حاذر عند مسح الغطاء بمادة متطايرة كالبنزين والكحول إلخ أو قطعة قماش معالجة بمواد كيماوية. ربما يؤدي ذلك إلى إتلاف سطح الغطاء أو تقشير الطلاء.
- استخدم هذا الجهاز فقط بوضع أفقي ولا تضع فوقه أي شيء ثقيل.
- حافظ على وضع الجهاز بعيداً عن أحواض الزهور وأنابيب الماء وحوض الغسيل، إذا سقط عليه أي مادة سائلة فقد يحدث تلف كبير للجهاز. في مثل هذه الحالة قم بعرضه على خبير فني متخصص.
- لا تحجز منطقة التهوية، ثقوب التهوية تمنع زيادة السخونة. وحتى المواد الخفيضة أو الناعمة كالورق أو القماش قد تسد ثقوب التهوية.
- **لا يوجد أجزاء للاستخدام من الداخل. من أجل الإصلاح والصيانة اعرضه على الفني المتخصص.**

مركز جدة الرئيسي للخدمات
ص. ب ٧٠٤ جدة ٢١٤٢١، المملكة العربية السعودية
هاتف: ٦٢٩-٢٩٢٩ (٠٢)

مركز جدة للخدمات السريعة
هاتف: ٣٨٨٨-٦٦٣-٠٢/تحويل ٣٤٠، ٣٤٣

مركز الرياض الفرعي للخدمات
هاتف: ٠١-٤٦١-٥٥٥٩

مركز الخبر الفرعي للخدمات
هاتف: ٠٣-٨٥٧-٢٦٢٩/٢٦٣٧