LG
Life's Good

SIMPLE MANUAL

Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
SNH5

MFL71670166
2102_Rev02

www.lg.com
Copyright © 2020-2021 LG Electronics Inc. All Rights Reserved.

ENGLISH



Front Panel



⏻ (Standby) ..... Switches the unit ON or OFF.
F (Function) ..... Selects function.
−/+ (Volume) ..... Adjusts volume.

Rear Panel



WOOFER 3 Ω ..... Connect to a Subwoofer.
HDMI OUT (TV ARC) ..... Connect to a TV.
HDMI IN ..... Connect to device with HDMI OUT.
OPTICAL IN ..... Connect to an optical device.
USB Port ..... Connect to a USB device.

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Subwoofer Connection

Place the subwoofer near the sound bar and follow steps below.

1. Connect a subwoofer cord to the sound bar.
   - When connecting a Subwoofer cord to the unit, insert the connector until it clicks.
2. Turn on the sound bar.

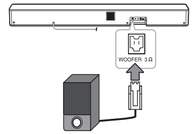

TV Connection

Connect the sound bar and TV using Optical (Ⓐ) or HDMI ARC (Ⓑ).

Ⓐ Optical Connection

1. Connect the sound bar to the TV using Optical cable.
2. Set up [External Speaker (Optical)] on your TV setting menu.



Ⓑ HDMI (ARC) Connection

1. Connect the sound bar to the TV using HDMI cable.
2. Set up [External Speaker (HDMI ARC)] on your TV setting menu.



- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.

Additional Device Connection

1. Connect to the external device like as follow.

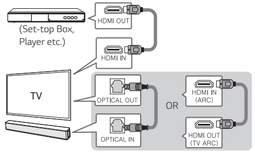

2. Set the input source by pressing **F** repeatedly.

Remote control



Replacement of Battery



⏮/⏭: Skip/Search
⏯: Play/Pause
- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing **F** repeatedly. Long press ⏯ and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.
- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER ∧/∨: Searches a folder.
⏻**:** Displays the information of a file, an input source or connected **Bluetooth** device name.
- **Auto Power ON/OFF:** Long press ⏻ and press it again.

: Adjusts the sound level of the adjustable speakers.
REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Specification

Power Requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 990.0 mm X 97.0 mm X 125.0 mm With foot
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier (Total RMS Output power)	600 W RMS

Design and specifications are subject to change without notice.

Oman - TRA
D172249
TRA/TA-R/4969/17

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com.
In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.
LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.
This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

POWER: This unit operates on a mains supply of 200 - 240 V ~ 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol ⏚ or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- BLUE: NEUTRAL, BROWN: LIVE - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

LG
Life's Good

الدليل البسيط

المكبر الصوتي اللوحي اللاسلكي

يُرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز الذي بحوزتك واحتفظ به للرجوع إليه في المستقبل.
لعرض تعليمات الخصائص المتقدمة، تفضل بزيارة موقعنا http://www.lg.com وقم بتحميل دليل المالك. يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز
SNH5



اللوحة الأمامية



(استعداد) · · · · · · · · · · لتشغيل الوحدة أو إيقاف تشغيلها.
F (الوظيفة) · يحدد الوظيفة
+/− (التحكم بالصوت)· · · · · · · · · · يضبط مستوى الصوت

اللوحة الخلفية



WOOFER 3 Ω · · · · · · · · · · · · · وصل بمكبر صوتي.
HDMI OUT (TV ARC) · · · · · يُستخدم للتوصيل بجهاز التلفزيون.
HDMI IN · · · · · · للتوصيل بجهاز به منفذ HDMI OUT.
OPTICAL IN · · · · · · · · يُستخدم للتوصيل بجهاز بصري.
منفذ USB · · · · · · · · · · · يُستخدم للتوصيل بجهاز USB.

إذا لم يوصل الكابل البصري بالإتجاه الصحيح، عندها قد يسبب التلف للمقبس البصري.

توصيل مضخم الصوت

ضع مضخم الصوت بالقرب من هذا المكبر الصوتي اللوحي واتبع الخطوات الواردة أدناه.

1. وصل كابل مكبر الصوت بشريط الصوت.
   - عند توصيل سلك مضخم الصوت بالوحدة، أدخل الموصل حتى تسمع صوت نقرة.
2. قم بتشغيل مكبر الصوت.

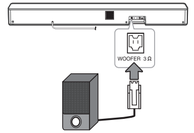

www.lg.com
MFL71670166
2102_Rev02
حقوق النشر والتأليف © لعام ٢٠٢٠-٢٠٢١ لـ LG Electronics Inc. جميع الحقوق محفوظة.

توصيل التليفزيون

وصل مكبر الصوت والتلفاز باستخدام Optical (Ⓐ) أو HDMI ARC (Ⓑ).

Ⓐ التوصيل البصري

1. وصل مكبر الصوت بالتلفاز باستخدام الكابل الضوئي.
2. قم بإعداد [External Speaker (Optical)] في قائمة الضبط بالتلفزيون.



Ⓑ اتصال HDMI (ARC)

1. وصل مكبر الصوت بالتلفاز باستخدام كابل HDMI.
2. قم بإعداد [External Speaker (HDMI ARC)] في قائمة الضبط بالتلفزيون.



- لن تكون خاصية التوصيل HDMI إذا لم يكن بجهاز التلفاز مقبس HDMI ARC.
- إذا كانت الوحدة متصلة عن طريق OPTICAL و ARC في نفس الوقت، فسيكون لإشارة ARC الأولوية.

توصيل الجهاز الإضافي

1. وصلّه بالجهاز الخارجي كما يلي.

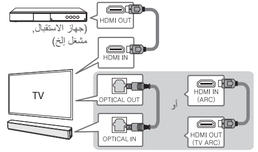

2. قم بضبط مصدر الإدخال بالضغط على **F** بشكل متكرر.

جهاز التحكم عن بعد

استبدال البطارية



⏮/⏭: تخطي/بحث
⏯: تشغيل/إيقاف
- **قفل اتصال BLUETOOTH (BT LOCK) :** اختر وظيفة **Bluetooth** بالضغط على **F** بشكل متكرر. اضغط مطولاً على ⏯ ثم اضغط مجدداً لتحديد إتصال Bluetooth فقط ب BT أو TV LG.

SOUND EFFECT: قم باختيار نمط تأثير الصوت
- **جهاز التحكم في التلفاز:** اضغط مطولاً على **SOUND EFFECT** ثم اضغط مجدداً لاستخدام جهاز التحكم بالتلفاز.

FOLDER ∨/∧: قم بالبحث عن ملف.
ⓘ : قم بعرض المعلومات الخاصة بالملف، مصدر إدخال، أو اسم جهاز **Bluetooth** متصل.
- **التشغيل التلقائي تشغيل/إيقاف:** اضغط مطولاً على ⓘ ثم اضغط مجدداً.

🔊: يضبط مستوى الصوت للسماعات القابلة للتعديل.
REPEAT: قم بالاستماع لملفاتك بشكل متكرر أو بشكل عشوائي.

معلومات إضافية

المواصفة

متطلبات مصدر التيار الكهربائي	ارجع إلى الملصق الرئيسي.
استهلاك الطاقة	ارجع إلى الملصق الرئيسي.
الأبعاد (العرض × الارتفاع × العمق)	تقريبًا ٩٩٠,٠ مم X ٩٧,٠ مم X ١٢٥,٠ مم مع قدم
مصدر طاقة الناقل (USB)	٥ فولت ⎓ ٥٠٠ ملي أمبير
مضخم الصوت (إجمالي طاقة خرج RMS)	٦٠٠ وات RMS

يخضع التصميم والمواصفات للتغيير دون إخطار مسبق.

Oman - TRA
D172249
TRA/TA-R/4969/17

معلومات حول إشعار البرامج المفتوحة المصدر

للحصول على التعليمات البرمجية المصدر بموجب GPL و LGPL و MPL وتراخيص مفتوحة المصدر أخرى يتضمنها هذا المنتج، يرجى زيارة الموقع http://opensource.lge.com. بالإضافة إلى التعليمات البرمجية المصدر، تتوفر كل أحكام الترخيص وإشعارات إخلاء المسؤولية وإشعارات حقوق النشر للتنزيل.

ستوفر LG Electronics أيضًا الكود المفتوح المصدر على قرص CD-ROM مقابل رسم يغطي تكلفة القيام بهذا التوزيع (مثل تكلفة وسائل النقل والشحن والتسليم) بناءً على طلب يُرسل عبر البريد الإلكتروني إلى opensource@lge.com.

إن هذا العرض سارٍ لفترة ثلاث سنوات بعد عملية الشحن الأخيرة لهذا المنتج. يتوفر هذا العرض لأي شخص يتلقى هذه المعلومات.

الطاقة: يتم تشغيل هذه الوحدة باستخدام مصدر تيار كهربي بجهد ٢٠٠ - ٢٤٠ فولت، ٥٠ / ٦٠ هرتز.

توصيلات الأسلاك: يتم تزويد هذه الوحدة بقابس تيار BS 1363 معتمد. عند استبدال المصهر، استخدم دائمًا مصهرًا له نفس المعايرة المقننة المعتمدة في قابس BS 1362. لا تستخدم هذا القابس مطلقاً بدون وجود غطاء المصاهر. للحصول على غطاء مصاهر بديل، يرجى الاتصال بالموزع الذي تتعامل معه. إذا كان نوع القابس المرفق غير مناسب لمقابس التيار الموجودة بمنزلك، يجب خلع القابس وتركيب نوع مناسب. يرجى الرجوع إلى التعليمات الخاصة بتوصيل الأسلاك الموضحة أدناه:

تحذير: يجب تدمير القابس الذي يتم خلعه من سلك التيار الكهربي الخاص بهذه الوحدة. قابس التيار الذي توجد به أسلاك عارية يمثل خطورة في حالة إدخاله في مقبس التيار الكهربي. لا تقم بتوصيل أي من الأسلاك بالطرف الأرضي، المميز بالحرف (E) أو رمز الأرض ⏚ أو الطرف باللون الأخضر أو اللونين الأخضر والأصفر. في حالة تركيب أي قابس آخر، استخدم نفس المعايرة المقننة في مصهر القابس.

ملاحظة هامة: الأسلاك الموجودة في كبل التيار الكهربي مميزة بالألوان وفقًا للرموز التالية:

- الأزرق: محايد، البني: يسري فيه التيار - في حالة عدم توافق ألوان أسلاك التيار الكهربي الخاص بهذه الوحدة مع الألوان التي تميز أطراف التوصيل في القابس، يرجى إتباع ما يلي: يجب توصيل السلك المميز باللون الأزرق مع الطرف المميز بالحرف (N) أو المميز باللون الأسود. يجب توصيل السلك المميز باللون البني مع طرف التوصيل المميز بالحرف (L) أو المميز باللون الأحمر.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE