LG
Life's Good

簡易手冊

Wi-Fi Sound Bar

Wi-Fi SOUND BAR

S80QR
(SPQ8-S)

ENERGY STAR

FSC
www.fsc.org
MIX
Paper from responsible sources
FSC™ C160405

MFL71883732
2202_Rev02

www.lg.com
版權所有 © 2022 LG Electronics Inc. 保留一切權利。

中文

規格

電源要求
- 請參閱主標籤。

電源耗用
- 請參閱主標籤。

Sound Bar體積（闊 x 高 x 深）: 大約 1000.0 mm x 63.0 mm x 135.0 mm
無線接收器尺寸（闊 x 高 x 深）: 大約 175.0 mm x 61.0 mm x 175.0 mm
匯流排電源供應 (USB): 5 V ⎓ 500 mA
擴音器（RMS 總輸出功率）: 620 W RMS

注意：開放來源程式碼軟件

欲獲得 GPL、LGPL、MPL 及其他有義務公開包含本產品內容原始程式授權的源代碼，及存取所有提及授權條款、版權聲明及其他相關文件，請瀏覽 https://opensource.lge.com。
LG Electronics 也可應您要求，在由您支付相關費用（如媒體成本、運費及處理費）的條件下以 CD-ROM 方式提供開放原始程式碼，如有需要請寄送電子郵件至 opensource@lge.com。
該產品最後一次出貨的三年內，任何收到此資訊的人可享此優惠。

安全注意事項

本機的插頭握柄是專爲本產品所設計,且與附贈的電源線結合為一體,若您因爲任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據1994年之插頭及插座規範的規定,將插頭確實地與電源線結合。

符合標準聲明

在此，LG電子聲明 無線音響系統類型的無線電設備符合2014/53/EU指令。你可以從以下互聯網地址獲得歐盟符合性聲明的全文：
http://www.lg.com/global/support/cedoc/cedoc#
爲使用者安全着想，安裝或使用裝置時，身體與裝置之間的距離不應少於 20 厘米。

ENGLISH

Specification

Power requirements
- Refer to the main label.

Power consumption
- Refer to the main label.

Sound bar dimensions (W x H x D): Approx. 1000.0 mm x 63.0 mm x 135.0 mm
Wireless receiver dimensions (W x H x D): Approx. 175.0 mm x 61.0 mm x 175.0 mm
Bus Power Supply (USB): 5 V ⎓ 500 mA
Amplifier (Total RMS Output power): 620 W RMS

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit https://opensource.lge.com.
LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.
This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

IMPORTANT SAFETY NOTICE


The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord,


DO NOT RE-USE THE PLUG


A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

Declaration of Conformity

Hereby, LG Electronics declares that the radio equipment type Wi-Fi SOUND BAR is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
http://www.lg.com/global/support/cedoc/cedoc#
For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.



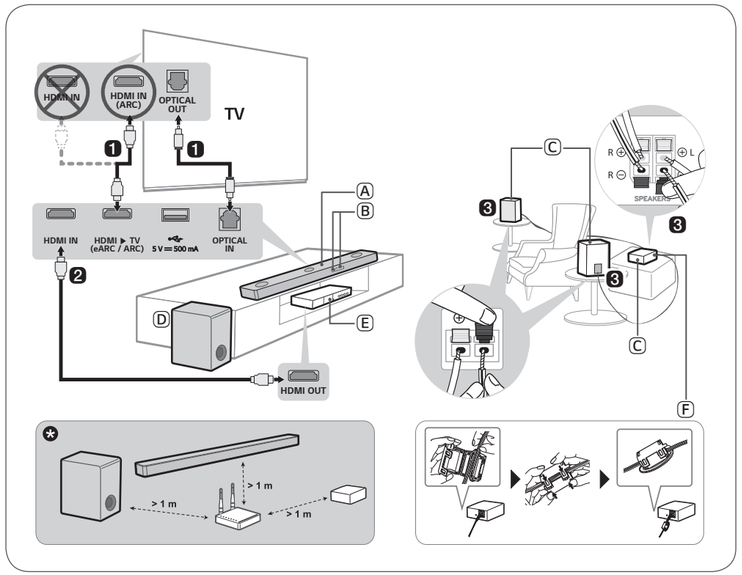

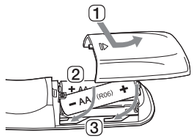

更換電池
Replacement of Battery

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

中文 產品安裝及使用

操作設備前請仔細閱讀本手冊，並保留以備日後參考。
要檢視有關進階功能的指示，請造訪 http://www.lg.com 或掃描二維碼下載使用說明書。部份使用說明的內容有可能與你的產品不同。

Ⓐ Sound Bar
Ⓑ 遙控接收器 / 狀態顯示器
Ⓒ 後置揚聲器 / 無線接收器
Ⓓ 無線重低音揚聲器 — 貼近Sound Bar安裝。
Ⓔ 外置設備 —（藍光播放機、遊戲機等等）
Ⓕ 連接鐵芯（可選）
- 將無線接收器的揚聲器電纜繞鐵芯纏繞兩次。

❶ 請用光纖線或 HDMI 線將Sound Bar連接至您的電視機。
❷ 若您正在使用外置設備（如藍牙播放機、遊戲機等等），請用 HDMI 線將其連接至Sound Bar。
❸ 依照以下順序連接電源：無線重低音揚聲器 ➞ 無線接收器 ➞ Sound Bar。接著，開啓Sound Bar：與Sound Bar自動建立連線後，無線重低音揚聲器和無線接收器的 LED 指示燈會變成綠色。
❹ 與您的電視機配合使用產品
① 重複按下**功能**按鈕直至「**OPT/HDMI ARC**」顯示於狀態顯示器。
② 在電視的設定上，將輸出揚聲器設定為 [HDMI ARC]、[光纖] 或[外部揚聲器]。
③ 當電視已連接至產品時，「**OPT**」、「**ARC**」，或「**E-ARC**」字樣會顯示於狀態顯示器並發出提示聲。
! 您可以使用 LG WOWCAST（另售，WTP3）無線連接到Sound Bar來欣賞音效。
❺ 透過 Wi-Fi 將產品連接至您的智能電話
① 將您的智能電話連接至 Wi-Fi。
② 從 Google Play 或 App Store 安裝 **LG Sound Bar 應用程式**。
③ 運行 **LG Sound Bar 應用程式**並依照指引操作。
④ 產品會連接至您的智能電話，您可透過 **LG Sound Bar 應用程式**操控產品。
❻ 透過 Bluetooth 將設備連接至您的智能電話
① 輕觸您的智能電話內的**設定**按鈕，選擇 **Bluetooth**。開啟 **Bluetooth** 功能。（ **關閉** > **開啟**）
② 按下 **Bluetooth 配對**按鈕。稍後，您會看見「**BT READY**」顯示於狀態顯示器。
③ 找到並輕觸「LG_Speaker_S80QR_XXXX」或您的 Google Home 應用程式之登入名稱。
④ 當產品透過 **Bluetooth** 連接至您的智能電話後，您會看見狀態顯示器出現變化：「**PAIRED**」➞「**已連接之藍牙設備名稱**」➞「**BT**」。

若您在無線重低音揚聲器的背面或無線接收器的正面看到紅色的 LED 指示燈，則表示Sound Bar未連接至揚聲器。若出現該情況，請依照以下順序進行連接。
① 按下Sound Bar的**電源**按鈕以關閉它。
② 按下未連接的無線重低音揚聲器之背面或無線接收器的 **PAIRING** 按鈕。查看 LED 指示燈是否閃爍綠色。
- 若您仍在無線重低音揚聲器的背面看見紅色 LED 指示燈，請再次長按無線重低音揚聲器背面的該按鈕。
③ 按下Sound Bar的**電源**按鈕以開啟它。
④ 建立連線後，你會看見無線重低音揚聲器背面或無線接收器正面的 LED 指示燈變成綠色。
✪ 請將Sound Bar和無線重低音揚聲器放置於距離其他設備（如無線路由器、微波爐等等）超過 1米的位置，避免無線干擾。
• 某些揚聲器可能因輸入來源而無法發聲。選擇 CINEMA（電影）聲音模式以聆聽所有揚聲器。

• 設計和規格若有更改，恕不另行通知。
• Google Play 是 Google LLC 的商標。

ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.

Ⓐ Sound bar
Ⓑ Remote Control Receiver / Status Display
Ⓒ Rear Speakers / Wireless Receiver
Ⓓ Wireless Subwoofer - Install it close to the sound bar.
Ⓔ External Device - (Blu-ray player, game console, etc.)
Ⓕ Attaching the ferrite core (optional)
- Wind the wireless receiver's speaker cables twice around the ferrite core.

❶ Connect the sound bar to your TV via an optical cable or an HDMI cable.
❷ If you are using an external device (ex. Blu-ray player, game console, etc.), connect it to the sound bar via an HDMI cable.
❸ Connect to power in the following order wireless subwoofer ➞ wireless receiver ➞ sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LEDs on the wireless subwoofer and the wireless receiver will light up green.
❹ Using the product with your TV
① Press the **Function** button repeatedly until "**OPT/HDMI ARC**" appears on the status display.
② On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].
③ When the TV is properly connected to the product, "**OPT**", "**ARC**", or "**E-ARC**" will appear on the status display with a sound.
! You can enjoy the sound by connecting LG WOWCAST (Sold separately, WTP3) to the sound bar wirelessly.
❺ Connecting the product to your smartphone via Wi-Fi
① Connect your smartphone to Wi-Fi.
② Install the **LG Sound Bar app** on Google Play or the App Store.
③ Run the **LG Sound Bar app** and follow the instructions.
④ The product will connect to your smartphone and you can control the product with **LG Sound Bar app**.
❻ Connecting the product to your smartphone via Bluetooth
① Tap the **Settings** button on your smartphone and select **Bluetooth**. Turn on the **Bluetooth** function. (**Off** > **On**)
② Press the **Bluetooth pair** button. After a moment, you will see "**BT READY**" on the status display.
③ Find and tap "LG_Speaker_S80QR_XXXX" or the name you registered on the Google Home app.
④ When the product is connected to your smartphone via **Bluetooth**, you can see the status display change from "**PAIRED**" ➞ "**Connected Bluetooth device name**" ➞ "**BT**."

If you see a red LED on the back of the wireless subwoofer or on the front of the wireless receiver, it means that the sound bar is not connected to the speakers. If this is the case, connect them in the following order.
① Press the **Power** button on the sound bar to turn it off.
② Press the **PAIRING** button on the back of the disconnected wireless subwoofer or wireless receiver. Check if each LED blinks green.
- If you still see a red LED on the back of the wireless subwoofer, press and hold the button on the back of the subwoofer again.
③ Press the **Power** button on the sound bar to turn it on.
④ When the connection is established, you will see a green LED light on the back of the wireless subwoofer or on the front of the wireless receiver light up green.
✪ Keep the sound bar, the subwoofer and wireless receiver away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
• Some speakers may not make sound depend on the input source. Select CINEMA sound mode to listen through all speakers.

• Design and specifications are subject to change without notice.
• Google Play is a trademark of Google LLC.