LG
Life's Good

ENGLISH

SIMPLE MANUAL

Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
ON7

MFL71690513
2004_Rev02

www.lg.com
Copyright © 2021 LG Electronics Inc. All Rights Reserved.

Top panel

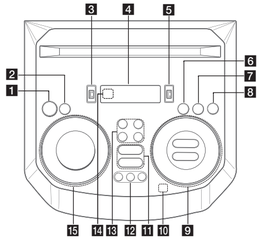

1 ⏻ (Standby)
Turns the power on or off.

2 **USB REC / DEMO**
- Records to USB.
- Stops recording.
- In power off status, if you press **USB REC / DEMO**, show demo mode.

3 USB 1 Port
You can play sound files by connecting the USB device.

4 Display window

5 USB 2 Port
You can play sound files by connecting the USB device.

6 **F** (Function)
Selects the function and input source.

7 **LIGHTING**
Selects the lighting mode.

8 **TWIN**
Connects two units for TWIN mode in WIRELESS PARTY LINK.

9 ⏮/⏭ (Skip/Search)
- Skips backward or forward.
- Searches for a section within a track/file.
- Selects the radio stations.

⏯ (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.
- **Bluetooth** connection lock (BT LOCK): Select the **Bluetooth** function by pressing **F** repeatedly. And long press ⏯ to limit **Bluetooth** connection to only BT and LG TV.

☐ (Stop)
Stops playback or cancels DELETE function.

VOL (Volume) **-/+**
Adjusts speaker volume.

MIC (Microphone) **/ GUITAR -/+**
Adjusts Microphone volume or Guitar volume.

10 (Auto Music Play)
Plays the audio currently playing by tagging the mobile (with "LG XBOOM" App) to this unit. (Android Only)

11 **VOICE CANCELLER**
You can reduce the vocal tones during music playback from various input sources.

⏏ (Open/Close)
Opens and closes the disc tray.

12 **CLUB, DRUM, USER** (DJ PAD)
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "LG XBOOM" app.(Android Only))

1, 2, 3 (DJ PAD)
Press a desired sound pad.

13 **MIC** (Microphone) **ECHO**
Selects ECHO mode.

VOCAL EFFECTS
Selects various vocal effects mode.

KEY CHANGER (♭/♯)
Changes the key to suit your vocal range.

14 Remote sensor

15 **SPECIAL EQ / BASS BLAST** (or **BASS BLAST+**)
- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.

SEARCH
Moves to folder or file in selection mode.

OK
Selects a folder when searching a file.

USER EQ
Selects the equalizer created by your own.

Multi jog
- Searches a folder or a file.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Chooses special equalizer.

Front panel / Rear panel

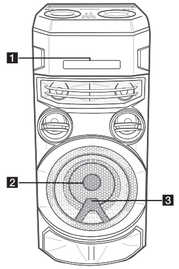

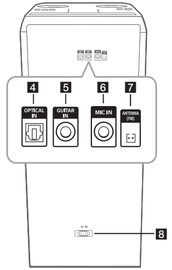

1 Disc tray
2 Lighting
3 Remote sensor

4 **OPTICAL IN:** Connect an optical device.
5 **GUITAR IN:** Connect a guitar.
6 **MIC** (Microphone) **IN:** Connect a microphone.
7 **ANTENNA** (FM)
8 **AC IN** socket

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Controller App

Android iOS

Download the **LG XBOOM** App to your device.

LG Sound Sync

For more information, download the online owner's manual. **http://www.lg.com**

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330.0 mm x 785.0 mm x 344.0 mm
Bus Power Supply (USB)	5 V ⎓ 500 mA

Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

Oman - TRA
D080134
TRA/TA-R/2246/14

EAC

Replacement of battery

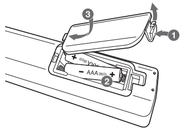

POWER: This unit operates on a mains supply of 200 - 240 V ~ 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol ⏚ or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- BLUE: NEUTRAL, BROWN: LIVE - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

العربية

LG
Life's Good

دليل مبسط

نظام الصوت Hi-Fi الصغير

يرجى قرأه هذا الدليل بعناية قبل تشغيل جهازك واحتفظ به للرجوع إليه في المستقبل.
لعرض تعليمات الميزات المتقدمة، تفضل بزيارة موقع الويب http://www.lg.com، ثم قم بتنزيل دليل المالك.
يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز
ON7

MFL71690513
2004_Rev02

www.lg.com

حقوق النشر والتأليف © لعام ٢٠٢١ لـ LG Electronics Inc. جميع الحقوق محفوظة.

اللوحة العلوية

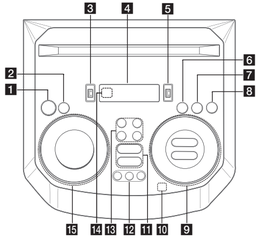

1 (الاستعداد)
يشغل السماعة أو يوقف تشغيلها.

2 **USB REC / DEMO**
- التسجيل إلى الذاكرة المتنقلة USB.
- إيقاف التسجيل.
- في حالة إيقاف التشغيل، إذا ضغطت على زر **USB REC / DEMO**، سيتم عرض الوضع التجريبي.

3 منفذ USB1
يمكن تشغيل ملفات الصوت عن طريق توصيل جهاز USB.

4 نافذة العرض

5 منفذ USB2
يمكن تشغيل ملفات الصوت عن طريق توصيل جهاز USB.

6 **F** (الوظيفة)
اختيار الوظيفة ومصدر الإدخال.

7 **LIGHTING**
اختيار وضع الإضاءة.

8 **TWIN**
يوصل سماعتين من أجل وضع TWIN في WIRELESS PARTY LINK.

9 ⏮/⏭ (تخطي/بحث)
- التخطي للأمام أو الخلف.
- البحث عن قسم في مسار/ملف.
- تحديد محطة الراديو.

⏯ (تشغيل/إيقاف)
- بدءا التشغيل أو يوقفه مؤقتا.
- اختيار ستيريو/أحادي.
- تأمين اتصال **Bluetooth**؛ (BT LOCK) اختر وظيفة البلوتوس بالضغط على مفتاح **F** بشكل متكرر. ثم اضغط ضغطة طويلة على ⏯ لتحجيم اتصال البلوتوس ليتصل بـ BT وLG TV وحسب.

□ (إيقاف)
يوقف التشغيل أو يلغي وظيفة DELETE.

+/- (الصوت) VOL
اضبط مستوى صوت السماعة.

+/- GUITAR / (مايكروفون) MIC
اضبط مستوى صوت المايكروفون أو صوت الغيتار.

10 (تشغيل موسيقى تلقائي)
يشغل الصوت الذي يتم تشغيله حاليًا عبر تمييز الهاتف الجوال لهذه الوحدة (باستخدام تطبيق "LG XBOOM"). (أجهزة Android فقط)

11 **VOICE CANCELLER**
يمكنك تقليل النغمات الصوتية أثناء تشغيل الموسيقى من مصادر الإدخال المختلفة.

⏏ (فتح/ إغلاق)
يفتح ويغلق محرك الأقراص.

12 **(DJ PAD) USER ,DRUM ,CLUB**
تحديد المؤثر الصوتي CLUB أو DRUM أو USER للمزج.
(إذا كنت ترغب باستخدام USER، عليك تسجيل مصدر من خلال تطبيق "LG XBOOM". (أندرويد فقط))

(DJ PAD) 1, 2, 3
اضغط على لوحة الصوت المراد.

13 **ECHO (مايكروفون) MIC**
تحديد وضع ECHO.

VOCAL EFFECTS
اختيار وضع المؤثرات الصوتية المتعددة.

KEY CHANGER (♯/♭)
تغيير المفتاح ليناسب نطاقك الصوتي.

14 أداة الاستشعار عن بعد

15 **SPECIAL EQ / BASS BLAST (BASS BLAST+ أو)**
- اختيار المعادل الخاص.
- اضغط مع الاستمرار في الضغط لتحديد مؤثرات BASS (أو BASS+) مباشرة.

SEARCH
الانتقال إلى مجلد أو ملف في وضع التحديد.

OK
اختيار مجلد عند البحث عن ملف.

USER EQ
اختيار المعادل الذي قمت أنت بعمله.

Multi jog
- البحث في مجلد أو ملف.
- يدور في اتجاه حركة عقارب الساعة أو عكسها للتحكم في مستوى USER EQ.
- اختيار المعادل الخاص.

اللوحة الأمامية / اللوحة الخلفية

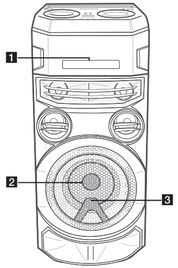

1 درج الأسطوانات
2 مصباح LED
3 مستشعر جهاز التحكم عن بعد

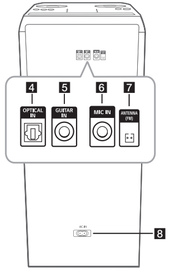

4 **OPTICAL IN**: اتصل جهاز ضوئي.
5 **GUITAR IN**: اتصل بالغيتار.
6 **IN (مايكروفون) MIC**: اتصل بالمايكروفون.
7 **ANTENNA** (FM)
8 مقبس **AC IN**

إذا لم يوصل الكابل البصري بالاتجاه الصحيح، قد يتسبب هذا في تلف المقبس البصري.

تطبيق المتحكم

أندرويد iOS

تحميل تطبيق **LG XBOOM** على جهازك.

مزامن صوت LG

لمزيد من المعلومات، حمل دليل المالك عبر الإنترنت.
http://www.lg.com

معلومات إضافية

المواصفات

متطلبات الطاقة	يرجى الرجوع إلى الملصق الرئيسي الموجود على الوحدة.
استهلاك الطاقة	يرجى الرجوع إلى الملصق الرئيسي الموجود على الوحدة.
الأبعاد الخارجية (العرض × الارتفاع × العمق)	حوالي ٣٣٠,٠ مم x ٧٨٥,٠ مم x ٣٤٤,٠ مم
وحدة التغذية بالطاقة الناقلة (USB)	دخل التيار المباشر بجهد ٥ فولت ⎓ ٥٠٠ ملي أمبير

التصميمات والمواصفات عرضة للتغيير دون إشعار مُسبق.

تنبيه

- وصل سلك الطاقة بمأخذ التيار مباشرة إن أمكن وفي حالة استخدام كبل تمديد. فإنه ينصح بشدة استخدام كبل تمديد ١١٠ فولت/١٥ أمبير أو ٢٣٠ فولت/١٥ أمبير وإلا قد لا تعمل الوحدة بشكل مناسب بسبب النقص في توريد الطاقة.
- لا تحمل سلك التمديد بحمل كهربي مفرط.

ملحوظة

- لا تنظر إلى الإضاءة الصادرة من الجزء مباشرة عند تشغيل LIGHTING.
- إذا كان سطوع الإضاءة متوهجًا، قم بتشغيل إضاءة الغرفة أو إيقاف تشغيل LIGHTING بالوحدة.

Oman - TRA
D080134
TRA/TA-R/2246/14

استبدال البطارية

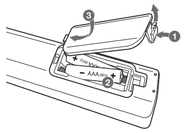

الطاقة: يتم تشغيل هذه الوحدة باستخدام مصدر تيار كهربي بجهد ٢٠٠ ـ ٢٤٠ فولت، ٥٠ / ٦٠ هرتز.

توصيلات الأسلاك: يتم تزويد هذه الوحدة بقابس تيار BS 1363 معتمد. عند استبدال المصهر، استخدم دائمًا مصهرًا له نفس المعايرة المقننة المعتمدة في قابس BS 1362. لا تستخدم هذا القابس مطلقاً بدون وجود غطاء المصاهر. للحصول على غطاء مصاهر بديل، يرجى الاتصال بالموزع الذي تتعامل معه. إذا كان نوع القابس المرفق غير مناسب لمقابس التيار الموجودة بمنزلك، يجب خلع القابس وتركيب نوع مناسب. يرجى الرجوع إلى التعليمات الخاصة بتوصيل الأسلاك الموضحة أدناه:

تحذير: يجب تدمير القابس الذي يتم خلعه من سلك التيار الكهربي الخاص بهذه الوحدة. قابس التيار الذي توجد به أسلاك عارية يمثل خطورة في حالة إدخاله في مقبس التيار الكهربي. لا تقم بتوصيل أي من الأسلاك بالطرف الأرضي، المميز بالحرف (E) أو رمز الأرض ⏚ أو الملون باللون الأخضر أو اللونين الأخضر والأصفر. في حالة تركيب أي قابس آخر، استخدم نفس المعايرة المقننة في مصهر القابس.

ملاحظة هامة: الأسلاك الموجودة في كبل التيار الكهربي مميزة بالألوان وفقاً للرموز التالية:

- الأزرق: محايد، البني: يسري فيه التيار - في حالة عدم توافق ألوان أسلاك التيار الكهربي الخاص بهذه الوحدة مع الألوان التي تميز أطراف التوصيل في القابس، يرجى إتباع ما يلي: يجب توصيل السلك المميز باللون الأزرق مع الطرف المميز بالحرف (N) أو المميز باللون الأسود. يجب توصيل السلك المميز باللون البني مع طرف التوصيل المميز بالحرف (L) أو المميز باللون الأحمر.