RELEASING THIS DRAWING WITHOUT PERMISSION LG Electronics SHOULD BE ACCUSED ACCORDING TO THE LAWS AND COMPANY RULES.
이 도면은 LG전자의 자산으로 불법 유출시 관계법과 회사규정에 의해 처벌됨.

MFL69482502

| SEC. / WORK | 가 BRAND | 나 MODEL | 다 P/NO. | PRINTING DEGREE | MATERIAL AND PRINTING DESCRIPTION | LG MODEL 명 | SUFFIX | LANGUAGE | PAGE | REMARK |
|---|---|---|---|---|---|---|---|---|---|---|
| 02 | LG | T2735NTWV | MFL69482502 | 1 | SNOW WHITE 80g OFFSET 인쇄 | F70E1UDNK1 | ASSPGST | ENG+THAI | 84 | W-MODULE |

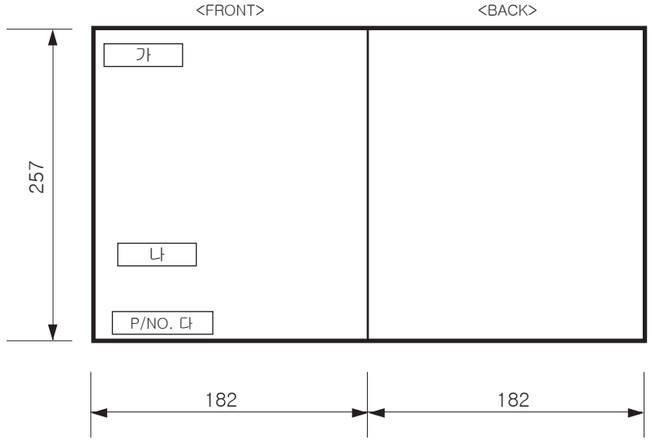


<< 주기 >>

1. 재질, 인쇄방법, 인쇄도수, 외곽치수등은 작업표에 준한다.
2. 인쇄내용, 문자크기 및 형상, 선의 굵기 등은 설계에서 제시된 FILM에 준함.
3. 외곽치수는 절단후 치수임.
4. 양산전에 설계 한도를 득할 것.
5. 본 부품에 금지물질이 포함되지 않도록 하고, 상세내용은 LG(63)-A-5501-34를 만족할 것

<< NOTES >>

1. Material, printing and exterier size are refer to work tables.
2. Printing, text size and line are based on LG design film.
3. Exterier size on the drawing is cutting line.
4. Before product controlled by criteria sample.
5. The part should not contain prohibited substances(Pb,Cd,Hg,Cr+6,PBB,PBDE)♂and details should comply with LG standard of LG(63)-A-5501-34

| REV. NO. 기호 | REVISION DESCRIPTION 변경 사항 | REF. NO. 시방 번호 | DATE 년/월/일 | PREPARED 시방자 | APPROVED 승인자 |
|---|---|---|---|---|---|
| 1 | 인쇄 내용 수정 | EAGG301643 | 2016/03/31 | 장현연 | 김현석 |
| 2 | 인쇄 내용 수정 | EAGG400228 | 2016/04/05 | 장현연 | 김현석 |
| 3 | | | | | |
| 4 | | | | | |

PDF
ILLUSTRATOR

DR COMPLETED
도면 DR 완료
완료일 :

| TRIG. | | UNIT | mm | SCALE N/S | TITLE | MANUAL,OWNER'S |
|---|---|---|---|---|---|---|
| MODELING | DESIGNED | REVIEWED | CHECKED | APPROVED | | W-MODULE 1/1 |
| | 장현연 16.03.23 | 이갑선 16.03.23 | 김현석 16.03.23 | 김현석 16.03.23 | | |
| LG 전자 (주) LG Electronics Inc. | | RELATED DWG. | | | DWG. No. | MFL69482502 |

ENGLISH

ไทย

LG
Life's Good

# OWNER'S MANUAL

# WASHING MACHINE

**Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.**

T2735NTWV

MFL69482502

มอก. 1462-2548

www.lg.com

# TABLE OF CONTENTS

This manual is produced for a group of products and may contain images or content different from the purchased model.

This manual is subject to revision by the manufacturer.


## IMPORTANT SAFETY INSTRUCTIONS .....03

Safety Messages.....03
Basic Safety Precautions.....03
READ ALL INSTRUCTIONS BEFORE USE .....05
GROUNDING REQUIREMENTS .....05
SAFETY INSTRUCTIONS FOR INSTALLATION.....05
SAFETY INSTRUCTIONS FOR USE, CARE, CLEANING AND DISPOSAL.....07

## INSTALLATION.....10

Part names .....10
Accesorios.....10
Installation instructions .....11
Power outlet.....11
Flooring.....11
Unpacking and removing shipping material.....12
Tools you will need .....13
Leveling the washing machine .....14
Using non-skid pads (optional).....15
Connecting Inlet Hose .....15
Connecting Water Supply Hoses to Two Washers .....17
Installing the Water Drain Hoses .....18
Connecting to the power supply .....19
Using the Washer .....20
Handling Laundry .....21
Using Detergents or Fabric Softeners .....23
Control Panel Features.....25
Using the Optional Functions .....28
Maintanence.....29
Using the Smart Diagnosis™ Function.....32

## TROUBLESHOOTING.....33

Faqs: frequently asked questions.....33
Error codes.....39

# IMPORTANT SAFETY INSTRUCTIONS

## SAFETY MESSAGES

**For your safety, the information in this manual must be followed to minimize the risk of fire, explosion, or electric shock, or to prevent property damage, injury to persons, or death. Your safety and the safety of others is very important. There are many important safety messages in this manual and on your appliance. Always read and obey all safety messages.**

⚠ **This is the safety alert symbol. This symbol alerts you to potential hazards that can result in property damage and/or serious bodily harm or death.**

**All safety messages will follow the safety alert symbol and either the word WARNING or CAUTION. These words mean:**

⚠ **WARNING: You can be killed or seriously injured if you don't follow instructions.**

⚠ **CAUTION: You may be slightly injured or cause damage to the product if you do not follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.**

## CHILDREN IN THE HOUSEHOLD

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## BASIC SAFETY PRECAUTIONS

⚠ **WARNING: To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following.**

- Use this appliance only for its intended purpose as described in this Owner's Manual.
- Before use, the washer must be properly installed as described in this manual.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not add gasoline, dry cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that

has not been used for 2 weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using the washer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.

- Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children. A child might become trapped inside the washer and suffocate.
- Before the washer is removed from service or discarded, remove the lid to prevent children from climbing inside.
- Do not install or store the washer where it will be exposed to the weather or freezing temperatures.
- Do not tamper with controls.
- Keep the area underneath and around your appliances free of combustible materials (lint, paper, rags, etc.), gasoline, chemicals and other flammable vapors and liquids.
- Service must be performed by a qualified service technician. Do not disassemble the washer.
- See Installation Instructions for grounding requirements.
- ALWAYS follow the fabric care instructions supplied by the garment manufacturer.
- Do not place items exposed to cooking oil in your washer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Use fabric softeners or products to eliminate static only as recommended by the manufacturer.
- This washer is not designed for maritime use or for mobile installations such as in RVs, aircraft, etc.
- Turn off the water faucets and unplug the washer if the machine is to be left for an extended period of time, such as during vacations.
- Packaging material can be dangerous for children. There is a risk of suffocation! Keep all packaging from children.
- Always check the inside of the washer for foreign objects before loading laundry. Keep the lid closed when not in use.
- Do not reach into the appliance if the tub or agitator is moving.
- In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate the area immediately. Do not turn any appliance or light on or off. Do not use a ventilating fan. A spark may result in an explosion or fire.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.

## READ ALL INSTRUCTIONS BEFORE USE

⚠ **WARNING: For your safety, the information in this manual must be followed to minimize the risk of fire, explosion or electric shock, or to prevent property damage, injury to persons, or death.**

## GROUNDING REQUIREMENTS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

CERTAIN INTERNAL PARTS ARE INTENTIONALLY NOT GROUNDED AND MAY PRESENT A RISK OF ELECTRIC SHOCK ONLY DURING SERVICING. SERVICE PERSONNEL - DO NOT CONTACT THE FOLLOWING PARTS WHILE THE APPLIANCE IS ENERGIZED: PUMP, VALVE, MOTOR, CONTROL.

⚠ **WARNING: Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or servicer if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician. Failure to follow these warnings can cause serious injury, fire, electric shock, or death.**

⚠ **WARNING: For your safety, the information in this manual must be followed to minimize the risk of fire, explosion, or electric shock, or to prevent property damage, injury to persons, or death.**

## SAFETY INSTRUCTIONS FOR INSTALLATION

⚠ **WARNING: To reduce the risk of fire, electric shock or injury to persons when using this appliance, follow basic precautions, including the following:**

- Refer to INSTALLATION INSTRUCTIONS for detailed grounding procedures. Installation instructions are packed with the washer for installer's reference. If the washer is moved to a new location, have it checked and reinstalled by a qualified service technician. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of

electric shock from this appliance.

- Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- For personal safety, this appliance must be properly grounded. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- This washer must be plugged into a 220 VAC, 50 Hz grounded outlet. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Where a standard 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Do not install on carpet. Install washer on a solid floor. Failure to follow this warning can cause serious leak damage.
- The washer should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.
- Never unplug your washer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Repair or immediately replace all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- When installing or moving the washer, be careful not to pinch, crush, or damage the power cord. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- The washer must be installed and electrically grounded by a qualified service person in accordance with local codes to prevent shock hazard and assure stability during operation.
- The washer is heavy. Two or more people may be needed to install and move the appliance. Failure to do so can result in back or other injury.
- Store and install the washer where it will not be exposed to temperatures below freezing or exposed to outdoor weather conditions. Failure to follow this warning can cause serious leak damage.
- To reduce the risk of electric shock, do not install the washer in humid spaces. Failure to follow this warning can cause serious injury, fire, electric shock, or death.

- To reduce the risk of injury to persons, adhere to all industry recommended safety procedures including the use of long sleeved gloves and safety glasses. Failure to follow all of the safety warnings in this manual could result in property damage, injury to persons or death.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.
- Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor. If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.
- The pedestal washer is for installation and use only underneath an LG manufactured front-loading washer. The pedestal washer is not designed to operate as a standalone unit, under an LG top-loading washer, under a dryer, or under a non-LG manufactured washer.
- Do not tamper with the stacking switch. Doing so may cause machine malfunctions or serious injury.
- Do not operate the pedestal washer with two or more pedestal washers stacked. Doing so may cause machine malfunctions or serious injury.

⚠ **WARNING: For your safety, the information in this manual must be followed to minimize the risk of fire, explosion, or electric shock, or to prevent property damage, injury to persons, or death.**

## SAFETY INSTRUCTIONS FOR USE, CARE, CLEANING AND DISPOSAL

⚠ **WARNING: To reduce the risk of fire, electric shock or injury to persons when using this appliance, follow basic precautions, including the following:**

- Unplug the washer before cleaning to avoid the risk of electric shock.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the washer. They will damage the finish.
- Do not put oily or greasy rags or clothing on top of the washer. These substances give off vapors that could ignite the materials.
- Do not wash items that are soiled with vegetable or cooking oil. These items may contain some oil after laundering.
- Due to the remaining oil, the fabric may smoke or catch fire by itself.

- Disconnect this appliance from the power supply before attempting any user maintenance. Turning the controls to the OFF position does not disconnect this appliance from the power supply. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Do not combine laundry products for use in one load unless specified on the label.
- Do not mix chlorine bleach with ammonia or acids such as vinegar. Follow package directions when using laundry products. Incorrect usage can produce poisonous gas, resulting in serious injury or death.
- Do not reach into the washer while parts are moving. Before loading, unloading, or adding items, press the START/PAUSE button and allow the drum to coast to a complete stop before reaching inside. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children. As children grow, teach them the proper, safe use of all appliances. Failure to comply with these warnings could result in serious injury to persons or death.
- Destroy the carton, plastic bag, and other packing materials after the washer is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads, or plastic sheets can become airtight chambers. Failure to comply with these warnings could result in serious injury to persons or death.
- Keep laundry products out of children's reach. To prevent injury to persons, observe all warnings on product labels. Failure to comply with these warnings could result in serious injury to persons or death.
- Remove the lid to the washing compartment before your washer is removed from service or discarded to avoid the danger of children or small animals getting trapped inside. Failure to do so can result in serious injury to persons or death.
- Keep hands and foreign objects clear of the lid and latch area when closing the lid. Failure to keep hands clear can result in personal injury.
- Do not touch the power plug with wet hands. This may result in electric shock.
- Do not touch the water draining from the machine during a high-temperature wash or drying cycle. This water is hot, and touching it may result in burns or injury.
- Do not stand on top of the appliance or place objects(such an laundry, lighted candles,lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance. This may result in electric shock, fire, problems with the product, or injury.
- Do not install or store the washer where it will be exposed to freezing temperatures. Water may freeze in the hoses and damage the washer. Winterize the washer before storing or moving it in freezing temperatures. Refer to the Maintenance section for instructions.
- To avoid breaking the lid glass, do not push too hard on the lid when closing.
- Do not step on the pedestal washer. Doing so may damage the washer or cause

serious injury.

# SAVE THESE INSTRUCTIONS

# INSTALLATION

## Part names

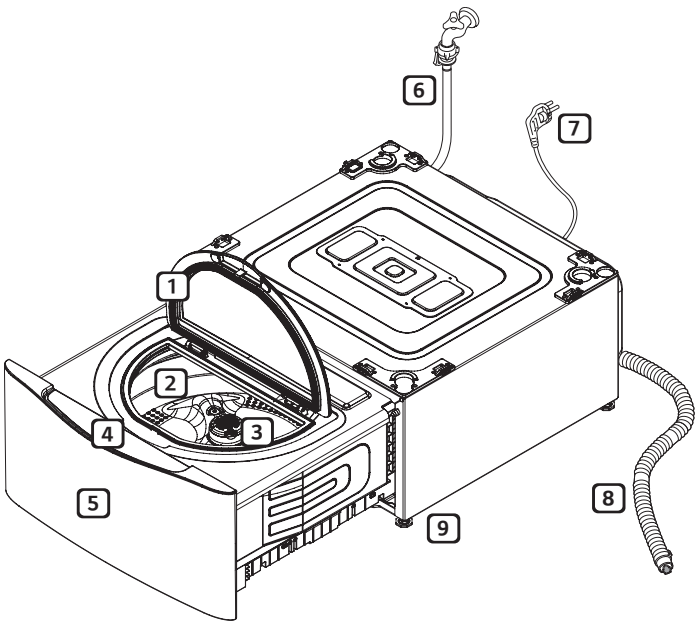


1. Washer Door
2. Drum
3. Dust Net
4. Control Panel
5. Drawer
6. Water Supply Hose
7. Power Plug
8. Water Drain Hose
9. Leveling Feet

- Different accessories may apply depending on the model.

## Accesorios



1 water supply hose (for cold water)



Water supply hose (for connecting to 2 washers)



Water drain hose



Water supply hose connector



Spanner



Water drain hose connector



Non-skid pads



Detergent measuring cup



Tie straps




Screws

# Installation instructions

## Choose the proper location

**WARNING**

- Two or more people are required when moving, unpacking, and stacking the washer. Failure to follow this warning may result in damage to property or serious bodily harm.
- Store and install the washer where it will not be exposed to weather or to temperatures below freezing. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Properly ground the washer to conform with all electric governing codes and ordinances. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- To reduce the risk of electric shock, do not install the washer in humid spaces. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- To ensure proper air flow, do not block the large opening on the bottom of the washer with carpeting or other materials.
- Do not remove the ground prong. Do not use a 2-prong adapter or 2-wire extension cord. Failure to follow these warnings can cause serious injury, fire, electric shock, or death.

**CAUTION**

- This pedestal washer must be installed underneath a matching front-loading LG washing machine manufactured after 2009.
- The pedestal washer will not work as a standalone unit.
- The pedestal washer must be stacked under an LG brand appliance in order to operate properly.

## Power outlet

The power outlet must be within 1.5 m of either side of the washer. The appliance and outlet must be positioned so that the plug is easily accessible.

**WARNING**

- For best performance, plug the washer into its own individual outlet. If necessary, use a new, 2-prong adapter or 2-wire extension cord with a 2-prong (grounding) plug rated at no less than the branch circuit. Do not use an extension cord longer than three feet. Failure to follow these warnings can result in serious injury, fire, electric shock, or death
- The outlet must be grounded in accordance with current wiring electric codes and regulations.
- Time-delay fuse or circuit breaker is recommended.

**NOTE**

- It is the personal responsibility and obligation of the product owner to have a proper outlet installed by a qualified service technician.

## Flooring

To minimize noise and vibration, the washer MUST be installed on a solidly constructed floor. Allowable slope under the entire washer is a maximum 2.5 cm. difference from side to side or from front to back. Installing on carpeting and soft tile surfaces is not recommended Never install the washer on a platform or weakly supported structure.

**NOTE**

- The washer must be installed on firm flooring to minimize vibration during the spin cycle. Concrete flooring is best. The washer should not be installed on rugs or exposed to weather.

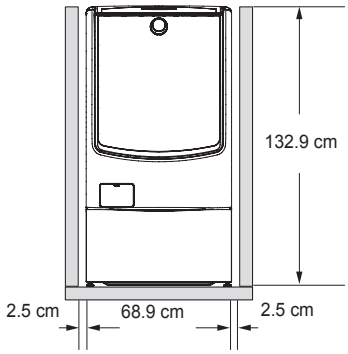


To ensure sufficient clearance for water lines and airflow, allow minimum clearances of at least 2.5 cm at the sides and 10 cm behind the unit. Be sure to allow for wall, door, or floor moldings that may increase the required clearances.

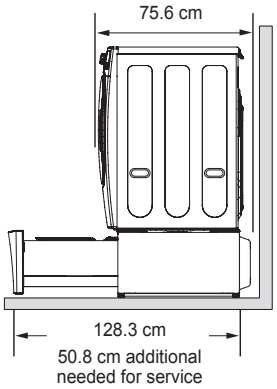


## Unpacking and removing shipping material

**1** • After removing the carton and shipping material, lift the washer off the foam base. Make sure the plastic tub support comes off with the base and is not stuck to the bottom of the washer.

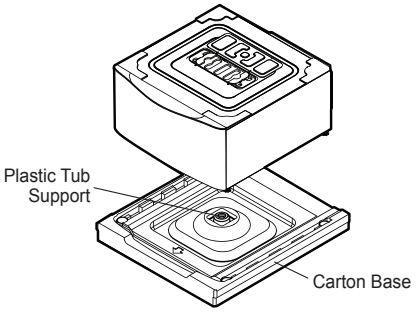


• If you must lay the washer down to remove the base packaging materials, always protect the side of the washer and lay it carefully on its side. DO NOT lay the washer on its front or back.

**2** • Save the foam block for future use. If the washer must be moved in the future, the foam block will help prevent damage to the washer during transportation.

**NOTE**

• To prevent damage, do not remove the foam block until the washer is at the final location.

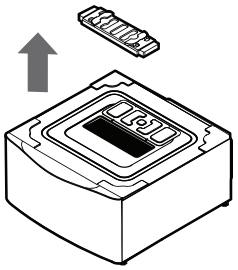

**3** Turn the top cover about 180 degrees. Cover the upper hole with the top cover and install 4 short screws (included in packing box) to fix it in place.

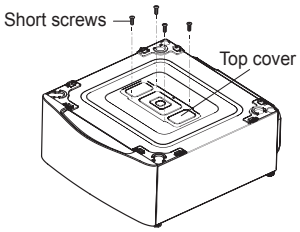


**WARNING**

- The top cover must be installed to avoid the risk of electric shock or short circuit. Failure to do so can cause serious injury, fire, electric shock or death.

**4** • Make sure the leveling legs on the front-loading washer are fully retracted before stacking it on top of the pedestal washer. Position the appliance on top of the pedestal washer.

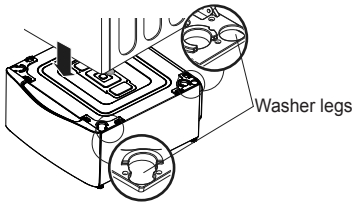


**5** • Make sure the holes on the pedestal washer align with the holes in the front-loading washer, then install 4 long screws (included in box) at each corner to securely attach the front-loading washer to the pedestal washer.

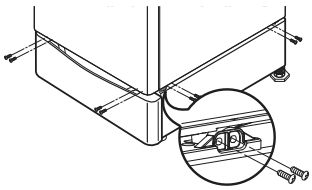

**6** • Turn the feet of the front-loading washing machine slightly until it is snugged up against the pedestal washing machine.

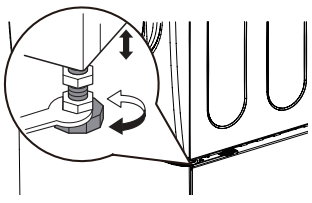

## Tools you will need

- Adjustable Pliers



- Carpenter's Level



- Screwdriver



## Leveling the washing machine

The washer tub of your new washing machine spins at very high speeds. To minimize vibration, noise, and unwanted movement, the floor must be perfectly level and solid.

**1** Check that the washing machine is level.

- Check for levelness by rocking the top edges of the washing machine or placing a level on the washing machine. The slope beneath the washing machine must not exceed 1.2cm, and all four leveling feet must rest firmly on the floor.

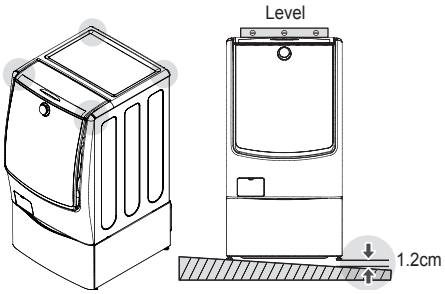


**2** Turn the lower leveling feet clockwise to level the washing machine.

- Turning the lower leveling feet clockwise raises the washing machine.

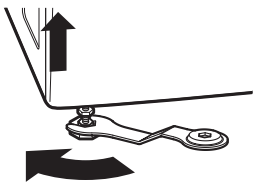


**3** Turn the locknuts counterclockwise and tighten them when the washing machine is level.

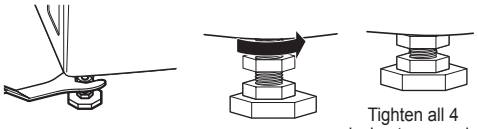


**4** Check again that the washing machine is level.

- Push or rock the top edges of the washing machine gently to make sure that the washing machine does not rock.
- If the washing machine rocks, repeat steps 1 to 3.

**WARNING**

- Using the washing machine without leveling may cause it to malfunction, producing excess vibration and noise.
- When stacking the full-size washing machine on the pedestal washer, use the leveling feet on the pedestal washer to level both. The full-size washing machine´s leveling feet should be minimized and the locknuts turned counterclockwise to secure them.
- Use the leveling feet only when you level the washing machine. If you raise the leveling feet unnecessarily, it may cause abnormal vibration of the washing machine.

## Using non-skid pads (optional)

If you install the washing machine on a slippery surface, it may move because of excessive vibration. Incorrect leveling may cause malfunction through noise and vibration. If this occurs, lay the non-skid pads under the leveling feet and adjust the level.

1 Clean the floor to attach the non-skid pads.
- Use a dry rag to remove foreign objects or moisture. If moisture remains, the non-skid pads may slip.

2 Adjust the level after placing the washing machine in the installation area.

3 Place the adhesive side of the non-skid pad on the floor.
- It is most effective to install the non-skid pads under the front legs. If it is hard to place the pads under the front legs, place them under the back legs.

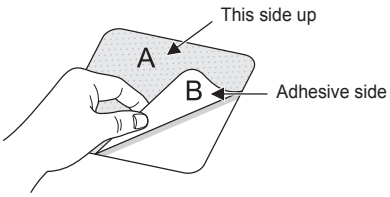


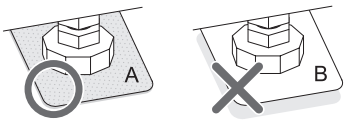


4 Check again that the washing machine is level.
- Push or rock the top edges of the washing machine gently to make sure that the washing machine does not rock. If the washing machine rocks, level the washing machine again.

## Connecting Inlet Hose

- Water supply pressure must be between (1.0 – 8.0 kgf/cm$^2$).
- Do not strip or crossthread when connecting inlet hose to the valve.
- If the water supply pressure is more than 0.8 MPa, a decompression device should be installed.
- Periodically check the condition of the hose and replace the hose if necessary.

### Checking Rubber Seal Inlet Hose

Two rubber seals are supplied with the water inlet hoses. They are used for preventing water leaks. Make sure the connection to taps is sufficiently tight.

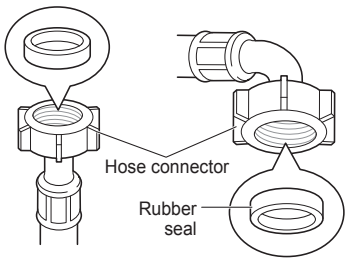

### Connecting one touch type hose to tap without thread

**1** Unscrew the adapter ring plate and loose the four fixing screws.

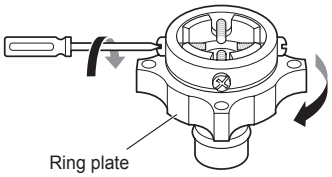


**2** Remove the guide plate if the tap is too large to fit the adapter.




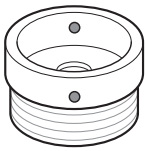

**3** Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection.

Tighten the adapter ring plate and the four fixing screws.

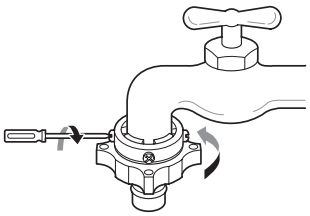

**4** Pull the connector latch plate down, push the inlet hose onto the adapter, and release the connector latch plate. Make sure the adapter locks into place.

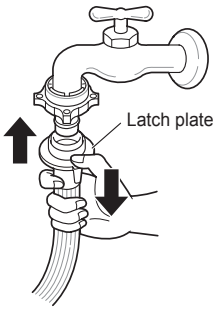


**NOTE**

- After connecting the inlet hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust, etc.) in the water lines. Let the water drain into a drum, and check the water temperature.

## Connecting Water Supply Hoses to Two Washers

In case you need to install an additional washer, you can use the accessories shown below to connect water supply hoses to two washers.

**1** Separate the water supply hose of the existing washer by disconnecting it from the water faucet.

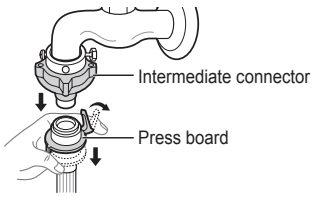


**2** Connect the water supply hose connector to the water supply hose.

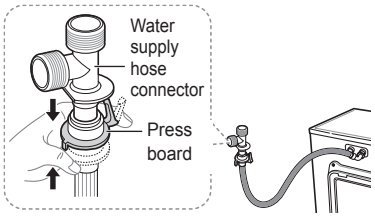


**3** Open the accessory package for additional washer installation. Locate the water supply hose and connect it to the additional washer to be installed.

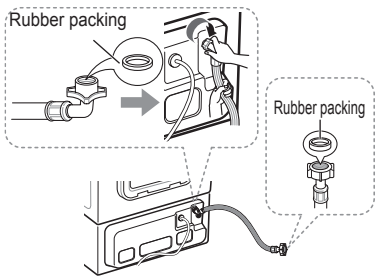


**4** Connect the provided water supply hose to the water faucet.

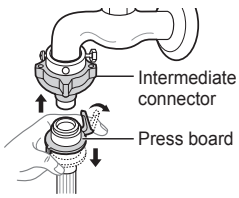


**5** Connect the water supply hose connected to the washer you wish to install and the water supply hose connected to the water faucet to the water supply hose connector.

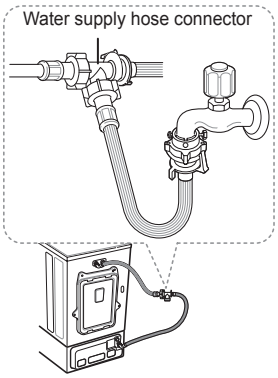

## Installing the Water Drain Hoses

- You need to install the water drain hose on firm and flat ground by smoothly lowering it. The height of the water drain hose should not be higher than 1 m from the ground.

**1** Ensure the hose clip is inserted.

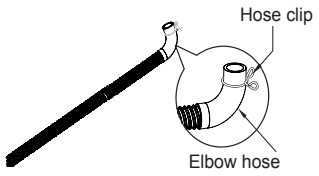


**2** Insert and push the water drain hose onto the drain outlet with the water drain hose facing upward.

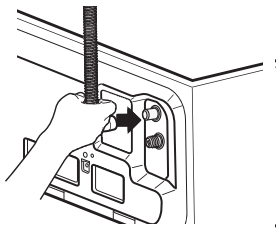

**3** Fix the hose clip at the end of elbow hose to prevent the water drain hose from being pulled out.

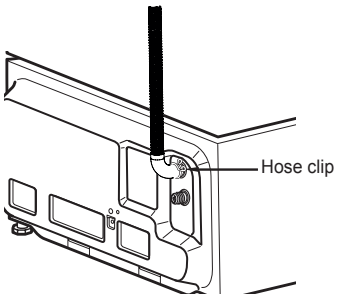


**CAUTION**

- Incorrectly connecting the water drain or supply hose may cause the following problems.
  - – Water leakage at the joint of the water supply hose on the washer side
  - – Water leakage at the joint of the water supply hose on the water faucet side
  - – Drain pump failures
- If the water drain hose installation location is too high, bent or pressed, or if the tip is soaked in water, draining may malfunction.
- When connecting and using the water drain hose, the total connected length should not exceed 3 m. Otherwise, draining or spin-drying may malfunction.

### Using the drain connector

Connect the drain hose of the full-size washer and the pedestal washer to the drain connector. Insert the included wire hose clamps on to the ends of the two drain hoses. Push the drain hoses firmly onto the drain connector. Adjust the wire hose clamps to prevent the hoses from coming loose or leaking. Failure to do so could result in flooding. Use of the drain connector helps avoid siphoning, odors, or improper draining.

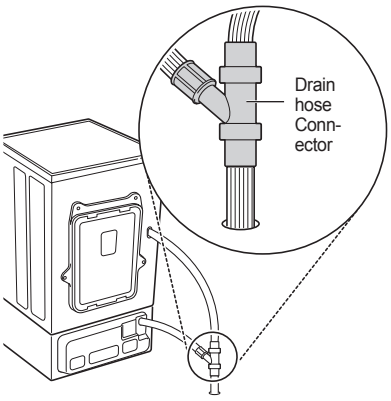

## Connecting to the power supply

- The washer should be plugged into a 220 VAC, 50 Hz, 2-prong (grounded) outlet. Plug in the washer. Improper connection of the equipment grounding conductor can result in risk of electric shock. Check with a qualified electrician or service technician if there is doubt that the outlet is properly grounded. Do not modify the plug provided with the appliance. Never damage or cut off the ground prong of the power cord. If the cord does not fit the outlet, have a proper outlet installed by a qualified electrician. Failure to follow these warnings can result in serious injury, fire, electric shock, or death.

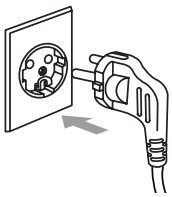

**WARNING**

- The power outlet must be within 1.5 m of either side of the washer.
- The appliance and outlet must be positioned so that the plug is easily accessible.
- Plug the washer into an electrical outlet which has a voltage rating that matches the rating plate. For best performance, plug the washer into its own individual outlet. This helps prevent overloading house wiring circuits which could cause a fire hazard from overheated wires. If necessary, use a new, 2-prong adapter or 2-wire extension cord with a 2-prong (grounding) plug rated at no less than the branch circuit. Do not use an extension cord longer than 1m. Failure to follow these warnings can cause serious injury, fire, electric shock, or death.
- The outlet must be grounded in accordance with current wiring codes and regulations.
- Time-delay fuse or circuit breaker is recommended.
- It is the personal responsibility and obligation of the product owner to have a proper outlet installed by a qualified electrician.

**WARNING**

- Do not use a worn or damaged power cord or power plug. Replace or repair it immediately.
- Failure to do so may result in death, fire, electric shock, or malfunction.
- Do not modify the power cord and take care not to damage it when installing or moving the washing machine. Failure to do so may result in death, fire, electric shock, or malfunction.
- Make sure that the washing machine is grounded.
- Connect this washing machine to a grounded outlet conforming to the rating prior to use.
- Failure to do so may result in fire, electric shock, or malfunction.
- Do not damage or cut off the ground prong of the power cord. Doing so may cause death, fire, electric shock, or product malfunction.

# Using the Washer

## Use Related

- LG Electronics' washer models support the capacity set forth in. Depending on the type or volume of laundry, the nominal capacity may differ from the actual capacity.
- Do not exceed the laundry capacity. Greater than nominal capacity may cause degraded product performance and the product will be overloaded.
- The product performance or washing capacity is determined by the electronic control program. Different models may exhibit different washing capacity or performance despite having the same drum and motor.

## Automatic Detection Function

- When selecting a specific cycle with automatic detection function, after pressing the Start/Pause button the machine will spin once or twice to detect the amount of laundry. After the amount of laundry is detected, water supply will begin.
- In some washing cycles, the sensor detects the amount of laundry automatically and the washer decides the optimized conditions for washing, such as the most suitable cycle option for the laundry, washing time, and amount of time for rinsing and spin-drying.

## Things to Check Before Using the Washer

- Is the water supply hose correctly connected to the cold water side?
- Is the water faucet open?
- Is the power plug correctly inserted into the power outlet?
- Is the water drain hose placed correctly?
- Is the product leveled?

## Using the Washer Door

**Opening the Washer Door**

1. Hold and pull the drawer handle forward completely.
2. Hold and lift the washer door handle upward to open the washer door.

## Closing the Washer Door

1. Push the washer door until it clicks.
2. Push the drawer completely closed.

**CAUTION**

- Do not let your hands get stuck between the washer door and the washer, as this can cause injury.
- If the washer door is damaged, it can cause injury. In such a case, do not operate the washer, and immediately call the LG Electronics service center.
- Forcing the drawer or the washer door to open can cause part damages and safety problems.
- Closing the drawer before having closed the washer door completely may scratch the washer door glass.
- Ensure the drawer is pulled out completely to prevent the washer door from contacting the front load washer. If the washer is used repeatedly while the drawer is not pulled out completely, the drawer may not be open smoothly.

**NOTE**

- Door locking may fail if there is too much laundry in the machine or if the washer door is not completely closed.
- If the product is operating or the Drawer Lock (), indicator is displayed, the washer door cannot open. To open the washer door, press the Start/Pause button to stop the product, and when Drawer Lock (), indicator turns off, open the washer door. Do not force the door open.
- If ( dE1, dE2, dE3 ) or a warning sign appears on the display, close the drawer and the washer door completely. After doing so, press the Start/Pause button.
- If the drawer cannot be opened completely, pull the drawer forward with a little force using both hands.
- If power failure occurs during product operation, the washer door cannot be opened. Provide electricity again or contact the LG service center. (in case of boiling washing, the washer door may not open after electricity is provided again due to high temperature inside the washer).
- If the washer door cannot open due to high temperature, carry out rinsing with cold water using the Rinse+Spin cycle or wait a while before opening the door.

## Handling Laundry

To prevent textile damages and product malfunctions, make sure to obey the following instructions.

**Checking Before Washing**

- Check the Cautions for Handling tag attached to the laundry and ensure water washing will not damage the laundry.
- Zippers, hooks or buttons may damage other clothes, so wash clothes with zippers, hooks, or buttons inside out.
- Do not wash 'memory wire' on female inner wear (such as a brassiere) as it may damage other clothes or the washer and create noise.

**NOTE**

- Using a washer for the following types of laundry can cause shrinking or deformation. Check the washing label before washing them.
- Shoes, leather products, neck ties, suits, and coats
- Laundry with artificial wrinkles
- Outer wear that contains textile or linings that shrink or decolorize when contacted by water, such as silk, wool, rayon, or acetate
- Any types of laundry that can cause deformation or discoloration when soaked in water (refer to the washing labels)

## Removing Alien Substances

Metallic objects inside the washer can damage laundry, break the drum, and generate loud noises. Check each pocket of your laundry for coins, hairpins, or keys.

- Before using the washer, shake off dust, soil, and sand from your laundry as they may dirty other clean clothes.
- Before using the washer, use a cleaning agent to remove partial stains and dusts.
- Pre-washing laundry which is stained with blood or milk briefly with cold water before carrying out main washing can remove stains more effectively.

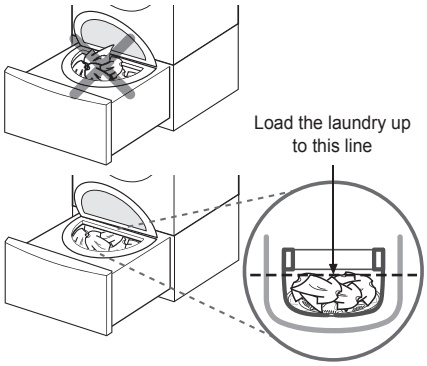


**Separating before Washing**

- If an item of clothing has a long lace attached to it, arrange the lace so it cannot be tangled or put it into a washing net.
- Remove the insides of cushions, pillows, or sitting mats and only wash the cover. The insides may protrude, damaging other laundry. Plastic parts may generate abnormal vibrations.
- Separate colored clothes from white clothes and black clothes from clothes with lots of lint when you wash them.
- Do not wash electric blankets, carpets, curtains, foot cleaning seats, or rubber mats.
- Wash two or more towels or knits together. If washed separately, laundry which absorbs a lot of water may not be washed well or abnormal spin-drying may occur.

**CAUTION**

- Divide laundry in large volume for washing so that the laundry can be submerged under water completely. If laundry expands during washing, it may cause damage to the laundry and parts during washing or spin-drying.

# Using Detergents or Fabric Softeners

## Using Detergents

- Ensure to use detergent designed for a top load washer, and use the provided detergent measuring cup to add the suggested amount of detergent. If you use more than the suggested amount of detergent, undissolved detergent may accumulate inside the washer, causing odor.
- Use the provided detergent measuring cup to add only one cup of detergent.
- Reduce the amount of detergent for lightly soiled laundry. If you use too much detergent, excessive bubbles will remain after rinsing.
- Good quality water (soft water) has excellent washing power but will create a large amount of bubbles. If this is the case, reduce the amount of detergent.
- Use less liquid detergent than solid, as liquid detergent dissolves easily in water and creates a large amount of bubbles.
- Natural soap powder does not dissolve well in water, and can easily cause clogging. If using it in cold water, it can cause leakages or malfunctions. Make sure to use lukewarm water with natural soap powder.
- If the detergent is lumpy or is in clumps, grind it into powder before use.

**NOTE**

- Stains on inner wear (cotton) or baby clothes are mostly fats or proteins. Instead of using a large amount of detergent, it is more effective to use a cycle that washes at high temperature such as Intimates or Baby Wear cycle.
- The water supply time is short, so make sure to add detergent before washing begins.
- As lint, fabric softeners, or zeolite in laundry is discharged, the high-speed rotating pump propeller can create fine bubbles that make the water look murky. Even if the drained water looks murky, it does not mean that rinsing is incomplete.
- If you use too much fabric softener, excessive bubbles will remain after rinsing, causing an increase in rinsing time. In addition, you may see some bubbles even after the final Spin cycle has been completed.

## Washing

1. Press the Power button.
   - Add laundry to the drum.
   - Add the recommended amount of detergent using the provided detergent measuring cup.
   - Measure the detergent with the detergent measuring cup and pour it into the drum evenly.
2. Select a cycle by pressing the Cycle Selection button (for more information of washing cycles, refer to 'Washing Cycles' Close the drawer).
   - The default setting is automatically applied to cycle options. To change it, press the option button.
3. Press the Start/Pause button.
   - The washer door will lock, water supply will start and washing will begin.
4. After washing is complete, remove the laundry.

**NOTE**

- If the power is cut off forcibly while draining, ensure water has drained completely. Operating the washer while water has not been drained completely may cause water to be drained and supplied at the same time.
- After washing is complete, wipe off the washer door, rubber packing and inside the drum with a dry towel for clean washing.
- If wet laundry is left inside the drum for a long time after washing, the laundry may smell. Remove laundry immediately after washing.

## Using Fabric Softener

- Use the amount of fabric softener recommended by the manufacturer.
- The washer chimes before the final rinse so the fabric softener can be added. To cancel the alarm sound, press the Extra Rinse button for 3 seconds.
- The fabric softener can be added within 3 minutes after the alarm.
- If you miss the fabric softener add point, add the fabric softener and carry out rinsing once again using the Rinse+Spin cycle.

1. When the washer chimes, press the Start/Pause button to pause the product operation.
2. Slide the drawer open, ensure the Drawer Lock (⊘) indicator is canceled, open the drawer and the washer door, and add the fabric softener.
3. Close the washer door, slide the drawer closed, and press the Start/Pause button to restart the washer.

**NOTE**

- After pressing the Start/Pause button to add the fabric softener, only the Extra Rinse button can be operated.

## Using Bleach

- Mix bleach with water and add to the drum directly.
- Make sure to use oxygen bleach.

**CAUTION**

- Do not directly apply bleach to the laundry. This may cause partial discoloration and severe damage to the laundry.
- Do not use chlorine bleach or acidic cleaner, as it can cause damage to clothes such as discoloration and color transfer of laundry.

# Control Panel Features

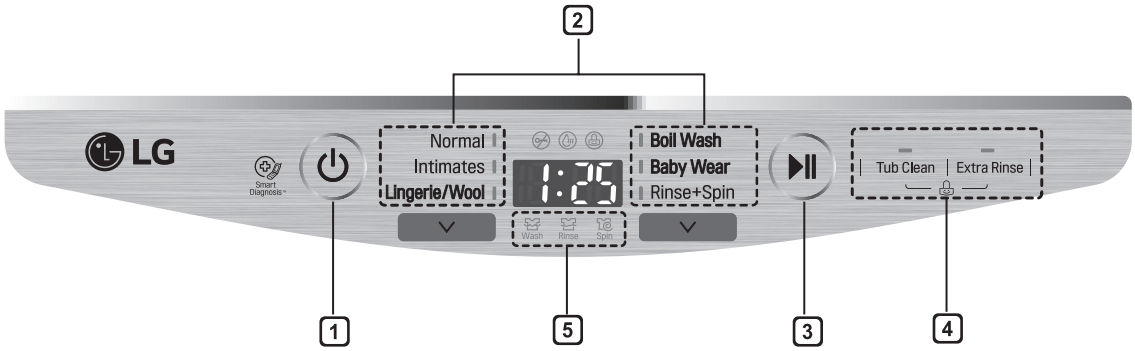


### 1 POWER (ON/OFF) BUTTON

- Press to turn the washer ON. Press again to turn the washer OFF. Pressing the POWER button during a cycle will cancel that cycle and any load settings will be lost. The drawer will unlock after a brief pause.

**NOTE:**

- If there is any water remaining in the tub after the washer shuts off, it will drain following 4-minutes delay. The washer can be restarted any time before the drain begins. However, once the water begins to drain, all functions will be suspended until the water has been completely drained and the washer shuts off.
- When the Power button is pressed, the Normal cycle is selected by default. To modify the default options or choose another cycle, press the cycle selector ( ) button to illuminate the display.

### 2 CYCLE SELECTOR BUTTON

- Press this button to select the desired cycle. Once the desired cycle has been selected, the standard presets will appear in the display. These settings can be adjusted using the cycle setting buttons any time before starting the cycle.

**NOTE:**

- To protect your clothing, some settings will be restricted depending on cycle selections.

### 3 START/PAUSE BUTTON

- Press this button to start the selected cycle. If the washer is running, use this button to pause the cycle without losing the current settings.

**NOTE:**

- If you do not press the START/PAUSE button within 4 minutes of selecting a cycle, the washer automatically turns OFF and all cycle settings are lost. Any water remaining in the tub will be drained.

### 4 OPTION BUTTONS

- Use these buttons to adjust the settings for the selected cycle. The setting lights above the buttons illuminate to show the current selection.

### 5 TIME AND STATUS DISPLAY

- The display shows the cycle status and estimated time remaining.

## Washing Cycles

You can select a washing cycle optimized for your type of laundry and its degree of soiling. Read the following descriptions and select the appropriate washing cycle.

- Different cycles are available depending on the model. Make sure to check your washer model.

| Washing cycle | Description |
|---|---|
| Normal | A cycle to wash general types of laundry. |
| Intimates | A cycle to wash cotton inner wear. |
| Lingerie/Wool | A cycle to wash textiles, lingerie, or fine clothes likely to shrink or deform. |
| Boil Wash | A boiling washing cycle to sterilize and whiten cotton inner wears or baby clothes. |
| Baby Wear | A cycle to wash baby clothes hygienically. |
| Rinse+Spin | A cycle that rinses and spin-dries without washing laundry. |

## Option Functions

Select an appropriate option depending on the type of laundry and the degree of soiling. Read the following descriptions and select the appropriate option.

- Different options are available depending on the model. Make sure to check your washer model.

| Option functions | Description |
|---|---|
| Tub clean | An option to keep the washing tub clean by sterilizing germs within the drum. |
| Extra Rinse | An option to increase the number of rinsing cycles. |

## Normal Cycle

Use this cycle for general washing.

**NOTE**

- If you press the Start/Pause button without selecting cycles, the Normal Cycle will operate.
- To change settings while washing, first press the Start/Pause button to stop washing, then press the desired buttons.

## Intimates Cycle

Use this cycle for washing cotton T-shirts or inner wear.

**NOTE**

- This cycle is effective for washing heavily stained cotton T-shirts or inner wear.
- The recommended amount of laundry is less than 1.5 kg.

## Lingerie/Wool cycle

Use this cycle for washing fine textiles that are likely to shrink or deform.

**NOTE**

- To reduce damage to textiles and improve washing power, use special neutral detergent for wool such as wool shampoo or essence.
- To prevent damage to clothes, the tub spins gently to the left and right for washing.
- The recommended amount of laundry is less than 1.5 kg.

## Boil Wash

Select this boiling washing cycle to sterilize and whiten cotton inner wears or baby clothes.

**NOTE**

- In this cycle, laundry is washed thoroughly due to high temperatures. Use 1/2 the amount of detergent recommended by the manufacturer for a normal load.
- Do not wash white or brightly colored laundry with darkly colored laundry that can discharge colors.
- Pre-washing laundry which is stained with blood or milk briefly with cold water before carrying out main washing can remove stains more effectively.
- The recommended amount of laundry is less than 1.5 kg.
- In this cycle, water is heated using the heating system of the washer.
- To prevent injury from high temperatures, To prevent injury from the washer door will not open during washing.
- Bubble Removing Function: If an excessive amount of detergent is used, the bubble removing function may operate.
- Drain temperature lowering function: For safe use, cold water is briefly supplied before draining to lower the water temperature.

## Baby Wear cycle

Select this cycle to wash your baby clothes hygienically.

**NOTE**

- Select a proper type of neutral detergent.
- Clothes are washed at high temperature to sterilize and remove mites.
- The recommended amount of laundry is less than 1.5 kg.
- It is more effective to pre-wash parts stained with food, sweat, urine and feces briefly before carrying out the main washing.
- Do not select this cycle to wash fine textiles such as wool or silk.
- To prevent injury from high temperatures the washer door will not open during washing.

### Rinse+Spin cycle

Select this cycle to cover rinsing to spin drying without washing laundry.

**NOTE**

- Add fabric softener only without detergent.
- The recommended amount of laundry is less than 1.5 kg.

# Using the Optional Functions

## Child Lock Function

Use this option to prevent accidents caused by children manipulating the buttons while washing is in progress.

## Activating or Deactivating the Child Lock Function

- You can activate or deactivate Child Lock by pressing down the Tub clean and Extra Rinse buttons at the same time for 3 seconds.
- If Child Lock is activated, you cannot control any buttons except for the power button.
- When you set this function during the product operation, 'Child Lock Indicator ()' will appear on the display..

### Changing the Cycle or Option while the Child Lock Function is Activated

1. Press the Tub Clean and Extra Rinse buttons at the same time for 3 seconds to deactivate Child Lock.
2. Press the Start/Pause button to stop operation.
3. Select a cycle or option which you wish to change, and then press the Start/Pause button to resume operation.

**NOTE**

- Child Lock will not be deactivated automatically after all cycles are complete. Press the Child Lock button for about three seconds to deactivate Child Lock.
- If Child Lock is activated accidentally, press the Child Lock button for three seconds to deactivate Child Lock.
- If you turn on the power while the Child Lock function is activated, the Child Lock lamp will be lit.

### Tub Clean

Use this option to keep the drum clean by sterilizing germs within the drum.

**NOTE**

- Pour drum cleaner or liquid chlorine bleach (200 ml) into the drum evenly and carry out the Tub Clean cycle.
- If excessive amount of drum cleaner or liquid chlorine bleach is used, it can cause damage to the washer and discoloration.
- Do not insert laundry and detergent when carrying out the Tub Clean cycle. It can cause damage to the laundry and discoloration.

### Extra Rinse

Use this option to increase the number of rinsing cycles.

- When you press the Extra Rinse button, the number of rinsing cycles (2~5) to be added will be displayed.

### Spin-drying

Select the Rinse+Spin cycle, press the Extra Rinse button until the light on rinse indicator is turned off and and then press the Start/Pause button to start spin-drying.

# Maintanence

## Winterizing the washer

- Turn off the water supply, disconnect the water supply hose, hold the water supply hose with the end part facing down, and drain water from the hose.
- Choose Spin-drying and then press the Start/Pause button to carry out spin-drying for 1 minute in order to drain water remaining in the washer and the water drain hose.
- Unplug the power plug.
- Slide the drawer open, pull out the residual water hose on the right and drain water remaining in the product.

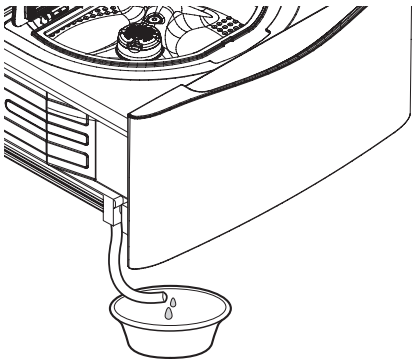

## If the hose is frozen

- Pour hot water (not exceeding 50 °C) onto the water faucet and disconnect the water supply hose.
- Soak the disconnected water supply hose in hot water (not exceeding 50 °C)
- Pour water at 50 °C into the drum and leave it for 10 minutes.
- Connect the water supply hose to the washer again and carefully pour hot water (not exceeding 50 °C) into the water supply hose.
- Connect the water supply hose to the water faucet and check if water can be drained.

**NOTE**

- The stainless drum is not easily rusted, but metal parts / decoration on clothes or metal objects such as safety pins, keys can lead to rust.
- If rust has accumulated, put a cleaning agent (neutral detergent) on a sponge or soft cloth and wipe the rust off.

## Cleaning the Drum

1 Dilute drum cleaner (200 ml) or liquid chlorine bleach (200 ml) in water and pour the mixture in the drum.

2 Use the Tub Clean option to clean the drum.

**CAUTION**

- Do not use acidic cleaner as it can cause discoloration or corrosion.
- When cleaning the drum, do not add laundry into it. Doing so may cause severe damage to laundry.

**NOTE**

- For optimal washing, clean the drum periodically using the Washing Tub Clean cycle. If washing has been carried out 30 times, tCL, which indicates the time of drum clean, will appear on the display.
- If you do not completely remove moisture from the inside of the drum, it can generate bad odors and stains (due to bacteria and fungus). After washing, wipe the washer door, rubber packing and drum with a different towel and open the washer door and allow the drum interior to dry completely.
- The Stainless steel drum is resistant against rust except in the following cases. When rust is generated, use a sponge or soft cloth soaked in cleaning liquid (neutral agent) and wipe it off thoroughly (do not use metallic scrubbers).
  - If steel products (pins, hair pins) that can easily generate rust are left too long in the drum
  - If water with excessive iron is used for too long
  - If bleach is used for washing and left for too long in the drum
- If you use the Boil Wash cycle for a long time, lime in the water may build up in the drum due to high temperatures. If lime or another substance has built up, put toothpaste on a brush and wipe it clean.

## Cleaning the Water Supply Inlet Net

When water is supplied to the drum weakly or the net is clogged by waste, IE mark will appear on the the time display and a warning phrase for a model with LED display will appear.

1 After closing the water faucet, separate the water supply hose connected to the rear of the washer.

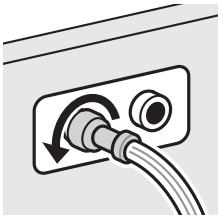

2 After taking out the net with your hands or clipper, use a brush to remove waste from it.

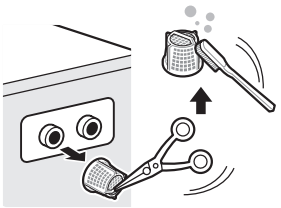

**NOTE**

- To prevent waste from clogging the water supply inlet net, periodically clean it. If the net has alien substances such as rust, sand or stones, water supply will be interrupted.

## Cleaning Dust Net

- Clean the dust net after using it 2 or 3 times.
- If it is torn or damaged, purchase a new one from the LG Electronics service center.

1 Separate the dust net from the drum by pressing the net separation button on both sides of the dust net.

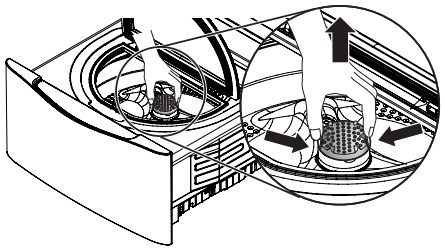

2 Grab the dust net with both hands and separate the inside dust net and the dust net cover.

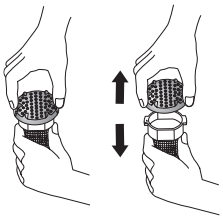

3 Put the inside dust net and the dust net cover in a washbowl filled with water and remove residue inside the dust net.

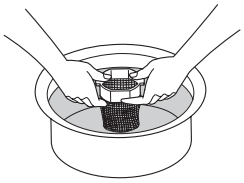

4 Insert the washed dust net to the drum again and operate the washer.

- If it is not fixed securely, it may fall out while washing.

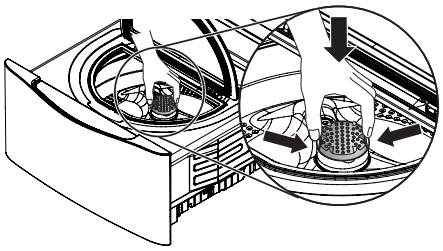

**CAUTION**

- Do not operate the washer while the dust net is separated from the washer.
- If the dust net is separated from the washer, clothes or the product may be damaged.

## Cleaning the Rubber Packing

1 Dilute oxygen based bleach (5 g) in lukewarm water (5 L) and then wear a rubber glove and wipe off the rubber packing thoroughly with diluted bleach. (1000X dilution)

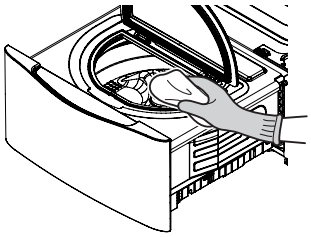

2 Remove moisture from the rubber packing using a dry towel and open the washer door to dry completely.

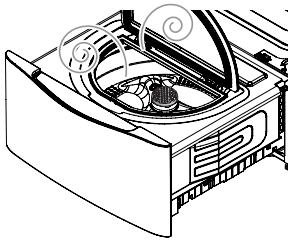

**NOTE**

- If you don't dilute bleach, it may cause the rubber packing or other parts to corrosion.
- Clean the rubber packing at least once a month.

## Using the Smart Diagnosis™ Function

Use this function if you need an accurate diagnosis by an LG Electronics service centre when the product malfunctions or fails. Use this function only to contact the service representative, not during normal operation.

1 Press the Power button to turn on the washing machine. Do not press any other buttons or turn the cycle selector knob.

2 When instructed to do so by the call centre, place the mouthpiece of your phone close to the Power button.

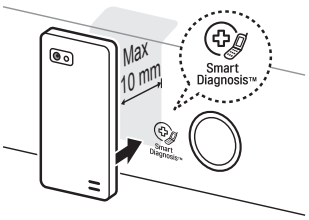


3 Press and hold the Tub Clean button for 3 seconds, while holding the phone mouthpiece to the icon or Power button.

4 Keep the phone in place until the tone transmission has finished. Time remaining for data transfer is displayed.

- For best results, do not move the phone while the tones are being transmitted.
- If the call centre agent is not able to get an accurate recording of the data, you may be asked to try again.




5 Once the countdown is over and the tones have stopped, resume your conversation with the call centre agent, who will then be able to assist you using the information transmitted for analysis.

**NOTE**

- The Smart Diagnosis™ function depends on the local call quality.
- The communication performance will improve and you can receive better service if you use the home phone.
- If the Smart Diagnosis™ data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis™ service.

# TROUBLESHOOTING

## Faqs: frequently asked questions

| | |
|---|---|
| P: | Can the pedestal washer and the front-loading washer be run at the same time? |
| R: | Yes. The pedestal washer is designed to operate simultaneously under LG manufactured front-loading washers produced after 2009. It is not designed for operation under LG toploading washers, LG dryers, non-LG manufactured appliances, or as a standalone unit. |
| P: | How much clothing can be loaded in the pedestal washer? |
| R: | The tub is designed to hold a maximum of 4 lb. (One thick bath towel weighs about one pound when dry.) Do not overload the washer tub. The clothing should fit loosely into the tub and the lid should close easily. |
| P: | How much detergent, softener, or bleach should be used per load?<br>How/when is it added to the machine? |
| R: | **Detergent:**<br>• The pedestal washer requires very little detergent. Most normal loads only require 1 tsp (10 g) of detergent. Use a maximum of 2 tsp (20 g) of HE detergent. Do not use a full detergent pod.<br>• Pour the detergent in the measuring device/dispenser provided with the machine. Place the dispenser in the tub with the clothing before beginning the cycle.<br>• If the dispenser is missing, place the 1–2 tsp. (10-20 g) detergent directly into the tub.<br>• For more information, see Detergent and Dispenser Use.<br>**Fabric Softener:**<br>• Use ¼ the amount recommended by the manufacturer for a normal load. Use the dispenser provided with the machine. For instructions, see Using Fabric Softener.<br>**Bleach:**<br>• Do not use liquid or powdered bleach to launder items in the pedestal washer. To safely and effectively launder items using bleach, use the bleach dispenser in the front-loading washer. |
| P: | Can I slide the drawer out while the cycle is running? |
| R: | No. The drawer locks for safety during operation. Pause the cycle to open the drawer. |
| P: | What if I want to add an item after I've started the cycle? |
| R: | Press the Start/Pause button to pause the cycle. After the drawer unlocks, add the item and press Start/Pause to restart the cycle. Wash performance may be affected if the item is added after the first few minutes. |
| P: | How do I dry out the tub after the cycle is finished?<br>How do I keep the tub free from mildew and odors? |
| R: | For best care, wipe the lid and tub dry with a soft cloth or towel after use. Leave the drawer and the lid open to allow maximum air circulation after use. Run the Tub Clean cycle once a month or more frequently as needed. TCL is displayed after every 30 cycles as a reminder. |

**NORMAL SOUNDS YOU MAY HEAR**

The following sounds may be heard while the washer is operating. They are normal.

**CLICKING:**

Lid lock relay when the lid locks and unlocks.

**SPRAYING OR HISSING:**

Water spraying or circulating during the cycle.

**HUMMING OR GURGLING:**

Drain pump is pumping water from the washer at times during a cycle.

**WATER SLOSHING SOUND:**

A liquid in the balance ring around the wash basket helps the basket spin smoothly.

**SOUND OF WATER BEING ADDED AFTER THE WASHER HAS ALREADY BEEN IN OPERATION**

- The washer adapts to the load size and type to add more water to the cycle as needed.
- The wash load may be unbalanced. If the washer senses that the load is unbalanced, it will stop and refill to redistribute the load.
- The washer may be diluting laundry additives to add to the wash load.

**BEFORE CALLING FOR SERVICE**

Your washing machine is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If your washer does not function properly or does not function at all, check the following before you call for service:

| Problem | Possible Cause | Solutions |
|---|---|---|
| **Rattling and clanking noise** | **Foreign objects, such as keys, coins, or safety pins may be in tub .** | • Stop washer, check tub for foreign objects. If noise continues after washer is restarted, call for service. |
| **Thumping sound** | **Heavy wash loads may produce a thumping sound.** | • This is normal. If sound continues, washer is probably out of balance. Stop and redistribute wash load. |
| | **Wash load may be out of balance.** | • Pause the cycle and redistribute the load after the lid unlocks. |
| **Vibrating noise** | **Packaging materials were not removed.** | • See the Unpacking and Removing Shipping Material section in the installation requirements section. |
| | **Wash load may be unevenly distributed in the tub.** | • Pause the cycle and redistribute the load after the lid unlocks. |
| | **Not all leveling feet are resting firmly and evenly on the floor.** | • See Leveling the Washer in the Installation Instructions section. |
| | **Floor not rigid enough.** | • Make sure that the floor is solid and does not flex. See Flooring in the Installation Requirements section. |

| Problem | Possible Cause | Solutions |
|---|---|---|
| **Water leaking** | **Inlet hose connection is loose at faucet, washer, or Y-connector.** | • Check hoses and Y-connectors for leaks, cracks and splits.<br>• Check and tighten hose connections. |
| | **House drain pipes are clogged.** | • The washer pumps out water very rapidly. Check for water backing up out of the drain pipe during drain. If water is seen coming out of the drain, check for proper drain hose installation and check for restrictions in the drain. Contact a plumber to repair drain pipe. |
| | **Drain hose has come out of drain connector or is not inserted far enough.** | • Tie drain hose to inlet hose or standpipe to prevent it from coming out during drain. For smaller drain pipes, insert the drain hose into the pipe as far as the drain hose flange. For larger drain pipes, insert the drain hose into the pipe 1-2 inches past the flange. |
| | **Load is too large for the tub.** | • Reduce the load or use the full-size washing machine. Use the Duvet cycle on the front-loading washer for large or bulky items.<br>• Stop the washer and check the load. Make sure the load fits loosely in the tub and the lid closes easily. |
| **Wrinkling** | **Washer not unloaded promptly.** | • Always remove items from the washer as soon as the cycle is complete. |
| | **Washer overloaded.** | • The washer can be fully loaded, but the tub should not be tightly packed with items. The lid of the washer should close easily. |
| | **Hot and cold water inlet hoses are reversed.** | • Hot water rinse can set wrinkles in garments. Check the inlet hose connections. |
| **Staining** | **Bleach or softener was added directly to the wash load in the tub.Washer was not unloaded promptly.** | • Always remove items from the washer as soon as possible after the cycle is complete. |
| | **Clothes were not properly sorted.** | • Always wash dark colors separately from light colors and whites to prevent discoloration.<br>• Never wash heavily soiled items washed with lightly soiled items. |
| **Washer will not turn ON** | **Power cord is not properly plugged in.** | • Make sure that the plug is plugged securely into a grounded, 2-prong, 220-VAC, 50-Hz outlet. |
| | **House fuse is blown, circuit breaker has tripped, or power outage has occurred.** | • Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician. |
| | **NOTE:** If the washer stopped during a cycle due to a loss of power, the washer will resume the cycle where it stopped when the power is restored. | |

| Problem | Possible Cause | Solutions |
|---|---|---|
| **Wash cycle time is longer than usual** | **The washer automatically adjusts the wash time for the amount of laundry, water pressure and other operating conditions.** | • This is normal. The washer adjusts cycle time automatically to provide optimal results for the selected cycle. The time remaining shown in the display is only an estimate. Actual time may vary. |
| **Musty or mildew odor in washer** | **Incorrect or too much detergent has been used.** | • Use only detergent in accordance with the manufacturer's instructions. This machine requires very little detergent. 1-2 teaspoons is sufficient to wash a full load. |
| | **Inside of tub was not cleaned properly.** | • Run the Tub clean cycle regularly. |
| **Water leaks** | **Oversudsing of detergent.** | • Oversudsing may create leaks, and may be caused by the type and amount of detergent used. High-Efficiency detergent is the only detergent recommended. Always reduce the amount of detergent if the load is small or lightly soiled, or if your water is very soft. Never use more than the maximum amount shown in the dispenser provided. |

| Problem | Possible Cause | Solutions |
|---|---|---|
| **Washer will not operate** | **Control panel has powered off due to inactivity.** | • This is normal. Press the POWER button to turn the washer on. |
| | **Washer is unplugged.** | • Make sure cord is plugged securely into a working outlet. |
| | **Water supply is turned off.** | • Turn both hot and cold faucets fully on. |
| | **Controls are not set properly.** | • Make sure the cycle was set correctly, close the lid and press the START/PAUSE button. |
| | **Lid or drawer is open** | • The washer will not operate if the lid is open. Close the lid and drawer make sure that nothing is caught under the lid preventing it from closing completely. |
| | **Circuit breaker/fuse is tripped/ blown.** | • Check house circuit breakers/fuses. Replace fuses or reset breaker. The washer should be on a dedicated branch circuit. The washer will resume the cycle where it stopped once power is restored. |
| | **Control needs to be reset.** | • Press the POWER button, then re-select the desired cycle and press the START/PAUSE button. |
| | **START/PAUSE was not pressed after a cycle was set.** | • Press the POWER button then re-select the desired cycle and press the START/PAUSE button. The washer will shut off if the START/PAUSE button is not pressed within 60 minutes. |
| | **Extremely low water pressure.** | • Check another faucet in the house to make sure that household water pressure is adequate. |
| | **Washer is too cold.** | • If the washer has been exposed to temperatures below freezing for an extended period of time, allow it to warm up before pressing the POWER button. Otherwise, the display will not come on. |

| Problem | Possible Cause | Solutions |
|---|---|---|
| **Washer not filling properly** | **Filter clogged.** | • Make sure the inlet filters on the fill valves are not clogged. Refer to the filter cleaning instructions. |
| | **Inlet hoses may be kinked.** | • Check that inlet hoses are not kinked or clogged. |
| | **Energy efficiency.** | • This is a washer. As a result, the water level settings for this washer may be different than for conventional washers. |
| | **Insufficient water supply.** | • Make sure that both hot and cold water faucets are turned on all the way. |
| | **lid and drawer are open.** | • The washer will not operate if the lid is open. Close the lid and make sure that nothing is caught under the lid preventing it from closing completely. |
| | **Hot and cold inlet hoses are reversed.** | • Check inlet hose connections. Make sure the hot water supply is connected to the hot inlet valve, and the cold water supply is connected to the cold inlet valve. |
| | **Water level is too low.** | • This is a high efficiency washer. The water will not normally cover the clothes. The fill level is optimized for the wash motion to achieve the best wash performance. |
| **Washer will not drain water** | **Kinked drain hose.** | • Ensure that the drain hose is not kinked. |
| | **Drain located higher than 100 cm. above the floor.** | • Make sure that the drain hose is no higher than 100 cm. above the bottom of the washer and is no more than 50 cm away from the washer. |
| **Poor stain removal** | **Heavily soiled load.** | • The pedestal washer is designed to gently and effectively care for lightly soiled loads. Heavier soils and tougher stains may require the extra cleaning power of the Soak or Stain Care features on the front-loading washer. |
| | **Previously set stains.** | • Articles that have previously been washed may have stains that have been set. These stains may be difficult to remove and may require hand washing or pre-treating to aid in stain removal. |
| **Water leaks every load** | **Hoses not installed correctly.** | • Check all fill and drain hose connections to ensure that they are tight and secure. |
| | **Hybrid dryer drain hose not installed properly.** | • Do not insert hybrid dryer hose into Y-connector further than 3/4 in. See Connecting the Drain Hose.<br>• Check clamps and tie straps to ensure they are secure. Install clamps and tie straps if missing. See Connecting the Drain Hose. |

## Error codes

| Problem | Possible Cause | Solutions |
|---|---|---|
| **The display shows:**  | **Drawer is not closed properly** | • Close the drawer and press START/ PAUSE button to start the cycle.<br>• If the drawer is closed and the drawer lock error message is displayed, call for service |
| **The display shows:**  | **Lid is not closed properly** | • Open the drawer and make sure the latch area is free of clothing or other obstructions.<br>• Close the lid, shut the drawer, and press START/PAUSE to start the cycle.<br>• If the lid is closed and the lid error message is displayed, call for service |
| **Washer fills with water slowly or not at all, or the display shows:**  | **Water supply faucets are not fully open.** | • Make sure that the water faucets are fully open. |
| | **Water line hoses are kinked, pinched, or crushed.** | • Make sure that the hoses are not kinked or pinched. Be careful when moving the washer during cleaning and maintenance. |
| | **Water inlet filters are clogged.** | • Clean the inlet filters. See Maintenance in the Care and Cleaning section. |
| | **Water supply pressure to faucet or house is too low.** | • Check another faucet in the house to make sure that household water pressure is adequate and flow is not restricted. Disconnect the inlet hose from the washer and run a few gallons of water through the hose to flush the water supply lines. If flow is too low, contact a plumber to have the water lines repaired. |
| | **Water supply connected with leaklimiting hoses.ga.** | • Hoses designed to limit leaks can trip falsely and prevent the washer from filling. The use of leak limiting hoses is not recommended. |
| **Washer will not turn on** | **Power cord is not properly plugged in.** | • Make sure that the plug is plugged securely into a grounded, 2-prong. 220-VAC, 50-Hz. outlet. |
| | **House fuse is blown, circuit breaker has tripped, or power outage has occurred.** | • Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician. |

| Problem | Possible Cause | Solutions |
|---|---|---|
| **Water in the washer drains slowly or not at all, or the display shows:**  | **Draine is kinked, pinched, or clogged** | • Make sure the drain hose is free of clogs, kinks, etc., and is not pinched behind or under the washer. |
| | **Drain discharge is more than 100 cm above bottom of washer.** | • Adjust or repair drain. Maximum drain height is 100 cm. |
| **Washer chimes repeatedly before final rinse** | **This is not an error. This is an alert to allow the addition of liquid fabric softe** | • See Using Fabric Softener, for instructions on adding liquid fabric softener to the load.<br>• To disable or enable the fabric softener alert, press and hold Tub Clean and Extra Rinse at the same time for three seconds. |
| **The display shows:**  | **If the rebalancing operation (see above) is not successful, this error will be displayed.** | • The automatic attempt to rebalance the load was not successful. The cycle has been paused to allow the load to be manually adjusted. |
| | **The load is too small.** | • Small loads may need additional items to be added to allow the washer to balance the loads. |
| | **Heavy articles are mixed with lighter items.** | • The load may have heavy items loaded with lighter items. Always try to wash articles of somewhat similar weight to allow the washer to evenly distribute the weight of the load for spinning. |
| | **The load is out of balance.** | • Manually redistribute the load if articles have become tangled preventing the automatic distribution from working properly. |
| **The display shows:**  | **Control error.** | • Unplug the power cord and contact your nearest LG service center. |
| **The display shows:**  | **Water level is too high due to a faulty water valve.** | • Close the water faucets, unplug the washer, and call for service. |
| **The display shows:**  | **The water level sensor is not working correctly.** | • Close the water faucets, unplug the washer, and call for service. |
| **The display shows:**  | **A motor error has occurred.** | • Allow the washer to stand for 30 minutes and then restart the cycle. If the LE error code persists, call for service. |

| Problem | Possible Cause | Solutions |
|---|---|---|
| **The display shows:**  | **It is time to run the Tub Clean cycle.** | • Empty the tub, add a diluted solution of 1/4 cup bleach to 1 qt. water to the tub, and select the Tub Clean cycle.<br>• To skip the Tub Clean cycle when alerted, press the cycle selector buttons. The message continues to appear for a few more wash cycles and then disappears until the next scheduled tub clean. |
| **The display shows:**  | **Pedestal washer is being operated without a full-size washer.** | • The pedestal washer will not operate as a standalone unit. It must be stacked under a full-size LG appliance. |
| | **Stacking switch is not working properly.** | • The stacking switch will not operate properly if the unit is stacked under a non-LG appliance, or an LG appliance manufactured before 2009. |

## Memo

LG
Life's Good

ไทย

# คู่มือผู้ใช้
# เครื่องซักผ้า

**ก่อนเริ่มทำการติดตั้ง โปรดอ่านคำแนะนำเหล่านี้อย่างระมัดระวัง ซึ่งจะช่วยให้ทำการติดตั้งได้ง่ายขึ้น และช่วยให้มั่นใจว่าผลิตภัณฑ์จะได้รับการติดตั้งอย่างถูกต้องและปลอดภัย หลังจากการติดตั้ง โปรดเก็บคำแนะนำเหล่านี้ไว้ใกล้ผลิตภัณฑ์ เพื่อใช้อ้างอิงในภายหลัง**

T2735NTWV

MFL69482502

มอก. 1462-2548

www.lg.com

# สารบัญ

คู่มือฉบับนี้จัดทำขึ้นเพื่อผลิตภัณฑ์หลายรุ่น และอาจมีภาพหรือเนื้อหาที่แตกต่างไปจากรุ่นที่คุณซื้อ
คู่มือฉบับนี้อาจได้รับการปรับปรุงโดยบริษัทผู้ผลิต


**คำแนะนำเพื่อความปลอดภัยที่สำคัญ ..... 03**

ข้อความด้านความปลอดภัย ..... 03
ข้อควรระวัง เพื่อ ความปลอดภัย เบื้องต้น ..... 03
อ่านคำแนะนำทั้งหมดก่อนการใช้งาน ..... 05
ข้อกำหนดในการต่อกราวด์ ..... 05
คำแนะนำเพื่อความปลอดภัยสำหรับการติดตั้ง ..... 05
คำแนะนำเพื่อความปลอดภัยสำหรับการใช้งาน การดูแลรักษา การทำความสะอาด และการกำจัด ..... 07

**การติดตั้ง ..... 10**

ชื่อชิ้นส่วน ..... 10
ชิ้นส่วน ..... 10
คำแนะนำในการติดตั้ง ..... 11
เต้าเสียบ ..... 11
พื้น ..... 11
การเปิดหีบห่อและนำวัสดุป้องกันขณะจัดส่งออก ..... 12
เครื่องมือที่คุณจำเป็นต้องใช้ ..... 13
การปรับระดับเครื่องซักผ้า ..... 14
การใช้งานแผ่นรองกันลื่น (อุปกรณ์เสริม) ..... 15
การต่อสายท่อจ่ายเข้า ..... 15
การต่อสายท่อจ่ายน้ำเข้ากับเครื่องซักผ้าสองเครื่อง ..... 17
การติดตั้งสายท่อระบายน้ำ ..... 18
การเชื่อมต่อกับแหล่งจ่ายไฟ ..... 19
โดยใช้งานเครื่องซักผ้า ..... 20
การปฏิบัติกับเสื้อผ้า ..... 21
การใช้ผงซักฟอกหรือน้ำยาปรับผ้านุ่ม ..... 23
คุณลักษณะของแผงควบคุม ..... 25
การใช้ฟังก์ชันเสริม ..... 28
การจัดการ ..... 29
การใช้ฟังกชั่น Smart Diagnosis™ ..... 32

**การแก้ไขปัญหา ..... 33**

คำถามที่ถามบ่อย ..... 33
รหัสความผิดปกติ ..... 39

# คำแนะนำเพื่อความปลอดภัยที่สำคัญ



**ข้อความด้านความปลอดภัย**

**เพื่อความปลอดภัยของตัวคุณเอง จะต้องปฏิบัติตามข้อมูลในคู่มือฉบับนี้เพื่อลดความเสี่ยงจากอุบัติเหตุเพลิงลุกไหม้ การระเบิด หรือไฟฟ้าช็อต รวมถึงเพื่อป้องกันความเสียหายต่อทรัพย์สิน การบาดเจ็บ หรือถึงแก่ชีวิต ความปลอดภัยของคุณและความปลอดภัยสำหรับผู้อื่นเป็นสิ่งที่สำคัญอย่างยิ่ง มีข้อความด้านความปลอดภัยที่สำคัญหลายเรื่องภายในคู่มือฉบับนี้และที่เครื่องใช้ไฟฟ้าของคุณ โปรดอ่านและปฏิบัติตามข้อความด้านความปลอดภัยทั้งหมดเสมอ**

⚠ นี่คือสัญลักษณ์เตือนด้านความปลอดภัย สัญลักษณ์นี้เตือนให้คุณทราบถึงอันตรายที่อาจเกิดขึ้น ซึ่งอาจส่งผลให้เกิดความเสียหายต่อทรัพย์สินรวมถึงการบาดเจ็บร้ายแรงหรือถึงแก่ชีวิต

ข้อความด้านความปลอดภัยทั้งหมดจะอยู่หลังสัญลักษณ์เตือนด้านความปลอดภัยและข้อความ "คำเตือน" หรือ "ข้อควรระวัง" ความหมายของคำเหล่านี้:

⚠ **คำเตือน:** คุณอาจถึงแก่ชีวิตหรือได้รับบาดเจ็บร้ายแรงหากไม่ปฏิบัติตามคำแนะนำ

⚠ **ข้อควรระวัง:** คุณอาจได้รับบาดเจ็บเล็กน้อยหรืออาจเกิดการชำรุดต่อผลิตภัณฑ์หากไม่ปฏิบัติตามคำแนะนำ ข้อความด้านความปลอดภัยทั้งหมดจะช่วยให้คุณทราบถึงอันตรายที่อาจเกิดขึ้น แจ้งวิธีลดความเสี่ยงต่อการบาดเจ็บ และช่วยให้คุณทราบถึงสิ่งที่อาจเกิดขึ้นหากไม่ปฏิบัติตามคำแนะนำ

## เด็กในบ้าน

เครื่องใช้ไฟฟ้านี้ไม่ได้มุ่งหวังสำหรับการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่ด้อยขีดความสามารถทางกายภาพ ประสาทสัมผัสหรือทางสภาพจิต หรือขาดประสบการณ์หรือความรู้ เว้นแต่จะได้รับการกำกับดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบความปลอดภัยให้แก่พวกเขา เด็กควรได้รับการดูแลเพื่อให้แน่ใจว่าจะไม่เล่นกับเครื่องใช้ไฟฟ้า

## ข้อควรระวังเพื่อความปลอดภัยเบื้องต้น

⚠ **คำเตือน: เพื่อลดความเสี่ยงต่ออุบัติเหตุเพลิงลุกไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บ เมื่อใช้งานเครื่องใช้ไฟฟ้านี้ โปรดปฏิบัติตามข้อควรระวังเบื้องต้น ซึ่งรวมถึงรายการต่อไปนี้**

- ใช้เครื่องใช้ไฟฟ้านี้ตามวัตถุประสงค์ที่ได้ออกแบบไว้เท่านั้น ตามที่ได้อธิบายไว้ในคู่มือสำหรับเจ้าของฉบับนี้
- ก่อนการใช้งาน จะต้องทำการติดตั้งเครื่องซักผ้าอย่างถูกต้องตามที่ได้อธิบายไว้ในคู่มือฉบับนี้
- ห้ามซักวัตถุใดๆ ที่เคยผ่านการทำความสะอาด ซัก หรือแช่ในน้ำมันเบนซิน น้ำยาซักแห้ง หรือวัตถุไวไฟหรือระเบิดได้อื่นๆ หรือพบคราบของสารดังกล่าว เนื่องจากสารเหล่านี้อาจปล่อยไอระเหยที่สามารถติดไฟหรือระเบิดได้
- ห้ามผสมน้ำมันเบนซิน น้ำยาซักแห้ง หรือสารไวไฟหรือระเบิดได้ชนิดอื่นๆ ลงในน้ำที่ใช้ซัก สารเหล่านี้อาจปล่อยไอระเหยที่สามารถติดไฟหรือระเบิดได้
- ในบางสถานการณ์ อาจเกิดแก๊สไฮโดรเจนขึ้นในระบบน้ำร้อน หากไม่ได้ใช้งานเป็นเวลา 2 สัปดาห์ขึ้นไป แก๊สไฮโดรเจนสามารถระเบิดได้ ในกรณีที่ไม่ได้ใช้งานระบบน้ำร้อนเป็นเวลานานดังกล่าว ก่อนที่จะใช้งานเครื่องซักผ้า ให้เปิดก๊อกน้ำร้อนทั้งหมดและปล่อยให้น้ำไหลออกจากแต่ละก๊อกเป็นเวลาหลายนาที ขั้นตอนนี้จะช่วยระบายแก๊สไฮโดรเจนที่สะสมอยู่ เนื่องจากแก๊สดังกล่าวมี

คุณสมบัติไวไฟ จึงห้ามสูบบุหรี่หรือทำให้เกิดเปลวไฟในระหว่างช่วงเวลาดังกล่าว

- ระวังอย่าให้เด็กเล่นบนเครื่องซักผ้าหรือภายในเครื่อง จำเป็นต้องดูแลเด็กๆ อย่างใกล้ชิดเมื่อมีเด็กอยู่ใกล้เครื่องซักผ้าที่กำลังทำงาน เด็กอาจติดอยู่ภายในเครื่องซักผ้าและขาดอากาศหายใจได้
- ก่อนเลิกใช้งานเครื่องซักผ้าหรือนำไปกำจัด ให้ถอดฝาออก เพื่อป้องกันไม่ให้เด็กปีนเข้าไปภายใน
- ห้ามติดตั้งหรือเก็บรักษาเครื่องซักผ้าไว้ในบริเวณที่ไม่ได้รับการป้องกันจากสภาพอากาศหรืออุณหภูมิเย็นจัด
- ห้ามปรับส่วนควบคุมโดยไม่ระมัดระวัง
- ดูแลไม่ให้มีวัสดุที่สามารถติดไฟได้ (ใยผ้า กระดาษ เศษผ้า เป็นต้น) น้ำมันเบนซิน สารเคมี รวมถึงไอระเหยและของเหลวไวไฟอื่นๆ อยู่ภายใต้และบริเวณใกล้ตัวเครื่อง
- การซ่อมบำรุงจะต้องทำโดยช่างซ่อมบำรุงที่มีคุณสมบัติเท่านั้น ห้ามถอดแยกชิ้นส่วนเครื่องซักผ้า
- โปรดดูที่ คำแนะนำในการติดตั้ง สำหรับข้อกำหนดในการต่อกราวด์
- คำเตือน: ผลิตภัณฑ์นี้มีสารเคมีที่รัฐแคลิฟอร์เนียระบุว่าเป็นสาเหตุของโรคมะเร็งและความผิดปกติแต่กำเนิด หรืออันตรายอื่นๆ ต่อระบบสืบพันธุ์ ล้างมือหลังการใช้งาน
- ปฏิบัติตามคำแนะนำในการการดูแลรักษาสิ่งทอตามที่บริษัทผู้ผลิตสิ่งทอกำหนดทุกครั้ง
- ห้ามนำวัตถุที่เปื้อนน้ำมันประกอบอาหารเข้าไปในเครื่องซักผ้าของคุณ วัตถุที่เปื้อนน้ำมันประกอบอาหารอาจทำให้เกิดปฏิกิริยาเคมีที่ทำให้เกิดสารที่ติดไฟได้
- ใช้น้ำยาปรับผ้านุ่มหรือผลิตภัณฑ์ต่างๆ เพื่อขจัดไฟฟ้าสถิต ในกรณีที่บริษัทผู้ผลิตแนะนำเท่านั้น
- เครื่องซักผ้านี้ไม่ได้รับการออกแบบมาสำหรับการใช้งานบนเรือหรือการติดตั้งในลักษณะที่เคลื่อนย้ายได้ เช่น ในรถบ้าน บนอากาศยาน เป็นต้น
- ปิดก๊อกน้ำและถอดปลั๊กเครื่องซักผ้าถ้าต้องการทิ้งไว้โดยไม่มีการใช้งานเป็นเวลานาน เช่น ในช่วงวันหยุด
- ห้ามใช้เพื่ออบแห้งวัสดุที่ประกอบด้วยโฟมยางหรือวัสดุที่มีลักษณะคล้ายยาง
- วัสดุบรรจุหีบห่ออาจเป็นอันตรายต่อเด็ก อาจทำให้เกิดการสำลักได้! เก็บวัสดุหีบห่อทั้งหมดให้ห่างจากเด็ก
- ตรวจสอบภายในเครื่องซักผ้าเพื่อหาวัตถุแปลกปลอมก่อนบรรจุเสื้อผ้าทุกครั้ง ปิดฝาเครื่องไว้เมื่อไม่ได้ใช้งาน
- ห้ามยื่นสิ่งใดๆ เข้าไปภายในเครื่องขณะที่ถังซักหรือแกนหมุนมีการเคลื่อนไหว
- ในกรณีที่เกิดแก๊สรั่ว (เช่น แก๊สโพรเพน หรือแก๊สหุงต้ม เป็นต้น) ให้ระบายอากาศในพื้นที่ดังกล่าวทันที ห้ามเปิดหรือปิดเครื่องใช้ไฟฟ้าหรือหลอดไฟทั้งหมด ห้ามใช้พัดลมระบายอากาศ ประกายไฟอาจส่งผลให้เกิดการระเบิดหรือเพลิงลุกไหม้
- ห้ามทำการซ่อมหรือเปลี่ยนชิ้นส่วนใดๆ ของเครื่องใช้ไฟฟ้า หรือพยายามซ่อมบำรุง เว้นแต่มีการแนะนำไว้เป็นพิเศษในคำแนะนำการบำรุงรักษาสำหรับผู้ใช้ หรือในคำแนะนำการซ่อมสำหรับผู้ใช้ที่ได้มีการเผยแพร่ และคุณจะต้องเข้าใจเกี่ยวกับกระบวนการและมีทักษะในการปฏิบัติงานดังกล่าวเป็นอย่างดี

## อ่านคำแนะนำทั้งหมดก่อนการใช้งาน

**⚠ คำเตือน: เพื่อความปลอดภัยของตัวคุณเอง จะต้องปฏิบัติตามข้อมูลในคู่มือฉบับนี้เพื่อลดความเสี่ยงจากอุบัติเหตุเพลิงลุกไหม้ การระเบิด หรือไฟฟ้าช็อต รวมถึงเพื่อป้องกันความเสียหายต่อทรัพย์สิน การบาดเจ็บ หรือถึงแก่ชีวิต**

## ข้อกำหนดในการต่อกราวด์

เครื่องใช้ไฟฟ้านี้ต้องได้รับการต่อกราวด์ ในกรณีที่เกิดความผิดปกติหรือการชำรุด จุดต่อกราวด์จะช่วยลดอันตรายจากกระแสไฟฟ้าช็อต โดยทำหน้าที่เป็นเส้นทางกระแสไฟฟ้าที่มีความต้านทานต่ำที่สุด เครื่องใช้ไฟฟ้านี้มีการติดตั้งสายไฟที่มีสายต่อกราวด์จากตัวเครื่องและปลั๊กที่มีขั้วกราวด์ ต้องต่อปลั๊กดังกล่าวเข้ากับเต้าเสียบที่เหมาะสม ซึ่งได้รับการติดตั้งและต่อกราวด์ไว้อย่างถูกต้องตามกฎระเบียบของท้องถิ่นที่เกี่ยวข้องทั้งหมด

ชิ้นส่วนภายในบางส่วนไม่ได้รับการต่อกราวด์ไว้โดยเจตนา และอาจทำให้ได้รับอันตรายจากกระแสไฟฟ้าช็อตเฉพาะขณะที่ทำการซ่อมบำรุง ผู้ทำการซ่อมบำรุง - ห้ามสัมผัสกับชิ้นส่วนต่อไปนี้ขณะที่เครื่องใช้ไฟฟ้าได้รับไฟจ่าย: ปั๊ม วาล์ว มอเตอร์ ส่วนควบคุม

**⚠ คำเตือน: หากตัวนำสำหรับต่อกราวด์ของอุปกรณ์ไม่ได้รับการเชื่อมต่ออย่างเหมาะสม อาจทำให้เกิดอันตรายจากกระแสไฟฟ้าช็อต หากคุณไม่แน่ใจว่าเครื่องใช้ไฟฟ้านี้ได้รับการต่อกราวด์อย่างถูกต้องหรือไม่ โปรดสอบถามช่างไฟฟ้าหรือช่างซ่อมบำรุงที่มีคุณสมบัติ ห้ามดัดแปลงปลั๊กที่มาพร้อมกับเครื่องใช้ไฟฟ้านี้ ถ้าปลั๊กไม่พอดีกับเต้าเสียบ โปรดมอบหมายให้ช่างไฟฟ้าที่มีคุณสมบัติทำการติดตั้งเต้าเสียบที่เหมาะสม หากไม่ปฏิบัติตามคำเตือนเหล่านี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้**

**⚠ คำเตือน: เพื่อความปลอดภัยของตัวคุณเอง จะต้องปฏิบัติตามข้อมูลในคู่มือฉบับนี้เพื่อลดความเสี่ยงจากอุบัติเหตุเพลิงลุกไหม้ การระเบิด หรือไฟฟ้าช็อต รวมถึงเพื่อป้องกันความเสียหายต่อทรัพย์สิน การบาดเจ็บ หรือถึงแก่ชีวิต**

## คำแนะนำเพื่อความปลอดภัยสำหรับการติดตั้ง

**⚠ คำเตือน: เพื่อลดความเสี่ยงต่ออุบัติเหตุเพลิงลุกไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บ เมื่อใช้งานเครื่องใช้ไฟฟ้านี้ โปรดปฏิบัติตามข้อควรระวังเบื้องต้น ซึ่งรวมถึงรายการต่อไปนี้**

- สำหรับขั้นตอนการต่อกราวด์โดยละเอียด โปรดดูที่คำแนะนำในการติดตั้ง คำแนะนำในการติดตั้งจะมาพร้อมกับเครื่องซักผ้า เพื่อให้ผู้ติดตั้งสามารถใช้อ้างอิงได้ ถ้าเคลื่อนย้ายเครื่องซักผ้าไปยังสถานที่อื่น โปรดมอบหมายให้ช่างซ่อมบำรุงที่มีคุณสมบัติทำการตรวจสอบและติดตั้งใหม่ หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- สายไฟจ่ายของเครื่องใช้ไฟฟ้านี้มีปลั๊กแบบ 3 ขา (มีขั้วกราวด์) ซึ่งจะต่อเข้ากับเต้าเสียบ 3 ขา (มีขั้วกราวด์) แบบยึดผนัง เพื่อลดความเสี่ยงต่อไฟฟ้าช็อตจากเครื่องใช้ไฟฟ้านี้
- ห้ามหักหรือถอดขาที่สาม (กราวด์) ออกจากสายไฟจ่ายโดยเด็ดขาด หากไม่ปฏิบัติตามคำเตือนนี้

อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้

- เครื่องใช้ไฟฟ้านี้ต้องได้รับการต่อกราวด์อย่างถูกต้อง เพื่อความปลอดภัยต่อบุคคล หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- เครื่องซักผ้านี้จะต้องต่อเข้ากับเต้าเสียบ 220 VAC, 50 Hz ที่มีการต่อกราวด์ หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- มอบหมายให้ช่างไฟฟ้าที่มีคุณสมบัติทำการตรวจเช็คเต้าเสียบติดผนังและวงจรไฟฟ้า เพื่อให้มั่นใจว่าเต้าเสียบได้รับการต่อกราวด์อย่างถูกต้อง หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- ในกรณีที่เต้าเสียบติดผนังเป็นแบบ 2 ขา คุณมีความรับผิดชอบและข้อผูกพันที่จะต้องเปลี่ยนอุปกรณ์เป็นเต้าเสียบติดผนังแบบ 3 ขาที่ได้รับการต่อกราวด์อย่างถูกต้อง หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- ห้ามติดตั้งบนพรม ติดตั้งเครื่องซักผ้าบนพื้นที่แข็งแรง หากไม่ปฏิบัติตามคำเตือนนี้อาจเป็นสาเหตุให้เกิดการรั่วที่รุนแรงได้
- ควรเสียบปลั๊กเครื่องซักผ้าเข้ากับเต้าเสียบที่มีค่าพิกัดแรงดันไฟฟ้าตรงกับที่ระบุบนป้ายข้อมูลพิกัด โดยไม่พ่วงกับอุปกรณ์อื่นๆ ทั้งนี้เพื่อสมรรถนะการทำงานสูงสุดและช่วยป้องกันไม่ให้วงจรสายไฟฟ้าของบ้านโอเวอร์โหลด ซึ่งอาจทำให้เกิดอันตรายจากเพลิงลุกไหม้จากสายไฟที่มีความร้อนสูง
- หากติดตั้งเครื่องซักผ้าแบบแท่นวางร่วมกับเครื่องซักผ้าฝาหน้าของ LG และเครื่องอบผ้าระบบแก๊สของ LG และมีเต้าเสียบไม่เพียงพอ สามารถใช้ปลั๊กต่อสายไฟที่มีพิกัดไม่ต่ำกว่าวงจรสาขาได้
- ห้ามถอดปลั๊กเครื่องซักผ้าโดยดึงที่สายไฟจ่าย ให้จับที่ปลั๊กอย่างมั่นคงและดึงออกจากเต้าเสียบในแนวตรงทุกครั้ง หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- ซ่อมหรือเปลี่ยนสายไฟจ่ายที่ถลอกหรือชำรุดทันที ห้ามใช้สายไฟที่มีรอยปริแตกหรือรอยถลอกตามแนวยาวหรือที่ปลายทั้งสองด้าน หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- เมื่อทำการติดตั้งหรือเคลื่อนย้ายเครื่องซักผ้า ระมัดระวังไม่ให้สายไฟจ่ายถูกบีบทับหรือเกิดความเสียหาย หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- เครื่องซักผ้าต้องได้รับการติดตั้งและต่อกราวด์ไฟฟ้าโดยช่างซ่อมบำรุงที่มีคุณสมบัติ ตามข้อกำหนดของท้องถิ่น เพื่อป้องกันอันตรายจากไฟฟ้าช็อตและเพื่อให้มั่นใจได้ถึงเสถียรภาพในการทำงาน
- เครื่องซักผ้ามีน้ำหนักมาก ต้องมีผู้ปฏิบัติงานสองคนขึ้นไปในติดตั้งหรือเคลื่อนย้ายเครื่องใช้ไฟฟ้านี้ หากไม่ปฏิบัติตามคำแนะนำข้างต้นอาจทำให้เกิดการบาดเจ็บที่หลังหรือการบาดเจ็บอื่นๆ
- ห้ามเก็บรักษาหรือติดตั้งเครื่องซักผ้าในบริเวณที่มีอุณหภูมิต่ำกว่าจุดเยือกแข็งหรือไม่ได้รับการป้องกันจากสภาพอากาศภายนอกอาคาร หากไม่ปฏิบัติตามคำเตือนนี้อาจเป็นสาเหตุให้เกิดการรั่วที่รุนแรงได้
- เพื่อลดความเสี่ยงจากอุบัติเหตุไฟฟ้าช็อต ห้ามติดตั้งเครื่องซักผ้าในบริเวณที่มีความชื้นสูง หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- เพื่อลดความเสี่ยงต่อการบาดเจ็บ ให้ปฏิบัติตามขั้นตอนการทำงานอย่างปลอดภัยที่แนะนำของ

อุตสาหกรรม รวมถึงใช้ถุงมือแบบหุ้มยาวและแว่นตานิรภัย หากไม่ปฏิบัติตามการเตือนด้านความปลอดภัยทั้งหมดในคู่มือฉบับนี้ อาจส่งผลให้เกิดความเสียหายต่อทรัพย์สิน การบาดเจ็บ หรือถึงแก่ชีวิตได้

- ห้ามพยายามใช้งานเครื่องใช้ไฟฟ้าหากชำรุด มีการทำงานผิดปกติ ถูกถอดอุปกรณ์ออกบางส่วน หรือมีชิ้นส่วนที่หายไปหรือชำรุด รวมถึงสายไฟและปลั๊กไฟที่ชำรุด
- เพื่อลดความเสี่ยงต่อไฟฟ้าช็อต ควรถอดปลั๊กเครื่องใช้ไฟฟ้านี้ออกจากแหล่งจ่ายไฟหรือตัดกระแสไฟฟ้าของเครื่องซักผ้าที่แผงไฟของบ้าน โดยการถอดฟิวส์หรือปิดเซอร์กิตเบรกเกอร์ ก่อนทำการบำรุงรักษาหรือทำความสะอาด
- ต่อปลั๊กไฟเข้ากับเต้าเสียบบนผนังในทิศทางที่ถูกต้อง เพื่อให้สายไฟอยู่ชิดกับพื้นมากที่สุด หากเสียบปลั๊กเข้ากับเต้าเสียบในทิศทางตรงข้าม สายไฟย่อยภายในสายอาจชำรุด และอาจส่งผลให้เกิดไฟฟ้าช็อตหรือเพลิงลุกไหม้
- เครื่องซักผ้าแบบแท่นวางได้รับการออกแบบมาเพื่อติดตั้งและใช้งานใต้เครื่องซักผ้าฝาหน้าที่ผลิตโดย LG เท่านั้น เครื่องซักผ้าแบบแท่นวางไม่ได้รับการออกแบบมาเพื่อใช้งานเครื่องเดียวโดยลำพัง หรือใต้เครื่องซักผ้าฝาบนของ LG หรือใต้เครื่องอบผ้า หรือใต้เครื่องซักผ้าที่ไม่ได้ผลิตโดย LG
- ห้ามปรับสวิตช์เรียงซ้อนโดยไม่ระมัดระวัง มิฉะนั้นอาจทำให้เครื่องทำงานผิดปกติหรือเกิดการบาดเจ็บร้ายแรงได้
- ห้ามใช้งานเครื่องซักผ้าแบบแท่นวางโดยวางเครื่องซักผ้าแบบแท่นวางซ้อนกันสองเครื่องขึ้นไป มิฉะนั้นอาจทำให้เครื่องทำงานผิดปกติหรือเกิดการบาดเจ็บร้ายแรงได้

**⚠ คำเตือน: เพื่อความปลอดภัยของตัวคุณเอง จะต้องปฏิบัติตามข้อมูลในคู่มือฉบับนี้เพื่อลดความเสี่ยงจากอุบัติเหตุเพลิงลุกไหม้ การระเบิด หรือไฟฟ้าช็อต รวมถึงเพื่อป้องกันความเสียหายต่อทรัพย์สิน การบาดเจ็บ หรือถึงแก่ชีวิต**

## คำแนะนำเพื่อความปลอดภัยสำหรับการใช้งาน การดูแลรักษา การทำความสะอาด และการกำจัด

**⚠ คำเตือน: เพื่อลดความเสี่ยงต่ออุบัติเหตุเพลิงลุกไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บ เมื่อใช้งานเครื่องใช้ไฟฟ้านี้ โปรดปฏิบัติตามข้อควรระวังเบื้องต้น ซึ่งรวมถึงรายการต่อไปนี้**

- ถอดปลั๊กเครื่องซักผ้าก่อนการทำความสะอาด เพื่อหลีกเลี่ยงอันตรายจากกระแสไฟฟ้าช็อต
- ห้ามทำความสะอาดเครื่องซักผ้าด้วยสารเคมีที่มีฤทธิ์รุนแรง สารขัดทำความสะอาด หรือตัวทำละลาย ผลิตภัณฑ์เหล่านี้จะทำให้ผิววัสดุได้รับความเสียหาย
- ห้ามวางผ้าหรือเศษผ้าที่มีน้ำมันหรือไขมันบนเครื่องซักผ้า สารเหล่านี้อาจปล่อยไอระเหยที่ทำให้วัสดุต่างๆ ติดไฟได้
- ห้ามซักเสื้อผ้าที่เปื้อนน้ำมันพืชหรือน้ำมันประกอบอาหาร เสื้อผ้าเหล่านี้อาจมีน้ำมันหลงเหลือหลังจากการซักรีด
- น้ำมันที่หลงเหลืออยู่นี้อาจทำให้สิ่งทอเกิดควันหรือติดไฟเองได้
- ถอดปลั๊กของเครื่องใช้ไฟฟ้าออกจากแหล่งจ่ายไฟก่อนพยายามทำการบำรุงรักษาด้วยตนเอง การ

ปรับส่วนควบคุมไปที่ตำแหน่ง ปิด ไม่ได้เป็นการตัดเครื่องใช้ไฟฟ้าออกจากแหล่งจ่ายไฟ หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้

- ห้ามผสมผลิตภัณฑ์ถนอมผ้ารวมกันในการใช้งานครั้งเดียว เว้นแต่จะระบุไว้ในฉลาก
- ห้ามผสมน้ำยาฟอกขาวชนิดคลอรีนเข้ากับแอมโมเนียหรือกรด เช่น น้ำส้มสายชู ปฏิบัติตามคำแนะนำบนบรรจุภัณฑ์เมื่อใช้ผลิตภัณฑ์ถนอมผ้า การใช้งานที่ไม่ถูกต้องอาจทำให้เกิดแก๊สพิษ ซึ่งส่งผลให้ได้รับบาดเจ็บร้ายแรงหรือถึงแก่ชีวิต
- ห้ามยื่นสิ่งใดๆ เข้าไปในเครื่องซักผ้าขณะที่ชิ้นส่วนต่างๆ มีการเคลื่อนไหว ก่อนบรรจุผ้า นำผ้าออกหรือใส่ผ้าเพิ่มเติม ให้กดปุ่ม START/PAUSE (เริ่ม/หยุด) และปล่อยให้ถังซักหมุนต่อไปจนกระทั่งหยุดนิ่ง ก่อนที่จะยื่นสิ่งใดๆ เข้าไปภายใน หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- ระวังอย่าให้เด็กเล่นบนเครื่องซักผ้าหรือภายในเครื่อง จำเป็นต้องดูแลเด็กๆ อย่างใกล้ชิดเมื่อมีเด็กอยู่ใกล้เครื่องซักผ้าที่กำลังทำงาน เมื่อเด็กๆ โตขึ้น ควรสอนเด็กๆ ให้เข้าใจถึงการใช้งานเครื่องใช้ไฟฟ้าทั้งหมดอย่างถูกต้องและปลอดภัย หากไม่ปฏิบัติตามคำเตือนเหล่านี้อาจส่งผลให้เกิดการบาดเจ็บร้ายแรงหรือถึงแก่ชีวิตได้
- นำกล่องบรรจุ ถุงพลาสติก และวัสดุบรรจุภัณฑ์อื่นๆ ไปกำจัดหลังจากที่นำเครื่องซักผ้าออกจากหีบห่อแล้ว เด็กๆ อาจนำวัสดุเหล่านี้มาเล่น กล่องบรรจุที่ถูกหุ้มด้วยผ้า ผ้าคลุมเตียง หรือแผ่นพลาสติก อาจทำให้เกิดลักษณะเป็นห้องที่อากาศไหลผ่านไม่ได้ หากไม่ปฏิบัติตามคำเตือนเหล่านี้อาจส่งผลให้เกิดการบาดเจ็บร้ายแรงหรือถึงแก่ชีวิตได้
- เก็บผลิตภัณฑ์ถนอมผ้าไว้ให้พ้นมือเด็ก เพื่อป้องกันการบาดเจ็บ ให้ปฏิบัติตามคำเตือนทั้งหมดบนฉลากผลิตภัณฑ์ หากไม่ปฏิบัติตามคำเตือนเหล่านี้อาจส่งผลให้เกิดการบาดเจ็บร้ายแรงหรือถึงแก่ชีวิตได้
- ถอดฝาปิดถังซักออกก่อนที่จะเลิกใช้งานเครื่องซักผ้าหรือนำไปกำจัดทิ้ง เพื่อหลีกเลี่ยงอันตรายเมื่อเด็กหรือสัตว์ขนาดเล็กถูกขังอยู่ภายใน หากไม่ปฏิบัติตามคำแนะนำข้างต้น อาจส่งผลให้ได้รับบาดเจ็บร้ายแรงหรือถึงแก่ชีวิตได้
- ระวังไม่ให้มือหรือวัตถุอื่นๆ เข้าใกล้ฝาและบริเวณตัวล็อคขณะที่ปิดฝา หากไม่นำมือออกอาจทำให้เกิดการบาดเจ็บได้
- ห้ามสัมผัสปลั๊กไฟขณะมือเปียก เนื่องจากอาจส่งผลให้ไฟฟ้าช็อต
- ห้ามสัมผัสน้ำที่ระบายออกจากเครื่องในระหว่างรอบการซักด้วยอุณหภูมิสูงหรือการอบแห้ง น้ำดังกล่าวมีความร้อนสูง การสัมผัสอาจทำให้เกิดแผลพุพองหรือการบาดเจ็บได้
- ห้ามยืนหรือวางวัตถุใดๆ (เช่น เสื้อผ้า เทียนที่ติดไฟอยู่ บุหรี่ที่จุดแล้ว จานชาม สารเคมี วัตถุโลหะ เป็นต้น) บนเครื่องใช้ไฟฟ้านี้ ลักษณะดังกล่าวอาจส่งผลให้เกิดไฟฟ้าช็อต เพลิงลุกไหม้ ปัญหาเกี่ยวกับผลิตภัณฑ์ หรือการบาดเจ็บ
- ห้ามติดตั้งหรือเก็บรักษาเครื่องซักผ้าไว้ในบริเวณที่ไม่ได้รับการป้องกันจากสภาพอากาศเย็นจัด น้ำภายในสายท่ออาจแข็งตัวและทำให้เครื่องซักผ้าชำรุดเสียหายได้ เตรียมเครื่องซักผ้าให้พร้อมสำหรับสภาพอากาศหนาวเย็นก่อนเก็บรักษาหรือเคลื่อนย้ายไปยังบริเวณที่มีอุณหภูมิเยือกแข็ง สำหรับคำแนะนำ กรุณาดูที่หมวด การบำรุงรักษา
- ห้ามผลักฝาแรงเกินไปเมื่อปิด เพื่อไม่ให้กระจกฝาเครื่องแตก
- ห้ามเหยียบลงบนเครื่องซักผ้าแบบแท่นวาง มิฉะนั้นอาจทำให้เครื่องซักผ้าชำรุดเสียหายหรือเกิด

การบาดเจ็บร้ายแรงได้

# เก็บรักษาคำแนะนำเหล่านี้

# การติดตั้ง

## ชื่อชิ้นส่วน

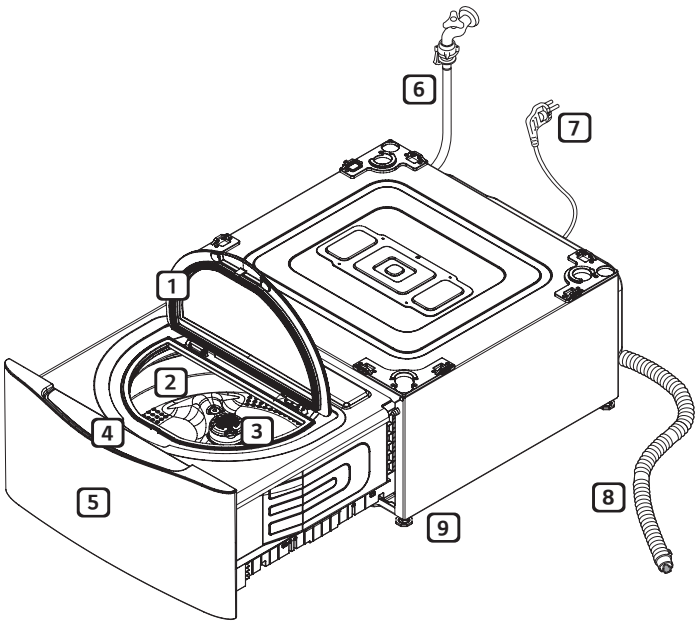


1. ฝาเครื่องซักผ้า
2. ถังซัก
3. ตาข่ายดักฝุ่น
4. แผงควบคุม
5. ลิ้นซัก
6. สายท่อจ่ายน้ำ
7. ปลั๊กไฟ
8. สายท่อระบายน้ำ
9. ขาปรับระดับ

- เครื่องแต่ละรุ่นอาจใช้ชิ้นส่วนประกอบแตกต่างกัน

## ชิ้นส่วน



สายท่อจ่ายน้ำ 1 เส้น
(สำหรับน้ำเย็น)



สายท่อจ่ายน้ำ
(สำหรับต่อเข้ากับเครื่องซักผ้า
2 เครื่อง)



สายท่อระบายน้ำ



ข้อต่อสายท่อจ่ายน้ำ



กุญแจเลื่อน



ข้อต่อสายท่อระบายน้ำ



แผ่นรองกันลื่น



ถ้วยตวงผงซักฟอก



สายรัด




สกรู

# คำแนะนำในการติดตั้ง

## เลือกตำแหน่งที่เหมาะสม

**คำเตือน**

- จำเป็นต้องมีผู้ปฏิบัติงานสองคนในการเคลื่อนย้าย เปิดหีบห่อ และวางซ้อนเครื่องซักผ้า หากไม่ปฏิบัติตามคำเตือนดังกล่าวอาจส่งผลให้เกิดการชำรุดเสียหายหรือการบาดเจ็บร้ายแรงได้
- เก็บรักษาและติดตั้งเครื่องซักผ้าไว้ในบริเวณที่ได้รับการป้องกันจากสภาพอากาศและอุณหภูมิต่ำกว่าจุดเยือกแข็ง หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- ต่อกราวด์เครื่องซักผ้าอย่างถูกต้อง ตามกฎระเบียบเกี่ยวกับไฟฟ้าที่เกี่ยวข้องทั้งหมด หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- เพื่อลดความเสี่ยงจากอุบัติเหตุไฟฟ้าช็อต ห้ามติดตั้งเครื่องซักผ้าในบริเวณที่มีความชื้นสูง หากไม่ปฏิบัติตามคำเตือนนี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- เพื่อให้มั่นใจว่ามีการระบายอากาศอย่างเหมาะสม ห้ามใช้พรมหรือวัสดุอื่นๆ ปิดคลุมช่องขนาดใหญ่ที่ด้านล่างของเครื่องซักผ้า
- ห้ามถอดขากราวด์ออก ห้ามใช้ตัวแปลงปลั๊กแบบ 2 ขา หรือปลั๊กต่อสายไฟแบบ 2 ขา หากไม่ปฏิบัติตามคำเตือนเหล่านี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้

**ข้อควรระวัง**

- เครื่องซักผ้าแบบแท่นวางนี้จะต้องติดตั้งไว้ใต้เครื่องซักผ้าฝาหน้าของ LG รุ่นที่เข้ากันได้ ซึ่งผลิตหลังจากปี 2009
- เครื่องซักผ้าแบบแท่นวางไม่สามารถทำงานเครื่องเดียวตามลำพังได้
- ต้องวางเครื่องซักผ้าแบบแท่นวางไว้ใต้เครื่องใช้ไฟฟ้าแบรนด์ LG จึงจะสามารถทำงานได้อย่างถูกต้อง

## เต้าเสียบ

เต้าเสียบจะต้องอยู่ภายในระยะ 1.5 ม. ที่ด้านใดด้านหนึ่งของเครื่องซักผ้า เครื่องใช้ไฟฟ้าและเต้าเสียบจะต้องอยู่ในตำแหน่งที่สามารถเข้าไปที่ปลั๊กได้สะดวก

**คำเตือน**

- เพื่อสมรรถนะสูงสุด ให้เสียบปลั๊กเครื่องซักผ้าเข้ากับเต้าเสียบโดยไม่มีอุปกรณ์อื่นต่อพ่วง ถ้าจำเป็น ให้ใช้อะแดปเตอร์ในรายการของ UL แบบ 3 ขา หรือปลั๊กต่อสายไฟแบบ 3 ขั้วที่มีปลั๊ก 3 ขา (มีขั้วกราวด์) ที่มีค่าพิกัดไม่น้อยกว่าวงจรสาขา ห้ามใช้ปลั๊กต่อสายไฟที่มีความยาวมากกว่าสามฟุต หากไม่ปฏิบัติตามคำเตือนเหล่านี้ อาจส่งผลให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- เต้าเสียบจะต้องได้รับการต่อกราวด์ตามกฎระเบียบว่าด้วยระบบสายไฟฟ้าในปัจจุบัน
- ขอแนะนำให้ใช้ฟิวส์หน่วงเวลาหรือเซอร์กิตเบรกเกอร์

**หมายเหตุ**

- เจ้าของผลิตภัณฑ์มีหน้าที่รับผิดชอบและมีข้อผูกพันในการมอบหมายให้ช่างซ่อมบำรุงที่มีคุณสมบัติทำการติดตั้งเต้าเสียบที่เหมาะสม

## พื้น

เพื่อลดเสียงและการสั่นสะเทือนให้น้อยที่สุด จะต้องติดตั้งเครื่องซักผ้า

บนพื้นที่มีโครงสร้างแข็งแรง อนุญาตให้บริเวณติดตั้งเครื่องซักผ้ามีความลาดเอียงได้สูงสุด 2.5 ซม เมื่อวัดระดับจากด้านข้างด้านหนึ่งไปยังอีกด้านหนึ่ง หรือจากด้านหน้าไปยังด้านหลัง ไม่แนะนำให้ทำการติดตั้งบนพื้นพรมหรือพื้นผิวที่ปูวัสดุที่อ่อนตัว ห้ามติดตั้งเครื่องซักผ้าบนแท่นหรือโครงสร้างที่มีการรองรับไม่มั่นคงเพียงพอ

**หมายเหตุ**

- ต้องติดตั้งเครื่องซักผ้าไว้บนพื้นที่มั่นคงเพื่อลดการสั่นสะเทือนในระหว่างรอบการปั่น พื้นคอนกรีตมีความเหมาะสมที่สุด และสามารถติดตั้งบนพื้นไม้ได้เช่นกัน หากก่อสร้างได้มาตรฐานของ FHA ไม่ควรวางเครื่องซักผ้าบนผ้าหรือในบริเวณที่ไม่ได้รับการป้องกันจากสภาพอากาศ

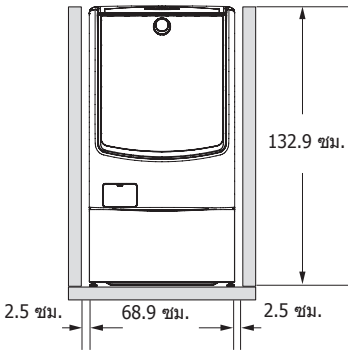


เพื่อให้แน่ใจว่ามีระยะห่างเพียงพอสำหรับท่อน้ำและการระบายอากาศ ให้เว้นระยะห่างอย่างน้อย 2.5 ซม. ที่ด้านข้าง และ 10 ซม. ที่ด้านหลังตัวเครื่อง และตรวจสอบผนัง ประตู หรือขอบบัวพื้น ซึ่งอาจทำให้จำเป็นต้องเว้นระยะห่างมากขึ้น

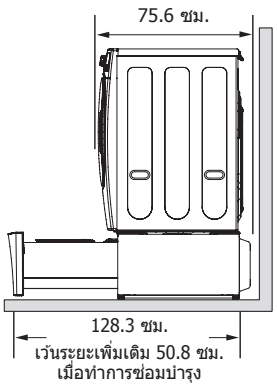


## การเปิดหีบห่อและนำวัสดุป้องกันขณะจัดส่งออก

**1** • หลังจากนำกล่องบรรจุและวัสดุป้องกันขณะจัดส่งออกแล้ว ให้ยกเครื่องซักผ้าขึ้นจากฐานโฟม ตรวจสอบให้แน่ใจว่าชิ้นพลาสติกรองถังซักหลุดออกมาพร้อมฐานและไม่ติดอยู่ที่ส่วนล่างของเครื่องซักผ้า

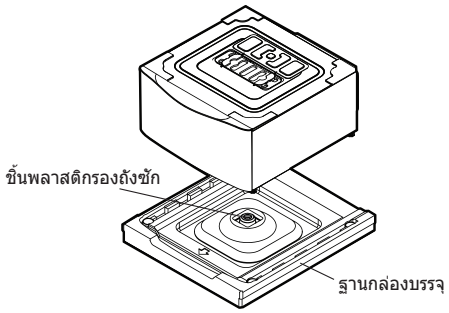


• ถ้าคุณจำเป็นต้องวางเครื่องซักผ้านอนลงเพื่อนำฐานวัสดุบรรจุหีบห่อออก ให้ป้องกันบริเวณด้านข้างของเครื่องซักผ้าไว้ และวางนอนลงทางด้านข้างอย่างระมัดระวัง ห้ามวางเครื่องซักผ้านอนลงทางด้านหน้าหรือด้านหลัง

**2** • เก็บบล็อคโฟมไว้สำหรับการใช้งานในอนาคต ถ้าจำเป็นต้องเคลื่อนย้ายเครื่องซักผ้าในอนาคต บล็อคโฟมเหล่านี้จะช่วยป้องกันการชำรุดของเครื่องซักผ้าในระหว่างการขนส่ง

**หมายเหตุ**

• เพื่อป้องกันการชำรุดเสียหาย ห้ามถอดบล็อคโฟมออกจนกระทั่งเคลื่อนย้ายเครื่องซักผ้าถึงตำแหน่งสุดท้าย

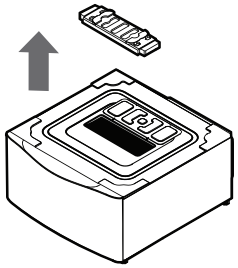

**3** หมุนฝาครอบด้านบนประมาณ 180 องศา ปิดช่องด้านบนไว้ด้วยฝาครอบด้านบน แล้วใส่สกรูสั้น 4 ตัว (รวมอยู่ในกล่องบรรจุ) เพื่อยึดไว้ในตำแหน่ง

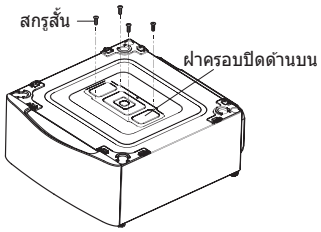


**คำเตือน**

- **ต้องติดตั้งฝาครอบด้านบนไว้ เพื่อหลีกเลี่ยงอันตรายจากกระแสไฟฟ้าช็อตหรือการลัดวงจร หากไม่ปฏิบัติตามคำแนะนำข้างต้น อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้**

**4** • **ตรวจสอบให้แน่ใจว่าขาปรับระดับที่เครื่องซักผ้าฝาหน้ายืดออกจนสุด ก่อนจะวางซ้อนลงบนเครื่องซักผ้าแบบแท่นวาง จัดวางเครื่องใช้ไฟฟ้าที่ด้านบนของเครื่องซักผ้าแบบแท่นวาง**

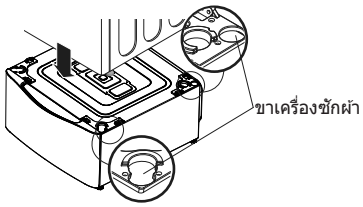


**5** • **ตรวจสอบให้แน่ใจว่าช่องที่เครื่องซักผ้าแบบแท่นวางตรงกับช่องที่เครื่องซักผ้าฝาหน้า จากนั้นติดตั้งสกรูยาว 4 ตัว (รวมอยู่ในกล่อง) ที่มุมแต่ละด้าน เพื่อยึดเครื่องซักผ้าฝาหน้าเข้ากับเครื่องซักผ้าแบบแท่นวางอย่างแน่นหนา**

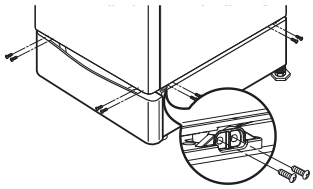

**6** • **ค่อยๆ ยืดขาของเครื่องซักผ้าฝาหน้าออกจนกระทั่งแนบสนิทกับเครื่องซักผ้าแบบแท่นวางอย่างมั่นคง**

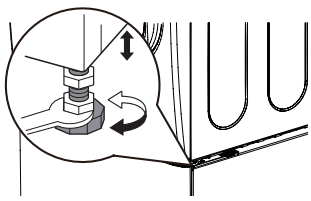

## เครื่องมือที่คุณจำเป็นต้องใช้

- **คีมแบบปรับปากได้**



- **ไขควง**



- **ไม้วัดระดับ**



## การปรับระดับเครื่องซักผ้า

ถังซักของเครื่องซักผ้าเครื่องใหม่ของคุณจะปั่นด้วยความเร็วสูงมาก เพื่อลดการสั่นสะเทือน เสียง และการเคลื่อนไหวที่ไม่พึงประสงค์ พื้นจะต้องได้ระดับอย่างสมบูรณ์แบบและมีความมั่นคง

**1** ตรวจสอบว่าเครื่องซักผ้าได้ระดับ

- ตรวจสอบระดับโดยการโยกส่วนบนของเครื่องซักผ้า หรือวางหลอดระดับบนเครื่องซักผ้า ส่วนเอียงใต้เครื่องซักผ้าจะต้องไม่เกิน 1.2ซม และขาปรับระดับทั้งสี่ด้านจะต้องชิดกับพื้นอย่างมั่นคง

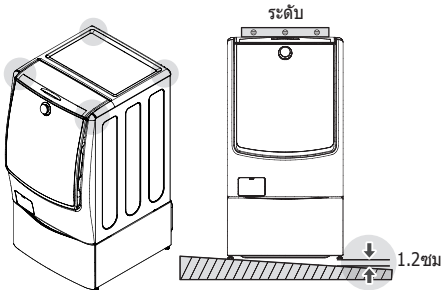


**1** หมุนขาปรับระดับด้านล่างตามเข็มนาฬิกาเพื่อปรับระดับเครื่องซักผ้า

- การหมุนขาปรับระดับด้านล่างตามเข็มนาฬิกาจะเป็นการยกเครื่องซักผ้าขึ้น

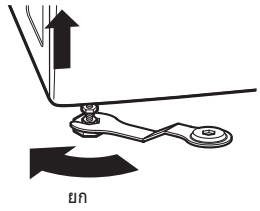


**1** หมุนน็อตล็อคทวนเข็มนาฬิกาแล้วขันให้แน่นเมื่อเครื่องซักผ้าได้ระดับแล้ว

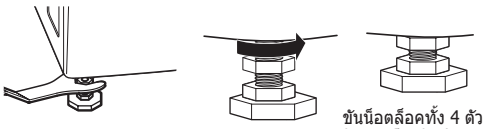


**1** ตรวจสอบอีกครั้งว่าเครื่องซักผ้าได้ระดับแล้ว

- ผลักหรือโยกส่วนบนของเครื่องซักผ้าเบาๆ เพื่อให้มั่นใจว่าว่าเครื่องซักผ้าไม่มีการโยก
- ถ้าเครื่องซักผ้าสามารถโยกได้ ให้ทำขั้นตอนที่ 1 ถึง 3 อีกครั้ง

**คำเตือน**

- การใช้งานเครื่องซักผ้าโดยไม่ได้ทำการปรับระดับ อาจทำให้เกิดการทำงานผิดปกติ รวมถึงเกิดการสั่นสะเทือนและเสียงดังเกินไป
- เมื่อวางเครื่องซักผ้าขนาดปกติลงบนเครื่องซักผ้าแบบแท่นวาง ให้ใช้ขาปรับระดับของเครื่องซักผ้าแบบแท่นวางเพื่อปรับระดับทั้งสองเครื่อง ควรปรับขาปรับระดับของเครื่องซักผ้าขนาดปกติให้สั้นที่สุด แล้วขันน็อตล็อคทวนเข็มนาฬิกาเพื่อยึดไว้
- ปรับขาปรับระดับเฉพาะเมื่อทำการปรับระดับเครื่องซักผ้าเท่านั้น ถ้าคุณยกขาปรับระดับโดยไม่จำเป็น อาจทำให้เครื่องซักผ้าเกิดการสั่นสะเทือนผิดปกติ

## การใช้งานแผ่นรองกันลื่น (อุปกรณ์เสริม)

ถ้าคุณทำการติดตั้งเครื่องซักผ้าบนพื้นลื่น เครื่องอาจเลื่อนเนื่องจากมีการสั่นสะเทือนมากผิดปกติ การปรับระดับที่ไม่ถูกต้องอาจทำให้เกิดการทำงานผิดปกติ รวมถึงเสียงดังและการสั่นสะเทือน หากลักษณะดังกล่าวเกิดขึ้น ให้วางแผ่นรองกันลื่นไว้ใต้ขาปรับระดับ จากนั้นทำการปรับระดับ

**1** ทำความสะอาดพื้นบริเวณที่จะติดตั้งแผ่นรองกันลื่น

- ใช้ผ้าแห้งเช็ดสิ่งแปลกปลอมหรือความชื้นออก ถ้ายังคงมีความชื้นอยู่ แผ่นรองกันลื่นอาจลื่นหลุด

**2** ปรับระดับหลังจากวางเครื่องซักผ้าลงในบริเวณการติดตั้ง

**3** วางด้านกาวของแผ่นรองกันลื่นบนพื้น

- แผ่นรองกันลื่นจะมีประสิทธิภาพสูงสุดเมื่อติดตั้งไว้ใต้ขาหน้า ถ้าติดตั้งไว้ใต้ขาหน้าได้ยาก ให้ติดตั้งไว้ใต้ขาหลังแทน

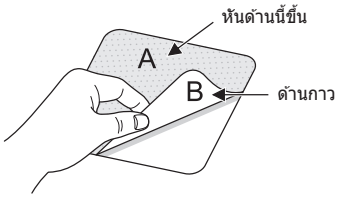


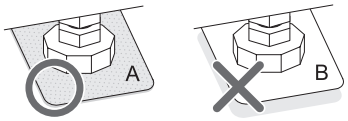


**4** ตรวจสอบอีกครั้งว่าเครื่องซักผ้าได้ระดับแล้ว

- ผลักหรือโยกส่วนบนของเครื่องซักผ้าเบาๆ เพื่อให้มั่นใจว่าว่าเครื่องซักผ้าไม่มีการโยก ถ้าเครื่องซักผ้าโยกได้ ให้ทำการปรับระดับเครื่องซักผ้าอีกครั้ง

## การต่อสายท่อจ่ายเข้า

- แรงดันจ่ายของน้ำจะต้องอยู่ระหว่าง 0.1 MPa ถึง 0.8 MPa (1.0 – 0.8 kgf/cm$^2$)
- เมื่อต่อสายท่อจ่ายเข้าเข้ากับวาล์ว ห้ามทำให้เกลียวล้มหรือปีนเกลียว
- ถ้าแรงดันจ่ายของน้ำมากกว่า 0.8 MPa จะต้องติดตั้งอุปกรณ์ลดแรงดัน
- ตรวจสอบสภาพของสายท่อเป็นระยะๆ และเปลี่ยนสายท่อถ้าจำเป็น

### การตรวจเช็คซีลยางของสายท่อจ่ายเข้า

ภายในสายท่อจ่ายเข้าจะมีซีลยางสองตัว
ซึ่งใช้สำหรับป้องกันไม่ให้น้ำรั่ว ตรวจสอบให้แน่ใจว่าการเชื่อมต่อกับก๊อกแน่นหนาเพียงพอ

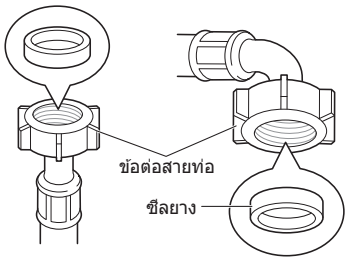

การต่อสายท่อชนิดสัมผัสเดียวเข้ากับก๊อปน้ำที่ไม่มีเกลียว

**1** หมุนคลายแหวนแปลงข้อต่อ แล้วคลายสกรูยึดสี่ตัวออก

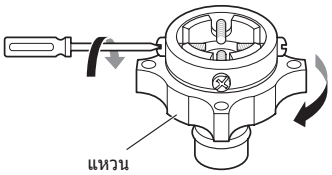


**2** ถอดแผ่นนำตำแหน่งออกถ้าก๊อกน้ำมีขนาดใหญ่เกินที่จะติดตั้งเข้ากับตัวแปลงข้อต่อ




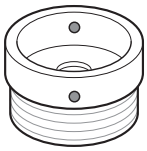

**3** กดตัวแปลงข้อต่อเข้ากับปลายก๊อก เพื่อกดซีลยางให้แน่นเพื่อป้องกันน้ำรั่ว

ขันแหวนแปลงข้อต่อและสกรูยึดสี่ตัวให้แน่น

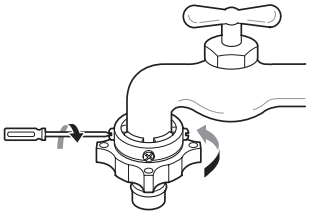

**4** ดึงแป้นล็อคของข้อต่อลงด้านล่าง ผลักสายท่อจ่ายเข้าเข้ากับตัวแปลงข้อต่อ จากนั้นปล่อยแป้นล็อคข้อต่อ ตรวจสอบให้แน่ใจว่าตัวแปลงข้อต่อล็อคเข้าในตำแหน่ง

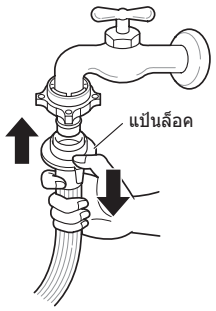


**หมายเหตุ**

- หลังจากต่อสายท่อจ่ายเข้าเข้ากับก๊อกน้ำแล้ว ให้เปิดก๊อกน้ำเพื่อไล่สิ่งแปลกปลอม (สิ่งสกปรก ทราย เศษเลื่อย เป็นต้น) ในท่อน้ำออก ปล่อยให้น้ำระบายลงในถัง แล้วตรวจสอบอุณหภูมิน้ำ

# การต่อสายท่อจ่ายน้ำเข้ากับเครื่องซักผ้าสองเครื่อง

ในกรณีที่คุณจำเป็นต้องติดตั้งเครื่องซักผ้าเพิ่มเติม คุณสามารถใช้ชิ้นส่วนประกอบที่แสดงด้านล่างเพื่อเชื่อมต่อสายท่อจ่ายน้ำเข้ากับเครื่องซักผ้าสองเครื่องได้

**1** ถอดสายท่อจ่ายน้ำของเครื่องซักผ้าเครื่องเดิม โดยถอดออกจากก๊อกน้ำ

- สำหรับรายละเอียดเพิ่มเติม โปรดดูที่ "การถอดสายท่อจ่ายน้ำ"

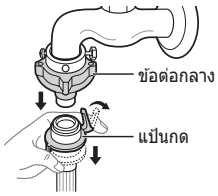


**2** ต่อข้อต่อสายท่อจ่ายน้ำเข้ากับสายท่อจ่ายน้ำ

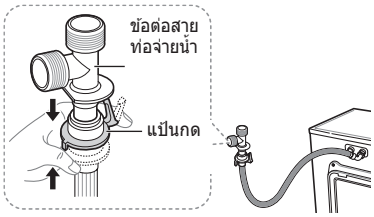


**3** เปิดหีบห่อชิ้นส่วนประกอบสำหรับการติดตั้งเครื่องซักผ้าเพิ่มเติม ตรวจสอบตำแหน่งของสายท่อจ่ายน้ำ แล้วต่อเข้ากับเครื่องซักผ้าอีกเครื่องหนึ่งที่ต้องการติดตั้ง

- สำหรับรายละเอียดเพิ่มเติม โปรดดูที่ "การต่อสายท่อจ่ายน้ำ"

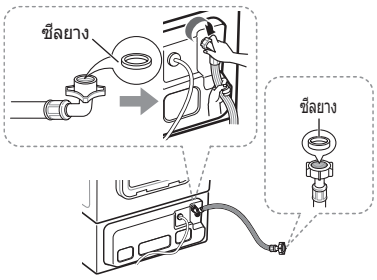


**4** ต่อสายท่อจ่ายน้ำที่ให้มาด้วยเข้ากับก๊อกน้ำ

- สำหรับรายละเอียดเพิ่มเติม โปรดดูที่ "การต่อสายท่อจ่ายน้ำ"

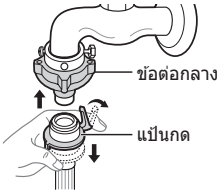


**5** ต่อสายท่อจ่ายน้ำที่ต่อกับเครื่องซักผ้าที่คุณต้องการติดตั้ง และสายท่อจ่ายน้ำที่ต่อกับก๊อกน้ำ เข้ากับข้อต่อสายท่อจ่ายน้ำ

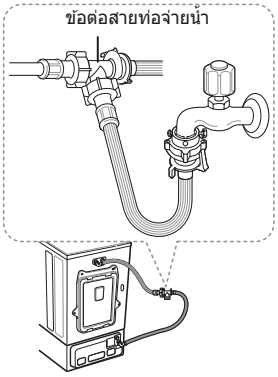

## การติดตั้งสายท่อระบายน้ำ

- สายท่อระบายน้ำจะต้องติดตั้งอย่างมั่นคงและแนบกับพื้นโดยค่อยๆ ลดระดับลง ความสูงของสายท่อระบายน้ำไม่ควรเกิน 1 ม. จากพื้น

**1** ตรวจสอบให้แน่ใจว่าใส่คลิปรัดสายท่อไว้แล้ว

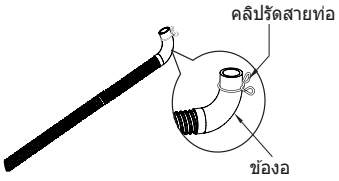


**2** ใส่และผลักสายท่อระบายน้ำเข้ากับช่องระบาย โดยหันสายท่อระบายน้ำขึ้นด้านบน

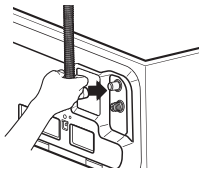

**3** ยึดคลิปรัดสายท่อที่ปลายข้องอ เพื่อป้องกันไม่ให้สายท่อระบายน้ำหลุดออก

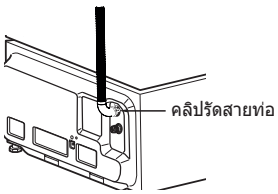


**ข้อควรระวัง**

- การต่อสายท่อระบายน้ำหรือสายท่อจ่ายอย่างไม่ถูกต้องอาจทำให้เกิดปัญหาต่อไปนี้
  - น้ำรั่วที่จุดต่อของสายท่อจ่ายน้ำที่ด้านเครื่องซักผ้า
  - น้ำรั่วที่จุดต่อของสายท่อจ่ายน้ำที่ด้านก๊อกน้ำ
  - ปั๊มระบายน้ำเกิดความผิดปกติ
- ถ้าตำแหน่งติดตั้งสายท่อระบายน้ำสูงเกินไป มีการคดงอหรือถูกกดทับ หรือในกรณีที่ปลายสายท่อจุ่มอยู่ในน้ำ การระบายน้ำอาจผิดปกติ
- เมื่อเชื่อมต่อและใช้งานสายท่อระบายน้ำ ความยาวรวมที่เชื่อมต่อไม่ควรเกิน 3 ม. มิฉะนั้นการระบายหรือการปั่นหมาดอาจเกิดความผิดปกติ

## การใช้งานข้อต่อระบายน้ำ

ต่อสายท่อระบายของเครื่องซักผ้าขนาดปกติและเครื่องซักผ้าแบบแท่นวางเข้ากับข้อต่อระบายน้ำ ต่อแคลมป์รัดสายท่อที่ให้มาด้วยเข้ากับปลายสายท่อระบายสองเส้น กดสายท่อระบายเข้ากับข้อต่อระบายให้แน่น ปรับแคลมป์รัดสายท่อเพื่อป้องกันไม่ให้สายท่อหลวมหรือรั่ว หากไม่ปฏิบัติตามคำแนะนำข้างต้นอาจส่งผลให้น้ำรั่ว การใช้ข้อต่อระบายน้ำจะช่วยป้องกันไม่ให้น้ำถูกดูดกลับ กลิ่นไม่พึงประสงค์ รวมถึงการระบายน้ำที่ไม่สมบูรณ์

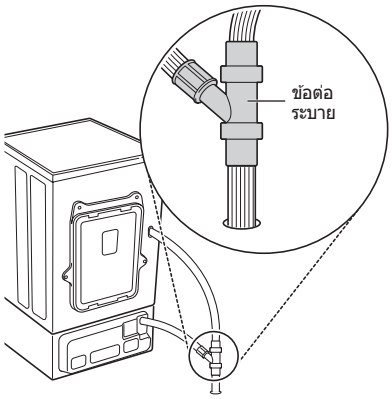

## การเชื่อมต่อกับแหล่งจ่ายไฟ

- ควรต่อเครื่องซักผ้าเข้ากับเต้าเสียบ 220 VAC, 50 Hz แบบ 2ขา (มีการต่อกราวด์) เสียบปลั๊กเครื่องซักผ้า คำเตือน: หากตัวนำสำหรับต่อกราวด์ของอุปกรณ์ไม่ได้รับการเชื่อมต่ออย่างเหมาะสม อาจทำให้เกิดอันตรายจากกระแสไฟฟ้าช็อต มอบหมายให้ช่างไฟฟ้าหรือช่างซ่อมบำรุงที่มีคุณสมบัติทำการตรวจสอบว่าเต้าเสียบได้รับการต่อกราวด์อย่างถูกต้องหรือไม่ ห้ามดัดแปลงปลั๊กที่มาพร้อมกับเครื่องใช้ไฟฟ้านี้ ห้ามทำให้ขากราวด์ของสายไฟชำรุดและห้ามหักออก ถ้าสายปลั๊กไม่พอดีกับเต้าเสียบ โปรดมอบหมายให้ช่างไฟฟ้าที่มีคุณสมบัติทำการติดตั้งเต้าเสียบที่เหมาะสม หากไม่ปฏิบัติตามคำเตือนเหล่านี้ อาจส่งผลให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้

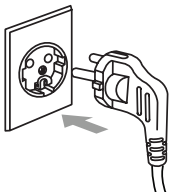

**คำเตือน**

- เต้าเสียบจะต้องอยู่ภายในระยะ 1.5 ม. ที่ด้านใดด้านหนึ่งของเครื่องซักผ้า
- เครื่องใช้ไฟฟ้าและเต้าเสียบจะต้องอยู่ในตำแหน่งที่สามารถเข้าไปที่ปลั๊กได้สะดวก
- เสียบปลั๊กเครื่องซักผ้าเข้ากับเต้าเสียบที่มีค่าพิกัดแรงดันไฟฟ้าตรงกับที่ระบุบนป้ายข้อมูลพิกัด เพื่อสมรรถนะสูงสุด ให้เสียบปลั๊กเครื่องซักผ้าเข้ากับเต้าเสียบโดยไม่มีอุปกรณ์อื่นต่อพ่วง ทั้งนี้เพื่อป้องกันไม่ให้วงจรสายไฟฟ้าของบ้านโอเวอร์โหลด ซึ่งอาจทำให้เกิดอันตรายจากเพลิงลุกไหม้จากสายไฟที่มีความร้อนสูง ถ้าจำเป็นให้ใช้อะแดปเตอร์ในรายการของ 2 ขา หรือปลั๊กต่อสายไฟแบบ 2 ขั้วที่มีปลั๊ก 2 ขา (มีขั้วกราวด์) ที่มีค่าพิกัดไม่น้อยกว่าวงจรสาขา ห้ามใช้ปลั๊กต่อสายไฟที่มีความยาวมากกว่าสามฟุต หากไม่ปฏิบัติตามคำเตือนเหล่านี้ อาจทำให้เกิดการบาดเจ็บร้ายแรง เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- เต้าเสียบจะต้องได้รับการต่อกราวด์ตามกฎระเบียบว่าด้วยระบบสายไฟฟ้าในปัจจุบัน
- ขอแนะนำให้ใช้ฟิวส์หน่วงเวลาหรือเซอร์กิตเบรกเกอร์
- เจ้าของผลิตภัณฑ์มีหน้าที่รับผิดชอบและมีข้อผูกพันในการมอบหมายให้ช่างไฟฟ้าที่มีคุณสมบัติทำการติดตั้งเต้าเสียบที่เหมาะสม

**คำเตือน**

- ห้ามใช้สายไฟหรือปลั๊กไฟที่สึกหรอหรือชำรุด ทำการเปลี่ยนหรือซ่อมทันที
- หากไม่ปฏิบัติตามคำแนะนำข้างต้น อาจส่งผลให้เกิดความผิดปกติ เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- ห้ามดัดแปลงสายไฟ และระวังไม่ให้เกิดการชำรุดเมื่อติดตั้งหรือเคลื่อนย้ายเครื่องซักผ้า หากไม่ปฏิบัติตามคำแนะนำข้างต้น อาจส่งผลให้เกิดความผิดปกติ เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้
- ตรวจสอบให้แน่ใจว่าเครื่องซักผ้าได้รับการต่อกราวด์แล้ว
- ต่อเครื่องซักผ้าเข้ากับเต้าเสียบที่ตรงตามค่าพิกัดและมีการต่อกราวด์ไว้ ก่อนการใช้งาน
- หากไม่ปฏิบัติตามคำแนะนำข้างต้น อาจส่งผลให้เกิดเพลิงลุกไหม้ ไฟฟ้าช็อต หรือการทำงานผิดปกติได้
- ห้ามทำให้ขากราวด์ของสายไฟชำรุดและห้ามหักออก มิฉะนั้นอาจทำให้ผลิตภัณฑ์เกิดความผิดปกติ เพลิงลุกไหม้ ไฟฟ้าช็อต หรือถึงแก่ชีวิตได้

# โดยใช้งานเครื่องซักผ้า

## ข้อมูลเกี่ยวกับการใช้งาน

- เครื่องซักผ้าของ แอลจี อิเล็กทรอนิกส์ สามารถรองรับการใช้งานตามที่ได้ระบุไว้ในการทดสอบ KS ความสามารถในการรองรับการใช้งานในทางทฤษฎีอาจแตกต่างจากความสามารถจริง ทั้งนี้ขึ้นอยู่กับประเภทหรือปริมาณของเสื้อผ้า
- ห้ามบรรจุผ้าเกินความสามารถในการรองรับ การบรรจุผ้าเกินความสามารถในทางทฤษฎีอาจส่งผลให้สมรรถนะของผลิตภัณฑ์ลดลง และผลิตภัณฑ์จะทำงานหนักเกินไป
- สมรรถนะของผลิตภัณฑ์หรือความสามารถในการซักจะกำหนดโดยโปรแกรมควบคุมอิเล็กทรอนิกส์ ผลิตภัณฑ์แต่ละรุ่นอาจมีความสามารถในการซักหรือสมรรถนะแตกต่างกัน แม้ว่าจะมีถังซักและมอเตอร์แบบเดียวกัน

## ฟังก์ชันตรวจจับอัตโนมัติ

- เมื่อเลือกรอบการทำงานที่มีฟังก์ชันตรวจจับอัตโนมัติ หลังจากกดปุ่ม Start/Pause (เริ่ม/หยุด) เครื่องจะหมุนหนึ่งหรือสองรอบเพื่อตรวจวัดปริมาณเสื้อผ้า หลังจากตรวจวัดปริมาณเสื้อผ้าแล้ว น้ำจะเริ่มจ่ายเข้า
- ในรอบการซักบางรูปแบบ เซ็นเซอร์จะตรวจวัดปริมาณเสื้อผ้าโดยอัตโนมัติ และเครื่องซักผ้าจะระบุเงื่อนไขที่เหมาะสมที่สุดสำหรับการซัก เช่น ตัวเลือกสำหรับรอบการซักที่เหมาะสมที่สุดสำหรับผ้า เวลาการซัก และเวลาในการล้างและปั่นหมาด

## สิ่งที่ควรตรวจสอบก่อนการใช้งานเครื่องซักผ้า

- ต่อสายท่อจ่ายน้ำเข้ากับด้านน้ำเย็นอย่างถูกต้องหรือไม่?
- ก๊อกน้ำเปิดอยู่หรือไม่?
- ปลั๊กไฟเสียบเข้ากับเต้าเสียบอย่างถูกต้องหรือไม่?
- สายท่อระบายน้ำอยู่ในตำแหน่งอย่างถูกต้องหรือไม่?
- ผลิตภัณฑ์ได้ระดับหรือไม่?

## การใช้งานฝาเครื่องซักผ้า

การเปิดฝาเครื่องซักผ้า

1. จับที่มือจับลิ้นชักและดึงไปทางด้านหน้าจนสุด
2. จับมือจับฝาเครื่องซักผ้าแล้วยกขึ้นด้านบนเพื่อเปิดฝาเครื่องซักผ้า

## การปิดฝาเครื่องซักผ้า

1. ผลักฝาเครื่องซักผ้าจนกระทั่งมีเสียงคลิก
2. ผลักลิ้นชักให้ปิดสนิท

**ข้อควรระวัง**

- ระวังอย่าให้มืออยู่ระหว่างฝาเครื่องซักผ้าและเครื่องซักผ้า เนื่องจากอาจทำให้เกิดการบาดเจ็บได้
- ถ้าฝาเครื่องซักผ้าชำรุด อาจทำให้เกิดการบาดเจ็บได้ ในกรณีดังกล่าว ห้ามใช้งานเครื่องซักผ้า และติดต่อศูนย์บริการของ แอลจี อิเล็กทรอนิกส์ ทันที
- การเลื่อนลิ้นชักหรือฝาเครื่องซักผ้าเพื่อเปิดด้วยกำลังอาจเป็นสาเหตุให้ชิ้นส่วนเกิดการชำรุด รวมถึงเกิดปัญหาเกี่ยวกับความปลอดภัย
- การปิดลิ้นชักก่อนปิดฝาเครื่องซักผ้าให้สนิทอาจทำให้กระจกหุ้มฝาเครื่องซักผ้าเป็นรอย
- ตรวจสอบให้แน่ใจว่าดึงลิ้นชักออกจนสุดแล้ว เพื่อป้องกันไม่ให้ฝาเครื่องซักผ้าสัมผัสกับเครื่องซักผ้าฝาหน้า ถ้าใช้งานเครื่องซักผ้าหลายๆ ครั้งติดต่อกันโดยที่ไม่ได้ดึงลิ้นชักออกจนสุด ลิ้นชักอาจไม่สามารถเปิดได้อย่างราบรื่น

**หมายเหตุ**

- ประตูอาจไม่สามารถล็อคได้ถ้ามีเสื้อผ้าอยู่ในเครื่องมากเกินไป หรือปิดฝาเครื่องซักผ้าไม่สนิท
- ถ้าผลิตภัณฑ์กำลังทำงาน หรือตัวแสดงสถานะล็อคลิ้นซัก
  () แสดงขึ้น จะไม่สามารถเปิดฝาเครื่องซักผ้าได้ เมื่อต้องการเปิดฝาเครื่องซักผ้า ให้กดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อหยุดการทำงานของผลิตภัณฑ์ และเมื่อตัวแสดงสถานะล็อคลิ้นซัก () หายไป ให้เปิดฝาเครื่องซักผ้า ห้ามพยายามเปิดฝาด้วยกำลัง
- ถ้า (, , ) หรือสัญลักษณ์เตือนปรากฏขึ้นที่ส่วนแสดงผล ให้ปิดลิ้นซักและฝาเครื่องซักผ้าให้สนิท หลังจากทำขั้นตอนดังกล่าวแล้ว ให้กดปุ่ม "Start/Pause" (เริ่ม/หยุด)
- ถ้าลิ้นซักไม่สามารถเปิดออกจนสุดได้ ให้ดึงลิ้นซักไปข้างหน้าด้วยสองมือโดยออกแรงเพียงเล็กน้อย
- ถ้าไฟฟ้าขัดข้องในระหว่างที่ผลิตภัณฑ์กำลังทำงาน ฝาเครื่องซักผ้าจะไม่สามารถเปิดได้ โปรดจ่ายกระแสไฟฟ้าอีกครั้งหรือติดต่อศูนย์บริการ LG (ในกรณีที่ทำการซักแบบตัม ฝาเครื่องซักผ้าจะไม่สามารถเปิดออกได้หลังจากที่ได้รับกระแสไฟฟ้าแล้ว เนื่องจากมีอุณหภูมิสูงภายในเครื่องซักผ้า)
- ถ้าไม่สามารถเปิดฝาเครื่องซักผ้าได้เนื่องจากมีอุณหภูมิสูง ให้ทำการล้างด้วยน้ำเย็น โดยใช้รอบการทำงาน "Rinse+Spin" (ล้าง+ปั่น) หรือรอครู่หนึ่งก่อนจะเปิดฝา

## การปฏิบัติกับเสื้อผ้า

เพื่อป้องกันความเสียหายของสิ่งทอและป้องกันไม่ให้ผลิตภัณฑ์เกิดความผิดปกติ ควรปฏิบัติตามตามคำแนะนำต่อไปนี้

การตรวจสอบก่อนการใช้งาน

- ตรวจสอบข้อควรระวังของป้ายข้อมูลการดูแลผ้าที่ติดอยู่กับเสื้อผ้า และตรวจสอบให้แน่ใจว่าเสื้อผ้าดังกล่าวสามารถซักด้วยน้ำได้
- ซิป ตะขอ หรือกระดุม อาจทำให้เสื้อผ้าอื่นๆ เกิดความเสียหาย จึงควรซักเสื้อผ้าที่มีซิป ตะขอ หรือกระดุมโดยกลับด้านในออกมา
- ห้ามซัก 'ลวดแบบคืนรูปได้' ในชุดชั้นในสตรี (เช่น บรา) เนื่องจากอาจทำให้เสื้อผ้าอื่นๆ หรือเครื่องซักผ้าเกิดการชำรุด รวมถึงทำให้เกิดเสียงดัง

**หมายเหตุ**

- การใช้งานเครื่องซักผ้ากับเสื้อผ้าต่อไปนี้อาจทำให้เสื้อผ้าหดหรือเสียรูป ตรวจสอบป้ายข้อมูลการซักก่อนนำไปซัก
- เสื้อผ้าที่มีผ้าแบบเกาหลีโบราณ
- เสื้อผ้าที่ต้องซักแห้ง เช่น รองเท้า เครื่องหนัง เทคไทสูท และเสื้อคลุม
- เสื้อผ้าที่มีเครื่องตกแต่ง
- เสื้อผ้าที่มีจีบ
- เสื้อผ้าภายนอกที่มีสิ่งทอหรือแถบตกแต่งที่อาจหดหรือสีตกเมื่อถูกน้ำ เช่น ผ้าไหม ขนสัตว์ เรยอน หรือเส้นใยอะซิเตท
- เสื้อผ้าประเภทอื่นๆ ที่อาจมีการเสียรูปหรือสีตกเมื่อแช่ในน้ำ (โปรดดูที่ป้ายข้อมูลการซัก)

## การขจัดสิ่งแปลกปลอม

วัตถุโลหะภายในเครื่องซักผ้าอาจทำให้เสื้อผ้าเกิดความเสียหาย ทำให้ถังซักแตกร้าว รวมถึงทำให้เกิดเสียงดัง ตรวจดูภายในกระเป๋าของเสื้อผ้าของคุณเพื่อหาเหรียญ กิ๊บติดผม หรือกุญแจ

- ก่อนใช้งานเครื่องซักผ้า ให้สะบัดฝุ่น สิ่งสกปรก และทรายออกจากเสื้อผ้าของคุณ เนื่องจากอาจทำให้เสื้อผ้าที่สะอาดอื่นๆ สกปรกได้
- ก่อนใช้งานเครื่องซักผ้า ให้ใช้สารทำความสะอาดเพื่อขจัดรอยเปื้อนและสิ่งสกปรกบางส่วนออก
- การซักเสื้อผ้าที่มีคราบเลือดหรือนมรอบหนึ่งด้วยน้ำเย็นก่อนจะทำการซักเต็มรูปแบบ จะช่วยให้ขจัดคราบได้อย่างมีประสิทธิภาพมากยิ่งขึ้น

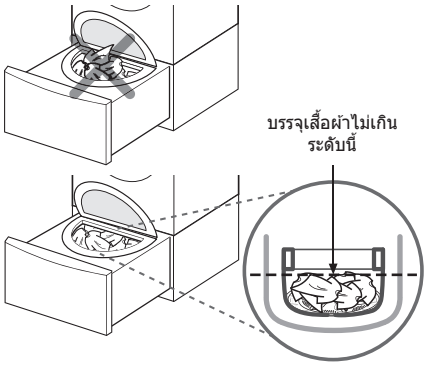


การคัดแยกเสื้อผ้าก่อนซัก

- ถ้าเสื้อมีลูกไม้เป็นแนวยาว ให้ปรับตำแหน่งของลูกไม้เพื่อไม่ให้เกี่ยวพันกัน หรือใส่เสื้อผ้าไว้ในถุงซักผ้า
- นำส่วนในของเบาะ หมอน หรือแผ่นรองนั่งออกจากปลอกและซักเฉพาะปลอกเท่านั้น ส่วนภายในอาจทะลุออกมา และทำให้เสื้อผ้าอื่นๆ เกิดความเสียหาย ส่วนที่เป็นพลาสติกอาจทำให้เกิดการสั่นสะเทือนที่ผิดปกติ
- คัดแยกผ้าสีออกจากผ้าขาว และแยกผ้าดำออกจากเสื้อผ้าที่มีเส้นใยมาก เมื่อทำการซัก
- ห้ามซักผ้าห่มไฟฟ้า พรม ผ้าม่าน พรมเช็ดเท้า หรือยางปูพื้น
- ซักผ้าเช็ดตัวหรือผ้าถักรวมกันสองชิ้นขึ้นไป ถ้าซักแยกกัน ผ้าที่ดูดซับน้ำได้มากอาจไม่ได้รับการซักอย่างสมบูรณ์ หรือทำให้เกิดการปั่นหมาดที่ผิดปกติ เนื่องจากถังเกิดการเอียง

**ข้อควรระวัง**

- ควรทำการแบ่งซักถ้ามีผ้าจำนวนมาก เพื่อให้เสื้อผ้าสามารถแช่ในน้ำได้ทั้งหมด ถ้าเสื้อผ้าขยายตัวออกในระหว่างการซัก อาจทำให้เสื้อผ้าและชิ้นส่วนต่างๆ เกิดการชำรุดเสียหายในระหว่างการซักหรือการปั่นหมาด

# การใช้ผงซักฟอกหรือน้ำยาปรับผ้านุ่ม

## การใช้ผงซักฟอก

- ตรวจสอบให้แน่ใจว่าใช้ผงซักฟอกที่ออกแบบมาสำหรับเครื่องซักผ้าฝาหน้า และใช้ถ้วยตวงผงซักฟอกที่ให้มาด้วยในการเติมผงซักฟอกให้ได้ปริมาณตามที่แนะนำ ในกรณีที่ใช้ผงซักฟอกมากกว่าปริมาณที่แนะนำ ผงซักฟอกที่ไม่ละลายอาจเกาะสะสมภายในเครื่องซักผ้า และทำให้เกิดกลิ่นไม่พึงประสงค์
- ใช้ถ้วยตวงผงซักฟอกที่ให้มาด้วยเพื่อเติมผงซักฟอกเพียงหนึ่งถ้วยเท่านั้น
- ถ้ารอบการซักกำหนดให้ใช้ผงซักฟอกในปริมาณที่แตกต่างออกไป โปรดดูที่ "การใช้รอบการซัก"
- ลดปริมาณผงซักฟอกลงเล็กน้อย สำหรับเสื้อผ้าที่สกปรกน้อย ในกรณีที่ใช้ผงซักฟอกมากเกินไป จะยังมีฟองหลงเหลืออยู่หลังจากการล้าง
- น้ำที่มีคุณภาพดี (น้ำอ่อน) มีความสามารถในการซักที่ดีเยี่ยม แต่จะทำให้เกิดฟองปริมาณมาก ในกรณีดังกล่าว ให้ลดปริมาณผงซักฟอก
- ปริมาณผงซักฟอกชนิดน้ำที่จำเป็นต้องใช้จะน้อยกว่าผงซักฟอกปกติ เนื่องจากผงซักฟอกชนิดน้ำสามารถละลายน้ำได้ง่าย และทำให้เกิดฟองปริมาณมาก
- ผงสบู่จากธรรมชาติจะละลายน้ำได้ยาก และทำให้เกิดการอุดตันได้ง่าย ในกรณีที่ใช้กับน้ำเย็น อาจทำให้เกิดการรั่วหรือความผิดปกติในการทำงาน ตรวจสอบให้แน่ใจว่าใช้น้ำค่อนข้างอุ่นในกรณีที่ใช้ผงสบู่จากธรรมชาติ
- ถ้าผงซักฟอกเกาะตัวกันหรือมีลักษณะเป็นก้อน ให้บดเป็นผงก่อนใช้

**หมายเหตุ**

- รอยเปื้อนบนชุดชั้นใน (ผ้าฝ้าย) หรือเสื้อผ้าทารกประกอบด้วยไขมันหรือโปรตีนเป็นหลัก การซักด้วยรอบซักอุณหภูมิสูง เช่น "Cotton Inner Wear" (ชุดชั้นในผ้าฝ้าย) หรือ Baby Clothes (เสื้อผ้าทารก) จะมีประสิทธิภาพมากกว่าการใช้ผงซักฟอกปริมาณมาก
- เวลาการจ่ายน้ำจะสั้นลง จึงต้องเติมผงซักฟอกก่อนที่การซักจะเริ่มขึ้น
- เมื่อใยผ้า น้ำยาปรับผ้านุ่ม หรือซีโอไลท์ในเสื้อผ้าหลุดออกจากเสื้อผ้า ใบพัดของปั๊มซึ่งหมุนด้วยความเร็วสูงอาจทำให้เกิดฟองละเอียดที่ทำให้น้ำมีสีเข้ม แม้ว่าน้ำที่ระบายออกมาจะมีสีเข้ม แต่ไม่ได้หมายความว่าการล้างจะไม่สมบูรณ์
- ในกรณีที่ใช้น้ำยาปรับผ้านุ่มมากเกินไป จะยังมีฟองหลงเหลืออยู่หลังจากการล้าง ทำให้ต้องใช้เวลาล้างนานขึ้น นอกจากนี้ คุณอาจยังพบฟองอยู่ แม้ว่าการปั่นรอบสุดท้ายจะเสร็จสมบูรณ์แล้ว

## การใช้น้ำยาปรับผ้านุ่ม

- ใช้น้ำยาปรับผ้านุ่มในปริมาณที่บริษัทผู้ผลิตแนะนำ
- เครื่องซักผ้าจะส่งเสียงก่อนที่จะทำการล้างรอบสุดท้าย เพื่อให้สามารถเติมน้ำยาปรับผ้านุ่มได้ หากต้องการยกเลิกเสียงแจ้งเตือนดังกล่าว ให้กดปุ่ม "Extra Rinse" (เพิ่มการล้าง) เป็นเวลา 3 วินาที
- สามารถเติมน้ำยาปรับผ้านุ่มได้ภายใน 3 นาทีหลังจากเสียงแจ้งเตือนดังขึ้น
- ถ้าคุณไม่ได้เติมน้ำยาปรับผ้านุ่มภายในเวลาดังกล่าว ให้เติมน้ำยาปรับผ้านุ่มแล้วทำการล้างอีกครั้งโดยใช้รอบ "Rinse+Spin" (ล้าง+ปั่น)

1. เมื่อเครื่องซักผ้าส่งเสียง ให้กดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อหยุดการทำงานของผลิตภัณฑ์
2. เลื่อนลิ้นชักเปิดออก ตรวจสอบให้แน่ใจว่าตัวแสดงสถานะล็อคลิ้นชัก (⊘) ถูกยกเลิกแล้ว จากนั้นเปิดลิ้นชักและฝาเครื่องซักผ้า แล้วเติมน้ำยาปรับผ้านุ่ม
3. ปิดฝาเครื่องซักผ้า เลื่อนปิดลิ้นชัก แล้วกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อเริ่มการทำงานของเครื่องซักผ้าอีกครั้ง

**หมายเหตุ**

- หลังจากกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อเติมน้ำยาปรับผ้านุ่ม จะสามารถกดได้เฉพาะปุ่ม "Extra Rinse" (เพิ่มการล้าง) เท่านั้น

## การใช้น้ำยาฟอกขาว

- ผสมน้ำยาฟอกขาวกับน้ำ แล้วเติมลงในถังซักโดยตรง
- ตรวจสอบให้แน่ใจว่าใช้น้ำยาฟอกขาวชนิดออกซิเจน

**ข้อควรระวัง**

- ห้ามเทน้ำยาฟอกขาวลงบนเสื้อผ้าโดยตรง เนื่องจากอาจทำให้สีตกบางส่วน และทำให้เสื้อผ้าเกิดความเสียหายร้ายแรงได้
- ห้ามใช้น้ำยาฟอกขาวชนิดคลอรีนหรือสารทำความสะอาดที่เป็นกรด เนื่องจากอาจทำให้เสื้อผ้าเกิดความเสียหาย เช่น สีซีด หรือสีตกใส่เสื้อผ้าอื่น

## การซัก

1. กดปุ่มเปิด/ปิดเครื่อง
   - บรรจุผ้าลงในถังซัก
   - เติมผงซักฟอกในปริมาณที่แนะนำ โดยใช้ถ้วยตวงผงซักฟอกที่ให้มาด้วย
   - ตวงผงซักฟอกโดยใช้ถ้วยตวงผงซักฟอก แล้วเทลงในถังซักให้เสมอกัน
2. เลือกรอบการทำงานโดยการกดปุ่ม "Cycle Selection" (การเลือกรอบการทำงาน) (สำหรับข้อมูลเพิ่มเติมเกี่ยวกับรอบการซัก โปรดดูที่ 'รอบการซัก')
   - ตัวเลือกรอบการทำงานจะใช้ค่าเริ่มต้นโดยอัตโนมัติ หากต้องการเปลี่ยนแปลง ให้กดปุ่มตัวเลือก
3. กดปุ่ม "Start/Pause" (เริ่ม/หยุด)
   - ฝาเครื่องซักผ้าจะล็อค การจ่ายน้ำจะเริ่มขึ้น และการซักจะเริ่มขึ้น
4. หลังจากการซักเสร็จสมบูรณ์ ให้นำเสื้อผ้าออก

**หมายเหตุ**

- ถ้ากระแสไฟฟ้าดับขณะระบายน้ำ ตรวจสอบให้แน่ใจว่าน้ำระบายออกจนหมดแล้ว การใช้งานเครื่องซักผ้าโดยที่ยังระบายน้ำออกไม่หมด อาจทำให้ถูกระบายออกและจ่ายเข้าในขณะเดียวกัน
- หลังจากการซักเสร็จสมบูรณ์ ให้ใช้ผ้าแห้งเช็ดฝาเครื่องซักผ้า ซีลยาง และบริเวณภายในถังซัก เพื่อการซักที่สะอาด
- ถ้าทิ้งเสื้อผ้าที่เปียกไว้ภายในถังซักเป็นเวลานานหลังจากการซัก เสื้อผ้าอาจมีกลิ่นไม่พึงประสงค์ ให้นำเสื้อผ้าออกทันทีหลังจากการซัก

# คุณลักษณะของแผงควบคุม

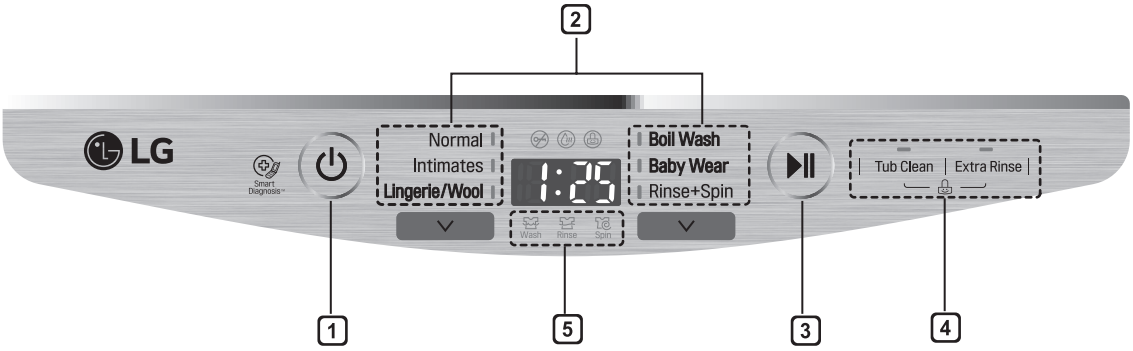


**1 ปุ่ม POWER (เปิด/ปิดเครื่อง)**

- กดเพื่อเปิดการทำงานของเครื่องซักผ้า กดอีกครั้งเพื่อปิดการทำงานของเครื่องซักผ้า การกดปุ่มเปิด/ปิดเครื่องในระหว่างรอบการทำงาน จะเป็นการยกเลิกรอบการทำงานนั้นๆ และการตั้งค่าปริมาณเสื้อผ้าจะหายไป ลิ้นชักจะปลดล็อคหลังจากหยุดครู่หนึ่ง

**หมายเหตุ:**

- ถ้ามีน้ำเหลืออยู่ในถังซักหลังจากที่เครื่องซักผ้าปิดการทำงานแล้ว น้ำจะถูกระบายออกหลังจากการหน่วงเวลาครบ 4 นาที เครื่องซักผ้าจะสามารถเริ่มทำงานอีกครั้งได้ตลอดเวลา ก่อนที่การระบายน้ำจะเริ่มขึ้น อย่างไรก็ตาม เมื่อน้ำเริ่มระบายออกแล้ว ฟังก์ชันทั้งหมดจะถูกระงับ จนกระทั่งน้ำจะถูกถ่ายออกจนหมดและปิดเครื่อง
- เมื่อกดปุ่มเปิด/ปิดเครื่อง รอบการทำงาน "Normal" (ปกติ) จะถูกเลือกไว้เป็นค่าเริ่มต้น หากต้องการแก้ไขตัวเลือกเริ่มต้น หรือต้องการเลือกรอบการทำงานอื่น ให้กดปุ่มเลือกรอบการทำงาน ( ) เพื่อให้ส่วนแสดงผลติดสว่าง

**2 ปุ่มเลือกรอบการทำงาน**

- กดปุ่มนี้เพื่อเลือกรอบการทำงานที่ต้องการ เมื่อเลือกรอบการทำงานที่ต้องการแล้ว พรีเซ็ตมาตรฐานจะปรากฏขึ้นบนส่วนแสดงผล การตั้งค่าเหล่านี้สามารถปรับได้ตลอดเวลาโดยใช้ปุ่มตั้งค่ารอบการทำงาน ก่อนที่รอบการทำงานจะเริ่มขึ้น

**หมายเหตุ:**

- เพื่อปกป้องเสื้อผ้าของคุณ เมื่อเลือกรอบการทำงานบางรูปแบบ อาจไม่สามารถเลือกการตั้งค่าบางอย่างได้

**3 ปุ่ม "Start/Pause" (เริ่ม/หยุด)**

- กดปุ่มนี้เพื่อเริ่มรอบการทำงานที่เลือกไว้ ถ้าเครื่องซักผ้ากำลังทำงาน ให้ใช้ปุ่มนี้เพื่อหยุดรอบการทำงานไว้ชั่วคราว โดยที่ไม่ทำให้การตั้งค่าในปัจจุบันหายไป

**หมายเหตุ:**

- ถ้าคุณไม่กดปุ่ม "Start/Pause" (เริ่ม/หยุด) ภายใน 4 นาทีหลังจากเลือกรอบการทำงาน เครื่องซักผ้าจะปิดการทำงานโดยอัตโนมัติ และการตั้งค่ารอบการทำงานทั้งหมดจะหายไป น้ำที่เหลืออยู่ภายในถังซักจะถูกระบายออก

**4 ปุ่มตัวเลือก**

- ใช้ปุ่มเหล่านี้เพื่อปรับการตั้งค่าสำหรับรอบการทำงานที่เลือกไว้ ไฟการตั้งค่าเหนือปุ่มเหล่านี้จะติดสว่างเพื่อแสดงรายการที่เลือกอยู่

**5 เวลา และ สถานะหน้าจอแสดงผล**

- หน้าจอจะแสดงผลจำนวนรอบและสถานะการทำงานและเวลาที่คงเหลือ

## รอบการซัก

คุณสามารถเลือกรอบการซักที่เหมาะสมสำหรับประเภทของเสื้อผ้าและระดับความสกปรกได้ โปรดอ่านคำอธิบายต่อไปนี้ แล้วเลือกรอบการซักที่เหมาะสม

- เครื่องจะมีรอบการทำงานแบบต่างๆ โดยขึ้นอยู่กับรุ่น ต้องทำการตรวจสอบรุ่นของเครื่องซักผ้าของคุณ

| รอบการซัก | คำอธิบาย |
|---|---|
| Normal (ผ้าทั่วไป) | รอบสำหรับการซักเสื้อผ้าประเภททั่วไป |
| Intimates (ผ้าที่ต้องดูแลเป็นพิเศษ) | รอบสำหรับการซักชุดชั้นในผ้าฝ้าย |
| Lingerie/Wool (ชุดชั้นใน/ผ้าขนสัตว์) | รอบสำหรับการซักสิ่งทอ ชุดชั้นในสตรี หรือเสื้อผ้าที่บอบบาง ซึ่งมีแนวโน้มที่จะหดหรือเสียรูป |
| Boil Wash (สเตอริไลส์) | รอบการซักแบบต้ม เพื่อสเตอริไลส์และช่วยให้ชุดชั้นในผ้าฝ้ายหรือเสื้อผ้าทารกขาวขึ้น |
| Baby Wear (เสื้อผ้าเด็ก) | รอบการซักเสื้อผ้าทารกอย่างถูกหลักอนามัย |
| Rinse+Spin (ล้าง+ ปั่น) | รอบการล้างและปั่นหมาดโดยไม่มีการซักเสื้อผ้า |

## ฟังก์ชันตัวเลือก

เลือกตัวเลือกที่เหมาะสมตามประเภทของเสื้อผ้าและระดับความสกปรก โปรดอ่านคำอธิบายต่อไปนี้ แล้วเลือกตัวเลือกที่เหมาะสม

- เครื่องจะมีตัวเลือกแบบต่างๆ โดยขึ้นอยู่กับรุ่น ต้องทำการตรวจสอบรุ่นของเครื่องซักผ้าของคุณ

| ฟังก์ชันตัวเลือก | คำอธิบาย |
|---|---|
| Tub Clean (ล้างถังซัก) | ตัวเลือกเพื่อช่วยรักษาความสะอาดของถังซัก โดยการสเตอริไลส์เพื่อกำจัดเชื้อโรคภายในถังซัก (โปรดดูที่ 'การทำความสะอาดถังซัก') |
| Extra Rinse (เพิ่มการล้าง) | ตัวเลือกเพื่อเพิ่มจำนวนรอบการล้าง |

## รอบการซัก "Normal" (ผ้าทั่วไป)

ใช้รอบการทำงานนี้สำหรับการซักทั่วไป

**หมายเหตุ**

- ถ้าคุณกดปุ่ม "Start/Pause" (เริ่ม/หยุด) โดยไม่ได้เลือกรอบการทำงาน รอบ "Normal" (ผ้าทั่วไป) จะทำงาน
- หากต้องการเปลี่ยนแปลงการตั้งค่าขณะซัก ก่อนอื่นให้กดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อหยุดการซัก จากนั้นกดปุ่มที่ต้องการ

## รอบการทำงาน "Intimates" (ผ้าที่ต้องดูแลเป็นพิเศษ)

ใช้รอบการทำงานนี้สำหรับการซักผ้าฝ้าย เสื้อยืด หรือชุดชั้นใน

**หมายเหตุ**

- รอบการทำงานนี้มีประสิทธิภาพในการซักผ้าฝ้าย เสื้อยืด หรือชุดชั้นในที่สกปรกมาก
- ปริมาณเสื้อผ้าที่แนะนำคือ น้อยกว่า 1.5 กก.

## รอบการทำงาน "Lingerie/Wool" (ชุดชั้นใน/ผ้าขนสัตว์)

ใช้รอบการทำงานนี้เพื่อซักสิ่งทอที่บอบบาง ซึ่งมีแนวโน้มที่จะหดหรือเสียรูป

**หมายเหตุ**

- เพื่อลดความเสียหายต่อสิ่งทอและเพิ่มประสิทธิภาพในการซัก ให้ใช้ผงซักฟอกที่มีฤทธิ์เป็นกลางชนิดพิเศษสำหรับผ้าขนสัตว์ เช่น แชมพูหรือสารสกัดสำหรับผ้าขนสัตว์
- ในการซัก ถังซักจะปั่นไปทางซ้ายและขวาอย่างนุ่มนวลเพื่อป้องกันการชำรุดเสียหายของเสื้อผ้า
- ปริมาณเสื้อผ้าที่แนะนำคือ น้อยกว่า 1.5 กก.

## รอบการทำงาน "Boil Wash" (ซักด้วยน้ำร้อน)

เลือกรอบการซักแบบต้มนี้ เพื่อสเตอริไลส์และช่วยให้ชุดชั้นในผ้าฝ้ายหรือเสื้อผ้าทารกขาวขึ้น

**หมายเหตุ**

- ในรอบการทำงานนี้ เสื้อผ้าจะได้รับการซักอย่างหมดจด เนื่องจากใช้อุณหภูมิสูง ใช้ปริมาณผงซักฟอก 1/2 ของปริมาณที่บริษัทผู้ผลิตแนะนำสำหรับการซักปกติ
- ห้ามซักผ้าขาวหรือผ้าสีอ่อนร่วมกับผ้าสีเข้มที่อาจตกสีได้
- การซักเสื้อผ้าที่มีคราบเลือดหรือนมรอบหนึ่งด้วยน้ำเย็นก่อนจะทำการซักเต็มรูปแบบ จะช่วยให้ขจัดคราบได้อย่างมีประสิทธิภาพมากยิ่งขึ้น
- ปริมาณเสื้อผ้าที่แนะนำคือ น้อยกว่า 1.5 กก.
- ในรอบการทำงานนี้ น้ำจะได้รับความร้อนจากระบบทำความร้อนของเครื่องซักผ้า
- อาจเกิดการบาดเจ็บในระหว่างรอบการทำงานนี้ เนื่องจากมีการใช้อุณหภูมิสูง ดังนั้นฝาเครื่องซักผ้าจะไม่เปิดออกในระหว่างการซัก
- ฟังก์ชันการกำจัดฟอง: ในกรณีที่เติมผงซักฟอกมากเกินไป ฟังก์ชันการกำจัดฟองอาจทำงาน
- ฟังก์ชันการลดอุณหภูมิน้ำทิ้ง: เพื่อการใช้งานอย่างปลอดภัย จะมีการจ่ายน้ำเย็นเข้าเป็นระยะสั้นๆ ก่อนที่จะระบายน้ำออก เพื่อลดอุณหภูมิของน้ำ

## รอบการทำงาน “Baby Wear” (เสื้อผ้าเด็ก)

เลือกรอบการทำงานนี้เพื่อซักเสื้อผ้าทารกของคุณอย่างถูกหลักอนามัย

**หมายเหตุ**

- เลือกผงซักฟอกชนิดที่เหมาะสมและมีฤทธิ์เป็นกลาง
- เสื้อผ้าจะได้รับการซักที่อุณหภูมิสูงเพื่อสเตอริไลส์และขจัดไร
- ปริมาณเสื้อผ้าที่แนะนำคือ น้อยกว่า 1.5 กก.
- การซักส่วนที่เปื้อนอาหาร เหงื่อ ปัสสาวะ และอุจจาระเป็นเวลาสั้นๆ ก่อนทำการซักเต็มรูปแบบ จะช่วยให้การซักมีประสิทธิภาพยิ่งขึ้น
- ห้ามเลือกรอบการทำงานนี้ในการซักสิ่งทอที่บอบบาง เช่น ผ้าขนสัตว์หรือผ้าไหม
- อาจเกิดการบาดเจ็บในระหว่างรอบการทำงานนี้ เนื่องจากมีการใช้อุณหภูมิสูง ดังนั้นฝาเครื่องซักผ้าจะไม่เปิดออกในระหว่างการซัก

## รอบการทำงาน "Rinse+Spin" (ล้าง+ ปั่น)

เลือกรอบการทำงานนี้เพื่อล้างและปั่นโดยไม่มีการซักเสื้อผ้า

**หมายเหตุ**

- เติมน้ำยาปรับผ้านุ่มโดยไม่ผสมผงซักฟอกเท่านั้น
- ปริมาณเสื้อผ้าที่แนะนำคือ น้อยกว่า 1.5 กก.

# การใช้ฟังก์ชันเสริม

## ฟังก์ชันการล็อคปุ่ม

ใช้ตัวเลือกนี้เพื่อป้องกันอุบัติเหตุเมื่อเด็กปรับปุ่มต่างๆ ขณะที่ทำการซัก

## การเปิดใช้งานหรือปิดใช้งานฟังก์ชันการล็อคปุ่ม

- คุณสามารถเปิดใช้งานหรือปิดใช้งานการล็อคปุ่มได้ โดยการกดปุ่ม "Tub Clean" (ล้างถังซัก) และ "Extra Rinse" (เพิ่มการล้าง) พร้อมกัน และค้างไว้เป็นเวลา 3 วินาที
- ถ้าใช้การล็อคปุ่มอยู่ คุณจะไม่สามารถควบคุมปุ่มใดๆ ได้ ยกเว้นปุ่มเปิด/ปิดเครื่อง
- เมื่อคุณตั้งค่าฟังก์ชันนี้ในระหว่างที่ผลิตภัณฑ์ทำงานอยู่ 'ตัวแสดงสถานะล็อคปุ่ม ( CL )' จะแสดงขึ้นบนส่วนแสดงผล

### การเปลี่ยนรอบการทำงานหรือตัวเลือกขณะที่ฟังก์ชันการล็อคปุ่มทำงานอยู่

1. กดปุ่ม "Tub Clean" (ล้างถังซัก) และ "Extra Rinse" (เพิ่มการล้าง) พร้อมกัน และค้างไว้เป็นเวลา 3 วินาที เพื่อปิดใช้งานการล็อคปุ่ม
2. กดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อหยุดการทำงาน
3. เลือกรอบการทำงานหรือตัวเลือกที่คุณต้องการเปลี่ยนแปลง จากนั้นกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อทำงานต่อ

**หมายเหตุ**

- การล็อคปุ่มจะไม่ถูกปิดการทำงานโดยอัตโนมัติหลังจากที่รอบการทำงานทั้งหมดเสร็จสมบูรณ์แล้ว กดปุ่ม "Button Locking" (การล็อคปุ่ม) ค้างไว้ประมาณสามวินาที เพื่อปิดใช้งานการล็อคปุ่ม
- ถ้าการล็อคปุ่มทำงานโดยไม่ได้ตั้งใจ ให้กดปุ่มการล็อคปุ่มเป็นเวลาสามวินาที เพื่อปิดใช้งานการล็อคปุ่ม
- ถ้าคุณเปิดเครื่องขณะที่ฟังก์ชันการล็อคปุ่มทำงานอยู่ ไฟการล็อคปุ่มจะติดสว่าง

### "Tub Clean" (ล้างถังซัก)

ใช้ตัวเลือกนี้เพื่อช่วยรักษาความสะอาดของถังซัก โดยการสเตอริไลส์เพื่อกำจัดเชื้อโรคภายในถังซัก

**หมายเหตุ**

- เทผลิตภัณฑ์ทำความสะอาดถังซัก (200 มล.) หรือน้ำยาฟอกขาวชนิดคลอรีน (200 มล.) ลงในถังซักให้เสมอกัน แล้วใช้รอบการทำงาน "Tub Clean" (ล้างถังซัก)
- ถ้าใส่ผลิตภัณฑ์ทำความสะอาดถังซักหรือน้ำยาฟอกขาวชนิดคลอรีนมากเกินไป อาจทำให้เครื่องซักผ้าเกิดการชำรุดและสึดกได้
- ห้ามบรรจุเสื้อผ้าและผงซักฟอกเมื่อใช้รอบการทำงาน "Tub Clean" (ล้างถังซัก) เนื่องจากอาจทำให้เสื้อผ้าเกิดความเสียหายหรือสีตกได้

### Add Rinsing (เพิ่มการล้าง)

ใช้ตัวเลือกนี้เพื่อเพิ่มจำนวนรอบการล้าง

- เมื่อคุณกดปุ่ม "Extra Rinse" (เพิ่มการล้าง) จำนวนรอบการล้างที่ต้องการเพิ่ม (2~5) จะแสดงขึ้น

### การปั่นหมาด

เลือกรอบการทำงาน "Rinse+Spin" (ล้าง+ ปั่น) กดปุ่ม "Extra Rinse" (เพิ่มการล้าง) แล้วตรวจดูว่าไอคอนแสดงขึ้นที่ส่วนแสดงผลหรือไม่ จากนั้นกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อเริ่มการปั่นหมาด

# การจัดการ

## การจัดการการเยือกแข็งในระหว่างฤดูหนาว

- ปิดการจ่ายน้ำ ถอดสายท่อจ่ายน้ำ จับสายท่อจ่ายน้ำไว้โดยให้ปลายสายท่อหันลงด้านล่าง แล้วระบายน้ำออกจากสายท่อ
- กดปุ่มการปั่นหมาด จากนั้นกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อทำการปั่นหมาดเป็นเวลา 1 นาที เพื่อระบายน้ำที่ตกค้างอยู่ในเครื่องซักผ้าและสายท่อระบายน้ำออก
- ถอดปลั๊กไฟ
- เลื่อนลิ้นซักให้เปิดออก ดึงสายท่อน้ำตกค้างที่ด้านขวา แล้วถ่ายน้ำที่ตกค้างอยู่ในผลิตภัณฑ์ออก

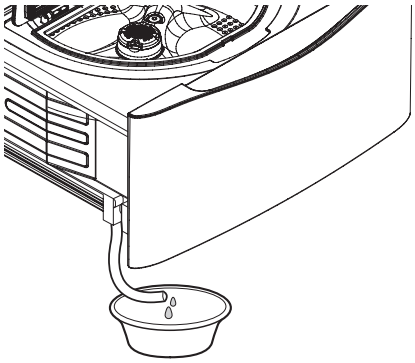

## ถ้าสายท่อมีน้ำแข็ง

- เทน้ำที่มีอุณหภูมิ 50 °C เข้าไปในก๊อกน้ำ แล้วถอดสายท่อจ่ายน้ำออก
- แช่สายท่อจ่ายน้ำที่ถอดออกมาไว้ในน้ำที่มีอุณหภูมิ 50 °C
- เทน้ำที่มีอุณหภูมิ 50 10 °C เข้าไปในถังซัก แล้วปล่อยทิ้งไว้ 10 นาที
- ต่อสายท่อจ่ายน้ำเข้ากับเครื่องซักผ้าอีกครั้ง และเทน้ำที่มีอุณหภูมิ 50 °C เข้าไปในสายท่อจ่ายน้ำอย่างระมัดระวัง
- ต่อสายท่อจ่ายน้ำเข้ากับก๊อกน้ำ แล้วตรวจสอบว่าน้ำสามารถระบายออกได้หรือไม่

**หมายเหตุ**

- ถังซักสเตนเลสขึ้นสนิมได้ยาก แต่ในกรณีที่ใส่หรือซักวัตถุที่เป็นเหล็ก (เข็มกลัด กิ๊บติดผม เป็นต้น) ในถังซักอาจทำให้มีสนิมเกาะได้
- ถ้ามีสนิมเกาะ ให้ป้ายสารทำความสะอาด (ผงซักฟอกที่เป็นกลาง) ลงบนฟองน้ำหรือผ้านุ่ม แล้วเช็ดสนิมออก

## การทำความสะอาดถังซัก

1 เจือจางผลิตภัณฑ์ทำความสะอาดถังซัก (200 มล.) หรือน้ำยาฟอกขาวชนิดคลอรีน (200 มล.) ในน้ำ แล้วเทส่วนผสมลงในถังซัก

2 ใช้ตัวเลือก "Tub Clean" (ล้างถังซัก) เพื่อทำความสะอาดถังซัก

**ข้อควรระวัง**

- ห้ามใช้ผลิตภัณฑ์ทำความสะอาดที่เป็นกรด เนื่องจากอาจเป็นสาเหตุให้สีตกหรือเกิดการกัดกร่อน
- เมื่อทำความสะอาดถังซัก ห้ามบรรจุผ้าลงไปในถัง มิฉะนั้นอาจทำให้เสื้อผ้าชำรุดเสียหายได้

**หมายเหตุ**

- ถ้าคุณไม่ขจัดความชื้นออกจากภายในถังซัก อาจทำให้เกิดกลิ่นที่ไม่พึงประสงค์และรอยเปื้อน (เนื่องจากแบคทีเรียและเชื้อรา) หลังจากการซัก ให้ใช้ผ้าอีกผืนหนึ่งเช็ดฝาเครื่องซักผ้า ซีลยาง และถังซัก แล้วเปิดฝาเครื่องซักผ้าไว้ และปล่อยให้บริเวณภายในถังซักแห้งสนิท
- ถังซักเหล็กกล้าไร้สนิมสามารถต้านทานการเกิดสนิมได้ ยกเว้นในกรณีต่อไปนี้ เมื่อมีสนิมเกิดขึ้น ให้ใช้ฟองน้ำหรือผ้านุ่มจุ่มน้ำยาทำความสะอาด (ที่มีฤทธิ์เป็นกลาง) เช็ดให้สะอาด (ห้ามใช้ใยขัดโลหะ)
  - ถ้าทิ้งผลิตภัณฑ์ที่เป็นเหล็ก (เข็มกลัด กิ๊บติดผม) ซึ่งเกิดสนิมได้ง่ายไว้ในถังซักเป็นเวลานานเกินไป
  - ถ้าใช้น้ำที่มีปริมาณธาตุเหล็กสูงเกินไปเป็นระยะเวลานาน
  - ถ้าใช้น้ำยาฟอกขาวในการซักและทิ้งไว้ในถังซักเป็นเวลานานเกินไป
- ในกรณีที่ใช้รอบการทำงาน "Boiling" (การต้ม) เป็นเวลานาน หินปูนในน้ำอาจเกาะภายในถังซัก เนื่องจากมีการใช้อุณหภูมิสูง ถ้ามีตะกรันหรือคราบอื่นๆ เกาะ ให้ใช้ยาสีฟันป้ายลงบนแปรงแล้วขัดให้สะอาด

## การทำความสะอาดตาข่ายกรองช่องจ่ายน้ำเข้า

ถ้าน้ำที่จ่ายเข้าถังซักไหลอ่อน หรือมีสิ่งสกปรกอุดตันตาข่ายกรอง รุ่นที่แสดงเวลาจะแสดงสัญลักษณ์ IE และรุ่นที่มีส่วนแสดงผล LED จะแสดงข้อความเตือน

1 หลังจากปิดก๊อกน้ำแล้ว ให้ถอดสายท่อจ่ายน้ำด้านที่เชื่อมต่อกับด้านหลังของเครื่องซักผ้า

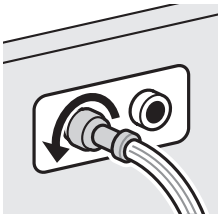

2 หลังจากถอดตาข่ายออกด้วยมือหรือคีม ให้ใช้แปรงสีฟันขจัดสิ่งสกปรกออก

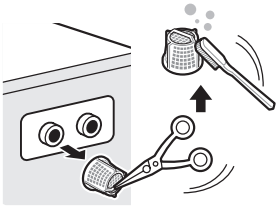

**หมายเหตุ**

- เพื่อป้องกันไม่ให้สิ่งสกปรกอุดตัน ให้ทำความสะอาดตาข่ายกรองช่องจ่ายน้ำเข้าเป็นระยะๆ ถ้าตาข่ายมีวัตถุแปลกปลอม เช่น สนิม ทราย หรือหิน การจ่ายน้ำจะถูกขัดขวาง

## การทำความสะอาดตาข่ายดักฝุ่น

- ทำความสะอาดตาข่ายดักฝุ่นหลังจากการใช้งาน 2 หรือ 3 ครั้ง
- ถ้าพบว่าขาดหรือชำรุด โปรดซื้อชุดใหม่จากศูนย์บริการแอลจี อิเล็กทรอนิกส์

**1** ถอดตาข่ายดักฝุ่นออกจากถังซักโดยกดปุ่มถอดตาข่ายที่ทั้งสองด้านของตาข่ายดักฝุ่น

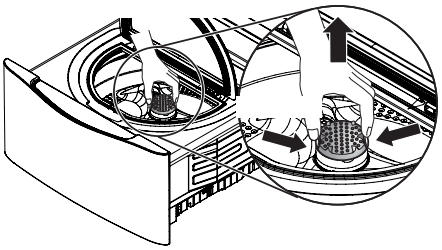

**2** จับตาข่ายดักฝุ่นไว้ด้วยมือทั้งสองข้าง แล้วถอดตาข่ายดักฝุ่นด้านในและฝาครอบตาข่ายดักฝุ่นออก

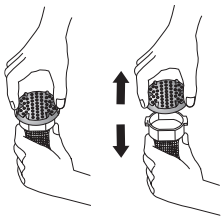

**3** วางตาข่ายดักฝุ่นด้านในและฝาครอบตาข่ายดักฝุ่นลงในอ่างน้ำ แล้วขจัดสิ่งสกปรกภายในตาข่ายดักฝุ่นออก

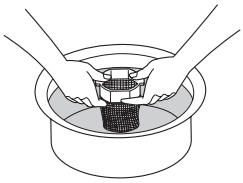

**4** ใส่ตาข่ายดักฝุ่นที่ทำความสะอาดแล้วเข้ากับถังซักอีกครั้ง และใช้งานเครื่องซักผ้า

- ถ้าไม่ทำการติดตั้งอย่างแน่นหนา ชิ้นส่วนอาจหลุดออกขณะทำการซัก

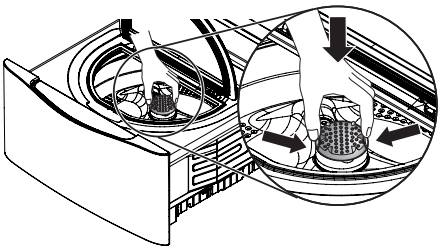

**ข้อควรระวัง**

- ห้ามใช้งานเครื่องซักผ้าขณะที่ถอดตาข่ายดักฝุ่นออกจากเครื่องซักผ้า
- ถ้าถอดตาข่ายดักฝุ่นออกจากเครื่องซักผ้า เสื้อผ้าหรือผลิตภัณฑ์อาจเกิดความเสียหายได้

## การทำความสะอาดซีลยาง

**1** เจือจางน้ำยาฟอกขาวชนิดออกซิเจน (5 ก.) ในน้ำอุ่น (5 ล.) จากนั้นสวมถุงมือยางและเช็ดซีลยางให้ทั่วถึงโดยใช้น้ำยาฟอกขาวที่เจือจางแล้ว (เจือจาง 1000 เท่า)

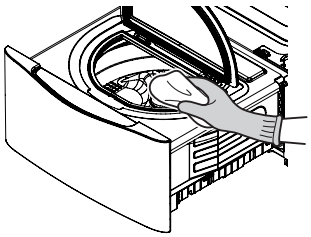

**2** กำจัดความชื้นออกจากซีลยางโดยเช็ดด้วยผ้าแห้ง แล้วเปิดฝาเครื่องซักผ้าไว้เพื่อให้แห้งสนิท

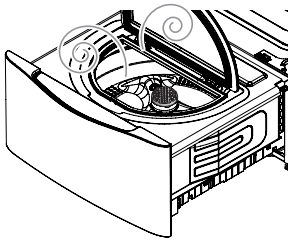

**หมายเหตุ**

- ถ้าคุณไม่ทำการเจือจางน้ำยาฟอกขาว อาจทำให้ซีลยางหรือชิ้นส่วนอื่นๆ เกิดความผิดปกติได้
- ทำความสะอาดซีลยางอย่างน้อยเดือนละหนึ่งครั้ง

## การใช้ฟังกชั์น Smart Diagnosis™

ใช้ฟังก์ชันนี้หากคุณต้องการการวินิจฉัยที่แม่นยำโดยศูนย์บริการ LG Electronics เมื่อเครื่องทำงานผิดปกติหรือล้มเหลว ใช้ฟังก์ชันนี้เพื่อติดต่อตัวแทนบริการเท่านั้น ไม่ใช่ในระหว่างการใช้งานปกติ

1. กดปุ่ม **Power** เพื่อเปิดใช้งานเครื่องซักผ้า อย่ากดปุ่มอื่นหรือหมุนลูกบิดเลือกโปรแกรม
2. เมื่อได้รับคำแนะนำให้ทำดังกล่าวโดยศูนย์บริการ วางส่วนรับเสียงของโทรศัพท์ของคุณใกล้กับปุ่ม **Power**

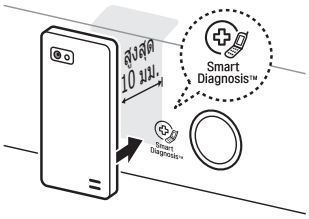


3. กดปุ่ม **Tub Clean(ล้างถังซัก)** ค้างไว้เป็นเวลา 3 วินาที ในขณะที่ถือส่วนรับเสียงของโทรศัพท์ใกล้กับสัญลักษณ์หรือปุ่ม **Power**
4. ให้โทรศัพท์อยู่กับที่จนกว่าสัญญาณเสียงจะจบ เวลาคงเหลือสำหรับการส่งข้อมูลจะแสดงขึ้นมา
   - เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด อย่าขยับโทรศัพท์ในขณะที่กำลังส่งเสียง
   - หากตัวแทนศูนย์บริการไม่สามารถทำการบันทึกข้อมูลที่แม่นยำได้ อาจขอให้คุณลองทำอีกครั้ง

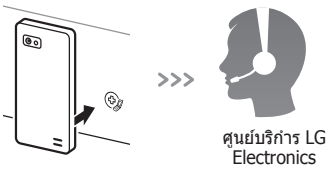


5. เมื่อการนับถอยหลังจบลงและเสียงสัญญาณหยุด ทำการสนทนาของคุณต่อกับตัวแทนศูนย์บริการ ที่จะสามารถช่วยเหลือคุณได้โดยใช้ข้อมูลที่ส่งไปเพื่อการวิเคราะห์

**หมายเหตุ**

- ฟังก์ชัน Smart Diagnosis™ ขึ้นอยู่กับคุณภาพการโทรในพื้นที
- ประสิทธิภาพในการสื่อสารจะดีขึ้นและคุณสามารถรับบริการที่ดีขึ้นได้หากคุณใช้โทรศัพท์บ้าน
- หากการส่งข้อมูล Smart Diagnosis™ ไม่ดีเนื่องจากคุณภาพการโทรที่แย่ คุณอาจไม่ได้รับบริการ Smart Diagnosis™ ที่ดีที่สุด

# การแก้ไขปัญหา

## คำถามที่ถามบ่อย



| | |
|---|---|
| ถาม: | เครื่องซักผ้าแบบแท่นวางและเครื่องซักผ้าฝาหน้าสามารถทำงานพร้อมกันได้หรือไม่? |
| ตอบ: | สามารถทำได้ เครื่องซักผ้าแบบแท่นวางได้รับการออกแบบมาให้สามารถทำงานพร้อมกับเครื่องซักผ้าฝาหน้าของ LG ที่ผลิตหลังจากปี 2009 ที่ติดตั้งอยู่ด้านบนได้ แต่ไม่ได้รับการออกแบบมาให้ทำงานใต้เครื่องซักผ้าฝาบนของ LG, เครื่องอบผ้าของ LG, เครื่องใช้ไฟฟ้าที่ไม่ได้ผลิตโดย LG, หรือใช้งานเครื่องเดียวโดยลำพัง |
| ถาม: | เครื่องซักผ้าแบบแท่นวางสามารถบรรจุผ้าได้มากเท่าใด? |
| ตอบ: | ถังซักได้รับการออกแบบขึ้นสำหรับผ้าไม่เกิน 4 ปอนด์ (ผ้าเช็ดตัวเนื้อหนาหนึ่งผืนมีน้ำหนักประมาณหนึ่งปอนด์ขณะแห้ง) ห้ามบรรจุผ้าลงในถังซักของเครื่องซักผ้ามากเกินไป เสื้อผ้าควรกระจายในถังซักหลวมๆ และควรสามารถปิดฝาได้ง่าย |
| ถาม: | ควรใช้ผงซักฟอก น้ำยาปรับผ้านุ่ม หรือน้ำยาฟอกขาวเท่าใดต่อการบรรจุผ้าหนึ่งครั้ง?<br>ควรเติมอย่างไรและเมื่อใด? |
| ตอบ: | **ผงซักฟอก:**<br>• เครื่องซักผ้าแบบแท่นวางใช้ผงซักฟอกเพียงเล็กน้อยเท่านั้น ผ้าจำนวนปกติจะใช้ผงซักฟอกที่มีประสิทธิภาพสูงเพียง 1 ช้อนชา (10 ก.) เท่านั้น ให้ใช้ผงซักฟอกที่มีประสิทธิภาพสูงไม่เกิน 2 ช้อนชา (20 ก.) ห้ามใส่ผงซักฟอกแบบแคปซูลทั้งลูก<br>• ให้เทผงซักฟอกลงในอุปกรณ์จ่ายผงซักฟอกที่มาพร้อมกับเครื่อง ใส่ตัวจ่ายผงซักฟอกลงในถังซักพร้อมกับเสื้อผ้า ก่อนเริ่มรอบการทำงาน<br>• ถ้าตัวจ่ายผงซักฟอกหายไป ให้ใส่ผงซักฟอก 1–2 ช้อนชา (10-20 ก.) ลงในถังซักโดยตรง<br>• สำหรับข้อมูลเพิ่มเติม โปรดดูที่ การใช้งานผงซักฟอกและตัวจ่ายผงซักฟอก<br>**น้ำยาปรับผ้านุ่ม:**<br>• สำหรับปริมาณผ้าปกติ ให้เติม ¼ ส่วนของปริมาณที่บริษัทผู้ผลิตแนะนำ ใช้ตัวจ่ายผงซักฟอกที่มาพร้อมกับเครื่อง สำหรับคำแนะนำ โปรดดูที่ การใช้น้ำยาปรับผ้านุ่ม<br>**น้ำยาฟอกขาว:**<br>• ห้ามใช้น้ำยาฟอกขาวทั้งชนิดเหลวหรือผงกับเสื้อผ้าในเครื่องซักผ้าแบบแท่นวาง เพื่อการใช้น้ำยาฟอกขาวอย่างปลอดภัยและมีประสิทธิภาพ ให้ใช้ตัวจ่ายน้ำยาฟอกขาวที่อยู่ในเครื่องซักผ้าฝาหน้า |
| ถาม: | ฉันสามารถเลื่อนลิ้นซักออกขณะที่รอบการทำงานยังคงดำเนินอยู่ได้หรือไม่? |
| ตอบ: | ไม่ได้ ลิ้นซักจะล็อค เพื่อความปลอดภัยในระหว่างการทำงาน ให้หยุดรอบการทำงานชั่วคราวเมื่อต้องการเปิดลิ้นซัก |
| ถาม: | ฉันควรทำอย่างไรหากต้องการเพิ่มผ้าหลังจากเริ่มรอบการทำงานแล้ว? |
| ตอบ: | กดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อหยุดรอบการทำงานไว้ชั่วคราว หลังจากลิ้นซักปลดล็อคแล้ว ให้เพิ่มผ้า จากนั้นกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อเริ่มรอบการทำงานอีกครั้ง ผ้าที่เพิ่มภายหลังอาจได้รับการซักไม่เต็มที่ ถ้าเพิ่มผ้าหลังจากเริ่มซักไปแล้วครู่หนึ่ง |
| ถาม: | ฉันจะทำให้ถังซักแห้งได้อย่างไรหลังจากรอบการทำงานเสร็จสมบูรณ์แล้ว?<br>ฉันจะทำให้ถังซักปลอดจากเชื้อราและกลิ่นไม่พึงประสงค์ได้อย่างไร? |
| ตอบ: | เพื่อการดูแลที่เหมาะสมที่สุด หลังจากการใช้งาน ให้เช็ดฝาและถังซักให้แห้งโดยใช้ผ้านุ่มหรือผ้าขนหนู หลังจากการใช้งาน ให้เปิดลิ้นซักและฝาทิ้งไว้ เพื่อให้อากาศระบายได้ดีที่สุด เรียกใช้รอบการทำงาน "Tub Clean" (ทำความสะอาดถังซัก) เดือนละครั้ง หรือถ้าจำเป็นสามารถใช้บ่อยกว่านั้นได้ สัญลักษณ์ TCL จะแสดงขึ้นหลังจากใช้งานครบ 30 รอบการทำงาน เพื่อเตือน |

**เสียงที่คุณอาจได้ยินในกรณีปกติ**

คุณอาจได้ยินเสียงต่อไปนี้ขณะที่เครื่องซักผ้ากำลังทำงาน ลักษณะดังกล่าวถือเป็นสิ่งปกติ

**เสียงดังคลิก:**

รีเลย์ล็อคฝาเครื่อง เมื่อล็อคและปลดล็อคฝา

**เสียงการฉีดพ่นหรือเสียงซ่า**

การฉีดหรือการหมุนเวียนน้ำในระหว่างรอบการทำงาน

**เสียงดึงหึ่งหรือเสียงรัว:**

ปั๊มระบายน้ำกำลังปั๊มน้ำจากเครื่องซักผ้าเป็นระยะๆ ในระหว่างรอบการทำงาน

**เสียงน้ำกระเพื่อม:**

ของเหลวภายในแหวนปรับสมดุลรอบตะกร้าซักจะช่วยให้ตะกร้าสามารถหมุนได้อย่างราบรื่น

**เสียงการเติมน้ำหลังจากที่เครื่องซักผ้าได้เริ่มทำงานแล้ว**

- เครื่องซักผ้าจะปรับการทำงานให้เหมาะสมกับปริมาณและประเภทของผ้า และจะมีการเติมน้ำในรอบการทำงานตามความจำเป็น
- โหลดของการซักอาจไม่สมดุล ถ้าเครื่องซักผ้าตรวจพบว่าผ้าไม่สมดุล เครื่องจะหยุดทำงานและจะมีการเติมน้ำเพื่อกระจายผ้า
- เครื่องซักผ้าอาจกำลังเจือจางผลิตภัณฑ์ถนอมผ้าสำหรับเติมลงในรอบการซัก

**ก่อนติดต่อศูนย์บริการ**

เครื่องซักผ้าของคุณมีระบบเฝ้าตรวจสอบข้อผิดพลาดอัตโนมัติ เพื่อตรวจหาและวิเคราะห์ปัญหาต่างๆ ตั้งแต่เนิ่นๆ ถ้าเครื่องซักผ้าของคุณไม่สามารถทำงานได้อย่างเป็นปกติหรือไม่ทำงานเลย โปรดทำการตรวจสอบดังนี้ก่อนติดต่อศูนย์บริการ

| ปัญหา | สาเหตุที่เป็นไปได้ | วิธีแก้ไข |
|---|---|---|
| **มีเสียงดังรัวหรือเสียงเหมือนโลหะกระทบกัน** | **อาจมีวัตถุแปลกปลอม เช่น กุญแจ เหรียญ หรือสลักโลหะภายในถังซัก** | • หยุดเครื่องซักผ้า ตรวจสอบถังซักเพื่อหาวัตถุแปลกปลอม ถ้ายังคงมีเสียงดังหลังจากเริ่มการทำงานของเครื่องซักผ้าอีกครั้ง โปรดติดต่อศูนย์บริการ |
| **มีเสียงกระแทก** | **หากบรรจุผ้าปริมาณมากลงในเครื่อง อาจทำให้เกิดเสียงกระแทก** | • ลักษณะดังกล่าวถือเป็นสิ่งปกติ ถ้ายังคงมีเสียงอยู่อย่างต่อเนื่อง เครื่องซักผ้าอาจเสียสมดุล ให้หยุดการทำงานและกระจายผ้าที่ซัก |
| | **ผ้าที่ซักอาจไม่สมดุล** | • หยุดรอบการทำงานไว้ชั่วคราวและกระจายผ้าที่ซักอีกครั้งหลังจากที่ฝาปลดล็อคแล้ว |
| **มีเสียงการสั่นสะเทือน** | **ยังไม่ได้นำวัสดุบรรจุหีบห่อออก** | • โปรดดูที่ การเปิดหีบห่อและนำวัสดุป้องกันขณะจัดส่งออก ในหมวด ข้อกำหนดในการติดตั้ง |
| | **ผ้าที่ซักอาจไม่กระจายตัวเสมอกันภายในถังซัก** | • หยุดรอบการทำงานไว้ชั่วคราวและกระจายผ้าที่ซักอีกครั้งหลังจากที่ฝาปลดล็อคแล้ว |
| | **ขาปรับระดับบางขาไม่แนบสนิทกับพื้นอย่างมั่นคงและเสมอกัน** | • โปรดดูที่ การปรับระดับเครื่องซักผ้า ในหมวด คำแนะนำในการติดตั้ง |
| | **พื้นไม่มั่นคงเพียงพอ** | • ตรวจสอบให้แน่ใจว่าพื้นแข็งแรงและไม่อ่อนตัว โปรดดูที่ พื้น ในหมวด ข้อกำหนดในการติดตั้ง |

| ปัญหา | สาเหตุที่เป็นไปได้ | วิธีแก้ไข |
|---|---|---|
| **มีน้ำรั่ว** | **จุดต่อสายท่อจ่ายเข้ามีการหลวมที่ก๊อกน้ำ เครื่องซักผ้าหรือที่ข้อต่อรูปตัว Y** | • ตรวจสอบสายท่อและข้อต่อรูปตัว Y เพื่อหาการรั่ว รอยร้าว และรอยแตก<br>• ตรวจเช็คและขันจุดต่อสายท่อ |
| | **ท่อระบายน้ำของบ้านอุดตัน** | • เครื่องซักผ้าจะปั๊มน้ำออกด้วยความเร็วสูงมาก ตรวจสอบว่ามีน้ำล้นจากท่อระบายน้ำในระหว่างการระบายหรือไม่ ถ้ามีน้ำไหลล้นจากท่อระบาย ให้ตรวจสอบว่าสายท่อระบายได้รับการติดตั้งอย่างเหมาะสมหรือไม่ รวมถึงตรวจสอบว่าท่อระบายอุดตันหรือไม่ ติดต่อช่างประปาเพื่อซ่อมท่อระบายน้ำ |
| | **สายท่อระบายหลุดออกจากข้อต่อท่อระบายหรือสอดสายท่อไม่ลึกพอ** | • ยึดสายท่อระบายเข้ากับสายท่อจ่ายเข้าหรือท่อแนวตั้ง เพื่อป้องกันไม่ให้หลุดออกในระหว่างการระบาย สำหรับท่อระบายที่มีขนาดเล็ก ให้สอดสายท่อระบายเข้าไปในท่อให้ลึกถึงหน้าแปลนของสายท่อระบาย สำหรับท่อระบายที่มีขนาดใหญ่ ให้สอดสายท่อระบายเข้าไปในท่อให้ลึกกว่าหน้าแปลน 1-2 นิ้ว |
| | **บรรจุผ้ามากเกินไปสำหรับถังซัก** | • ลดปริมาณผ้าหรือใช้เครื่องซักผ้าขนาดปกติ ใช้รอบการทำงาน "Duvet" (ชุดเครื่องนอน) ของเครื่องซักผ้าฝาหน้า สำหรับผ้าปริมาณมากหรือมีน้ำหนักมาก<br>• หยุดการทำงานของเครื่องซักผ้าแล้วตรวจสอบปริมาณผ้า ตรวจสอบให้แน่ใจว่าผ้ากระจายในถังซักหลวมๆ และสามารถปิดฝาได้ง่าย |
| **ผ้ายับ** | **ไม่ได้นำผ้าออกจากเครื่องซักผ้าโดยเร็ว** | • ให้นำเสื้อผ้าออกจากเครื่องซักผ้าทันทีที่รอบการทำงานเสร็จสมบูรณ์เสมอ |
| | **เครื่องซักผ้าทำงานหนักเกินไป** | • เครื่องซักผ้าสามารถรองรับผ้าได้เต็มความสามารถ แต่ถังซักไม่ควรมีผ้าอัดตัวแน่น ฝาของเครื่องซักผ้าควรสามารถปิดได้ง่าย |
| | **ต่อสายท่อน้ำร้อนและน้ำเย็นสลับด้าน** | • การล้างด้วยน้ำร้อนอาจทำให้เกิดรอยยับในผ้า ตรวจสอบจุดต่อสายท่อจ่ายเข้า |
| **รอยด่าง** | **เติมน้ำยาฟอกขาวหรือน้ำยาปรับผ้านุ่มลงบนผ้าที่ซักโดยตรง ไม่ได้นำผ้าออกจากเครื่องซักผ้าโดยเร็ว** | • ให้นำเสื้อผ้าออกจากเครื่องซักผ้าทันทีที่รอบการทำงานเสร็จสมบูรณ์ทุกครั้ง |
| | **ไม่ได้คัดแยกเสื้อผ้าอย่างเหมาะสม** | • ซักผ้าสีเข้มแยกจากผ้าสีอ่อนและผ้าขาวเสมอ เพื่อป้องกันสีตก<br>• ห้ามซักผ้าที่สกปรกมากรวมกับผ้าที่สกปรกน้อย |
| **เปิดเครื่องซักผ้าไม่ได้** | **ไม่ได้เสียบปลั๊กไฟอย่างถูกต้อง** | • ตรวจสอบให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้าเสียบแบบ 2 ขาที่มีไฟจ่าย 220 VAC, 50 Hz และมีการต่อกราวด์ไว้ |
| | **ฟิวส์ของบ้านขาด เซอร์กิตเบรกเกอร์ตัด หรือกระแสไฟฟ้าขัดข้อง** | • รีเซ็ตเซอร์กิตเบรกเกอร์หรือเปลี่ยนฟิวส์ ห้ามเพิ่มขนาดฟิวส์ ถ้าปัญหาเกี่ยวข้องกับวงจรไม่สามารถรองรับปริมาณกระแสไฟฟ้าได้เพียงพอ โปรดมอบหมายให้ช่างไฟฟ้าที่มีคุณสมบัติทำการแก้ไข |
| | **หมายเหตุ: ถ้าเครื่องซักผ้าหยุดในระหว่างรอบการทำงานเนื่องจากขาดกำลังไฟ เมื่อกระแสไฟฟ้ากลับมาเป็นปกติ เครื่องซักผ้าจะกลับเข้าสู่รอบการทำงานเดิมที่กำลังใช้งานอยู่ขณะที่เครื่องหยุด** | |

| ปัญหา | สาเหตุที่เป็นไปได้ | วิธีแก้ไข |
|---|---|---|
| **เวลาของรอบการซักจะนานขึ้นกว่าปกติ** | **เครื่องซักผ้าจะปรับเวลาการซักตามปริมาณผ้า แรงดันน้ำ และสภาพการทำงานอื่นๆ โดยอัตโนมัติ** | • ลักษณะดังกล่าวถือเป็นสิ่งปกติ เครื่องซักผ้าจะปรับเวลาของรอบการทำงานโดยอัตโนมัติ เพื่อให้ได้ผลการซักที่ดีที่สุดสำหรับรอบการทำงานที่เลือกไว้ เวลาที่เหลือที่แสดงบนส่วนแสดงผลเป็นเพียงค่าโดยประมาณเท่านั้น เวลาที่ใช้จริงอาจแตกต่างออกไป |
| **มีกลิ่นอับหรือกลิ่นเชื้อราในเครื่องซักผ้า** | **ใช้ผงซักฟอกมากเกินไปหรือผิดชนิด** | • ให้ใช้เฉพาะผงซักฟอกชนิดประสิทธิภาพสูง ที่ตรงตามคำแนะนำของผู้ผลิตเท่านั้น เครื่องซักผ้านี้ใช้ผงซักฟอกเพียงเล็กน้อยเท่านั้น เพียง 1-2 ช้อนชาก็เพียงพอสำหรับการซักเต็มความสามารถของเครื่อง |
| | **ภายในถังซักไม่ได้รับการทำความสะอาดอย่างเหมาะสม** | • เรียกใช้รอบการทำงาน "Tub Clean" (ล้างถังซัก) เป็นประจำ |
| **มีน้ำรั่ว** | **ผงซักฟอกมีฟองมากเกินไป** | • ฟองที่มากเกินไปอาจทำให้เกิดการรั่ว และอาจมีสาเหตุมาจากประเภทและปริมาณผงซักฟอกที่ใช้ แนะนำให้ใช้เฉพาะผงซักฟอกประสิทธิภาพสูงเพียงอย่างเดียวเท่านั้น ให้ลดปริมาณผงซักฟอกถ้ามีผ้าน้อยหรือสกปรกน้อย หรือในกรณีที่ความกระด้างของน้ำอ่อนมาก ห้ามเติมเกินปริมาณสูงสุดที่แสดงในตัวจ่ายผงซักฟอกที่มาพร้อมกับเครื่อง |

| ปัญหา | สาเหตุที่เป็นไปได้ | วิธีแก้ไข |
|---|---|---|
| **เครื่องซักผ้าไม่ทำงาน** | **แผงควบคุมปิดการทำงานเนื่องจากไม่มีการสั่งงาน** | • ลักษณะดังกล่าวถือเป็นสิ่งปกติ กดปุ่มเปิด/ปิดเครื่อง เพื่อเปิดเครื่องซักผ้า |
| | **ปลั๊กของเครื่องซักผ้าถอดอยู่** | • ตรวจสอบให้แน่ใจว่าได้เสียบปลั๊กอย่างมั่นคงเข้ากับเต้าเสียบที่ใช้งานได้ |
| | **ปิดการจ่ายน้ำอยู่** | • เปิดทั้งก๊อกน้ำร้อนและน้ำเย็นให้สุด |
| | **ไม่ได้ตั้งค่าส่วนควบคุมอย่างถูกต้อง** | • ตรวจสอบให้แน่ใจว่าได้ตั้งค่ารอบการทำงานไว้อย่างถูกต้อง ปิดฝา แล้วกดปุ่ม "Start/Pause" (เริ่ม/หยุด) |
| | **ฝาหรือลิ้นซักเปิดอยู่** | • เครื่องซักผ้าจะไม่ทำงานถ้าฝาเปิดอยู่ ปิดฝาและลิ้นซัก โดยตรวจสอบให้แน่ใจว่าไม่มีสิ่งใดกีดขวางใต้ฝาและทำให้ปิดไม่สนิท |
| | **เซอร์กิตเบรกเกอร์ตัด/ฟิวส์ขาด** | • ตรวจสอบเซอร์กิตเบรกเกอร์/ฟิวส์ของบ้าน เปลี่ยนฟิวส์หรือรีเซ็ตเบรกเกอร์ ควรต่อเครื่องซักผ้าเข้ากับวงจรสาขาโดยไม่พ่วงกับเครื่องใช้ไฟฟ้าอื่นๆ เมื่อกระแสไฟฟ้ากลับมาเป็นปกติ เครื่องซักผ้าจะกลับเข้าสู่รอบการทำงานเดิมที่กำลังใช้งานอยู่ขณะที่เครื่องหยุด |
| | **ต้องรีเซ็ตส่วนควบคุมต่างๆ** | • กดปุ่มเปิด/ปิดเครื่อง จากนั้นเลือกรอบการทำงานที่ต้องการอีกครั้ง แล้วกดปุ่ม "Start/Pause" (เริ่ม/หยุด) |
| | **ไม่ได้กดปุ่ม "Start/Pause" (เริ่ม/หยุด) หลังจากกำหนดรอบการทำงานแล้ว** | • กดปุ่มเปิด/ปิดเครื่อง จากนั้นเลือกรอบการทำงานที่ต้องการอีกครั้ง แล้วกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เครื่องซักผ้าจะปิดการทำงานถ้าไม่มีการกดปุ่ม "Start/Pause" (เริ่ม/หยุด) ภายใน 60 นาที |
| | **แรงดันน้ำอ่อนมาก** | • ตรวจสอบก๊อกอื่นภายในบ้านเพื่อให้มั่นใจว่าน้ำของบ้านมีแรงดันเพียงพอ |
| | **เครื่องซักผ้าเย็นเกินไป** | • ถ้าเครื่องซักผ้าอยู่ในอุณหภูมิต่ำกว่าจุดเยือกแข็งเป็นเวลานาน ปล่อยให้เครื่องอุ่นขึ้นก่อนกดปุ่มเปิด/ปิดเครื่อง มิฉะนั้นส่วนแสดงผลจะไม่ติดสว่าง |

| ปัญหา | สาเหตุที่เป็นไปได้ | วิธีแก้ไข |
|---|---|---|
| **เครื่องซักผ้าไม่เติมน้ำอย่างถูกต้อง** | **ตัวกรองอุดตัน** | • ตรวจสอบให้แน่ใจว่ากรองน้ำจ่ายเข้าที่วาล์วเติมน้ำไม่มีการอุดตัน โปรดดูที่คำแนะนำในการทำความสะอาดตัวกรอง |
| | **สายท่อจ่ายเข้าอาจคดงอ** | • ตรวจสอบว่าสายท่อจ่ายเข้าคดงอหรืออุดตันหรือไม่ |
| | **ประสิทธิภาพด้านพลังงาน** | • เครื่องซักผ้าเครื่องนี้เป็นประเภทประสิทธิภาพสูง ผลคือ<br>• การตั้งค่าระดับน้ำสำหรับเครื่องซักผ้าเครื่องนี้อาจแตกต่าง<br>• จากเครื่องซักผ้าทั่วไป |
| | **การจ่ายน้ำไม่เพียงพอ** | • ตรวจสอบให้แน่ใจว่าเปิดก๊อกน้ำร้อนและน้ำเย็นจนสุดแล้ว |
| | **ฝาและลิ้นชักเปิดอยู่** | • เครื่องซักผ้าจะไม่ทำงานถ้าฝาเปิดอยู่ ปิดฝาและตรวจสอบให้แน่ใจว่าไม่มีสิ่งใดกีดขวางใต้ฝาและทำให้ปิดไม่สนิท |
| | **ต่อสายท่อน้ำร้อนและน้ำเย็นสลับด้าน** | • ตรวจสอบจุดต่อสายท่อจ่ายเข้า ตรวจสอบให้แน่ใจว่าต่อท่อจ่ายน้ำร้อนเข้ากับวาล์วรับน้ำร้อน และต่อท่อจ่ายน้ำเย็นเข้ากับวาล์วรับน้ำเย็น |
| | **ระดับน้ำต่ำเกินไป** | • เครื่องซักผ้าเครื่องนี้เป็นประเภทประสิทธิภาพสูง โดยปกติแล้วระดับน้ำจะไม่ท่วมเสื้อผ้าทั้งหมด ระดับน้ำที่เติมจะได้รับการปรับให้เหมาะสมกับลักษณะการซัก เพื่อให้ได้สมรรถนะการซักที่ดีที่สุด |
| **เครื่องซักผ้าไม่ระบายน้ำออก** | **สายท่อระบายน้ำคดงอ** | • ตรวจสอบให้แน่ใจว่าสายท่อระบายไม่คดงอ |
| | **ท่อระบายน้ำอยู่สูงกว่า 100 ซม. จากพื้น** | • ตรวจสอบให้แน่ใจว่าสายท่อระบายสูงไม่เกิน 100 ซม จากฐานของเครื่องซักผ้า และห่างไม่เกิน 50 ซม จากเครื่องซักผ้า |
| **การขจัดรอยเปื้อนไม่สมบูรณ์** | **ผ้าสกปรกมาก** | • เครื่องซักผ้าแบบแท่นวางได้รับการออกแบบมาเพื่อการถนอมผ้าที่สกปรกน้อยอย่างอ่อนโยนและมีประสิทธิภาพ สำหรับผ้าที่เปื้อนมากและคราบที่ซักออกจาก อาจจำเป็นต้องใช้พลังการทำความสะอาดด้วยคุณลักษณะ "Soak" (แช่ผ้า) หรือ "Stain Care" (ขจัดคราบ) ของเครื่องซักผ้าฝาหน้า |
| | **คราบฝังแน่น** | • ผ้าที่เคยผ่านการซักอาจมีคราบหลงเหลือซึ่งฝังแน่นในผ้า คราบเหล่านี้อาจขจัดได้ยาก และอาจจำเป็นต้องซักด้วยมือหรือต้องดำเนินการแก้ไขเบื้องต้นเพื่อช่วยในการทำความสะอาด |
| **น้ำรั่วไม่ว่าจะใส่ผ้าปริมาณเท่าใด** | **สายท่อไม่ได้รับการติดตั้งอย่างถูกต้อง** | • ตรวจสอบจุดต่อสายท่อจ่ายและระบายน้ำทั้งหมด เพื่อให้มั่นใจว่าได้รับการต่ออย่างแน่นหนา |
| | **สายท่อระบายน้ำของเครื่องอบผ้าแบบไฮบริดไม่ได้รับการติดตั้งอย่างถูกต้อง** | • ห้ามสอดสายท่อระบายน้ำของเครื่องอบผ้าแบบไฮบริดเข้ากับข้อต่อรูปตัว Y ลึกกว่า 3/4 นิ้ว โปรดดูที่ การต่อสายท่อระบายน้ำ<br>• ตรวจสอบแคลมป์และแถบรัดว่าติดตั้งไว้อย่างแน่นหนา ติดตั้งแคลมป์และแถบรัดถ้าหายไป โปรดดูที่ การต่อสายท่อระบายน้ำ |

## รหัสความผิดปกติ

| ปัญหา | สาเหตุที่เป็นไปได้ | วิธีแก้ไข |
|---|---|---|
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **ไม่ได้ปิดลิ้นชักอย่างถูกต้อง** | • ปิดลิ้นชักแล้วกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อเริ่มรอบการทำงาน<br>• ถ้าลิ้นชักปิดอยู่และมีข้อความแสดงข้อผิดพลาดเกี่ยวกับการล็อคลิ้นชักแสดงขึ้น โปรดติดต่อศูนย์บริการ |
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **ไม่ได้ปิดฝาอย่างถูกต้อง** | • เปิดลิ้นชัก แล้วตรวจสอบให้แน่ใจว่าไม่มีผ้าหรือวัตถุอื่นๆ กีดขวางบริเวณตัวล็อค<br>• ปิดฝา ปิดลิ้นชัก แล้วกดปุ่ม "Start/Pause" (เริ่ม/หยุด) เพื่อเริ่มรอบการทำงาน<br>• ถ้าฝาปิดอยู่และมีข้อความแสดงข้อผิดพลาดเกี่ยวกับฝาแสดงขึ้น โปรดติดต่อศูนย์บริการ |
| **น้ำเติมเข้าเครื่องซักผ้าช้าหรือไม่มีการเติมน้ำ หรือส่วนแสดงผลแสดงดังนี้:**  | **ไม่ได้เกิดก๊อกจ่ายน้ำให้สุด** | • ตรวจสอบให้แน่ใจว่าเปิดก๊อกน้ำสุดแล้ว |
| | **สายท่อน้ำคดงอหรือถูกบีบทับ** | • ตรวจสอบให้แน่ใจว่าสายท่อไม่มีการคดงอหรือหรือบีบทับ ใช้ความระมัดระวังในการเคลื่อนย้ายเครื่องซักผ้าในระหว่างการทำความสะอาดและบำรุงรักษา |
| | **ตัวกรองจ่ายน้ำเข้าอุดตัน** | • ทำความสะอาดตัวกรองจ่ายน้ำเข้า โปรดดูที่ การบำรุงรักษา ในหมวด การดูแลรักษาและการทำความสะอาด |
| | **แรงดันน้ำที่จ่ายมายังก๊อกหรือบ้านต่ำเกินไป** | • ตรวจสอบก๊อกอื่นภายในบ้านเพื่อให้มั่นใจว่าน้ำของบ้านมีแรงดันเพียงพอ และไม่มีสิ่งกีดขวางการไหล ถอดสายท่อจ่ายเข้าออกจากเครื่องซักผ้า แล้วเปิดน้ำให้ไหลผ่านสายท่อสองถึงสามแกลลอน เพื่อล้างสายท่อจ่ายน้ำ ถ้าอัตราการไหลต่ำเกินไป โปรดติดต่อช่างประปาเพื่อทำการซ่อมท่อน้ำ |
| | **ท่อจ่ายน้ำเชื่อมต่ออยู่กับสายท่อแบบจำกัดการรั่ว** | • สายท่อชนิดที่ได้รับการออกแบบมาเพื่อจำกัดการรั่วอาจตัดการจ่ายน้ำอย่างไม่ถูกต้อง และทำให้เครื่องซักผ้าไม่ได้รับการเติมน้ำ ไม่แนะนำให้ใช้สายท่อชนิดจำกัดการรั่ว |
| **เปิดเครื่องซักผ้าไม่ได้** | **ไม่ได้เสียบปลั๊กไฟอย่างถูกต้อง** | • ตรวจสอบให้แน่ใจว่าได้เสียบปลั๊กอย่างมั่นคงเข้ากับเต้าเสียบแบบ 3 ขาที่มีการต่อกราวด์ไว้ขนาด 220 VAC, 50 Hz. |
| | **ฟิวส์ของบ้านขาด เซอร์กิตเบรกเกอร์ตัด หรือกระแสไฟฟ้าขัดข้อง** | • รีเซ็ตเซอร์กิตเบรกเกอร์หรือเปลี่ยนฟิวส์ ห้ามเพิ่มขนาดฟิวส์ ถ้าปัญหาเกี่ยวข้องกับวงจรไม่สามารถรองรับปริมาณกระแสไฟฟ้าได้เพียงพอ โปรดมอบหมายให้ช่างไฟฟ้าที่มีคุณสมบัติทำการแก้ไข |

| ปัญหา | สาเหตุที่เป็นไปได้ | วิธีแก้ไข |
|---|---|---|
| **น้ำระบายออกจากเครื่องซักผ้าช้าหรือไม่มีการระบายน้ำ หรือส่วนแสดงผลแสดงดังนี้:**  | **สายท่อระบายน้ำคดงอ ถูกบีบทับ หรืออุดตัน** | • ตรวจสอบให้แน่ใจว่าสายท่อระบายปราศจากการอุดตัน การคดงอ และอื่นๆ และไม่ถูกบีบทับอยู่ที่ด้านหลังหรือใต้เครื่องซักผ้า |
| | **ท่อระบายน้ำอยู่สูงกว่าฐานของเครื่องซักผ้าเกิน 100 ซม.** | • ทำการปรับหรือซ่อมท่อระบายน้ำ ท่อระบายน้ำจะต้องไม่สูงกว่า 100 ซม. |
| **เครื่องซักผ้าส่งเสียงหลายครั้งติดต่อกันก่อนการล้างครั้งสุดท้าย** | **ลักษณะดังกล่าวไม่ใช่ข้อผิดพลาด นี่เป็นสัญญาณเตือนให้เติมน้ำยาปรับผ้านุ่มก่อนทำการล้างครั้งสุดท้าย** | • โปรดดูที่ การใช้น้ำยาปรับผ้านุ่ม สำหรับคำแนะนำในการเติมน้ำยาปรับผ้านุ่มลงในผ้า<br>• หากต้องการปิดหรือเปิดการเตือนเติมน้ำยาปรับผ้านุ่ม ให้กดปุ่ม "Tub Clean" (ล้างถังซัก) และ "Extra Rinse" (เพิ่มการล้าง) พร้อมกันและค้างไว้เป็นเวลาสามวินาที |
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **ถ้าการปรับสมดุลใหม่ (โปรดดูด้านบน) ไม่เสร็จสมบูรณ์ ข้อผิดพลาดนี้จะแสดงขึ้น** | • การพยายามปรับสมดุลผ้าใหม่ไม่เสร็จสมบูรณ์ รอบการทำงานนี้ถูกหยุดไว้ชั่วคราว เพื่อให้สามารถปรับตำแหน่งผ้าด้วยตนเองได้ |
| | **ปริมาณผ้าน้อยเกินไป** | • ถ้าผ้ามีปริมาณน้อย อาจจำเป็นต้องเพิ่มผ้าเพื่อให้เครื่องซักผ้าสามารถปรับสมดุลของผ้าได้ |
| | **บรรจุผ้าที่มีน้ำหนักมากรวมกับผ้าที่มีน้ำหนักเบา** | • ผ้าที่บรรจุอาจมีทั้งผ้าที่มีน้ำหนักมากและผ้าที่มีน้ำหนักเบา พยายามซักผ้าที่มีน้ำหนักใกล้เคียงกันเสมอ เพื่อให้เครื่องซักผ้าสามารถกระจายน้ำหนักของผ้าได้อย่างสม่ำเสมอสำหรับการปั่น |
| | **ผ้าไม่สมดุล** | • ปรับการกระจายของผ้าด้วยตนเอง ถ้าพบว่าผ้ามีการเกี่ยวพันกันและทำให้ระบบการกระจายน้ำหนักอัตโนมัติไม่สามารถทำงานได้อย่างถูกต้อง |
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **ข้อผิดพลาดในการควบคุม** | • ถอดปลั๊กและสายไฟ จากนั้นติดต่อศูนย์บริการ LG ใกล้บ้าน |
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **ระดับน้ำสูงเกินไป เนื่องจากวาล์วน้ำผิดปกติ** | • ปิดก๊อกน้ำ ถอดปลั๊กเครื่องซักผ้า แล้วติดต่อศูนย์บริการ |
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **เซ็นเซอร์วัดระดับน้ำทำงานไม่ถูกต้อง** | • ปิดก๊อกน้ำ ถอดปลั๊กเครื่องซักผ้า แล้วติดต่อศูนย์บริการ |
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **เกิดข้อผิดพลาดเกี่ยวกับมอเตอร์** | • ปล่อยเครื่องซักผ้าทิ้งไว้ 30 นาที จากนั้นเริ่มรอบการทำงานอีกครั้ง ถ้ายังคงพบรหัสข้อผิดพลาด LE อยู่ โปรดติดต่อศูนย์บริการ |

| ปัญหา | สาเหตุที่เป็นไปได้ | วิธีแก้ไข |
|---|---|---|
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **ถึงเวลาเรียกใช้รอบการทำงาน "Tub Clean" (ทำความสะอาดถังซัก)** | • ทำให้ถังซักว่างเปล่า เติมสารละลายเจือจางระหว่างน้ำยาฟอกขาว 1/4 ถ้วย กับน้ำ 1 ควอร์ต ลงในถังซัก แล้วเลือกรอบการทำงาน "Tub Clean" (ทำความสะอาดถังซัก)<br>• หากต้องการข้ามรอบการทำงาน "Tub Clean" (ทำความสะอาดถังซัก) เมื่อมีการแจ้งเตือน ให้กดปุ่มเลือกรอบการทำงาน ข้อความดังกล่าวจะยังคงแสดงต่อไปในรอบการซักสองถึงสามรอบ จากนั้นจะไม่แสดงขึ้นอีกจนกว่าจะถึงการทำความสะอาดถังซักตามกำหนดครั้งต่อไป |
| **สิ่งที่ส่วนแสดงผลแสดง:**  | **ใช้งานเครื่องซักผ้าแบบแท่นวางโดยไม่มีเครื่องซักผ้าขนาดปกติ** | • เครื่องซักผ้าแบบแท่นวางไม่สามารถทำงานเครื่องเดียวตามลำพังได้ โดยจะต้องวางซ้อนอยู่ใต้เครื่องใช้ไฟฟ้าขนาดปกติของ LG |
| | **สวิตช์เรียงซ้อนไม่ทำงานอย่างถูกต้อง** | • สวิตช์เรียงซ้อนจะไม่สามารถทำงานได้อย่างถูกต้องถ้าซ้อนเครื่องอยู่ใต้เครื่องใช้ไฟฟ้าที่ไม่ใช่ของ LG หรือเครื่องใช้ไฟฟ้าของ LG ที่ผลิตก่อนปี 2009 |


LG
Life's Good