

LG
Life's Good

Quick Start Guide


LED TV
50/55/65US660H*



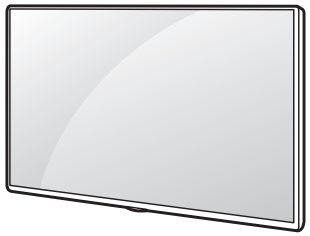










a X 4
(M4 X L16)
50/55US660H*



b X 6
(M4 X L20)
65US660H*







Unpacking
Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.
*Image may vary depending on models

⊕ : Depending on model ⊕ Depending upon country



www.lg.com

MFL67360857
P/No: MFL67360857 (2007-REV00)

English

- Read **Safety and Reference.**
- For the power supply and power consumption, refer to the label attached to the product.




CAUTION


Image shown may differ from your TV.

When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.


1

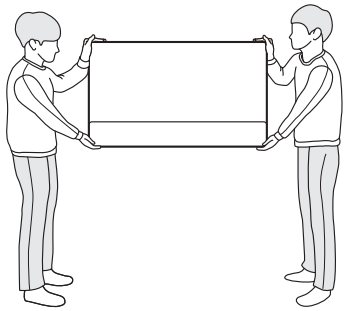

2

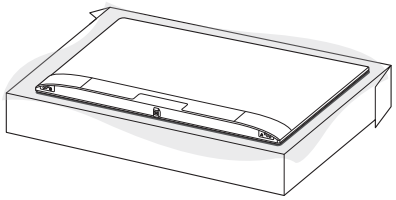


3

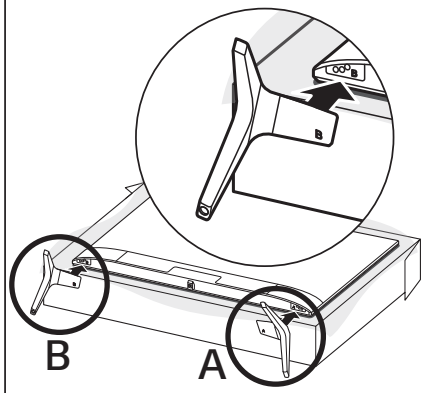





4

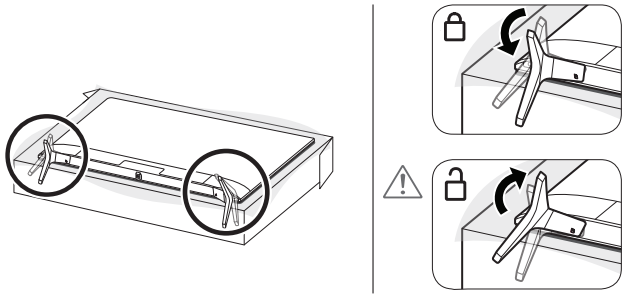


5-A 50/55US660H*

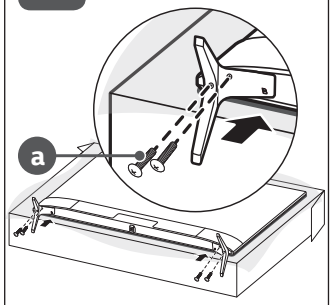


5-B 65US660H*

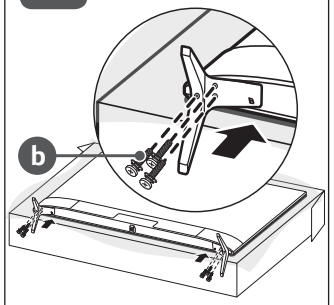

6

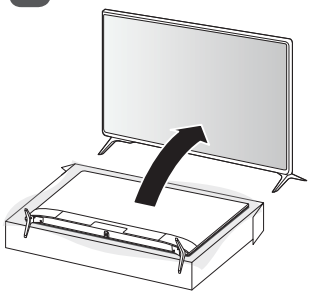


7

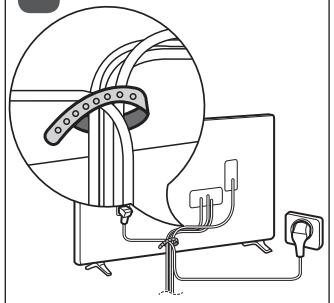

CAUTION

Image shown may differ from your TV.


When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

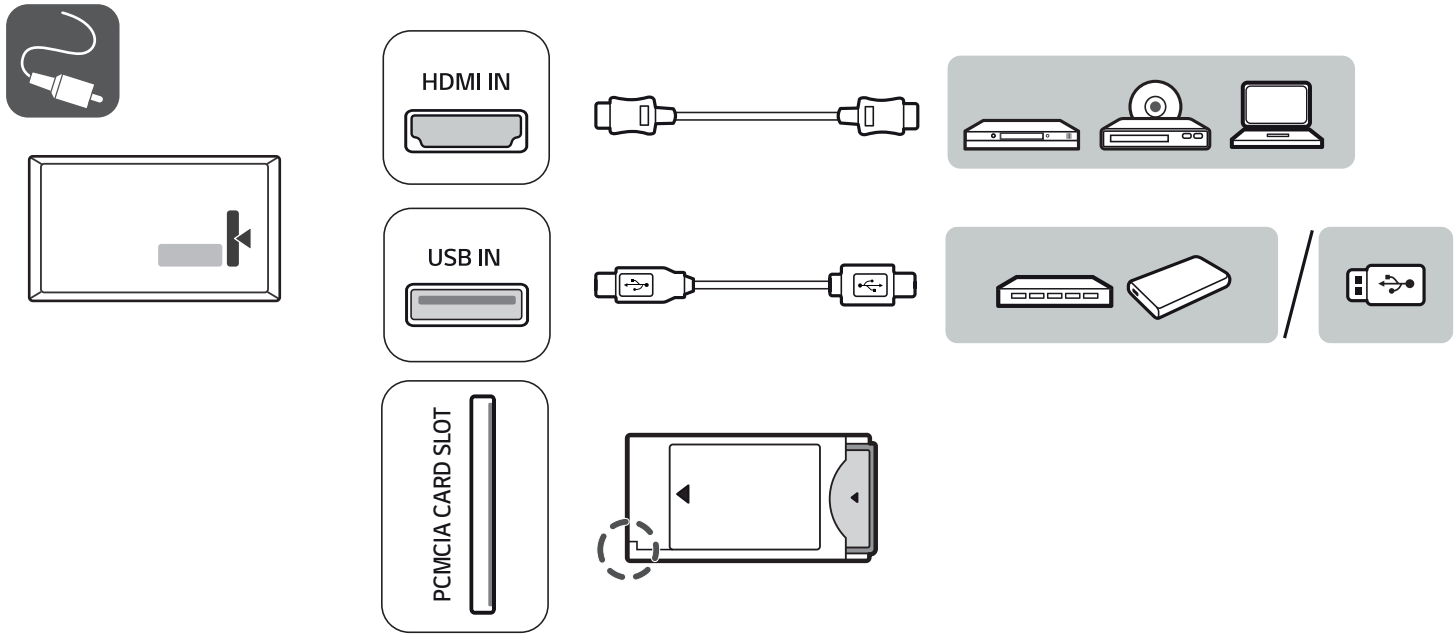

NOTE

Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included along with the TV set.



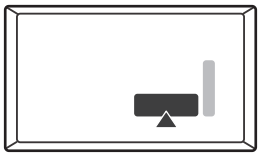

NOTE

Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included along with the TV set.

ANTENNA / CABLE IN


Satellite IN


HDMI IN/ARC

HDMI IN


OPTICAL DIGITAL AUDIO OUT


EXTERNAL SPEAKER OUT





























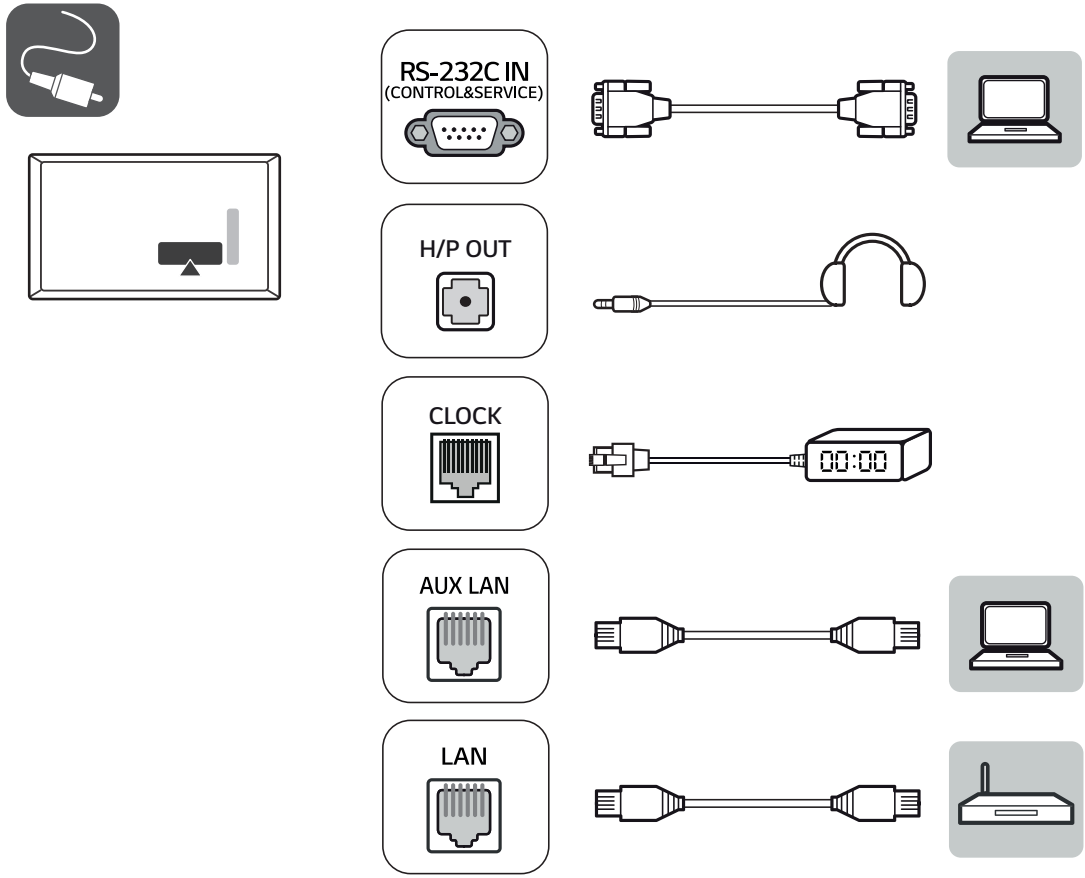

NOTE


Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included along with the TV set.

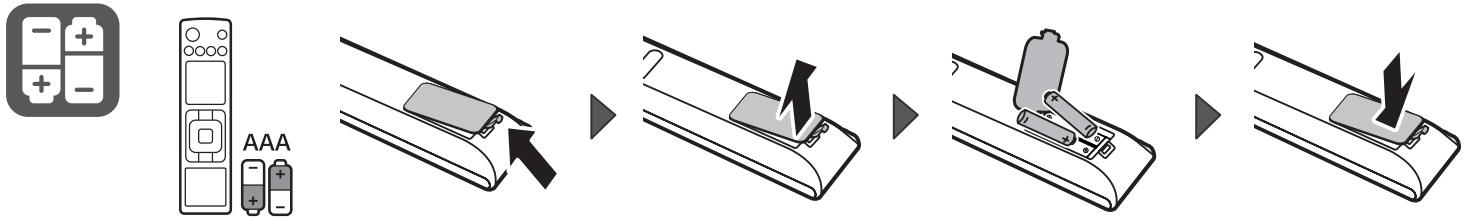



NOTE
Image shown may vary depending on model.



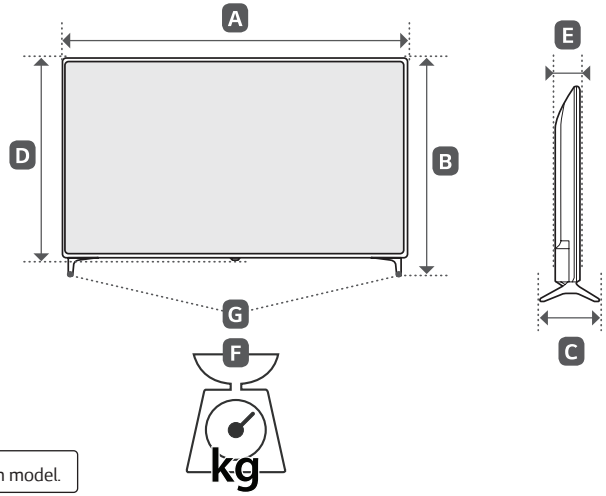

NOTE

Image shown may vary depending on model.

	A	B	C	D	E	F	F-G
	(mm)					(kg)	
50US660H0GD 50US660H0TD	1130	722	231	663	86.3	11.5	11.3
55US660H0GD 55US660H0TD	1244	786	231	726	87.1	14.5	14.3
65US660H0TD	1463	914	269	850	87.8	21.6	21.3
Power requirement					AC 100-240 V ~ 50 / 60 Hz		