INSTALLATION

Installation area

- Set on flat and firm floor.
- Incorrect installation may course severe noise and break down.



- Maintain more than 10 cm. between the side of drain hose and the wall.
- A carpet must not obstruct the ventilation openings.



Connecting the earth wire

- Install the earth wire to prevent short-circuit due to leaking current and electric shock.
- It is attached at the back of the washer. Connect it to the metal water pipe. If the water pipe is made of plastic, it does not have the earth effect.
- Do not connect the earth wire to the gas pipe, lightning arrester, telephone connecter, etc..

"Warning - the appliance with two pronged plug must be grounded.

Connecting the power plug

- Insert the power plug into the outlet.
- Before connecting the power plug, check if the voltage setting of the washer matches the outlet voltage.
- If AC outlet with ground terminal is used, grounding is not needed. if not, never forget earthing.
- The appliance must be positioned so that the plug is accessible.

Other earthing method

- After connecting the earth wire to the earth copper plate, bury it at least 75cm deep under the wet ground.



- Connecting to the earthing-only outlet.



- When installing it in an area where earthing is not possible, purchase a short-circuit breaker connect it to the outlet.



Connecting the drain hose

- Connect the drain hose to the outlet of the plunger valve located at the back side.
- Push the clamp toward the body of the washing machine as shown in the figure.



- Be sure to reroute the hose so that it is not kinked, kinks or sharp bending in the hose will prevent proper drainage.
- Make sure water is drained smoothly by placing a base under the machine or by applying other appropriate mean.



Installation

- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate socket outlet that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the power cord provided with the appliance.

INSTALLATION & HOW TO WASH

Before washing

1. Check the washing instruction labels on the clothing to be washed.
2. Remove all objects from the pockets of the clothing.Objects left in the pockets may damage clothing or break the washing machine (could cause the drain hose to clog).
3. After separating oiled or dyed clothing, wash.
4. For your convenience hang up the wash cover on the right or left side of the washing machine tub when not in use.
5. Check and clean detergent box before washing.

Remove this before washing



How to wash

1 Set the drain selector
Set as "Wash•Rinse" position.



2 Set the water selector to "WASH"



3 Put the appropriate amount of detergent and the laundry into the wash tub. And add water to the desired water level which you want.



4 Open water supply and fill water till water level mark "H". That is because clothes can absorb adequate amount of water and water will not short.



5 Select the wash program to "Gentle", "Normal" or "Strong" according to the kinds and quantity of the laundry. (Refer to Tabel 2)



6 Set the desired wash time.

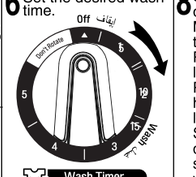

7 When washing is finished, locate the drain selector to "Drain" position and drain the water out.

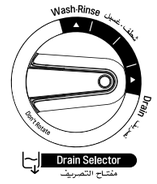

8 Spinning in the spin dryer basket.
Move the laundry into the spin dryer basket. Put the laundry down lightly.
Place the safety cover horizontally on the laundry.
Set the desired spin time with the spin timer.



HOW TO RINSE & HOW TO SPIN

Interim spin rinse

- Interim spin rinse prior to regular rinsing helps removing sudsy water from the laundry and improve rinsing efficiency. Also is helpful to water saving.

1 After washing.
- Move the laundry into the spin dryer basket.
- Place the safety cover horizontally on the laundry.



2 Set the water selector to "SPIN"



3 Set the desired spin flow appropriately.



4 After interim spin rinse, move the laundry into the wash tub for rinsing.



Note for spinning

1. Put the laundry evenly into the spin dryer basket.
2. Put the laundry down lightly.
3. Place the safety cover horizontally over the laundry, washing machine will be damage if the safety cover is not placed.
4. Close the spin dryer cover.
5. Do not drain the water out of the wash tub while the spin dryer basket is in operation.
- If the spin dryer basket is off-balance and vibrates excessively, stop the spinning, rearrange the clothes evenly, and then resume spinning.



CARE & MAINTENANCE

Rotation filter-C & Detergent box

1. Pull the overflow filter forward from the wash tub in the direction of the arrow.
2. Lift up the area Ⓐ of the over flow filter and take out the rotation filter-C by pulling in direction as shown.
3. Turn the net over and rinse in water ,use a brush to remove the lint which has adhered to the overflow filter.
4. Pull the detergent box follow the arrow direction in picture 4.
5. Press at side of detergent box and rotate down follow the arrow direction in picture 5.
6. Clean detergent box with water.
7. Reverse method for assemble rotation filter-C and detergent box.

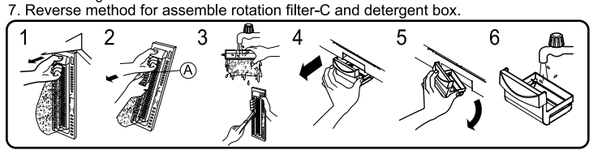

REFERENCE

TABLE 1. WEIGHT GUIDE FOR CLOTHES

Type of clothing	Type of fabric	Weight per piece
Under shirt	Cotton	150g(5.3oz)
Handkerchief	Cotton	50g(1.8oz)
Bath towel	Cotton	300g(10.6oz)
Shirt	Mixed fabric	200g(7.1oz)
Socks (1 pair)	Mixed fabric	50g(1.8oz)
Pajama (shirt and pants)	Cotton	500g(17.6oz)
Winter undershirt	Cotton	600g(21.2oz)
Workclothes	Mixed fabric	800g(28.2oz)
Blouse	Mixed fabric	200g(7.1oz)

TABLE 2. GUIDE FOR WASHING

Type of fabric	Wash Selector	Amount of laundry (kg)	Water Level	Amount of Water (l)	Amount of detergent (g)
Synthetics, Silk, Woolen, Knits	Gentle	4.0 ~ 5.0	-	40	40
Cotton, Linen	Normal	5.0 ~ 6.5	-	50	50
Very soiled cotton and linen	Strong	6.5 ~	H	60	60

- Amount of laundry is based on dry laundry.
- Detergent amount is based on a general synthetic detergent.
- If washing and spinning must be operated together, starting washing and spinning operation shall be done at the same time to cope with EMC requirement.

TROUBLESHOOTING GUIDE

Before Requesting Service

Problem	Checking point
Motor does not operate,	• Is the power cord firmly plugged in? • Is the timer turned to a suitable point except "Off" ?
Spin dryer basket does not operate.	• Is there any clothing dropped between the basket and tub? • Is the spin dryer cover closed? • Is the laundry gathered to one side of the spin dryer basket?
No draining	• Is there lint stuck in the plunger valve? • Is the end of the drain hose guide located at an exceed height?

LG Life's Good

امسح كود QR للإطلاع على الدليل.

دليل المالك

غسـالة الملابس

قبل البدء في تركيب الجهاز ، اقرأ هذه التعليمات بعناية. حيث سيبسط ذلك عملية التركيب ويضمن تركيب الجهاز بشكل صحيح وآمن. واحتفظ بهذه التعليمات بالقرب من المنتج بعد التركيب للرجوع إليها في المستقبل.

AR العربية

WTT0807OM

MFL71743329

www.lg.com

حقوق النشر 2025 إل جي للالكترونيات. كل الحقوق محفوظة

المزايا



١ مدخل تزويد الماء
صل خرطوم تزويد الماء من هذا المدخل إلى حنفية الماء لتزويد الحوض بالماء

٢ مفتاح اختيار الماء
اختر "غسيل" لتزويد الماء للغسيل والشطف واختر "تنويع" للشطف الدوار بالرش المائي

٣ مؤقت الغسيل
اختر الوقت المناسب للغسيل أو النقع. أقصى وقت هو ٣٥ دقيقة
الفترة من ١٦ إلى ٣٥ دقيقة ستقوم الآلة بالتنقل بين النقع والغسيل

٤ برنامج الغسيل
قم بضبط برنامج الغسيل على "هادي"، أو "عادي"، أو "قوي" طبقا لنوع وكمية الغسيل

٥ مفتاح اختيار التصريف
اختر "غسل شطف" للغسيل والشطف واختر "تصريف" لتصريف الماء من الحوض واختر "إيقاف" لايقاف مضخة التصريف عن العمل

٦ مؤقت التنشيف
اختر الوقت المناسب للتنشيف. أقصى وقت هو ٥ دقائق
ولكن لا يجب أن يستمر ذلك لثلاث دورات متتالية. ولا تلف المفتاح لأكثر من الوقت المقرر
إذا تم استخدام برنامج التنشيف ٣ مرات متتالية ، فلا تستخدم الجهاز لمدة ساعة على الأقل. وإلا فقد يتلف محرك التنشيف

التخلص

- قبل التخلص من جهاز قديم، قم بفصله. اقطع الكابل الموجود خلف الجهاز مباشرةً لمنع سوء استخدامه.
- تخلص من جميع مواد التعبئة (مثل أكياس البلاستيك ومادة الستايروفوم) بعيدًا ا عن متناول الأطفال، إذ يمكن لمواد التغليف أن تسبب الاختناق.

تنبيه

اقرأ جميع معلومات السلامة وتعليمات التركيب قبل الاستخدام

اتبع جميع التعليمات الواردة في هذا الدليل للحد من خطر اندلاع حريق أو التعرض لصدمة كهربائية، ولمنع تضرر الممتلكات أو حدوث إصابة شخصية أو خسائر في الأرواح

التركيب
- لا تركب الغسالة في مناطق معرضة للثلوج أو الأمطار أو الأحوال الجوية
- قم بتركيب الغسالة على دعامة أفقية، والأقدام تتسبب في اهتزازات وضوضاء

المواد المتطايرة
- لا تستخدم مواد متطايرة مثل البنزين، والجازولين، والكيروسين والمبيدات الحشرية
- لا تترك المواد الكيميائية القوية مثل المبيض في الحوض، حيث قد يحدث تلف للسطح البلاستيكي والجزء المطاطي

منطقة التبديل
- تجنب وصول الماء إلى منطقة التبديل، حيث قد يتسبب بالتآكل في لصدمة كهربائية أو اندلاع حريق

الماء الساخن
- تجنب استخدام الماء الساخن الذي تزيد درجة حرارته عن ٥٠ درجة مئوية، حيث قد يشوه القطع البلاستيكية أو يسبب عطل

محرك دوران
- بعد الاستمرار في استخدام برنامج الدوران حتى ٣ مرات، ارجي إيقاف الدوران لأكثر من ١ ساعة والأقد يتلف محرك الدوران أو يحترق

الحرارة
- تجنب استخدام المدفأة الكهربائية، وضوء الشمعة، وولاعة السجائرو المدخن وما إلى ذلك، بالقرب من الغسالة، حيث قد يتسبب في اشتعال الجزء البلاستيكي أو تشوهه

عند التشغيل
- لا تضع يدك في سلة تجفيف الملابس أثناء تشغيل الغسالة
- لا تقم بتصريف المياه خارج حوض الغسل عندما تكون سلة تجفيف الملابس قيد التشغيل، والأقد يتلف محرك الدوران
- أثناء الدوران، إذا لم تتوقف سلة تجفيف الملابس في غضون 15ثانية من فتح الغطاء، افصل الكهرباء على الفور واتصل بالخدمة

سلك الطاقة وقابس الطاقة
- لا تتلف الغسالة أو تثنيها أو تلويها أو تضع أي أشياء ثقيلة عليها
- إذا تلف سلك الإمداد، ينبغي استبداله من قبل جهة التصنيع أو وكيل الخدمة أو شخص بنفس الكفاءة
- امسح الغبار أو الأتربة من على أجزاء تلامس قابس الطاقة، حيث قد يتسبب بالدلاع حريق

المأخذ الكهربائي
- لا تلمس قابس الطاقة بيد مبللة، حيث قد تتعرض لصدمة كهربائية
- افصل سلك الإمداد عند عدم استخدام الغسالة لمدة طويلة
- **تجنب توصيل عدة أجهزة كهربائية بمأخذ واحد، حيث قد يتسبب ذلك بالدلاع حريق**

- خصص هذا الجهاز لاستخدام الأفراد بما في ذلك الأطفال الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية، أو ليس لديهم خبرة ومعرفة، ما لم يتم الإشراف عليهم أو تقديم الإرشادات لهم المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن السلامة، كذلك يجب الإشراف على الأطفال للتأكد من عدم عبثهم بالجهاز
- لا تسمح للأطفال باللعب في الغسالة أو بها أو بداخلها
- لا تضغط على الغسالة أو تضع أي أشياء ثقيلة عليها
- لا تفصل أي غطاء وملابس مقاومة للماء، أو تشطفها أو تجففها
- وصل الغسالة بمأخذ الكهرباء المؤرض وفقا لجميع القوانين واللوائح المحلية
- افصل مصدر الطاقة قبل التنظيف أو إجراء الصيانة، افصل سلك الطاقة عن طريق مسك القابس بيد جافة لا تمسك السلك
- استخدم خرطوما جديدا أو مجموعة الخراطيم المرفقة مع الجهاز. علما بأن إعادة استخدام الخراطيم القديمة قد تؤدي إلى تسرب المياه وبالتالي تلف الممتلكات
- يجب عدم تصليح الوحدات أو تفكيكها أو تعديلها من قبل أي شخص إلا التقنيين المأذون لهم
- يجوز بيع هذا المنتج في دول أسيا، والشرق الأوسط وأفريقيا فقط، وهو يمتثل للمتطلبات التنظيمية في هذه البلدان لا يجوز بيع هذا المنتج خارج هذه الأراضي لا يمكن أن تضمن LG Electronics امتثال هذا المنتج للمتطلبات التنظيمية في المناطق البلدان الأخرى ولا تتحمل مسؤوليته
- تشير احتياطات السلامة إلى عدم إمكانية تركيب الغسالة في مكان رطب
- يجب فهم احتياط السلامة الوارد على الغسالة التي يمكن فتح غطاءها اثناء تصريف المياه، والقائل بانه إذا استغرق ١٥ ثانية او اكثر في الإيقاف الكلي لحوض تصريف المياه، على أنه مشكلة.
- خصص هذا الجهاز للاستخدام في المنزل والاستخدام المماثل

- إذا استُخدم هذا الجهاز لغرض تجاري، فلن يكون خاضعا لتضمان.
(على سبيل المثال،أماكن عامة مثل حمام عام، نزل، مركز تدريب، سكن)
ذا تم تركيب المنتج خارج منطقة الخدمة الطبيعية، يتحمل المالك أيتكلفة تنتج عن النقل الخاص بتصليح المنتج او استبدال الجزء المعطل
*ملاحظة: تجنب استخدام الماء الساخن الذي تزيد درجة حرارته عن ٦٠ درجة مئوية(بالنسبة للمملكة العربية السعودية فقط)

المواصفات

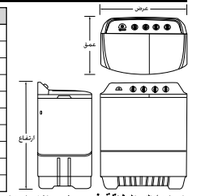

الطراز	WTT0807OM
مصدر الطاقة	230 V~, 60 Hz
مستوى الماء	مرتفع : 60 لتر
نقاط الفحص	أقل من 100 ك بأسكال (١ كغم قوة / سم)
الأبعاد(ملم)	975 x 480 x 795 (عرض × عمق × ارتفاع)
وزن المنتج	24 كغم
السعة (غسل/تجفيف)	الغسل: 8 كغم التجفيف: 5.5 كغم
الدخل المقنن	الغسل: 550 W / التجفيف: 260 W
استهلاك الطاقة السنوي	290 كيلووات لكل ساعة
استهلاك المياه السنوي	15840 لتر
رقم IP (درجة الحماية)	IPX4

استهلاك الطاقة في وضع الاستعداد : 0.50 واط

اختبار طبقا للمواصفة SASO 2885 (متطلبات أداء الطاقة والمياه)

قطن 60 (حمولة كاملة)

خطوة	العملية	قطن 60 (حمولة كاملة) الإعدادات (بالدقائق)				إمداد المياه (مستوى الماء) قطن 60 (حمولة كاملة)		عدد المرات	الوقت الكلي
		نقع	غسيل	تجفيف	شطف	ساخن	بارد		
1	غسيل	20	15	-	29	11		1	35 الدقائق
2	تجفيف	-	-	5	-	-		2	10 الدقائق
3	شطف	20	15	-	46	-		1	35 الدقائق
4	تجفيف	-	-	5	-	-		2	10 الدقائق

قطن 60 (نصف حمولة)

خطوة	العملية	قطن 60 (نصف حمولة) الإعدادات (بالدقائق)				إمداد المياه (مستوى الماء) قطن 60 (نصف حمولة)		عدد المرات	الوقت الكلي
		نقع	غسيل	تجفيف	شطف	ساخن	بارد		
1	غسيل	20	15	-	16	7		1	35 الدقائق
2	تجفيف	-	-	5	-	-		1	5 الدقائق
3	شطف	20	15	-	35	-		1	35 الدقائق
4	تجفيف	-	-	5	-	-		1	5 الدقائق

قطن 40 (نصف حمولة)

خطوة	العملية	قطن 40 (نصف حمولة) الإعدادات (بالدقائق)				إمداد المياه (مستوى الماء) قطن 40 (نصف حمولة)		عدد المرات	الوقت الكلي
		نقع	غسيل	تجفيف	شطف	ساخن	بارد		
1	غسيل	20	15	-	8	15		1	35 الدقائق
2	تجفيف	-	-	5	-	-		1	5 الدقائق
3	شطف	20	15	-	-	35		1	35 الدقائق
4	تجفيف	-	-	5	-	-		1	5 الدقائق

اختيار الوضع:
الغسيل/الشطف: الوضع العادي

التركيب كيفية الغسيل

قبل الشروع في الغسيل

١. اقرأ تعليمات الغسيل المكتوبة على البطاقات الملصقة على الملابس المعدة للغسيل.
٢. أخرج الأشياء الموجودة في جيوب الملابس. الأشياء الموجودة في الجيوب ربما أحدثت تلفًا في الملابس أو الغسالة. (هذا قديؤدي إلى انسداد خرطوم التصريف)
٣. ابدأ عملية الغسيل بعد فصل الملابس المعالجة بالزيت أو المصبوغة.
٤. من الأفضل تعليق غطاء الغسالة على الطوق الخاص بذلك أو على الجانب الأيسر من حوض الغسالة عند عدم استخدامها.
٥. افحص ونظّف صندوق منظّف الغسيل قبل الغسيل.

قم بإزالة هذه الأشياء قبل عملية الغسيل



عملية الغسيل

١ قم بضبط مؤشر الصرف
للموديل بالمتجة قم بالضبط على وضع "غسيل شطف"



٢ ضع مفتاح تزويد المياه في حوض الغسيل.



٣ ضع كمية مناسبة من المنظفات والملابس في حوض الغسيل.
وأضف الماء حتى يصل إلى مستوى الماء المرغوب فيه إذا أردته.



٤ افتح مصدر الماء واملأ الغسالة إلى أن يصل الماء إلى مستوى علامة الصنبور المطلوب. ينبغي ذلك الفرصة للملابس لامتصاص كمية كافية من الماء وكذلك عدم حدوث نقص في الماء.



٥ حدد برنامج الغسيل على "لطيف". أو "عادي". أو "قوي". طبقًا لنوع وكمية الغسيل.
(ارجع إلى الجدول رقم ٢)

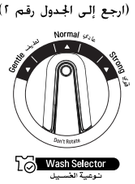

٦ اضبط وقت الغسيل المرغوب فيه.



٧ عند الانتهاء من الغسل، اضبط مفتاح اختيار التصريف على موضع "اصرف" لتصريف الماء إلى الخارج.

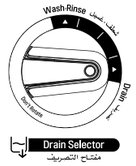

٨ الدوران في سلة التجفيف. ضع ملابس الغسيل في سلة التجفيف.
ضع الملابس في قاع حوض الغسيل بخفة
ضع غطاء السلامة أفقيًا فوق حوض الغسيل. اضبط وقت الدوران مع مؤقت الدوران



التركيب

منطقة التركيب

- ركّب الجهاز على أرضية مستوية وثابتة.
- التركيب غير الصحيح ربما يؤدي إلى إحداث ضجيج شديد وتعطل الجهاز.



- اترك مسافة أكثر من ١٠ سم بين جانب خرطوم التصريف والحائط.
- لابد من عدم سد فتحات التهوية بالسجادة.



توصيل السلك الأرضي

- ركّب السلك الأرضي لمنع حدوث قطع كهربائي نتيجة لتسرب التيار والصدمة الكهربائية.
- السلك الأرضي مركب في ظهر الغسالة. أوصل السلك إلى أنبوب الماء المعدني. إذا كان أنبوب الماء مصنوعًا من البلاستيك فليس لديه توصيل أرضي.
- لا توصل السلك الأرضي مطلقًا إلى أنبوب الغاز أو واقية الصواعق أو وصلة التليفون إلخ.

تحذير – أوصل السلك الأرضي أولاً قبل توصيل قابس الطاقة إلى مخرج التيار في الجدار.

توصيل القابس

- أوصل قابس الطاقة إلى مأخذ التيار.
- قبل توصيل قابس الطاقة. افحص إذا كان ضبط فولتية الغسالة يتطابق معفولتية مخرج التيار.
- إذا تم استخدام مصدر للتيار المتردد ذا طرف أرضي. فلن تكون هناك حاجة إلى توصيل السلك الأرضي. وإذا لم يتوفر ذلك. فلا تنس أبدًا عملية توصيل السلك الأرضي (ارجع إلى طريقة توصيل السلك الأرضي أعلاه).
- يجب أن يتم وضع الغسالة في مكان يسمح بالوصول إلى القابس.

طريقة تأريض أخرى

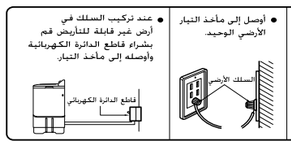

توصيل خرطوم التصريف

- ومثل خرطوم التصريف بالمأخذ الكهربائي للصمام الضاغط الموجود على الجانب الخلفي.
- ادفع المشبك نحو هيكل الغسالة حتى يصبح الموضع في الشكل
- تأكد من إعادة توجيه الخرطوم حتى لا يلتوي، ستمنع الالتواءات والانحناء الحاد في الخرطوم التصريف السليم.
- تأكد من تصريف المياه بسلاسة بوضع قاعدة تحت الغسالة أو باستخدام وسيلة أخرى مناسبة.



التركيب

- يجب تأريض هذا الجهاز . في حالة حدوث أي خلل أو عطل، سيحد التأريض من خطر التعرض لصدمة كهربائية من خلال توفير مسار أقل مقاومة للتيار الكهربائي.
- يأتي هذا الجهاز مزودًا بسلك طاقة يحتوي على موصل تأريض للجهاز وقابس طاقة بوصلةتأريض. يجب توصيل قابس الطاقة بمقبس تيار مناسب مثبت ومؤرض وفقًا لجميع القوانين واللوائح المحلية.
- يمكن أن يؤدي توصيل موصل حماية غير مناسب إلى خطر التعرض لصدمة كهربائية. استشر كهربائيًا أو موظف خدمة مؤهلاً إذا كان لديك أي شك حول ما إذا كان الجهازمؤرضًا بشكل صحيح أم لا.
- تجنب تعديل سلك الطاقة المقدم مع الجهاز.
- يجب توصيل الغسالة بخطوط المياه باستخدام مجموعات خراطيم جديدة ويجب عدم إعادة استخدام مجموعات الخراطيم القديمة

كيفية الشطف وكيفية الدوران

الشطف بإمداد الماء الاقتصادي

- الشطف الدوّار المتوسط قبل الشطف المنتظم يساعد في إزالة الماء الرغوي من الملابس وتحسين كفاءة الشطف. كما هو يساعد في توفير الماء.

١ بعد الغسيل.
- ضع الغسيل في السلة الدوارة.
- ضع غطاء السلامة على الملابس بشكل أفقي.



٢ قم بتحديد وضع مفتاح ضبط الماء على "دوران"



٣ قم بضبط تدفق الدوران المرغوب فيه بصورة مناسبة.



٤ بعد الشطف الدوّار المتوسط. انقل الملابس إلى حوض الغسيل للشطف.



ملاحظة حول الدوران

١. ضع الغسيل بهدوء في سلة اسطوانة التجفيف.
٢. ضع الملابس في قعر حوض الغسيل بخفة.
٣. ضع غطاء السلامة أفقيًا فوق الغسيل.
٤. أغفل غطاء اسطوانة التجفيف.
٥. ضع مؤشر وقت التجفيف على الوضع المناسب وقم بالدوران.

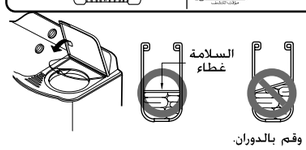

- إذا لم يتم وضع الملابس المتوازن في سلة التجفيف. يحدث اهتزاز للغاية. وفي هذه الحالة أوقف التجفيف وأعد وضع الملابس متساويًا. ثم قم بالتجفيف مرة أخرى.

العناية

مرشح الدوران – C وصندوق منظّف الغسيل.

١. قم بجذب مرشح الفائض إلى الأمام من حوض الغسيل باتجاه السهم.
٢. قم برفع الجزء Ⓐ الخاص بمرشح الفائض. وقم بجذب مرشح الدوران C باتجاه السهم كالمبين.
٣. قم بتحريك الشبكة وغسلها بالماء. استخدم يديك أو الفرشاة لإزالة النسالة التي التصقت بمرشح الفائض.
٤. اسحب صندوق منظّف الغسيل باتباع اتجاه السهم المبيّن في الشكل ٤.
٥. اضغط على جانب صندوق منظّف الغسيل ودوّر للاسفل باتباع اتجاه السهم المبيّن في الشكل ٥ .
٦. افحص ونظّف صندوق منظّف الغسيل قبل الغسيل.
٧. اعكس الطريقة لتجميع مرشح الدوران – C وصندوق منظّف الغسيل.

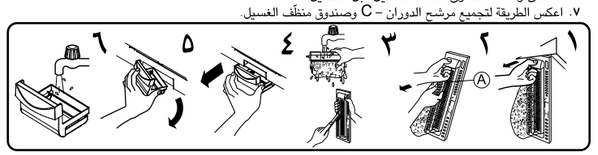

المرجع

جدول ١ – دليل الوزن للملابس

نوع الملابس	نوع القماش	وزن كل قطعة
قميص داخلي	قطن	١٥٠ غرام (٥,٣ أونس)
منديل	قطن	٥٠ غرام (١,٨ أونس)
منشفة حمام	قطن	٣٠٠ غرام (١٠,٦ أونس)
قميص	قماش مختلط	٢٠٠ غرام (٧,١ أونس)
جوارب قصيرة (زوج)	قماش مختلط	٥٠ غرام (١,٨ أونس)
بيجاما (قميص وبنطلون)	قطن	٥٠٠ غرام (١٧,٦ أونس)
قميص داخلي شتوي	قطن	٦٠٠ غرام (٢١,٢ أونس)
ملابس العمل	قماش مختلط	٨٠٠ غرام (٢٨,٢ أونس)
بلوزة	قماش مختلط	٢٠٠ غرام (٧,١ أونس)

جدول ٢ – دليل الغسيل

نوع القماش	مؤشر الغسيل	مؤقت الغسيل (كغم)	كمية الغسيل	مستوى الماء	كمية الماء (كجم)	كمية مادة التنظيف (غرام)
اصطناعيه. حرير. صوفية. محبوكة	لطيف	٢ ~ ٥ دقيقة	٤.٠ ~ ٥.٠ كغم	-	٤٠ لتر	٤٠ غرام
قطن. كتان	عادي	٥~١٠ دقيقة	٥.٠ ~ ٦.٥ كغم	-	٥٠ لتر	٥٠ غرام
قطن وكتان ثقيل الوسخ	قوي	١٠~١٥ دقيقة	٦.٥ كغم ~	ع	٦٠ لتر	٦٠ غرام

- يتم تحديد كمية الغسيل طبقًا لكمية الغسيل الجاف.
- يتم تحديد كمية المنظف طبقًا للمنظفات الصناعية العادية.
- إذا لزم الأمر إجراء عملية الغسيل والدوران معًا. يجب بدء إجراء عملية الغسيل والدوران في نفس الوقت للتوافق مع متطلبات EMC .

دليل تحري الخلل وإصلاحه

قبل طلب الخدمة

الأعطال	نقاط الفحص
المحرك (الموتور) لا يعمل	• هل كابل الطاقة موصل إلى القابس بصورة محكمة؟ • هل ساعة التوقيت موجهة إلى نقطة مناسبة غير موضع "إيقاف"؟
سلة التجفيف لا تعمل	• هل هناك أية ملابس ملقاة بين السلة وحوض الغسيل؟ • هل غطاء اسطوانة التجفيف مثبت؟ • هل الغسيل محشور إلى جانب واحد من سلة اسطوانة التجفيف؟
عدم تصريف	• هل قطعة من القماش تكون بصمام الخوض؟ • هل نهاية دليل خرطوم التصريف موضوعة في ارتفاع عال جدًا؟

SPECIFICATIONS

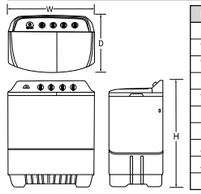

Model	WTT0807OM
Power Supply	230 V~, 60 Hz
Water Level	H : 60 Liters
Water Pressure	Less than 100 kPa (1 kgf/cm^2)
Dimension (mm)	795 x 480 x 975 mm (W x D x H)
Weight	24 kg
Max. Capacity	Wash : 8 kg, Spin : 5.5 kg
Rate Input	Wash 550 W / Spin 260 W
Annual Energy Consumption	290 kWh
Annual Water Consumption	15840 Liters
IP No.(Degree of protection)	IPX4

Standby Power Consumption : 0.50 W

Procedure to achieve the energy and water performance requirements specified in SASO 2885.

Table 1. Cotton60°C (Full Load)

Step	Process	Cotton60°C (Full Load) Dial Setting (Min.)			Supply Water (L) (Water High Level) Cotton60°C (Full Load)		Number of times	Total Time
		Soak	Wash	Spin	Hot	Cold		
1	Wash	20	15	-	29	11	1 Time	35 Min.
2	Spin	-	-	5	-	-	2 Times	10 Min.
3	Rinse	20	15	-	-	46	1 Time	35 Min.
4	Spin	-	-	5	-	-	2 Times	10 Min.

Table 2. Cotton60°C (Partial Load)

Step	Process	Cotton60°C (Partial Load) Dial Setting (Min.)			Supply Water (L) (Water High Level) Cotton60°C (Partial Load)		Number of times	Total Time
		Soak	Wash	Spin	Hot	Cold		
1	Wash	20	15	-	16	7	1 Time	35 Min.
2	Spin	-	-	5	-	-	1 Time	5 Min.
3	Rinse	20	15	-	-	35	1 Time	35 Min.
4	Spin	-	-	5	-	-	1 Time	5 Min.

Table 3. Cotton40°C (Partial Load)

Step	Process	Cotton40°C (Partial Load) Dial Setting (Min.)			Supply Water (L) (Water High Level) Cotton40°C (Partial Load)		Number of times	Total Time
		Soak	Wash	Spin	Hot	Cold		
1	Wash	20	15	-	8	15	1 Time	35 Min.
2	Spin	-	-	5	-	-	1 Time	5 Min.
3	Rinse	20	15	-	-	35	1 Time	35 Min.
4	Spin	-	-	5	-	-	1 Time	5 Min.

Mode Selection :
Washing / Rinsing : Normal Mode

LG
Life's Good

Scan the QR code to see the manual.

OWNER'S MANUAL

WASHING MACHINE

Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

EN ENGLISH

WTT0807OM

MFL71743329

www.lg.com
Copyright © 2025 LG Electronics Inc. All Rights Reserved

CAUTION

READ ALL SAFETY INFORMATION AND INSTALLATION INSTRUCTIONS BEFORE USE

Follow all instructions in this manual to minimize the risk of fire, electric shock and to prevent property damage, personal injury or loss of life.

Installation
- Do not install in areas exposed to snow, rain or to the weather.
- Install the washing machine on a horizontal support. Otherwise it may cause vibration and noise.

Switch Area
- Avoid watering on the switch area. It may cause electric shock or fire.

Spin Motor
- After continuous using spinning program 3 times, please stop spinning more than 1 hour. Otherwise the spin motor could be damaged of fired.

In Operation
- Do not put your hand into the spin dryer basket while the machine is in operation.
- Do not drain the water out of the wash tub while the spin dryer basket is in operation. Otherwise the spin motor could be damaged.
- If during opening, opening the lid does not stop the spin dryer basket within about 15 sec., immediately unplug and contact service.

Electric Outlet
- Avoid connecting several electric devices to single outlet. It may cause fire.

Volatile Material
- Do not use volatile material such as Benzene, Gasoline, Kerosene, Insecticide.
- Do not leave strong alkaline substance such as bleach inside the tub. Damage on plastic surface and rubber parts may occur.

Hot water
- Avoid using hot water over 50℃*. It may deform plastic parts or cause malfunction.

Heat
- Avoid electric heater, candle light, cigarette light, bug smoker, etc. near the machine. It may ignite or deform plastic part.

Power Cord and Plug
- Do not damage, bend, distort or place any heavy objects on its.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person.
- Wipe off dirt or dust on the contacts of the power plug. It may cause fire.
- Do not touch a power plug with a wet hand. It may cause electric shock.
- Unplug the supply cord when not using the washing machine for a long time.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not allow children to play on, with, or inside the washing machine.
- Do not step on the washing machine or place any heavy objects on it.
- Do not wash, rinse or spin dry the waterproof sheets and clothes.
- Connect the washing machine to a grounded outlet in accordance with all local codes and ordinances.
- Disconnect the power supply before cleaning or performing maintenance. Unplug the power cord by grasping the plug with dry hands. Never grasp the cord.
- Use new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- The units should not be repaired, disassembled or modified by any person except the authorized technicians.
- This product may only be sold in Asia, Middle East and African countries and complies with the regulatory requirements in these countries.
- This product may not be sold outside these territories. LG Electronics cannot guarantee and is not responsible for the compliance of this product with the regulatory requirements in other regions/countries.
- A precaution indicates that the washing machine shall not be installed at a humid place.
- A precaution on the washing machine whose lid can be opened during water extraction, that if it takes 15 s or more for complete stop of water-extracting chamber tub such a case should be understood as a trouble.
- This appliance is intended to be used in household and similar applications.

• If this product is used for commercial purpose, it is not warranted.
(Example : Public places such as public bathroom, lodging house, training center, dormitory)
If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product, or the replacement of a defective part, shall be borne by the owner.
*Remark : Avoid using hot water over 60℃ (Only for Saudi Arabia Country)

FEATURES

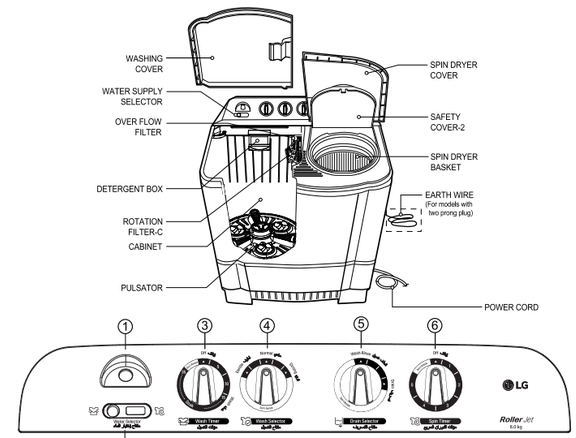

1. Water Supply Inlet
Connect here with the inlet hose from the water faucet to feed water to the tub.

2. Water Supply Selector
Select "WASH" to supply water for washing and rinsing and "SPIN" for spin shower rinse.

3. Wash Timer
Select the desired time for washing or rinsing. The maximum is 35 min. (Period 16~35 min. the machine will switch between washing and soaking.)

4. Wash Selector
Set the program to "Gentle","Normal", "Strong" according to kinds and quantity of the laundry.

5. Drain Selector
Select "Wash • Rinse" for washing and rinsing and "Drain" to drain the water out of the tub.

6. Spin Timer
Select the desired time for spinning. The maximum limit is 5 min. Don't rotate the the knob more than prescribe limit.

**Stop spinning program for more than 1 hour after using spinning program 3 times continuously. Otherwise, the spin motor could be damaged of fire or stop operation.

DISPOSAL

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.