
To enjoy more powerful sound, Please set the "SOUND LEVEL" as per below.

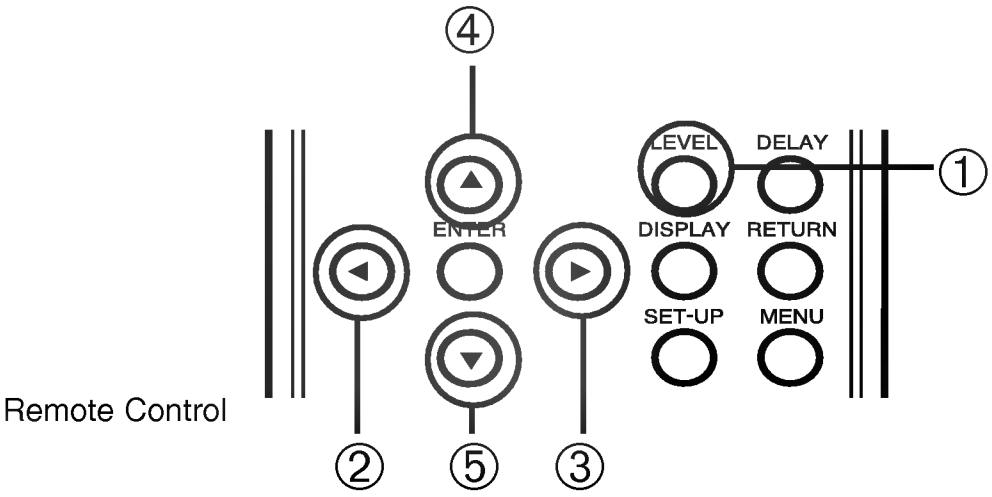

Press LEVEL.(①)

The LEVEL indicator will appear on the display window.

Press ◀(②)/▶(③) to select the speaker you want to set.

Each time you press the ◀(②)/▶(③) button, it is changed as the following order ;

FL(Front Left)→C(Center)→FR(Front Right)→SR(Surround Right)→SL(Surround Left)→SW(subwoofer)→FL•••

- On the 2 channel stereo mode, you can adjust the sound level of the SW(Subwoofer) only.

Press ▲(④)/▼(⑤) to adjust the sound level of the selected channel.

(-6dB to + 6dB, 1dB step)


To adjust the sound level of the other channels, Repeat step 2~3.

When the setting is completed, press LEVEL.

Connect the speakers using the supplied speaker cords by matching the colors of the terminals and those of the cords. To obtain the best possible surround sound, adjust the speaker parameters (distance, level, etc.)

If you feel lack of bass frequency

Connect an active subwoofer to the WOOFER OUT connector using a monaural audio cord (not supplied). When you connect an active subwoofer, disconnect the woofer from the WOOFER speaker connector.

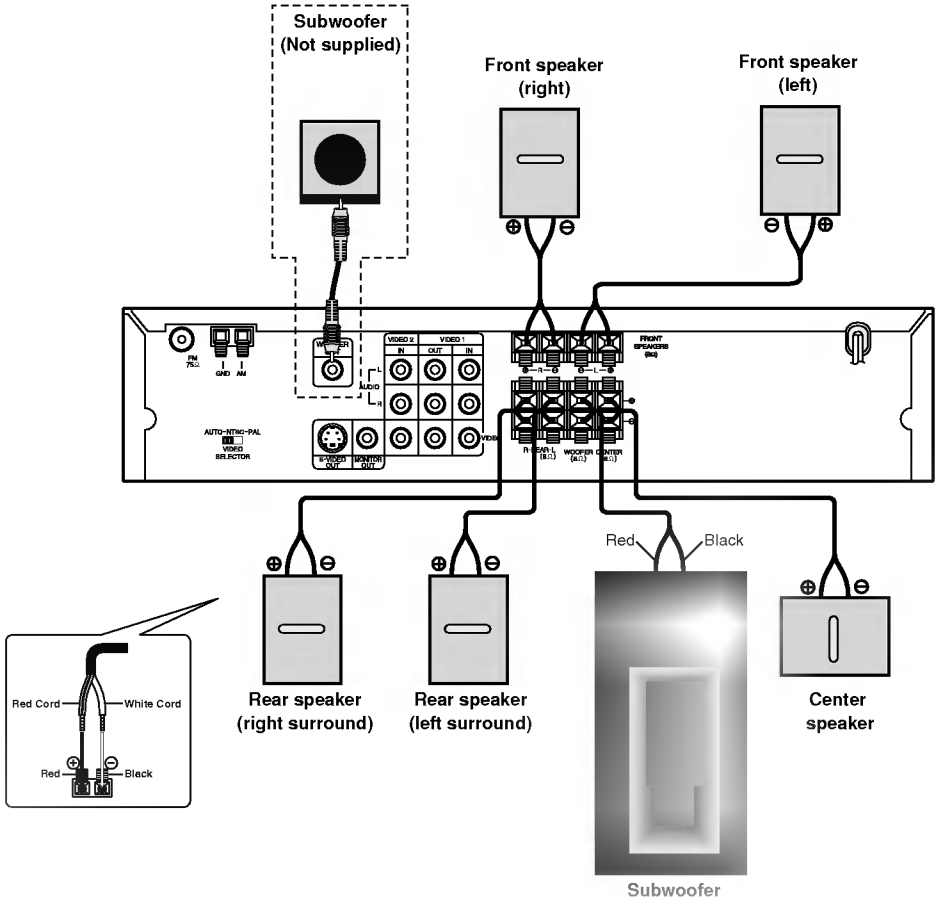

- Be sure to match the speaker cord to the appropriate terminal on the components : + to + and - to - .
  If the cords are reversed, the sound will be distorted and will lack base.
- If you use front speakers with low maxiumum input rating, adjust the volume carefully to avoid excessive ouput on the speakers.
- Do not disassemble the front cover of the supplied speakers.

P/NO: 3840R-Q012D