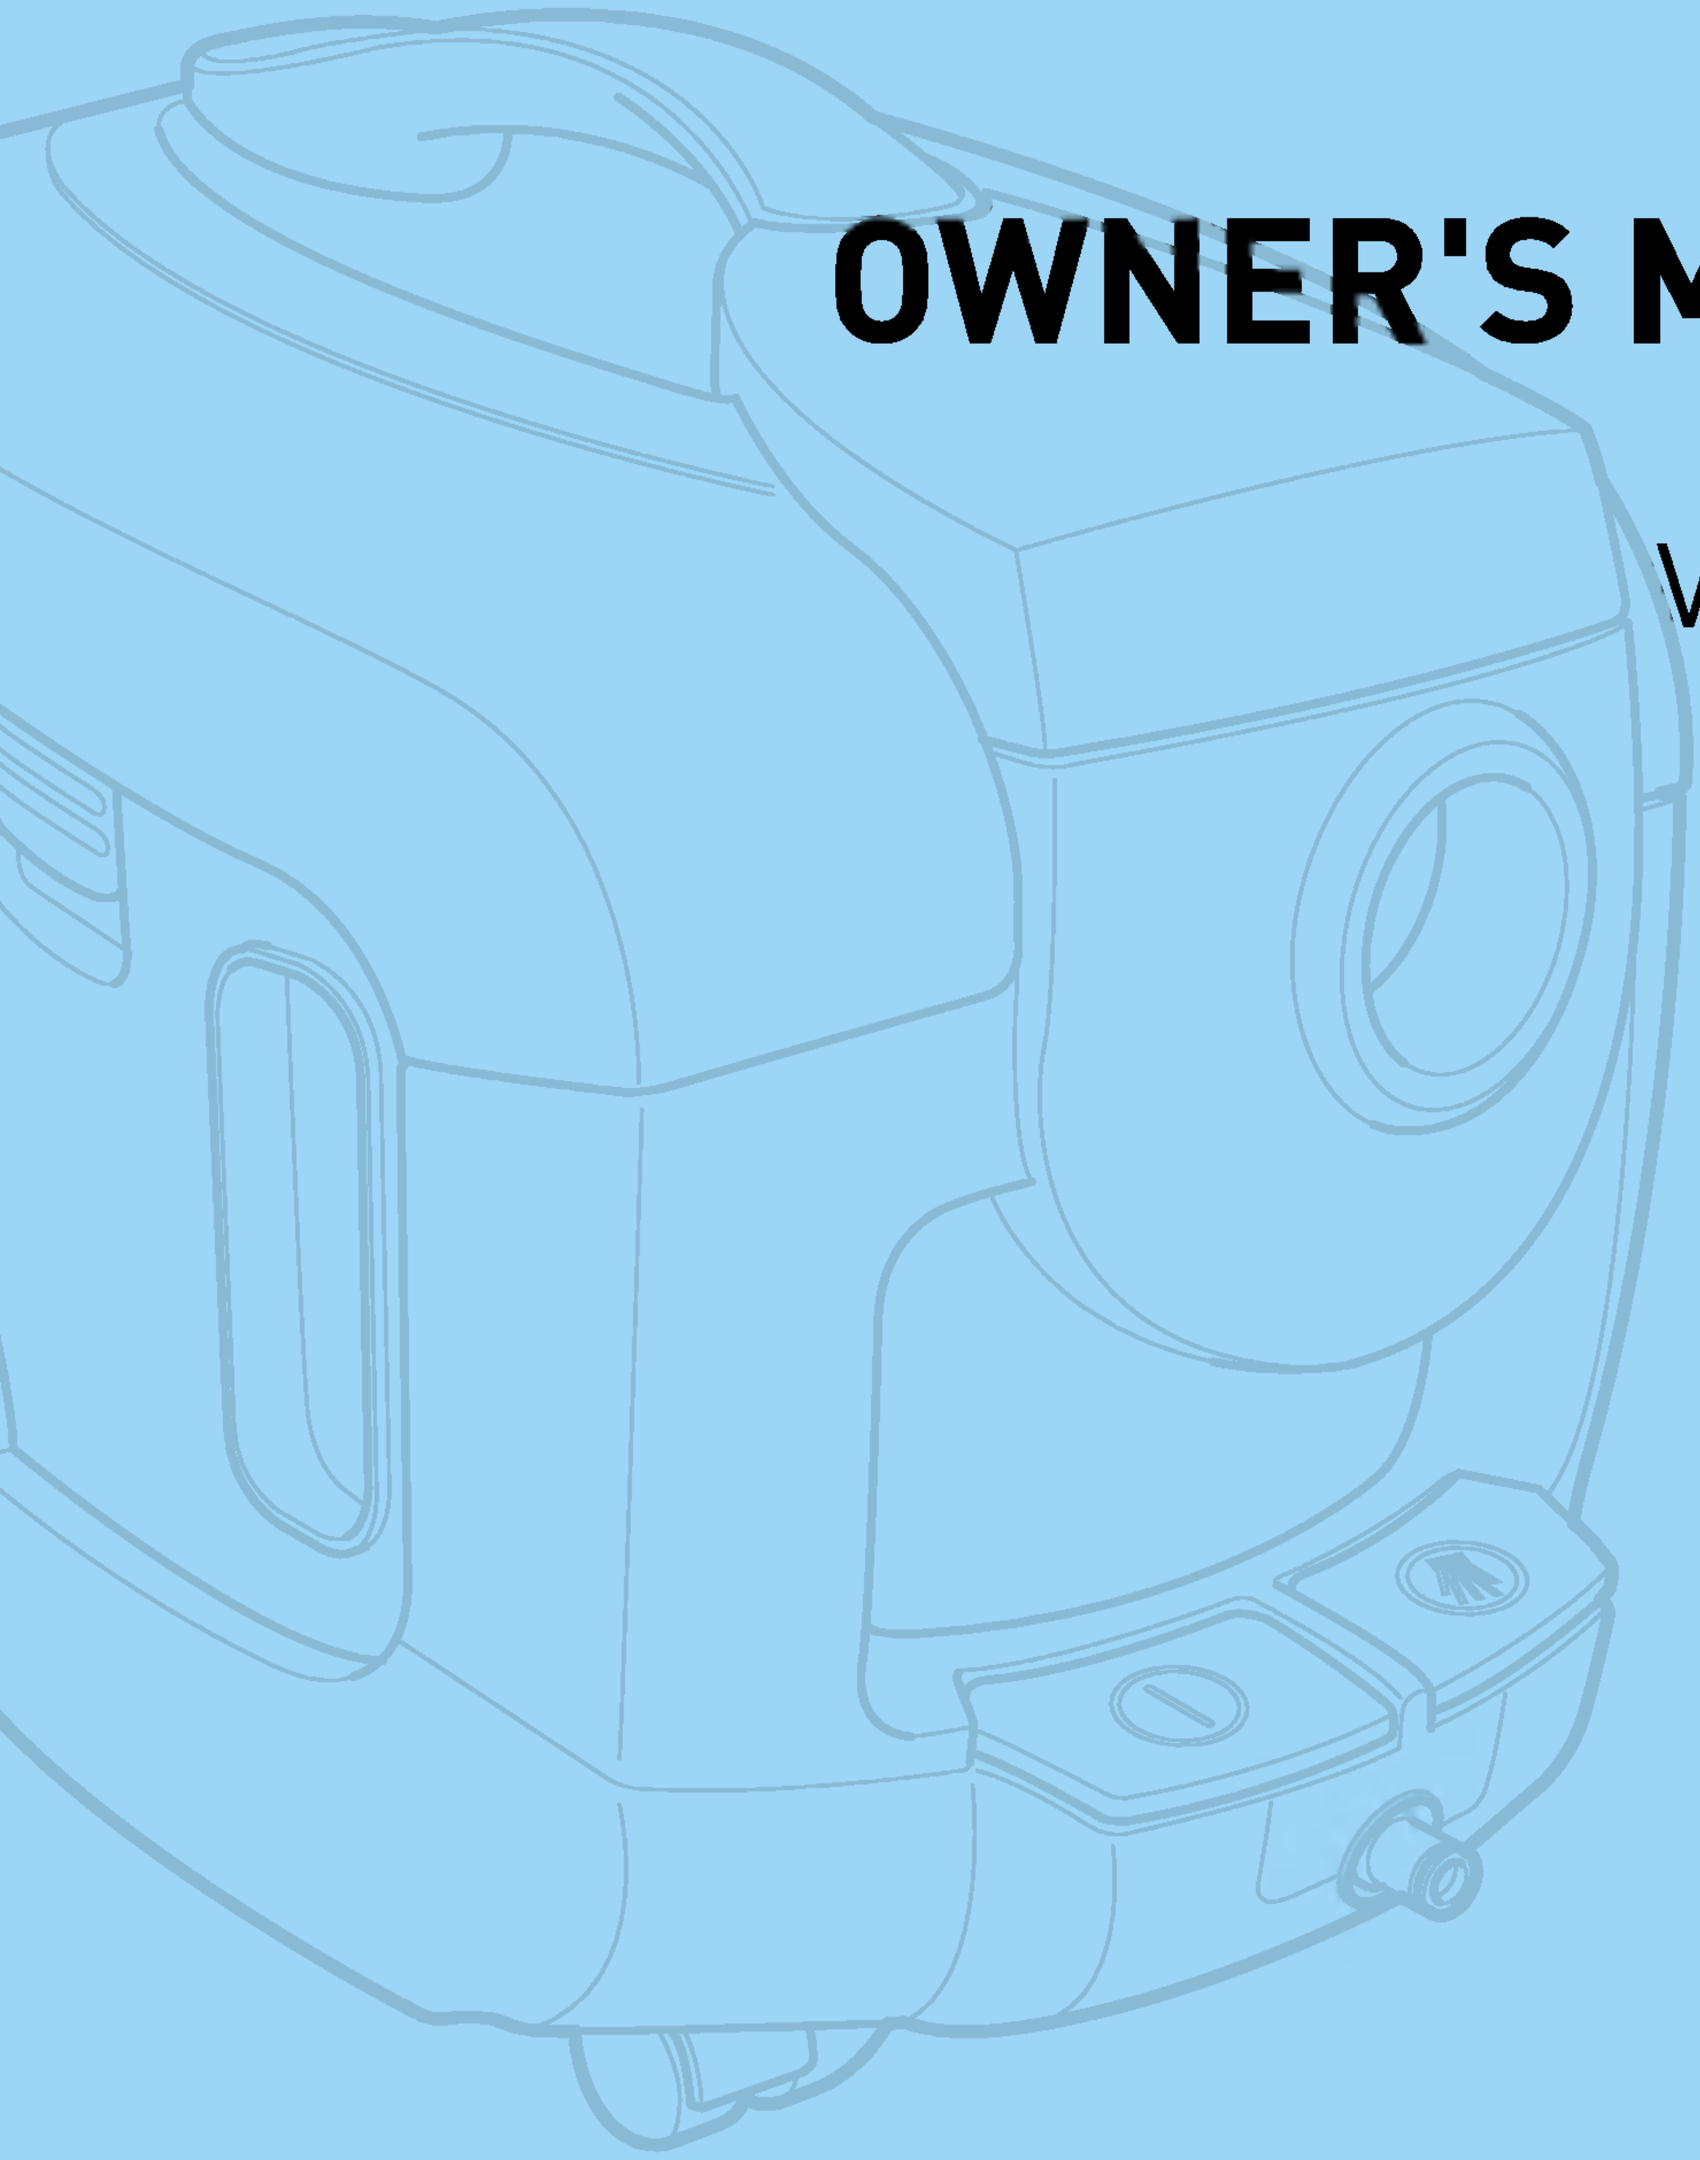


OWNER'S MANUAL

V-WA166ND

Please read all of the information on page 3 carefully. This information contains important instructions for the safe use and the maintenance of the appliance.

Table of contents

Information for Your Safety 3

How to Use 4

Assembling cleaner 4

Using Carpet/Floor Nozzle and Carpet Master 5

Using Accessory Nozzles 5

Dry Vacuuming 6

Wet Cleaning 9

Carpet Cleaning 12

Tile Cleaning 13

Window Cleaning 13

Sofa Cleaning 14

Blow Cleaning 15

Dust Tank Cleaning 16

Clean Filter Cleaning 16

Exhaust Filter Cleaning 17

Carpet Master Cleaning 17

Shampoo Tank Net Cleaning 18

Information for Your Safety

- The appliance is intended for use by adults.
- Follow instructions in this manual to change and fit accessories, tools or filters.
- Do not allow children to play with the appliance.

Never operate the appliance if :
❑ the power cord is damaged.
❑ clear signs of damage are showed
❑ the appliance is fallen or dropped.

- The voltage data on the rating label must conform to the power supply.

Do not vacuum :
❑ hot ash or embers or glowing objects.
❑ toner dust
❑ noxious substances or corrosive or solvent liquids.
❑ inflammable or explosive gases.
❑ sharp and hard objects such as pins, stones, small toys, etc.

- Never leave the appliance running unattended.

Always turn off and pull out the plug
❑ if the appliance malfunctions during operation
❑ before cleaning and maintenance
❑ after use

- Never aim the nozzles at people or animals, at electrical sockets or electrical appliances.
- Do not operate the appliance in rooms where inflammable materials are stored or where gases have formed.
- Some substances such as acetone, solvents and acids can hurt the materials used in this appliance.
- Extreme care is required when cleaning stair carpets. The appliance must be in a stable position on the step and take care that the flexible hose is not stretched beyond its actual length.
- When you use the appliance on stairs, you must always hold the appliance firmly with one hand.
- Never unplug the appliance by pulling at the cable, but only by pulling out the plug directly from the socket.
- Keep the mains cable away from heat, oil, chemical substances, humidity.
- Do not pull the mains cable on sharp edges, rough surfaces and avoid damage in any other way.
- Do not treat the appliance or plug with wet hands.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not immerse the whole appliance in water.
- Do not put any part of the body, clothes or any other objects (e.g. stick) into the opening or moving parts of the appliance.
- Do not use the appliance with any of the opening blocked with any object that may restrict the airflow.
- After wet vacuuming, empty the dust tank immediately.
- The function and effect of the appliance can be warranted if you use genuine LG cleaning fluids.
- Persons with sensitive skins should avoid direct contact with the cleaning fluid.
- Do not allow children to treat the cleaning fluid.
  If cleaning fluid comes into mucous membranes (eyes, mouth, etc), immediately flush with water and contact a doctor.
- Do not let anyone touch the rotating brush roller if the appliance is connected from the mains.
- Store this appliance in a dry place.
- Do not change the specification or modify your appliance.
- Remove the plug from the wall socket before carrying out any maintenance specified in this manual.
- Ensure the mains cable is fully unwound and straightened before use.
- If the appliance fails to operate, never attempt to repair it yourself.
- If it is necessary to repair the appliance, it must be performed by an authorized LG Service Agent only using genuine LG spare parts in order to avoid a hazard.


If the appliance does not vacuum properly, CHECK IF:
❑ the dust tank is full.
❑ there are no blockages in the hose.
❑ filters are polluted.
❑ the net is at the bottom of shampoo tank.


- Do not allow children or animals onto the carpets until it has had time to dry.
- Metal or wooden furniture legs may mark a wet carpet, wait until the carpet is dry before replacing furniture or cover legs with aluminium foil.
- If you are washing very dirty carpets, you may have to wash them several times to bring the dirt to the surface.
- When you wash deep pole carpets, move the washing tool in the same direction.
- When you wash carpets or upholstery, always test for color fastness, with some undiluted cleaner.

If the shampoo pump does not operate in cold weather, place the appliance in warm place for 20 minutes, and reuse it.

Thermal protector : This appliance has a special thermostat that protects the appliance in case of pump overheating. If the pump suddenly shuts off, turn off the switch and unplug the cleaner. Check the appliance for a possible source of overheating such as an empty shampoo tank, a closing net, a blocked hose or clogged filter. If these problems are found, fix them and wait at least 30 minutes before attempting to use the appliance. After the 30 minutes, plug the cleaner back in and turn on the switch. If the pump still does not run, contact an authorized LG Service Agent.

How to Use Assembling Cleaner

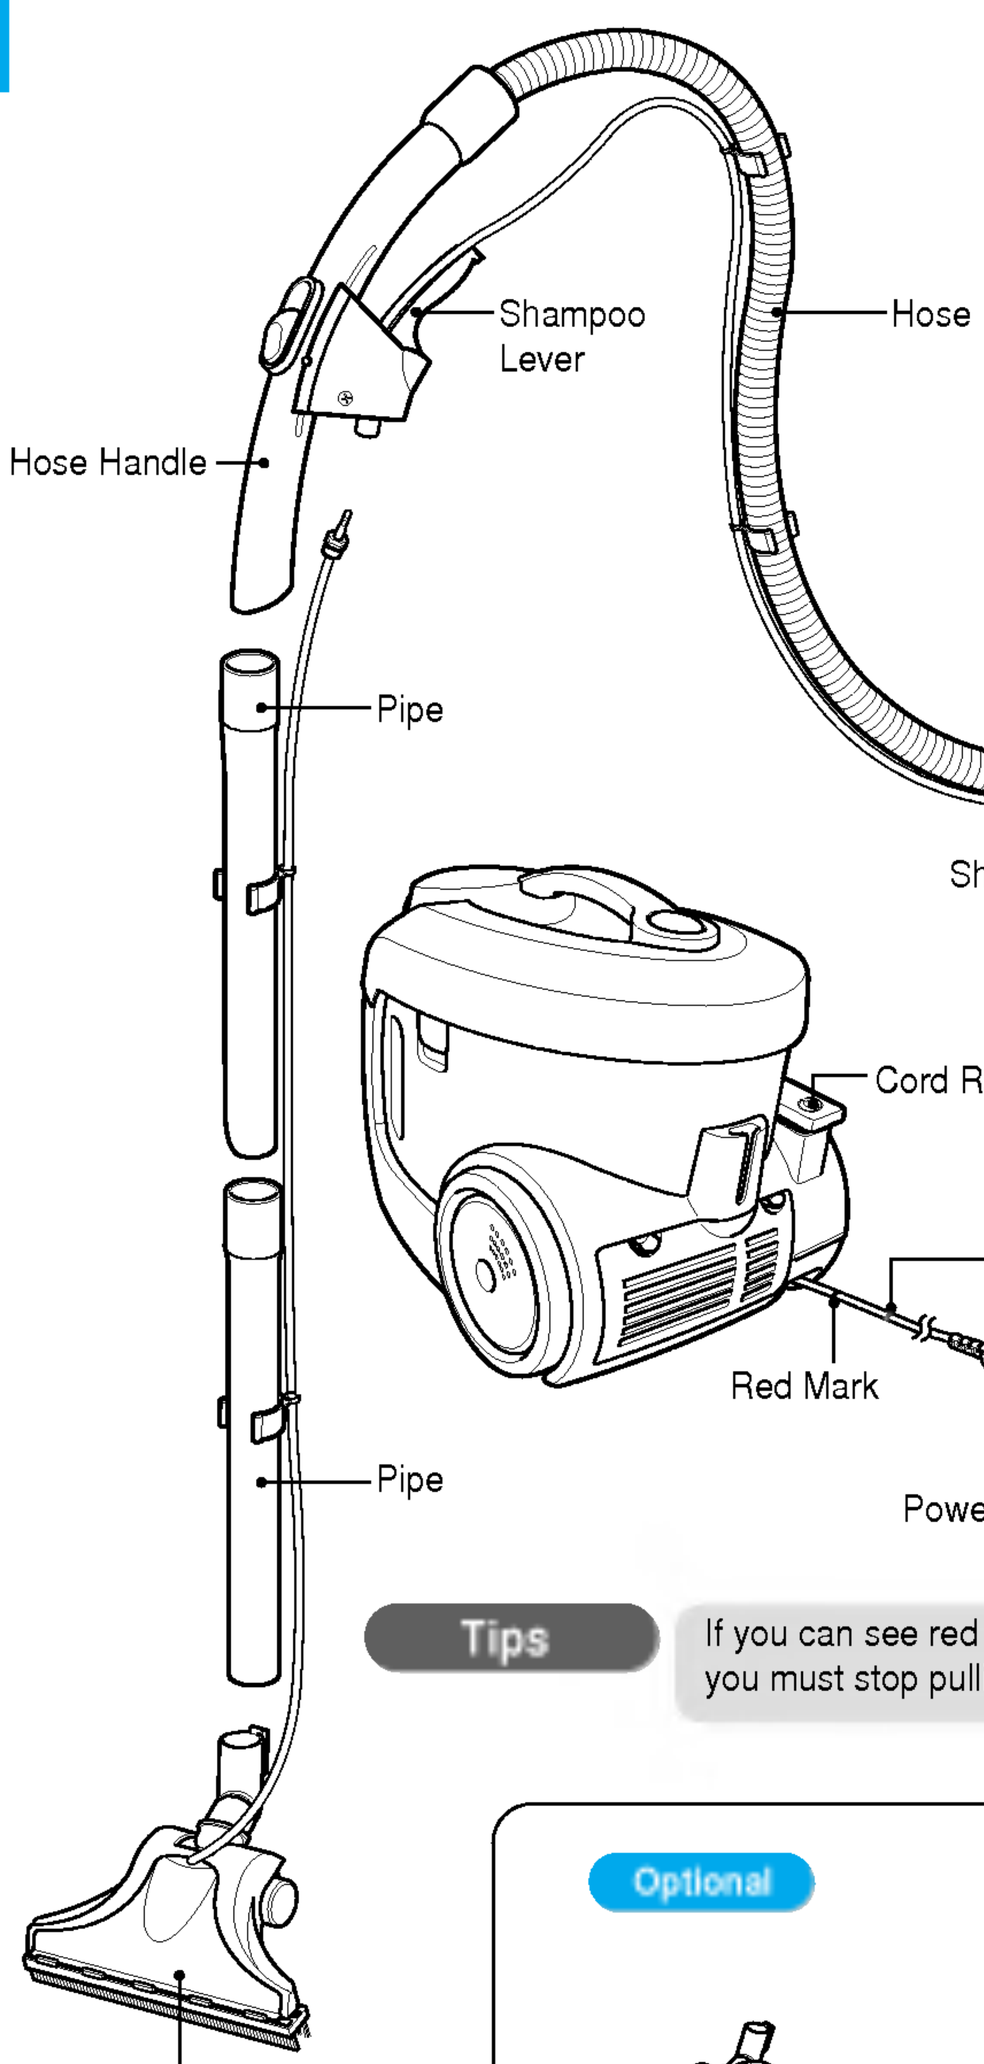


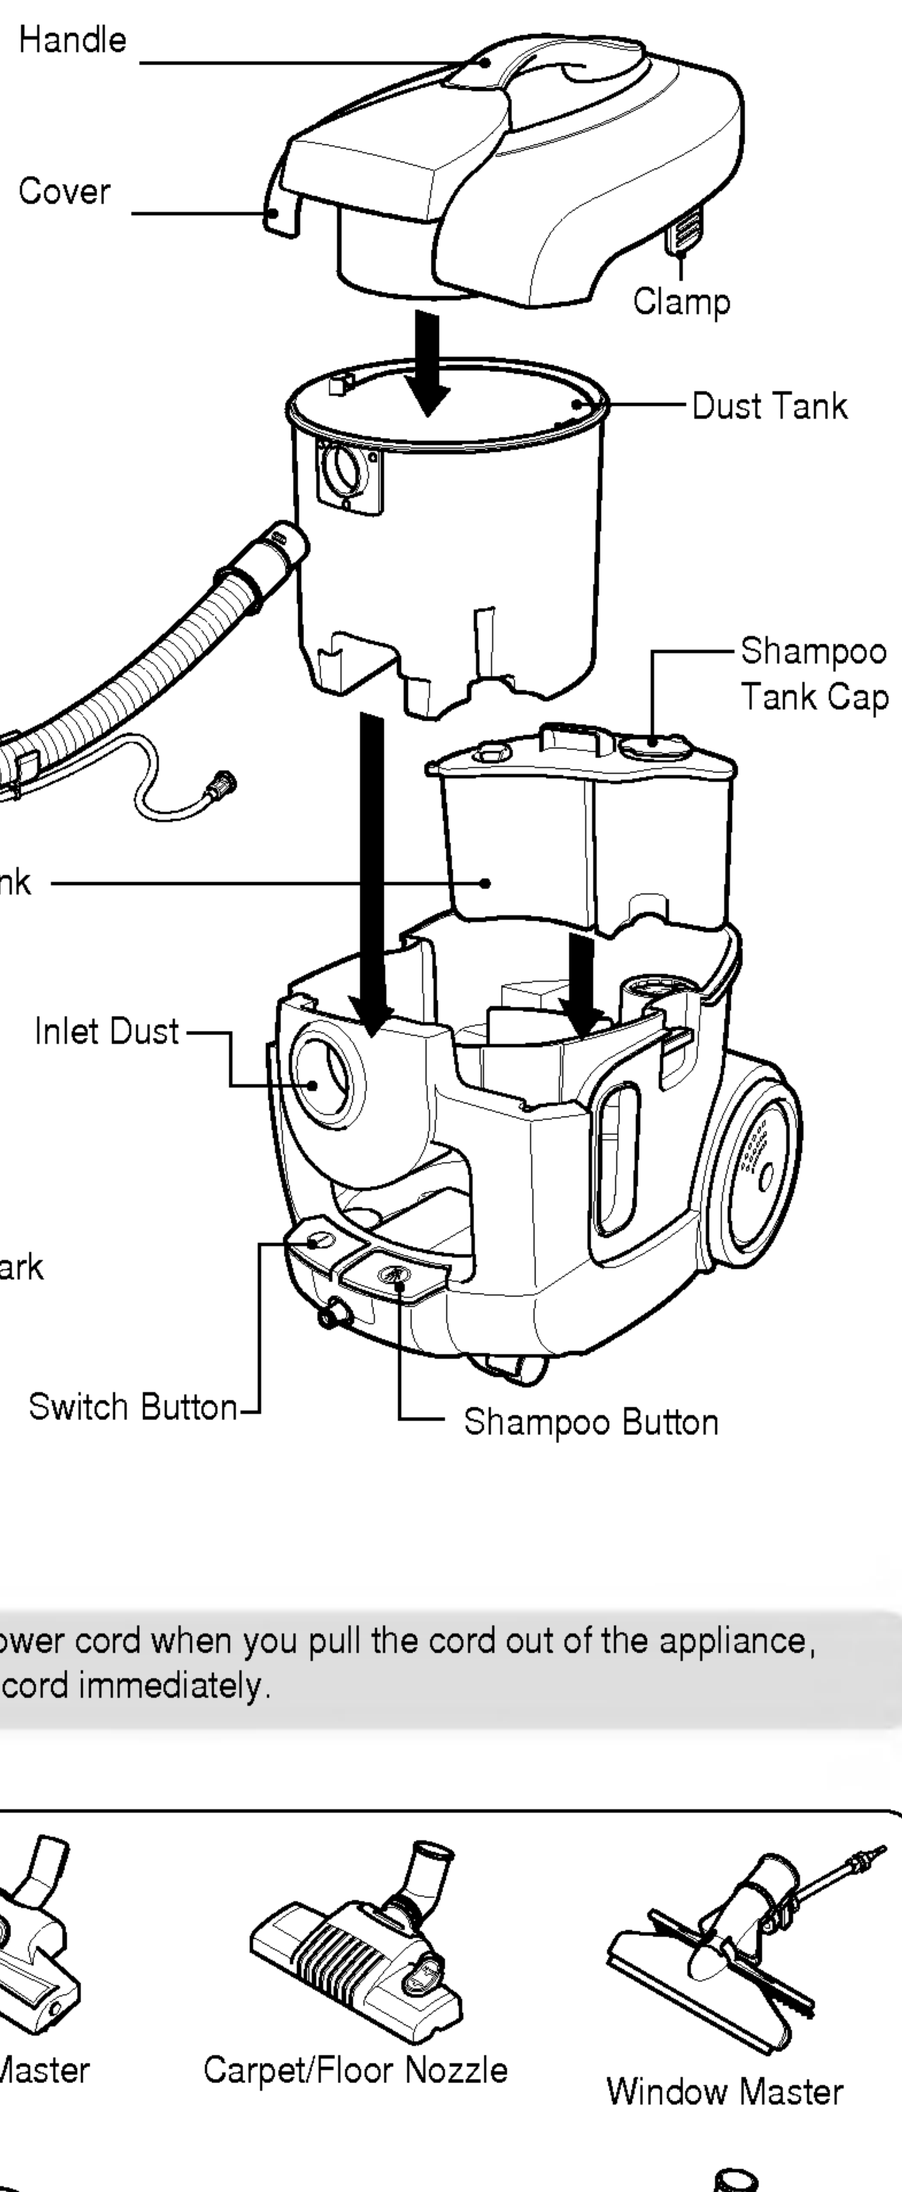

Tips If you can see red mark on power cord when you pull the cord out of the appliance, you must stop pulling out the cord immediately.

Optional

Spray Nozzle

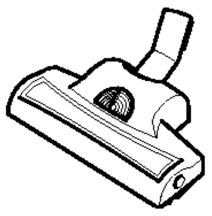
Carpet Master


Carpet/Floor Nozzle

Window Master



Frame Brush



Shampoo Bottle

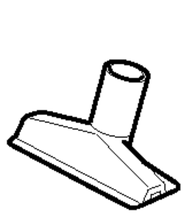
Upholstery Nozzle


Small Shampoo Nozzle

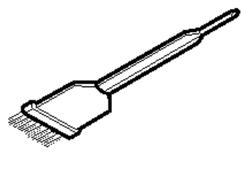

Brush


Dusting Brush



Crevice Tool

How to Use Using Carpet/Floor Nozzle and Carpet Master

Carpet/Floor Nozzle

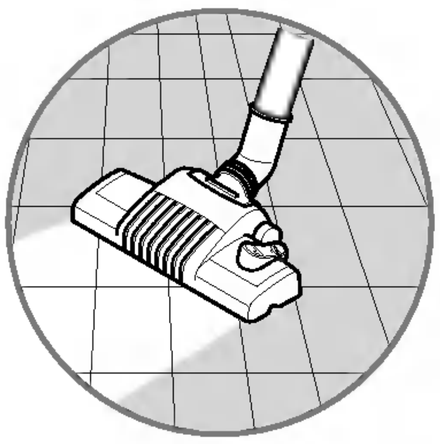


Floor

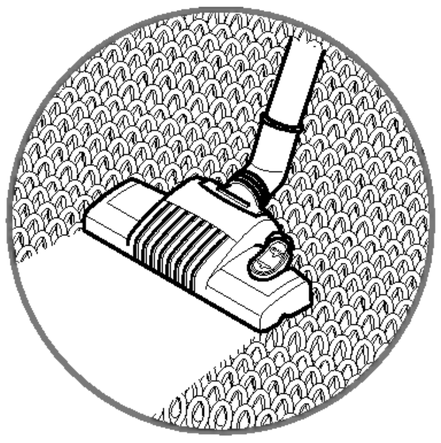


Carpet


Carpet Master

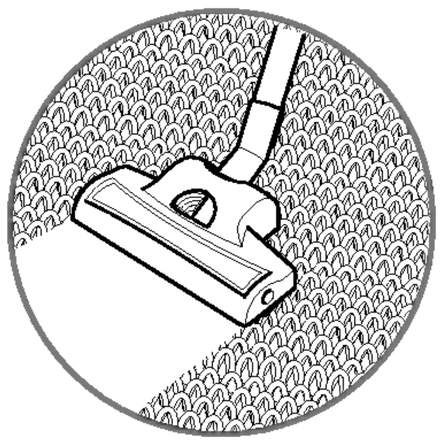

Long type Carpet

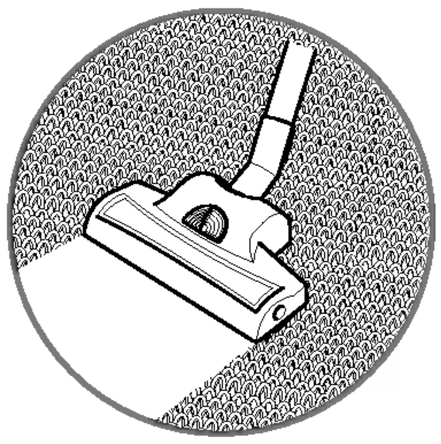

Hard Floor & Short type Carpet

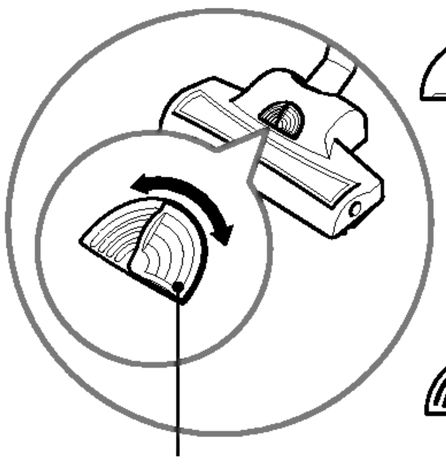

Air Control Lever




: use for hard floor
& short type carpet.




: use for long
type carpet.


How to Use Using Accessory Nozzles

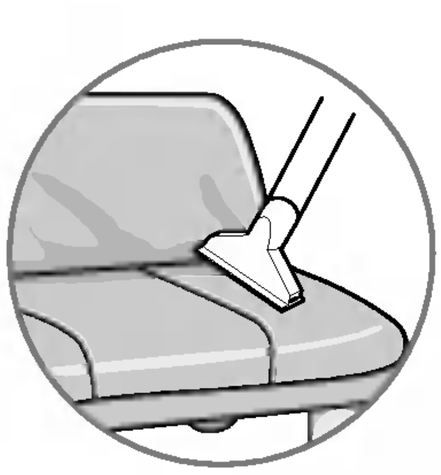

Upholstery Nozzle

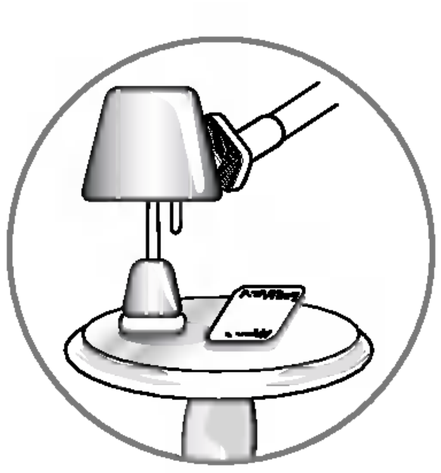

Dusting Brush

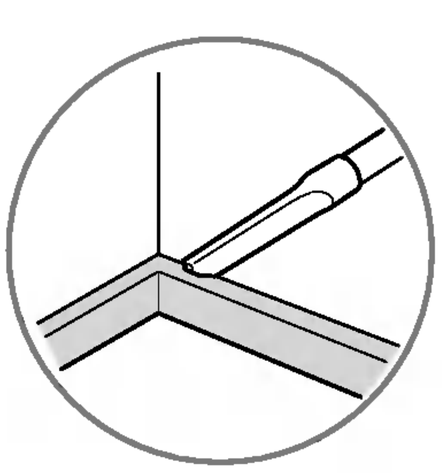


Crevice Tool

How to Use Dry Vacuuming

4 The Air Flow Regulator allows you to change the vacuum suction for different fabric and carpet weight. Adjust the suction power with Air Flow Regulator in the handle.


1

Connecting the Air Filter

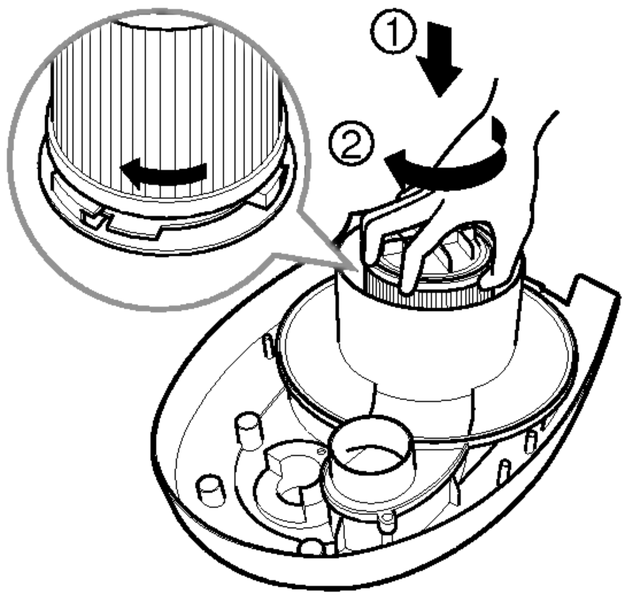


2

Closing the Top Cover Assy

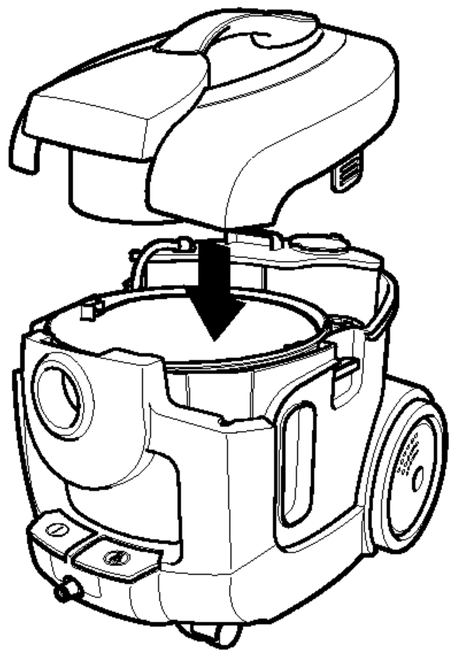


3

Closing the Top Cover Assy

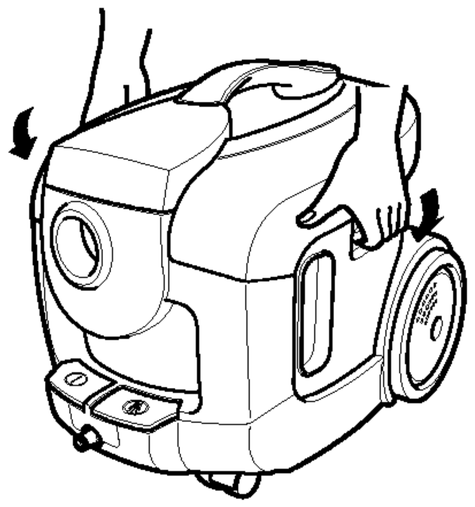


4

Assembling Hose and Pipes

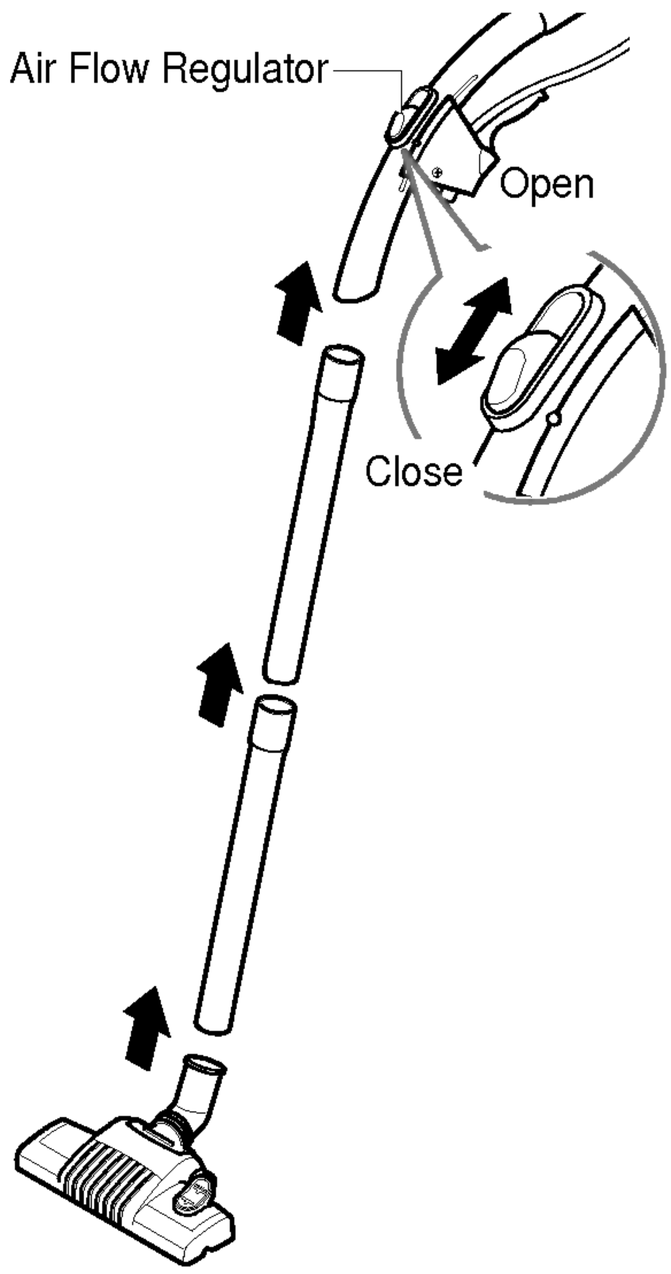


5

Connecting the Hose

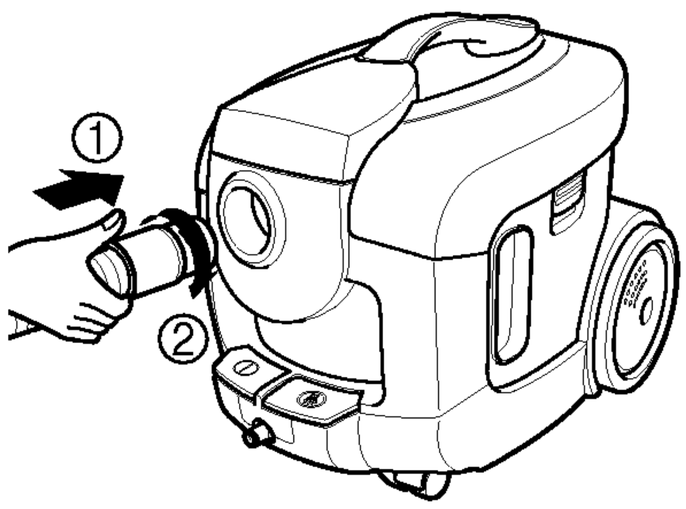

6


Turning on the Power Switch

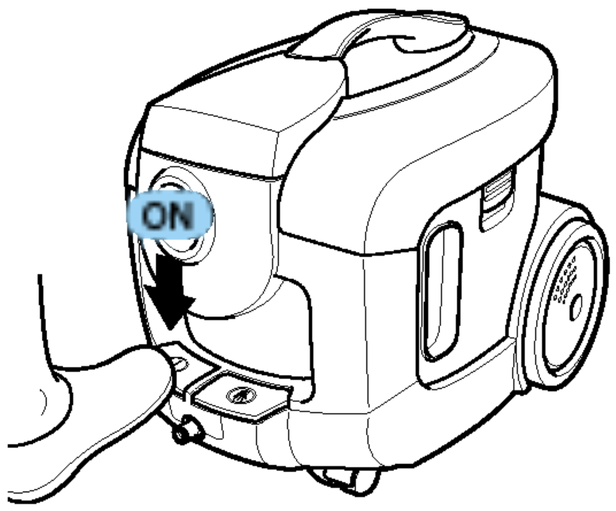

After Cleaning

7

Opening the Top Cover Assy

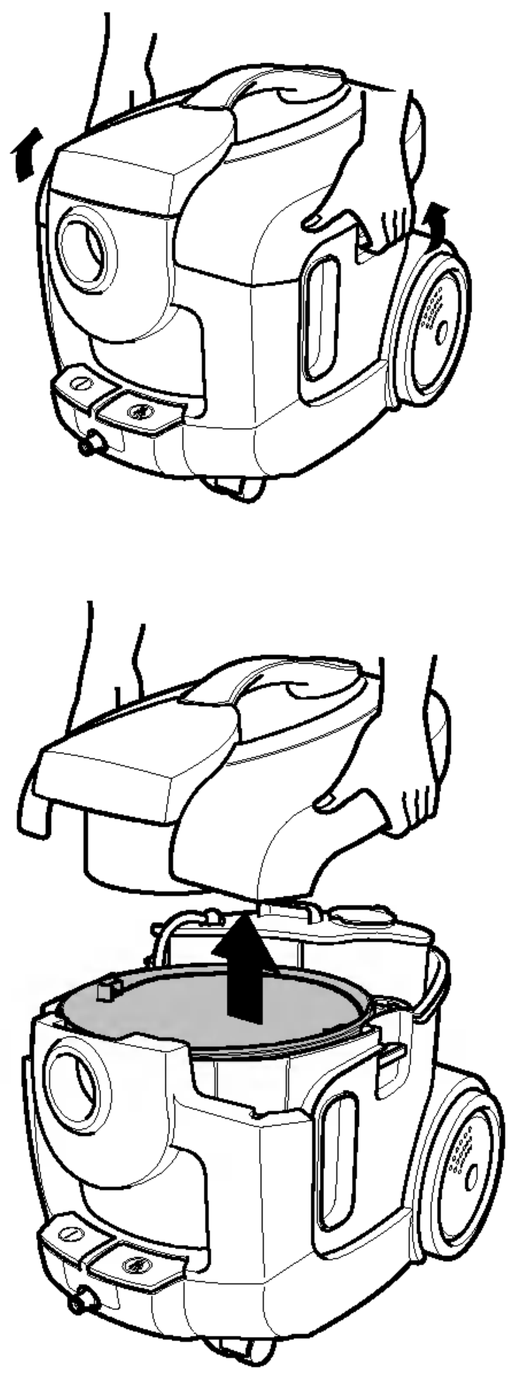


8

Pouring the Cleaning Liquid




9

Separating the Air Filter

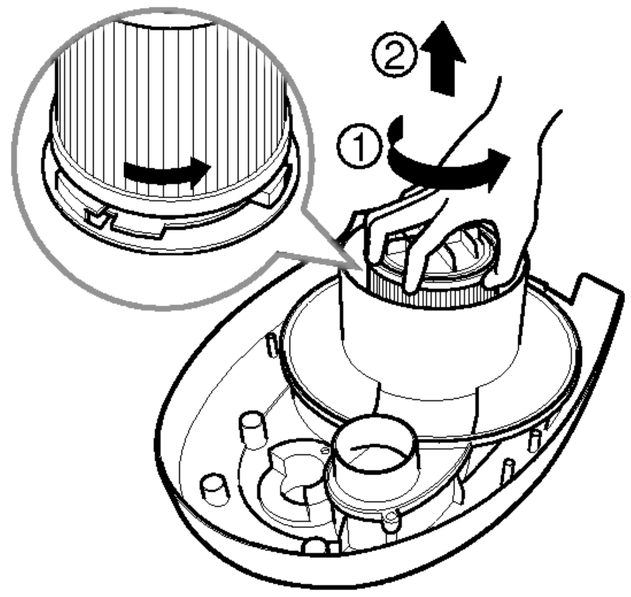

9

Separating the Air Filter

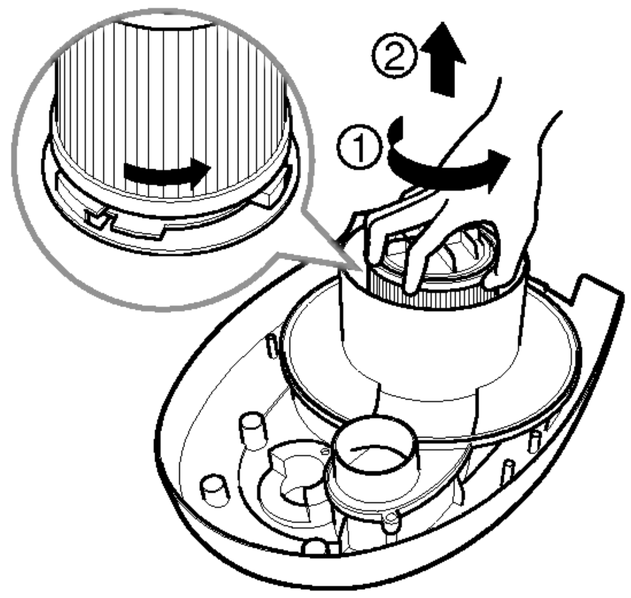


10

WARNING!

Gently rinse air filter separately under a cold running water until the water runs clear. **Do not use detergent or a washing machine or dishwasher.** Shake off excess water from the filter. **Do not tumble/spindry, microwave or place in oven or on direct heat.** Ensure the filter is completely dry. Re-assemble and place it back in your machine, filter frame. **If the filter is damaged, do not place them in the machine. Please call the Helpline.**

10

Washing & Drying the Air Filter

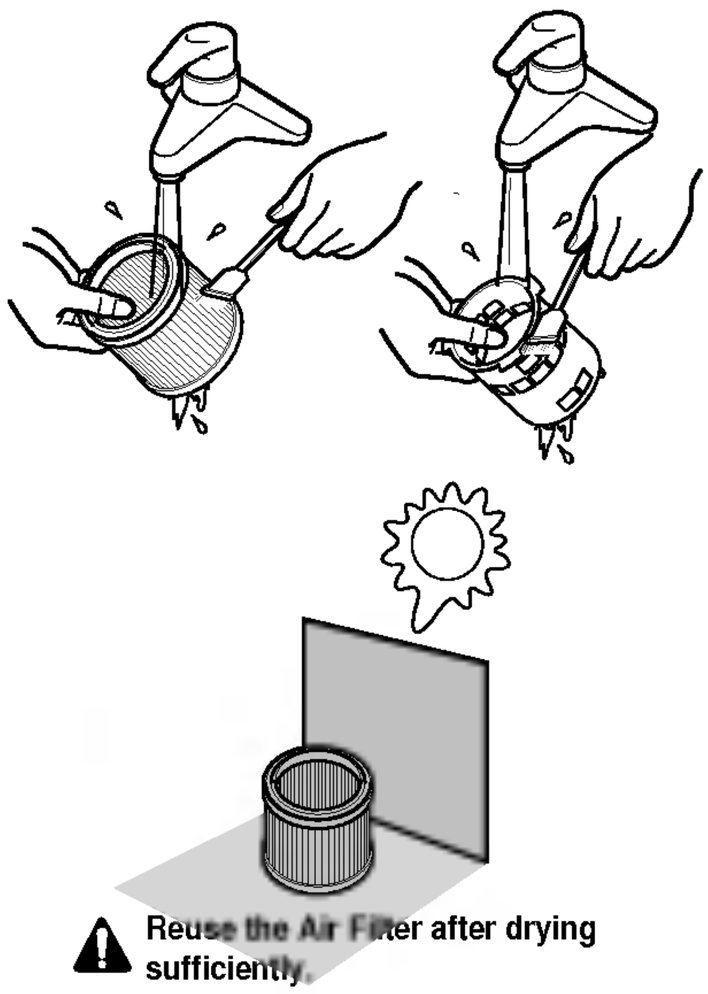

⚠ Reuse the Air Filter after drying sufficiently.


10

Brushing the Air Filter




11


Connecting the Air Filter

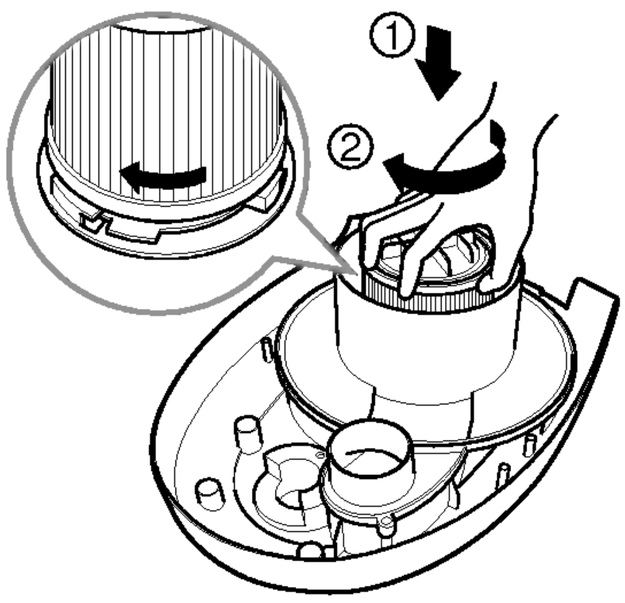

12

Closing the Top Cover Assy

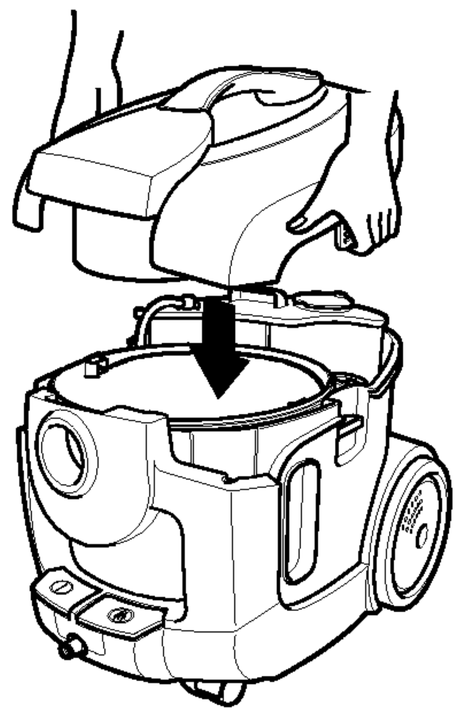


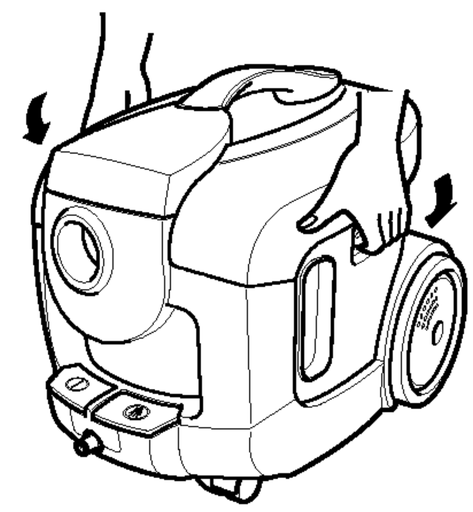


How to Use Wet Cleaning

7 If there is a strange sound in the pump, put the cleaning fluids into the shampoo tank.
Because it indicates that there is no cleaning fluid in the shampoo tank.


1 Connecting the Air Filter

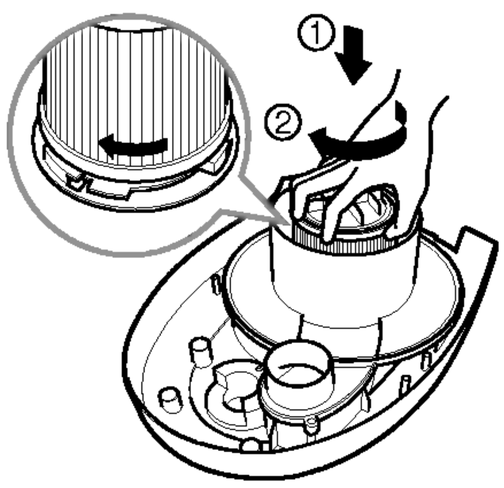

2 Opening the Tank Cap

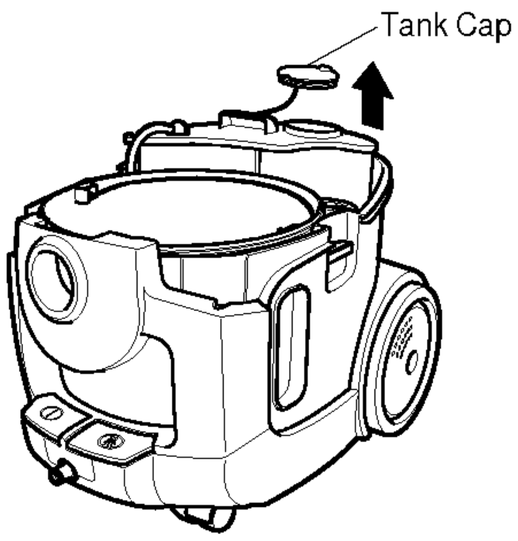


3 Pouring Water & Shampoo

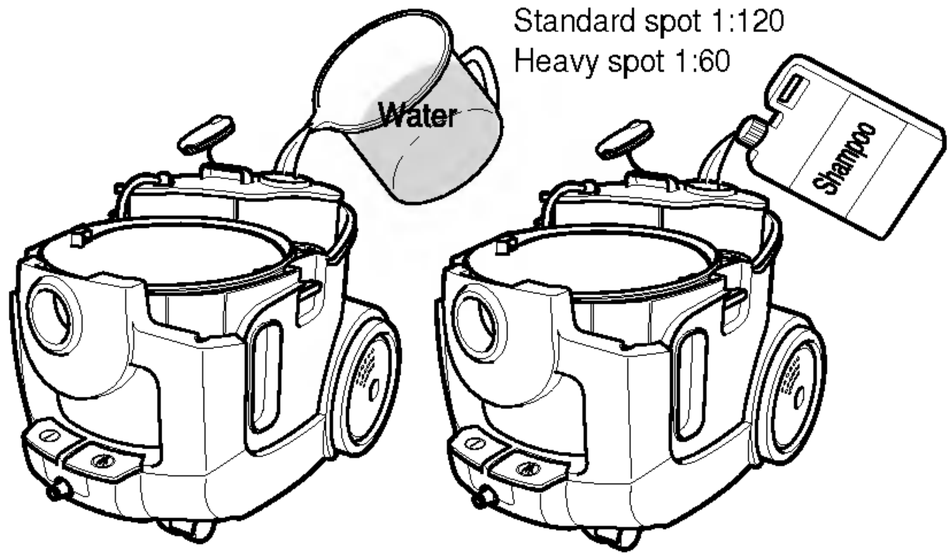


4 Closing the Tank Cap and the Top Cover Assy




5 Connecting the Hose

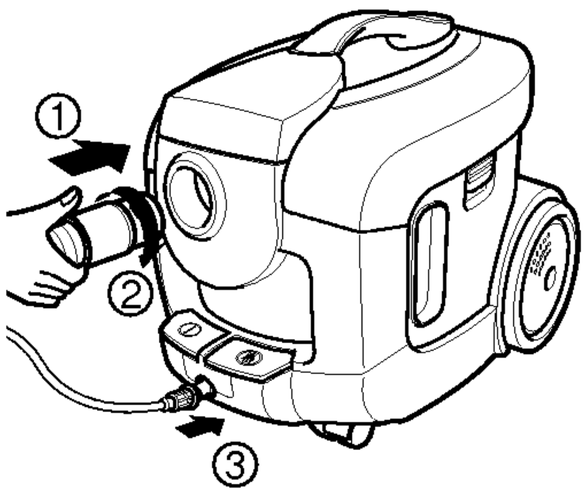


6 Assembling Hose & Pipes

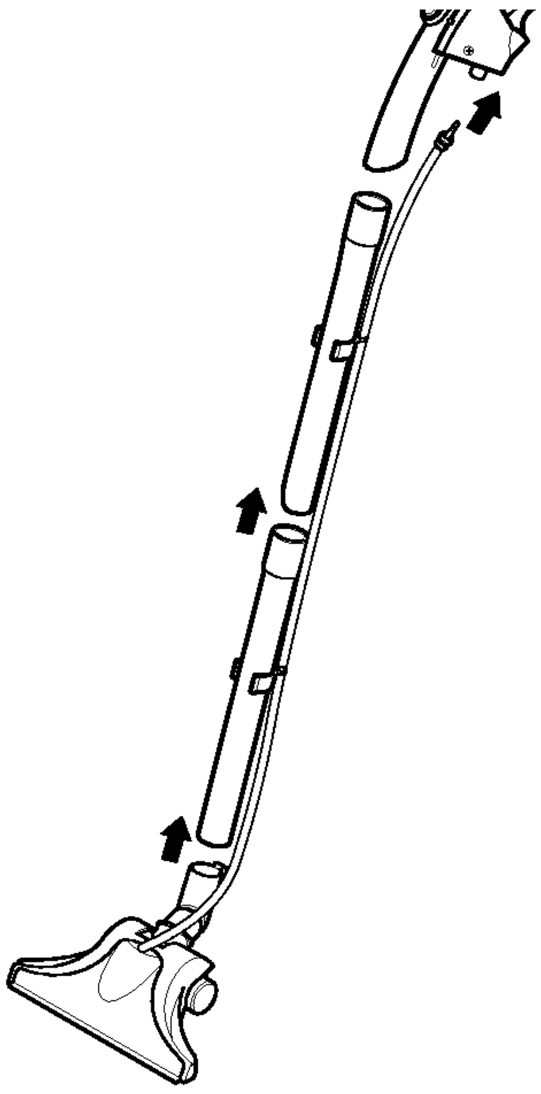

7 Turning on the Power & Shampoo Switch

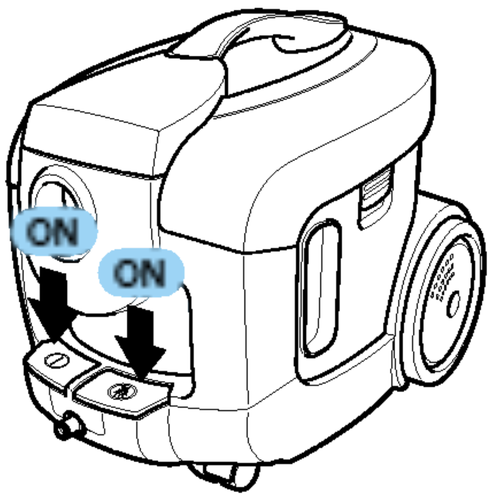


8 Pulling the lever

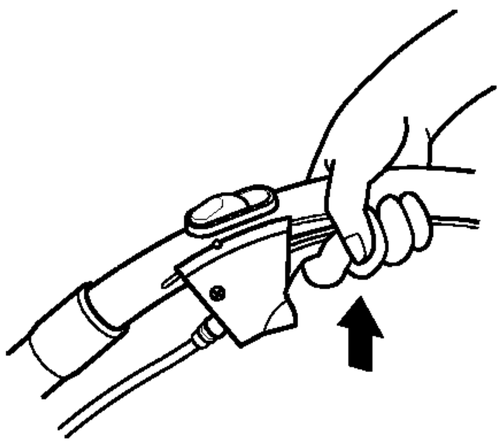

10 When you hear the big noise from the main body during the operation, empty the dust tank. Because it indicates that the safety float automatically closes the suction inlet and you will notice that no more liquid is sucked up.


9

Wet Cleaning

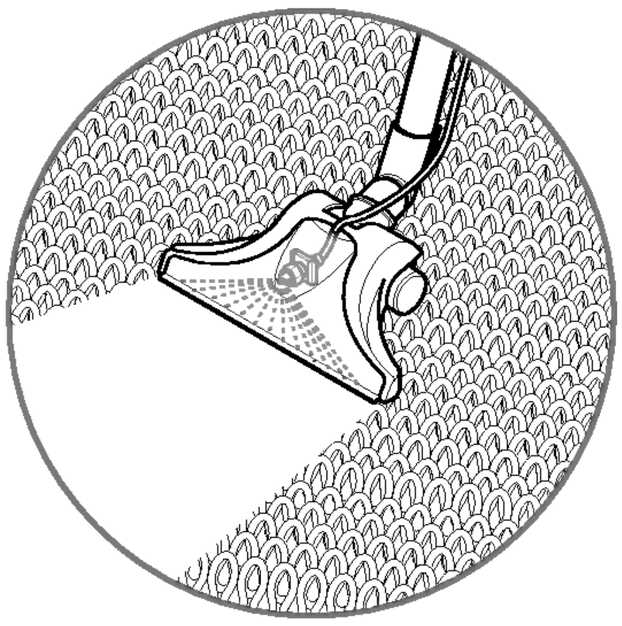


10

Checking the Cleaning Liquid

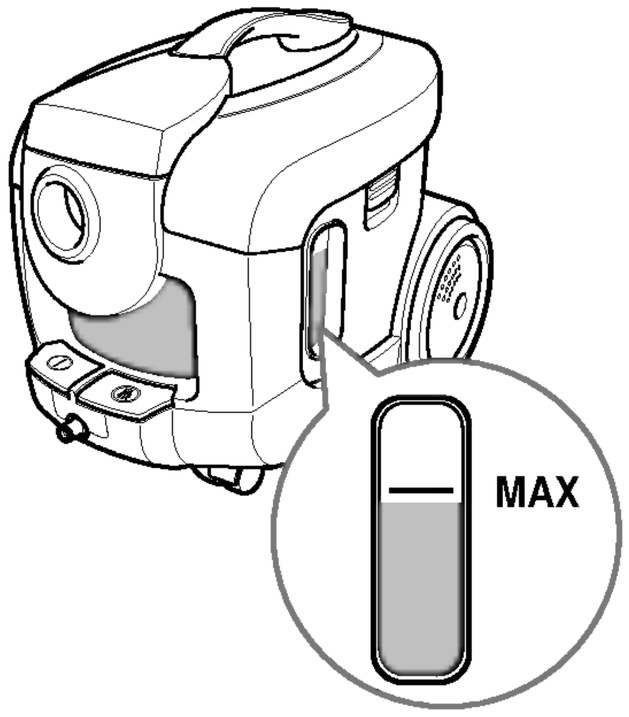


11

Opening the Top Cover Assy

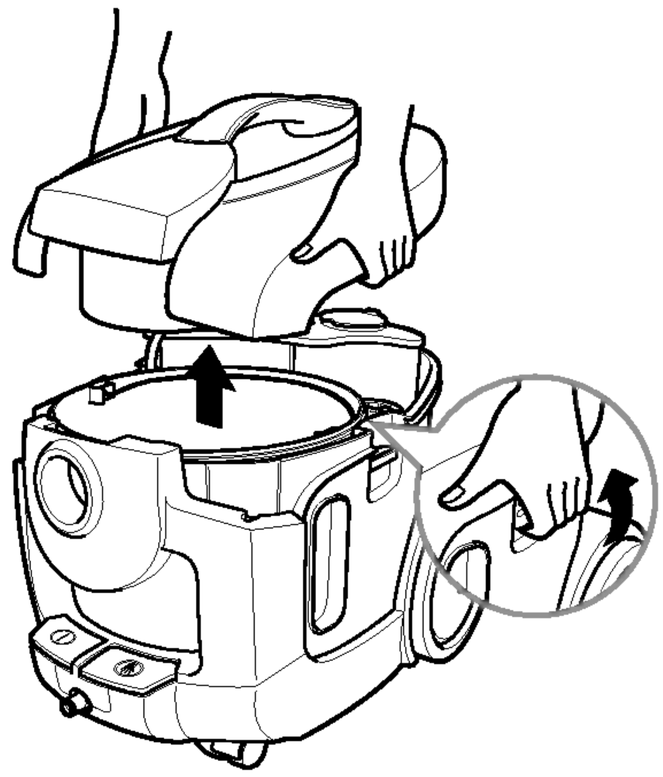


12

Lifting the Dust Tank

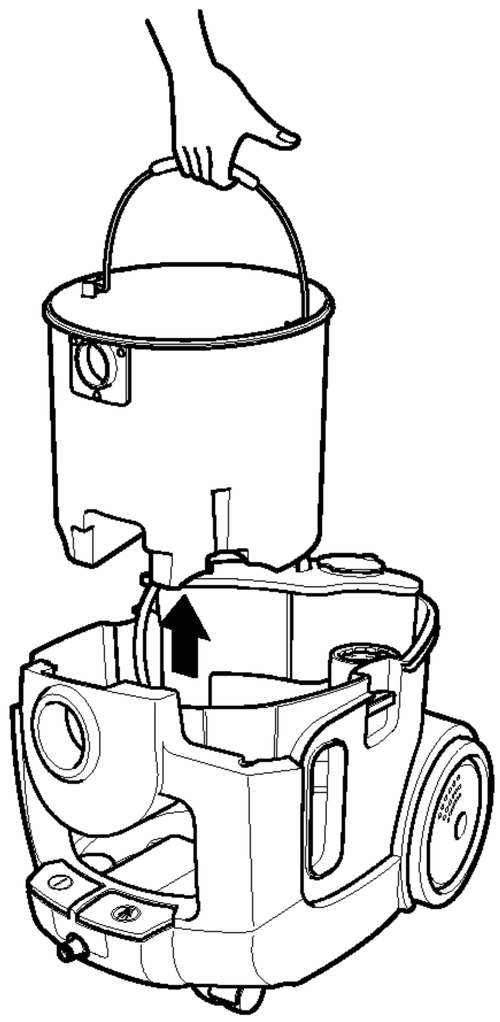


13

Pouring the Cleaning Liquid

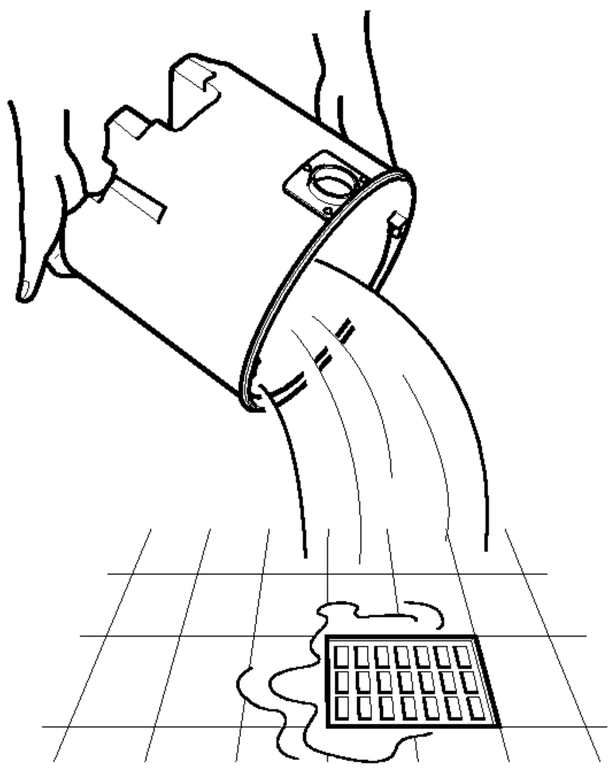


14

Separating the Air Filter

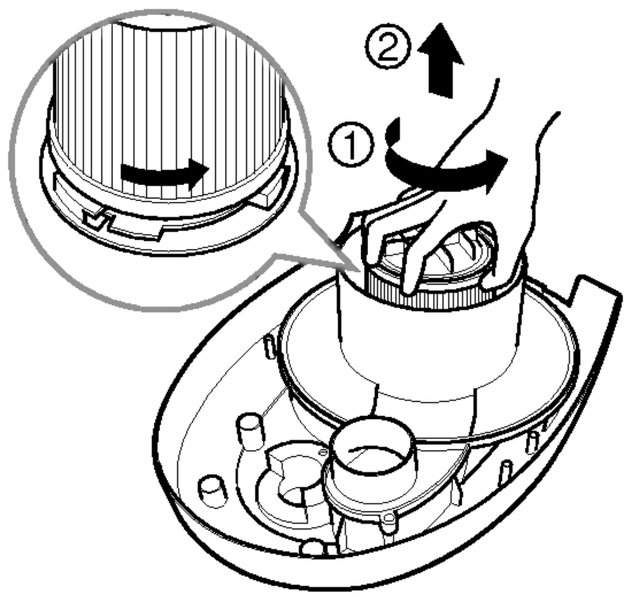


WARNING!
Gently rinse both parts separately under a cold running water until the water runs clear. **Do not use detergent or a washing machine or dishwasher.** Shake off excess water from the filter. **Do not tumble/spindry, microwave or place in oven or on direct heat.** Ensure the filter is completely dry. Re-assemble and place it back in your machine, filter frame. **If the filter is damaged, do not place them in the machine. Please call the Helpline.**


15
Disassembling the Air Filter

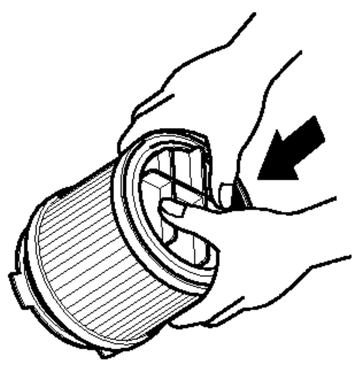


16

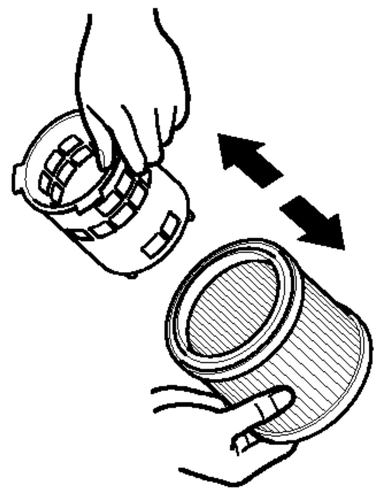

17
Washing the Air Filter

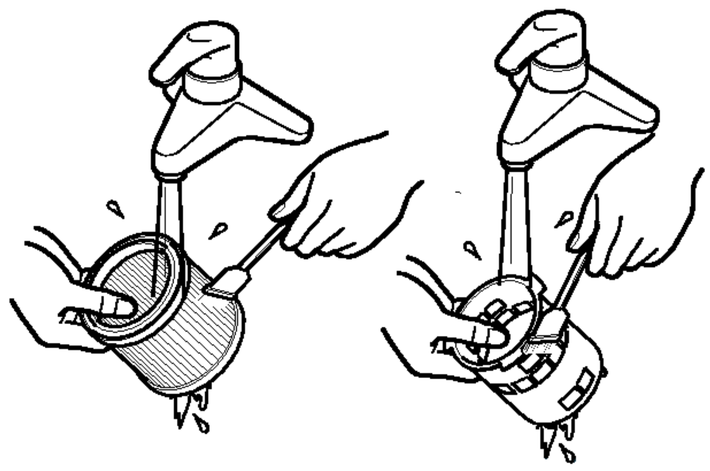


18
Drying the Air Filter

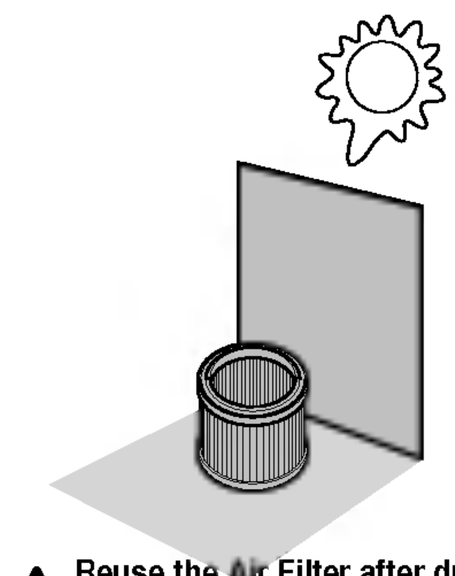


Reuse the Air Filter after drying sufficiently.

19
Assembling the Air Filter

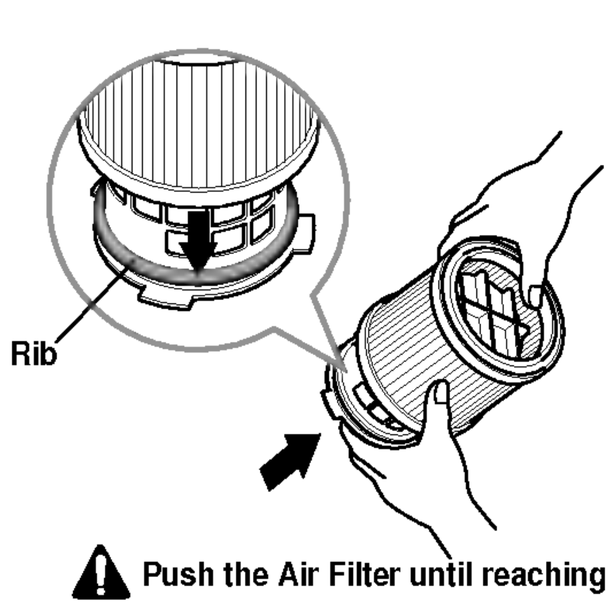


Push the Air Filter until reaching the rib.

20
Connecting the Air Filter

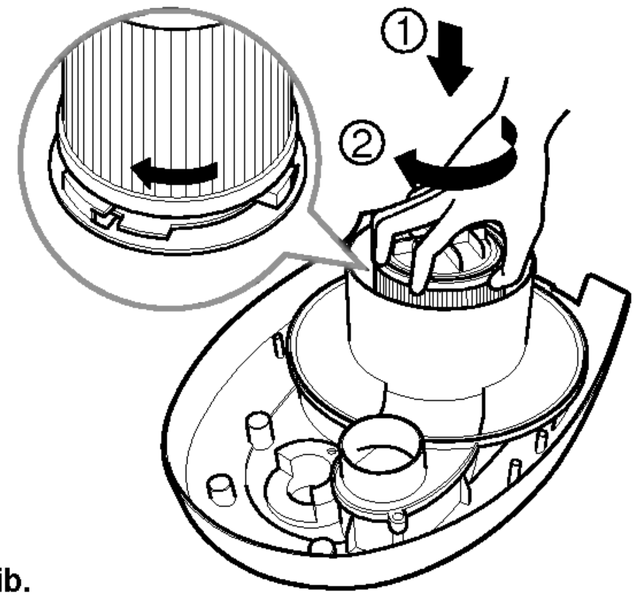


21
Closing the Top Cover Assy

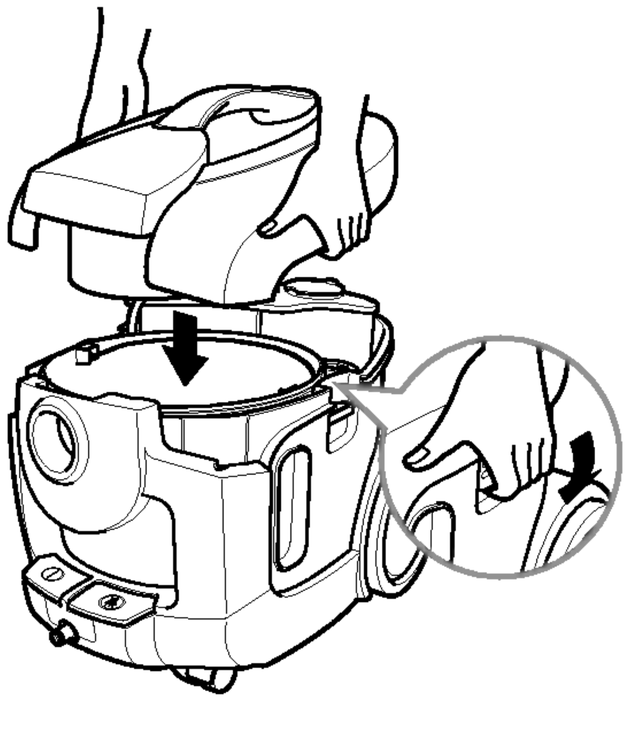

How to Use Carpet Cleaning


3 It is possible that the pump's thermal security mechanism has been acticated to protect the pump from overheating in case that the shampoo tank is empty or the shampoo button has remained in the (ON) position without any operation of the trigger. To check that the pump has not broken down, put the button at the (OFF) position and wait about 20 to 30 minutes until the pump cools down, then start it again. If your appliance still does not work in spite of following these instructions, contact the nearest authorized service center.

1
Turn on the Power & Shampoo Switch and Pull the Lever

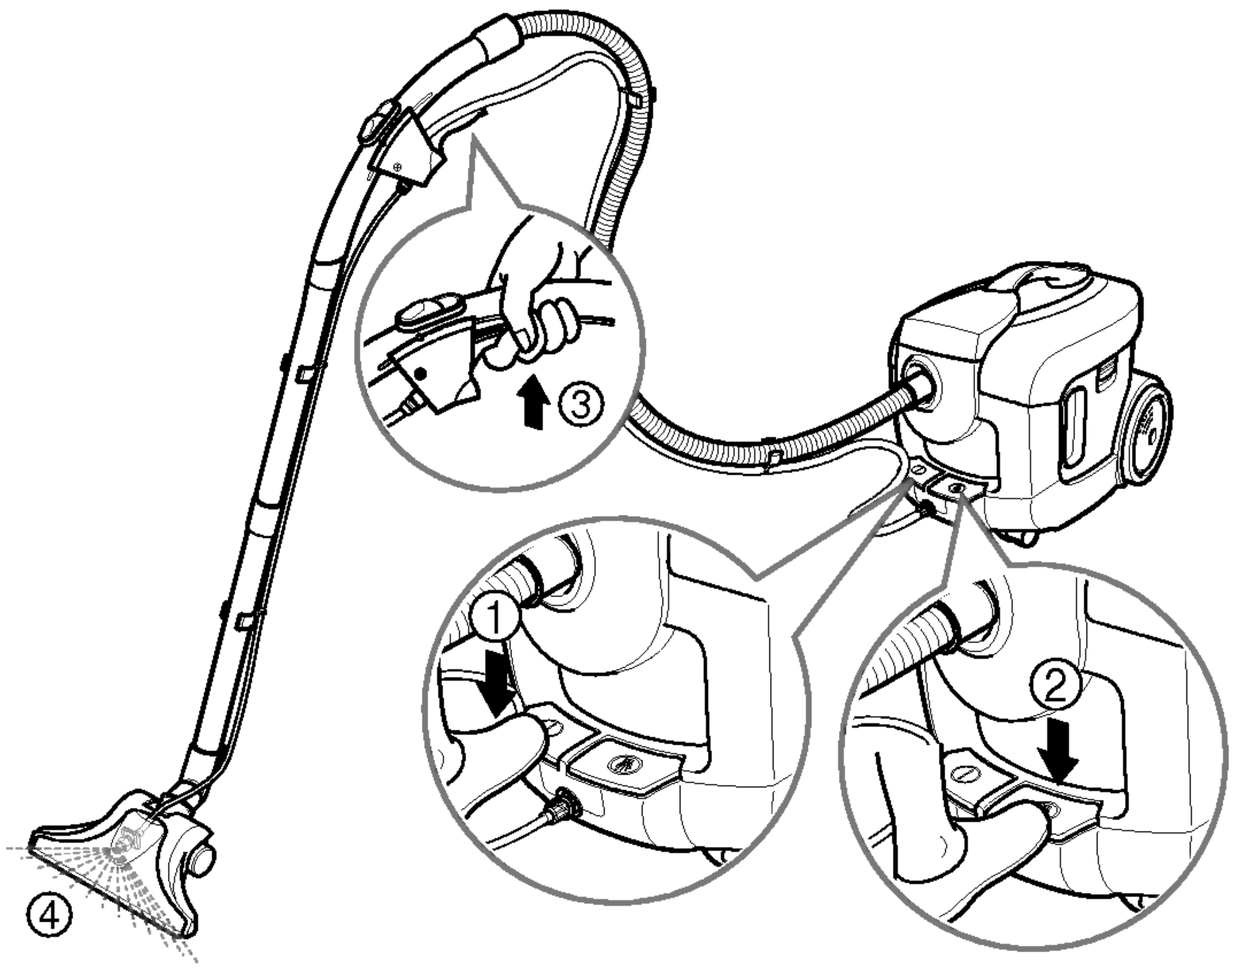


2
Wet Cleaning the Carpet

3
Turn off the Shampoo Switch and Release the Lever

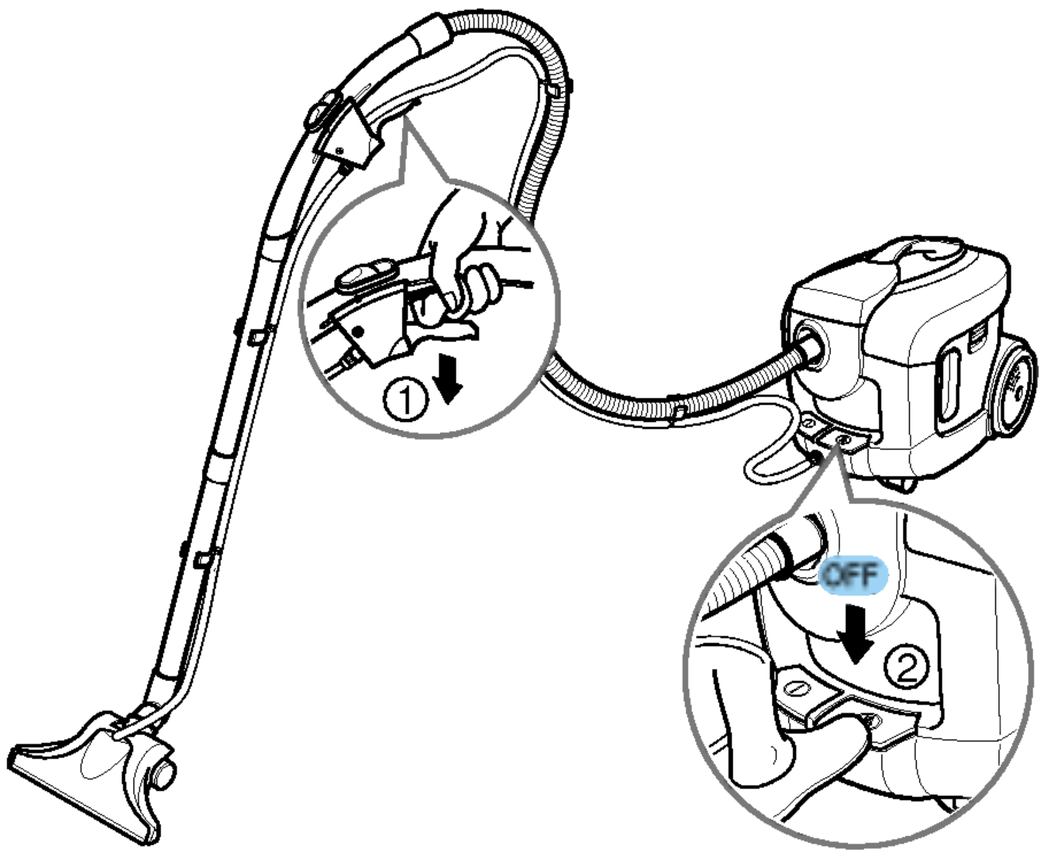

4
Dry Cleaning the Carpet

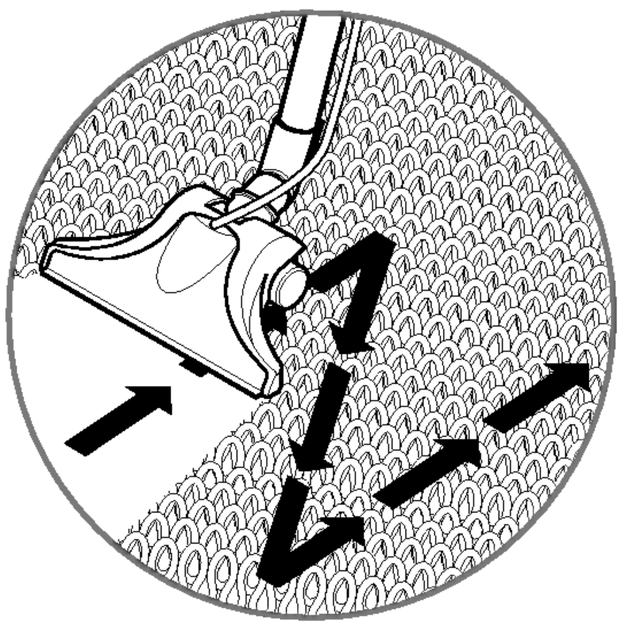



How to Use Tile Cleaning


1 Connecting the Frame Brush

2 Tube Connecting/Disconnecting

3 Cleaning the Tile

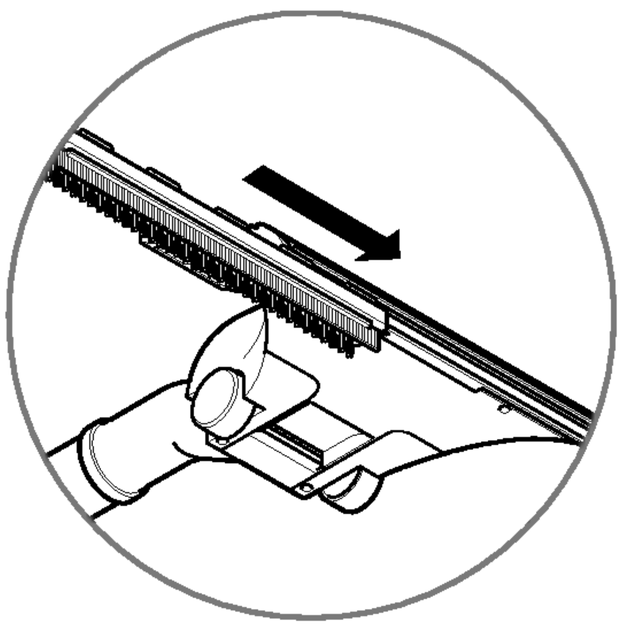

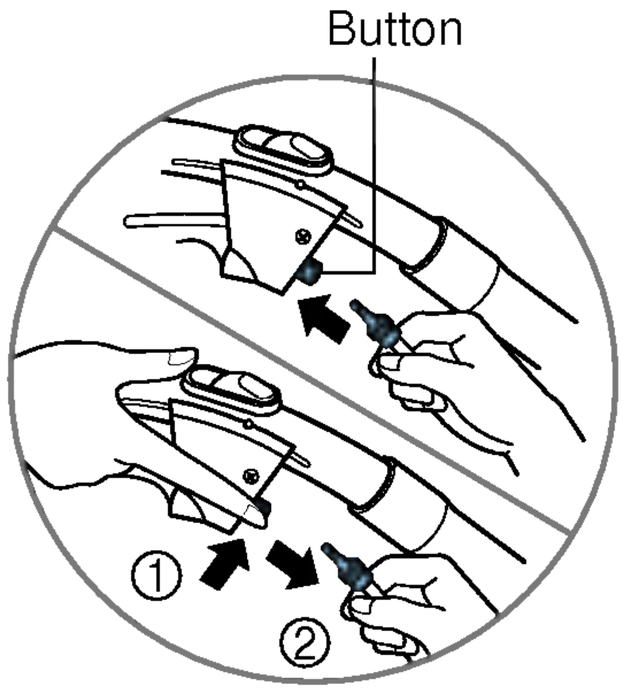

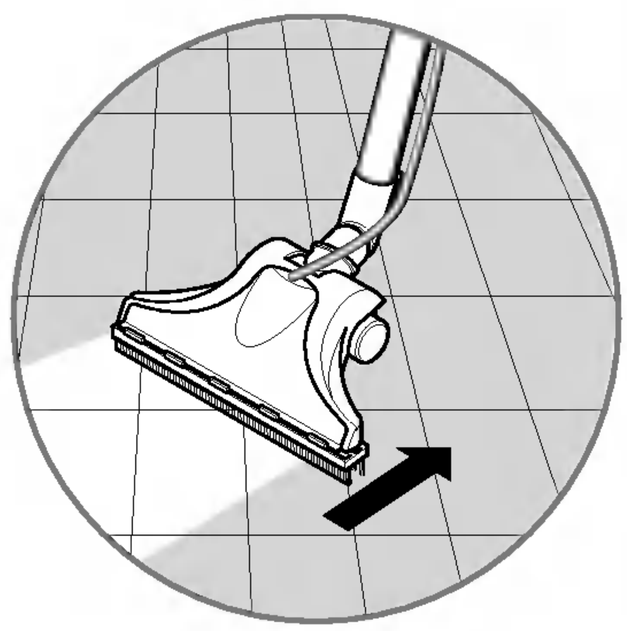



How to Use Window Cleaning

1 Connecting the Window Master

2 Turning on the Power & Shampoo Switch


3 Cleaning the Window

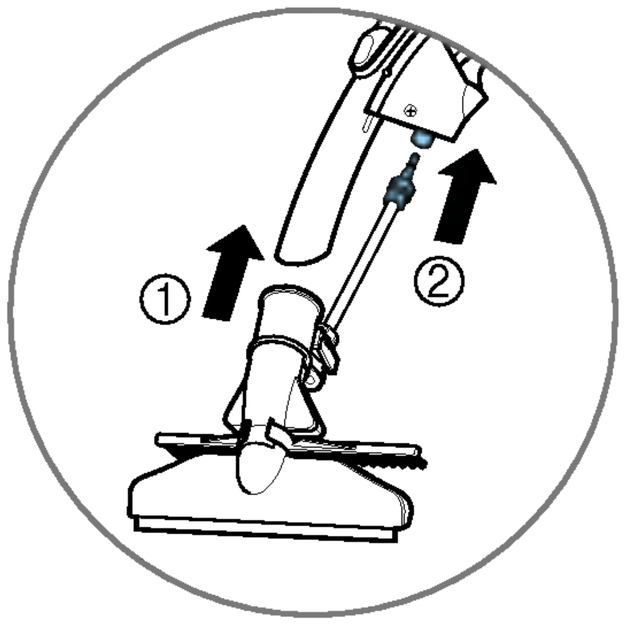

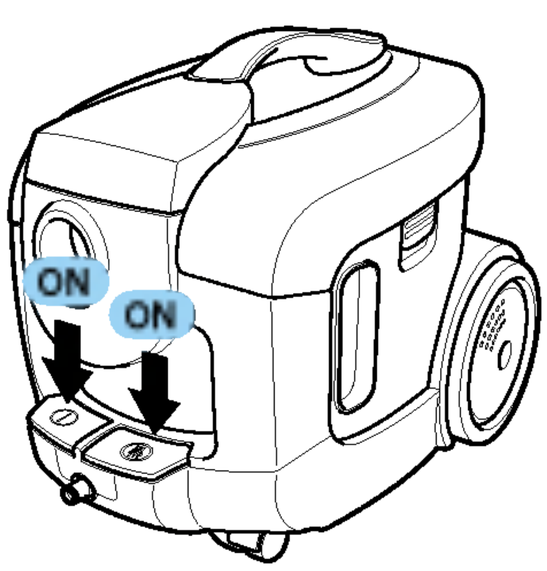




4 Rotating the Frame

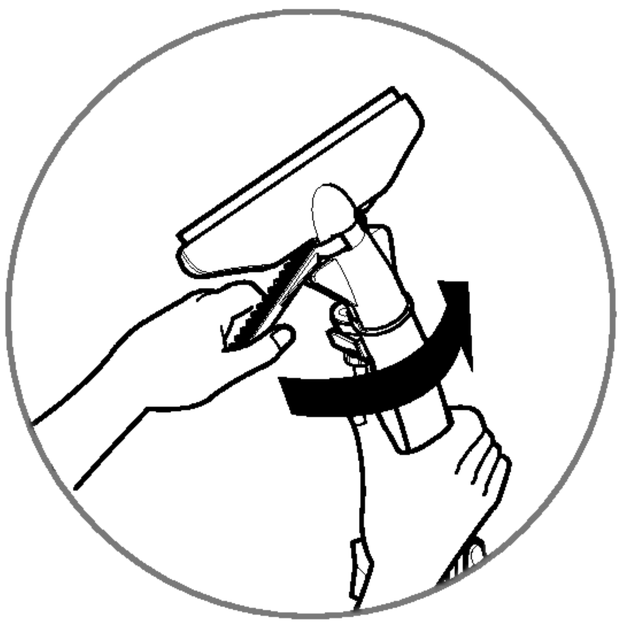

5 Turning off the Power & Shampoo Switch

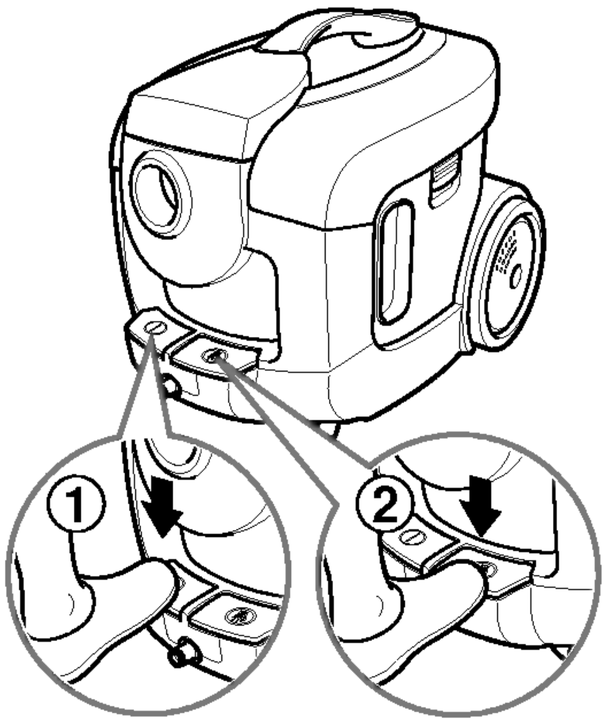


6 Cleaning Window



How to Use Sofa Cleaning


1 Connecting the Small Shompoo Nozzle

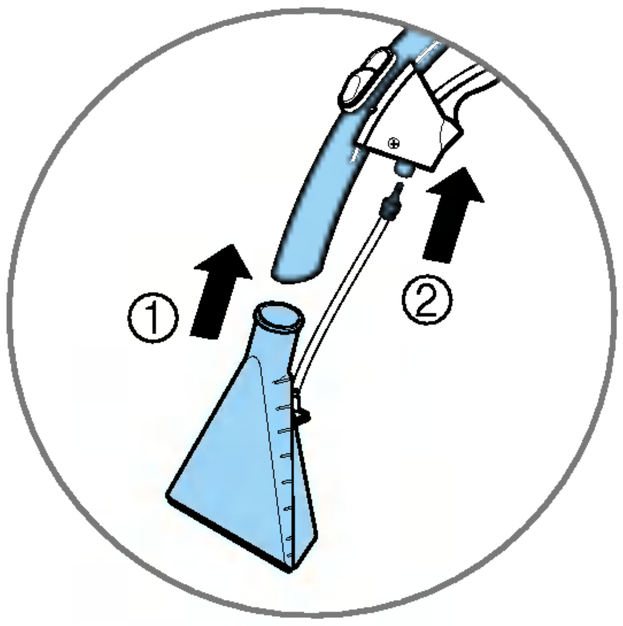

2 Cleaning the Sofa




3 Cleaning the Tile

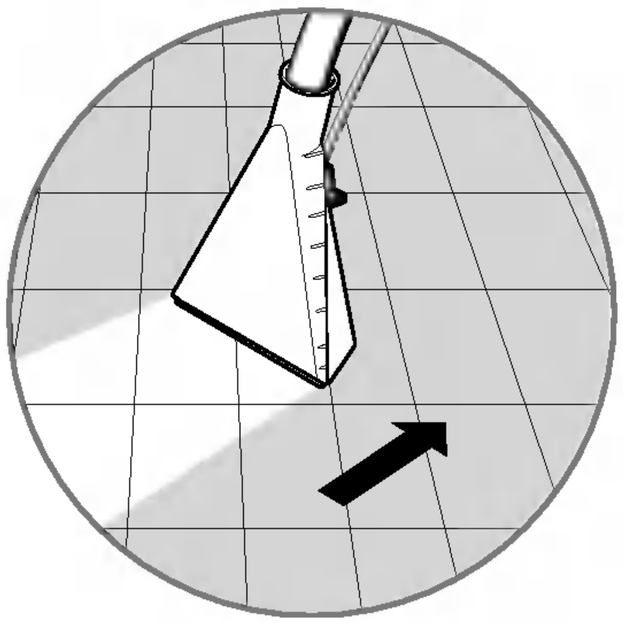


How to Use Blow Cleaning


1 Separating the Hose & Exhaust Cover

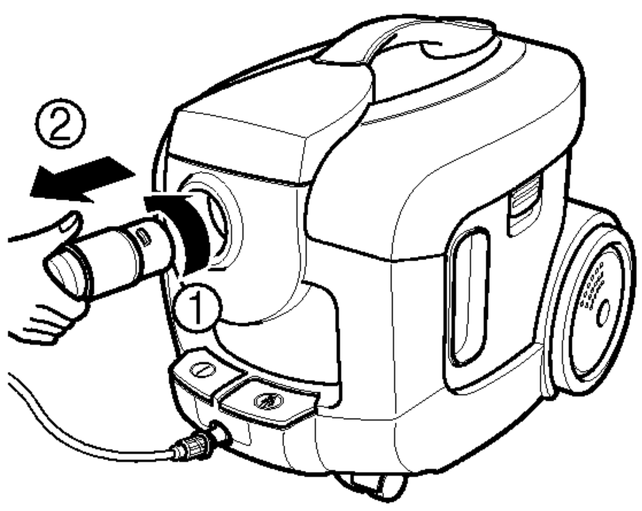


2

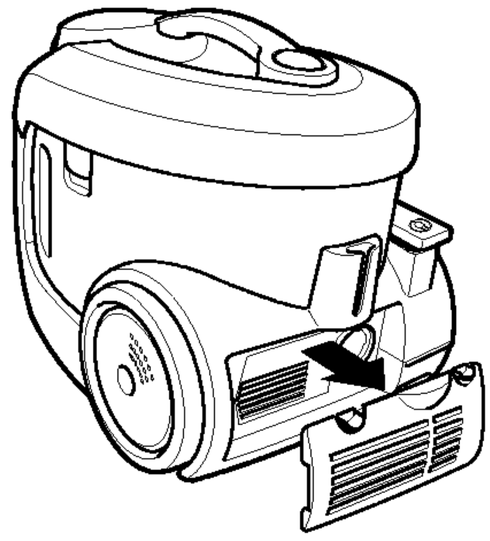

3 Connecting the Hose

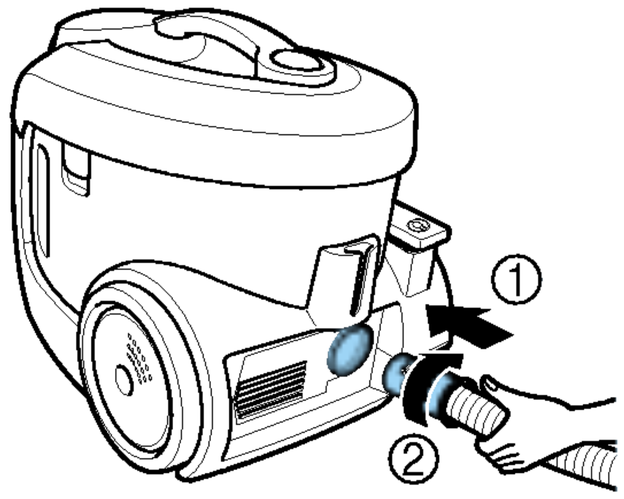

4 Turning on the Power Switch

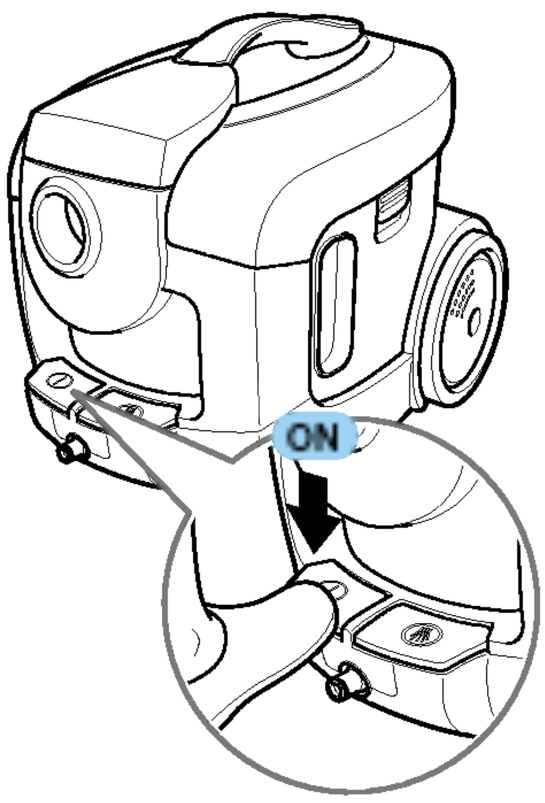

5 Blow Cleaning



Dust between window frames



Leaves on the steps


How to Use Dust Tank Cleaning

1 Separating Plates

2 Cleaning the Dust Tank

3 Pouring the Water

4 Connecting Plates

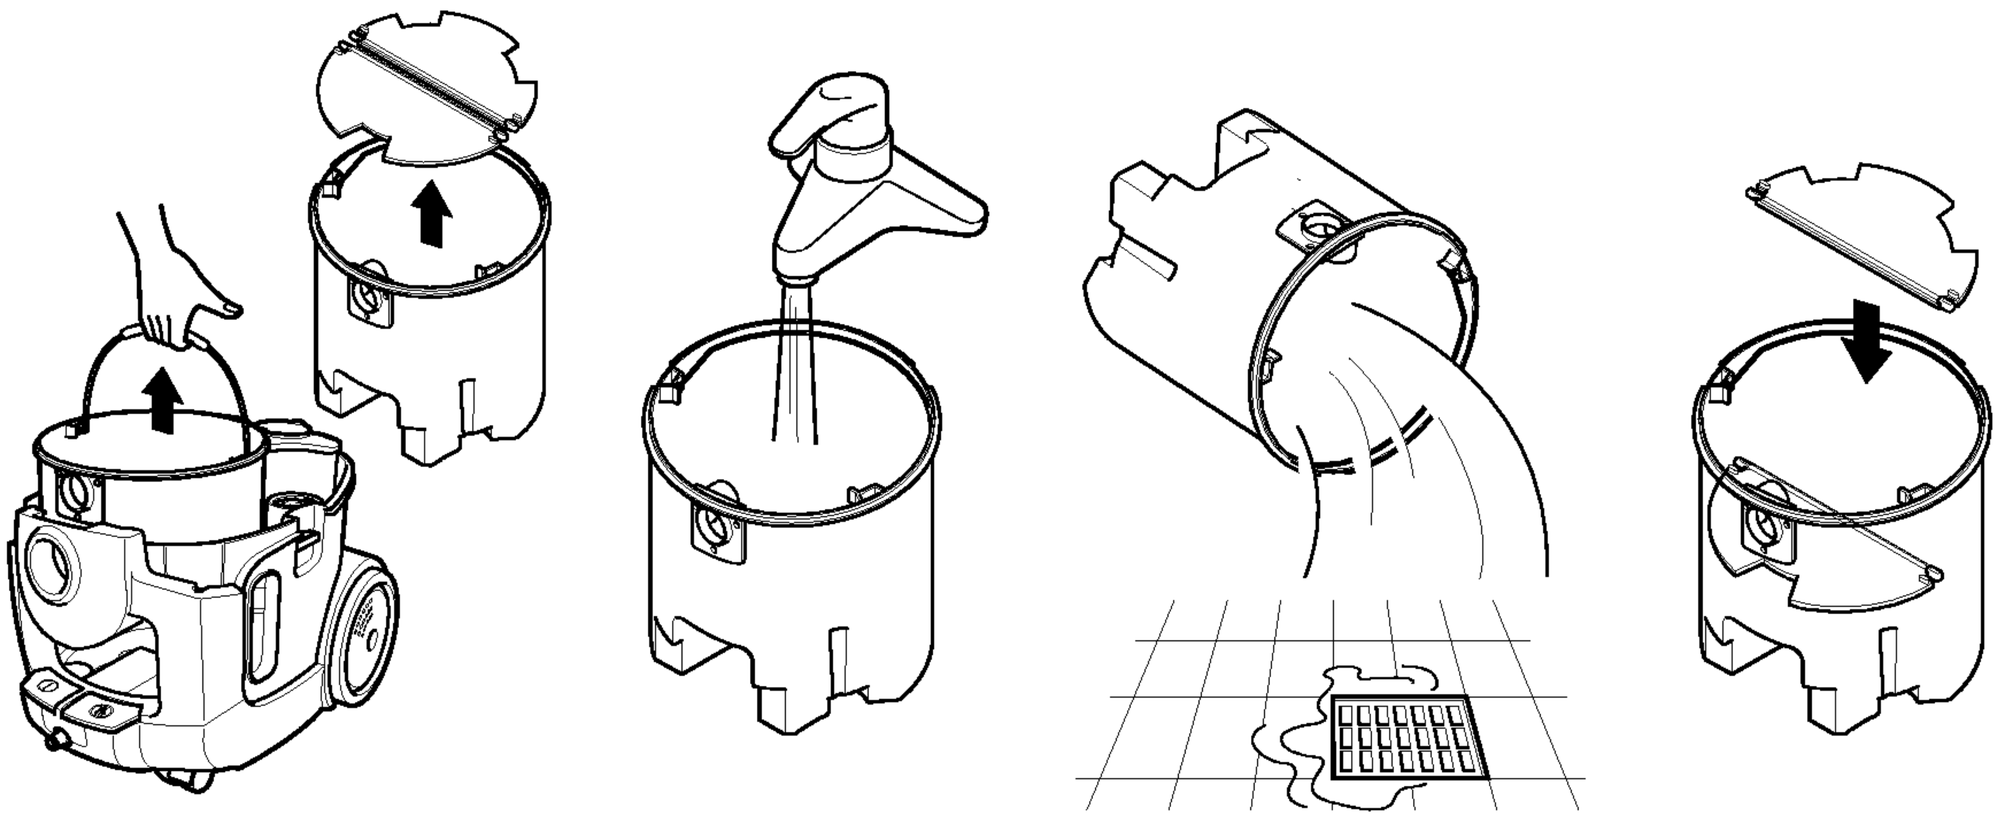


How to Use Clean Filter Cleaning

CAUTION!
Remove the moisture and dry the filter sufficiently in shade about a day.

1 Separating the Clean Filter

2 Cleaning the Clean Filter


3 Connecting the Cleaning Filter

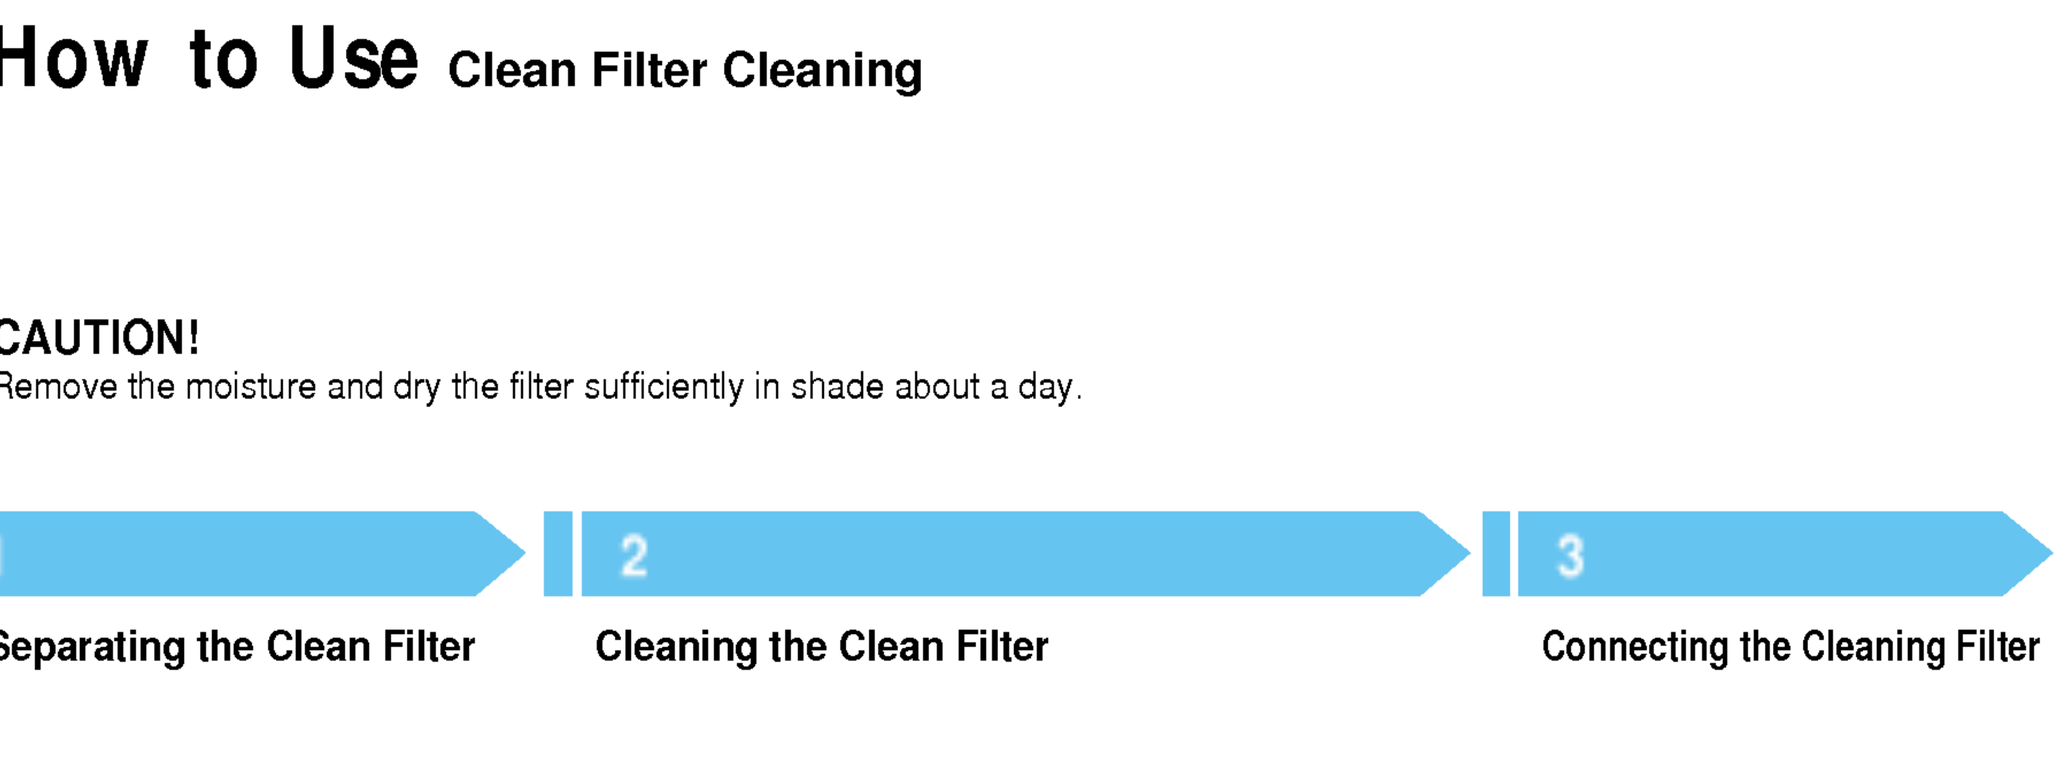


How to Use Exhaust Filter Cleaning

CAUTION!
Remove the moisture and dry the filter sufficiently in shade about a day.


1 **Separating the Exhaust Cover**

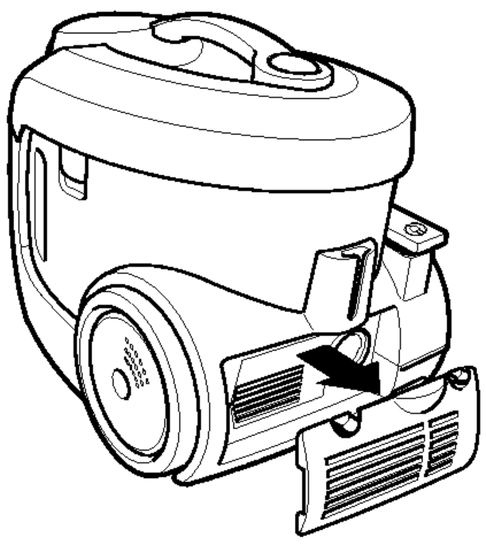

2 **Separating the Sponge**

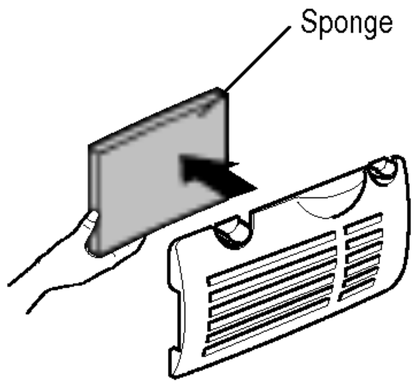


3 **Washing & Drying the Sponge.**

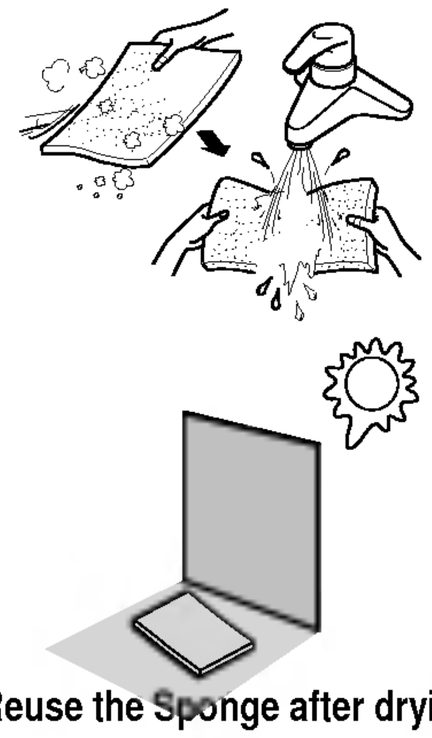

⚠ **Reuse the Sponge after drying**

4 **Connecting the Exhaust Cover**

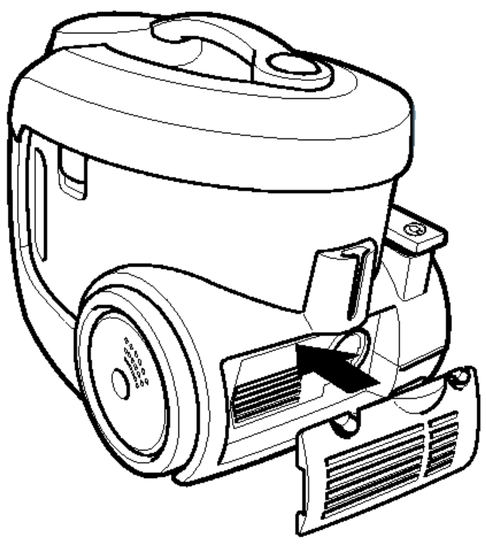


How to Use Carpet Master Cleaning

1 **Separating the Viewing Window**


2 **Opening the Air Cover**

3 **Cleaning the Dusting Brush**

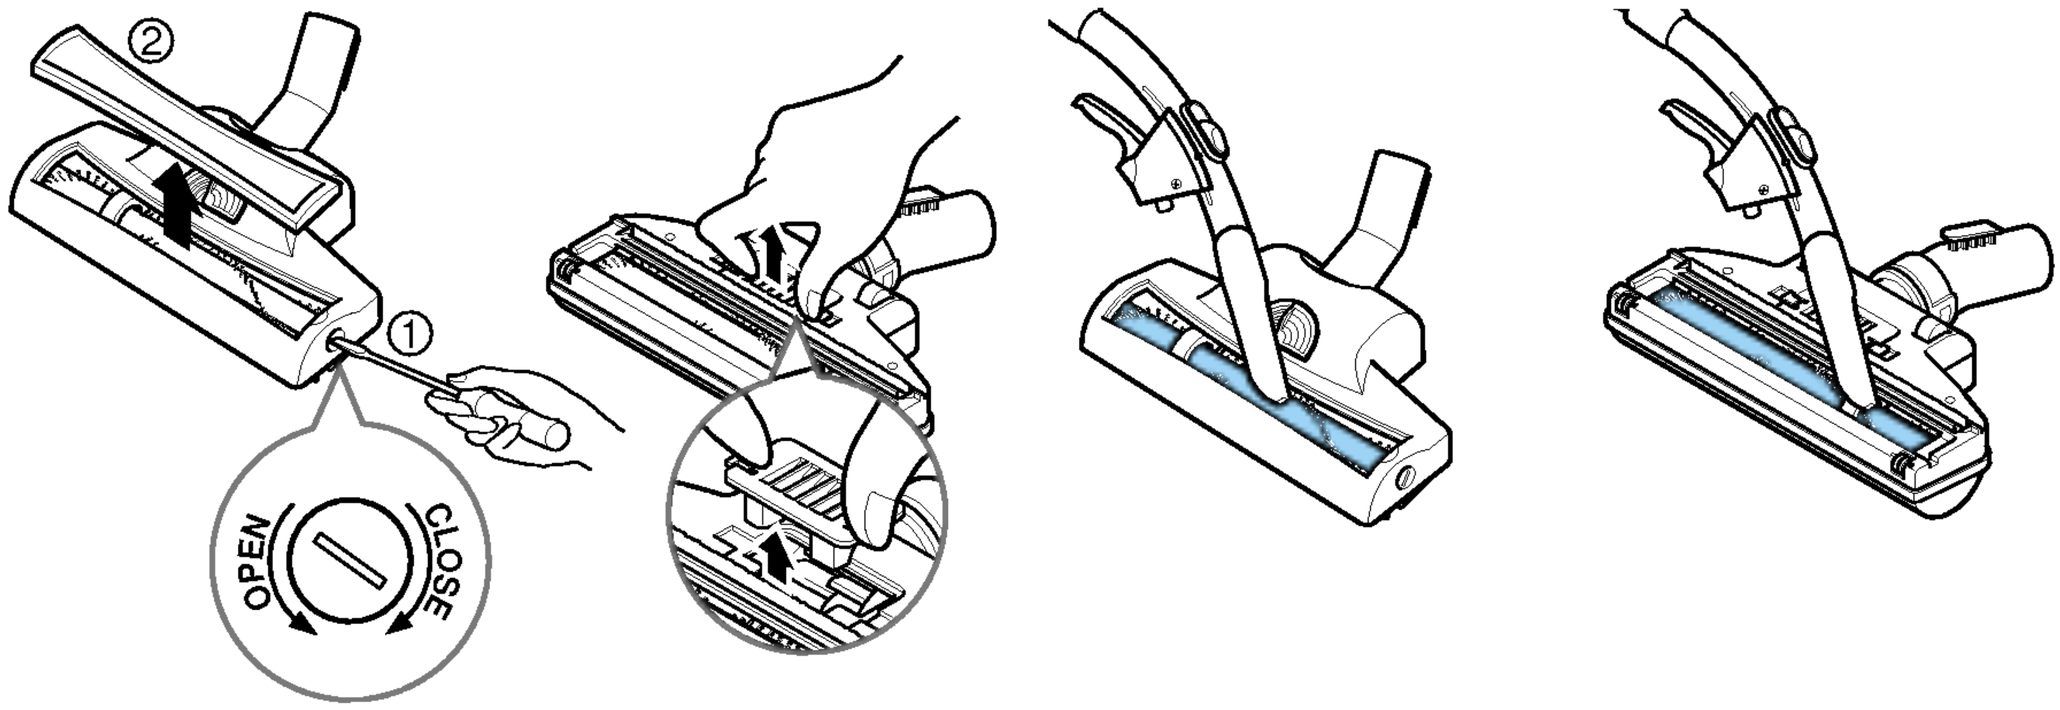


How to Use Shampoo Tank Net Cleaning


1 **Separating the Net**

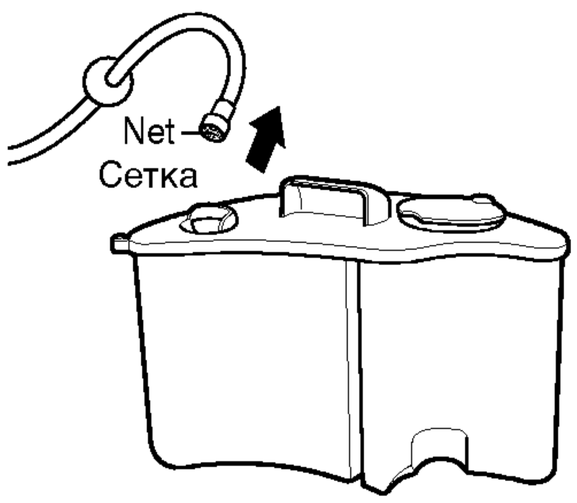


2 **Washing the Net**

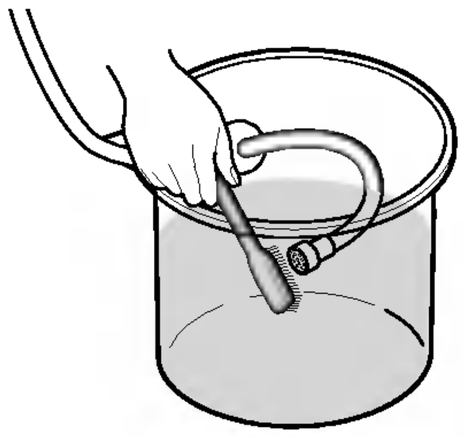

3 **Putting the Net into the Shampoo Tank**

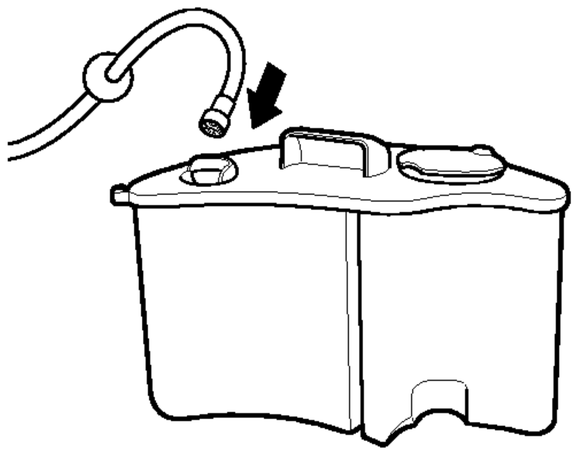

How to Use Storage

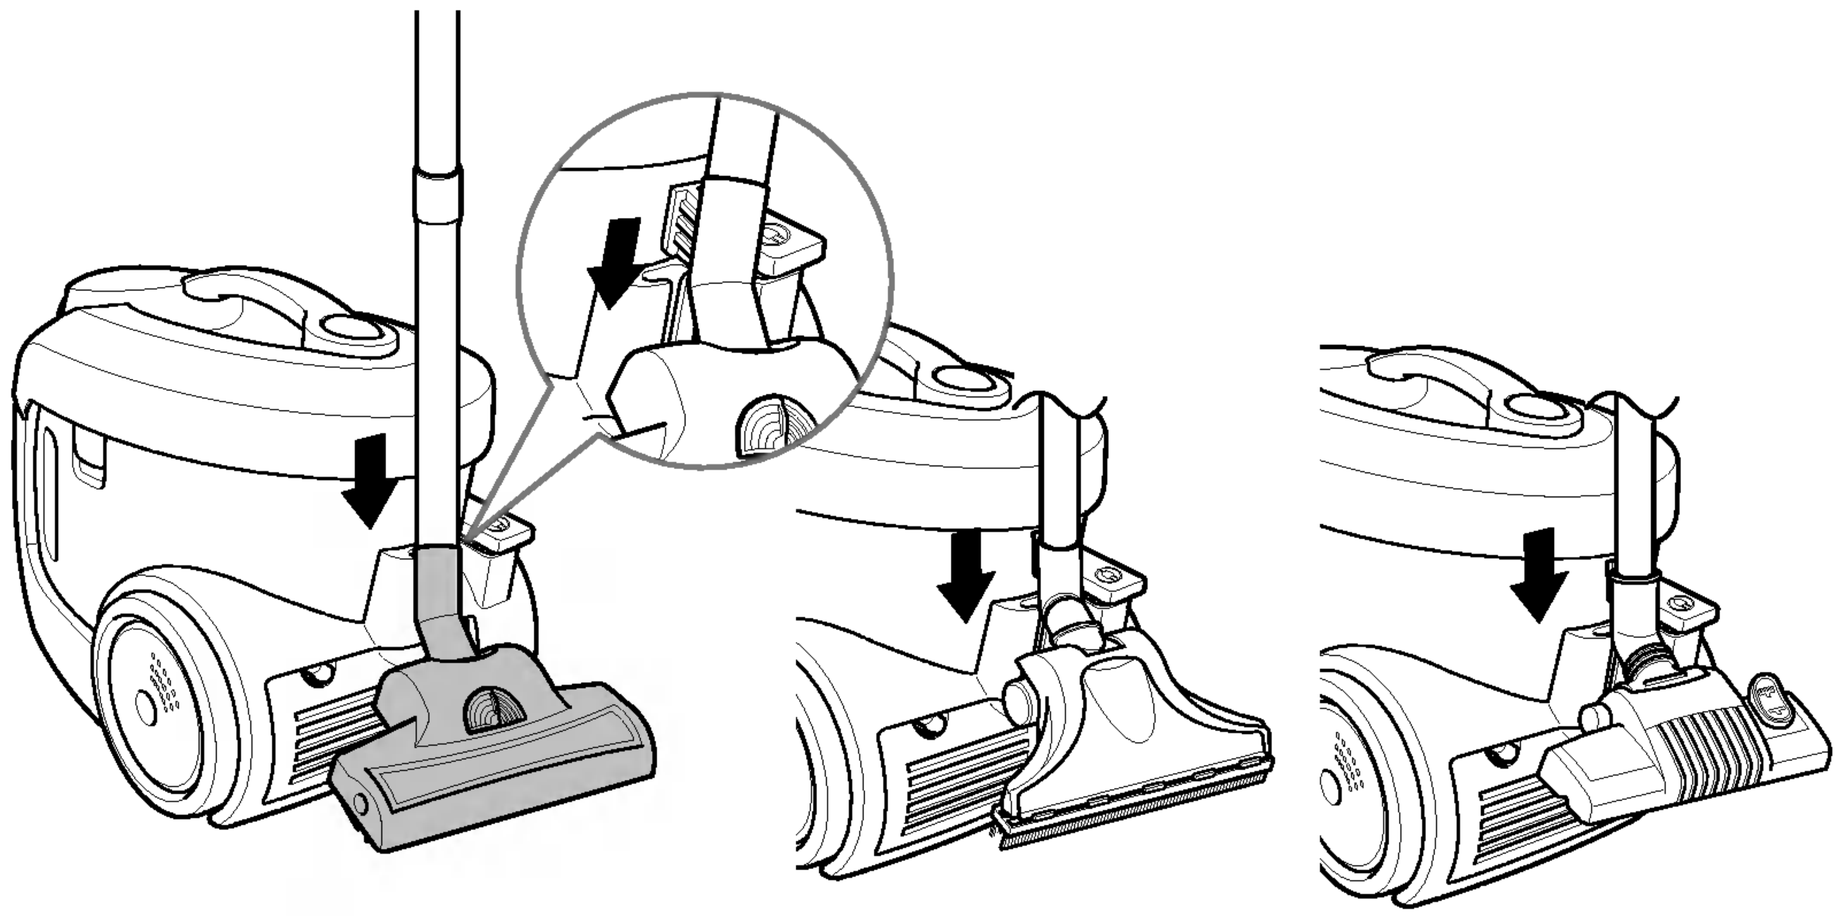

LG Electronics Inc.

P/No.: 3828FI3845C
Made in KOREA