OWNER'S MANUAL

VC7780CER

V-C7780CTV/ CTU/ CE/ CEU

Bagless vacuum cleaner

3828Fi3833J

Table of contents

Information for Your Safety.....3

How to Use.....4

Assembling the Cleaner 4

Using the cleaning head and Accessories.....6

Emptying the Dust Chamber 8

Operation.....9

Adjusting the Suction level 9

Park System 9

Cleaning the Motor Filter / Air Cleaner 10

Cleaning the Dust Chamber 11

Cleaning the Exhaust Filter 11

User's Guide for Sani Punch Vacuum Nozzle(Option).....12

What to do if there is something wrong with your Vacuum Cleaner 16

What to Do if your Vacuum Cleaner Does Not Work.....16

What to Do When Suction Performance Decreases 16

Information for your safety

Please read all the following information, which contains important instructions for the safety, the use and the maintenance of the appliance.
This appliance complies with the following EC Directives: -73/23/EEC, 93/68/EEC-Low Voltage Directive-89/336EEC -EMC Directive.

- ❏ Never allow children to use the appliance unsupervised.
- ❏ Do not use the appliance If the mains lead is damaged or faulty.
- ❏ If the mains lead is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.
- ❏ Always switch the vacuum cleaner off before:
  - • Emptying the dust chamber.
  - • Cleaning or changing the filters.
- ❏ Do not vacuum flammable or explosive substances(liquids or gases).
- ❏ Do not vacuum hot ash, embers etc. nor sharp objects.
- ❏ Do not vacuum water or other liquids.
- ❏ When you vacuum with an attachment appliance that has a rotating brush roller:
  - • Do not reach into the running brush roller.


Important for users in the UK.
The wires in the mains lead of this appliance are coloured in accordance with the following code:

BLUE-neutral **BROWN - live**

VERY IMPORTANT:
Neither wire is to be connected to the earth terminal of a 3 pin plug. If a 13 amp plug is fitted, fit a 13 amp **BS 1362 fuse.**
If any other type of plug is used, protect with a 15 amp fuse at the distribution board.
For appliances which come with mains lead and plug moulded on: the plug moulded on to the cord incorporates a fuse.
For replacement use a 13 amp BS 1362 fuse.
Only ASTA approved or certified fuses should be used.
The fuse cover/carrier must be replaced in the event of changing the fuse.


Assembling Cleaner

Fit the large cleaning head onto the end of the tube.

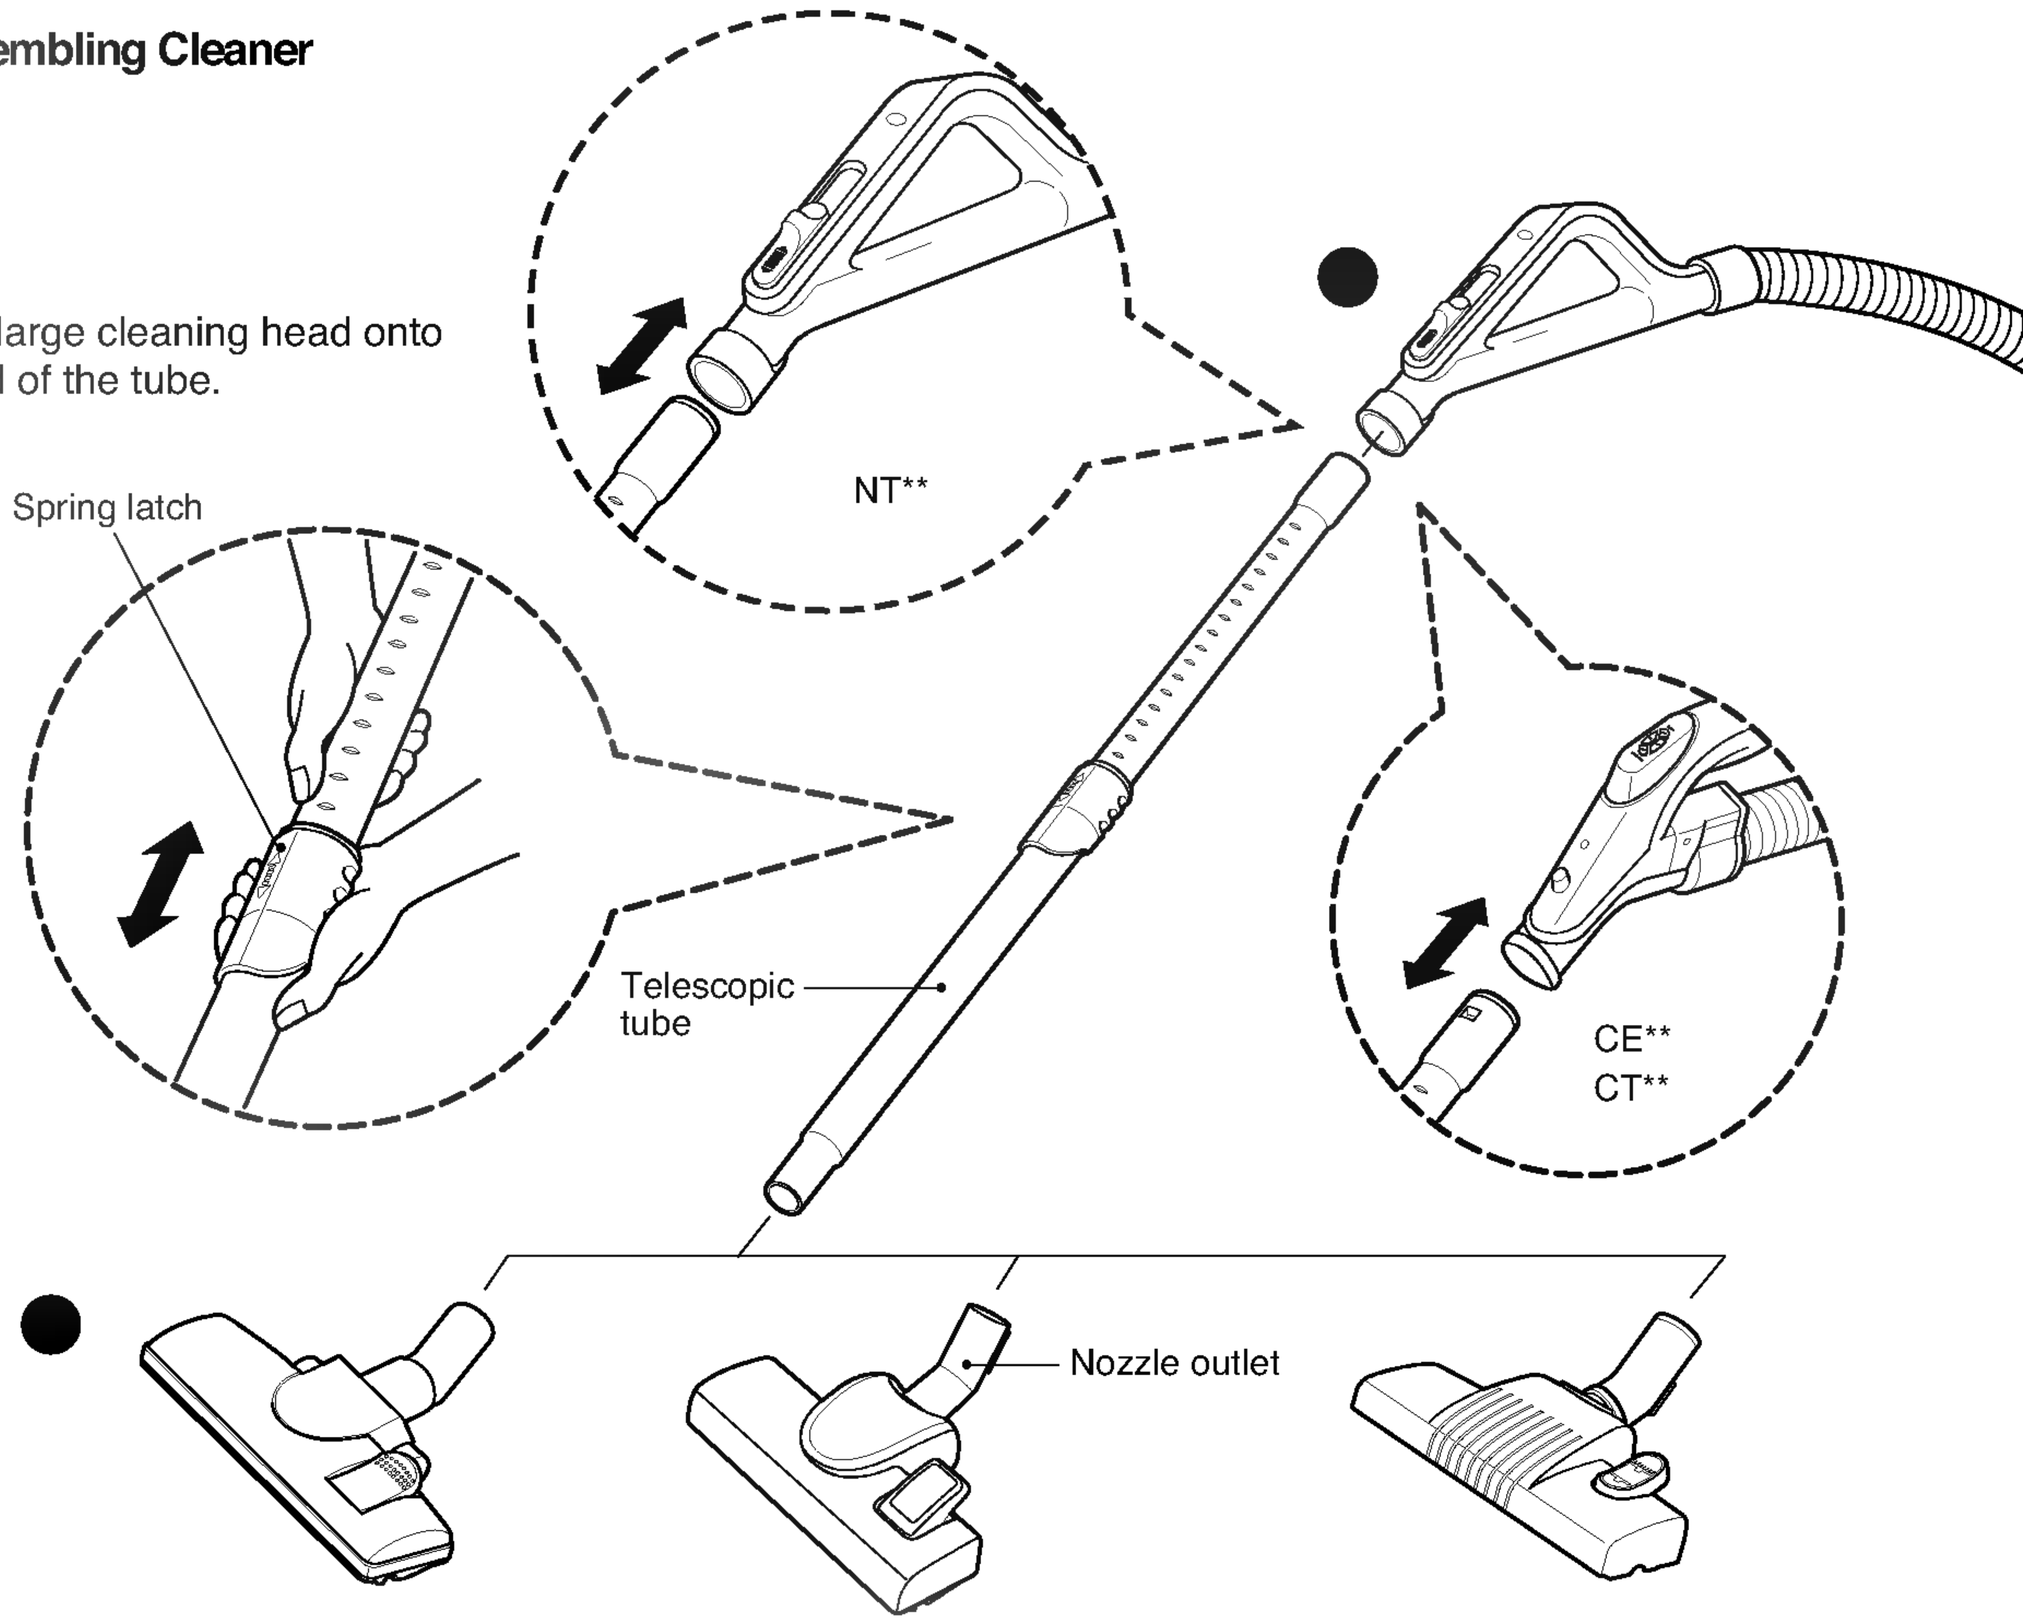

Push the head onto the telescopic tube.


- Press the spring latch to release.
- Pull out the tube to the desired length.
- Release spring latch to lock the tube in position.
- Push telescopic tube into hose handle until catch clicks.

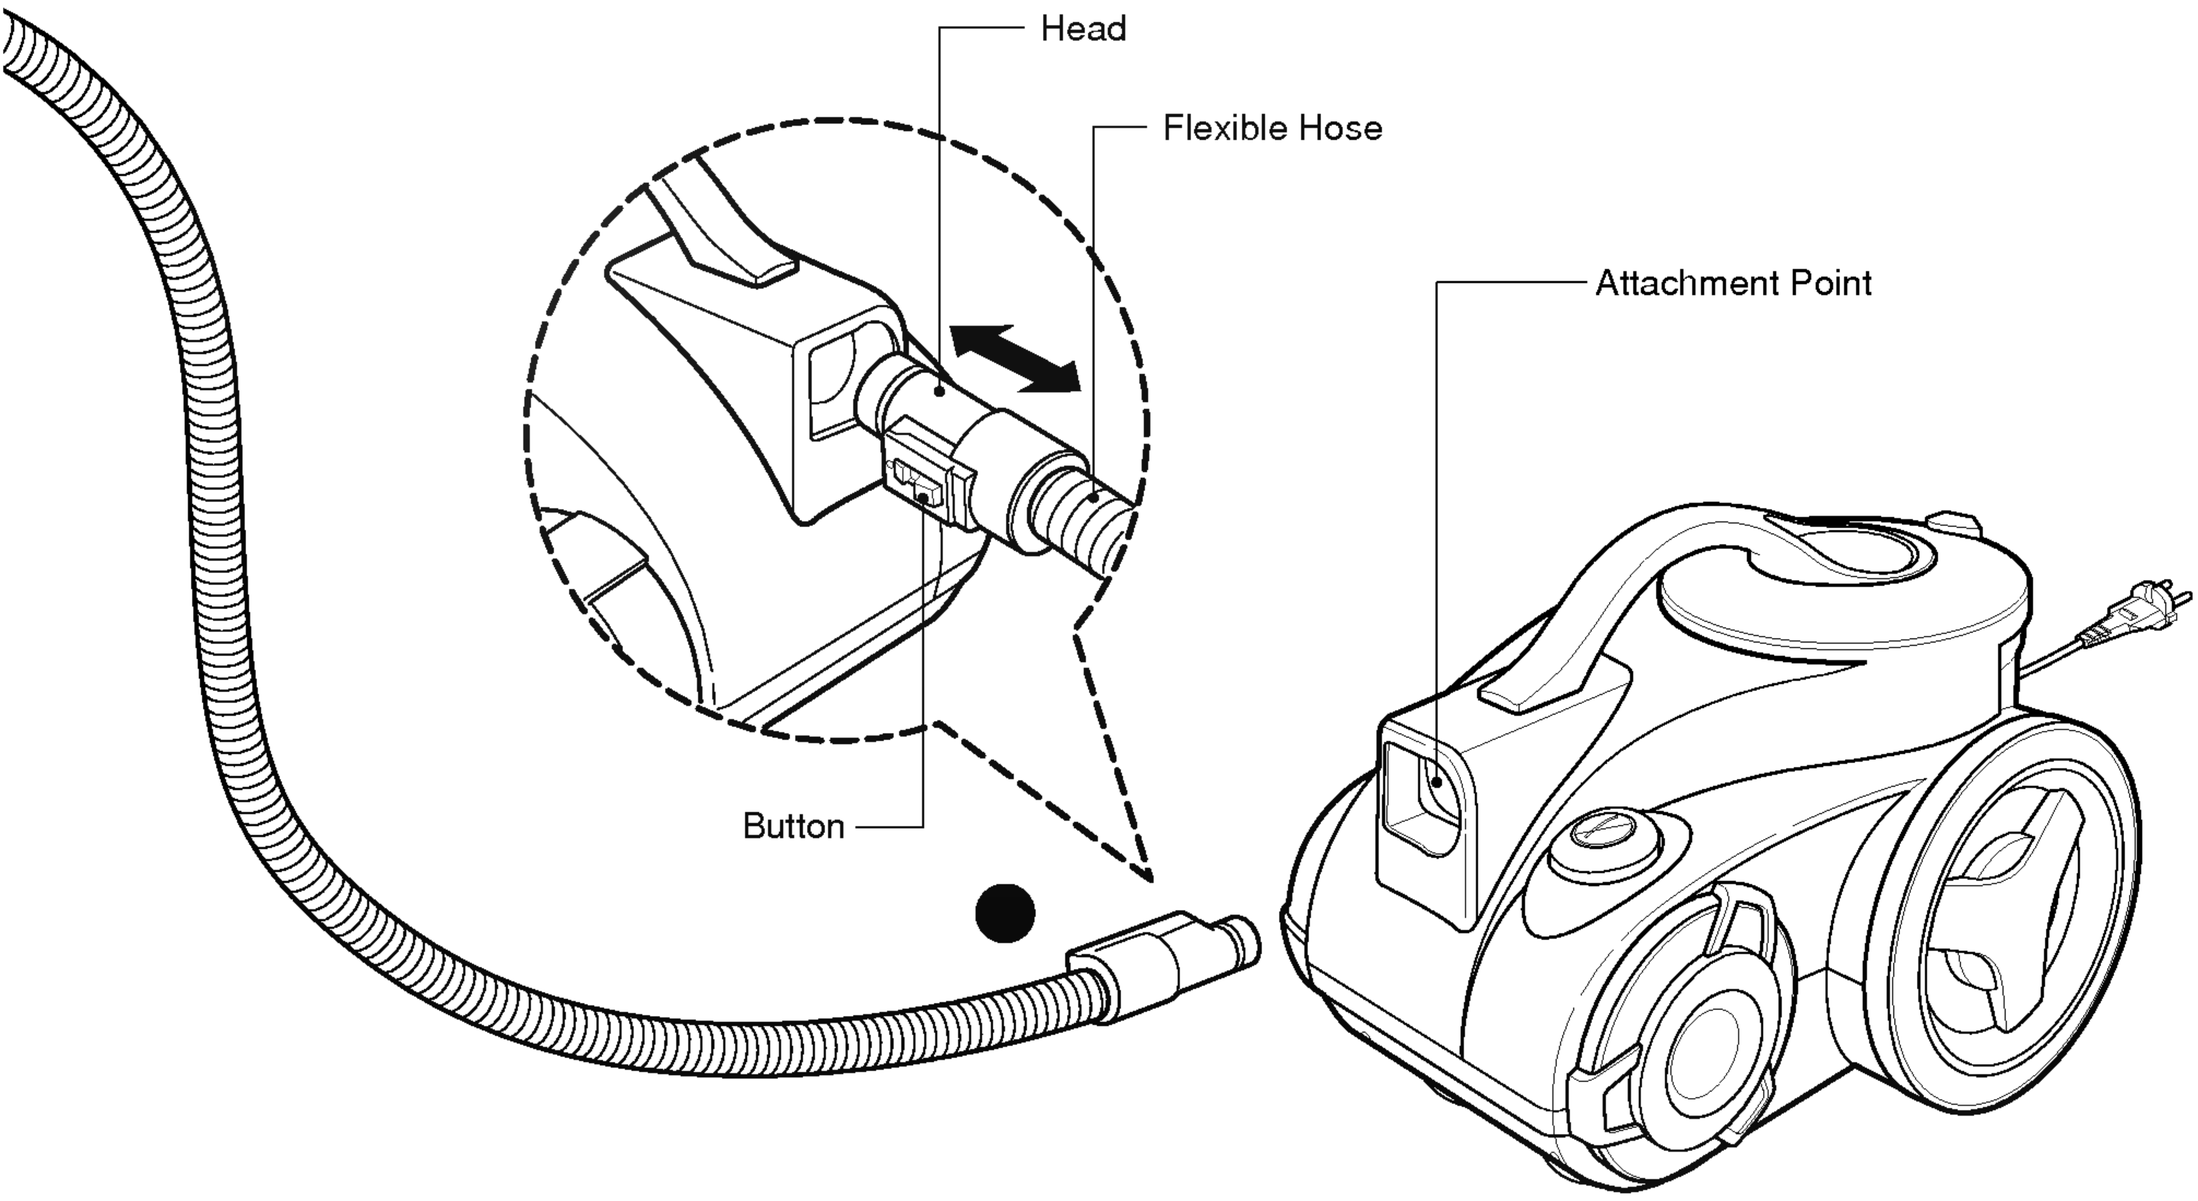


Push the end of the head on the flexible hose into the attachment point on the vacuum cleaner. To remove the flexible hose from the vacuum cleaner, press on the button situated on the head, then pull the head out of the vacuum cleaner.

Using the cleaning head and Accessories


Tear the vinyl bag and pull out accessories.
Attach the accessory holder into the side hole of body.
And then, Fit the Dusting Brush & Crevice Tool and Upholstery Nozzle onto the accessory holder.
Fit the accessory onto the end of the tube.

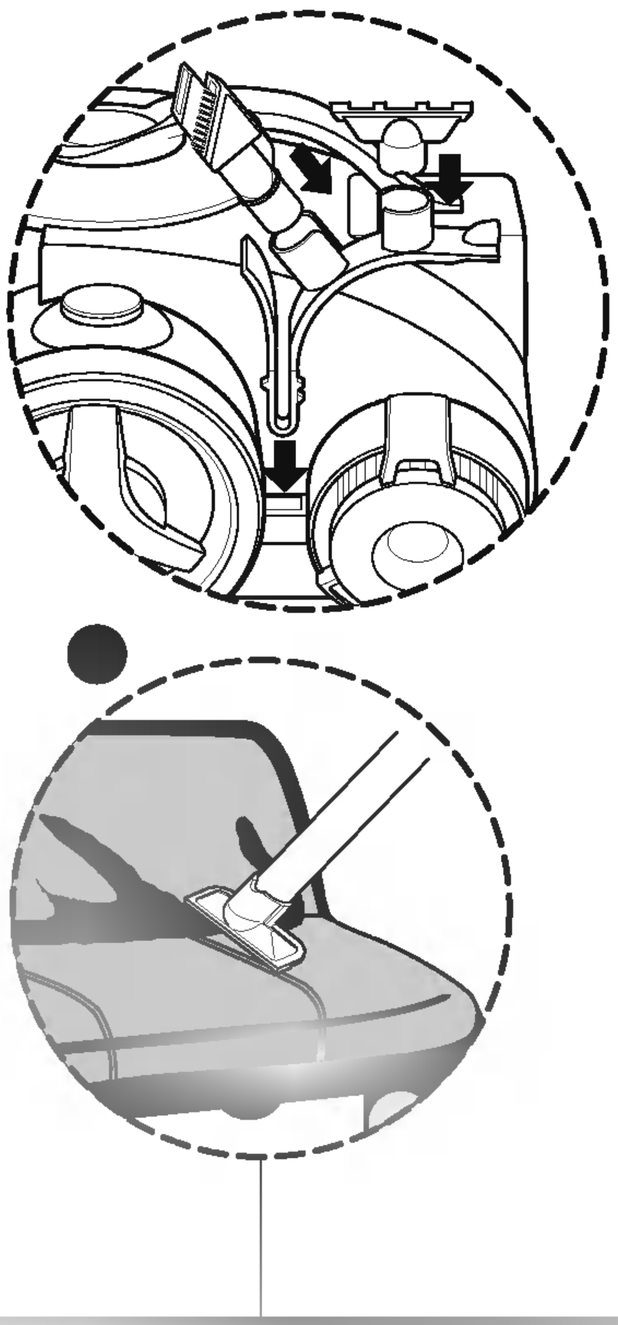

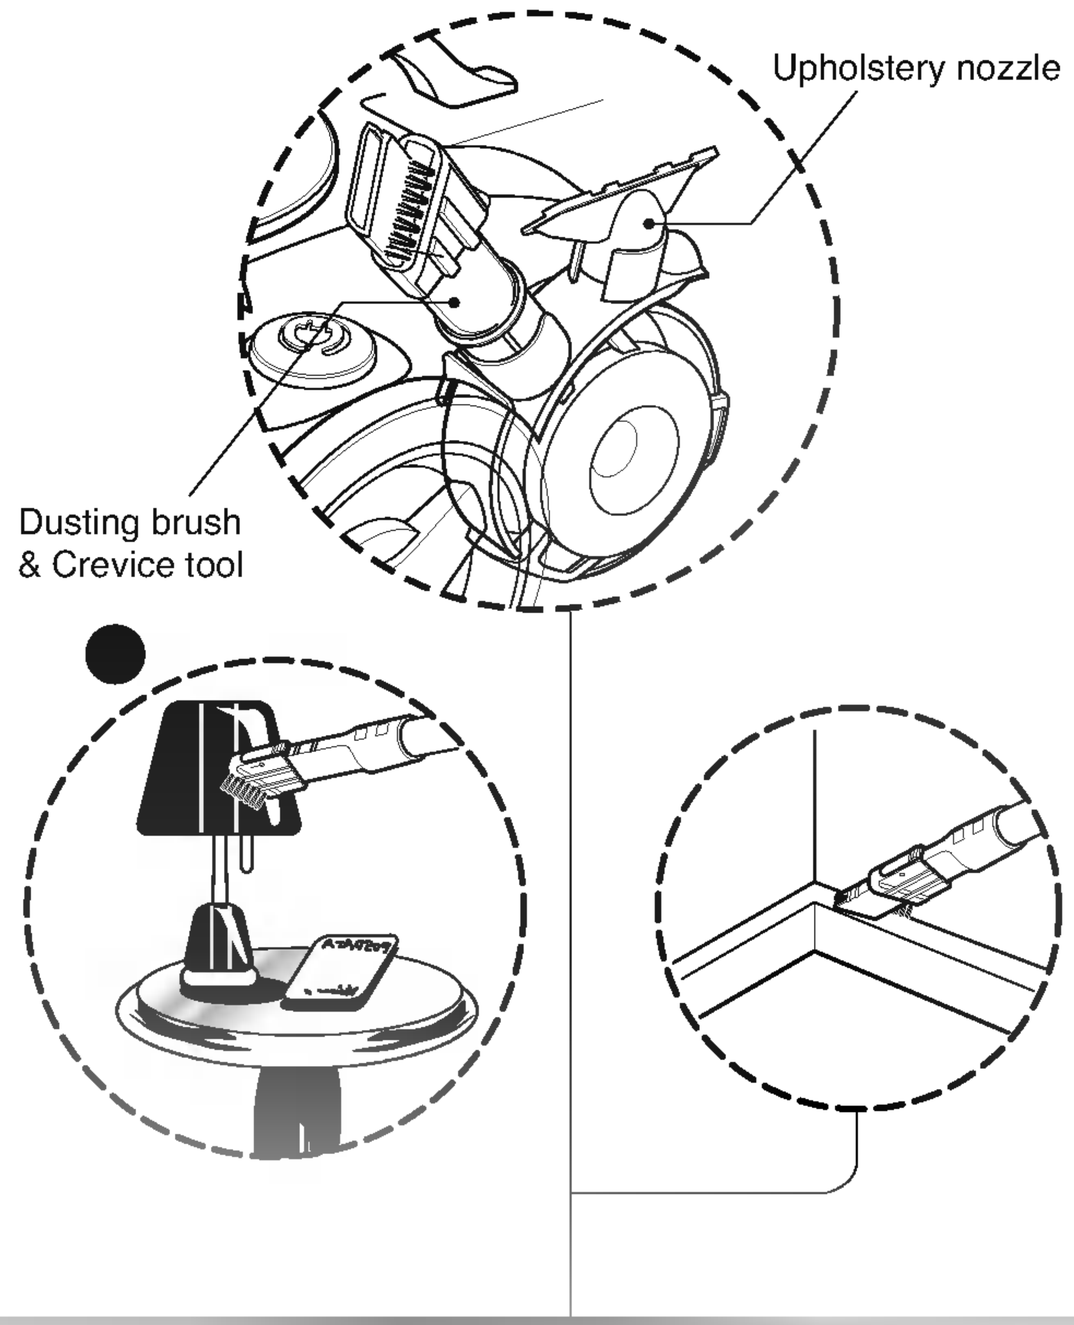



Upholstery Nozzle is for vacuuming upholstery, mattresses, etc.
The thread collectors help to pick up the threads and fluff.


The dusting Brush is for vacuuming picture frames, furniture frames, books and other hard surfaces.
Crevice Tool is for vacuuming in those normally hard-to-reach places such as reaching cobwebs, or between the cushions of a sofa.

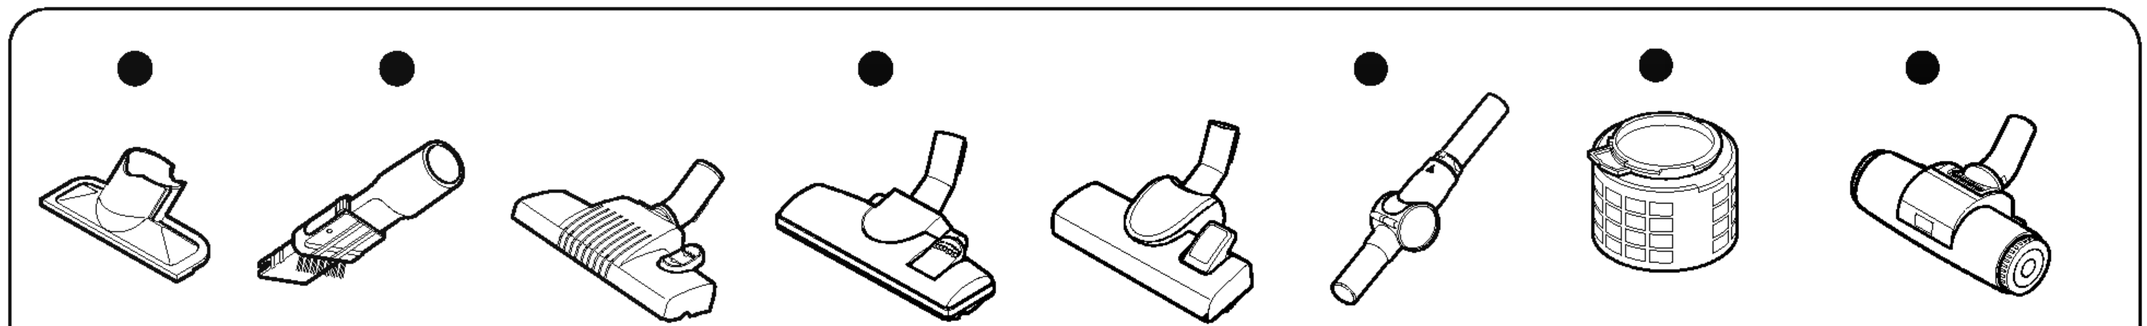

(Refer to Page 6) (See below) (See below) (Refer to Page 10) (Refer to Page 12-15)

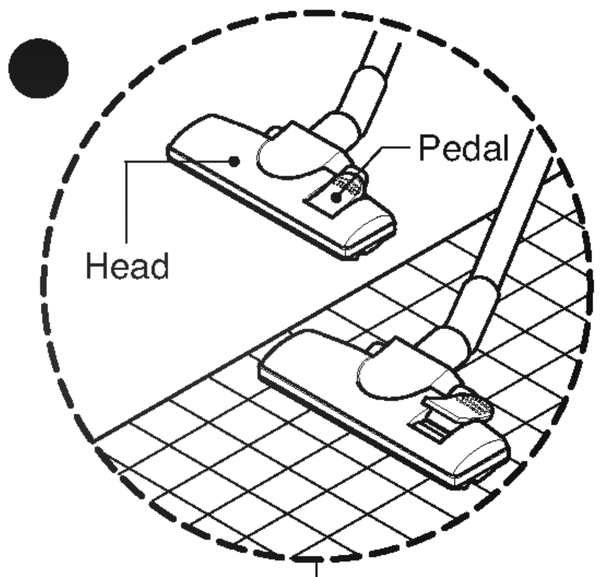

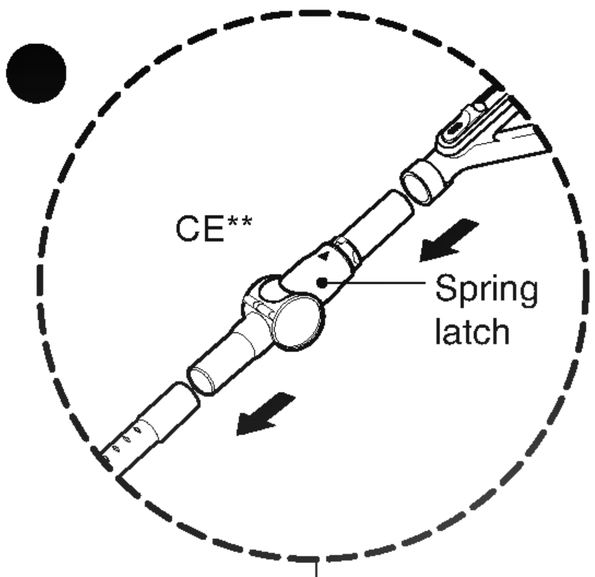

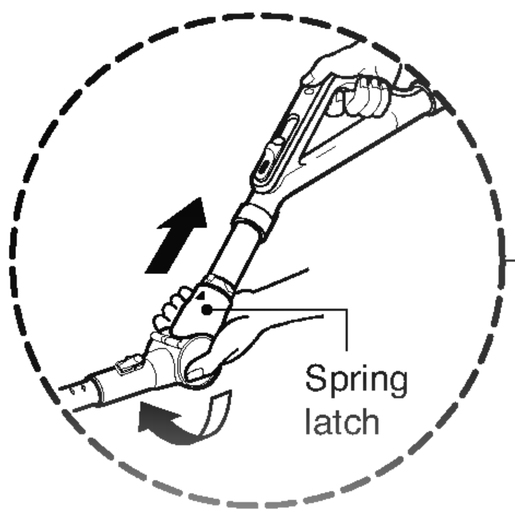




C K

- **The 2 position cleaning head is** equipped with a pedal which allows you to alter the brush position according to the type of floor to be cleaned.
- **Hard floor position(tiles, parquets floor)**
  Press the pedal to lower brush.
- **Carpet or rug position**
  Press the pedal to use the brush.

Elbow tube is for cleaning under the sofa, table and bed easily.

- Connect the elbow tube to the flexible hose and, connect the telescopic tube to the elbow tube. (You can also connect the telescopic tube to the flexible hose without the elbow tube.)
- If you pull the spring latch, the elbow tube can be bent.
- If you stretch the elbow tube, it is returned to its position.


Emptying the dust chamber

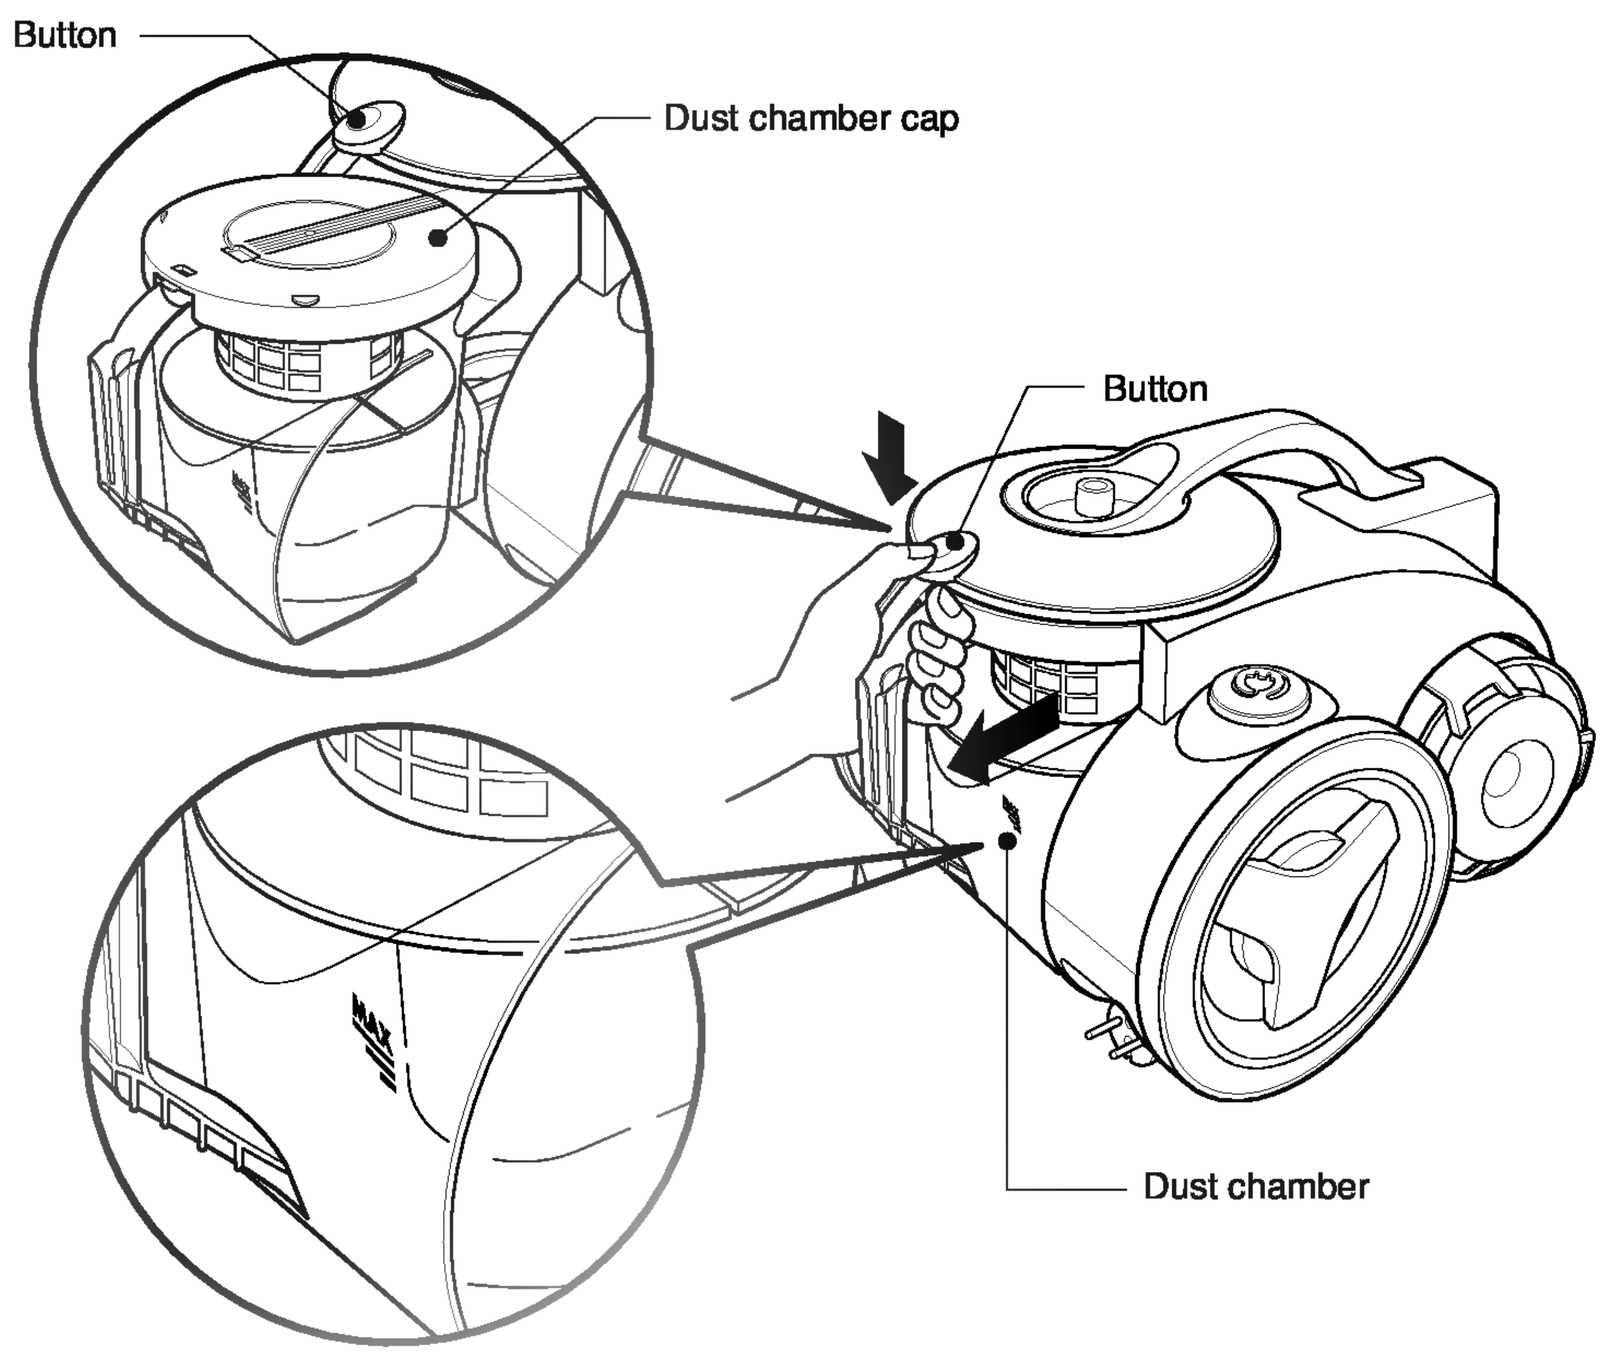



The dust chamber needs emptying when dust reaches the MAX indicator on the dust tank.


- Turn off the vacuum cleaner and unplug it.
- Press the button of the cover and pull the dust chamber out. Remove the dust chamber cap and empty the dust chamber.
- To reinstall the dust chamber, replace the dust chamber cap and push the dust chamber into the tank mount as far as it will go.

Operation

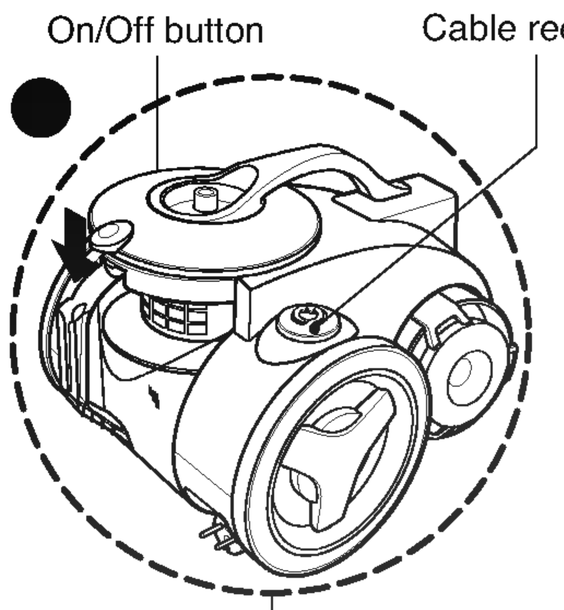

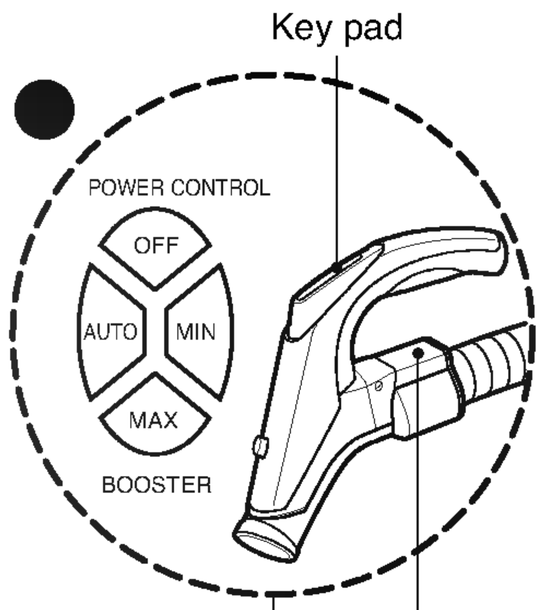

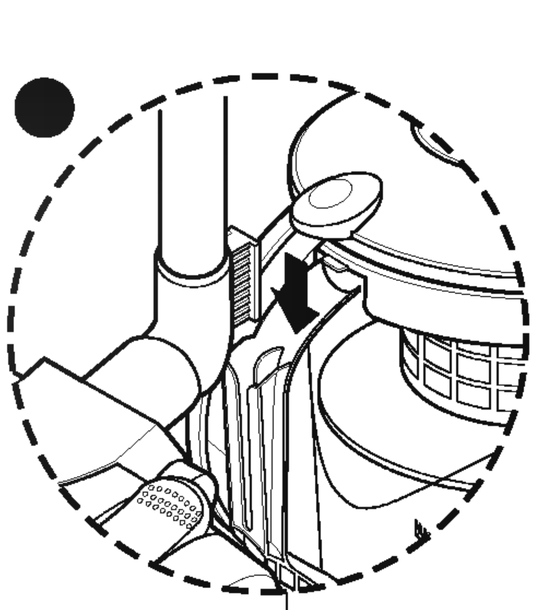

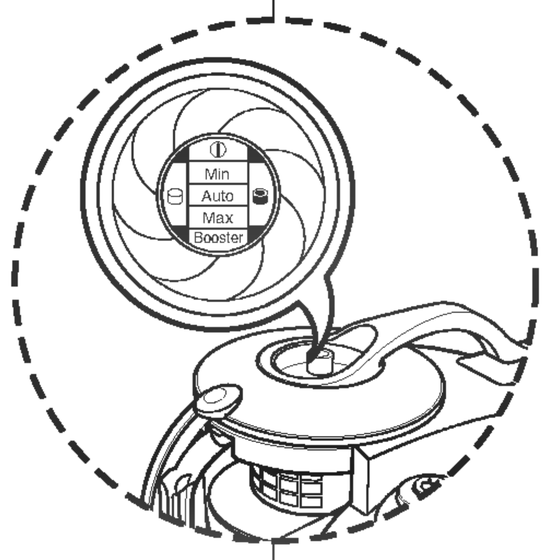


C K

- Pull out the power cord to the desired length and put plug into the socket.
- Press On/Off button to start the vacuum cleaner.
- To stop it, press On/Off button again.
- Press the cable reel button to retract the power cord after use.

- Adjust the power by using the power control switch in the handle.
- When you press the button that you desire, the light comes on.
- If you press the Auto button, the power is automatically adjusted by the amount of dust.
- When you want to use the booster, push the max button twice.
  - Do not press the max button more than five times continuously.
  - Continuously booster working, the motor temperature is in creased.

- To store after vacuuming and pause while vacuuming.
  - When you have finished vacuuming, use the Park System to support the flexible hose and cleaning head.
  - Slide the hook on the large cleaning head into the slot on the handle of the dust chamber.

Cleaning the Motor Filter/Air cleaner

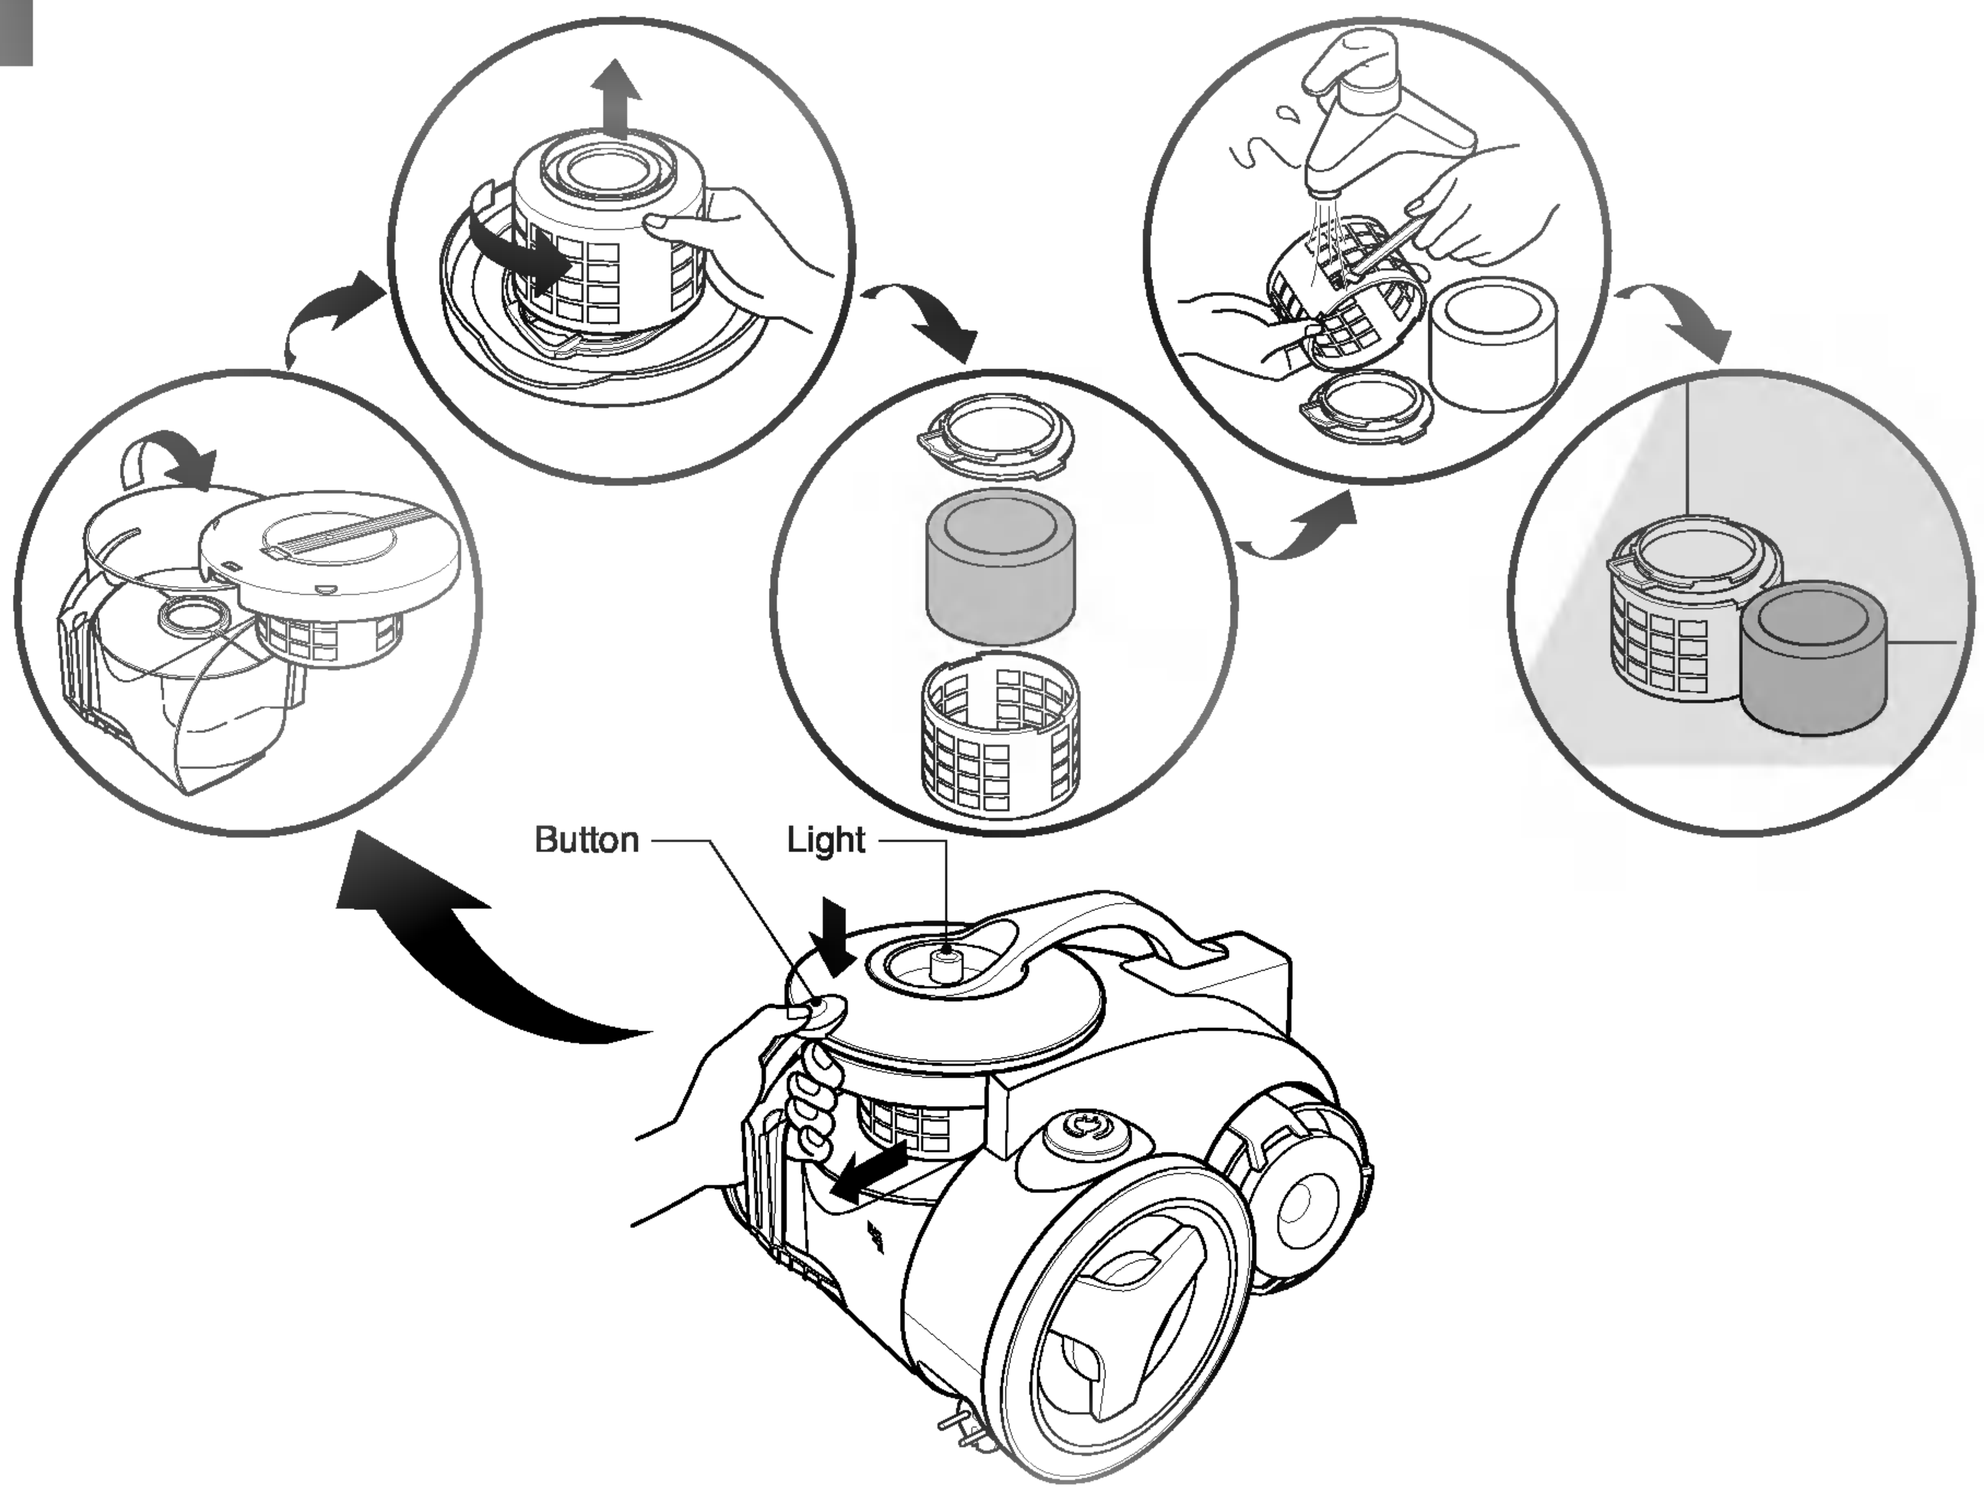


The permanent motor filter is situated under the dust chamber cap.
When the filter light comes on the motor filter requires cleaning.

- Press the button of cover and pull the dust chamber out.
- Open the dust chamber cap.
- Remove the motor filter by rotating it counter-clockwise.
- Clean the motor filter with the brush under cold running water.
- Allow the motor filter to dry naturally, the motor filter should be cleaned every 6 months.
- The spare motor filter must be used while the other motor filter is drying.

⚠ WARNING!

Gently rinse both parts separately under cold running water until the water runs clear. **Hand wash only with damp cloth.**
Shake off excess water from the filter.
Do not tumble/spindry, microwave or place in oven or on direct heat.
Ensure the filter is completely dry.
Re-assemble and place it back in your machine, filter frame.

Cleaning the Dust Chamber

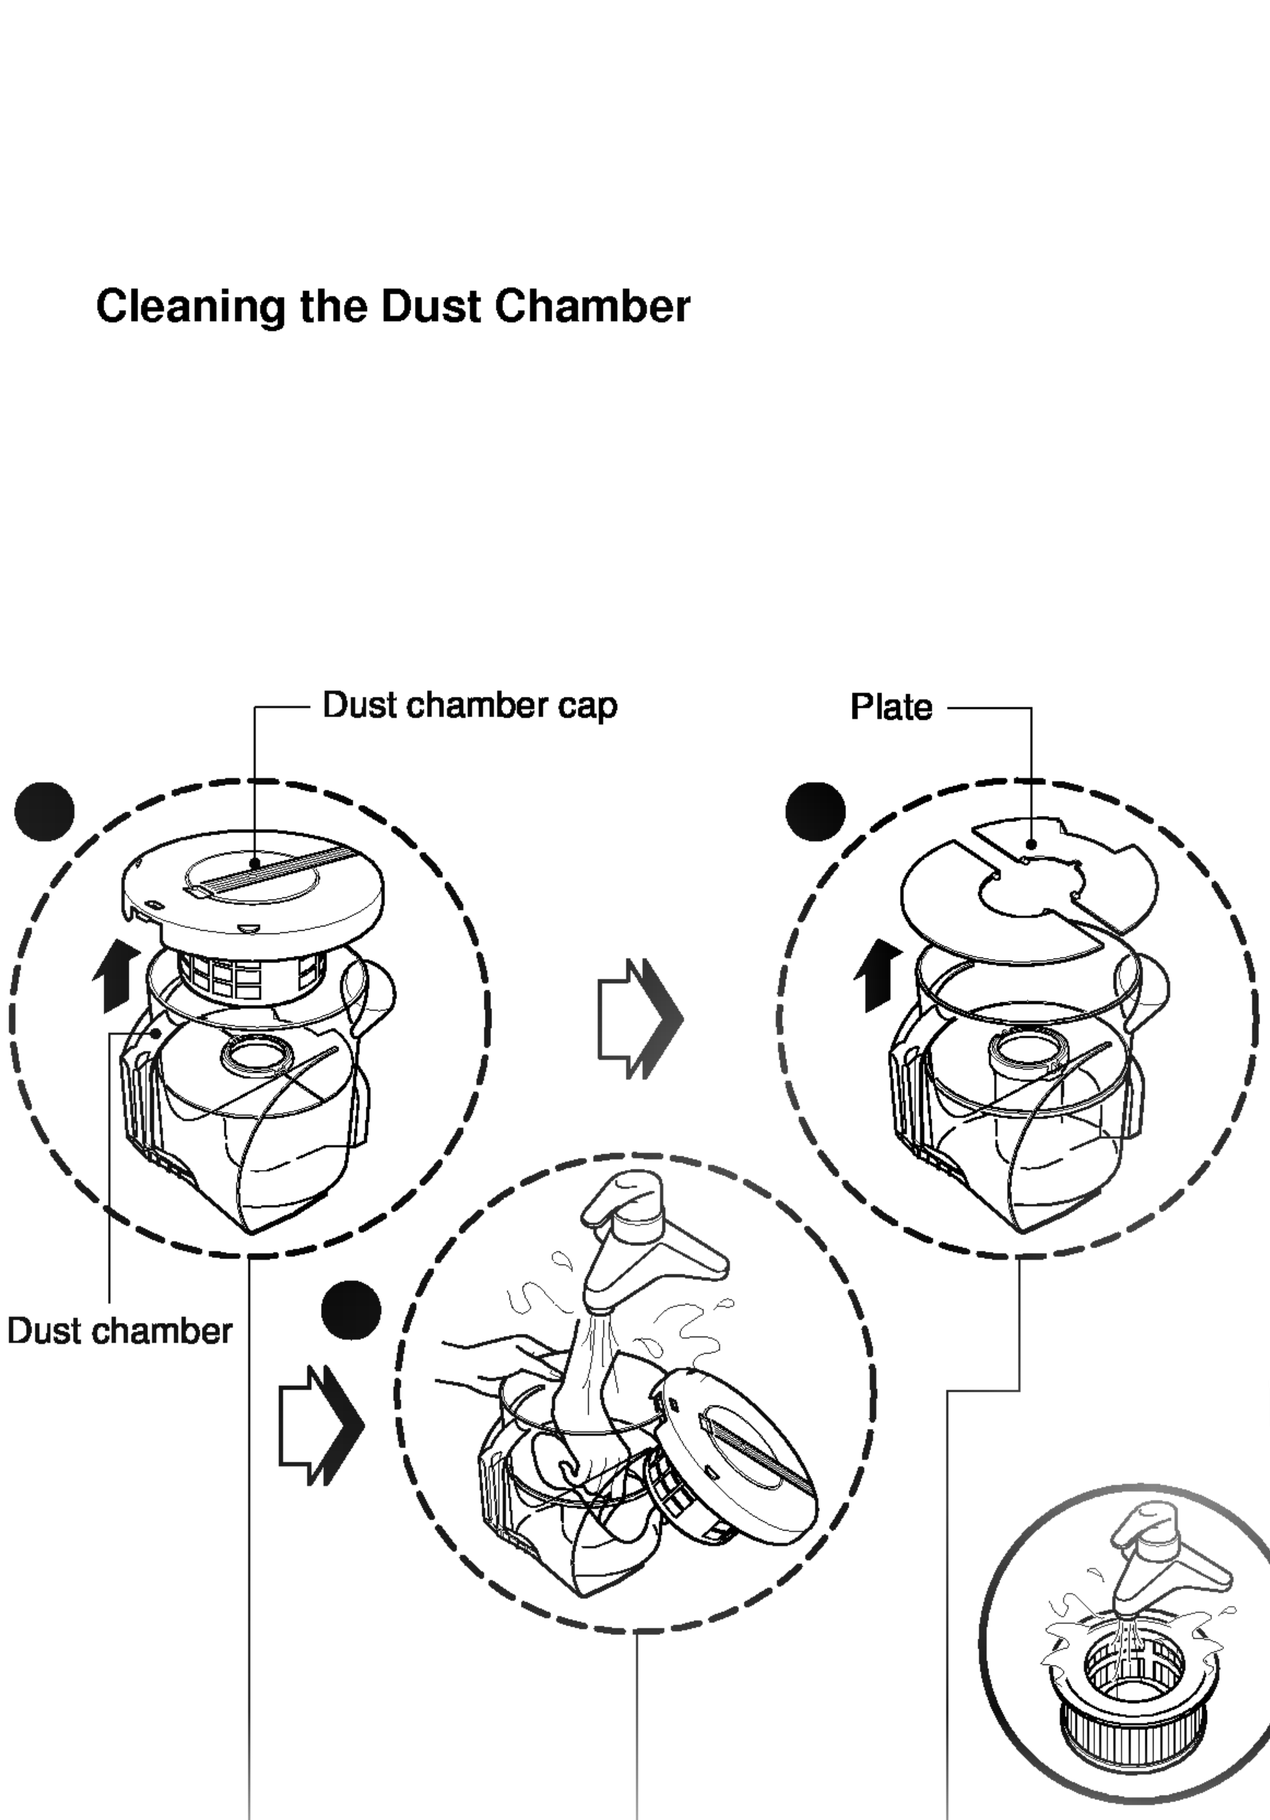


❶ Open the dust chamber cap.

❷ Remove two plates from the dust chamber.

❸ Wash both parts with soft cloth.
Gently rinse both parts under cold running water.

Cleaning the Exhaust Filters

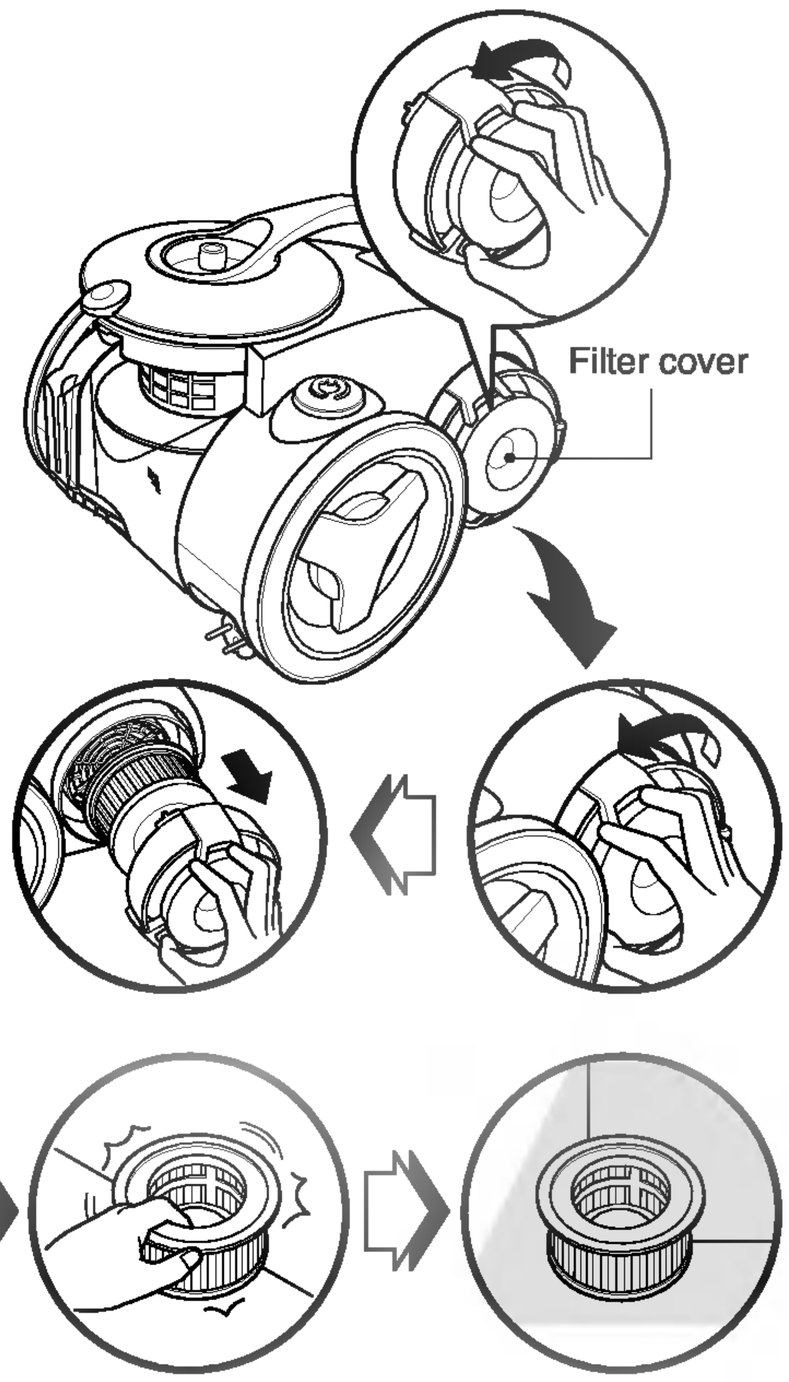

- The exhaust filter is a washable reusable HEPA filter.
- To clean the exhaust filter, remove the filter cover on the body by rotating the filter cover counter-clockwise.
- Pull out the exhaust filter.
- Clean it with cold, running water.
  Do not use the brush as this will damage the filter.
- Allow exhaust filter to dry completely in a shaded location.
- The exhaust filter should be cleaned at least once a year.

User's Guide for Sani Punch Vacuum Nozzle (Option)

Features

This nozzle picks up even dust inside through beating.

The bottom part can be separated to be cleaned.


Since the bottom does not stick to the surface, vacuuming is easy.

How to use

Follow the directions below for proper use.

Assembly

Connect the nozzle to the telescopic tube.

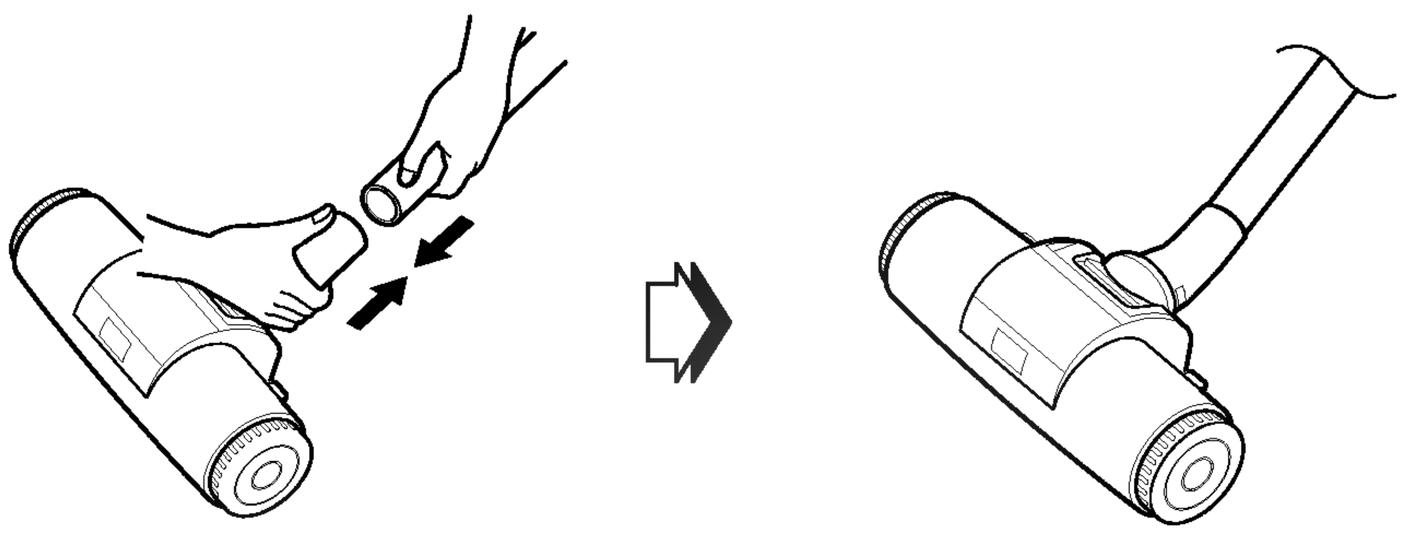

Set the suction power control switch to MAX POWER before vacuuming.

Depending on the type of bedding, handling may be awkward or it may cause a lot of noise.


If this is the case, adjust the suction power control switch to a lower setting.


If the punch bar does not move, lift the nozzle slightly off the surface.

If it does not move, even after doing this, check if the suction power is too low or if the nozzle base is clogged with a foreign object.

This Sani Punch nozzle is for effective cleaning of beds and blankets to remove mites and dust.

Effective cleaning

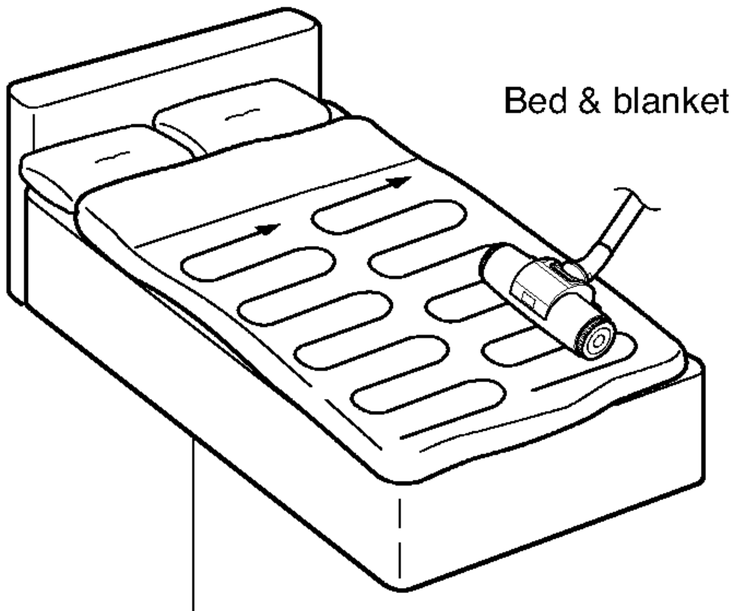

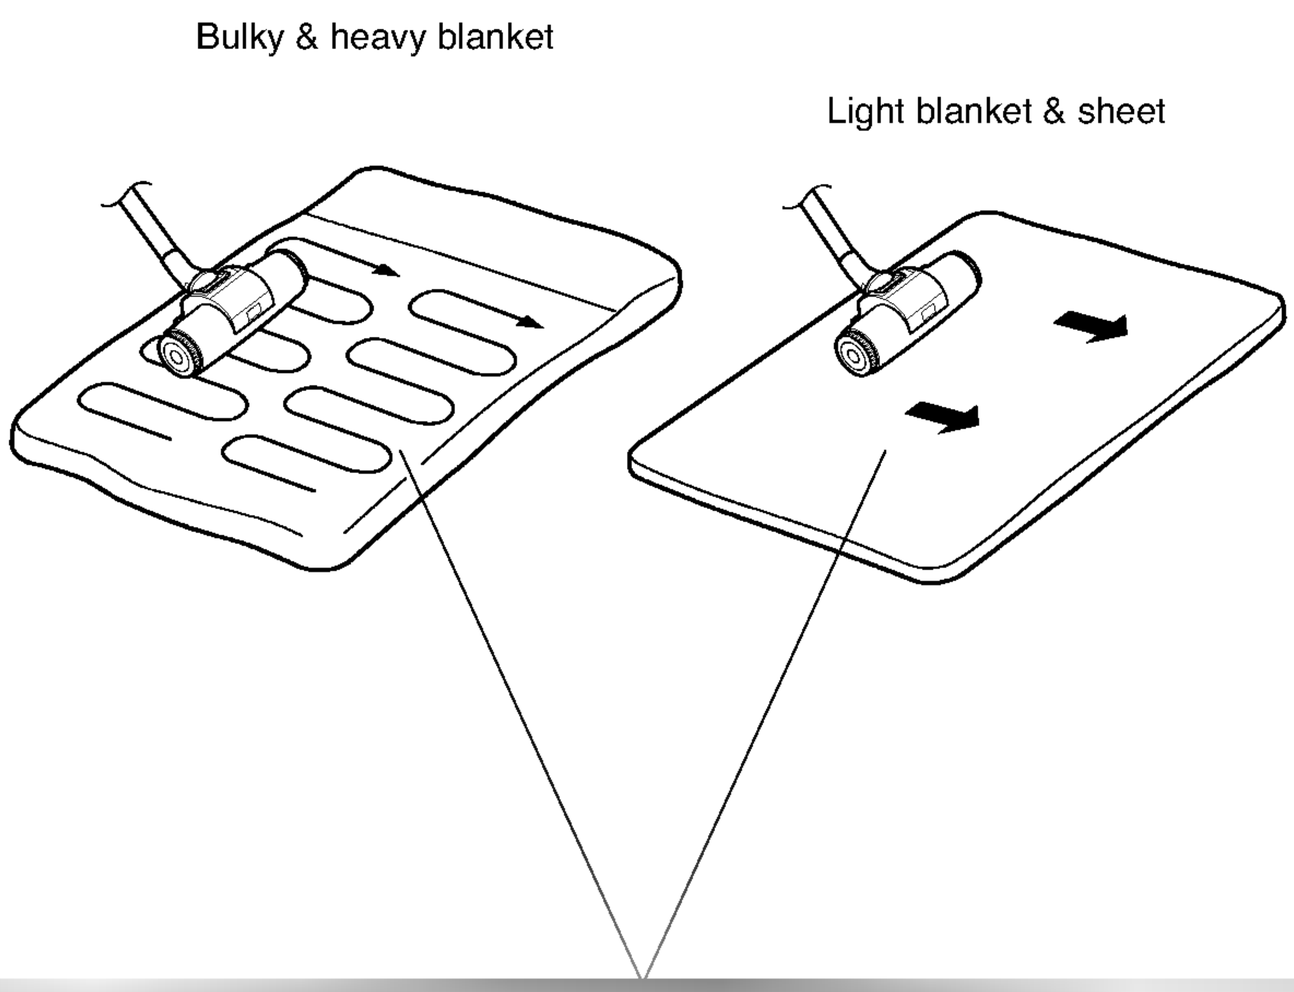


Lay out the blanket
and vacuum it on the bed

It is easier to clean a light blanket or sheet
by pushing the nozzle in the direction of the arrow.
To increase cleaning efficiency for light blankets,
lay on top of a bulky blanket and then clean.


User's Guide for Sani Punch Vacuum Nozzle Cleaning Vacuum Nozzle for Bedding (Option)

For simple cleaning of the vacuum nozzle, detach the Sani Punch nozzle from the telescopic tube and attach the crevice tool to vacuum dust.

Top

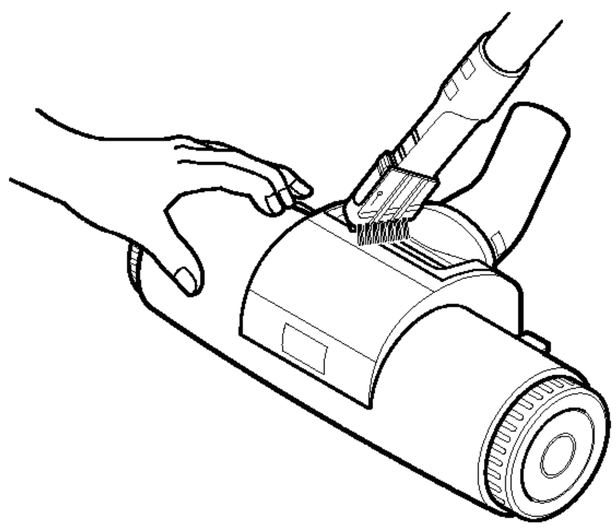

Bottom

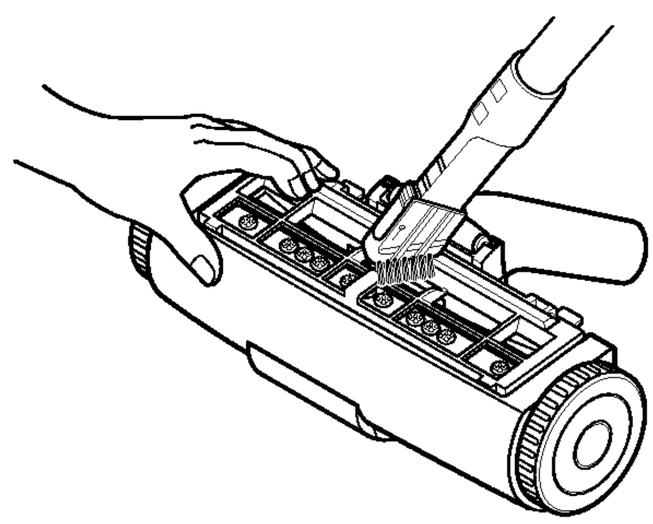


Since the vibrator inside is composed of precision parts, never disassemble the body.
Be careful not to let foreign objects clog the air suction part on top of the vacuum nozzle.
Since removal of the punch bar may cause performance problems, do not warp or remove it.
Attach the bottom plate properly before using. Without this bottom plate, it may not function.

Since this vacuum nozzle has been made exclusively for cleaning beds, blankets and upholstery, use it only for these cleaning purposes.
(Using it to clean the floor may result soiling it or a drop in performance, do not use it for such purposes.)

Follow the instruction below for through washing.

(Do not soak the entire body of the vacuum nozzle in water, it may cause the vibrator to malfunction)

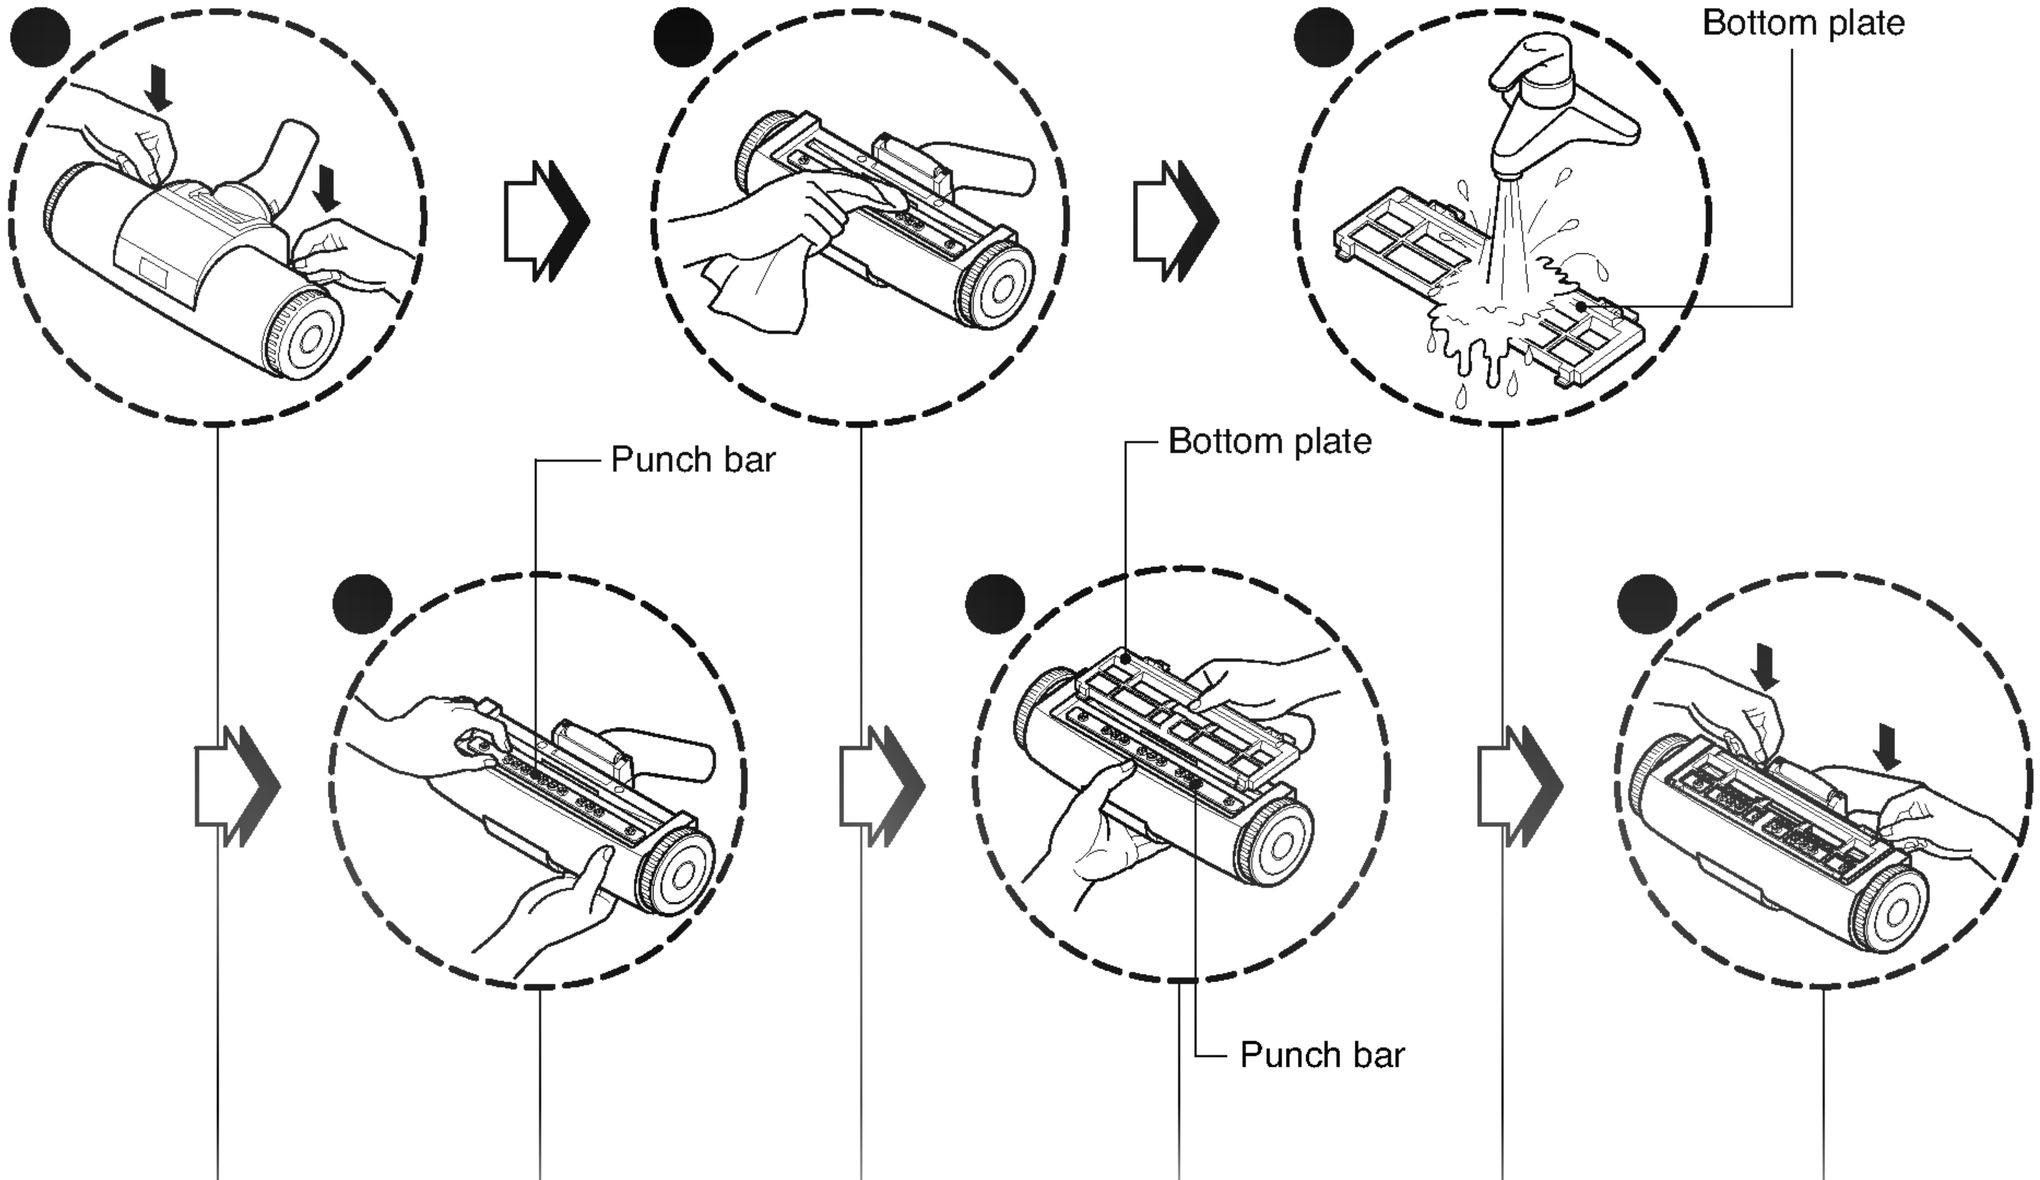

❶ Press the button on the rear side of the vacuum nozzle to separate the bottom plate.

❷ Wipe all the soiled parts of the vacuum nozzle body with a cloth.

❸ Wash the removed bottom plate with water and dry it.

❹ Straighten the punch bar on the lower section.

❺ Insert the attachment projections on bottom plate to the vacuum nozzle grooves.

❻ Push down the tabs to secure.

What to do if there is something wrong with your Vacuum Cleaner

What to Do if Your Vacuum Cleaner Does Not Work

Check that the vacuum cleaner is plugged in correctly and that the electrical socket is working.

What to Do When Suction Performance Decreases

- Turn off the vacuum cleaner and unplug it.
- Check the telecsopic tube, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust chamber is not full. Empty if necessary.
- Check that the motor filter light is not on. Clean the motor filter, if necessary.
- Check that the exhaust filter is not blocked. Clean the exhaust filter, if necessary.

WARNING!


Should it become necessary to replace the moulded plug then the detective plug should be replaced by a qualified electrician.

Notes

C K

Notes

Disposal of your old appliance

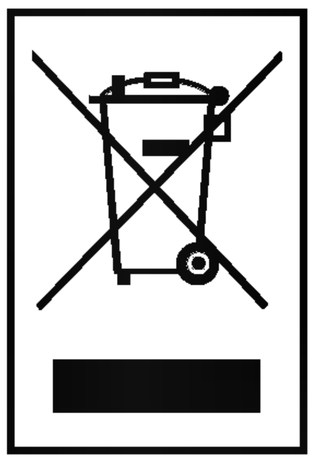

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

LG Electronics Inc.

P/No.: 3828Fi3833J