PF391P-P-AGBRLLW-ENG 12/5/07 8:36 PM Page 1

ENGLISH

PF391

**FOR THE GUARANTEE TERMS & CONDITIONS,
PLEASE REFER TO BACK COVER OF THIS MANUAL.**



P/NO : MFL42173807(R1)

Safety Precaution



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

CAUTION concerning the Power Cord
Most appliances recommend they be placed upon a dedicated circuit;
That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire.
Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center.
Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.
To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

This product is manufactured to comply with the EEC DIRECTIVE 2004/108/EC, and 2006/95/EC.

POWER: This unit operates on a mains supply of 100-240V~, 50/60Hz.

WIRING: This unit is supplied with a BSI 1363 approved 13 amp mains plug, fused at 5 amp. When replacing the fuse always use a 5 amp BS 1362, BSI or ASTA approved type. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

WARNING: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket.
Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol ⏚ or coloured green or green and yellow.

If any other plug is fitted, use a 5 amp fuse, either in the plug, or at the distribution board.
IMPORTANT: The wires in this mains lead are coloured in accordance with the following codes:
- BLUE: NEUTRAL, BROWN: LIVE - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows:
The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Contents

Safety Precaution 2
Contents 3
Features 3
Main Unit 4
Getting Started 5
- Inserting or removing a memory card 5
- Connecting a USB device 5
- Connecting the Power Cable 6
- Turning On or Off the Unit 6
- Power Save mode 6
- Installing the Stand 6
- Using the Device Menu 7

Adjust the settings 7-8
Viewing a Photo file 9
Playing a Movie file 10
Playing a Music file 11
Using a File menu 12
Viewing the Calendar 13
PC Connection (USB) 14
Troubleshooting 15
Specifications 15

Features

- Live picture gallery:
  High resolution and deep colour from a digital LCD wide screen.
- Easy power save mode:
  Better 1 second power save mode than 15 seconds power off and on.
- Portable digital album:
  Share your photographs with built-in battery for easy mobility
- Plug-in viewer:
  Easy viewing of photos via memory card slot and USB port
- Store 2,000 photographs:
  Store up to 2,000 photo's with the 256MB of built in flash memory
- Digital calendar & alarm clock:
  For date and time scheduling
- Easy to use photo explorer:
  Easy to use navigation menus to quickly gain access to your photo's
- Premium interior decorator
  3 different changeable frame to suit various interior

Main Unit

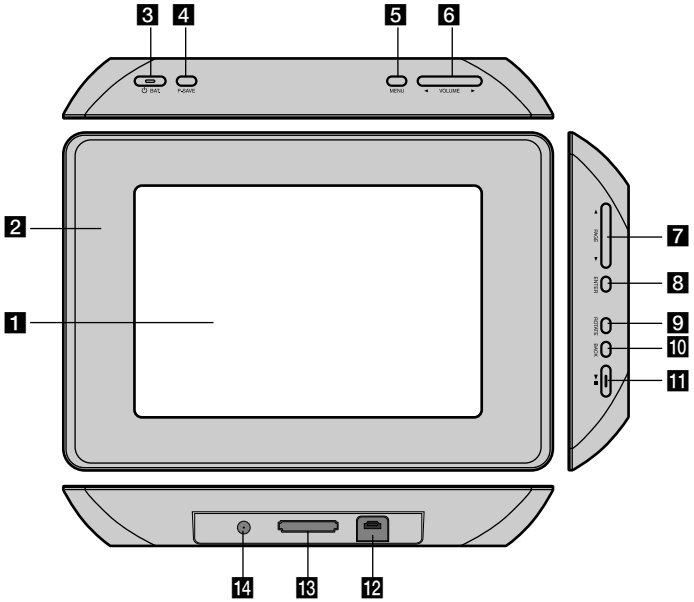

1 LCD screen

2 Frame (interchangeable)
Four edges of the frame are magnetic, so that the frame can easily be attached or detached.

3 ⏻ BAT. (Power button and Battery indicator)
Turns the unit ON or OFF and indicates the battery status.
The indicator lights in red during charging the battery.
The indicator lights in green when battery is full.

4 P-SAVE (Power Save)
For turning the power save mode on or off.

5 MENU
Accesses or exits the option menu.

6 ◄ VOLUME ►
Adjusts the volume of the unit. To adjust the volume, press and hold **VOLUME (◄ or ►)** during playback of the movie or music file.
Left and Right buttons for selecting an item on the menu.

7 ◄ PAGE ►
Press and hold for 2 seconds to move to the previous or next page on the [Photo], [Movie] or [Music] menu.
Up and Down buttons for selecting an item on the menu.

8 ENTER
Selects an option or executes a command.

9 ROTATE
Rotates the photo in full screen counterclockwise.

10 BACK
Returns to a previous menu or screen.

11 ►II
Starts playback. Press to pause playback; press again to restart.

12 USB connector
Connect the supplied USB adapter cable then connect a USB device.

13 Memory card slot
Insert a memory card (SD, MMC or MS).

14 DC 12V IN
Connect the supplied AC adapter.

Getting Started

Inserting or removing a memory card

Insert a memory card to the memory card slot as shown below.
To withdraw the memory card from the slot, press on the center of the memory card then withdraw it carefully.

Compatible memory cards and formats

- Secure Digital Card (SD)
- Multi Media Card (MMC)
- Memory Stick (MS)
- Compatible with: FAT 12, FAT 16, or FAT 32
- Only use the memory cards recommended above.
- The card will only fit in one direction; do not force it.
  The card should fit snugly when properly inserted.
- Do not extract the memory card whilst in use, i.e. when accessing photo or other data.

Regarding Write Protect

For cards that have a write protect switch, it will not be possible to write, erase or format the card if the write protection switch has been enabled.

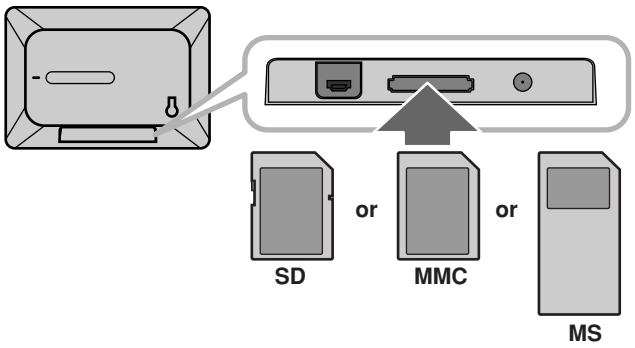

Connecting a USB device

Connect the small end of the USB adapter cable to the USB port on the unit.
Connect a USB device and the USB adapter. Use a USB cable, if you need.

- This unit supports only USB devices with FAT16 or FAT32 format.
- Do not extract the USB device during operation (play, copy, etc.).
- USB device: USB device that support USB 1.1 and USB 2.0.
  (For example: USB Flash Drive, Memory Card Reader, Digital Camera, etc.)
- Any USB devices which require additional software are not supported by the PF391.

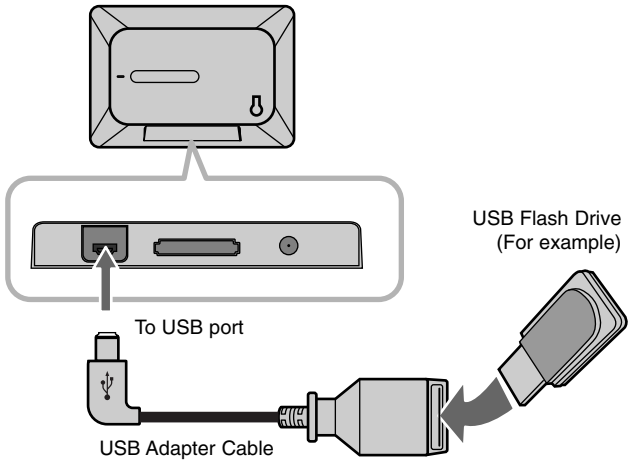

Connecting the Power Cable

Connect the supplied power cable from the unit to a power socket.

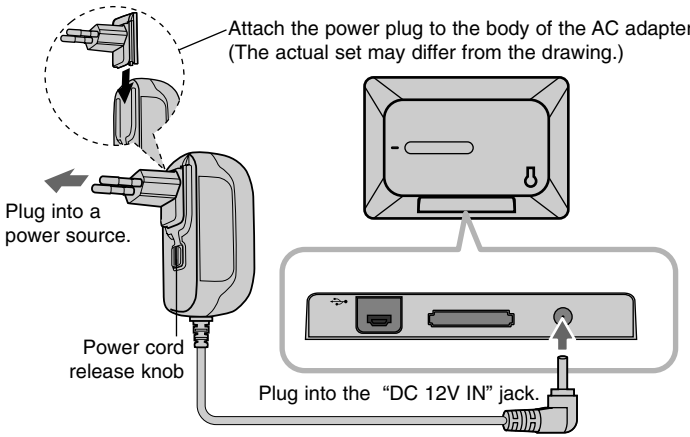

AC adapter

- This AC adapter operates on 100-240V~ 1A 50/60Hz.
- Contact an electrical parts distributor for assistance in selecting a suitable AC plug adapter or AC cord set.
- Manufactured by WANLIDA GROUP CO., LTD

Rechargeable battery

- Its internal rechargeable battery provides you with the freedom to pass it around and play the files without the power cord.
- The internal rechargeable battery will start charging only when the unit is turned off and the AC adapter is connected to a power outlet.
- The charging stops if you turn on the unit.
- The charging will take approximately 2 hour.
- The ⏻ **BAT.** indicator will turn red whilst charging. Once charging is complete, the indicator light changes to green.
- When the remaining time of the battery power is under 10 minutes, " ▭ " will appear on the screen and the ⏻ **BAT.** indicator flashes.

To turn the unit on or off

To turn on the unit, press and hold ⏻ **BAT.** for 2 seconds.
The demonstration slideshow will start and then the [Device Menu] will appear.
Press any button to skip the demonstration slideshow.
The demonstration photos are located in the internal memory, and you cannot change or delete them.
Press ⏻ **BAT.** again to turn off the unit.

Power Save mode

The unit has an economical power save mode. To activate this, press **P-SAVE** and the LCD screen is turned off. To exit the power save mode, press **P-SAVE** or ⏻ **BAT**.

Installing the stand

Attach the stand to the back of the unit as shown below.

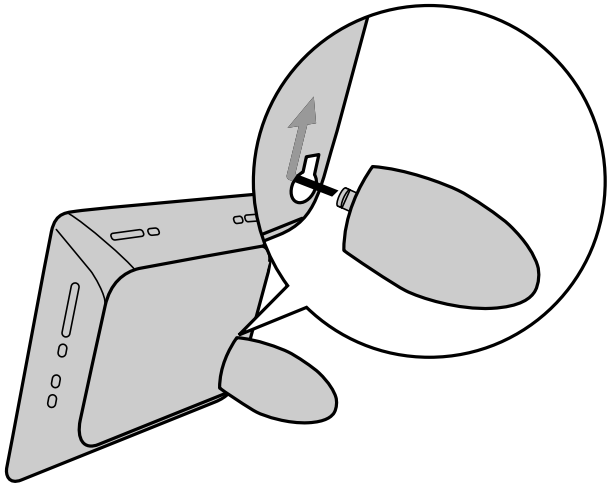

Using the Device Menu

The Device Menu will appear when the unit is turned on and you can access the Device Menu by pressing **BACK** repeatedly.
Use ◄ **VOLUME** ► to select an option on the [Device Menu] then press **ENTER.**

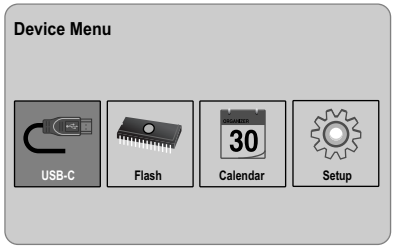

- **USB-C ..... USB-Z**
  You can play a file(s) using the connected USB device.
- **SD/MMC/MS**
  You can play a file(s) in the external memory card.
- **Flash**
  You can play a file(s) in the built in flash memory.
- **Calendar**
  You can view the current date, clock and alarm information through calendar screen.
- **Set up**
  You can change the settings of the unit on the [Setup] menu.

Adjust the settings

	BUTTON
1 Select [Setup] on the [Device Menu]:	◄ VOLUME ►, ENTER
2 Select a desired option:	◄ PAGE ►
3 Change the setting:	◄ VOLUME ►

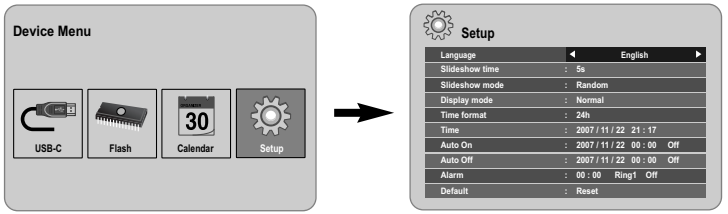

Adjust the settings - more you can do

To display the [Setup] menu

Use the ◄ **VOLUME** ► buttons to select the [Setup] option on the [Device Menu] then press **ENTER**.

[Language]

Select a language for the Setup menu and on-screen display.

[Slideshow time]

Specify how long each picture is displayed on screen in a slideshow;
3 seconds, 5 seconds, 15 seconds, 1 minutes, 15 minutes, 1 hour.

[Slideshow mode]

Specify the transition style between pictures in a slideshow; Random, Fading, Off, Bottom-To-Top, Top-To-Bottom, Left-To-Right, Right-To-Left, Door-Close, Door-Open, Hori-Cross, Verti-Cross.
If you select [Off], this deactivates the slideshow and the screen is fixed with one picture.

[Display mode]

Specify the display mode for viewing photo file; Normal, Fit.
[Normal]: Retains the original aspect ratio of the image.
[Fit]: Optimizes the image to fit onto the screen

[Time format]

Specify the time format for displaying the clock ; 12h, 24h
[12h]: 12-hour display with am or pm
[24h]: 24-hour display without am or pm

[Time]

Specify the time and date of the unit to use the various timer features of the unit.

1. Select [Time] option then press **VOLUME ►**.
2. Enter the necessary information for date and time.
   ◄ **VOLUME** ► (left/right): Moves the cursor to the previous or next column.
   ◄ **PAGE** ► (up/down): Changes the setting at the current cursor position.
3. Press **ENTER** to confirm your setting.

[Auto On]

Select when the unit turns on automatically.

1. Select [Auto On] option then press **VOLUME ►**.
2. Follow step 2 as shown in [Time] above.
3. Choose a desired repeat mode; [Off], [Once] or [Everyday].
   Select [Off] if you do not use this function.
4. Press **ENTER** to confirm your setting.

[Auto Off]

Select when the unit turns off automatically.

1. Select [Auto Off] option then press **VOLUME ►**.
2. Follow step 2 as shown in [Time] above.
3. Choose a desired repeat mode; [Off], [Once] or [Everyday].
   Select [Off] if you do not use this function.
4. Press **ENTER** to confirm your setting.

[Alarm]

Select the clock for alarm function. If you set the alarm, the unit will be turned on automatically at the alarm time and the alarm will sound. To turn off the alarm sound, press any button on the unit.

1. Select [Alarm] option then press **VOLUME ►**.
2. Enter the necessary information for clock.
   ◄ **VOLUME** ► (left/right): Moves the cursor to the previous or next column.
   ◄ **PAGE** ► (up/down): Changes the setting at the current cursor position.
3. Choose a ring option; [Ring1], [Ring2] or [Ring3].
   For example, if you select [Ring2];
   Alarm sound (1 min.) → Mute (15 sec.) → Alarm sound (1 min.) →
   Mute (15 sec.) → Normal mode
4. Choose a desired repeat mode; [Off], [Once] or [Everyday].
   Select [Off] if you do not use this function.
   [Off]: Alarm function is not activated.
   [Once]: Alarm function is activated once after setting the alarm.
   [Everyday]: Alarm function is activated everyday.
5. Press **ENTER** to confirm your setting.

[Default]

Reset the unit to its original factory settings. Select [Default] option then press **ENTER.**

Viewing a Photo file

	BUTTON
1 Select a device on the [Device Menu]:	◄ VOLUME ►, ENTER
2 Select [Photo] on the [Media Menu]:	◄ VOLUME ►, ENTER
3 Select a photo file on the [Photo] menu:	◄ VOLUME ►, ◄ PAGE ►
4 Display the selected file in full screen:	ENTER, ►II
5 To return to the [Photo] menu:	BACK

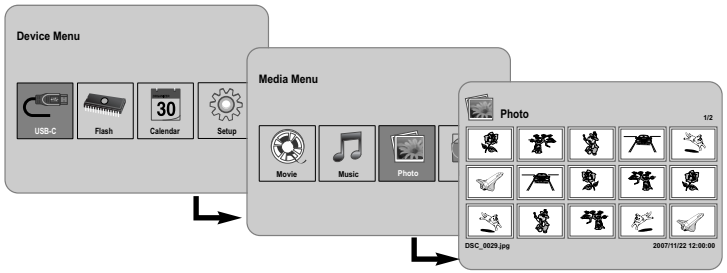

Viewing a Photo file - more you can do

Viewing photo files as a slideshow

On the [Photo] menu, use ◄ **VOLUME** ► and ◄ **PAGE** ► to select a photo file then press ►II to start the slideshow. Press ►II to pause the slideshow temporarily, press again to exit pause mode.

Options whilst viewing a photo file in full screen

You can use various features whilst viewing a picture in full screen.

1. Press the **MENU** button to display the option menu.
2. Use ◄ **VOLUME** ► and **ENTER** to select an option and execute it.

   To view the previous photograph.

   To start the slideshow.

   To pause the slideshow.

   To view the next photograph.

   To rotate the photo 90 degrees clockwise. Press **ENTER** repeatedly to select a degrees.

   To stop viewing the photo in full screen and return to [Photo] menu.

   To enlarge the photo image. Press **ENTER** repeatedly to select a zoom mode or normal mode.

   To switch the clock display on/off.

   To adjust the brightness of the screen. Press **ENTER** and the brightness menu will appear. Use ◄ **VOLUME** ► to adjust the brightness, then press **ENTER.**

   You can listen to music during slideshow, if the current media contain music and photo files together. Press **ENTER** and ♫ will appear lower-right side of the screen. To exit this function, press **ENTER** again.
3. Use the **MENU** button to exit the option menu.

Photo file requirement

JPEG file compatibility with this unit is limited as follows:

- File extensions: ".jpg"
- Photo size: Recommended size is less than 8,000 x 8,000 (W x H) pixel (baseline) and less than 100,000 pixel (progressive)
- Maximum Files/Media: Less than 650 recommended

Notes on JPEG file

- Lossless compression JPEG image files are not supported.
- Depending on the size and number of the JPEG files, it may take several minutes to read the contents of the media.

Playing a Movie file

	BUTTON
1 Select a device on the [Device Menu]:	◄ VOLUME ►, ENTER
2 Select [Movie] on the [Media Menu]:	◄ VOLUME ►, ENTER
3 Select a movie file on the [Movie] menu:	◄ PAGE ►
4 Start playback:	ENTER, ►II
5 To return to the [Movie] menu:	BACK

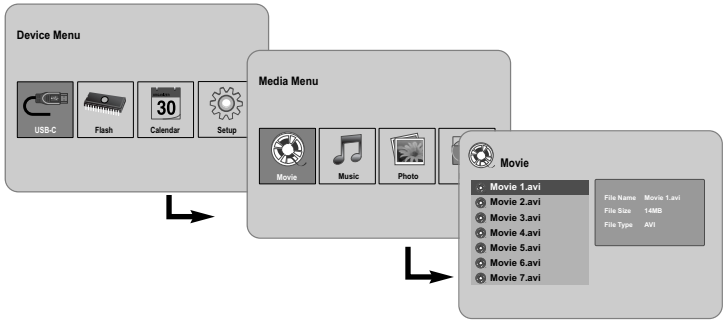

Playing a Movie file - more you can do

Options during playing a movie file

There are various options during playback of a movie file.

1. Press **MENU** to display the option menu during playback.
2. Use ◄ **VOLUME** ► and **ENTER** to select an option and execute it.

   To return to the beginning of the current file. Press **ENTER** twice briefly to play the previous movie file.

   To play fast reverse during playback. To change the various playback speed, press **ENTER** repeatedly.

   To start playback.

   To pause playback.

   To fast forward during playback. To change the various playback speed, press **ENTER** repeatedly.

   To play the next movie file.

   To stop playback and return to [Movie] menu.

   To select a repeat mode (TRACK, ALL, OFF).

   To enlarge the video image. Press **ENTER** repeatedly to select a zoom mode or normal mode.

   To switch the clock display on/off.

   To adjust the brightness of the screen. Press **ENTER** and the brightness control menu will appear. Use ◄ **VOLUME** ► to adjust the brightness then press **ENTER**.
3. Use the **MENU** button to exit the option menu.

Movie file requirement

Movie file compatibility with this unit is limited as follows:

- Available resolution size: 720x576 (W x H) pixel.
- Bit rate: Less than 15 Mbps
- Movie file extensions: ".avi", ".mpg", ".mpeg"
- This unit does not support to display the subtitle of the movie file.
- Playable Codec format: "MPEG1", "MPEG2", "MJPEG"
- Playable Audio format: "MPEG1", "MPEG2", "MPEG3", "PCM"
- "Not Support" will appear on the screen if the movie file is not playable.
- Maximum Files/Media: Less than 650 recommended

Playing a Music file

	BUTTON
1 Select a device on the [Device Menu]:	◄ VOLUME ►, ENTER
2 Select [Music] on the [Media Menu]:	◄ VOLUME ►, ENTER
3 Select a music file on the [Music] menu:	◄ PAGE ►
4 Start playback:	ENTER, ►II
5 To return to the [Media Menu]:	BACK

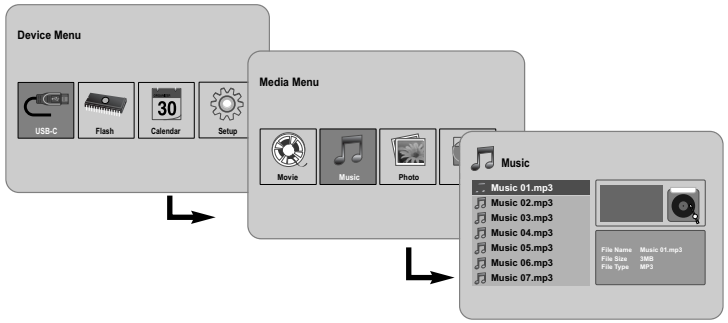

Playing a Music file - more you can do

Options during playing a music file

There are various options during playback of a music file.

1. Press **MENU** to display the option menu during playback.
2. Use ◄ **VOLUME** ► and **ENTER** to select an option and execute it.
   - To return to the beginning of the current file. Press **ENTER** twice briefly to play the previous movie file.
   - To play fast reverse during playback. To change the various playback speed, press **ENTER** repeatedly.
   - To start playback.
   - To pause playback.
   - To fast forward during playback. To change the various playback speed, press **ENTER** repeatedly.
   - To play the next music file.
   - To stop playback.
   - To select a repeat mode. (TRACK, ALL, OFF)
3. Use the **MENU** button to exit the option menu.

Music file requirement

- File extensions: ".mp3"
- Sampling frequency: 8 - 48 kHz (Layer 1, Layer 2, Layer 3, MPEG 2.5), 8 - 96 kHz (PCM)
- Bit rate: 32 - 448 kbps (Layer 1), 32 - 384 kbps (Layer 2), 32 - 320 kbps (Layer 3), 8 - 160 kbps (MPEG 2.5)
- Maximum Files/Media: Less than 650 recommended

Using a File menu

	BUTTON
1 Select a device on the [Device Menu]:	◄ VOLUME ►, ENTER
2 Select [File] on the [Media Menu]:	◄ VOLUME ►, ENTER
3 Select a file on the [File] menu:	◄ PAGE ►
4 To return to the previous screen:	BACK

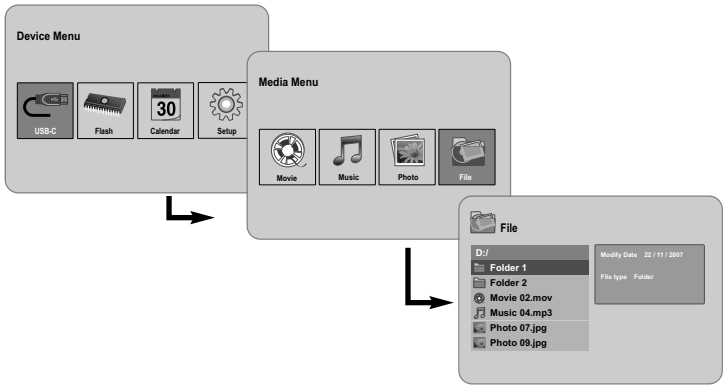

Using a File menu - more you can do

Using [File] menu

- You can view a list of folders and files in the current media.
- You can delete or copy a file(s) in the current media.

To display a list of subfolders and files

Use ◄ **PAGE** ► to select a folder then press **ENTER.** The list of the files and subfolders within the folder. Press **BACK** to move to the upper folder.

To select multiple files on the [File] menu

You can also select multiple files using **VOLUME** ► button.
Press **VOLUME** ► at the chosen files to select multiple files.

To delete a file(s) using the [File] menu

1. Select a file then press **VOLUME** ► and "►" appear on the right of the file name.
2. Repeat step 1 if you need to select multiple files.
3. Press **ENTER** and the option menu will appear.
4. Use ◄ **PAGE** ► to select [Delete>] option then press **ENTER.**
   The confirm menu will appear.
5. Use ◄ **VOLUME** ► to select [Yes] then press **ENTER** and the file will be deleted from the current media.
6. When the deleting is completed, press **ENTER** to finish.

To copy a file(s) from the current media to another media

1. Select a file then press **VOLUME** ► and "►" appear on the right of the file name.
2. Repeat step 1 if you need to select multiple files.
3. Press **ENTER** and the option menu will appear.
4. Use ◄ **PAGE** ► to select [Copy >] option then press **ENTER**.
5. Use ◄ **PAGE** ► to select a media that you would like to copy to.
   The free space of the selected media will be displayed on the upper-right side of the [File] menu.
6. Use ◄ **VOLUME** ► and ◄ **PAGE** ► to select a folder that you would like to copy to.
   - Press **VOLUME** ► to move to a subfolder.
   - Press ◄ **VOLUME** to move to a upper folder.
7. Press **ENTER.** The files will be copied to the selected media or folder.
8. When the copying is completed, press **ENTER** to finish.

Viewing the Calendar

	BUTTON
1 Select [Calendar] on the [Device Menu]:	◄ VOLUME ►, ENTER
2 Select a month:	◄ VOLUME ►
3 Select a year:	◄ PAGE ►
4 To return to the [Device Menu] menu:	BACK

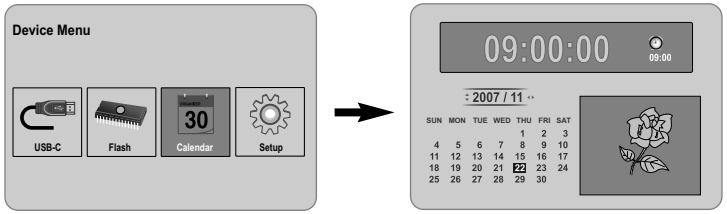

Viewing the Calendar - more you can do

Using [Calendar] menu

- You can view the current time and date as a slideshow.
- You can change the month and year using ◄ **VOLUME** ► and ◄ **PAGE** ►.
- You can view the alarm information.

PC Connection (USB)

	BUTTON
1 Connect the unit and PC:	–
2 Turn on the unit:	⏻ BAT.
3 Transfer Files:	–

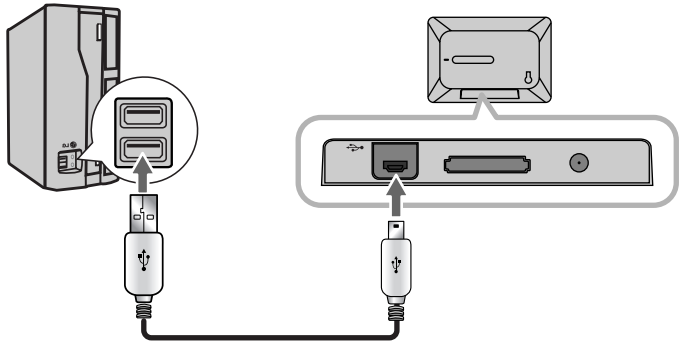

USB Cable

PC Connection (USB) - more you can do

Connecting a PC

Connect the unit to your PC using an optional USB cable. Once connected:

- Your PC will automatically recognise any memory cards installed in the unit. An icon representing your installed memory cards will appear as "PF39 Memory" (Internal memory) and "Removable Disks" (External memory card) when you open "My Computer".
- It may take Windows several minutes to recognise and set up the device the first time it is connected depending on your hardware configuration.
- Plug and Play Support: Windows 2000/ME/XP
- PC monitor image will appear on the screen when the unit is connected to PC and you cannot use any buttons on the unit (Except ⏻ **BAT.** and **P-SAVE** buttons).

Transferring Files

The USB 2.0 High-Speed connection makes it easy to transfer music, video, or photo files (or any other data) quickly between the unit and PC.
Simply use the unit as you would a USB Flash Drive using basic operating system commands.

Important Notice:

- If you need further assistance with transferring files, please refer to your operating system's instruction manual or on-screen help.
- Do not disconnect or otherwise interrupt the unit during transmission - this could damage or corrupt the unit's firmware or your files.
- If you want to format the internal memory of the unit using PC, you must format it with FAT file system.

Double-click the "My Computer" icon on your desktop and then double-click the "PF39 Memory" or "Removable Disks" icon that corresponds with the unit's internal or external memory card.
Drag your media files (or other files) to the "PF39 Memory" or "Removable Disks".

- You may choose to use folders/subfolders to organize your media and data.

Disconnecting from a PC

Disconnect the unit as instructed below to prevent data loss or file/firmware corruption.

1. Double-click the green arrow in the task bar located on the lower-right side of the PC screen (Safely Remove Hardware).
2. Safely Remove Hardware: Select "USB Mass Storage Device" from the list that appears and then click on "Stop".
   Stop a Hardware Device: Select "USB Mass Storage Device" from the list that appears and then click on "OK".
3. When the "Safe to Remove Hardware" window appears, click the OK button and disconnect the USB cable from the unit and your PC.

Troubleshooting

The power does not turned on.
- Ensure that the power cord has been properly connected to the power outlet.

The sound quality of the music is poor.
- Try playing the file on your PC. If the sound quality is still poor, try downloading the file again or re-encoding the file yourself.
- Ensure that the bit rate of the file is not too low. The higher the bit rate of the file, the better it will sound. Refer to “Music file requirement” on page 11.

Cannot transfer files to the unit from your PC.
- Ensure that your PC is running a supported operating system.
- Ensure that the USB cable is securely attached to the unit and the PC.
- If you have connected the unit through a USB hub, try connecting the unit directly to your PC.
- Ensure that the capacity of the memory cards installed in the unit.

Cannot select a memory card.
- Ensure that a memory card has been installed.
- Ensure that the memory card is properly installed.
- Ensure that the memory card is not defective.

Cannot copy files to a target location.
- Ensure that the target media has enough memory to contain the file.

The unit will not play a music file.
- Ensure that the file is in a compatible format (MP3). Refer to “Music file requirement” on page 11.

The unit will not play a video file.
- Ensure that the video file is available on the unit. Refer to “Movie file requirement” on page 10.

There is no sound.
- Ensure that the volume has been set to a reasonable level.

The unit has malfunctioned.
- Press ⏻ **BAT.** button to turn off the unit then turn the unit back on.

Specifications

Power Supply	DC 12 V, 2 A
Power consumption	10 W
Operating time on battery:	Approx. 1 hour
Set dimensions (W x H x D)	213 x 147 x 103.5 mm with stand
Net Weight	630g
Operating temperature	5˚C to 45˚C
Operating humidity	5 % to 90 %
Display Type	8” Wide (Full-Colour TFT LCD) Viewing area: 7.18”
Display Resolution	800 x 480 (WVGA)
Internal Memory	Flash Memory (256MB*)
Memory Card Slot	1 slot for SD/MMC/MS Card
Interface	USB 2.0 High-Speed (device)
Plug and Play Support	Windows 2000/ME/XP

* The 21MB is assigned for the unit’s software.

Accessory

- AC Adapter (MPA-630)
- USB Adapter Cable
- USB Cable
- Detachable Stand
- 3 different changeable frame

- Designs and specifications are subject to change without prior notice.

Technology with the human touch

GUARANTEE

- LG Electronics U.K. Ltd. will provide the following services in order to expedite this Guarantee.

1. All faulty components which fail due to defective manufacture will be replaced free of charge for a period of 12 months from the original date of purchase.
2. The dealer (or his service agent) who sold the product will be reimbursed for any labour provided in the repair of this LG equipment, for a period of 12 months from the original date of purchase. These claims must be made in accordance with the published scale of service charges and relevant claims procedure.

PLEASE NOTE:

A. The dealer may restrict the guarantee to the original purchaser.
B. The dealer is not obliged to carry out service under guarantee if unauthorized modifications are made to the apparatus, or if non standard components are used or if the serial number of the apparatus is removed, defaced, misused, or altered.
C. Any claims made under guarantee must be directed to the dealer from whom the equipment was originally purchased. The dealer may, before carrying out service under guarantee, require a receipted account as evidence of the date of purchase.
D. We respectfully point out that your dealer is not obligated to replace batteries if they become exhausted or worn in use.
E. Aerial alignment and consumer control adjustments are not covered by this guarantee.

This guarantee does not affect your statutory rights.

- REQUIREMENTS TO MAINTAIN WARRANTY COVERAGE:

RETAIN YOUR RECEIPT TO PROVE DATE OF PURCHASE. A COPY OF YOUR RECEIPT MUST BE SURRENDERED AT THE TIME GUARANTEE SERVICE IS PROVED.

- Product Registration Card : It is helpful to complete at least your name, address, phone, model & serial numbers and return it. This will enable LG to assist you in the future should you lose your receipt, your units be stolen, or should modifications be necessary.

- To obtain information or assistance: Call 0870 873 5454 Monday-Friday 9.00am-4.30pm

MODEL NO.*	SERIAL NO.*	DATE OF PURCHASE.*

* Please complete for your own record

In all cases of difficulty - consult your LG dealer from whom the product was purchased

LGEUK Website : www.lge.co.uk
(service website : www.lgelectronics.co.uk)