Model	V-UP142NJP		
Language	English/Hebrew		
Page	40	Color(cover/body)	2/1
Material	100g	Size(W*H)	145x215
Date	2005.07.27	Designer	Yang zhihua
Part No.	3828FI5872D	Description	owners manual

Chage Record

No.	Change content	ECO No.	Date	Designer	Confirm
1	drawing actualization	05I0V05447	05.07.27	zhihua	Mu.H.J
2					
3					
4					
5					
6					
7					
8					
9					

Upright Vacuum Cleaner
Owner's Manual

MODEL: V-UP142NJP

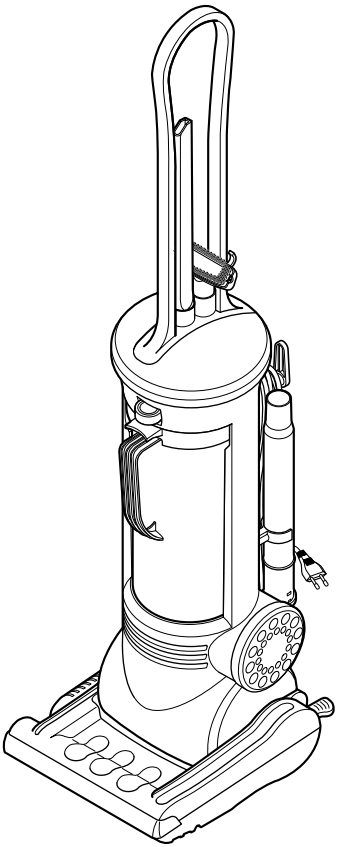

PLEASE READ THIS MANUAL THOROUGHLY AND CAREFULLY BEFORE OPERATING THE VACUUM CLEANER

P/No.: 3828FI5872D

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 3
ASSEMBLING THE VACUUM CLEANER 5
- STEP 1: UNPACKING THE UNIT 5
- STEP 2: ASSEMBLING THE HANDLE 6
- STEP 3: CORD STORAGE 6
- STEP 4: ATTACHING THE TOOLS 6
CLEANER DESCRIPTION 8
SPECIAL FEATURES 9
MOTOR PROTECTOR 9
OPERATION 10
- Important Safety Tips 10
- On/Off Switch 10
- Handle Positions 10
- Transporting the Vacuum Cleaner 11
- Using the Cord Hanger 11
- Using the Cord Hook 11
- Using Attachments 12
CLEANING AND MAINTENANCE 13
- Clearing Blockages 13
- Pre-motor Filter 14
- Exhaust Filter 15
- Removing/Installing the Bottom Plate 15
- Replacing the Belt and/or Agitator 16
- Cleaning the Agitator 17
SPECIFICATIONS 17
PARTS 17
BEFORE REQUESTING SERVICE 18

IMPORTANT SAFEGUARDS



WARNING

Your safety is important to us. To reduce the risk of fire, electrical shock, injury to persons, or damage when using your vacuum cleaner, please follow these basic safety precautions.

1. **Disconnect** power supply before cleaning the unit.
2. **Do not** leave appliance plugged in. Unplug from the socket when not in use.
3. **Do not** use outdoors or on wet surfaces. Do not pick up water or wet materials.
4. **Do not** handle plug or appliance with wet hands.
5. **Do not** allow it to be used as a toy. Close attention is necessary when used by or near children.
6. **Use only** as described in this manual. Use only attachments recommended by the manufacturer.
7. **Do not** use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer or an Authorised Service Centre or a similarly qualified person in order to avoid a hazard.
8. **Do not** pull or carry by the power cord as a handle, close door on cord, or pull the cord around sharp edges or corners. Do not run appliance over the cord. Keep the cord away from heated surfaces.
9. **Do not** unplug by pulling the cord. To unplug, grasp the plug, not the cord.
10. **Do not** put any object into openings. Do not use with any opening blocked. Keep free from dust, lint, hair, and anything that might reduce air flow.
11. **Keep** hair, loose clothing, fingers, and all parts of the body away from the openings and moving parts.
12. **Do not** use vacuum cleaner to pick up sharp, hard objects, small toys, pins, etc.
13. **Do not** use to pick up anythng that is burning or smoking, such as cigarettes, matches, or hot ashes.
14. **Do not** pick up flammable or combustible liquid or vapour such as gasoline or use in areas where they may exist.
15. **Do not** use vacuum cleaner without dust container and/or filters in place.
16. **Always** turn off all controls before unplugging.
17. **Do not** keep vacuum cleaner on chairs, tables, etc. Extra care must be taken when cleaning stairs.
18. **Always** unplug the unit or turn off the switch when the unit stops unexpectedly. If you don't, the cleaner could re-start unintentionally.

Thermal protector: This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, turn off the switch and **unplug** the cleaner. Check the cleaner for a possible source of overheating such as a full dust container, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minutes period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, contact a qualified electrician.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

Important information for users in the UK:
The wires in the mains lead of this appliance are coloured in accordance with the following code:

BLUE - neutral **BROWN - live**
The colours of the wires in the mains lead of this appliance may not correspond with the coloured makings identifying the terminals in your plug.

PROCEED AS FOLLOWS:
The wire which is coloured **BROWN** must be connected to the terminal which is marked L or coloured **RED**.
The wire which is coloured **BLUE** must be connected to the terminal which is marked **N** or coloured **BLACK**.

VERY IMPORTANT:
Neither wire is to be connected to the earth terminal of a 3-pin plug If a 13 amp plug is fitted, fit a 13 amp BS 1362 fuse. If any other type of plug is used, protect with a 15 amp fuse at the distribution board.

For appliances which come with a mains lead and plug moulded on; the plug moulded on to the cord incorporates a fuse.

For replacement, use a 13 amp BS 1362 fuse.

Only ASTA approved or certified fuses should be used.

The fuse cover/carrier must be replaced in the even of changing the fuse.

The plug must not be used if the fuse cover/carrier is lost. A replacement cover/carrier must be obtained from authorised electrical goods retailers.

WARNING! Should it become necessary to replace the moulded-on plug then the defective plug should be destroyed to avoid any possible shock hazard that could occur should such a plug be inserted into a 13 amp socket elsewhere in the house. Please remove the fuse from the old plug.

ASSEMBLING THE CLEANER

WARNING

Electrical Shock Hazard

Do not plug into the electrical supply until assembly is complete.
Failure to do so could result in electrical shock or injury.

STEP 1: UNPACKING THE CARTON

Remove all parts from the carton and use the figure below to identify each part.

Make sure that you have removed all parts before disposing of the carton and packing materials.

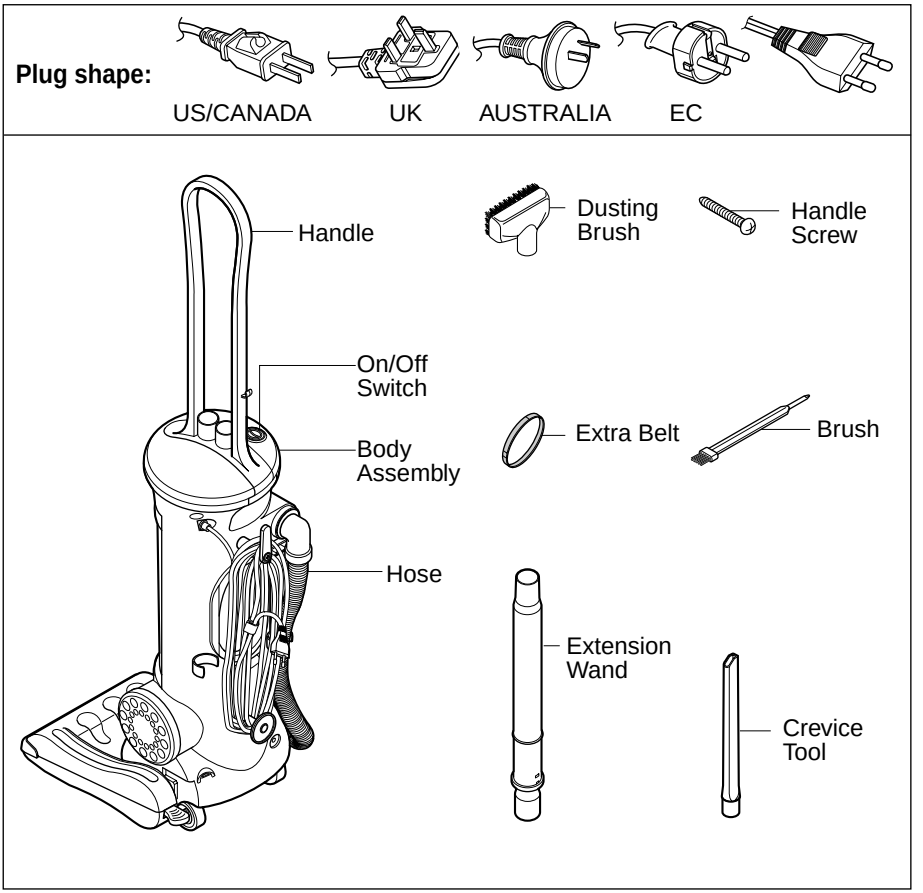

ASSEMBLING THE CLEANER

STEP 2: ASSEMBLING THE HANDLE

Slide the handle into the opening at the back of the vacuum cleaner body. (Fig. A)

Insert the screw into the handle screw hole and tighten with a screwdriver. (Fig. B)

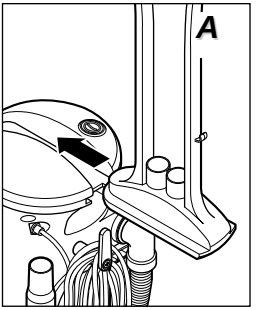

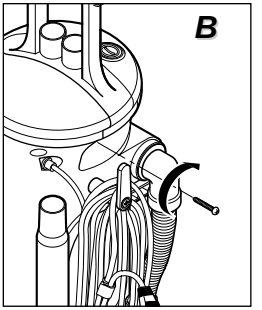

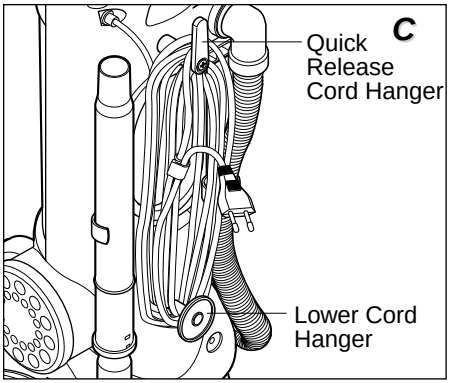

STEP 3: CORD STORAGE

Make sure that the quick-release cord hanger is in the upright position.

Wrap the cord around the quick-release cord hanger and lower cord hanger. (Fig. C)

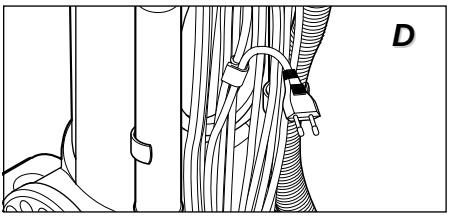

Clip the power cord plug onto the power cord.(Fig. D)

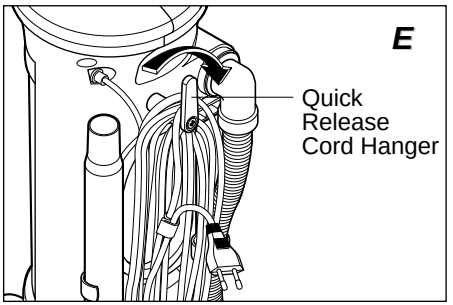

To release the cord, rotate the quick-release cord hanger downward. (Fig. E)

ASSEMBLING THE CLEANER

WARNING

Electrical Shock Hazard

Do not plug into the electrical supply until assembly is complete.
Failure to do so could result in electrical shock or injury.

STEP 4: ATTACHING THE TOOLS

Store the crevice tool and dusting brush in the clip at the bottom of the handle.

Clip the extension wand into place on the left side of the vacuum cleaner.

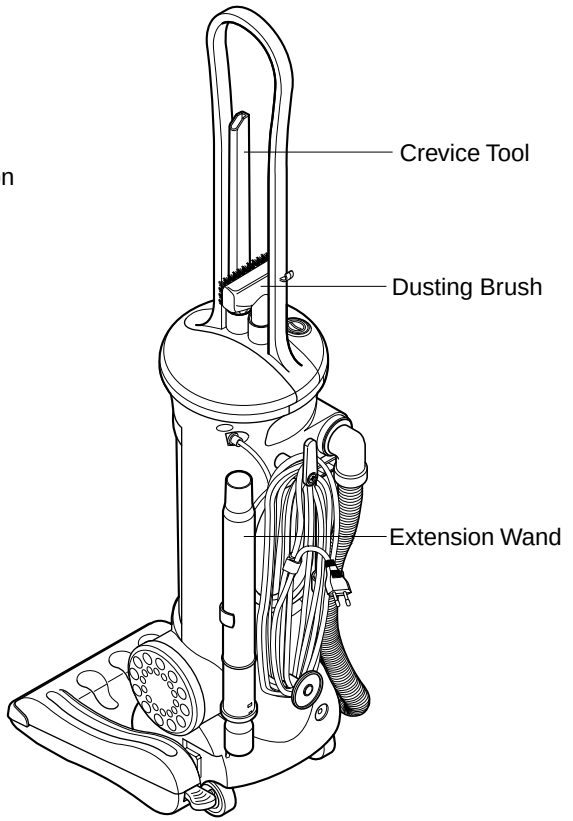

CLEANER DESCRIPTION

After assembly, the vacuum cleaner will look like the picture below.

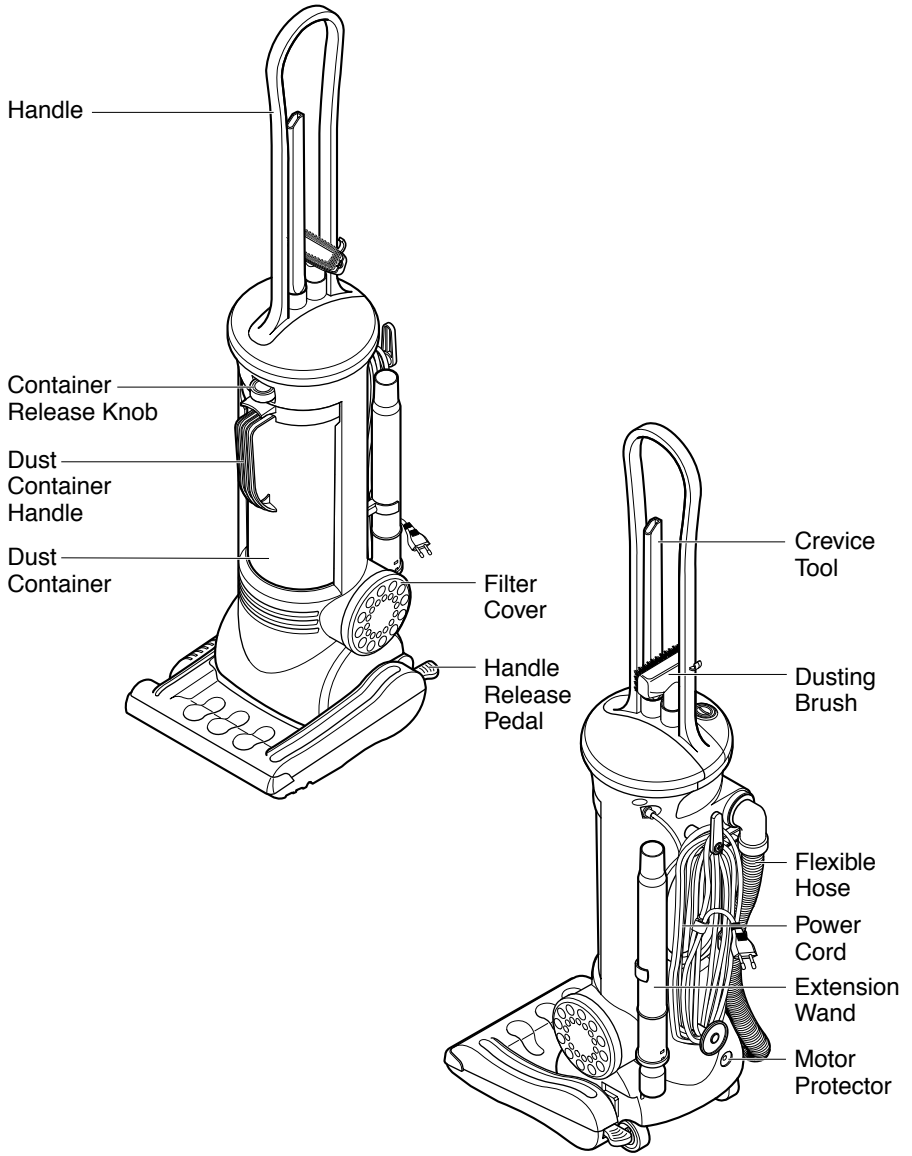

SPECIAL FEATURES

EDGE CLEANING FEATURE

The edge cleaning feature provides improved cleaning of carpets along walls and furniture.

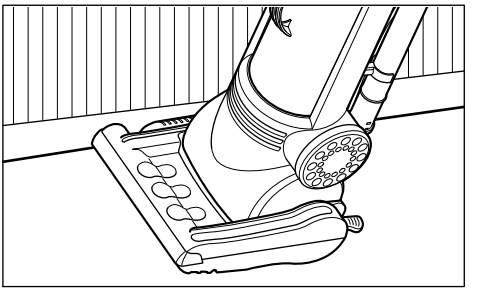

MOTOR PROTECTOR

This vacuum has a motor protector by-pass valve which automatically opens to provide cooling air to the motor when a clog prevents the normal flow of air. If the by-pass valve opens to prevent motor overheating and possible damage to the vacuum, a change of sound will be noticed as air rushes through the valve opening. If this occurs, turn the vacuum off and unplug the power cord from the outlet. Then check for blockage as described under the BLOCKAGE REMOVAL section.

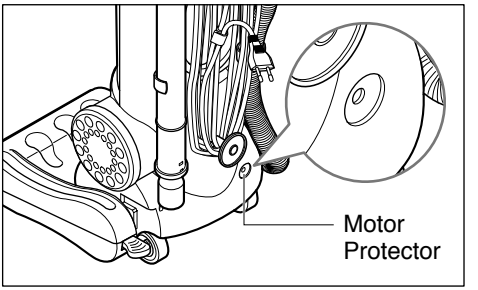

The motor protector by-pass valve may open when using attachments or when cleaning new carpet, due to reduced air flow caused by the attachments themselves or by new carpet reduce filling the dust container quickly.

OPERATION

WARNING

Personal Injury and Product Damage Hazard

- DO NOT use outlets above work surfaces. Damage to items in the surrounding area could occur.

IMPORTANT SAFETY TIPS

Before you plug in your vacuum cleaner, make sure that the voltage indicated on the rating label of the vacuum cleaner matches that of your local electrical supply.

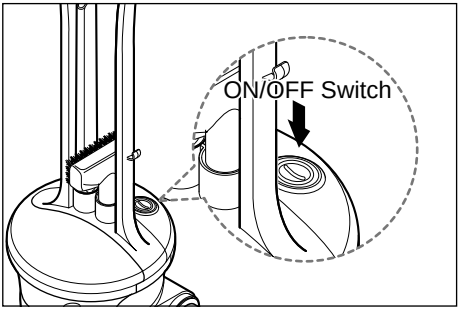

ON/OFF SWITCH

Plug in the power cord.

Press the ON/OFF switch to turn the vacuum cleaner on or off.

If the cleaner stops unexpectedly, always turn off the switch and unplug the vacuum cleaner before checking for the cause. The vacuum cleaner could start on its own and cause injury.

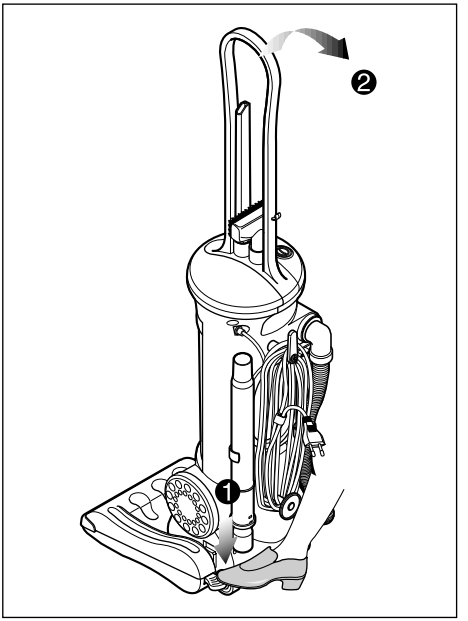

HANDLE POSITIONS

The handle may be adjusted to any position required.

Depress the handle release pedal. The handle is then released to move up and down freely.

To clean under furniture, depress the handle release pedal a second time.

To store the vacuum or attachments, set the handle to the upright position.

OPERATION

WARNING

Personal Injury and Product Damage Hazard

• DO NOT use outlets above work surfaces. Damage to items in the surrounding area could occur.

TRANSPORTING THE VACUUM CLEANER

To move your vacuum cleaner from room to room, place the handle in the upright position,

tilt the vacuum back on its rear wheels and push it forward.

The vacuum cleaner can also be picked up and carried using the built-in carrying handle.

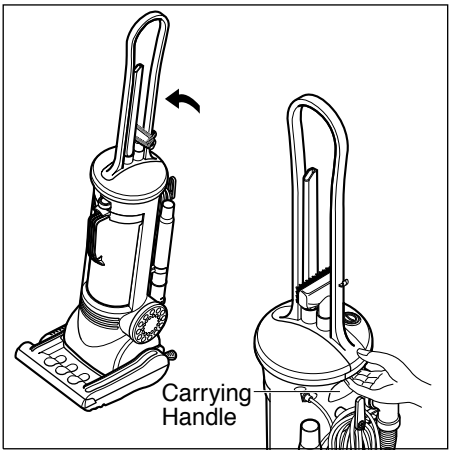

USING THE CORD HANGER

To release the power cord, rotate the quick release cord hanger downward and the entire power cord can be slid off the hanger for immediate use.

Do not unplug the cleaner by pulling on the cord. Always unplug by grasping the plug and pulling it straight out from the socket.

Return the quick release cord hanger to the upright position before rewinding and storing the power cord.

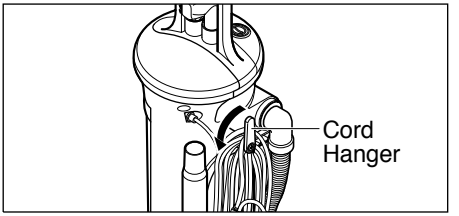

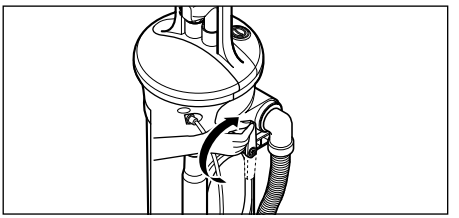

USING THE CORD HOOK

There is a groove on the handle to secure the power cord while you are vacuuming.

To help prevent possible damage to the power cord, clip it into this groove to help keep the power cord from hanging down where it can be caught up in the agitator or other moving parts.

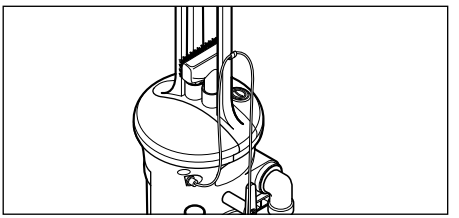

OPERATION

WARNING

Personal Injury and Product Damage Hazard

- DO NOT use outlets above work surfaces. Damage to items in the surrounding area could occur.

USING ATTACHMENTS

Remove the lower end of the flexible hose from the vacuum cleaner by pull the hose collar out of the clip on the base. (Fig. A)

Remove the telescopic extension wand from its storage position. (Fig. B)

Turn the lower extension wand to the UNLOCK position. (Fig. C)

Extend the wand to its full length. Turn the lower extension wand to the LOCK position. (Fig. C)

Slide the extension wand onto the hose collar.

Connect the crevice tool and dusting brush onto the end of the extension wand. (Fig. D)

The crevice tool or dusting brush will also fit directly onto the hose collar.

The dusting brush can also be used as an upholstery cleaning brush by removing the brush. (Fig. E)

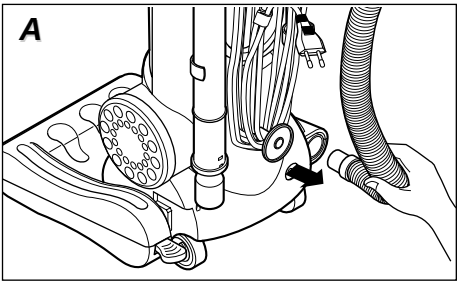

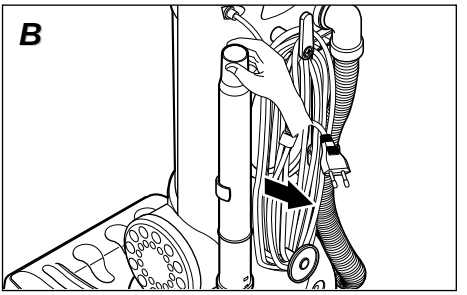

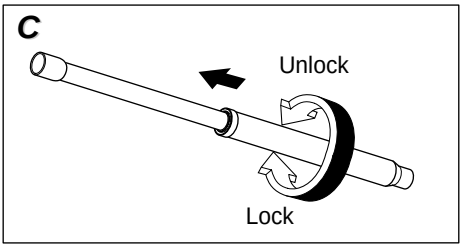

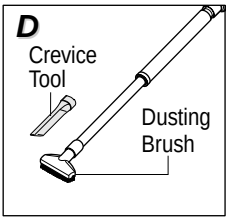

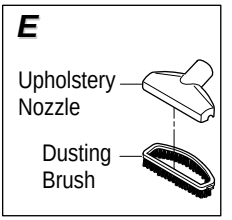

CAUTION

- When using attachments, be careful not to over-extend the hose. This could cause the cleaner to tip over.

REMOVING CLOGS

WARNING

Electrical Shock and Personal Injury Hazard

- Unplug the vacuum cleaner before cleaning the unit. Failure to do so could result in electrical shock or personal injury from the vacuum cleaner starting unexpectedly.

If your vacuum cleaner makes a strange noise or suction decreases, check for blockages or whether the pre-motor filter is dirty.

REMOVING BLOCKAGES

First check the hose and extension wand. Visually inspect the hose and the opening of the vacuum cleaner body into which the hose is inserted. (Fig. A)

Remove the dust container and check the pre-motor filter. (See page 15)

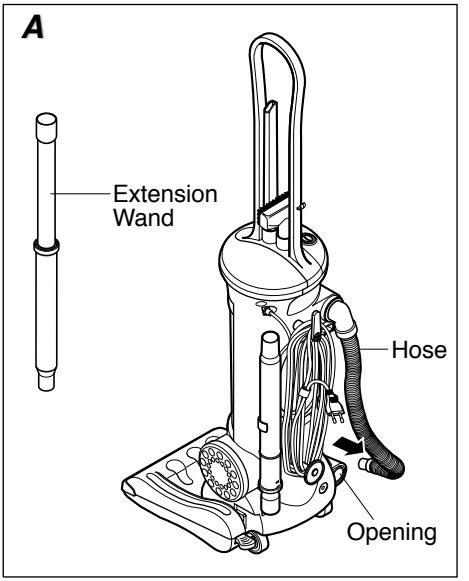

Check the dust inlet on the vacuum cleaner body for blockages. (Fig. B)

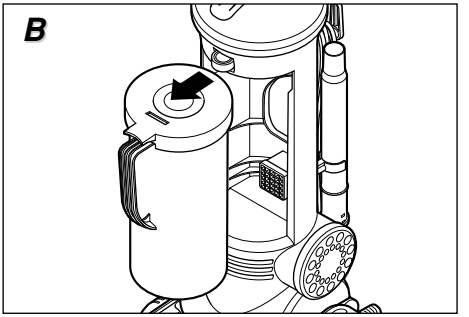

If the blockage remains, turn the vacuum cleaner over and check the agitator area and suction inlet. (Fig. C)

Stand the vacuum cleaner back up in an upright position before plugging into the electrical outlet.

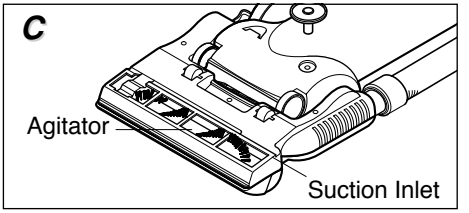

REMOVING CLOGS

WARNING

Electrical Shock and Personal Injury Hazard

- Unplug the vacuum cleaner before cleaning the unit. Failure to do so could result in electrical shock or personal injury from the vacuum cleaner starting unexpectedly.

PRE-MOTOR FILTER

Check and clean the pre-motor filter regularly.

If the motor pre-filter is covered with too much dust, vacuum cleaner will stop moving as the thermal protect work.

You should also check the pre-motor filter whenever the vacuum cleaner makes a strange noise or suction decreases.

First, turn off the vacuum cleaner and unplug the power cord from the electrical outlet.

Remove the dust container by pushing the release button and pulling out on the dust container handle. (Fig. A)

Remove the cover and empty the container. (Fig. B)

Clean the pre-motor filter (on the dust container cover) by tapping it gently. (Fig. C)

If the pre-motor filter is excessively dirty, rinse the filter with water.

Easy to rinsing, separate pre-motor filter from the filter cap. (Fig. D,E)

After rinsing, allow the pre-motor filter to dry in a shaded location for 24 hours. **Never reinstall the pre-motor filter while it is wet.**

Before reinstalling the dust container, make sure that the cover is positioned properly.

To reinstall the dust container, hook the bottom of the container onto the lower part of the handle and push the top of the dust container into the handle until it latches in place. (Fig. F)

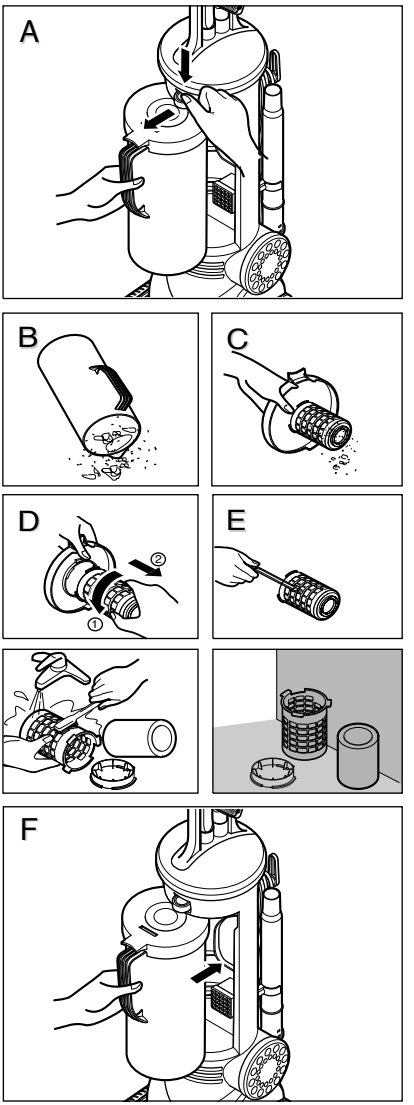

REPLACEMENT INSTRUCTIONS

WARNING

Electrical Shock and Personal Injury Hazard

- Unplug the vacuum cleaner before cleaning the unit. Failure to do so could result in electrical shock or personal injury from the vacuum cleaner starting unexpectedly.

EXHAUST FILTER

The exhaust filter is washable HEPA filter.
(Optional: Non washable HEPA filter)
The exhaust filter must be rinsed when it becomes dirty.

Rotate to the left side to remove the filter cover. (Fig.A,B)

We advise you to rinse at least once a year.
After rinsing, allow the exhaust filter to dry in a shaded location for 24 hours.
Never renstall the exhaust filter while it is wet.
Do not operate the vacuum cleaner without the filter in place.

Replacement filter can be obtained from your dealer.

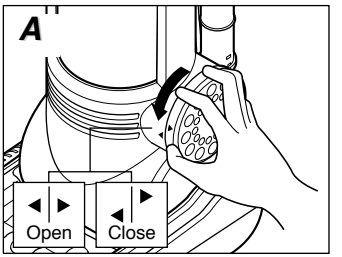

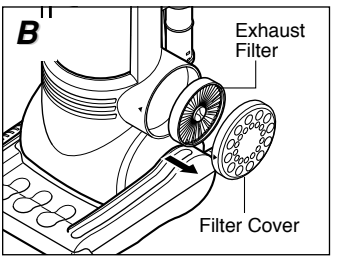

REMOVING/INSTALLING THE BOTTOM PLATE

Before replacing any parts, disconnect the vacuum from the electrical outlet.
To remove the bottom plate, unscrew the bottom plate first. Then pull the bottom plate away from the nozzle housing. (Fig. C)

To install the bottom plate, hook the front end of bottom plate into the slots on the front of nozzle. (Fig. D)

Press the bottom plate then tighten the screws.

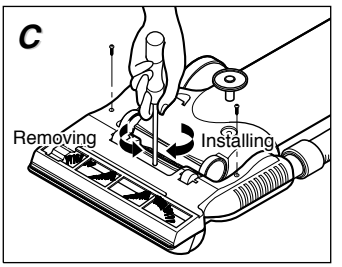

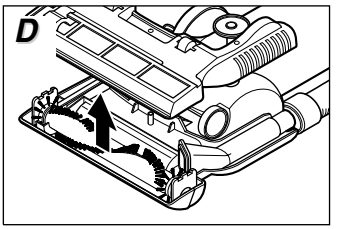

REPLACEMENT INSTRUCTIONS

WARNING

Electrical Shock and Personal Injury Hazard

- Unplug the vacuum cleaner before cleaning the unit. Failure to do so could result in electrical shock or personal injury from the vacuum cleaner starting unexpectedly.

REPLACING THE BELT AND/OR AGITATOR

Check the belt and agitator regularity. If they are broken of worn out, replace them.

Turn the unit over and remove the bottom plate as described in Removing/Installing the Bottom Plate section.

To remove the agitator, grasp both ends of the agitator and lift it slowly. Remove the belt from the agitator pulley and the motor shaft. If the belt is broken, be sure all pieces are removed.

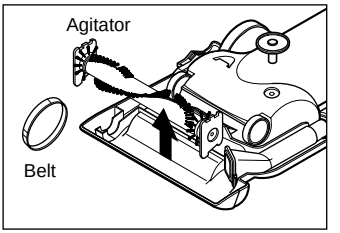

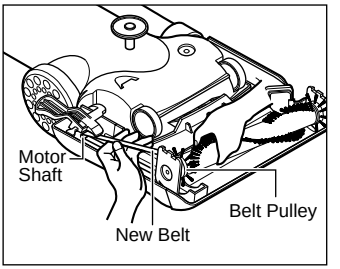

WARNING

Personal Injury Hazard

The belt is under high tension; be careful when removing the agitator.

Failure to do so could result in personal injury caused by the agitator releasing quickly and snapping away.

Loop the new belt around the motor shaft and agitator pulley.

Reinsert the agitator, making sure that both ends of the agitator fit into the grooves in the nozzle head.

After installing the agitator, turn it by hand to make sure that the belt is not twisted or pinched and that all parts turn freely.

Reinstall the body cover by reversing the steps in the Removing/Installing the Bottom Plate section.

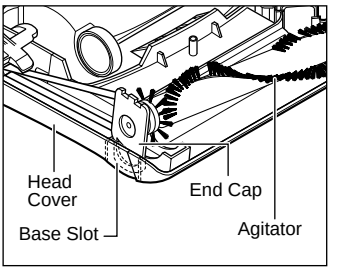

The agitator must also be cleaned according to the following schedule:

Vacuum Use	Clean Agitator
HEAVY - (used daily)	every week
MODERATE - (used 2-3 times/week)	every week
LIGHT - (used 1time/week)	every 2 months

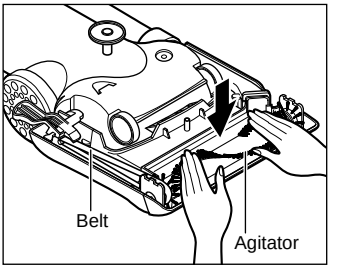

Replacement part are avaiable from your dealer.

MAINTENANCE

WARNING

Electrical Shock and Personal Injury Hazard

- Unplug the vacuum cleaner before cleaning the unit. Failure to do so could result in electrical shock or personal injury from the vacuum cleaner starting unexpectedly.

CLEANING THE AGITATOR

In order to keep the cleaning efficiency high, clean the agitator regularity.

Make sure you unplug the unit.

If necessary, remove the body cover by following the Removing/Installing the bottom plate section.

Remove the entangled materials, such as carpet pile and lint, strings etc Unwing them or cut them off with scissors, as shown.

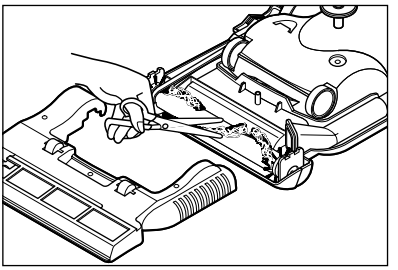

SPECIFICATIONS

Model	V-UP142NJP
Power supply	230V/50Hz
Power	IEC-1200W, MAX-1400W
Dimension/upright position (WxDxH)	approx 334 x 1096 x 347mm
Cord length	7.7m
Weight (approx.)	6.3kg

PARTS

Model	V-UP142NJP
Belt	4400FI3348A
Exhaust Filter(Washable HEPA)	3210FI2434D
Pre Motor-filter	5231FI3783A

These parts are available from your dealer.

BEFORE REQUESTING SERVICE

Review the chart below for possible solutions in the event of a minor problem. Any service needed, beyond the procedures described below and elsewhere in this manual, should be performed by an authorised service centre.



WARNING

Electrical Shock and Personal Injury Hazard

- Unplug the vacuum cleaner before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury.

Problem	Possible Cause	Possible Solution
Vacuum cleaner won't run	1. Not plugged firmly into wall outlet 2. No voltage in wall outlet 3. On/Off switch not turned on 4. Blown fuse in the plug 5. Thermal overload protection activated	1. Plug firmly into wall outlet. 2. Check fuse or circuit breaker. 3. Press the On/Off switch. 4. Change the fuse for a 13 Amp ASTA approve fuse. 5. Turn the vacuum cleaner off, unplug it, and allow it to cool. (See page 3)
Vacuum cleaner won't pick up	1. Belt worn or broken 2. Worn agitator brush 3. Dust container full 4. Hose or nozzle blocked 5. Hose damaged 6. Dust container installed incorrectly 7. Belt not installed on the motor shaft	1. Replace the belt. 2. Replace the agitator. 3. Empty the dust container and check the pre-motor filter. 4. See REMOVING BLOCKAGES on page 13. 5. Replace the hose. 6. Make sure the dust container is seated properly in the handle. 7. Install the belt on the motor shaft. (See page 16.)
Dust escaping the dust container	1. Dust container installed incorrectly 2. Pre-motor filter cap installed incorrectly	1. Make sure the dust container is seated properly in the handle. 2. Make sure the pre-motor filter is in place and seated correctly.

LG

הוראות הפעלה
שואב אבק חובט

LGVC V-UP142NJP

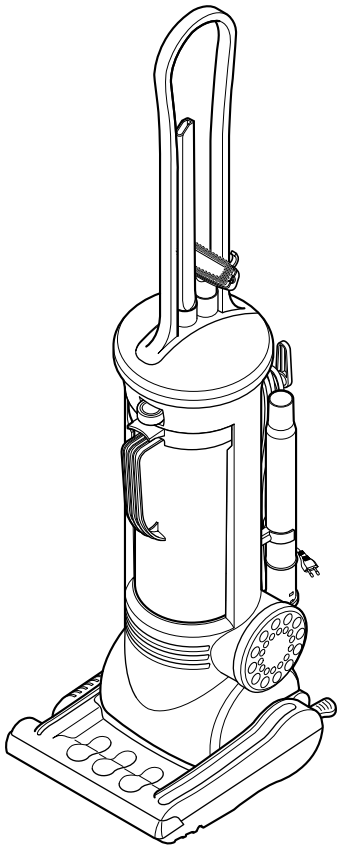

P/No.: 3828FI5872D

תוכן העניינים

הוראות בטיחות ואמצעי זהירות 3

הרכבת השואב 5

תאור השואב 8

אפיונים מיוחדים 9

הגנת המנוע 9

הפעלה 10

שימוש באביזרי עזר 12

הסרת סתימות 13

הוראות החלפה 15

הסרה/התקנה פלטה תחתונה 15

החלפת רצועת החובט 16

אחזקה 17

נתונים טכניים 17

החלקים 17

איתור תקלות 18

תעודת אחריות 19

רשימת תחנות שירות 20

הוראות בטיחות ואמצעי זהירות

בטיחותכם חשובה לנו. להקטנת הסכנה לפריצת אש, הלם חשמלי, פציעה, או נזק למכשיר בעת השימוש בו, יש לקרוא בעיון את הוראות ההפעלה לפני התחלת השימוש בשואב האבק. הוראות ההפעלה מכילות מידע חיוני שיאפשר לכם להפיק את מירב התועלת מהמכשיר.

1. יש לכבות את שואב האבק ולנתקו מזרם החשמל, לפני:
   א. הורקת תא האבק.
   ב. החלפת מסננים.
   ג. ניקוי השואב.
2. יש לכבות את השואב לפני הוצאת התקע משקע החשמל.
3. נתקו את השואב משקע החשמל כאשר אינו בשימוש.
4. אסור להשתמש בשואב מחוץ לבית או להציב אותו על פני משטח רטוב.
5. אין לגעת בשואב האבק, בכבל החשמל או בתקע החשמל בידיים רטובות.
6. הרחיקו את שואב האבק מהישג ידם של ילדים קטנים.
7. יש להשגיח השגחה צמודה בעת השימוש בשואב האבק בקרבת ילדים. אין לאפשר לילדים או לאנשים מוגבלים להשתמש במכשיר ללא פיקוח של מבוגר.
8. ילדים אינם מודעים לסכנה העולה מתפעול לא נכון של מכשירי חשמל. הסבירו לילדיכם את הוראות ההפעלה ואמצעי הזהירות החיוניים לתפעול שואב האבק בבטחה.
9. יש להשתמש אך ורק באמצעות אביזרים המאושרים לשימוש על-ידי היצרן.
10. השתמשו בשואב אך ורק למטרות להן הוא נועד בהתאם למתואר בחברת זו.
11. אין להשתמש בכבל החשמל למשיכת השואב ממקום למקום. הזזת השואב תתבצע באמצעות הידית.
12. בעת השאיבה שימו לב שכבל החשמל חופשי ולא לכוד בחפץ כלשהו. שימרו על כבל החשמל מפני חיכוך בחפצים חדים או חמים העלולים לגרום לו נזק ולסכנת התחשמלות.
13. הקפידו לא לדרוך על כבל החשמל, לעבור עליו עם שואב האבק או לסגור עליו דלת.
14. אין למשוך בכבל החשמל לצורך ניתוק המכשיר מזרם החשמל. יש לאחוז את התקע ולשלוף אותו מהשקע בקיר.
15. חל **<u>איסור מוחלט</u>** לשאוב את החפצים או החומרים הבאים:
   א. חומרים מתלקחים או נפיצים (נוזלים או גז)..
   ב. חפצים או חומרים לוהטים או חמים (אפר חם, גחלים בדלי סיגריות וכד').
   ג. חפצים חדים (שברי זכוכית, מסמרים סיכות וכד').
   ד. מים או נוזלים אחרים מכל סוג שהוא.
16. יש איסור מוחלט להפעיל את שואב האבק בלא שמותקנים בו מיכל האבק והמסננים.
17. כאשר נעשה שימוש בשמפו מקציף לניקוי השטיח, יש להמתין <u>להתייבשות מלאה</u> של האזור ורק אז ניתן לשאוב את השטיח. לבל יגרם נזק בלתי הפיך לשואב.
18. יש להרחיק את פתחי השאיבה והחלקים הנעים של השואב מהשיער, הפנים, הגוף וחלקי לבוש (שרוולים וכד').
19. אין להשאיר את שואב האבק ללא השגחה כאשר הוא במצב עבודה.
20. אין להציב את שואב האבק על גבי כסאות או שולחנות, יחידת החובט שבתחתית השואב פועלת תמיד והשואב עלול ליפול.
21. יש לנקוט אמצעי זהירות מרביים בעת שאיבת מדרגות. מומלץ להציב את השואב במדרגה נמוכה ולשאוב את המדרגות שמעליו, למניעת סכנת נפילה של השואב ומעידה שלכם במדרגות.
22. במקרה שהשואב מפסיק לפעול באופן פתאומי, יש לנתקו מזרם החשמל. כדי למנוע מצב בו הוא יחל לפעול מחדש באופן בלתי רצוי.

23. אין להשתמש בשואב האבק במידה וכבל החשמל או התקע ניזוקו. החלפת כבל החשמל תעשה אך ורק במעבדת שרות שהוסמכה לטפל במכשיר (ראו רשימת מעבדות שרות, בסוף חוברת זו).

24. אין להמשיך להשתמש בשואב האבק במקרה שהוא נשמט ונפל על משטח קשיח. יש למסור את המכשיר לבדיקה ותיקון במעבדת שרות מוסמכת (ראו רשימת מעבדות שרות בסוף חוברת זו). גם סדק או נזק שלא נראה בעין יכול לפגום בבטיחות השימוש בשואב האבק ולגרום לסכנת פציעה או התחשמלות.

25. במקרה של תקלה בשואב האבק, נזק, סדק, שבר באחד מחלקיו, השואב בא במגע עם מים או שתפקודו לקוי מסיבה כלשהי, יש למוסרו לתיקון במעבדת שרות שהוסמכה לטפל במכשיר. תיקונים שבוצעו בלא המיומנות הנדרשת לכך עלולים לסכן את המשתמש ולגרום לפקיעת תוקף האחריות. (ראו רשימת מעבדות שרות בסוף חוברת זו).

אזהרה: במקרה שמתגלה צורך להחליף את תקע החשמל היצוק האורגינלי של השואב, יש להשמיד אותו כדי שלא ישתמשו בו בטעות עבור מכשיר אחר.

התקן הגנה בפני התחממות יתר

שואב האבק מצויד בהתקן הגנה נגד התחממות יתר של המנוע. אם שואב האבק כבה באופן פתאומי, כבו אותו **ונתקו** אותו מזרם החשמל. בדקו את השואב למציאת סיבה אפשרית להתחממות היתר. סיבות אפשריות הן: מיכל אבק מלא, סתימה בצינור הגמיש או מסנן סתום. אם אחד מהגורמים האלה נמצא טפלו בו. המתינו לפחות 30 דקות לפני ניסיון להפעיל מחדש את השואב. לאחר 30 דקות חברו את השואב לזרם החשמל והפעילו אותו. אם השואב עדיין לא פועל פנו למעבדת שרות מוסמכת.

שימרו את הוראות ההפעלה במקום בטוח, לצורך עיון חוזר בעתיד.
המכשיר מיועד לשימוש ביתי בלבד.

הרכבת שואב האבק

אזהרה

סכנת התחשמלות

אין לחבר את השואב לזרם החשמל לפני שהרכבתו הושלמה. חיבור המכשיר לזרם החשמל בטרם הושלמה הרכבתו עלולה לגרום לסכנת התחשמלות ופציעה.

שלב 1: הוצאת השואב מהאריזה.

הוציאו את כל החלקים מהקרטון. היעזרו בתמונה הבא כדי לזהות את החלקים השונים. וודאו היטב שהוצאתם את כל החלקים לפני השלכת הקרטון וחומרי האריזה.

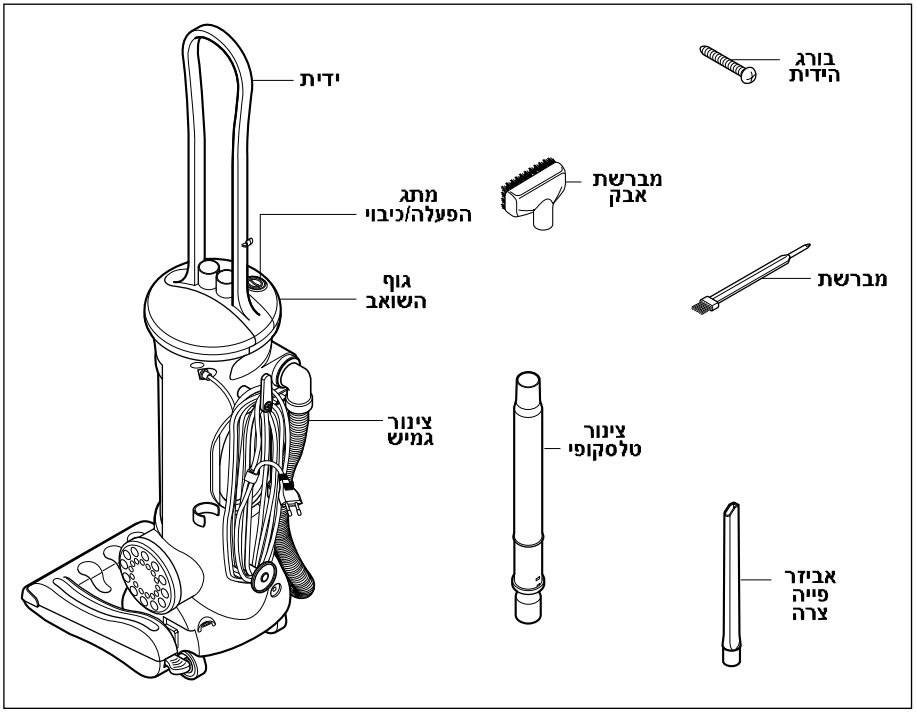

הרכבת שואב האבק

שלב 2: הרכבת הידית.

החליקו את הידית לתוך הפתח בצדו האחורי של גוף שואב האבק. (תרשים א')

הבריגו את הבורג לתוך חור ההברגה בידית והדקו בעזרת מברג. (תרשים ב')

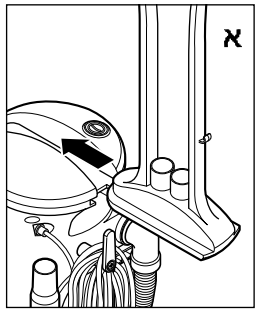

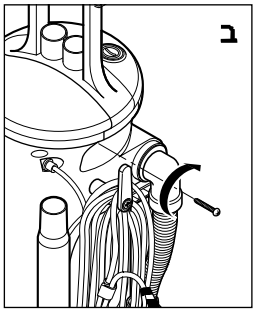

שלב 3: אחסון כבל החשמל.

וודאו שהמתלה לשחרור מהיר של כבל החשמל ממוקם בכוון אנכי.

לפפו את כבל החשמל סביב המתלה לשחרור מהיר והמתלה התחתון. (תרשים ג')

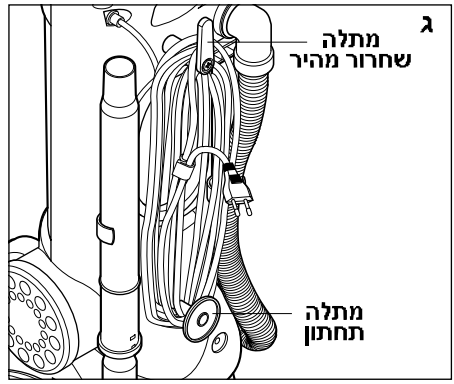

הצמידו בעזרת תפס ההידוק את תקע החשמל לכבל החשמל. (תרשים ד')

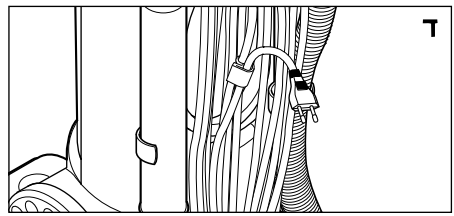

לשחרור כבל החשמל, סובבו את מתלה השחרור המהיר כלפי מטה. (תרשים ה')

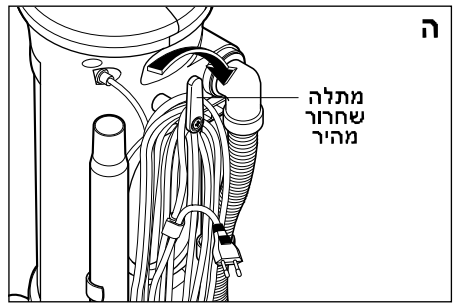

הרכבת שואב האבק

אזהרה

סכנת התחשמלות

אין לחבר את השואב לזרם החשמל לפני שהרכבתו הושלמה. חיבור המכשיר לזרם החשמל בטרם הושלמה הרכבתו עלולה לגרום לסכנת התחשמלות ופציעה.

שלב 4: מיקום אביזרי השאיבה.

אחסנו את הפייה הצרה ואת מברשת האבק בתוך התפס שבתחתית הידית. הכניסו את הצינור הטלסקופי לתוך התפס שבצדו השמאלי של שואב האבק.

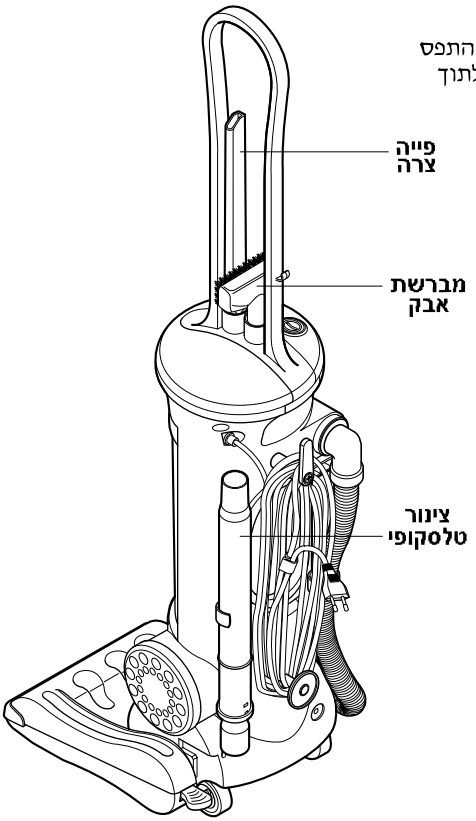

תאור שואב האבק

בתום ההרכבה על שואב האבק להראות כמו בתרשים הבא:

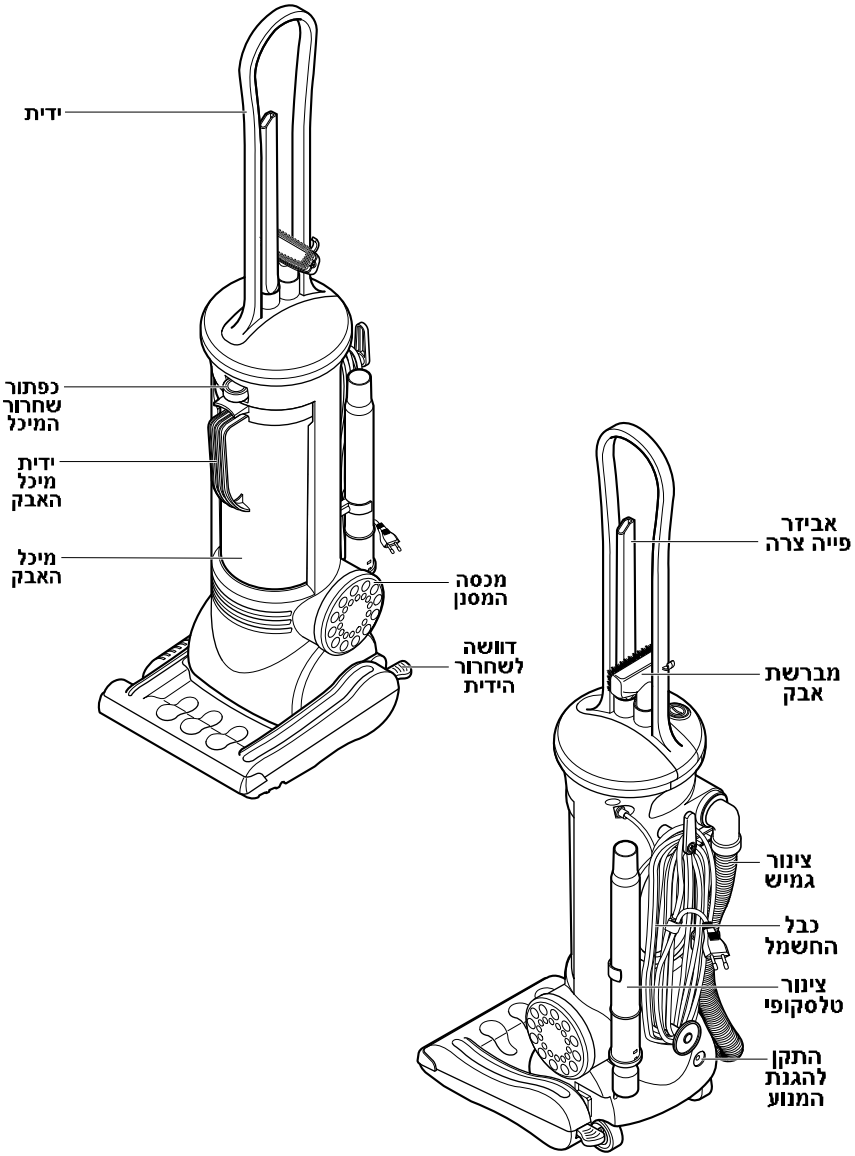

אפיונים מיוחדים

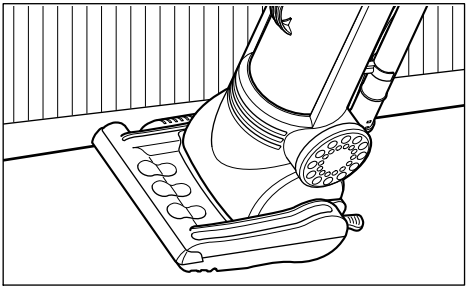

<u>ניקוי פינות</u>
אפיון "ניקוי הפינות" מאפשר לכם לנקות ביעילות ובקלות את אזורי פינת החיבור בין השטיח לקיר או לריהוט (חדרים עם שטיחים מקיר לקיר וכד').

התקן הגנה למנוע

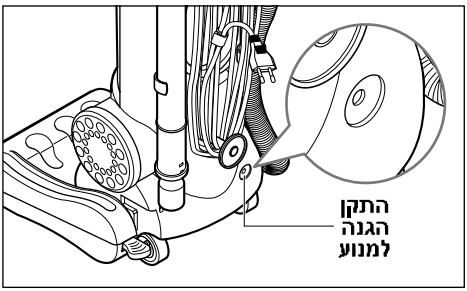

שואב האבק מצויד ב"שסתום מעקף" להגנת המנוע אשר נפתח באופן אוטומטי כדי לספק אוויר לקירור המנוע במקרה של סתימה אשר חוסמת את המעבר החופשי של האוויר.
כאשר "שסתום המעקף" נפתח כדי למנוע חימום יתר של המנוע ואפשרות לנזק לשואב האבק, יהיה שינוי בקולות השאיבה הנשמעים כרגיל, היות שהאוויר זורם עתה דרך פתח "שסתום המעקף".
כאשר זה מתרחש, כבו את השואב ונתקו אותו מזרם החשמל. בדקו את האביזרים השונים כדי לגלות את מקום הסתימה כמתואר בפרק **"הסרת סתימה"**.
"שסתום המעקף" להגנת המנוע, עשוי להיפתח גם בעת השימוש באביזרים מסוימים או בעת שאיבת שטיחים חדשים.
עקב הקטנה בזרימת האוויר הנגרמת ממבנה האביזר או על ידי שטיחים חדשים המקטינים את מהירות מילוי מיכל האבק.

הפעלה

אזהרה

אזהרה בפני פציעה או נזק למכשיר

אין להשתמש בשקעי חשמל הממוקמים מעל משטחי עבודה, הדבר עלול לגרום נזק לפריטים מסביב.

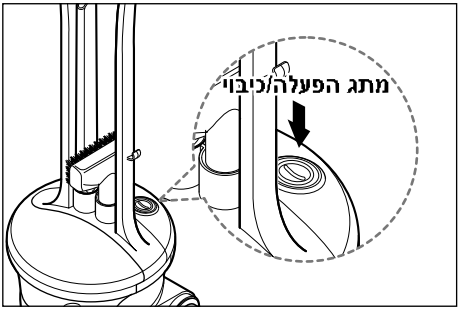

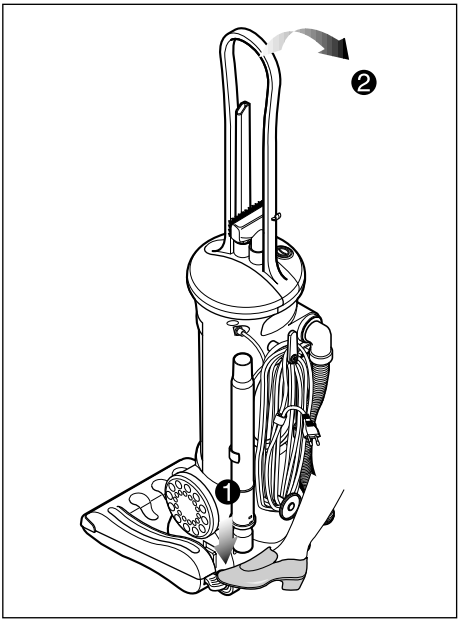

הוראת בטיחות חשובה

לפני חיבור המכשיר לשקע החשמל, וודאו שמתח רשת החשמל תואם את הרשום בתווית הסימון שעל המכשיר.

מתג "הפעלה/כיבוי" (ON/OFF)

חברו את התקע לשקע החשמל.

לחצו על מתג "הפעלה/כיבוי" לשם הפעלה או כיבוי שואב האבק.

במקרה ששואב האבק מפסיק את פעולתו בפתאומיות, יש ראשית להעביר את המתג למצב "כיבוי" (OFF) ולנתק את התק משקע החשמל ורק לאחר מכן לבדוק את הסיבה. שואב האבק עלול להתחיל לפעול שוב מעצמו ולגרום לפציעות.

מיקום הידית

ניתן למקם את הידית בכל מצב שתרצו.

לחצו על הדוושה לשחרור הידית, הידית כרגע חופשית וניתן להניע אותה מעלה או מטה בחופשיות.

לניקוי מתחת לרהיטים, לחצו על דוושת השחרור של הידית פעם שניה כדי לאפשר חופש תנועה שלה.

לאחסון שואב האבק או אביזרי העזר, מקמו את הידית במצה מאונך.

הפעלה

אזהרה

אזהרה בפני פציעה או נזק למכשיר

אין להשתמש בשקעי חשמל הממוקמים מעל משטחי עבודה, הדבר עלול לגרום נזק לפריטים מסביב.

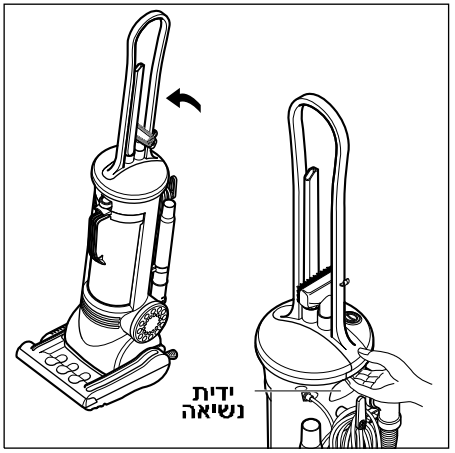

העברת השואב ממקום למקום

להעברת השואב מחדר לחדר, מקמו את הידית במצב מאונך.

אחזו בידית והטו את השואב לאחור על הגלגלים האחוריים, דחפו קדימה.

כמו כן ניתן להרים ולשאת את השואב באמצעות שימוש בידית הנשיאה המותקנת בו.

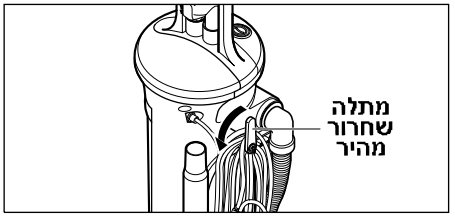

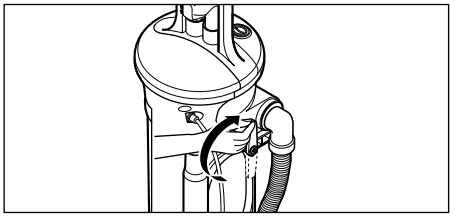

שימוש במתלה כבל החשמל

לשחרור כבל החשמל, סובבו את "מתלה השחרור המהיר" כלפי מטה, כל הכבל יחליק מהמתלה, מוכן לשימוש מידי.

אין למשוך בכבל החשמל לצורך הוצאת התקע משקע החשמל.
תמכו ביד אחת את מכסה השקע וביד השניה שלפו את התקע.

החזירו את "מתלה השחרור המהיר" למצב מאונך לפני ליפוף מחדש ואחסון שואב האבק.

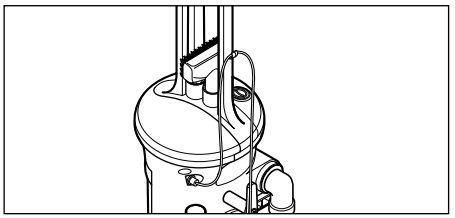

השימוש בוו התליה לכבל החשמל

בידית השואב יש חריץ המיועד לתפס כבל החשמל.
כדי להבטיח ולהגן על כבל החשמל מפני אפשרויות לנזק, הכניסו את תפס הכבל לתוך החריץ.
בצורה זו הכבל לא יהיה תלוי וחשוף לתלישה מתוך החיבור למערכת החשמל של השואב.

השימוש באביזרי העזר

אזהרה

אזהרה בפני פציעה או נזק למכשיר

אין להשתמש בשקעי חשמל הממוקמים מעל משטחי עבודה, הדבר עלול לגרום נזק לפריטים מסביב.

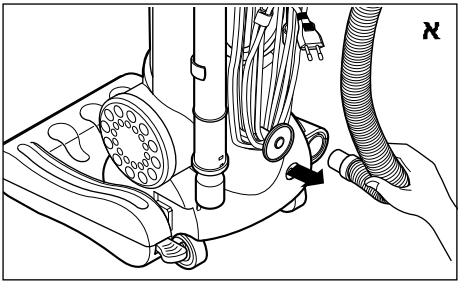

הוציאו את הקצה התחתון של הכבל הגמיש מתוך השואב אבק, על ידי משיכת צוואר הצינור החוצה מתוך התפס בבסיס. (תרשים א')

הסירו את הצינור הטלסקופי מנקודת האחסון שלו. (תרשים ב')

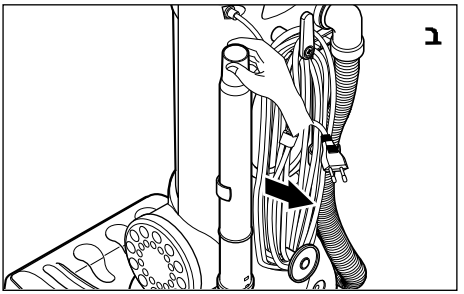

סובבו את חלק הצינור העבה בכוון **"שחרור מנעילה".** (תרשים ג')

החליקו את הצינור הטלסקופי על צוואר הצינור הגמיש.
חברו את "אביזר הפייה הצרה" או "מברשת האבק" על קצה הצינור הטלסקופי. (תרשים ד')

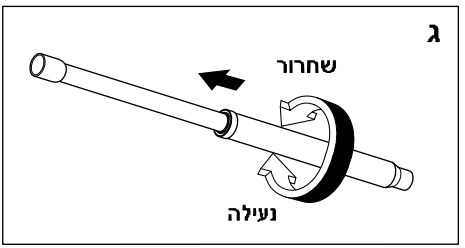

ניתן כמו כן לחבר את "אביזר הפייה הצרה" או "מברשת האבק" על קצה צוואר הצינור הגמיש

ניתן להשתמש במברשת האבק גם לצורך שאיבת משטחי ריפוד, על ידי הסרת המברשת. (תרשים ה')



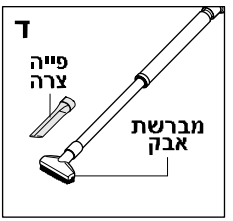

זהירות

בעת השימוש באביזרי עזר, היזהרו לא להאריך יתר על המידה את הצינור הטלסקופי. לחץ גדול מידי על הצינור הארוך יכול גרום נזק לצינור הטלסקופי.

הסרת סתימות

אזהרה

אזהרה בפני פציעה או נזק למכשיר
נתקו את שואב האבק מזרם החשמל לפני ניקוי המכשיר.
אי ביצוע הוראה זו עלול לגרום לפציעות עקב הפעלה לא צפויה של השואב.

במקרה ששואב האבק משמיע רעש שונה מהרגיל או שעוצמת השאיבה יורדת פתאום בדקו באם יש סתימה באביזרים או באם מסנו המנוע מלוכלך.

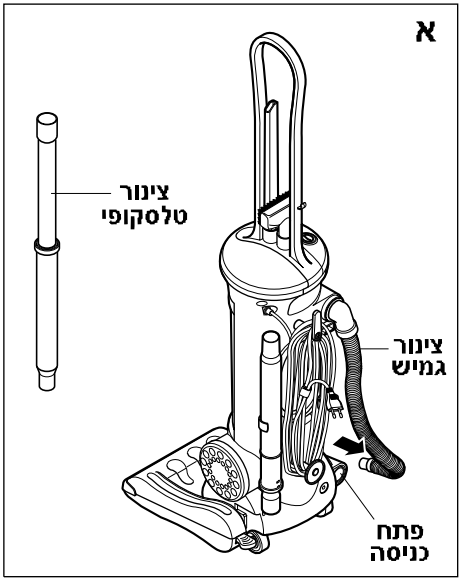

הסרת סתימות

ראשית יש לבדוק את הצינור הגמיש ואת הצינור הטלסקופי. בדקו חזותית את הצינור הגמיש ואת פתח הכניסה לגוף השואב אליו מחובר הצינור הגמיש. (תרשים א')

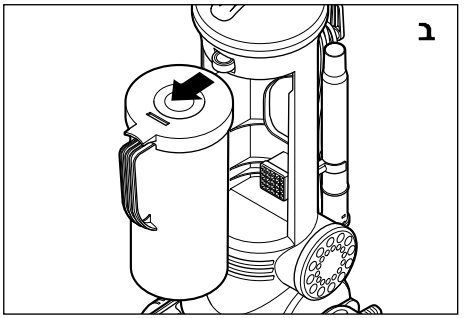

הסירו את מיכל האבק ובדקו את מסנן המנוע. (ראו עמ' 10)

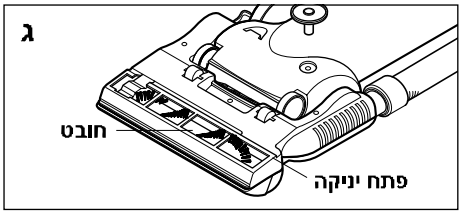

בדקו באם יש סתימה בפתח כניסת האוויר על גוף שואב האבק. (תרשים ב')

אם עדיין יש סתימה, הפכו את שואב האבק ובדקו את אזור "החובט" (המברשת המסתובבת) ופתח היניקה. (תרשים ג')

הציבו חזרה את השואב במצב מאונך לפני חיבורו מחדש לזרם החשמל.

מסנן המנוע

אזהרה

לפני השטיפה יש לנקות את המסנן לחלוטין מאבק ע"י המברשת ורק לאחר מכן שטפו בעדינות מרובה את החלק תחת הברז עד שהמים שיוצאים מהמסנן נקיים לחלוטין. לאחר מכן נערו היטב את המסנן מעודף המים והניחו לו להתייבש 48 שעות לפחות עד לייבוש מוחלט. במידה והמסנן יוחזר לח ורטוב יגרם נזק בלתי הפיך למסנן ויגרום לריחות רעים מהשואב.
אין להשתמש באמצעי מכני כלשהו כגון : סחרור, ריטוט וכדומה. יש איסור מוחלט ליבש את המסנן במיקרוגל, תנור ומקרן חום, הדבר יפגע במסנן בצורה בלתי הפיכה (הניחו את המסנן במקום מוצל לייבוש.
הרכיבו חזרה את מסגרת המסנן והתקינו אותו בחזרה לשואב.
במידה והמסנן ניזוק, יש איסור מוחלט להחזירו אל השואב. פנו לתחנת שירות לרכישת מסנן חדש.
(כמו כן יש איסור להפעיל את השואב ללא המסננים).
לקוחות נכבדים, פעלו לפי הוראות אילו וכך תימנעו פגיעה במסנן. המסננים הינם חלקים הנתונים לבלאי ואינם כלולים במסגרת האחריות!

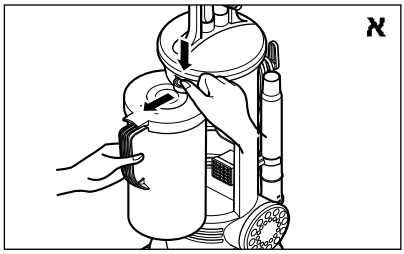

בדקו ונקו את מסנן המנוע באופן סדיר.
אם מסנן המנוע מכוסה עם יותר מידי אבק, שואב האבק יחדל מלפעול עקב כניסה לפעולה של התקן ההגנה מפני התחממות של המנוע.

יש לבדוק את מצבו של מסנן המנוע בכל פעם ששואב האבק משמיע קול שונה מהרגיל או שעוצמת השאיבה יורדת.

ראשית יש לכבות את השואב ולנתק את התקע משקע החשמל.
הסירו את מיכל האבק באמצעות לחיצה על כפתור השחרור ומשיכתו החוצה מתוך מחזיק מיכל האבק. (תרשים א')

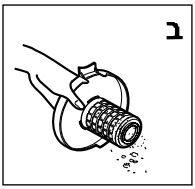

הסירו את המכסה ורוקנו את המיכל. (תרשים ב')

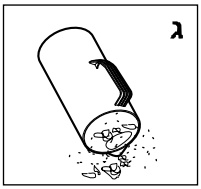

נקו את מסנן על ידי טפיחות קלות עליו מעל מכסה מיכל האבק. (תרשים ג')

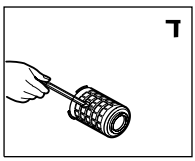

אם מסנן המנוע מלוכלך מאד, שטפו אותו תחת מי ברז.
לשטיפה קלה, הפרידו בין המסנן ממכסה המסנן. (תרשים ד' – ה')

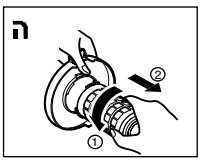

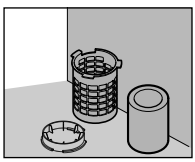

לאחר השטיפה, הניחו למסנן להתייבש במקום מוצל למשך יומיים **לפחות** ובדקו שהינו יבש לחלוטין.

אסור להתקין מחדש את מסנן המנוע כשהוא עדיין רטוב.

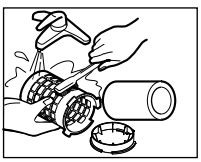

לפני ההתקנה מחדש של מיכל האבק, וודאו שהמכסה ממוקם כראוי.

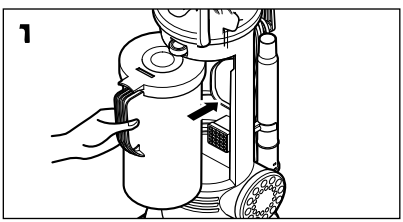

לשם התקנה מחדש של מיכל האבק, הניחו את תחתית מיכל האבק על החלק התחתון של מחזיק מיכל האבק ולחצו את חלקו העליון של מיכל האבק לתוך מחזיק המיכל עד שהוא ננעל במקומו. (תרשים ו')

הוראות החלפה

אזהרה

אזהרה בפני פציעה או נזק למכשיר
נתקו את שואב האבק מזרם החשמל לפני ניקוי המכשיר.
אי ביצוע הוראה זו עלול לגרום לפציעות עקב הפעלה לא צפויה של השואב.

מסנן פליטה

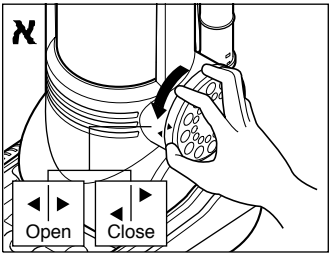

מסנן פתח פליטת האוויר ניתן לשימוש חוזר. זהו מסנן מסוג: **HEPA** High Efficiency Particulate Air, מסנן בעל יעילות גבוהה לקליטת חלקיקי אבק זעירים.
אזהרה: מסנן פליטה HEPA בלתי רחיץ.

להסרת מכסה המסנן סובבו אותו לצד שמאל. (תרשים א' ב')

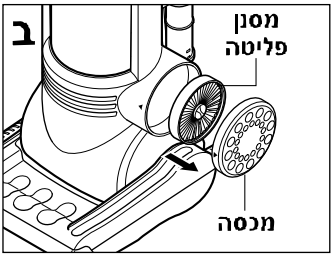

אין להפעיל את שואב האבק בלא שמסננן הפליטה מותקן בתוכו.

במידה ויבוא מסנן HEPA במגע עם מים יגרם נזק בלתי הפיך למסנן.

הסרה/התקנה של הפלטה התחתונה.

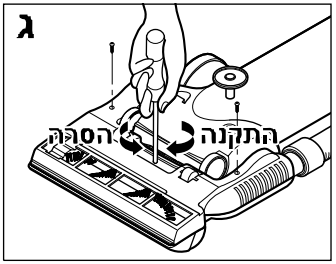

לפני החלפת חלק כלשהו, יש לנתק את התקע משקע החשמל.

להסרת הפלטה התחתונה, הבריגו החוצה את בורגי הפלטה ומשכו את הפלטה התחתונה מבית החובט. (תרשים ג')

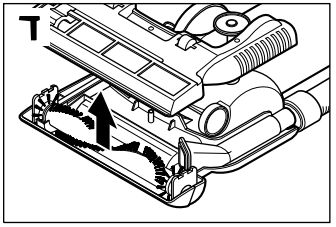

להתקנת הפלטה, הכניסו את הקצה הקדמי של הפלטה התחתונה לתוך החריצים שבחלק הקדמי של החובט. (תרשים ד')
לחצו על הפלטה התחתונה הבריגו והדקו את הברגים.
לקוחות נכבדים - במידה והינכם מתקשים בפרוק הפלטה התחתונה אנא פנו לתחנות שרות מורשות. במידה ויגרם נזק למכשיר מהרכבה לא נכונה, נזק זה לא יכלל במסגרת האחריות.

החלפת רצועת החובט

אזהרה

אזהרה בפני פציעה או נזק למכשיר
נתקו את שואב האבק מזרם החשמל לפני ניקוי המכשיר.
אי ביצוע הוראה זו עלול לגרום לפציעות עקב הפעלה לא צפויה של השואב.

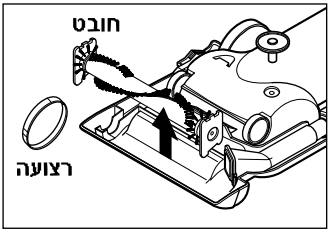

בדקו את החובט והרצועה באופן סדיר. אם הם שבורים או בלויים, החליפו אותם.

הפכו את השואב והסירו את הפלטה התחתונה כמתואר בפרק **"הסרה/התקנה של הפלטה התחתונה".**

להסרת החובט, אחזו את שתי תושבות החובט והרימו אותו. הסירו את הרצועה מגלגלת החובט וציר המנוע. אם הרצועה קרועה או התפרקה, הקפידו להוציא את כל החתיכות.

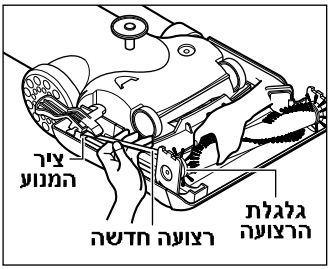

אזהרה

סכנת פציעה
הרצועה מתוחה מאד, יש להיזהר בעת הסרתה.
שחרור מתח הרצועה עלול לגרום להחלקה
ולהשתחררות מהירה של החובט ולפציעה.

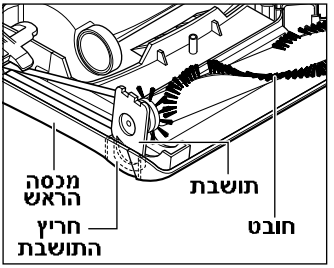

התקינו את הרצועה החדשה על ציר המנוע וגלגלת החובט. התקינו חזרה במקומו את החובט, וודאו ששתי תושבות החובט ממוקמות היטב בחריצים שבמכסה ראש החובט.

לאחר התקנת החובט, סובבו אותו ביד כדי לוודא שהרצועה לא מפותלת או תקועה ושכל החלקים מסתובבים בקלות.

התקינו מחדש את מכסה הגוף על ידי ביצוע הצעדים המתוארים בפרק **הסרה/התקנה של הפלטה התחתונה -** מהסוף להתחלה.

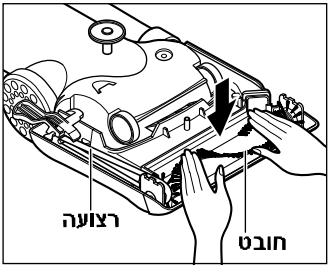

יש לנקות את החובט בהתאם ללוח הזמנים המפורט להלן:

תכיפות השימוש בשואב	תכיפות ניקיון החובט
כבד – שימוש יומיומי	כל שבוע
בינוני – 2-3 פעמים בשבוע	כל שבוע
קל – פעם בשבוע	כל חודשיים

חלקי חילוף, אביזרים ומסננים ניתן לרכוש בתחנות שרות מורשות, ראו רשימת תחנות שרות.

אחזקה

אזהרה

אזהרה בפני פציעה או נזק למכשיר
נתקו את שואב האבק מזרם החשמל לפני ניקוי המכשיר.
אי ביצוע הוראה זו עלול לגרום לפציעות עקב הפעלה לא צפויה של השואב.

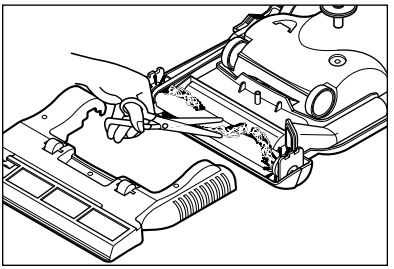

ניקוי החובט

לשמירה על יעילות ניקוי גבוהה, נקו את החובט באופן סדיר.

וודאו שהוצאתם את התקע משקע החשמל.

במקרה הצורך, הסירו את מכסה הגוף בהתאם למתואר בפרק
"הסרה/התקנה של הפלטה התחתונה".

הסירו את החומרים שהסתבכו סביב החובט. כמו מוך, לכלוך מהשטיחים, שיער, סיבים, חוטים וכד'. התירו אותם או גזרו אותם במספריים, כמתואר בתרשים.

נתונים טכניים

דגם	**V-UP142NJP**
אספקת מתח	**230 V/50Hz וולט**
הספק	**IEC-1200W,MAX-1400W - וואט**
מידות - במצב מאונך (אורך/רוחב/גובה)	**334 X 347 X 1096 מילימטר**
אורך כבל החשמל	**7.7 מטר**
משקל (בערך)	**6.3 ק"ג**

חלקים

דגם	**V-UP142NJP**
רצועה	**4400FI3348A**
מסנן פליטה (רחיץ HEPA)	**3210FI2434D**
מסנן מנוע	**5231FI3783A**

איתור תקלות

אזהרה

אזהרה בפני פציעה או נזק למכשיר
נתקו את שואב האבק מזרם החשמל לפני ניקוי המכשיר.
אי ביצוע הוראה זו עלול לגרום לפציעות עקב הפעלה לא צפויה של השואב.

התקלה	סיבה אפשרית	פתרון אפשרי
שואב האבק אינו פועל	1. התקע אינו מוכנס כראוי בשקע 2. אין מתח בשקע 3. מתג הפעלה/כיבוי לא הופעל 4. הנתיך שרוף/קפץ 5. ההגנה בפני התחממות יתר של המנוע הופעלה	1. הכניסו היטב את התקע 2. בדקו את הנתיך 3. לחצו על מתג הפעלה/כיבוי 4. החליפו/הרימו את הנתיך 5. כבו את השואב, נתקו מזרם החשמל והניחו לו להתקרר
השואב פועל אך אינו יונק	1. הרצועה בלויה או קרועה 2. מברשת החובט בלויה 3. מיכל האבק מלא 4. סתימה באביזר כלשהו 5. צינור גמיש פגום 6. מיכל האבק אינו מותקן כראוי 7. הרצועה לא הורכבה על ציר המנוע	1. החליפו רצועה 2. החליפו חובט 3. הוריקו את מיכל האבק ובדקו את מסנן המנוע 4. ראו פרק הסרת סתימות 5. החליפו צינור גמיש 6. וודאו שמיכל האבק מותקן כראוי בגוף השואב 7. הרכיבו את הרצועה על המנוע (ראו פרק החלפת רצועת החובט)
אבק בורח ממיכל האבק	1. מיכל האבק אינו מותקן כראוי 2. מכסה מסנן המנוע אינו מורכב כראוי	1. וודאו שמיכל האבק מורכב כראוי במקומו 2. וודאו שמסנן המנוע נמצא במקומו ומותקן כראוי

תעודת אחריות למוצרי LG

לקוח/ה נכבד/ה

הננו מברכים אותך על קנייתך ומקווים שהמכשיר שרכשת יהווה מקור הנאה לשנים רבות.

לתשומת לבך:

1. תוקף תעודה זו מותנה בהצגת חשבונית רכישה.
2. תעודה שבוצעו בה שינויים בנתונים המקוריים תהיה משוללת כל תוקף.

שם הלקוח: _____

כתובת: _____

טל/פקס/E-mail: _____

תיאור המוצר/דגם: שואב אבק LGVC V-UP142NJP

מס' מכשיר: _____

תאריך רכישה: _____

חתימת וחותמת המוכר: _____

תעודת אחריות

1. תעודת האחריות היא לתקופה של 12 חודשים מתאריך הקנייה.חברת ברימאג בע"מ, רחוב החצב, פינת המצודה, 31 אזור, אחראית בזאת לפעילות התקינה של המכשיר האמור, בהתאם לתנאים דלהלן:
2. אחריות זו היא בתוקף רק כשהיא חתומה על ידי מפיץ מורשה של החברה.
3. אנו מתחייבים למתן שירות תיקונים ולהחליף, ללא תשלום כל חלק אשר יראה לנו פגום ואשר לפי שיקול דעתנו הבלעדי נפגם בתנאי שימוש נכונים בהתאם להוראות ההפעלה המצורפות למכשיר.
   <u>הגדרת חלק אינו כולל גומי, פלסטיק וזכוכית.</u>
4. אחריות זו אינה מכסה נזק שנגרם כתוצאה מנפילה, כוח עליון ורשלנות.
5. אחריות זו בטלה, באם יתקן או ינסה לתקן את המכשיר כל אדם **<u>פרט לטכנאי מורשה של החברה</u>** או כתוצאה משימוש בלתי נכון, כמוסבר בספר ההדרכה.
6. אחריות זו אינה מקנה זכויות או דרישות אשר אינן כלולות בכתב אחריות זה.
7. על הלקוח להביא את המכשיר למעבדת השירות על אחריותו וחשבונו.
8. <u>תעודה זו תקפה רק עם הצגת חשבונית קניה.</u>
9. יש לקרוא בעיון את הוראות ההפעלה.
10. אחריות זו אינה מכסה ניקיון המכשיר ותחזוקתו.
11. אחריות זו אינה מכסה כל נזק שנגרם בניגוד להוראות יצרן.
12. אחריות זו אינה מכסה חלקים מתכלים כגון מסננים.

רשימת תחנות השרות

מרכז שרות ארצי ברימאג בע"מ, רחוב החצב, פינת המצודה 31, אזור	טל. פקס	03-6508470/1 03-6508450
תל אביב שרות ומכירה ברימאג בע"מ, רח' לבונטין 11	טל.	03-5606931
ירושלים, שרות כל, הגידם 1	טל.	02-6252451
באר שבע, מיקרו מיקס, החלוץ 102	טל.	08-6282891
רשל"צ, אלקטרו בוגדרי, פינסקר 4	טל.	03-9666492
רחובות, שרותי גדסי, הרצל 125	טל.	08-9452108
בני ברק, טכנו-מיקס, רח' רבי עקיבא 72	טל.	03-6194518
נתניה, בר-מנחם, רמז 15	טל.	09-8337733
חיפה, אלדן,הנמל 32	טל.	04-8679289 ,8628889
טבריה, תיקון-כל, רח' יוחנן בן זכאי 3	טל.	04-6790469
הרצליה, מכנו מיקס, סוקולוב 95	טל.	09-9582149
אילת, שרות אדיב, אזור התעשייה החדש	טל.	08-6378448
קרית מוצקין, שרות מהיר, קדיש לוז 11	טל.	04-8757168
פתח תקווה, המאיר, פרנקפורטר 2	טל.	03-9225123
חדרה, אחים איטח, הנשיא 53	טל.	04-6322252
אשקלון, מעבדות שרות א.ש. רח' רמז (קניון השקם) חנות 29	טל.	08-6722211
רעננה, מעבדות טל-אור, אחוזה 72	טל.	09-7603387
לוד, מעבדות ישראל, דיזרעאלי 14	טל.	08-9250430
אשדוד, המרכז לתיקוני חשמל, מרכז מסחרי	טל.	08-8533976
רמת גן, אלקטרו ברק, ז'בוטינסקי 89	טל.	03-7515112 ,7511145
נהריה, ששת, הרצל 51	טל.	04-9826746
קרית גת, אורות גת, שד' לכיש 7/3	טל.	08-6881270
קרית שמונה, חיים זוזוט, רסקו 44	טל.	04-6903674 ,250925- 052
עפולה, דושינציקי מוצרי חשמל, שד' אורולורוב 6	טל.	04-6522537

לקבלת מידע נוסף בקשר לתחנות שרות מאושרות על ידינו באזורים אחרים בארץ,
נא להתקשר לחברת ברימאג (1993) בע"מ, רח' החצב 1 פינת המצודה 31, אזור.
טל. 03-6508470/1

כתובתנו באינטרנט : www.brimag.co.il

MEMO



LG Electronics Inc.

http://www.lge.com