LG
Life's Good

www.lgmobile.com

P/N : MMBB0235830(1.3) H

KE970 | PŘÍRUČKA UŽIVATELE

LG Electronics Inc.

LG
Life's Good

T··Mobile···

Born to Shine BLACK LABEL SERIES

Obsah této příručky se může lišit od vašeho telefonu v závislosti na softwaru telefonu nebo mobilním operátorovi.

CESKY
ENGLISH

CE 0168

KE970 Příručka Uživatele

ČESKY

Likvidace starých spotřebičů

1. Pokud je u výrobku uveden symbol pojízdného kontejneru v přeškrtnutém poli, znamená to, že na výrobek se vztahuje směrnice Evropské unie číslo 2002/96/EC.
2. Všechny elektrické a elektronické výrobky by měly být likvidovány odděleně od běžného komunálního odpadu prostřednictvím sběrných zařízení zřízených za tímto účelem vládou nebo místní samosprávou.
3. Správný způsob likvidace starého elektrického spotřebiče pomáhá zamezit možným negativním vlivům na životní prostředí a zdraví.
4. Bližší informace o likvidaci starého spotřebiče získáte u místní samosprávy, ve sběrném zařízení nebo v obchodě, ve kterém jste výrobek zakoupili.

Obsah

Úvod 5

Pro vaši bezpečnost 6

Pokyny k bezpečnému a efektivnímu používání 7

Funkce telefonu KE970 14

Součásti telefonu

Údaje na displeji 18

Ikony na obrazovce 19

První kroky 21

Instalace SIM-karty a baterie do přístroje

Nabíjení baterie 23

Odpojení nabíječky 24

Vložení paměťové karty

Vyjmutí paměťové karty 25

Obecné funkce 26

Volání a přijímání hovorů

Přijímání hovoru 27

Psaní 28

Výběr funkcí a možností 33

Menu během hovoru 34

Během hovoru

Skupinové neboli konferenční hovory 36

Strom nabídek 38

Profily 41

Aktivovat

Přizpůsobit

web'n'walk 43

Multimédia 44

Přehrávač MP3

Fotoaparát 48

Video kamera 51

Záznam hlasu

Registr hovorů 52

Všechny hovory

Zmeškané hovory

Volané hovory 53

Přijaté hovory

Trvání hovoru 54

Cena hovoru

Informace o datech

Zprávy 55

Nová zpráva

Textová

Multimediální 56

E-mail 58

Přijaté 60
E-mailová schránka 61
Koncepty 62
Odesílané
Odeslané 63
Hlasová schránka
Inform. zpráva 64
Přečíst
Témata
Šablony 65
Text
Multimediální 66
Nastavení
Textová zaráva
MMS 67
E-mail 68
Číslo hlasové pošty 71
Push zpráva
Inform. zpráva

Kontakty 73
Hledat
Nový kontakt 74
Rychlé volby 75
Skupiny
Kopírovat vše 76
Smazat vše
Nastavení
Informace 77

Moje složka 78
Obrázky
Zvuky 79
Videa 80
Dokumenty 82
Další
Hry a aplikace 83
Externí paměť

Nástroje 85
Budík
Kalendář
t-zones 87
Domů 88
Záložky
Přejít na URL 89
Historie
Nastavení
Informace 90
Kalkulačka 91
Poznámky
Stopky 92
Převodník jednotek
Světový čas 93
Služby SIM

Obsah

Nastavení 94

Datum a čas

Nastavit datum

Formát data

Nastavit čas

Formát času

Autom. aktualizace

Jazyky

Displej

Tapeta

Podsvícení 95

Jas

Zobrazit ikony zkratek

Styl menu

Styl vytáčení

Stále zobrazovaný text

Název sítě

Připojení 96

Bluetooth

Síť 98

Připojení USB 101

Volat 102

Přesměrování hovoru

Režim odpovědi 104

Odeslat vlastní číslo

Čekající hovor 105

Minutové upozornění

Automatické opakování vytáčení

DTMF tóny

Zabezpečení 106

Požadavek kódu PIN

Zámek telefonu

Blokování hovoru 107

Pevná volba čísla 108

Změnit kódy

Letový režim 109

Snížená spotřeba

Obnovit výchozí

Stav paměti

Otázky a odpovědi 110

Příslušenství 114

Technické údaje 116

Úvod

V rukou máte špičkový kompaktní mobilní telefon KE970, který dokáže využívat nejnovější technologie v oblasti digitální mobilní komunikace.

Tato příručka uživatele obsahuje důležité informace o použití a obsluze tohoto telefonu. V zájmu dosažení optimálního výkonu a zabránění poškození nebo zneužití telefonu byste si měli všechny informace obsažené příručce pečlivě pročíst. Jakékoli změny nebo modifikace, jež nejsou výslovně v této uživatelské příručce schváleny, by mohly anulovat platnost záruky na toto zařízení.

Pro vaši bezpečnost

UPOZORNĚNÍ!

- *V letadle musí být mobilní telefon vždy vypnutý.*
- *Nedržte telefon v ruce, když řídíte.*
- *Nepoužívejte mobilní telefon v blízkosti čerpacích stanic, skladů paliv, chemických výrobních zařízení nebo v prostorech s nebezpečím výbuchu.*
- *Pro svou bezpečnost používejte POUZE určené ORIGINÁLNÍ baterie a nabíječky.*
- *Když se telefon nabíjí, nedotýkejte se jej mokrýma rukama. Mohlo by dojít k zasažení elektrickým proudem nebo k vážnému poškození telefonu.*
- *Telefon uchovávejte na bezpečném místě mimo dosah malých dětí. Telefon obsahuje malé součásti, u kterých při uvolnění hrozí riziko udušení.*

VÝSTRAHA!

- *Vypněte telefon v každé oblasti, kde to vyžadují zvláštní předpisy. Nepoužívejte například telefon v nemocnicích, protože může ovlivnit citlivé lékařské přístroje.*
- *V některých mobilních sítích nemusí být nouzové hovory dostupné. Proto byste se u nouzových hovorů neměli spoléhat pouze na svůj mobilní telefon.*
- *Používejte pouze ORIGINÁLNÍ příslušenství, abyste nezpůsobili poškození svého telefonu.*
- *Všechny rádiové vysílače způsobují riziko rušení s elektronikou v bezprostřední blízkosti. Mírné rušení může ovlivnit televizory, rádia, počítače atd.*
- *Baterie by se měly likvidovat v souladu s platnými právními předpisy.*
- *Nerozebírejte telefon ani baterii.*
- *Nebezpečí výbuchu v případě výměny baterie za nesprávný typ.*

Pokyny k bezpečnému a efektivnímu používání

Pročtěte si prosím tyto jednoduché pokyny. Nedodržení těchto pokynů může být nebezpečné nebo protiprávní. V této příručce jsou podány další podrobné informace.

Vystavení vysokofrekvenční energii

Informace o vystavení radiovým vlnám a SAR

Tento mobilní telefon - model KE970 - byl zkonstruován tak, aby splňoval platné bezpečnostní normy pro vystavení radiovým vlnám. Tento požadavek je založen na vědeckých poznatcích stanovujících bezpečnostní limity zaručující bezpečnost všech osob bez ohledu na věk nebo zdraví.

- U směrnic o vystavení radiovým vlnám se používá měrná jednotka s názvem SAR (Specific Absorption Rate). Testy SAR se provádejí standardizovanou metodou s telefonem vysílajícím na nejvyšší certifikované výkonové úrovni ve všech frekvenčních pásmech.
- I když u různých modelů telefonů LG se může úroveň SAR do jisté míry lišit, všechny jsou navrženy tak, aby splňovaly platné směrnice pro vystavení radiovým vlnám.
- Limitní hodnota SAR doporučená mezinárodní komisí pro ochranu před neionizujícím zářením ICNIRP (Commission on Non-Ionizing Radiation Protection) je 2 W/kg v průměru na deset (10) gramů tkáně.

- Nejvyšší hodnota SAR tohoto modelu, testovaného DASY4 pro použití u ucha je 0,443 W/kg (10g) a při nošení na těle je 0,245 W/kg (10g).
- Hodnoty SAR pro obyvatele v zemích nebo regionech, které přijaly limit SAR doporučený institutem IEEE, který je 1,6 W/kg s průměrem na 1 gram tkáně (například USA, Kanada, Austrálie, Tchajvan).

Péče o přístroj a jeho údržba

VAROVÁNÍ!

Používejte pouze baterie, nabíječku a příslušenství schválené pro tento konkrétní model telefonu. Použití jiných typů by mohlo vést nejen ke zrušení platnosti homologace nebo záruk, které se na telefon vztahují, ale i k ohrožení zdraví.

- Přístroj nerozebírejte. V případě nutnosti opravy, přístroj odneste kvalifikovanému servisnímu technikovi.
- Telefon neponechávejte a nepoužívejte v blízkosti elektrických spotřebičů, jako je televizor, radiopřijímač nebo osobní počítač.
- Telefon by měl být v bezpečné vzdálenosti od zdrojů tepla, jako jsou radiátory a vařiče.
- Nikdy neumisťujte přístroj do mikrovlnné trouby, baterie telefonu by mohla explodovat.
- Neupusťte přístroj na zem.
- Přístroj by neměl být vystaven mechanickým vibracím nebo nárazům.
- Při zabalení do fólie nebo obalu z PVC by mohlo dojít k poškození ochranného nátěru telefonu.

- K čištění povrchu přístroje nepoužívejte agresivní chemické látky nebo rozpouštědla (alkohol, benzen nebo ředidla). Vzniká riziko požáru.
- Telefon by neměl být vystaven nadměrnému kouři nebo prachu.
- Telefon by neměl být umístěn v těsné blízkosti platebních karet a dopravních jízdenek, kde by mohlo dojít k poškození údajů na magnetických proužcích.
- Nedotýkejte se displeje ostrými předměty; mohlo by dojít k poškození telefonu.
- Telefon by neměl přijít do styku s tekutinami a vlhkým prostředím.
- Příslušenství jako sluchátka nebo headsety používejte opatrně. Ubezpečte se, že jejich kabely nejsou zohýbané a že se zbytečně nedotýkají antény.
- Před nabíjením přístroje odpojte datový kabel.

Elektronické přístroje

Všechny mobilní telefony mohou způsobovat rušení s možným negativním vlivem na normální funkci elektronických přístrojů.

- Bez povolení není dovoleno používat mobilní telefon v blízkosti lékařských přístrojů. Telefon by neměl být umístěn těsně u kardiostimulátoru (tzn. v náprsní kapse).
- Některé mobilní telefony mohou rušit funkčnost naslouchátek.
- Může dojít i k určitým drobným interferencím televize, rádia, osobních počítačů apod.

Bezpečnost na silnici

Při řízení motorových vozidel se seznamte s místními zákony a předpisy o používání mobilních telefonů.

- Při řízení nedržte telefon v ruce.
- Věnujte plnou pozornost řízení.
- Pokud máte handsfree soupravu, používejte ji.
- Pokud to podmínky řízení vyžadují, je třeba před voláním nebo přijímáním hovoru vozidlo zastavit a zaparkovat.
- Vysokofrekvenční energie by mohla mít vliv na některé elektronické systémy ve voze, například radiopřijímač nebo bezpečnostní zařízení.
- Pokud máte vozidlo vybavené airbagem, nesmí jeho funkci narušovat pevně nainstalované ani přenosné bezdrátové zařízení. Nefunkčnost airbagu by mohla vést k vážnému zranění.

Pokud posloucháte hudbu venku, nezapomeňte si nastavit hlasitost tak, abyste slyšeli okolní zvuky.

Tohoto doporučení dbejte hlavně při přecházení ulice.

Předcházejte poškození sluchu

Pokud jste delší dobu vystaveni hlasitým zvukům, můžete si poškodit sluch. Proto doporučujeme telefon nezapínat ani nevypínat v blízkosti uší. Také doporučujeme upravit hlasitost hudby a hovorů na rozumnou úroveň.

Oblast odstřelovacích prací

Telefon není dovoleno používat v oblastech, kde probíhají odstřelovací práce. Je třeba dodržovat příslušná nařízení a postupovat podle platných předpisů a pravidel.

Potenciálně výbušné prostředí

- Telefon nepoužívejte u čerpacích stanic. Nepoužívejte jej v blízkosti paliv nebo chemikálií.
- V části vozidla, ve kterém převážíte mobilní telefon nebo jeho příslušenství, nepřevážejte ani neuchovávejte hořlavé plyny, kapaliny nebo výbušniny.

V letadle

Bezdrátová zařízení mohou v letadlech způsobovat rušení.

- Před nástupem do letadla je třeba vždy mobilní telefon vypnout.
- Bez povolení posádky nepoužívejte telefon ani na zemi.

Děti

Telefon je třeba uchovávat na bezpečném místě mimo dosah malých dětí. Obsahuje totiž malé součástky, s jejichž uvolněním by mohlo být spojeno riziko udušení.

Tísňové volání

Tísňová volání nemusejí být k dispozici ve všech mobilních sítích. Z tohoto důvodu byste se neměli v případě tísňového volání spoléhat na mobilní telefon. Ověřte si tuto informaci u místního operátora.

Informace o bateriích a jejich údržba

- Před dobíjením nemusí být baterie úplně vybitá. Na rozdíl od jiných bateriových systémů zde neexistuje paměťový efekt, který by snižoval výkon baterie.
- Používejte pouze baterie a nabíječe od firmy LG. Svým provedením nabíječe LG zaručují maximální životnost baterií.
- U baterie neprovádějte demontáž ani zkratování.
- Kontakty na baterii je třeba udržovat v čistotě.
- Až baterie přestane podávat přiměřený výkon, vyměňte ji. Potřeba výměny však nastává až po stovkách dobití.
- Pokud nebyla baterie dlouho používána, před použitím ji znovu nabijte.
- Nabíječka by neměla být vystavena přímému slunečnímu záření a neměla by se používat ve vlhkém prostředí, například v koupelně.
- Baterii nenechávejte na horkých ani na chladných místech, snížila by se tím její kapacita.

- Nebezpečí výbuchu v případě výměny baterie za nesprávný typ.
- Použité baterie likvidujte v souladu s pokyny výrobce.

Funkce telefonu KE970

Součásti telefonu

Pohled na otevřený telefon

Sluchátko

Navigační klávesy

- **V pohotovostním režimu:**
  - **Krátké stisknutí ↑ :** Seznam Zpráv
  - **Krátké stisknutí ↓ :** Seznam Profilů
  - **Krátce stiskněte:** Menu
  - **Krátce stiskněte:** Seznam Kontaktů
  - **Krátce stiskněte:** Seznam Oblíbených
- **V nabídce:** procházení seznamem nahoru a dolů
  - **Krátce stiskněte:** tlačítko OK



Pomocí navigačního tlačítka nahoru/dolů můžete snadněji procházet menu a jednotlivé funkce.

Hlavní LCD displej

- **Horní část:** Síla signálu, stav baterie a další funkce.
- **Dole:** Indikace pro kontextová tlačítka

Alfanumerické klávesy

- **V pohotovostním režimu:** Zadávání vytáčených čísel. Podržte
  - 0 ± – Mezinárodní hovory
  - 1 oo – Aktivace menu Střediska hlasové pošty
  - 2 abc až 9 wxyz – Rychlé volby
- **V režimu úprav:** Zadávání čísel a znaků

Mikrofon

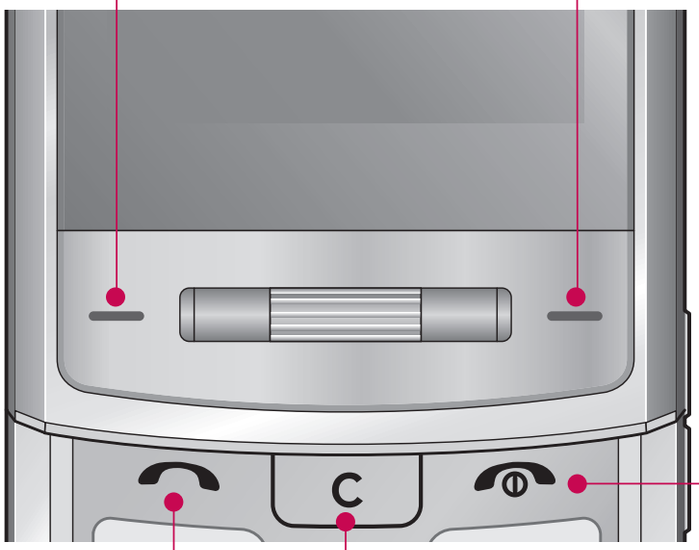

Levé kontextové tlačítko / Pravé kontextové tlačítko

Tato tlačítka provádějí funkce, vyznačené na spodním okraji displeje.

Tlačítko Konec

- Zapnout/vypnout (podržte)
- Ukončení nebo odmítnutí hovoru.

Tlačítko vymazat

Při každém stisknutím tohoto tlačítka se umaže jeden znak. Delším stisknutím se smažou všechny zadané znaky. Tímto tlačítkem se rovněž vrátíte na předchozí obrazovku.

Tlačítko zvednout

- Vytočení telefonního čísla nebo přijmutí hovoru.
- **V pohotovostním režimu:** zobrazuje naposledy vytočené, přijaté a zmeškané hovory.

Funkce telefonu KE970

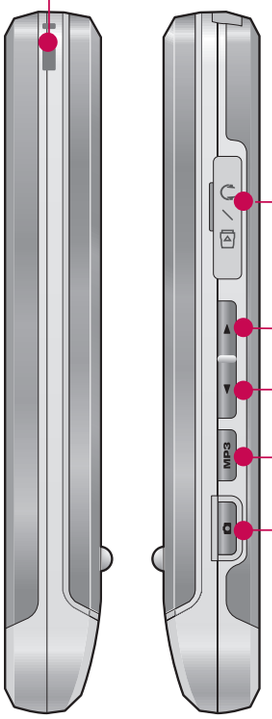

Otvory pro popruh na nošení

Konektor pro nabíjení baterie/ konektor pro kabel a pro sluchátka

Poznámka

- Před připojením USB kabelu zkontrolujte, zda je telefon zapnutý a v režimu nečinnosti.

Postranní tlačítka

- **V pohotovostním režimu (otevřený):** Hlasitost tónu kláves
- **V pohotovostním režimu (zavřený):** Krátké stisknutí - Rozsvícení displeje.
- **V průběhu hovoru:** hlasitost sluchátka

Poznámka

- Z důvodu ochrany sluchu je při otevřené výsuvné části maximální úroveň hlasitosti 3.

Tlačítko MP3

Přímo zapíná MP3 přehrávač.

Boční tlačítko fotoaparátu

Dlouhé stisknutí - Zapnutí fotoaparátu

Pohled zezadu

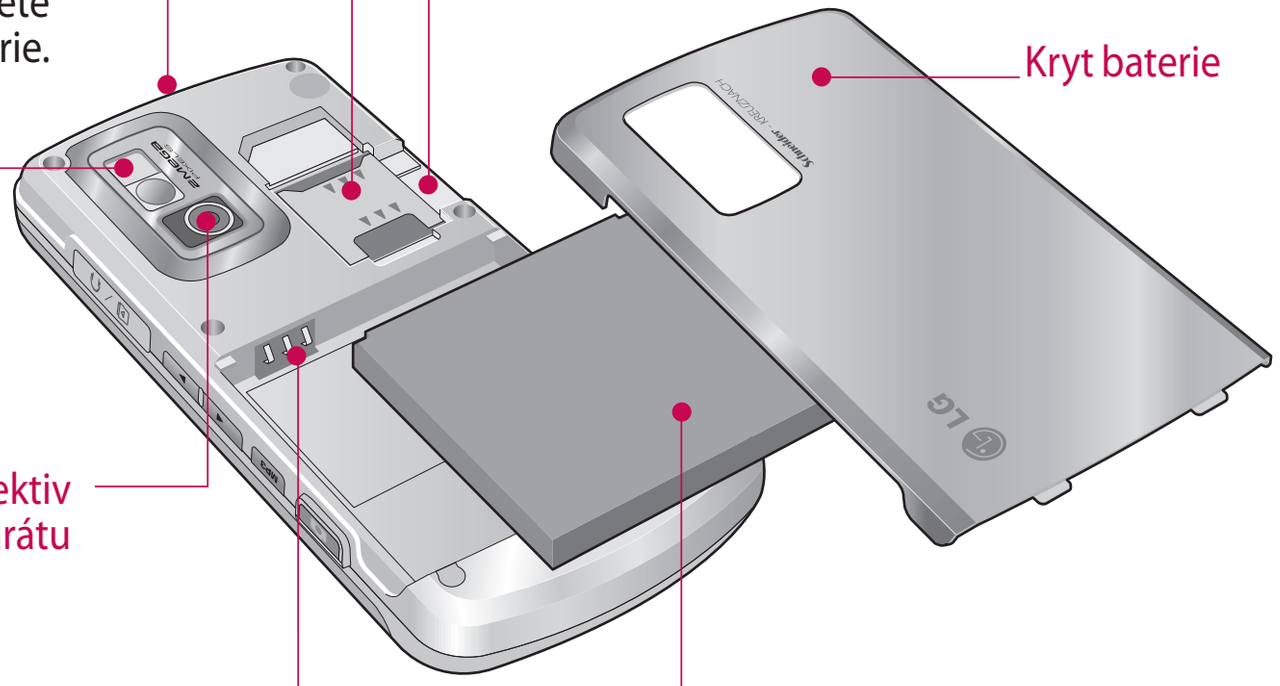

Údaje na displeji

Oblast ikon

Oblast textu a grafiky

Indikace pro kontextová tlačítka

Oblast	Popis
První řádek	Zobrazení různých ikon.
Střední řádky	Zobrazení zpráv, pokynů a jakýchkoliv informací, které zadáváte, například číslo, které chcete vytočit.
Poslední řádek	Zobrazení funkcí, které jsou právě přiřazeny ke dvěma kontextovým tlačítkům.

Na obrazovce se zobrazuje několik ikon. Ty jsou popsány níže.

Ikony na obrazovce

Ikona	Popis
	Síla síťového signálu. *
	Probíhající hovor.
	Dostupnost služby GPRS.
	Probíhající roaming do jiné sítě.
	Nastavený a zapnutý alarm.
	Stav nabití baterie.
	Příjem zprávy.
	Příjem hlasové zprávy.

* Kvalita hovoru se může lišit v závislosti na pokrytí sítě. Pokud je síla signálu pod dvěma proužky, může docházet ke ztlumení, výpadkům hovoru a špatnému přenosu zvuku. Při vašich hovorech byste se měli řídit indikátorem sítě. Když nejsou žádné proužky zobrazeny, znamená to, že není pokrytí sítě: v tomto případě nebudete moci využívat žádné síťové služby (hovory, zprávy apod.).

Ikona	Popis
	Vibrační vyzvánění aktivováno.
	Aktivován Normální profil.
	Menu Hlasitě v profilu.
	Aktivován profil Tichý režim.
	Aktivován profil Sluchátka.
	Aktivováno přesměrování hovorů
	Probíhající přístup telefonu k WAP.

Ikona	Popis
	Probíhající přenos dat GPRS.
	Bluetooth aktivován
E	Označuje, že je k dispozici služba EDGE. Připojení ke službě EDGE vám umožňuje přenášet data rychlostí 200Kb/s (závisí na dostupnosti sítě). Informace o pokrytí signálem a o dostupnosti této služby vám poskytne operátor.

Instalace SIM-karty a baterie do přístroje

Před vyjmutím SIM karty nebo baterie zkontrolujte, jestli je telefon vypnutý.

1. **Vyjměte baterii.**

   Stiskněte a podržte uvolňovací tlačítko baterie a poté sejměte kryt baterie. Otočte telefon tak, jak je uvedeno na obrázku, zdvihněte baterii prsty a poté ji vytáhněte.

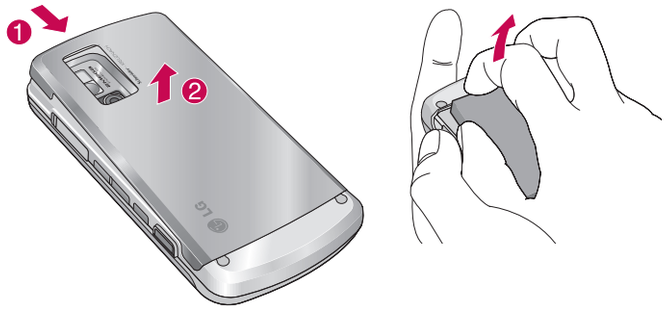

Poznámka

- Vyjmutí baterie ze zapnutého telefonu může způsobit poškození telefonu.

2. **Instalace SIM karty.**

   Vložte a zasuňte SIM kartu do držáku SIM karty. Dejte pozor na to, aby byla SIM karta vložena správnou stranou, tedy zlatou kontaktní ploškou směrem dolů. Chcete-li SIM kartu vyjmout, stiskněte ji lehce a vytáhněte opačným směrem.

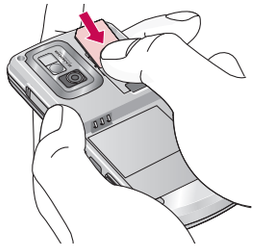

Vložení SIM karty

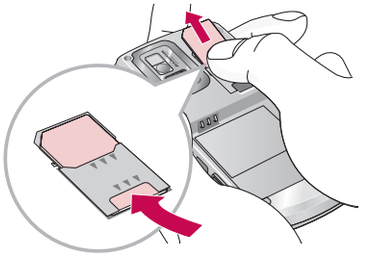

Vyjmutí SIM karty

Poznámka

- Kovový kontakt SIM karty se snadno poškrábe a poškodí. Se SIM kartou je proto nutné zacházet s mimořádnou opatrností. Dodržujte návod k SIM kartě.

UPOZORNĚNÍ!

- *Nevyměňujte ani nevyndávejte SIM kartu ze zapnutého telefonu, protože by mohlo dojít ke ztrátě dat ze SIM karty nebo k jejímu poškození.*

3. **Instalace baterie.**

Zasuňte baterii do přihrádky na baterie tak, aby se navzájem dotkly kovové kontakty uprostřed telefonu.

Zatlačte na vrchní část baterie tak, aby zapadla na své místo. Kryt baterie nasaďte na telefon tak, jak vidíte na obrázku.

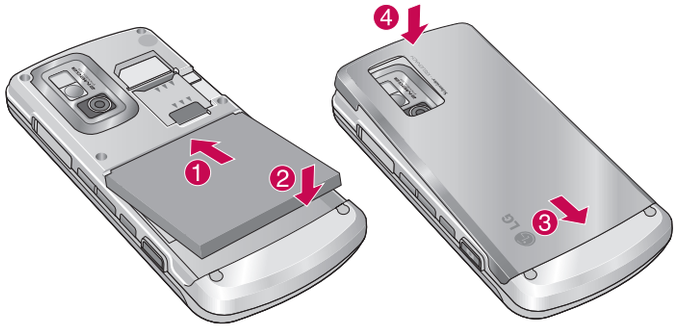

Nabíjení baterie

Před připojením cestovního adaptéru k telefonu musíte nejdříve vložit baterii.

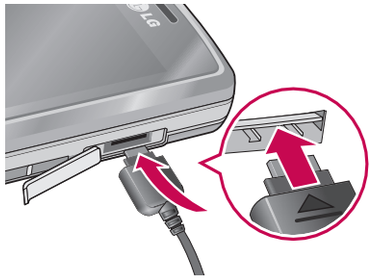

1. Před prvním použitím telefonu se ujistěte, zda je baterie plně nabita.
2. Se šipkou směřující dolů, jak je znázorněno na obrázku, zatlačte zástrčku adaptéru do zásuvky na dolní straně telefonu. Podle cvaknutí zjistíte, že je konektor ve správné poloze.
3. Druhý konec cestovního adaptéru zapojte do elektrické zásuvky. Použijte pouze nabíječku, která se dodává v krabici s přístrojem.
4. Nabití baterie poznáte podle toho, že se pohyblivé proužky zastaví.

VÝSTRAHA!

- *Pokud je baterie zcela vybitá, objeví se ikona nabíjení na displeji až přibližně 1-1,5 minuty po připojení cestovního adaptéru.*
- *Konektor nezasunujte násilím, aby nedošlo k poškození telefonu nebo nabíječe.*
- *Nabíječku baterií vložte kolmo do zásuvky na stěně.*
- *Pokud používáte nabíječku v jiné zemi, použijte příslušnou redukci.*
- *Při nabíjení nevyjímejte baterii ani SIM-kartu z telefonu.*

VAROVÁNÍ!

- *Protože by při bouřkách s elektrickými výboji mohlo dojít k zasažení elektrickým proudem nebo k požáru, je třeba v těchto případech napájecí kabel a nabíječku vytáhnout ze zásuvky.*
- *Dbejte na to, aby se do kontaktu s baterií nedostaly předměty s ostrými hranami, např. zvířecí zuby, nehty apod. Důvodem je nebezpečí vzniku požáru.*

Odpojení nabíječky

Telefon od nabíječky odpojte zatažením za konektor, nikoliv za kabel.

Vložení paměťové karty

Vložte paměťovou kartu do slotu tak, aby byla plně zasunuta, jak zobrazuje obrázek níže:

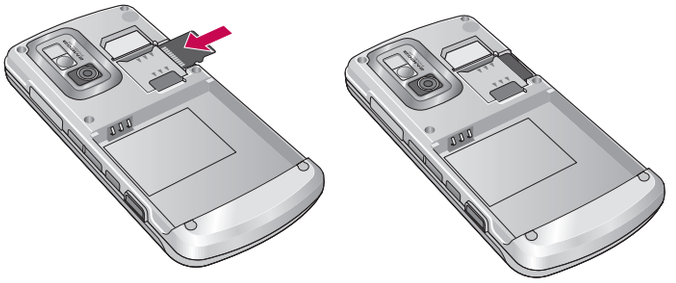

Vyjmutí paměťové karty

Opatrně vyjměte paměťovou kartu z patice tak, jak je uvedeno na následujícím obrázku.

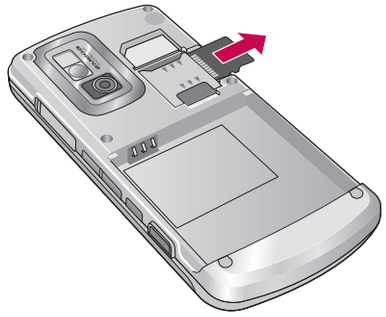

Poznámka

- Používejte pouze paměťové karty schválené výrobcem. Některé paměťové karty nemusí být s tímto přístrojem kompatibilní.

VAROVÁNÍ!

Nevyměňujte ani nevyndávejte paměťovou kartu ze zapnutého telefonu, protože by mohlo dojít ke ztrátě dat z paměťové karty nebo k jejímu poškození.

Obecné funkce

Volání a přijímání hovorů

Volání

1. Telefon musí být zapnutý.
2. Zadejte telefonní číslo včetně místní předvolby.
   Chcete-li upravit číslo na obrazovce displeje, jednoduše stiskněte tlačítko C. Každým stiskem se smaže jedna číslice.
   - Delším podržením tlačítka Smazat C se celé číslo smaže najednou.
3. Vybrané číslo zavoláte stisknutím tlačítka Zvednout.
4. Ukončení hovoru se provádí tlačítkem ukončení hovoru.

Volání ze seznamu výpisu volání

1. V pohotovostním režimu stiskněte tlačítko Zvednout a zobrazí se čísla posledních přijatých, volaných a zmeškaných hovorů.
2. Navigačním tlačítkem nahoru/dolů vyberte požadované číslo.
3. Pro volání čísla stiskněte.

Mezinárodní volání

1. Podržte stisknuté tlačítko mezinárodní předvolby 0 +. Znak '+' automaticky vybere mezinárodní přístupový kód.
2. Zadejte předvolbu země, místní předvolbu a telefonní číslo.
3. Pro volání čísla stiskněte.

Ukončení hovoru

Po skončení hovoru, stiskněte tlačítko ukončení hovoru .

Volání ze seznamu kontaktů

Jména a telefonní čísla, která často vytáčíte, můžete uložit na kartu SIM nebo do paměti telefonu jako seznam kontaktů.

Číslo můžete jednoduše vytočit vyhledáním jména v seznamu kontaktů.

Nastavení hlasitosti

Pokud si během hovoru chcete nastavit hlasitost sluchátka, použijte postranní tlačítka.

V nečinném režimu můžete upravit hlasitost kláves pomocí postranních tlačítek.

Přijímání hovoru

Při přijímání hovoru začne telefon zvonit a na obrazovce se objeví blikající ikonka telefonu. Pokud lze volajícího identifikovat, zobrazí se jeho telefonní číslo (nebo jméno, pokud je máte uloženo v telefonním seznamu).

1. Chcete-li příchozí hovor přijmout, vysuňte klávesnici telefonu. Pokud máte přijímání hovorů nastaveno na Libovolná klávesa (Menu 9.5.2), přijmete hovor libovolným tlačítkem, kromě tlačítka ukončení hovoru nebo pravého kontextového tlačítka.
2. Chcete-li hovor ukončit, zasuňte klávesnici telefonu nebo stiskněte tlačítko .

Poznámka

- Hovor můžete přijmout i při práci se seznamem kontaktů nebo jinými nabídkami. Je-li telefon připojen prostřednictvím USB kabelu k počítači, budou příchozí hovory odmítnuty. Po odpojení telefonu od počítače se však zobrazí okénko se Zmeškanými hovory.

Síla signálu

Sílu signálu lze zjistit na indikátoru signálu ( ) na LCD obrazovce telefonu. Síla signálu může být různá, a to především uvnitř budov. Příjem bývá lepší u okna.

Psaní

Alfanumerické znaky lze zadávat klávesnicí telefonu. Text musíte zadávat například při ukládání jmen do adresáře, při psaní zpráv nebo vytváření položek plánovacího kalendáře. Telefon umožňuje následující způsoby psaní textu:

Poznámka

- Některá pole umožňují pouze jeden režim zadávání textu (např. telefonní číslo v adresáři).

Režim T9

V tomto režimu vám stačí na napsání jednoho písmene jediné stisknutí. Každé tlačítko na klávesnici má přiděleno několik písmen. V režimu T9 se vámi stisknutá tlačítka automaticky porovnávají s

vestavěným slovníkem a zjišťuje se, jaké slovo máte v úmyslu napsat. Díky tomu potřebujete při psaní mnohem méně stisknutí než v tradičním režimu ABC.

Režim ABC

V tomto režimu se zadávají písmena tak, že tlačítko, na kterém je příslušné písmeno napsáno, stisknete 1x až 4x, dokud se toto písmeno nezobrazí.

Režim 123 (číselný režim)

V tomto režimu se zadávají čísla jedním stisknutím jedné číslice. Pokud se nacházíte v poli pro psaní textu a chcete přepnout na režim 123, stiskněte tlačítko # , dokud se nezobrazí režim 123.

Režim symbolů

Tento režim vám umožňuje zadávat zvláštní znaky.

Změna režimu pro psaní

1. Pokud se nacházíte v poli umožňujícím zadávání znaků, uvidíte v pravém horním rohu displeje indikátor režimu zadávání textu.
2. Pokud chcete změnit režim, stiskněte # . Dojde k přepnutí mezi dostupnými režimy.

Použití režimu T9

Prediktivní režim pro psaní textu T9 umožňuje snadné psaní slov s minimálním počtem stisknutých tlačítek. Jakmile napíšete znak, začne na základě vestavěného slovníku telefon zobrazovat znaky, o kterých předpokládá, že je chcete napsat.

S tím, jak přibývají další písmena, mění se i psané slovo tak, aby odpovídalo nejpravděpodobnějšímu slovu ze slovníku.

Poznámka

- Zvolit jiný jazyk T9 můžete pomocí možností menu nebo můžete stisknout a podržet tlačítko * . Výchozím nastavením T9 je vypnutí tohoto režimu.

1. Jakmile budete v prediktivním režimu pro psaní textu T9, začněte psát slovo stisknutím tlačítek 2 abc až 9 wxyz. Na jedno písmeno stiskněte jedno tlačítko.

- V průběhu psaní se slovo mění. Nevšímejte si zobrazovaných návrhů a slovo dopište.
- Pokud slovo dopíšete, a ono je stále ještě nesprávné, jedním nebo opakovaným stisknutím navigačního tlačítka nahoru/dolů můžete procházet ostatní nabízená slova.

Příklad: Stiskněte 4 ghi 6 mno 6 mno 3 def a napište slovo Home.

- Pokud v nabízeném seznamu požadované slovo chybí, můžete je přidat použitím režimu ABC.

2. Dříve než začnete upravovat nebo mazat zadané znaky, napište celé slovo.
3. Každé slovo ukončete mezerou, stisknutím tlačítka 0 ± nebo . Písmena můžete smazat stisknutím tlačítka C. Stisknutím a podržením tlačítka C můžete plynule mazat písmena.

Poznámka

- Pro opuštění režimu zadávání textu bez uložení stiskněte tlačítko ukončení hovoru. Telefon se vrátí na obrazovku režimu nečinnosti.

Použití režimu ABC

Text se zadává pomocí tlačítek 2 abc až 9 wxyz.

1. Stiskněte tlačítko s příslušným písmenem:

- Pro první písmeno jednou
- Pro druhé písmeno dvakrát
- atd.

2. Chcete-li vložit mezeru, stiskněte tlačítko 0 ± jednou. Mazání písmen se provádí tlačítkem C. Stiskem a podržením tlačítka C vymažete postupně celou obrazovku.

Poznámka

- V následující tabulce jsou další informace o znacích zadávaných alfanumerickými tlačítky.

Tlačítko	Znaky v pořadí zobrazení	
	Velká písmena	Malá písmena
1	.,?!'"1-()@/:_	.,?!'"1-()@/:_
2 abc	ABCÁČÄĄĆ2	abcáčäąć2
3 def	DEFĎÉĚĘ3	defďéěę3
4 ghi	GHIÍ4	ghií4
5 jkl	JKLĹĽŁ5	jklíľł5
6 mno	MNOŇÓÔŃÖ6	mnoňóôńö6
7 pqrs	PQRSŘŠŔŚ7	pqrsřšŕśß7
8 tuv	TUVŤÚŮÜ8	tuvťúůü8
9 wxyz	WXYZ9ÝŹŽŻ	wxyz9ýźžż
0 ±	Mezerník 0 (Dlouhé stisknutí)	Mezerník 0 (Dlouhé stisknutí)

Práce v (číselném) režimu 123

Režim 123 umožňuje zadávání čísel v textové zprávě (například telefonní číslo). Stiskněte tlačítka s příslušnými číslicemi a pak ručně přepněte do odpovídajícího režimu pro zadávání textu.

Práce v režimu symbolů

Režim symbolů umožňuje zadávat různé symboly nebo zvláštní znaky.

Chcete-li zadat symbol, stiskněte tlačítko . Pomocí navigačních kláves vyberte požadovaný symbol a stiskněte tlačítko [OK].

Výběr funkcí a možností

Telefon nabízí celou řadu funkcí, které si můžete nastavit podle svých potřeb. Tyto funkce jsou uspořádány do nabídek a podnabídek a jsou přístupné prostřednictvím kontextových tlačítek znázorněných symbolem a .

V jednotlivých menu a podmenu si můžete zobrazit a měnit nastavení určité funkce.

Funkce kontextových tlačítek se liší v závislosti na daném kontextu; popisek na dolním okraji displeje nad každým kontextovým tlačítkem označuje jeho současnou funkci.

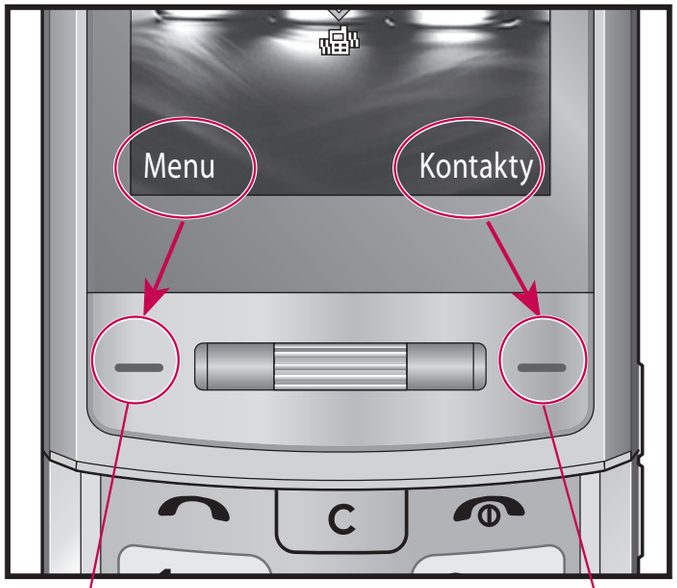

Stisknutím levého kontextového tlačítka se otevírá dostupné menu.

Stisknutím pravého kontextového tlačítka se otevírají dostupné Kontakty.

Menu během hovoru

Telefon poskytuje celou řadu ovládacích funkcí, které lze během hovoru využít. Pokud chcete tyto funkce používat v průběhu hovoru, stiskněte levé kontextové tlačítko [Možnosti].

Během hovoru

Při hovoru je na obrazovce zobrazeno jiné než standardní hlavní menu v pohotovostním režimu. Jeho volby zde nyní popíšeme.

Druhé volání (závisí na síti)

Chcete-li uskutečnit druhý hovor, můžete v adresáři najít číslo, které chcete vytočit

Přepínání mezi dvěma hovory

Pokud chcete přepnout mezi hovory, stiskněte tlačítko nebo levé kontextové tlačítko a poté vyberte položku Přepnout hovor.

Přijmutí příchozího hovoru

Když přístroj vyzvání a vy chcete příchozí hovor přijmout, stiskněte tlačítko . Přístroj vás může během volání upozornit na příchozí hovor. Ve sluchátku zazní tón a na displeji se zobrazí upozornění na další čekající hovor.

Tuto funkci, která se nazývá Další hovor na lince, lze použít pouze za předpokladu, že to umožňuje vaše síť. Podrobné informace o zapínání a vypínání této funkce jsou uvedeny v kapitole Další hovor na lince (Menu 9.5.4).

Je-li funkce Další hovor na lince aktivována, můžete první hovor přidržet a přijmout druhý. To provedete pomocí levého kontextového tlačítka a potom výběrem .

Odmítnutí příchozího hovoru

Příchozí hovor můžete odmítnout, aniž byste ho přijali; stačí stisknout tlačítko .

V průběhu hovoru můžete odmítnout příchozí hovor stisknutím tlačítka .

Ztlumení mikrofonu

Během hovoru lze ztlumit mikrofon, a sice stisknutím tlačítka [Menu] a pak výběrem Ztlumit. Ztlumení telefonu lze zrušit výběrem Neztlumeno. Po ztlumení mikrofonu vás volající nemůže slyšet, vy však jeho ano.

Zapínání tónů DTMF během hovoru

Tóny DTMF můžete v průběhu hovoru (například při používání telefonu s automatickou ústřednou) používat stisknutím tlačítka [Možnosti] následovaném zapnutím možnosti Odeslat DTMF. Vybráním možnosti DTMF vypnuto tóny DTMF vypnete. Tóny DTMF jsou obvykle zapnuty.

Skupinové neboli konferenční hovory

Skupinová neboli konferenční služba vám dává možnost hovořit s více než jedním účastníkem, ovšem za předpokladu, že tuto funkci podporuje váš operátor. Konferenční hovor lze sestavit pouze v případě, když máte jeden aktivní hovor a jeden přidržený a oba hovory jste již přijali. Jakmile je vytvořen jeden konferenční hovor, může osoba, která konferenční hovor založila, další hovory přidávat, odpojovat nebo oddělovat (to znamená, odpojit jednu osobu od konferenčního hovoru a hovořit s ní dále soukromě). Tyto možnosti jsou k dispozici v nabídce Během hovoru. Konferenčního hovoru se může zúčastnit maximálně pět účastníků. Jakmile zahájíte konferenční hovor, řídíte jej pouze vy, a pouze vy do něj můžete přidávat další účastníky.

Druhé volání

Během jednoho hovoru můžete zahájit druhý hovor. Zadejte druhé telefonní číslo a stiskněte tlačítko .

Až se spojí druhý hovor, první hovor se automaticky přidrží. Mezi hovory lze přepínat stisknutím tlačítka .

Zřízení konferenčního hovoru

Konferenční hovor zahájíte tak, že přidržíte jeden hovor a v průběhu aktivního hovoru stisknete levé kontextové tlačítko a v menu Konferenční hovor vyberete možnost Spojit.

Aktivování přidrženého konferenčního hovoru

Přidržený konferenční hovor spustíte stisknutím tlačítka . Nebo můžete také stisknout levé kontextové tlačítko [Možnosti] a vybrat možnost Spojit všechny/Přidržet všechny hovory. Ostatní přidržení uživatelé zůstanou ve spojení. Do režimu konferenčního hovoru se vrátíte stisknutím levého kontextového tlačítka [Možnosti], následovaného výběrem možnosti Konferenční hovor.

Přidávání hovorů do konferenčního hovoru

Chcete-li do probíhajícího konferenčního hovoru přidat další hovor, stiskněte levé kontextové tlačítko a potom vyberte Konferenční hovor/Připojit se ke všem.

Soukromý hovor během konferenčního hovoru

Chcete-li s jedním účastníkem konferenčního hovoru mluvit soukromě, zobrazte jeho číslo na obrazovce a potom stiskněte levé kontextové tlačítko. Výběrem Konferenční hovor/Soukromý přidržíte všechny ostatní účastníky.

Ukončení konferenčního hovoru

Stisknutím tlačítka [Konec] je možné odpojit aktuálně zobrazeného účastníka z konferenčního hovoru.

Strom nabídek

Menu lze v tomto telefonu zobrazit dvěma způsoby. Buď jako seznam položek nebo jako mřížku. Uvědomte si však, že čísla možností nabídek jsou v obou případech jiná.

Výchozí nastavení telefonu zobrazuje menu jako seznam položek. Proto jsou čísla nabídek v této příručce uvedena podle tohoto nastavení.

Následující ilustrace zobrazuje strukturu dostupných nabídek a ukazuje:

- Čísla, přiřazená jednotlivým položkám nabídky.
- Stránku, na které naleznete popis dané funkce.

Do požadovaného menu se dostanete stisknutím levého kontextového tlačítka [Menu], navigačních tlačítek a tlačítka [OK]. Můžete také použít zkratku, a to stisknutím číselného tlačítka odpovídajícího požadované položce menu, po stisknutí levého kontextového tlačítka [Menu].

1. Profily
1.1 Normální
1.2 Tichý
1.3 Pouze vibrace
1.4 Hlasitě
1.5 Sluchátka

2. web'n'walk
2.1 web'n'walk

3. Multimédia
3.1 Přehrávač MP3
3.2 Fotoaparát
3.3 Video kamera
3.4 Záznam hlasu

4. Registr hovorů
4.1 Všechny hovory
4.2 Zmeškané hovory
4.3 Volané hovory
4.4 Přijaté hovory
4.5 Trvání hovoru
4.6 Cena hovoru
4.7 Informace o datech

5. Zprávy
5.1 Nová zpráva
5.2 Přijaté
5.3 E-mailová schránka
5.4 Koncepty
5.5 Odesílané
5.6 Odeslané
5.7 Hlasová schránka
5.8 Inform. zpráva
5.9 Šablony
5.0 Nastavení

6. Kontakty
6.1 Hledat
6.2 Nový kontakt
6.3 Rychlé volby
6.4 Skupiny
6.5 Kopírovat vše
6.6 Smazat vše
6.7 Nastavení
6.8 Informace

Strom nabídek

7. Moje složka
7.1 Obrázky
7.2 Zvuky
7.3 Videa
7.4 Dokumenty
7.5 Další
7.6 Hry a aplikace
7.7 Externí paměť

8. Nástroje
8.1 Budík
8.2 Kalendář
8.3 t-zones
8.4 Kalkulačka
8.5 Poznámky
8.6 Stopky
8.7 Převodník jednotek
8.8 Světový čas
8.9 Služby SIM

9. Nastavení
9.1 Datum a čas
9.2 Jazyky
9.3 Displej
9.4 Připojení
9.5 Volat
9.6 Zabezpečení
9.7 Letový režim
9.8 Snížená spotřeba
9.9 Obnovit výchozí
9.0 Stav paměti

Profily

V profilech si můžete nastavit a přizpůsobit tóny telefonu pro různé události, prostředí nebo skupiny volajících. K dispozici je pět předvolených profilů: **Normální**, **Tichý**, **Pouze vibrace**, **Hlasitě** a profil **Sluchátka**. Všechny profily si lze upravit podle vlastních představ. Stiskněte levé kontextové tlačítko [Menu] a s pomocí navigačních tlačítek nahoru/dolů vyberte **Profily**.

Aktivovat (Menu 1.x.1)

1. brazí se seznam profilů.
2. V seznamu Profilů zvýrazněte profil, který chcete aktivovat, a stiskněte levé kontextové tlačítko [Vybrat] nebo tlačítko OK.
3. Potom vyberte Aktivovat.

Přizpůsobit (Menu 1.x.2)

Ze seznamu profilů vyhledejte požadovaný Profil. Po stisknutí levého kontextového tlačítka nebo tlačítka OK, vyberte Přizpůsobit.

Otevřou se možnosti nastavení profilů. Nastavte možnosti podle potřeby.

- **Typ ohlášení příchozího hovoru:** Nastavte typ ohlášení příchozích hovorů.
- **Vyzváněcí tóny:** Vyberte ze seznamu požadovaný Vyzváněcí tón.
- **Hlasitost vyzvánění:** Nastavte hlasitost Vyzváněcího tónu.
- **Typ upozornění na zprávu:** Nastavte typ ohlášení zpráv.
- **Tóny zpráv:** Vyberte typ ohlášení zpráv.

- **Tóny kláves:** Zvolte požadovaný tón klávesnice.
- **Hlasitost kláves:** Nastavte hlasitost tónu klávesnice.
- **Tón Vysunutí:** Umožňuje nastavení tónu přepnutí pro úpravu prostředí.
- **Hlas. zv. efektu:** Nastavte hlasitost zvukových efektů.
- **Hlasitost zap/vyp:** Nastavte hlasitost vyzváněcího tónu při zapínání a vypínání telefonu.
- **Automatická odpověď:** Tato funkce se aktivuje pouze v případě, že je telefon připojen k sadě handsfree.
  - **Vypnuto:** Telefon nebude automaticky přijímat hovory.
  - **Po 5 s:** Po uplynutí 5 sekund přijme telefon hovor automaticky.
  - **Po 10 s:** Po uplynutí 10 sekund přijme telefon hovor automaticky.

Poznámka

- Nelze přejmenovat všechny profily.

Můžete spustit mobilní internetový prohlížeč a přejít na domovskou stránku poskytovatele mobilních internetových služeb T-Mobile.

Další informace vám poskytne váš poskytovatel služeb.

Poznámka

- Pamatujte si, že používání služeb online může být dále zpoplatněno.
- Uživatelská paměť by měla mít kapacitu alespoň 32 kB, aby bylo možné spustit mobilní internetový prohlížeč a přejít na domovskou stránku. Pokud kapacita uživatelské paměti kvůli hudebním nebo obrazovým souborům nedosahuje 32 kB, nelze spustit mobilní internetový prohlížeč. V takovém případě uvolněte místo odstraněním starých hudebních nebo obrazových souborů či souborů videa.
- Při spuštění mobilního internetového prohlížeče je souběžné zpracování úloh omezeno na správu paměti. Proto nelze použít tlačítko .

Multimédia

Váš telefon nabízí řadu multimediálních funkcí, jako je například fotoaparát, hlasový záznamník a přehrávač MP3, určených pro zábavu i práci.

Poznámka

- Pokud jsou baterie téměř vybité, není možné používat funkce fotoaparátu a multimédií.
- Při používání multimediálních funkcí se ukazatel stavu baterie může měnit.

Přehrávač MP3 Menu 3.1

Telefon KE970 má integrovaný MP3 přehrávač. Můžete poslouchat hudební MP3 soubory uložené v paměti telefonu prostřednictvím kompatibilních sluchátek nebo interního reproduktoru.

Poznámka

- Vzhledem k malým rozměrům reproduktoru může v některých případech docházet ke zkreslení zvuku, zvlášť při nastavení maximální hlasitosti a v případech, kde zvuková stopa obsahuje příliš mnoho basů. Abyste si tedy mohli vychutnat vaše nahrávky v nejvyšší zvukové kvalitě, doporučujeme používat stereofonní sluchátka.

Hudební přehrávač podporuje:

- formáty MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III se vzorkovací frekvencí od 8 kHz do 48 kHz a stereo bitovým tokem do 320 kb/s.
- **AAC:** formáty ADIF, ADTS (vzorkovací frekvence od 8 kHz do 48 kHz)
- **AAC+:** V1: (bit rate 16`128 kb/s)
  V2: (bit rate 16`48 kb/s)
  (vzorkovací frekvence od 8 kHz do 48 kHz)

Poznámka

- Model KE970 nepodporuje proměnný bitový tok všech výše uvedených formátů souborů. Proto nelze změnit formát souboru z MP3 na ACC.

Pomocí zařízení Mass Storage můžete do telefonu přenést soubory ve formátu MP3 z kompatibilního počítače. Pokud připojíte telefon k počítači prostřednictvím kabelu USB, zobrazí se v Průzkumníku Windows jako vyměnitelný disk. Pokud používáte systém Windows 98 SE, budete muset nainstalovat ovladač zařízení Mass storage pro Windows 98 z disku CD-ROM.

Poznámka

- MP3 soubory kopírujte do složky Zvuky/Mp3. Pokud je zkopírujte do jiné složky, nemusíte MP3 soubory vidět.
- Počítač by měl používat operační systémy Windows 98 SE, Windows 2000, Windows ME nebo Windows XP.

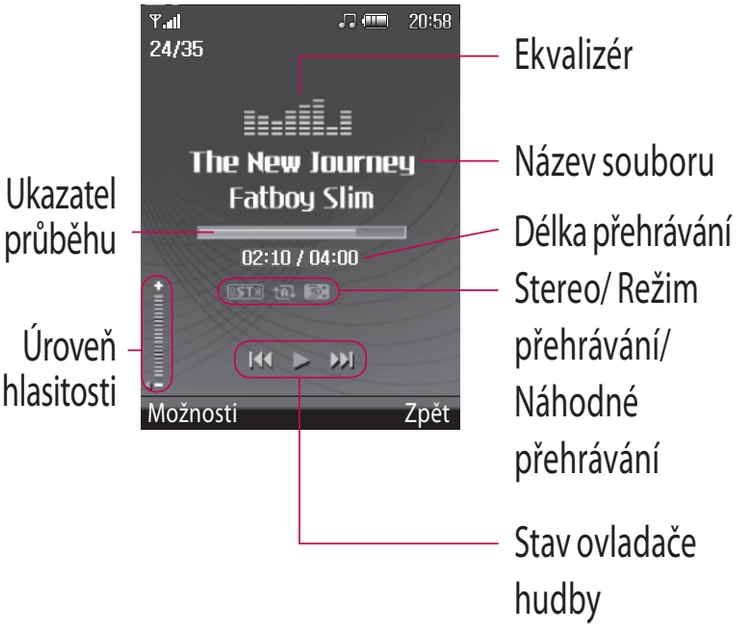

Opakovat	
A	Přehrát vše
tA	Opakovat vše
t1	Opakovat jednu

Poznámka

- Pokud se v seznamu pro přehrávání vyskytne neplatný soubor, zobrazí se chybové hlášení a systém se vrátí na předchozí obrazovku.

1. Stiskněte menu Multimédia a poté vyberte MP3 přehrávač.
2. Nebo si levým kontextovým tlačítkem [Možnosti] otevřete následující nabídku.

- **Pauza:** Přehrávání MP3 souboru můžete pozastavit.
- **Zobrazit seznam skladeb:** Můžete si vybrat jiný soubor ze seznamu MP3.
- **Nastavit jako vyzváněcí tón:** Aktuální hudbu přehrávaného MP3 souboru si můžete nastavit jako vyzváněcí tón.

- **Nastavení**
  - **Ekvalizér:** Tato volba pomáhá přizpůsobovat přehrávání hudby různým prostředím.
  - **Režim přehrávání:** Tato volba umožňuje nastavit režim přehrávání: Opakovat jednu, Opakovat vše, Přehrát vše.
  - **Nastavit náhodné přehrávání:** Pokud nastavíte Zapnuto, můžete poslouchat hudbu v náhodném pořadí.
  - **Vizuální efekty:** Můžete vybírat z nabídky vizuálních efektů: Pravý ekvalizér, Animace ekvalizéru. Tato volba vám umožňuje měnit pozadí hlavního LCD displeje při přehrávání souboru MP3.

Poznámka

- Autorská práva k hudebním souborům mohou být chráněna mezinárodními úmluvami a národní legislativou v oblasti autorského práva. Proto může být nezbytné získat svolení nebo oprávnění k šíření nebo kopírování hudby. V některých zemích národní legislativa zakazuje kopírování materiálu chráněného autorským právem pro osobní potřebu. Před stažením nebo zkopírováním souboru si nejprve zjistěte informace o národní legislativě příslušné země, která se vztahuje na použití takového materiálu.

Fotoaparát

Menu 3.2

Pomocí modulu fotoaparátu, vestavěného ve vašem telefonu, můžete snímat obrázky a zaznamenávat video. Fotografie můžete poté posílat jiným lidem nebo si je nastavit jako tapetu.

Poznámka

- Při používání fotoaparátu se zvyšuje odběr energie z baterie. Pokud se na tapetě objeví tato ikona , označující nízký stav baterie, bude nutné baterii před dalším používáním nabít.

Při fotografování natočte telefon tak, jak je uvedeno na následujícím obrázku.

1/2 Zvětšení/Zmenšení

3 Fotoaparát

Zvuk uzávěrky a nahrávání videa bude vynechán i při nastavování režimu, včetně režimu stylů .

• Zhotovení snímku

Stiskněte a podržte tlačítko fotoaparátu . Fotoaparát je připraven k použití a můžete tedy natočit obrazovku do horizontální polohy.

- Ostré snímky pořídíte tak, že stisknete tlačítko fotoaparátu a zároveň podržíte fotoaparát bez jakéhokoliv pohybu.
- Příslušně upravte vzdálenost od objektu, který chcete fotografovat (více než 50 cm).
- S fotoaparátem zacházejte opatrně, protože tento přístroj je náchylný k poškozenív důsledku nárazu. Při čištění čočky fotoaparátu používejte měkkou tkaninu.
- Fotoaparát nerozebírejte, ani jej jinak neupravujte - mohlo by dojít k požáru nebo k závadě.
- Při fotografování je zapnuta funkce automatického zaostřování. Zaostříte stisknutím tlačítka fotoaparátu do poloviční polohy.

1. Stiskněte tlačítko v pohotovostním režimu.
2. Zaostřete na fotografovaný předmět a stiskněte tlačítko .
3. Pokud chcete obrázek uložit, stiskněte tlačítko .

Poznámka

▶ Pomocí ↑ ↓ můžete upravit jas.

- **Autofokus [ ]:** Umožňuje nastavit režim fotografování Makro, Automatické zaostření Zapnuto a Vypnuto.
- **Rozlišení [ ]:** Umožňuje nastavit velikost obrázku. (1600x1200), (1280x960) (640x480) nebo (320x240). Vícenásobné snímkování je možné pouze při rozlišení (320x240) a (640x480) pixelů.
- **Kvalita [ ]:** Umožňuje nastavit kvalitu snímku jako Normální, Střední a Vysoká kvalita.
- **Blesk [ ]:** Umožňuje zapnutí blesku při fotografování na tmavých místech.
- **Samospoušť [ ]:** možňuje vám zvolit zpoždění spouště (Vypnuto, 3 sekund, 5 sekund,10 sekund). Telefon vyfotografuje snímek po uplynutí nastaveného času.
- **Uložit do [ ]:** Po pořízení snímku můžete určit místo pro uložení. (Externí/Telefon)
- **Více snímků [ ]:** Umožňuje pořizovat více snímků po sobě.
- **Metering [ ]:** Stanoví osvětlení podle malé části fotografovaného předmětu. Můžete si vybrat Na střed nebo Sloučený které by měl zajistit správnou expozici.
- **Barevný efekt [ ]:** K dispozici jsou 4 nastavení. (Negativ/Mono/Sépie/Barva)
- **Vyvážení bílé [ ]:** Umožňuje změnit nastavení podle prostředí. (Režim Noc/Zářivka/Zataženo/Jasno/Denní světlo/Automaticky)
- **Tón spouště [ ]:** Můžete nastavit zvuk doprovázející pořízení záběru.
- **Původní nastavení [ ]:** Umožňuje obnovit nastavení.

Video kamera

Menu 3.3

1. Zvolte nabídku Videokamera.
2. Menu nastavení videokamery je stejné jako menu nastavení fotoaparátu s výjimkou následujících položek:

- **Režim [ ]:** Umožňuje nastavení posílání video souborů pomocí MMS nebo Normální.
- **Rozlišení [ ]:** Můžete si zvolit mezi následujícími rozlišeními: 128x96, 176x144.

Záznam hlasu

Menu 3.4

Můžete si nahrát hlasovou poznámku. K dispozici jsou následující menu [Možnosti].

- **Uložení**

  Můžete si vybrat mezi telefonem a externí pamětí.

- **Režim nahrávání**

  Můžete si vybrat režim Normální zajišťující neomezené nahrávání nebo režim MMS, který umožňuje nahrávání do 30 sekund.

Nahrát

1. Stisknutím OK zahájíte nahrávání. Po spuštění nahrávání se zobrazí hlášení 'Nahrávání...' a zbývající čas.
2. Pokud chcete přerušit nebo obnovit nahrávání, stiskněte levé kontextové tlačítko nebo tlačítko OK.
3. Pokud chcete ukončit nahrávání, stiskněte pravé kontextové tlačítko [Zastavit].

Album

Zobrazí složku Zvuky, ve které se nacházejí všechny zvukové soubory uložené do paměti.

Registr hovorů

Záznamy zmeškaných, přijatých a volaných hovorů si můžete prohlédnout za předpokladu, že síť v oblasti služby podporuje identifikaci volající linky CLI (Calling Line Identification).

Číslo a jméno (je-li k dispozici) se zobrazují zároveň s datem a časem, kdy došlo k volání. Můžete si také prohlédnout dobu trvání hovorů.

Všechny hovory

Menu 4.1

Můžete si prohlédnout seznam všech odchozích i příchozích hovorů.

Zmeškané hovory

Menu 4.2

Tato funkce umožňuje zobrazit 50 posledních nepřijatých hovorů. Můžete rovněž:

- zobrazit číslo, je-li k dispozici, nebo je uložit do telefonního seznamu
- u čísla zadat nové jméno a oba údaje uložit do telefonního seznamu
- Poslat zprávu na toto číslo.
- Vymazat hovor ze seznamu.

Volané hovory Menu 4.3

Tato funkce umožňuje zobrazit 50 posledních odchozích hovorů (uskutečněných i neuskutečněných). Můžete rovněž:

- zobrazit číslo, je-li k dispozici, a zavolat jej, nebo je uložit do telefonního seznamu
- u čísla zadat nové jméno a oba údaje uložit do telefonního seznamu
- poslat zprávu na toto číslo.
- vymazat hovor ze seznamu.

Přijaté hovory Menu 4.4

Tato funkce umožňuje zobrazit 50 posledních přijatých hovorů. Můžete rovněž:

- zobrazit číslo, je-li k dispozici, a zavolat je, nebo je uložit do telefonního seznamu
- u čísla zadat nové jméno a oba údaje uložit do telefonního seznamu
- Poslat zprávu na toto číslo.
- Vymazat hovor ze seznamu.

Trvání hovoru

Menu 4.5

Zde je možné zobrazit dobu trvání příchozích a odchozích hovorů. Můžete také vynulovat dobu trvání hovorů.

K dispozici jsou následující časovače:

- **Poslední hovor:** Délka posledního hovoru.
- **Volané hovory:** Délka odchozích hovorů.
- **Přijaté hovory:** Délka příchozích hovorů.
- **Všechny hovory:** Celková délka odchozích i příchozích hovorů od posledního vynulování časovače.

Cena hovoru

Menu 4.6

Tato funkce vám umožňuje zjistit cenu účtovanou za poslední hovor, všechny hovory a cenu za zbývající hovory a umožňuje i cenu vynulovat. K vynulování ovšem musíte zadat kód PIN2.

Informace o datech

Menu 4.7

S pomocí funkce Informace o GPRS si můžete zjistit množství dat přenesených po síti. Kromě toho si můžete prohlédnout dobu připojení k internetu.

Nová zpráva Menu 5.1

Tato nabídka obsahuje funkce vztahující se ke zprávám SMS (Short Message Service), MMS (Multimedia Message Service), e-mailu, hlasovým zprávám a servisním zprávám sítě.

Textová (Menu 5.1.1)

Zde můžete napsat nebo upravit textovou zprávu.

1. Stisknutím levého kontextového tlačítka [OK] otevřete nabídku Nové zprávy.
2. Pokud chcete psát novou zprávu, vyberte položku Psát textovou zprávu.
3. Pro usnadnění zadávání textu použijte slovník T9.
4. Stiskněte položku [Možnosti] a připojte následující položky;

Možnosti

- **Odeslat:** Odešle textovou zprávu.

1. Zadejte číslo příjemce.
2. Chcete-li přidat více příjemců, stiskněte klávesu ↓.
3. Můžete přidat telefonní čísla z adresáře.
4. Stiskněte tlačítko [Možnost] a po zadání čísla stiskněte Odeslat.

- **Vložit**

  - **Symbol:** Můžete připojit zvláštní znaky.
  - **Obrázek:** Můžete vložit výchozí grafiky nebo grafiky ze složky Moje složka, které jsou k dispozici pro krátké zprávy.
  - **Zvuk:** Můžete vložit zvuky, které jsou k dispozici pro krátké zprávy.

- **Výchozí obrázky:** Můžete vložit uložené animace.
- **Výchozí zvuky:** Můžete vložit uložené zvuky.
- **Textové šablony:** Můžete si vybrat šablonu, která je již v telefonu nastavena.
- **Kontakt:** Můžete přidat telefonní čísla nebo e-mailové adresy z adresáře.
- **Moje vizitka:** Můžete ke zprávě přidat svou vizitku.

- **Uložit do konceptů:** Uloží zprávu do složky Koncepty.
- **Jazyky T9:** Vyberte požadovaný jazyk pro režim zadávání textu T9. Výběrem T9 vypnuto [T9 vyp.] můžete také režim pro zadávání T9 deaktivovat.
- **Nové slovo T9:** Nové slovo T9 vyberte tehdy, když chcete nové slovo přidat do slovníku.
- **Vymazat text:** Text můžete při psaní SMS také vymazat.
- **Konec:** Pokud stisknete v průběhu psaní zprávy tlačítko Exit, dojde k ukončení psaní zprávy a vy se vrátíte do menu Zpráva. Napsaná zpráva se neuloží.

Multimediální (Menu 5.1.2)

Můžete psát a upravovat multimediální zprávy, je ale nutné mít přehled o velikosti zprávy.

1. Stisknutím levého kontextového tlačítka [OK] otevřete nabídku Nová zpráva.
2. Pokud chcete psát novou zprávu, vyberte Multimediální.

3. Můžete vytvořit novou zprávu nebo zvolit jednu z hotových šablon pro multimediální zprávy.

Maximální povolená velikost souboru, který lze vložit do zprávy, MMS je 300 kb.

Možnosti

- **Odeslat:** Multimediální zprávy můžete posílat více příjemcům, můžete nastavit priority těchto zpráv a také můžete zajistit odeslání zprávy někdy později.
- **Vložit:** Můžete přidat Symbol, Obrázek, Video, Zvuk, Nový snímek, Textu šablony, Kontakt, Vizitka, Další.

Poznámka

- Všechny zprávy se automaticky uloží do složky odeslaných zpráv, a to i v případě, že se odeslání nepodaří.

- **Náhled:** Můžete si prohlédnout náhled multimediálních zpráv, které jste vytvořili.
- **Uložit:** Multimediální zprávy můžete uložit Do konceptů nebo Jako šablony.
- **Upravit předmět:** Umožňuje změnit vybranou multimediální zprávu.
- **Trvání snímku:** Můžete nastavit dobu trvání snímku v multimediální zprávě.
- **Jazyky T9:** Vyberte jazyk pro režim zadávání textu T9. Výběrem T9 vypnuto můžete také režim pro zadávání T9 deaktivovat.
- **Nové slovo T9:** Nové slovo T9 vyberte tehdy, když chcete nové slovo přidat do slovníku.
- **Konec:** Přesunete se zpět do menu Zprávy.

Poznámka

- Pokud při psaní multimediální zprávy vyberete obrázek o větší velikosti (například 200K), bude trvat nahrávání přibližně 10 sekund. V průběhu nahrávání navíc nemůžete aktivovat žádná tlačítka. Přibližně po 10 sekundách bude možné začít psát zprávu.

E-mail (Menu 5.1.3)

Abyste mohli posílat a přijímat e-maily, měli byste si vytvořit e-mailový účet.

1. Do polí Komu a Kopie můžete zadat až 20 e-mailových adres.

   Tip: Abyste zadali „ @“, stiskněte * vyberte „@“.

2. Pomocí klávesnice zadejte předmět zprávy a stiskněte OK.

3. Po zapsání e-mailové zprávy stiskněte levé kontextové tlačítko [Možnosti]. Můžete použít následující možnosti z nabídky.

- **Odeslat:** Můžete upravit seznam příjemců.
- **Vložit:** Můžete přidat Symbol, Šablonu textu, Kontakt a Podpis.
- **Přílohy:** Pomocí tohoto menu můžete připojit soubor.
- **Náhled:** Můžete si vytvořit náhled na psaný mail.

- **Uložit do konceptů:** Výběrem této možnosti zprávu uložíte do Konceptů.
- **Upravit předmět:** Můžete upravit předmět.
- **Jazyky T9:** Vyberte jazyk pro režim zadávání textu T9. Výběrem T9 vypnuto můžete také režim pro zadávání T9 deaktivovat.
- **Nové slovo T9:** Nové slovo T9 vyberte tehdy, když chcete nové slovo přidat do slovníku.
- **Vymazat text:** Text můžete při psaní zprávy také vymazat.
- **Konec:** Pokud stisknete v průběhu psaní zprávy toto tlačítko, dojde k ukončení psaní zprávy a vy se vrátíte do předchozí obrazovky. Napsaná zpráva se neuloží.

Poznámka

- Pro každý e-mailový účet můžete uložit až 40 zpráv (celkem 200 pro tři účty). Do složky přijatých zpráv můžete uložit maximálně 20 zpráv, do složek Koncepty a Odchozí zprávy po 5 zprávách a do složky Odeslané až 10 zpráv. V případě, že je složka Koncepty, Odchozí právy nebo Poslané plná, a zkusíte uložit novou zprávu do jedné z nich, první uložená zpráva se automaticky vymaže.
- Maximální velikost jedné odeslané zprávy s přílohami je 300 kb a maximální velikost jedné přijaté zprávy je 300 kb. V případě, že jste přijali zprávu s více než 5 přílohami, přijme se pouze 5 z nich. Některé přílohy se nemusí zobrazit správně.

Přijaté

Menu 5.2

Budete upozorněni na přijetí zprávy. Zprávy se ukládají do Přijatých zpráv.

Pokud se na displeji objeví „Není místo pro zprávu SIM“, musíte ze schránky přijatých zpráv vymazat pouze SIM zprávy. Když se zobrazí nápis „Není místo pro zprávu“, můžete uvolnit prostor jednotlivých úložišť smazáním zpráv, médií a aplikací.

* **Zpráva SIM**

Termínem zpráva SIM se označuje zpráva uložená výjimečně do paměti SIM. Tuto zprávu lze přesunout do paměti telefonu.

U multimediálních zpráv musíte počkat na jejich stažení a zpracování.

Pro prohlížení zpráv vyberte stiskem levého kontextového tlačítka jednu ze zpráv.

- **Zobrazit:** Můžete si prohlédnout přijaté zprávy.
- **Smazat:** Můžete aktuální zprávu smazat.
- **Odpovědět:** Můžete odpovědět na přijatou zprávu.
- **Předat dál:** Můžete předat vybranou zprávu dalšímu adresátovi.
- **Volat zpět:** Můžete zavolat zpět odesílateli.

- **Informace:** Můžete prohlížet informace o přijatých zprávách; adresu odesílatele, předmět (pouze u multimediálních zpráv), datum a čas zprávy, typ zprávy, velikost zprávy.
- **Hromadné mazání:** Po výběru zpráv určených k odstranění je můžete odstranit.
- **Smazat vše:** Můžete smazat všechny zprávy.

E-mailová schránka

Menu 5.3

Po otevření této nabídky se můžete buď připojit ke vzdálené schránce a vyzvednout si nové e-mailové zprávy, nebo si prohlédnout dříve vyzvednuté e-mailové zprávy bez přihlášení k e-mailovému serveru.

Můžete zkontrolovat uložené e-maily, koncepty, odchozí zprávy a odeslané e-maily. Do schránky přijatých zpráv lze uložit až 20 e-mailů.

(Odchozí pojme až 5, Koncepty pojme až 5, Odeslané pojme až 10)

Koncepty

Menu 5.4

S pomocí této nabídky si můžete připravit až pět multimediálních zpráv, které používáte nejčastěji. Toto menu zobrazuje seznam přednastavených multimediálních zpráv.

Máte k dispozici následující možnosti:

- **Zobrazit:** Můžete si prohlédnout multimediální zprávy.
- **Upravit:** Tato volba umožňuje upravit vybranou zprávu.
- **Smazat:** Smaže vybranou zprávu.
- **Informace:** Zobrazí informace o zprávě.
- **Hromadné mazání:** Po výběru zpráv určených k odstranění je můžete odstranit stisknutím tlačítka OK.
- **Smazat vše:** Vymaže všechny zprávy ve schránce.

Odesílané

Menu 5.5

Pomocí tohoto menu si můžete zobrazit zprávu, která má být odeslána nebo nebyla odeslána.

Po úspěšném odeslání bude daná zpráva přesunuta do složky Odeslané.

- **Zobrazit:** Můžete zobrazit zprávu.
- **Smazat:** Můžete odstranit zprávu.
- **Poslat znovu:** Vybranou zprávu můžete poslat znovu.
- **Upravit:** Vybranou zprávu můžete upravit.
- **Informace:** Můžete zkontrolovat informace o jednotlivých zprávách.

- **Hromadné mazání:** Můžete vybrat a odstranit několik zpráv.
- **Smazat vše:** Můžete smazat všechny zprávy v odeslaných zprávách.

Odeslané

Menu 5.6

Pomocí tohoto menu si můžete zobrazit zprávy, které již byly odeslány. Můžete zkontrolovat čas a obsah jednotlivých zpráv.

Hlasová schránka

Menu 5.7

Po zvolení této nabídky jednoduše stiskněte levé kontextové tlačítko [OK] a poslechněte si hlasové zprávy. Chcete-li si poslechnout hlasové zprávy, můžete také podržet tlačítko 1 v pohotovostním režimu.

Poznámka

- Když přijmete hlasovou zprávu, na telefonu se zobrazí ikona a uslyšíte upozornění. Podrobnosti o službě zjistěte u poskytovatele sítě, abyste telefon mohli správně nastavit.

Inform. zpráva

Menu 5.8

(v závislosti na síti a předplacené službě)

Zprávy informační služby jsou textové zprávy doručené sítí do GSM. Podávají všeobecné informace, např. zprávy o počasí nebo o silničním provozu, taxislužbě, lékárnách a cenách na burze.

Každý typ má své číslo, proto můžete kontaktovat poskytovatele, pokud zadáte příslušné číslo pro informace.

Jakmile zpráva info služby dorazí, zobrazí se oznámení, že došla nová zpráva nebo se zpráva info služby zobrazí rovnou.

Chcete-li znovu zobrazit zprávu, použijte následující postup:

Přečíst (Menu 5.8.1)

1. Po přijetí zprávy informační služby a výběru možnosti Přečíst se zpráva zobrazí na obrazovce. Další zprávy si můžete přečíst pomocí tlačítek , nebo [Další].
2. Zpráva zůstane zobrazena, dokud nevyberete jinou zprávu.

Témata (Menu 5.8.2)

(v závislosti na síti a předplacených službách)

- **Zobrazit seznam:** Můžete si prohlédnout přidaná čísla zpráv informační služby. Pokud stisknete [Možnosti], můžete upravit a odstranit přidané kategorie informačních zpráv.

- **Aktivní seznam:** V aktivním seznamu můžete vybrat čísla zpráv informační služby. Pokud aktivujete číslo informační služby, můžete přijímat zprávy poslané z tohoto čísla.

Šablony Menu 5.9

Text (Menu 5.9.1)

Máte k dispozici následujících 6 textových šablon:

- **Prosím, zavolejte mi zpět.**
- **Mám zpoždění. Budu tam v**
- **Kde právě jste?**
- **Jsem na cestě**
- **Urgentní! Kontaktujte.**
- **Miluji tě.**

K dispozici jsou následující volby.

- **Zobrazit:** Můžete si prohlédnout multimediální šablony.
- **Upravit:** Tuto volbu použijte pro napsání nové zprávy nebo pro úpravu šablony zprávy zvolené ze seznamu textových šablon.
- **Odeslat přes**
  - **SMS:** Vybranou šablonu zprávy můžete odeslat pomocí SMS.
  - **MMS:** Vybranou šablonu zprávy můžete odeslat pomocí MMS.
  - **E-mail:** Zde můžete upravovat, odstraňovat nebo přidávat e-mailové účty.
- **Smazat:** Odstranění šablony.
- **Nová šablona:** Vytvoření nové šablony.

- **Smazat vše:** Umožňuje odstranit všechny multimediální zprávy.

Multimediální (Menu 5.9.2)

Po uložení nové šablony můžete použít následující možnosti.

- **Uložit:** Umožňuje uložení nových multimediálních šablon, které jste si vytvořili.
- **Vložit:** Můžete přidat Symbol, Obrázek, Video, Zvuk, Nový snímek, Textu šablony, Kontakt, Vizitka, Další.
- **Náhled:** Zde si můžete prohlédnout multimediální šablony, které jste si vytvořili.
- **Upravit předmět:** Umožňuje změnit vybranou multimediální zprávu.
- **Trvání snímku:** Můžete nastavit dobu trvání snímku u multimediální zprávy.
- **Jazyky T9:** Vyberte jazyk pro režim zadávání textu T9. Výběrem T9 vypnuto můžete také režim pro zadávání T9 deaktivovat.
- **Konec:** Přesunete se zpět do menu Zprávy.

Nastavení Menu 5.0

SMS (Menu 5.0.1)

- **Typy zpráv:**

  Text, Hlas, Fax, Paging, X.400, E-mail, ERMES

  Typ zpráv bývá většinou nastaven na Text. Text můžete konvertovat na alternativní formáty. Informace o dostupnosti této funkce vám podá váš operátor.

- **Doba platnosti:** Tato síťová služba vám umožňuje nastavit, jak dlouho budou vaše textové zprávy uloženy v centru zpráv.
- **Zpráva o doručení:** Nastavíte-li na Ano můžete si ověřit, zda byla vaše zpráva úspěšně odeslána.
- **Účtování poplatku za odpověď:** Když je zpráva odeslána, umožňuje příjemcům odpovědět a náklady za odpověď naúčtovat na váš telefonní účet.
- **Číslo střediska zpráv:** Chcete-li poslat textovou zprávu, můžete s pomocí tohoto menu dostat adresu SMS centra.
- **Nastavení nosiče:** Zde můžete upravit výběr nosiče, jako je např. GSM nebo GPRS.

MMS (Menu 5.0.2)

- **Předmět:** Pomocí této položky nabídky můžete zadat předmět multimediální zprávy.
- **Trvání snímku:** Při psaní zprávy zobrazuje délku trvání jednotlivých stránek.
- **Priorita:** Můžete nastavit prioritu vybrané zprávy.
- **Doba platnosti:** Tato služba sítě umožňuje nastavení doby, po kterou budou vaše textové zprávy uložené ve středisku zpráv.
- **Zpráva o doručení:** Nastavíte-li v tomto menu volbu Ano, můžete si zjistit, zda byla vaše zpráva úspěšně odeslána.
- **Přečíst zprávu:** Tuto zprávu obdržíte bez ohledu na to, jestli příjemce danou zprávu přečetl nebo ne.

- **Automatické stažení:** Nastavíte-li volbu zapnuto [zap.], budete dostávat multimediální zprávy automaticky. Nastavíte-li volbu vypnuto [vyp.] budete do schránky s přijatými zprávami dostávat pouze oznámení, která si můžete následně přečíst. Nastavíte-li volbu Pouze domácí síť, budou obdržené multimediální zprávy záviset na domovské síti.
- **Profil sítě:** Jestliže vyberete server multimediálních zpráv, můžete u tohoto serveru nastavit URL.
- **Povolený typ zpráv**

  Osobní: Osobní zpráva.

  Reklama: Obchodní zpráva.

  Informace: Důležité informace.

Poznámka

- „Zpoplatněno je odesílání zpráv a další náklady může vyžadovat příjem multimediálních zpráv a e-mailů v zahraničí (viz část Automatické stažení na straně 61). Další podrobnosti získáte u vašeho poskytovatele služeb.“

E-mail (Menu 5.0.3)

- **E-mailový účet**

  Toto menu umožňuje upravovat, mazat a přidávat účty elektronické pošty.

  • **Zobrazit:** Můžete si prohlédnout e-mail.

  • **Nastavit jako výchozí**

  • **Upravit**

  Název účtu: Název účtu.

E-mailová adresa: Zadejte e-mailovou adresu získanou od poskytovatele této služby.

Jméno: Můžete vytvořit svoji přezdívku.

Server příchozí pošty: Zadejte POP3 adresu POP3 a Číslo portu serveru přijímajícího vaše e-maily.

Uživatelské jméno: Zadejte svoje uživatelské jméno u e-mailového účtu.

Heslo: Zadejte své heslo pro e-mail.

Server odchozí pošty: Zadejte adresu SMTP a Číslo portu počítače odesílajícího vaše e-maily.

- **Rozšířené nastavení**

Typ protokolu: Vyberte si typ protokolu. (POP3/IMAP4)

Max. velikost pro přijetí: Zobrazuje maximální velikost e-mailu, který můžete přijmout.

Uložit na server: Vyberte Ano, chcete-li nechat zprávy na serveru.

Vložit podpis: Vyberte Ano, chcete-li ke svým e-mailovým zprávám připojit svůj podpis.

E-mail pro odpověď: E-mailová adresa, na které chcete přijímat odpovědi.

Číslo příchozího portu: Umožňuje upravit číslo portu POP3.

Číslo odchozího portu: Umožňuje upravit číslo portu SMTP.

Ověření odchozí pošty: Zde můžete nastavit, jestli se při odesílání zprávy bude provádět ověřování.

ID odchozího serveru (Heslo odchozího serveru): Pro odeslání e-mailu zadejte ID a heslo.

- **Nový účet:** Výběrem položky Nový můžete nastavit až 5 účtů elektronické pošty. Pomocí volby Upravit můžete nastavit následující hodnoty.
- **Smazat:** Smaže se vybraný účet ze seznamu.
- **Smazat vše:** Můžete odstranit všechny seznamy účtů.

▸ **Profily sítě**

Profil představuje síťovou informaci využívanou k připojení na Internet. V paměti telefonu jsou uloženy výchozí profily pro některé operátory. Výchozí profily není možné přejmenovat.

▸ **Podpis**

Můžete vytvořit svůj podpis.

Otevřete nabídku

Vyberte položku „Posílání zpráv“.

Vyberte položku 0-Nastavení.

Vyberte položku 3-E-mail.

Vyberte položku 1 E-mailový účet.

Nyní vyberte poskytovatele e-mailového účtu.

Yahoo, BTInternet nebo AOL:

Nyní vyplňte prázdná pole. Neměňte data v polích, která již data obsahují.

Chcete-li provést úpravy, vyberte požadované pole a stiskněte tlačítko OK. Jakmile doplníte jedno pole, můžete přejít přímo na další prázdné pole. Jakmile všechna pole patřičně změníte, stiskněte tlačítko OK.

E-mailová adresa: Zadejte svoji e-mailovou adresu, která se používá jako zasílací adresa.

Moje jméno: Zadejte jméno, které se bude zobrazovat jako odesilatel e-mailu.

Uživatelské jméno: Zadejte uživatelské jméno.

Heslo: Zadejte heslo k příslušnému uživatelskému jménu.

Nakonec pro aktivaci e-mailového účtu (ve výchozím nastavení je aktivní účet Yahoo) vyberte požadovaný účet a levým kontextovým tlačítkem otevřete dílčí menu s možnostmi. Stiskněte tlačítko 2-Nastavit jako výchozí.

Nyní máte nakonfigurovaný e-mailový účet.

Jestliže poskytovatel e-mailové služby není předem nainstalovaný, odeberte jednu ze stávajících položek nebo vytvořte novou.

Od poskytovatele e-mailové služby získejte informace nutné k doplnění výše uvedených polí a další parametry, jako je adresa serveru.

Poznámka

- Každý požadavek na stažení e-mailů je zpoplatněn. Časté požadavky na stahování mohou vést k vysokým nákladům. Další podrobnosti získáte u vašeho poskytovatele služeb.

Číslo hlasové pošty (Menu 5.0.4)

Hlasovou poštu můžete přijímat, pokud tuto funkci váš operátor podporuje. Přijetí nové hlasové zprávy je signalizováno symbolem zobrazeným na obrazovce. Podrobné informace o správném nastavení telefonu vám podá poskytovatel služby.

Push zpráva (Menu 5.0.5)

Aktivací této volby můžete určit, zda chcete dostávat tyto zprávy nebo ne.

Inform. zpráva (Menu 5.0.6)

- **Přijmout**

  Ano: Pokud vyberete toto menu, bude váš telefon přijímat zprávy informační služby.

  Ne: Vyberete-li toto menu, nebudete na telefon dostávat zprávy informační služby.

- **Upozornění**

  Ano: Příjem zpráv informační služby je signalizován pípnutím telefonu.

  Ne: Telefon nebude signalizovat příjem zprávy ani tehdy, když nějaké informační zprávy dostanete.

- **Jazyk**

  Požadovaný jazyk můžete vybrat stisknutím klávesy OK. Potom se budou zprávy info služby zobrazovat v jazyce, který jste vybrali.

Hledat

Menu 6.1

1. Vyhledávání spustíte stisknutím levého kontextového tlačítka [OK].
2. Zadejte jméno, které chcete hledat.

Poznámka

- Okamžité hledání lze provést zadáním počátečního písmene jména.

3. Pokud chcete záznam upravit, odstranit nebo zkopírovat, nebo pokud chcete k záznamu přidat hlas, stiskněte levé kontextové tlačítko [Možnosti].

Zobrazí se následující menu.

- **Zobrazit:** Můžete zobrazit podrobnosti každého záznamu.
- **Upravit:** S pomocí navigačního tlačítka můžete upravit jméno, číslo, Skupina, Vyzváněcí tón a obrázek.
- **Nová zpráva:** Až najdete potřebné číslo, můžete na toto číslo poslat zpráva(Text/Multimédia/ E-mail).
- **Odeslat přes:** Data z telefonního seznamu můžete odeslat pomocí Textové zpráva, multimediální zprávy, přes zařízení Bluetooth nebo pomocí e-mailu.
- **Smazat:** Můžete kontakt smazat.
- **Nový kontakt:** Po výběru umístění, kam chcete záznam uložit (SIM/Telefon), můžete záznam přidat do telefonního seznamu.
- **Hromadné mazání:** Umožňuje odebrání více vybraných souborů.

- **Kopítovat do telefonu/SIM:** Můžete si zkopírovat kontakt z paměti SIM do telefonu nebo z telefonu do paměti SIM.
- **Hlavní číslo:** Pokud máte u kontaktu uloženo více čísel, vyberte to, které používáte častěji. Toto hlavní číslo se zobrazí jako první.

Nový kontakt Menu 6.2

S pomocí této funkce můžete do telefonního seznamu přidat nový kontakt. Paměť telefonu může pojmout maximálně 1000 kontaktů. Počet znaků závisí na SIM kartě.

Poznámka

- Maximální uložené délky jména a čísla záleží na typu SIM karty.

1. Stiskem levého kontextového tlačítka [OK] vyberte Nový kontakt.
2. Zadejte jméno.
3. Stiskněte tlačítko ↓, a potom můžete zadat číslo.
4. Stiskem tlačítek , můžete u kontaktu nastavit skupinu.
5. Stisknutím kontextového tlačítka [Možnosti] můžete pro daný záznam nastavit vyzváněcí tón a fotografii.

Rychlé volby

Menu 6.3

Tlačítka 2 abc až 9 wxyz můžete přiřadit k položce seznamu jmen. Můžete volat přímo stisknutím tohoto tlačítka.

1. Nejprve stisknutím tlačítka pravého kontextového tlačítka [Kontakty] v pohotovostním režimu otevřete telefonní seznam.
2. Z nabídky zvolte Rychlé volby, potom stiskněte levé kontextové tlačítko [Vybrat].
3. Pokud chcete přidat rychlou volbu, vyberte stisknutím kontextového tlačítka [Přiřadit] možnost <prázdné>. Potom můžete vyhledat jméno v telefonním seznamu.
4. Po přiřazení čísla k rychlé volbě, můžete záznam měnit nebo smazat. Na toto číslo můžete rovněž uskutečňovat hovory nebo posílat zprávy.

Skupiny

Menu 6.4

Můžete zapsat do seznamu až několik členů pro každou skupinu. Můžete vytvořit seznamy až pro 7 skupin.

- **Zobrazit členy:** Zobrazí se seznam členů vybrané skupiny.
- **Vyzváněcí tón skupiny:** Umožňuje definovat vyzváněcí tón pro volání členů skupiny.
- **Ikona skupiny:** Umožňuje vybrat ikony pro jednotlivé skupiny.
- **Přidat člena:** Můžete do skupiny přidávat členy.
- **Odebrat člena:** Ze skupiny můžete odebírat členy. Avšak i po odebrání člena zůstane jeho jméno a číslo v telefonním seznamu.
- **Odebrat všechny členy:** Umožňuje vymazat všechny členy ze skupiny.

- **Přejmenovat:** Název skupiny lze změnit.

Kopírovat vše

Menu 6.5

Kontakty lze zkopírovat nebo přemístit z paměti SIM karty do paměti telefonu a naopak.

- **Ze SIM do telefonu:** Položka se zkopíruje z paměti SIM karty do paměti telefonu.
- **Z telefonu na kartu SIM:** Položka se zkopíruje z paměti telefonu na SIM kartu.

Smazat vše

Menu 6.6

Vymazat lze všechny položky na SIM kartě a v telefonu.

Nastavení

Menu 6.7

1. V pohotovostním režimu stiskněte pravé kontextové tlačítko [Kontakty].
2. Z nabídky zvolte Nastavení a potom stiskněte levé kontextové tlačítko [Vybrat].

- **Výchozí paměť**

  Výchozí paměť můžete nastavit na možnosti Vždy se zeptat, SIM nebo Přístroj.

- **Možnosti zobrazení**

  Z nabídky zvolte Nastavení a potom stiskněte levé kontextové tlačítko [Vybrat].

  - **Pouze jméno:** Můžete nastavit, aby se kontakty zobrazovaly v telefonním seznamu pouze jako jména.

- **S obrázkem:** Doplňte telefonní seznam informacemi o daných lidech a jejich obrázky.

Informace

Menu 6.8

- **Čísla volání asistenční služby**

  Tato funkce umožňuje zobrazit seznam čísel služeb, které poskytuje operátor sítě (pokud to podporuje SIM karta).

- **Vlastní číslo (závisí na SIM)**

  Na SIM kartu si můžete uložit a zjistit z ní své vlastní číslo.

- **Vizitka**

  Pomocí této možnosti si lze vytvořit vlastní vizitku, obsahující jméno a číslo mobilního telefonu.

  Chcete-li vytvořit novou vizitku, stiskněte levé kontextové tlačítko [Nový] a zadejte informace do příslušných polí.

  Pokud chcete upravit, odstranit nebo odeslat vizitku, stiskněte levé kontextové tlačítko [Možnosti].

Moje složka

Obrázky

Menu 7.1

Zobrazuje seznam souborů JPG ve složce Moje média\Fotografie v multimediální paměti.

- **Zobrazit:** Soubor JPG můžete zobrazit stisknutím tlačítka OK nebo výběrem možnosti Zobrazit z nabídky Možnosti.
- **Smazat:** Odstraní soubor.
- **Nastavit jako**
  - **Pozadí na celou obrazovku:** Vybraný obrázek lze nastavit jako tapetu.
  - **Pozadí celý obrázek:** Aktuálně vybraný obrázek/zvuk lze zobrazit horizontálně jako tapetu.
  - **Obrázek kontaktu:** Aktuálně vybraný obrázek lze nastavit jako obrázek identifikující nějakou osobu.
- **Odeslat přes:** Umožňuje posílání obrázků přes MMS/Bluetooth/E-mail.
- **Soubor**
  - **Přejmenovat:** Změní název souboru pro vybraný soubor. Nemůžete změnit příponu názvu souboru.

Poznámka

- Následující znaky \ / : * ? " < > | nelze použít.

  - **Přesunout do složky:** Přesune vybraný soubor do složky.
  - **Přesunout do externí paměti:** Přesune vybraný soubor do multimediální paměti nebo do externí paměti.

UPOZORNĚNÍ!

Pokud vyjmete externí paměť v průběhu přenosu, může dojít k vážnému poškození telefonu.

- **Zkopírovat do externí paměti:** Zkopíruje vybraný soubor do multimediální paměti nebo do externí paměti.

UPOZORNĚNÍ!

Pokud vyjmete externí paměť v průběhu přenosu, může dojít k vážnému poškození telefonu.

- **Informace:** Zobrazí informace o souboru.

- **Vytisknout přes Bluetooth:** Většinu obrázků pořízených fotoaparátem nebo stažených přes WAP lze přes Bluetooth odeslat na tiskárnu.

- **Prezentace**

  Můžete si vytvořit prezentaci z uložených souborů.

- **Nová složka:** Můžete vytvořit novou složku.

- **Hromadné mazání:** Umožňuje odebrání více vybraných souborů.

- **Smazat vše:** Odstraní všechny soubory v seznamu.

- **Seznam:** Umožňuje nastavit typ zobrazení.

Zvuky

Menu 7.2

Zobrazuje seznam souborů MP3, MP4, AAC a M4A ve složce Moje média\Hudba v multimediální paměti.

- **Přehrát:** Soubor MP3záznamu můžete přehrát stisknutím tlačítka OK nebo výběrem možnosti Přehrát z nabídky Možnosti.
- **Nastavit jako :** Vybraný zvuk lze nastavit jako vyzváněcí tón/ID vyzváněcího tónu.
- **Informace o souboru:** Zobrazuje informace o souboru.

Videa

Menu 7.3

Zobrazuje seznam souborů 3GP, 3G2 ve složce Moje média\ Videa v multimediální paměti. Podporovanými typy souborů jsou soubory 3gp kódované videokodeky MPEG4 a h.263 a audiokodekem AMR.

- **Přehrát:** Soubor videozáznamu můžete přehrát stisknutím tlačítka OK nebo výběrem možnosti Přehrát z nabídky Možnosti.
- **Smazat:** Odstraní soubor.
- **Odeslat přes:** Odešle vybraný soubor do jiného přístroje přes MMS , Bluetooth nebo E-mail.

Poznámka

- Soubory můžete přes Bluetooth odesílat pouze tehdy, pokud jsou uloženy v paměti telefonu, nikoliv na paměťové kartě. Pokud chcete poslat soubor uložený v externí paměti, musíte jej nejprve nakopírovat do interní paměti telefonu.

- **Soubor:** Můžete uložit/přesunout/zkopírovat složku nebo externí paměť.
  - **Přejmenovat:** Změní název souboru pro vybraný soubor. Maximální počet znaků je 36. Nemůžete změnit příponu názvu souboru.

UPOZORNĚNÍ!

*Následující znaky \ / : * ? " < > | nelze použít.*

  - **Přesunout do složky:** Přesune vybraný soubor do složky.
  - **Přesunout do externí paměti:** Přesune vybraný soubor do multimediální paměti nebo do externí paměti.

UPOZORNĚNÍ!

Pokud vyjmete externí paměť v průběhu přenosu, může dojít k vážnému poškození telefonu.

  - **Zkopírovat do externí paměti:** Zkopíruje vybraný soubor do multimediální paměti nebo do externí paměti.
  - **Informace:** Zobrazí informace o souboru.
- **Nová složka:** Můžete vytvořit novou složku.
- **Hromadné mazání:** Umožňuje odebrání více vybraných souborů.
- **Smazat vše:** Odstraní všechny soubory v seznamu.

Dokumenty

Menu 7.4

Pomocí tohoto menu si můžete zobrazit soubory dokumentů (txt, ppt, pdf, doc a excel).

Můžete použít následující menu Možnosti.

- **Zobrazit:** Soubory dokumentů si můžete zobrazit stisknutím tlačítka OK nebo vybráním menu Zobrazit v menu Možnosti.
- **Informace:** Zobrazí informace o souboru.

Poznámka

- Soubory můžete přes Bluetooth odesílat pouze tehdy, pokud jsou uloženy v paměti telefonu, nikoliv na paměťové kartě. Pokud chcete poslat soubor uložený v externí paměti, musíte jej nejprve nakopírovat do interní paměti telefonu.

Další

Menu 7.5

Zobrazuje seznam souborů ve složce Moje média\Jiné v multimediální paměti.

Poznámka

- Jakmile propojíte telefon s počítačem přes Bluetooth, můžete odesílat i přijímat soubory do složek Hudba a Video. Do složky Jiné můžete nakopírovat libovolný typ souboru. Přijímat můžete pouze soubory ze složek Fotografie, Zvuky a Obrázky. Soubory ve složce Jiné si můžete zobrazit nebo přehrát pouze v případě, že jsou tyto typy souborů podporované. Pokud propojíte telefon s počítačem přes USB kabel, uvidíte v interní paměti pouze následující složky: Obrázky, Zvuky, Videa a Jiné. Uvidíte všechny složky z externí paměti.

Hry a aplikace

Menu 7.6

V této nabídce můžete spravovat Java aplikace nainstalované ve vašem telefonu. Můžete spouštět nebo mazat stažené aplikace nebo nastavit možnosti připojení.

Externí paměť

Menu 7.7

Pomocí tohoto menu si můžete zobrazit složky Obrázky, Zvuky, Videa, Dokumenty a Jiné na paměťové kartě. Pokud není externí paměť k dispozici, zobrazí se hlášení „Vložte externí paměť".

Poznámka

- Aby byl telefon identifikován jako výměnný disk, musí v něm být SIM karta.

Moje složka

Nový fantastický telefon LG

Model KE970 slouží také jako velkokapacitní paměťové zařízení. Pokud k němu připojíte USB kabel, můžete telefon používat jako vyměnitelný disk.

Můžete na něj stahovat soubory MP3 a fotografie, video, textové soubory atd. To umožňuje rychlý přístup z počítače do telefonu, pouze připojením USB kabelu.

Poznámka

- Funkce zařízení MASS STORAGE bude fungovat pouze tehdy, když je telefon v nečinném režimu.
- Při stahování souborů NEODPOJUJTE kabel. Po stažení souborů musíte v počítači klepnout na možnost „Bezpečně odebrat hardware“ a teprve poté můžete odpojit kabel.
- Při kopírování souboru na vyměnitelný disk se na displeji objeví hlášení „Probíhá přenos“. To znamená, že je aktivní funkce zařízení MASS STORAGE a že probíhá přenos dat. Pokud je na displeji zobrazeno hlášení „Probíhá přenos“, neodpojujte kabel. Pokud odpojíte kabel v průběhu přenosu, dojde ke ztrátě nebo poškození těchto dat a případně také k poškození telefonu.
- Pokud v průběhu používání funkce zařízení MASS STORAGE přijmete hovor, bude tento hovor odmítnut, ale po odpojení kabelu uvidíte na displeji oznámení zmeškaného hovoru.

Budík

Menu 8.1

Alarm nastavte tak, aby zazvonil v určitý čas.

1. Zvolte Zapnuto a zadejte požadovaný čas alarmu.
2. Zadejte interval opakování: Jednou, Po ~ Pá, Po ~ So, So-St, So-Čt, Denně.
3. Zvolte tón alarmu, které se vám líbí, a stiskněte tlačítko [OK].

Kalendář

Menu 8.2

Po vstupu do tohoto menu se zobrazí Kalendář. Horní část displeje obsahuje oddíly pro datum. Kdykoliv změníte datum, kalendář se aktualizuje podle tohoto data. Kurzor ve tvaru čtverce označuje určitý den.

Pokud v kalendáři uvidíte označené datum, znamená to, že na tento den je něco naplánováno nebo je pro tento den zaznamenána poznámka. Tato funkce vám připomíná váš program a poznámky. Pokud provedete příslušné nastavení pro poznámku, telefon vás na ni upozorní zvukovým tónem.

Změna dne, měsíce a roku.

Tlačítko	Popis
1 3 def	Ročně
7 pqrs 9 wxyz	Měsíčně
↑↓	Týdně
	Denně

V režimu plánu stiskněte levé kontextové tlačítko [Možnosti] následujícím způsobem;

Zobrazit

Zobrazí se všechny plány a poznámky pro zvolený den.

Pro procházení seznamů poznámek použijte tlačítka ↑ a ↓.

Pokud si chcete prohlédnout podrobnosti zprávy, stiskněte levé kontextové tlačítko [OK].

Stisknutím levého kontextového tlačítka [Možnosti] se vám zobrazí možnosti Zobrazit, Smazat, Nová úloha, Odeslat přes SMS/ MMS/Bluetooth/E-mail, Upravit, Kalendář, Tón plánu, Všechny plány, Jít na datum, Hromadné mazání a Smazat vše.

Nová úloha

Umožňuje vám ke zvolenému dni přidat novou úlohu. Můžete uložit až 20 poznámek. Zadejte předmět a pak stiskněte levé kontextové tlačítko [OK]. Zadejte příslušné informace v následující sekci; Čas, Opakovat a Budík.

Tón plánu

Můžete nastavit tón budíku pro každé zvolené datum.

Všechny plány

Zobrazí všechny plány a poznámky pro zvolený den.

Pomocí ↑, ↓ můžete procházet seznam poznámek. Pokud k poznámce nastavíte alarm, zobrazí se ikona alarmu.

Jít na datum

Můžete přímo přejít ke zvolenému datu.

- **Smazat starý**

  Úlohy, na které jste již byli upozorněni, můžete odstranit.

- **Smazat vše**

  Můžete smazat všechny poznámky.

t-zones

Menu 8.3

Při připojení k t-zones máte přístup k různým službám WAP (Wireless Application Protocol) sloužícím například ke stahování vyzváněcích tónů, tapet, videa, her a aplikací. Tyto služby jsou speciálně navrženy pro mobilní telefony a jsou zajišťovány poskytovateli služeb WAP.

Zjistěte si dostupnost služeb WAP, ceny a tarify u svého operátora sítě a/nebo poskytovatele služby, jehož službu chcete používat. Poskytovatelé služeb vám rovněž dají pokyny k používání těchto služeb.

Po navázání připojení se zobrazí domovská stránka. Obsah závisí na poskytovateli služeb. Prohlížeč můžete kdykoli zavřít stisknutím tlačítka . Telefon přejde do předchozího menu.

Navigace s prohlížečem WAP

K surfování po Internetu můžete používat buď tlačítka telefonu nebo nabídku prohlížeče WAP.

Použití tlačítek telefonu

Při surfování po Internetu mají tlačítka telefonu jinou funkci než v telefonním režimu.

Tlačítko	Popis
	Prochází obsah po jednotlivých řádcích.
	Návrat na předchozí stranu.
	Volba možností a potvrzení kroků.

Použití nabídky prohlížeče WAP

Při prohlížení mobilního webu máte k dispozici různé možnosti nabídek.

Poznámka

- V nabídkách prohlížeče WAP mohou být určité rozdíly, záleží na používané verzi prohlížeče.

Domů (Menu 8.3.1)

Připojení k domovské stránce. Domovská stránka bude stránka, která je definovaná v aktivovaném profilu. Pokud ji nemáte definovanou v aktivovaném profilu, bude ji definovat poskytovatel služeb.

Záložky (Menu 8.3.2)

Toto menu vám umožňuje si uložit adresu URL oblíbených internetových stránek tak, aby byla kdykoli po ruce.

Vytvoření záložky

1. Stiskněte levé kontextové tlačítko [Moznosti].
2. Zvolte Uložit jako záložku a stiskněte tlačítko OK.
3. Po zadání požadovaného URL a názvu stiskněte tlačítko OK.

Po vybrání požadované záložky se zobrazí následující nabídka.

- **Připojit:** Připojí k vybrané záložce.
- **Zobrazit:** Zobrazuje vybranou záložku.
- **Upravit:** Můžete upravovat URL a/nebo název vybrané záložky.
- **Nová záložka:** Vytvoření nové záložky.
- **Odeslat URL přes:** Odešle vybranou záložku pomocí textové/multimediální zprávy nebo e-mailu.

Přejít na URL (Menu 8.3.3)

Můžete se připojit přímo na požadovanou stránku. Po zadání příslušné adresy URL stiskněte tlačítko OK.

Historie (Menu 8.3.4)

Toto menu zobrazuje nedávno navštívené stránky.

Nastavení (Menu 8.3.5)

Můžete nastavit profil, mezipaměť, cookie a zabezpečení, vztahující se k službě internetu.

Síťové profily (Menu 8.3.5.1)

Profil představuje síťovou informaci využívanou k připojení na Internet.

V paměti telefonu jsou uloženy výchozí profily pro některé operátory. Výchozí profily není možné přejmenovat.

Každý profil obsahuje následující podmenu:

- **Aktivovat:** Aktivuje vybraný profil.
- **Zobrazit:** Zobrazuje vybraný profil.

- **Upravit:** Zde můžete vybraný profil upravit.
- **Nový profil:** Název profilu lze změnit.
- **Přidat nové:** Můžete přidat nový profil.
- **Odebrat vše?:** Odstraní ze seznamu všechny profily.
- **Resetovat vše:** Umožňuje obnovit všechny profily.

Cache (Menu 8.3.5.2)

Informace nebo služby, které jste použili, se uloží do mezipaměti v telefonu.

Poznámka

- Vyrovnávací paměť je zásobníková paměť, která se používá k dočasnému uložení dat.

Soubor cookies (Menu 8.3.5.3)

Informace nebo služby, k nimž přistupujete, se ukládají do mezipaměti telefonu.

Bezpečnostní certifikáty

(Menu 8.3.5.4)

Zobrazuje seznam osobních. Certifikátů, uložených ve vašem telefonu.

Informace (Menu 8.3.6)

Zobrazuje informace o verzi prohlížeče WAP.

Kalkulačka

Menu 8.4

Obsahuje standardní funkce jako například +, –, x, ÷ : sčítání, odečítání, násobení a dělení.

Navíc můžete použít různé funkce kalkulačky, například +/-, sin, cos, tg, log, IN, mocnina, odmocnina, deg, rad.

1. Čísla zadávejte stisknutím numerických tlačítek.
2. Příslušným navigačním tlačítkem zvolte početní úkon.
3. Potom zadejte čísla.
4. Zobrazte výsledek stisknutím tlačítka .
5. Chcete-li zadat desetinné číslo, stiskněte tlačítko .
6. Pro ukončení Kalkulačky stiskněte pravé kontextové tlačítko [Zpět].

Poznámky

Menu 8.5

1. Stiskem levého kontextového tlačítka [Vybrat] vyberte Paměť.
2. Pokud je prázdná, stisknutím levého kontextového tlačítka [Nový] přidejte další.
3. Zadejte textovou poznámku a potom stiskněte levé kontextové tlačítko [Možnosti] > [Uložit].

Poznámka

- Pokud chcete změnit režim zadávání textu, stiskněte postupně .

Stopky

Menu 8.6

1. Stisknutím tlačítka [Spustit] zaznamenáte čas. Mezičas zaznamenáte stisknutím [Kolo].
2. Stisknutím [Zastavit] provedete zaznamenání času kola.
3. Stisknutím [Vynulovat] obnovíte výchozí stav.

Převodník jednotek

Menu 8.7

Tato funkce převádí údaj z jedné jednotky na jinou. Existuje devět druhů veličin, které lze převést na jednotky: Měna, Plocha, Délka, Hmotnost,Teplota, Objem a Rychlost.

1. Stisknutím tlačítka [OK] můžete vybrat jeden z devíti druhů jednotek.
2. Stisknutím tlačítek ↑ a ↓ zvolte jednotku, na kterou chcete převádět. V převodníku jednotek nelze zadat symbol „–“.
3. Pomocí tlačítek , vyberte standardní hodnotu.

Světový čas

Menu 8.8

Pomocí levého a pravého navigačního tlačítka a levého kontextového tlačítka [Zvětšit] si můžete zobrazit aktuální čas greenwichského času (GMT) a velkých měst na celém světě.

Na obrazovce se zobrazí název města, aktuální datum a čas.

Následujícím postupem vyberte časovou zónu, ve které se nacházíte:

1. Jedním nebo opakovaným stisknutím levého nebo pravého navigačního tlačítka a levého kontextového tlačítka [Zvětšit] vyberte město, odpovídající vaší časové zóně. Zobrazí se lokální datum a čas.
2. Pokud chcete změnit zobrazení času v pohotovostním režimu na vybraný čas, stiskněte tlačítko [OK].

Služby SIM

Menu 8.9

Tato nabídka závisí na SIM kartě a síťových službách.

Nastavení

Datum a čas Menu 9.1

Můžete nastavit funkce data a času.

Nastavit datum (Menu 9.1.1)

Můžete nastavit aktuální datum.

Formát data (Menu 9.1.2)

U data můžete nastavit formát, např. RRRR/MM/DD, DD/MM/RRRR, MM/DD/RRRR.

(D: den/M: měsíc/R: rok)

Nastavit čas (Menu 9.1.3)

Můžete zadat aktuální čas.

Formát času (Menu 9.1.4)

U času můžete nastavit 24hodinový a 12hodinový formát.

Autom. aktualizace (Menu 9.1.5)

Pokud vyberete možnost Zapnuto, provede telefon automatickou aktualizaci data a času.

Jazyky Menu 9.2

Jazyk, ve kterém se zobrazuje text na displeji, můžete změnit. Tato změna také bude mít vliv na jazyk režimu pro vkládání.

Displej Menu 9.3

Tapeta (Menu 9.3.1)

Můžete si vybrat, který obrázek chcete mít na pozadí v pohotovostním režimu.

Podsvícení (Menu 9.3.2)

Můžete nastavit dobu podsvícení displeje.

(Vypnuto/10 s/20 s/30 s/60 s)

Jas (Menu 9.3.3)

Jas displeje můžete nastavit na: 100%, 80%, 60%, 40%

Zobrazit ikony zkratek

(Menu 9.3.4)

Výběrem položky Zapnuto se zobrazí funkce 4 navigačních tlačítek a tlačítka Nabídka jako obrázky uprostřed okna ve stavu nečinnosti. (Profily/Zprávy/Oblíbené/Kontakty)

Styl menu (Menu 9.3.5)

Tento telefon vám nabízí témata menu tabulek a seznamů. Vyberte barvu nabídky a stiskněte levé kontextové tlačítko [Vybrat].

Styl vytáčení (Menu 9.3.6)

Tento telefon vám nabízí čtyři styly vytáčení.

(Styl barev/Perličkový styl/Digitální styl/Styl zápisník)

Stále zobrazovaný text (Menu 9.3.7)

Zapnete-li tuto volbu, můžete upravovat text, který se zobrazí v pohotovostním režimu.

Název sítě (Menu 9.3.8)

Nastavíte-li ZAPNUTO, zobrazí se na vnitřním LCD displeji název sítě (jméno operátora).

Připojení

Menu 9.4

Bluetooth (Menu 9.4.1)

Technologie Bluetooth umožňuje kompatibilním mobilním zařízením, periferním zařízením a počítačům, které se nacházejí v těsné blízkosti přímou bezdrátovou komunikaci. Tento telefon má vestavěnou podporu technologie Bluetooth, což mu umožňuje spojení s kompatibilními telefony podporujícími bluetooth, počítačovými aplikacemi atd.

Poznámka

- Pokud použijete LG synchronizaci s počítačem přes Bluetooth, můžete přenášet data pouze v rámci telefonního seznamu.

Poznámka

- Při přijímání dat z jiného zařízení podporujícího technologii Bluetooth telefon vyžaduje potvrzení. Po potvrzení přenosu se soubor zkopíruje do vašeho telefonu.
- V závislosti na jeho druhu se soubor uloží do následujících složek.
  - **Video (.3GP, MP4, 3G2):** Ve složce Video.
  - **Obrázek (.bmp, gif, jpg, png):** složka Obrázky
  - **Zvuk (.amr, wav, aac):** složka Zvuky
  - **MP3 (.mp3):** složka Zvuky/MP3
  - **Jiné soubory (.txt, html):** složka Jiné

- **Bluetooth zapnuto/vypnuto**

  Můžete aktivovat nebo zrušit funkci Bluetooth.

- **Seznam zařízení**

  Můžete zobrazit všechna zařízení, se kterými je váš telefon KE970 již spárován. Pokud vstoupíte do nabídky Párovaná zařízení, zobrazí se vám tyto možnosti

  - **Připojit / Odpojit:** Po spárování s přístrojem nebo stereo zařízením byste měli s těmito zařízeními navázat spojení. Poté můžete tato zařízení začít používat.

  - **Nový:** Umožňuje vyhledat nová zařízení Bluetooth a přidat je do seznamu spárovaných zařízení telefonu. Když vyberete Přidat nový, přístroj začne hledat zařízení Bluetooth ve svém dosahu. Jakmile se v seznamu objeví zařízení, které chcete spárovat, stiskněte pravé kontextové tlačítko [Stop].

    Vyberte požadované zařízení a stiskněte levé kontextové tlačítko [Párovat]. Budete vyzváni, abyste zadali heslo. Heslo může být libovolný kód, který chcete použít (na obou zařízeních se musí použít stejné heslo), nebo to je heslo předem určené výrobcem zařízení, s nímž se pokoušíte telefon spárovat. Zkontrolujte v návodu k obsluze zařízení, s nímž se pokoušíte spárovat, zda má toto zařízení předem určené heslo.

  - **Přejmenovat:** Umožňuje změnit název spárovaného zařízení Bluetooth a způsob jeho zobrazení na přístroji.

- **Nastavit jako autorizované / Nastavit jako neautorizované:** Umožňuje nastavit autorizované připojení mezi jednotlivými zařízeními Bluetooth. Pokud například se svým telefonem pravidelně používáte sluchátka Bluetooth, nastavení připojení jako autorizovaného bude znamenat, že sluchátka se automaticky připojí k přístroji při každém zapnutí sluchátek.
- **Odebrat:** Umožňuje odstranit spárované zařízení Bluetooth.
- **Odebrat vše:** Umožňuje odstranit všechna spárovaná zařízení Bluetooth.

▶ **Nastavení Bluetooth**

- **Viditelnost mého přístroje:** Ukazuje, zda váš telefon bude viditelný pro ostatní zařízení Bluetooth.
- **Mé Jméno:** Můžete nastavit název svého zařízení Bluetooth. Výchozí název je LG KE970.
- **Moje adresa:** Můžete si zobrazit adresu zařízení Bluetooth.

Síť (Menu 9.4.2)

Můžete zvolit síť, jejíž registrace bude probíhat buď automaticky nebo ručně.

Výběr sítě (Menu 9.4.2.1)

Většinou se tato volba nastavuje na Automaticky.

- **Automaticky:** Po nastavení této funkce bude telefon automaticky vyhledávat a vybírat síť za vás. Jakmile jednou vyberete „Automaticky", bude telefon nastaven na „Automaticky" nezávisle na tom, zda bude zapnutý nebo vypnutý.
- **Ručně:** Telefon zjistí seznam dostupných sítí a zobrazí jej. Z tohoto seznamu si pak můžete vybrat síť, kterou chcete používat, ovšem za předpokladu, že tato síť má s vaším domovským operátorem sítě uzavřenou roamingovou smlouvu. Pokud se připojení k vybrané síti nepodaří uskutečnit, telefon vám umožní vybrat jinou síť.
- **Preferované:** Můžete si sestavit seznam preferovaných sítí, u kterých by se měl přístroj snažit zaregistrovat, než se pokusí o registraci u jiných sítí. Tento seznam je vytvořen z předdefinovaného seznamu známých sítí v telefonu.

Režim GPRS (Menu 9.4.2.2)

V závislosti na různých situacích si můžete nastavit službu GPRS.

- **Zapnout**

  Pokud zvolíte tuto nabídku, bude telefon po zapnutí automaticky zaregistrován do sítě GPRS. Je možné používat službu WAP nebo vytáčené připojení počítače a je možný přenos dat. Ukončením aplikace se ukončí spojení GPRS, ale registrace v síti GPRS zůstane.

▸ **Když je potřeba**

Pokud zvolíte tuto nabídku, naváže se spojení GPRS při připojení ke službě WAP a spojení se ukončí po ukončení připojení ke službě WAP.

Profily sítě (Menu 9.4.2.3)

▸ **Datová připojení**

• **Jméno:** Můžete zadat síťový název.

• **Nosič dat:** Můžete nastavit datovou službu nosiče.
1 Data / 2 GPRS

<**Nastavení dat**>

Tato možnost je k dispozici pouze tehdy, když vyberete Nastavení Dat jako Nosič/službu.

- **Vytočit číslo:** Zadejte telefonní číslo, kterým se chcete připojit k bráně WAP.
- **Uživatelské ID:** Totožnost uživatele pro váš telefonní server (a NIKOLI bránu WAP).
- **Heslo:** Heslo, které vyžaduje váš telefonní server (a NIKOLI brána WAP) k vaší identifikaci.
- **Typ hovoru:** Vyberte typ datového hovoru: Analogový nebo digitální (ISDN).
- **Rychlost přenosu:** Rychlost datového připojení; 9600 nebo 14400 (závisí na operátorovi)
- **Doba prodlevy (s):** Musíte zadat lhůtu prodlevy.
Po zadání této hodnoty nebude navigační služba WAP k dispozici, pokud nebude probíhat zadávání či přenos dat.

- **Primární server:** Zadejte IP adresu primárního DNS serveru, ke kterému se chcete připojit.
- **Sekundární server:** Zadejte IP adresu sekundárního DNS serveru, ke kterému se chcete připojit.

<**Nastavení GPRS**>

Nastavení této služby je k dispozici pouze tehdy, když je jako služba nosiče zvolena služba GPRS.

- **APN:** Zadejte APN služby GPRS.
- **Uživatelské ID:** Totožnost uživatele vyžadovaná serverem APN.
- **Heslo:** Heslo vyžadované serverem APN.
- **Primární server:** Zadejte IP adresu primárního DNS serveru, ke kterému se chcete připojit.
- **Sekundární server:** Zadejte IP adresu sekundárního DNS serveru, ke kterému se chcete připojit.

Připojení USB (Menu 9.4.3)

Můžete si vybrat režim Modem a Mass storage.

Po ukončení používání paměti telefonu klepněte na tlačítko Konec a postupujte následovně.

VÝSTRAHA!

- Před odpojením kabelu musíte klepnout na tlačítko Konec. Jinak nelze zaručit integritu přenesených dat.

1. Klepněte do oznamovací oblasti. [Odpojit nebo vysunout hardware]
2. Vyberte Mass storage zařízení USB a poté klepněte na Stop. Objeví se následující hlášení: „Zařízení Mass Storage USB lze nyní bezpečně odebrat ze systému“.
3. Odpojte kabel.

Hovory

Menu 9.5

Menu hovorů můžete nastavit stisknutím tlačítka [Vybrat] v menu Nastavení.

Přesměrování hovoru (Menu 9.5.1)

Služba Přesměrování hovorů umožňuje přesměrovat příchozí hlasové hovory, faxové hovory a datové přenosy na jiné číslo. Podrobnější informace podá operátor.

- **Všechny hlasové hovory**

  Přesměruje všechny hovory.

- **Pokud obsazeno**

  Přesměruje hovory, když se telefon používá.

- **Pokud není odpověď**

  Přesměruje hovory, které nepřijmete.

▸ **Pokud je mimo dosah**

Přesměruje hovory, když je telefon vypnutý nebo je mimo pokrytí.

▸ **Všechny datové hovory**

Přesměruje všechna datová volání na číslo s připojením na PC.

▸ **Všechny faxové hovory**

Přesměruje všechna datová volání na číslo s faxovým připojením.

▸ **Zrušit vše**

Zruší veškeré služby přesměrování hovorů.

Podmenu

U menu Přesměrování hovorů jsou následující podmenu.

- **Aktivovat**

Aktivovat příslušnou službu.

Do složky hlasové pošty

Přesměruje do centra zpráv. Tato funkce není zobrazena v menu Všechna datová volání a Všechna faxová volání.

Na jiné číslo

Můžete zadat číslo, na které chcete hovor přesměrovat.

Na oblíbené // číslo

Můžete si zjistit posledních 5 přesměrovaných čísel.

- **Zrušit**

Deaktivace příslušné služby.

- **Zobrazit stav**

Zobrazit stav příslušné služby.

Režim odpovědi (Menu 9.5.2)

- **Vysunout telefon**

  Při výběru této položky stačí k příjmu příchozího hovoru otevřít telefon.

- **Libovolná klávesa**

  Zvolíte-li toto menu, můžete přijímat hovory stisknutím libovolného tlačítka kromě tlačítka [Konec].

- **Pouze klávesa Odeslat**

  Nastavíte-li si tuto volbu, můžete přijímat hovory pouze stisknutím tlačítka [Odeslat].

Odeslat vlastní číslo (Menu 9.5.3)

(závisí na síti a předplacené službě)

- **Nastaveno sítí**

  Po nastavení této volby můžete odeslat své telefonní číslo v závislosti na dvoulinkové službě, např. linka 1 nebo linka 2.

- **Zapnuto [Zap.]**

  Můžete své telefonní číslo poslat jinému účastníkovi. Vaše telefonní číslo se zobrazí na telefonu příjemce.

- **Vypnuto [Vyp.]**

  Vaše telefonní číslo se nezobrazí.

Čekající hovor (Menu 9.5.4) (závisí na síti)

- **Aktivovat**

  Zvolíte-li Aktivovat, můžete přijmout hovor, který čeká na vaší lince.

- **Zrušit**

  Vyberete-li Zrušit, nebudete vědět o tom, že máte na lince další hovor.

- **Zobrazit stav**

  Zobrazuje stav dalšího hovoru na lince.

Minutové upozornění (Menu 9.5.5)

Zvolíte-li Zapnuto [Zap.], budete každou minutu pípnutím upozorňováni na délku hovoru.

Automatické opakování vytáčení (Menu 9.5.6)

- **Zapnuto [Zap.]**

  Pokud je tato funkce aktivována a hovor se nespojí, telefon se bude automaticky pokoušet vytočit toto číslo znovu.

- **Vypnuto [Vyp.]**

  Pokud se hovor nespojí, telefon nebude automaticky vytáčet toto číslo znovu.

DTMF tóny (Menu 9.5.7)

V průběhu hovoru můžete vysílat tóny kláves za účelem ovládání hlasové schránky nebo jiných automatických telefonních služeb.

Zabezpečení Menu 9.6

Požadavek kódu PIN (Menu 9.6.1)

V tomto menu si můžete nastavit, aby při zapnutí telefon vždy vyžadoval zadání kódu PIN vaší SIM karty.

Je-li tato funkce aktivována, bude vyzváni k zadání kódu PIN.

1. V menu nastavení vyberte volbu Požadavek kódu PIN a potom stiskněte [Vybrat].
2. Nastavit Zap/vyp.
3. Chcete-li toto nastavení změnit, musíte nejprve po zapnutí telefonu zadat svůj kód PIN.
4. Pokud zadáte více než 3x nesprávný kód PIN, telefon se zablokuje. Je-li zadávání kódu PIN zablokováno, budete muset zadat kód PUK.
5. Kód PUK můžete zadat maximálně 10x. Pokud zadáte více než 10x špatný kód PUK, nemůžete sami telefon odblokovat. V tomto případě se budete muset obrátit na poskytovatele služby.

Zámek telefonu (Menu 9.6.2)

Můžete použít bezpečnostní kód, abyste zabránili neoprávněnému používání telefonu. Pokud nastavíte zámek telefonu na hodnotu Při zapnutí, bude telefon při každém zapnutí telefonu vyžadovat bezpečnostní kód.

Pokud nastavíte zámek telefonu na hodnotu Při změně karty SIM, bude telefon vyžadovat bezpečnostní kód pouze při výměně karty SIM.

Blokování hovoru (Menu 9.6.3)

Služba Blokování hovoru umožňuje zamezit volání i příjmu určitého typu hovorů. U této funkce je třeba zadat heslo sítě. Máte na vybranou z těchto podnabídek.

- **Všechny odchozí**

  Blokování všech odchozích hovorů.

- **Odchozí mezinárodní**

  Blokování všech odchozích mezinárodních hovorů.

- **Odchozí mezinárodní kromě domácí země**

  Zablokovány jsou všechny mezinárodní odchozí hovory kromě domovské sítě.

- **Všechny příchozí**

  Blokovány jsou všechny příchozí hovory.

- **Příchozí při roamingu**

  Jsou zablokovány všechny příchozí hovory při roamingu.

- **Zrušit všechna blokování**

  Můžete zrušit všechny služby blokování hovorů.

- **Změnit heslo**

  Můžete změnit heslo pro službu Blokování hovoru.

Podmenu:

- **Aktivovat**

  Umožňuje požádat síť o zablokování hovorů.

- **Zrušit**

  Vybrané zablokování hovorů se zruší.

- **Zobrazit stav**

  Zobrazí se náhled, zda jsou hovory blokovány či nikoliv.

Pevná volba čísla (Menu 9.6.4) (závisí na SIM kartě)

Odchozí hovory můžete omezit na vybraná telefonní čísla. Tato čísla jsou chráněna kódem PIN2.

- **Zapnuto**

  Odchozí hovory můžete omezit na vybraná telefonní čísla.

- **Vypnuto**

  Funkci volby pevných čísel můžete zrušit.

- **Seznam**

  Umožňuje zobrazit seznam čísel s pevnou volbou.

Změnit kódy (Menu9.6.5)

PIN (osobní identifikační kód) slouží k zabránění nepovolaným osobám v manipulaci s telefonem.

Můžete změnit tyto přístupové kódy: **Bezpečnostní kód**, **Kód PIN1**, **Kód PIN2**.

1. Chcete-li kód PIN1/kód PIN2/ bezpečnostní kód změnit, zadejte nejprve původní kód a potom stiskněte tlačítko [Vybrat].
2. Zadejte nový kód PIN/kód PIN2/ bezpečnostní kód a potvrďte jej.

Letový režim Menu 9.7

Tento režim vám umožňuje používat pouze ty vlastnosti telefonu, které nevyžadují používání bezdrátové sítě tehdy, když se nacházíte v letadle nebo na místech, kde je používání bezdrátových sítí zakázáno.

Pokud nastavíte letový režim, zobrazí se příslušná ikona na obrazovce místo ikony představující sílu signálu.

- **Zapnuto:** Nelze uskutečňovat (ani přijímat) hovory, včetně tísňových volání a také není možné používat další funkce vyžadující pokrytí síťovým signálem.
- **Vypnuto:** Letový režim můžete vypnout a po restartování se váš přístroj připojí k síti.

Snížená spotřeba Menu 9.8

Nastavíte-li na Zapnuto, ušetříte energii v době, kdy se telefon nepoužívá.

Obnovit výchozí Menu 9.9

Můžete obnovit všechny výchozí parametry. K aktivaci této funkce je třeba zadat bezpečnostní kód. Můžete rovněž vymazat multimediální paměť.

Stav paměti Menu 9.0

Můžete zkontrolovat volné místo a využití paměti pro jednotlivá úložiště: Paměť telefonu a Multimediální paměť. Můžete otevřít nabídku jednotlivých pamětí.

Otázky a odpovědi

Dříve než přístroj zanesete do servisu nebo se obrátíte na servisního technika, zjistěte, zda není tento problém popsán v následujících odstavcích.

Otázka Jak vyvolám seznam odchozích, příchozích a zmeškaných hovorů?

Odpověď Stiskněte (tlačítko sluchátka).

Otázka V některých místech je slabé spojení a hovor není slyšet.

Odpověď V některých místech se signál může výrazně lišit. Zkuste se přesunout na jiné místo. Stabilitu hovoru nebo schopnost spojení může ovlivňovat i stupeň vytížení sítě.

Otázka Spojení je slabé v okamžiku, kdy je navázáno.

Odpověď V některých místech se pokrytí signálem může výrazně lišit. Zkuste se přesunout na jiné místo. Stabilitu hovoru nebo schopnost spojení může ovlivňovat i stupeň vytížení sítě.

Otázka Displej se nezapne.

Odpověď Vyjměte a vyměňte baterii a zapněte telefon. Pokud se telefon stále nezapne, dobijte baterii a zkuste to znovu.

Otázka Při spojení s určitým typem telefonu a v určitých oblastech je slyšet ozvěna.

Odpověď K tomuto jevu dochází v okamžiku, kdy je nastavena příliš vysoká hlasitost, může být rovněž způsoben specifickými vlastnostmi (analogovou elektronickou telefonní ústřednou) přístroje na druhém konci hovoru.

Otázka Telefon se zahřívá.

Odpověď Během dlouhých hovorů nebo pokud dlouho používáte internet či hrajete hry, se telefon zahřívá. To je zcela obvyklé a nemá to žádný vliv na životnost výrobku ani na jeho výkon.

Otázka Nefunguje vyzvánění, světlo nebo displej jenom poblikávají.

Odpověď Telefon je v nabídce Profily nastaven na „Pouze vibrace“ nebo „Tichý“. Zvolte profil „Normální“ nebo „Hlasitý“.

Otázky a odpovědi

Otázka Doba trvání pohotovostního režimu telefonu se postupně zkracuje.

Odpověď Baterie mají omezenou životnost. V okamžiku, kdy se provozní doba baterie zkrátí na polovinu, je třeba ji vyměnit. Používejte výhradně autorizované náhradní díly.

Otázka Doba použitelnosti baterie se zkracuje.

Odpověď Je-li provozní doba baterie krátká, může to být způsobeno prostředím, ve kterém telefon používáte, velkým množstvím hovorů nebo slabým signálem.

Otázka Při vytočení čísla ze seznamu kontaktů není hovor spojen.

Odpověď S pomocí funkce Hledat v Kontaktech zkontrolujte, zda byla čísla správně uložena. Podle potřeby je znovu uložte.

Otázka Nelze se s vámi spojit.

Odpověď Je váš telefon zapnutý (nepřidrželi jste tlačítko Ukončit déle než tři sekundy)? Přistupujete do sítě správného mobilního operátora? Nenastavili jste funkci blokování příchozích hovorů?

Otázka Nemohu najít kód zámku, PIN ani PUK ani heslo.

Odpověď Výchozí kód zámku je „0000“. Pokud zapomenete nebo ztratíte kód zámku, obraťte se na prodejce svého telefonu. Pokud zapomenete nebo ztratíte kód PIN či PUK nebo jste tento kód neobdrželi, obraťte se na svého operátora.

Příslušenství

K vašemu mobilnímu telefonu existuje různé příslušenství, které si můžete vybrat podle svých komunikačních nároků.

Standardní baterie

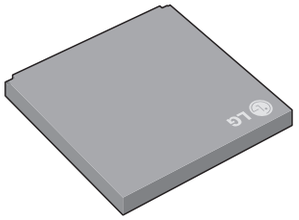

Cestovní adaptér

Tato nabíječka umožňuje dobíjet baterii mimo domov nebo pracoviště.

Sada sluchátek a mikrofonu pro handsfree a ovladače pro přehrávač hudby

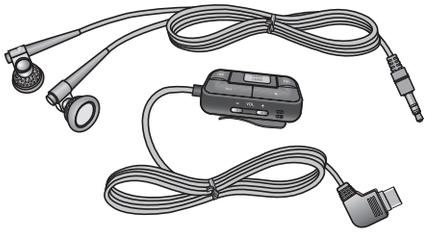

- **Stereofonní sluchátka**
- **Ovladač:** Tlačítko Odpovědět a ukončit, ovládání přehrávače hudby, ovládání hlasitosti, tlačítko Přidržet a mikrofon.

Poznámka

- Vždy používejte pouze originální příslušenství LG.
- Pokud tak neučiníte, může dojít ke zrušení platnosti záruky.
- Příslušenství se může v různých oblastech lišit; Další informace vám poskytne naše místní servisní společnost nebo prodejce.

Technické údaje

Všeobecné

Název výrobku: KE970

Systém: GSM 900/DCS 1800/PCS 1900

Okolní teploty

Max: +55 °C
+45 °C

Min: -10 °C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20,Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KE970

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name	Issued Date
Jin Seog, Kim / Director	21. DEC. 2006

Signature of representative

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

LG Electronics CZ s.r.o. tímto prohlašuje, že zařízení mobilní telefon KE970 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES [NV č.426/2000Sb.]

„Vývojem tohoto telefonu motivovaného snahou o zlepšení jeho funkcí, ovladatelnosti a použitelnosti, mohlo dojít ke vzniku rozdílu mezi jeho ovládáním a návodem k ovládání uvedeným v této příručce. Tyto případné rozdíly způsobené změnami softwaru, které mohou být provedeny i na přání Vašeho operátora, Vám ochotně vysvětlí náš prodejce či servisní středisko. Tyto případné rozdíly způsobené vývojovými změnami softwaru mobilního telefonu provedené výrobcem nejsou vadami výrobku ve smyslu uplatnění práv z odpovědnosti za vady a nevztahuje se na ně poskytnutá záruka.“

IKE970 User Guide

- English

Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Contents

Introduction 5
For your safety 6
Guidelines for safe and efficient use 7
KE970 features 12
Parts of the phone
Display information 16
On-Screen Icons
Installation 18
Installing the SIM card and the handset battery
Charging the Battery 20
Disconnecting the charger 21
Inserting the memory card 22
Removing the memory card
General functions 23
Making a Call
Answering a Call 24
Entering Text 25
Selecting functions and options 29
In-call menu 30
During a Call
Conference Calls 31
Menu Tree 34
Profiles 37
Activate
Personalise
web'n'walk 39
Multimedia 40
MP3 player
Camera 44
Video camera 46
Voice recorder
Call history 47
All calls
Missed calls
Dialled calls
Received calls 48
Call duration
Call costs 49
Data information

Messaging 50
New message
Text
Multimedia 51
Email 53
Inbox 54
Email box 55
Drafts 56
Outbox
Sent 57
Listen voicemail
Info message
Read 58
Topics
Templates
Text
Multimedia 59
Settings 60
Text message
Multimedia message
Email 62
Voicemail number 64
Push message 65
Info message
Contacts 66
Search
New contact 67
Speed dials
Groups 68
Copy all
Delete all
Settings 69
Information
My stuff 70
Images
Sounds 71
Videos 72
Documents 73
Others 74
Games & Apps 75
External memory
Tools 77
Alarm clock
Calendar
t-zones 79
Home 80
Bookmarks
Go to URL
History 81
Settings
Information 82

Contents

Calculator 82
Memo 83
Stop watch
Unit converter
World clock 84
SIM services

Settings 85

Date & Time
Set date
Date format
Set time
Time format
Auto update
Languages

Display 85
Wallpaper
Backlight timer
Brightness 86
Home screen shortcut
Menu style
Dialing style
Standby text
Network name
Connectivity
Bluetooth
Network 89
USB connection 91
Call 92
Call divert
Answer mode 93
Send my number
Call waiting 94
Minute minder
Auto redial
Send DTMF

Security 95
PIN code request
Phone lock
Call barring 96
Fixed dial number 97
Change codes
Flight mode 98
Power saving
Reset default
Memory status

Accessories 99
Technical data 100
Q&A 101
Glossary 104
Index 108

Introduction

Congratulations on your purchase of the advanced and compact KE970 mobile phone, designed to operate with the latest digital mobile communication technology.

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

For your safety

Warning!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*

Caution!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed of in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*
- *Risk of explosion if battery is replaced by an incorrect type.*

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KE970 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.443 W/kg (10g) and when worn on the body is 0.245 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

Product care and maintenance

> ***Warning! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.***

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as a TV's, radios or personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

- Please remove the data cable before powering on the handset.

Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

KE970 features

Parts of the phone

Front view

Earpiece

Navigation key

- **In standby mode:**
  - **Briefly ↑:** List of Message
  - **Briefly ↓:** List of Profiles
  - **Briefly press:** Menu
  - **Briefly press:** List of Contacts
  - **Briefly press:** List of Favourites
- **In menu:** scroll up & down
  - **Briefly press:** OK key

With the up/down scrolling navigation key, you can select menu and functions more easily.

LCD

- **Top:** Signal strength, battery level and various function
- **Bottom:** Soft key indications

Alpha numeric keys

- **In standby mode:** Input numbers to dial
  Hold down
  0 + - International calls
  1 - Activate Voice mail centre menu
  2 abc to 9 wxyz - Speed dials
- **In editing mode:** Enter numbers & characters

Microphone

Left soft key/ Right soft key

These keys perform the function indicated in the bottom of the display.

End key

- Switch on/off (hold down)
- End or reject a call.

Clear key

Deletes a character with each press. Hold the key down to clear all input. Use this key to go back to a previous screen.

Send key

- Dial a phone number and answer a call.
- **In standby mode:** shows recently dialled, received and missed calls.

KE970 features

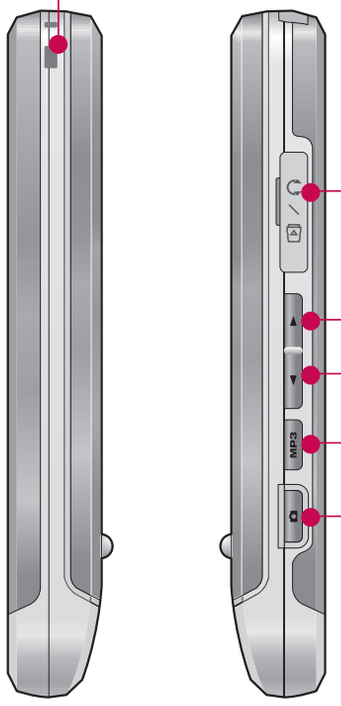

Holes for a carring strap

Battery Charging Connector/ Cable connector and Ear jack

Note

- Please ensure phone is powered on and in idle mode before connecting the USB cable.

Side keys

- **In standby mode (opened):** Volume of key tone
- **In standby mode (closed):** Short press - The LCD light on.
- **During a call:** volume of the earpiece

Note

- To protect your sense of hearing while the slide is open, the maximum volume level is set to 3.

MP3 key

Activates the MP3 player directly.

Side camera key

Long press - Photo camera activation

Rear view

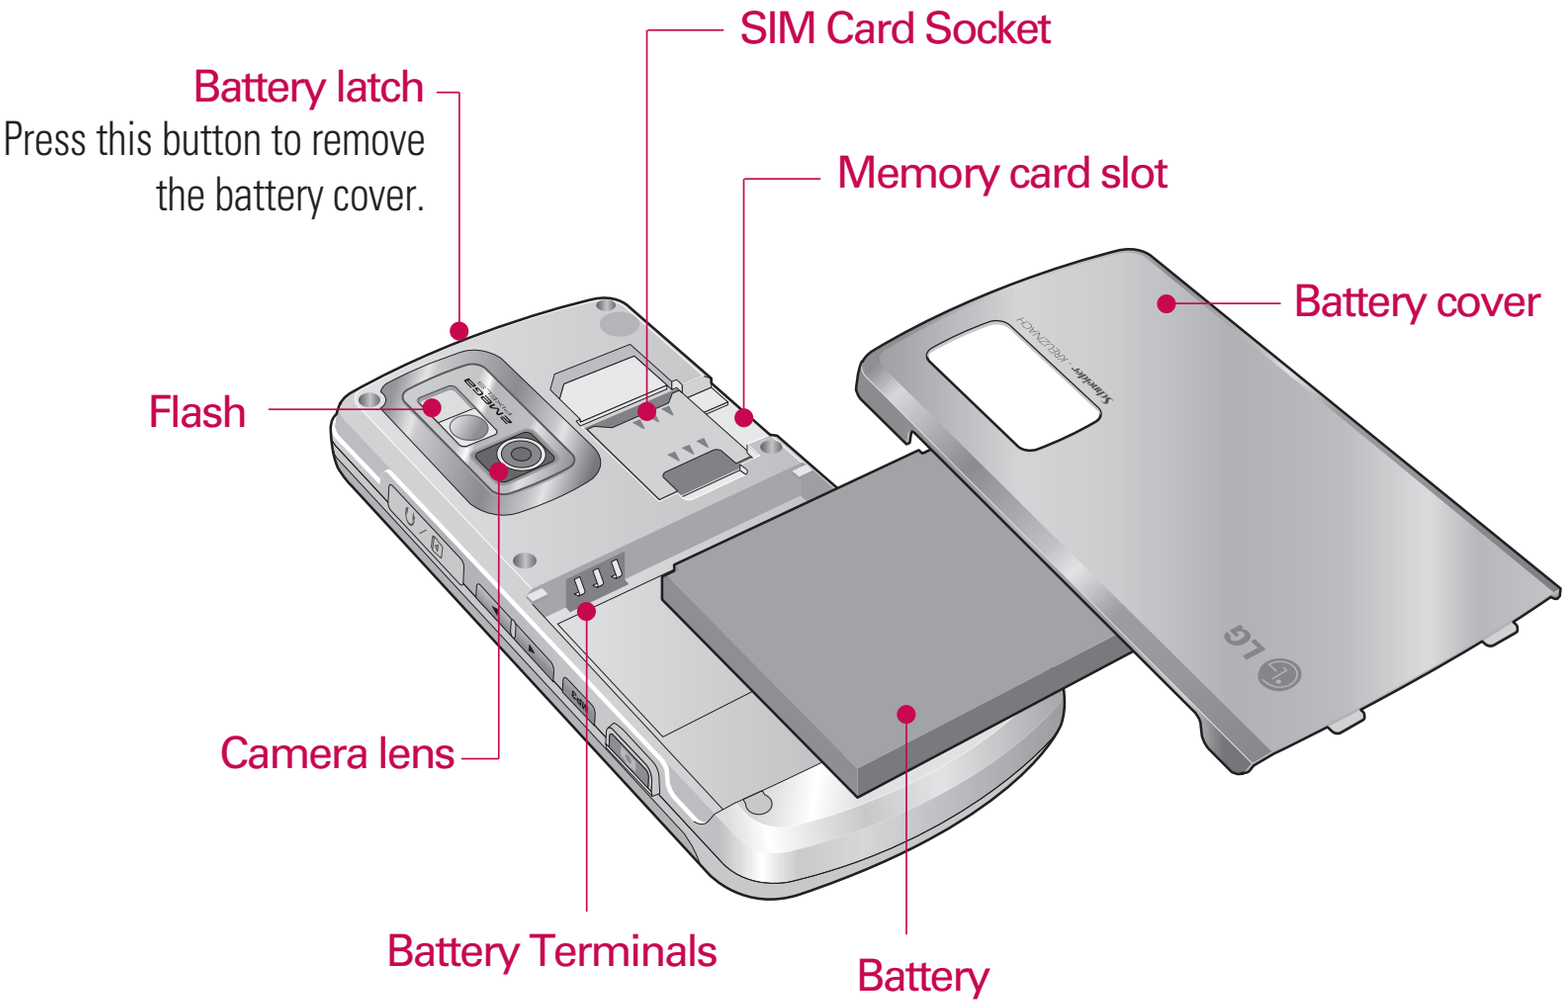
SIM Card Socket
Battery latch
Press this button to remove the battery cover.
Memory card slot
Battery cover
Flash
Camera lens
Battery Terminals
Battery

Display Information

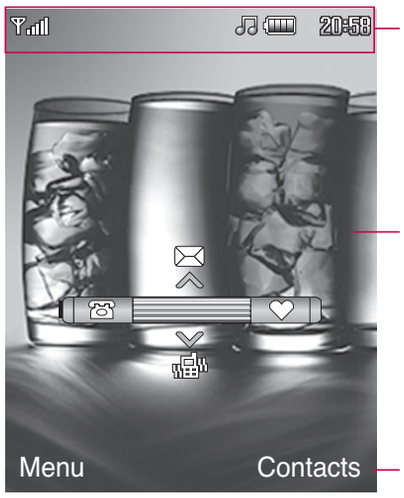

Icon area

Text and graphic area

Soft key indications

Area	Description
First line	Displays various icons.
Middle lines	Display messages, instructions and any information that you enter, such as number to be dialled.
Last line	Shows the functions currently assigned to the two soft keys.

The screen displays several icons. These are described below.

On-Screen Icons

Icon	Description
	Tells you the strength of the network signal.*
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	Vibrate only menu in profile.
	General menu in profile.

* The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and poor audio.
Please refer to this signal as an indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

Icon	Description
	Outdoor menu in profile.
	Silent menu in profile.
	Headset menu in profile.
	You can divert a call.
	Indicates that the phone is accessing WAP.
	Indicates that you are using GPRS.
	You have activated the Bluetooth menu.
E	Shows the EDGE service is available. Connection to the EDGE service allows you to transfer data at a speed of 200Kb/s (depending on network availability). Check with your operator for network coverage and service availability.

Installation

Installing the SIM card and the handset battery

Make sure the power is off before you remove the SIM card or battery.

1. **Remove the battery.**

   Press and hold down the battery release button and lift off the battery cover. Turn the phone up-side down, as shown, then lift up the battery with your fingers and pull-out the battery.

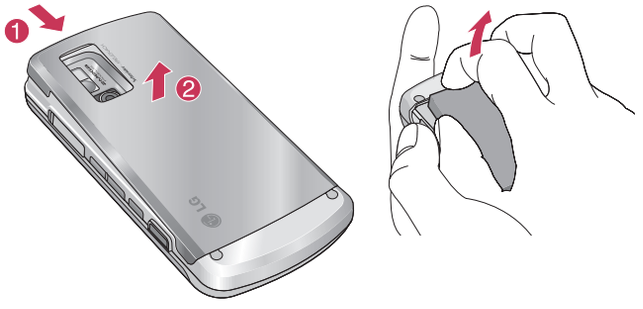

Note

- Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. **Install the SIM card.**

   Insert and slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

To insert the SIM card

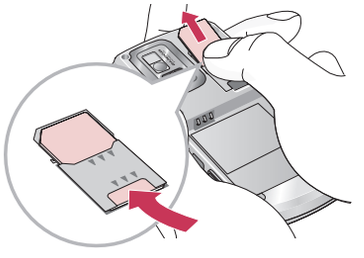

To remove the SIM card

Note

- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

WARNING!

- ***Do not replace or remove the SIM card while your phone is being used or turned on, or data may be lost or the SIM card might be damaged.***

3. **Install the battery.**

Insert the the battery into the battery compartment as metal contacts meet in the middle of the phone.
Push down the top of the battery until it snaps into place. Place the battery cover to the phone as shown.

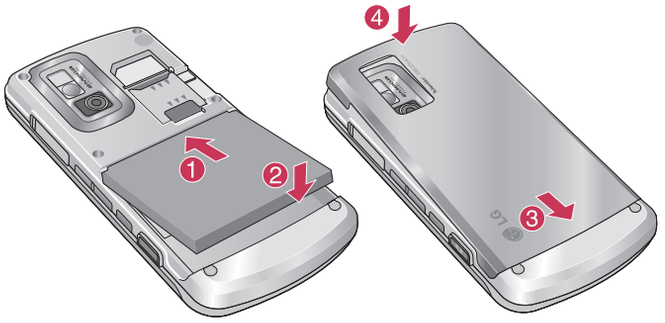

Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.

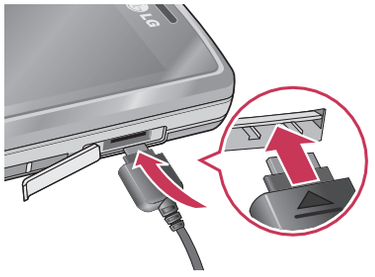

1. Ensure the battery is fully charged before using the phone for the first time.
2. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the side of the phone until it clicks into place.
3. Connect the other end of the travel adapter to the mains socket. Use only the charger included in the box.
4. The moving bars of battery icon will stop after charging is complete.

CAUTION!

- ***If the battery is completely discharged, the charging display will appear on the LCD approximately 1 to 1.5 minutes after connecting TA.***
- ***Do not force the connector as this may damage the phone and/or the travel adapter.***
- ***Insert the battery pack charger vertically to wall power outlet.***
- ***If you use the battery pack charger out of your own country, use an attachment plug adaptor for the proper configuration.***
- ***Do not remove your battery or the SIM card while charging.***

WARNING!

- ***Unplug the charger during lightning storms to avoid electric shock or fire.***
- ***Make sure that no sharp-edged items, such as animal teeth or nails, come into contact with the battery. There is a risk of this causing a fire.***

Disconnecting the charger

Disconnect the charger from the phone by pulling the connector, not the cord.

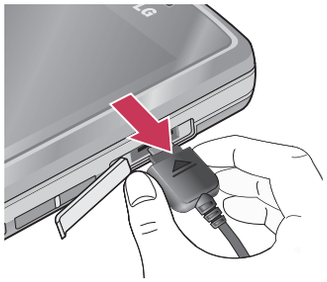

Inserting the memory card

Insert the memory card into the slot until the memory card is fully inserted into the slot, as shown in the figure below:

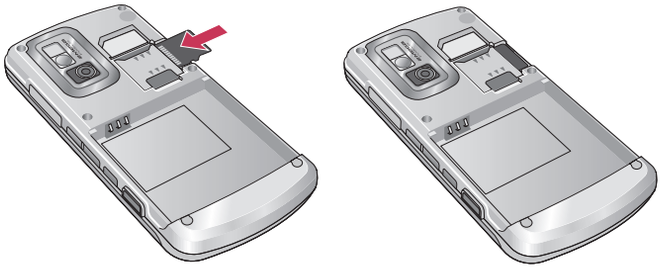

Removing the memory card

Carefully remove the memory card out of the soket, as shown in the figure below:

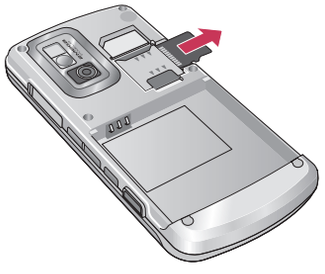

Note

- Only use memory cards that have been approved by the manufacturer. Some memory cards might not be compliant with the handset.

Warning

Do not replace or remove the memory card while your phone is on, or data could be lost and the memory card might be damaged.

General functions

Making a Call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code.
   To edit a number on the display screen, simply press the C key to erase one digit at a time.
   - Press and hold the C key to erase the entire number.
3. Press the key to call.
4. When you want to finish, press the key.

Making a Call by Send Key

1. Press the key, and the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the navigation key.
3. Press the key.

Making International Calls

1. Press and hold the 0 + key for the international prefix. The '+' character can be replaced with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the key.

Ending a Call

When you have finished a call, press the key.

Making a Call From the Contact list

You can store names and phone numbers dialled frequently in the SIM card as well as the phone memory known as the Contact list.

You can dial a number by simply looking up a name in the contact list.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the key volume using the side keys.

Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo if stored in your Address Book) is displayed.

1. Slide up and press the key or the left soft key to answer an incoming call. If the Any Key menu option (Menu 9.5.2), has been set to any key press will answer a call except for the key or the right soft key.
2. End the call by closing the phone or pressing the key.

Note

- You can answer a call while using the Address Book or other menu features. If the phone is connected to a PC via USB cable, incoming calls will be rejected, but after disconnecting the phone from the PC you will see a Missed call window.

Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator ( ) on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone.

Note

- Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press key until 123 mode is displayed.

General functions

Symbolic Mode

This mode allows you to enter special characters.

Changing the Text Input Mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.
2. If you want to change modes, press # . The available modes are changed.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses.
As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

Note

- You can select a different T9 language from the menu option or press hold down the key * . The default setting for T9 is set to disabled mode.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys 2 abc to 9 wxyz Press one key per letter

- The word changes as letters are typed-ignore what's on the screen until the word is typed completely.
- If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.
  Example: Press 4 ghi 6 mno 6 mno 3 def to type Good.

- If the desired word is missing from the word choices list, add it by using the ABC mode.

2. Enter the whole word before editing or deleting any key strokes.

3. Complete each word with a space by pressing the key 0 ± or key. To delete letters, press C. Press and hold down C to erase the letters continuously.

Note

- To leave the text input mode without saving, press the . The phone will return to idle mode screen.

Using the ABC Mode

Use the 2 abc to 9 wxyz keys to enter your text.

1. Press the key labeled with the required letter:

- Once for the first letter.
- Twice for the second letter.
- And so on.

2. To insert a space, press the 0 ± key once. To delete letters, press the C key. Press and hold down the C key to erase the letters continuously.

Note

- Refer to the table below for more information on the characters available using the keys.

Key	Characters in the order display	
	Upper Case	Lower Case
1	.,?!'"1-()@/:_	.,?!'"1-()@/:_
2 abc	A B C 2 À Â Æ Ç	a b c 2 à â æ ç
3 def	D E F 3 É È Ê Ë	d e f 3 é è ê ë
4 ghi	G H I 4 Î Ï	g h i 4 î ï
5 jkl	J K L 5	j k l 5
6 mno	M N O 6 Ñ Ô Ö Œ	m n o 6 ñ ô ö œ
7 pqrs	P Q R S 7	p q r s 7
8 tuv	T U V 8 Û	t u v 8 û
9 wxyz	W X Y Z 9 Ŵ Ŷ	w x y z 9 ŵ ŷ
0	Space 0 (long press)	Space 0 (long press)

Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the * key. Use the navigation keys to select the desired symbol and press the [OK] key.

Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keysmarked and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on thebottom line of the display just above each key indicates its current role.

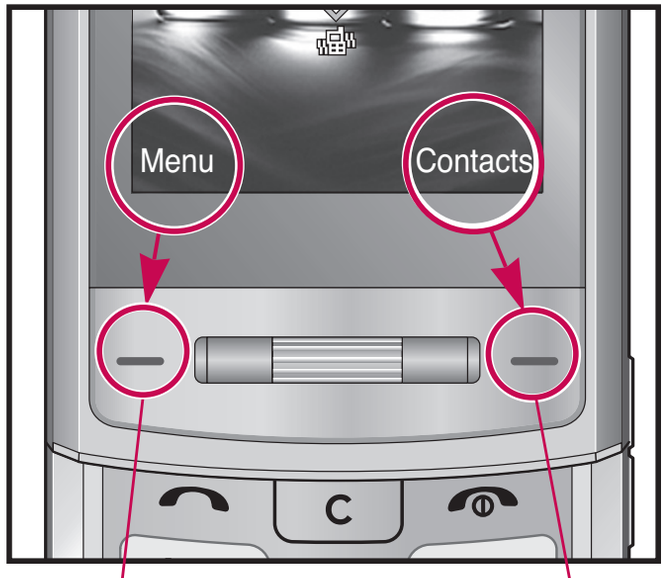

Press the left soft key to access the available Menu.

Press the right soft key to access the Contacts menu.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a Call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

Making a Second Call (Network Dependent)

You can get a number you wish to dial from the Address Book to make a second call.

Swapping Between Two Calls

To switch between two calls, press key or the left soft key, and then select Swap Call.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as Call waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting (Menu 9.5.4).

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing the left soft key .

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the key.

During a call, you can reject an incoming call by pressing the key.

Muting the Microphone

You can mute the microphone during a call by pressing the [Mute] key. The handset can be unmuted by pressing the [Unmute]. When the handset is muted, the caller cannot hear you, but you can still hear them.

DTMF tones while calling

To switch on DTMF tones while calling (e.g. to use the phone with an automatic switchboard) press the key [Options] followed by Send DTMF on. Select DTMF off to disable DTMF tones. DTMF tones are normally on.

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature. A conference call can only be set up when you have one active call and one call on hold, both calls having been answered.

Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

In-call menu

Making a Second Call

You can make a second call while currently on a call. Enter the second number and press the .

When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the key.

Setting Up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

Activate the Conference Call on Hold

To activate a conference call on hold, press the key. Alternatively press the left soft key [Options] and select Join all/Hold all calls. Other users on hold will stay connected. To return to conference call mode, press the left soft key [Options] followed by Conference call.

Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

Ending a Conference Call

Currently displayed caller from a conference call can be disconnected by pressing the key.

Menu Tree

The menu in this phone can be displayed in 2 ways. One is by list type or secondly in grid format. Please note that menu number options are different in each view.

The default setting on the phone is set to show the menu in list type, so therefore all the menu number selections throughout the manual are shown according to that setting.

The following illustration shows the available menu structure and indicates the:

- Number assigned to each menu option.
- Page where you can find the feature description.

You can go to the desired menu using the left soft key [Menu], navigation keys and the [OK] key. And you can also take a shortcut by pressing the corresponding number key of desired menu after pressing the left soft key [Menu].

1. Profiles
1.1 General
1.2 Silent
1.3 Vibrate only
1.4 Outdoor
1.5 Headset

2. web'n'walk
2.1 web'n'walk

3. Multimedia
3.1 MP3 player
3.2 Camera
3.3 Video camera
3.4 Voice recorder

4. Call history

- 4.1 All calls
- 4.2 Missed calls
- 4.3 Dialled calls
- 4.4 Received calls
- 4.5 Call duration
- 4.6 Call costs
- 4.7 Data information

5. Messaging

- 5.1 New message
- 5.2 Inbox
- 5.3 Email box
- 5.4 Drafts
- 5.5 Outbox
- 5.6 Sent
- 5.7 Listen voicemail
- 5.8 Info message
- 5.9 Templates
- 5.0 Settings

6. Contacts

- 6.1 Search
- 6.2 New contact
- 6.3 Speed dials
- 6.4 Groups
- 6.5 Copy all
- 6.6 Delete all
- 6.7 Settings
- 6.8 Information

Menu Tree

7. My stuff
7.1 Images
7.2 Sounds
7.3 Videos
7.4 Documents
7.5 Others
7.6 Games & Apps
7.7 External memory

8. Tools
8.1 Alarm clock
8.2 Calendar
8.3 t-zones
8.4 Calculator
8.5 Memo
8.6 Stop watch
8.7 Unit converter
8.8 World clock
8.9 SIM services

9. Settings
9.1 Date & Time
9.2 Languages
9.3 Display
9.4 Connectivity
9.5 Call
9.6 Security
9.7 Flight mode
9.8 Power saving
9.9 Reset default
9.0 Memory status

Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are five preset profiles: **General, Silent, Vibrate only, Outdoor and Headset**.

Each profile can be personalised. Press the left soft key [Menu] and select Profiles using up/down navigation keys.

Activate (Menu 1.X.1)

1. A list of profiles is displayed.
2. In the Profiles list, scroll to the profile you want to activate and press the left soft key [OK] or OK key.
3. Then, select Activate.

Personalise (Menu 1.X.2)

Scroll to the desired profile in the Profile list. After pressing the left soft key or the OK key, select Personalise.

The profile setting option opens. Set the option as required.

- **Call alert type:** Set the alert type for incoming calls.
- **Ring tones:** Select the desired ring tone from the list.
- **Ring volume:** Set the volume of the ringing tone.
- **Message alert type:** Set the alert type for messages.
- **Message tones:** Select the alert tone for messages.
- **Keypad tones:** Select the desired keypad tone.
- **Keypad volume:** Set the volume of keypad tone.
- **Slide tones:** Allows to set the flip tone for adjusting environment.
- **Effect sound volume:** Set the volume of effect sound.

- **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.
- **Auto answer:** This function will be activated only when your phone is connected to the handsfree kit.
  - **Off:** The phone will not answer automatically.
  - **After 5 secs:** After 5 seconds, the phone will answer automatically.
  - **After 10 secs:** After 10 seconds, the phone will answer automatically.

Note

- All profiles cannot be renamed.

web'n'walk

You can launch the mobile Internet browser and access the homepage of the mobile Internet service provided by T-Mobile.

Contact your service provider for further information.

Note

- Please note that additional cost may occur when using online services.
- User memory should have at least 32 KB space to launch the mobile Internet browser and access home page. If the user memory is less than 32 KB taken by music or picture files, you cannot launch the mobile Internet browser. In this case, create space by deleting old music, video or picture files.
- Under launching the mobile Internet browser, multitasking is limited for memory management. Therefore, you cannot use the key.

Multimedia

You can enjoy various multimedia functions on your phone such as camera, voice recorder, MP3 for your fun and convinience.

Note

- When the status of the battery indicates low, you may not use the Camera or Multimedia function.
- While using Multimedia function, the status of the battery is changeable.

MP3 player

Menu 3.1

The KE970 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone using a compatible headset or via the internal loudspeaker.

Note

- Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- **MPEG-2 Layer III**, **MPEG-2.5 Layer III:** Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.
- **AAC:** ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)
- **AAC+:** V1: (Bit rate 16~128Kbps)
  V2 : (Bit rate 16~48Kbps)
  (Sampling frequency from 8KHz to 48KHz)

Note

- KE970 doesn't support the variable bit rate of all mentioned file types. Therefore, you can't change the file from MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage. When you connect the phone to a PC using the USB cable, this will be displayed as a removable disk through Windows Explorer. If you are using Win98 SE, you will have to install the Mass storage driver for Windows 98 on CD-ROM.

Note

- You should copy MP3 to Sounds/MP3 folder. If you copy to another folder, you will not be able to view the MP3 files.
- The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.

Multimedia

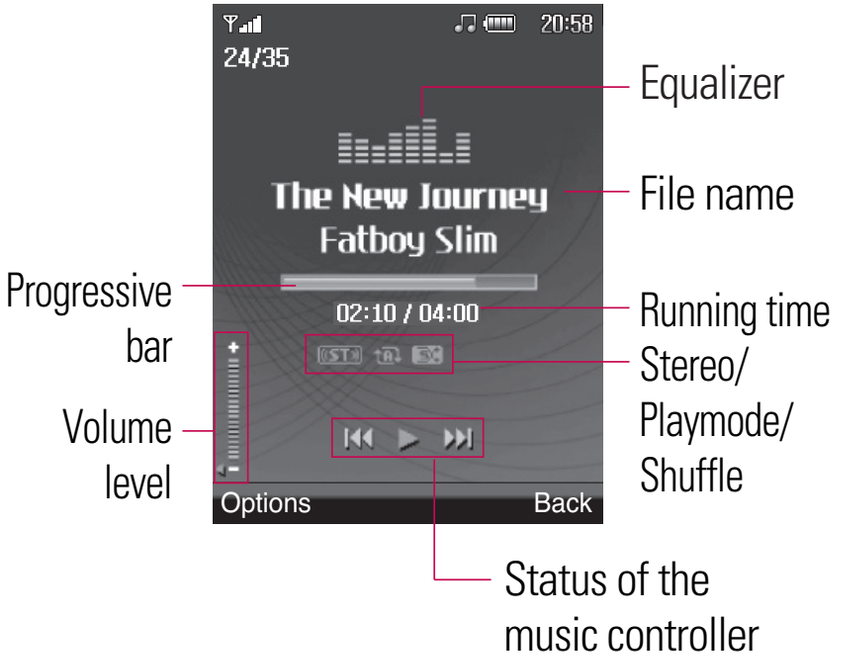

	Repeat
	Play all
	Repeat all
	Repeat one

Note

- In case that any invalid file is included in the playlist, an error message will pop and go back to the prior screen.

1. Press Multimedia menu, and then select MP3 player.
2. Press the left soft key [Options] to access the following menus.

- **Pause:** You can pause the playing MP3 file.
- **View playlist:** You can select another file on the MP3 list.
- **Set as ringtone:** You can set the current music on playing MP3 file as a ringtone

▶ **Settings**

- **Equalizer:** This menu helps you to adjust to a variety of environments when listening to music.
- **Play mode:** This menu allows to set the play mode: Repeat one, Repeat all, Play all.
- **Set shuffle:** It you select On, you can listen to the music at random.
- **Visual effect:** You can select the visual effect menus: Real spectrum, Fake. This menu allows to change the background of main LCD on playing MP3 file.

Note

▶ Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

Camera

Menu 3.2

Using the camera module built in your phone, you can take pictures or record videos. Additionally, you can send photos to other people and select photos as wallpaper.

Note

- When using the camera, power consumption increases. If this icon appears on the wallpaper, indicating low battery, recharge the battery before use.

For your convenience, rotate phone as shown below when taking picture.

1/2 Zoom in/Zoom out

3 Camera

Shutter sound or video recording sound is omitted even when setting mode, including manner mode .

- **To take a picture**

Hold down the camera button. The camera will be ready to use and you may want to rotate the screen into a horizontal position.

- To take clear pictures, press the camera button while holding the camera without any movement.
- Appropriately adjust distance to the object that you want take a picture of (more than 50 cm).
- Handle carefully since the camera is vunerable to shock and use a soft cloth when cleaning the camera lens.
- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.

- Auto Focus function is enabled when taking a picture or sticker shot. Press the camera button half way to adjust focus.

1. Hold down the in standby mode.
2. Focus on the subject to capture the image, and then press the key.
3. If you want to save it, press the key.

Note

- You can adjust the brightness by using the ↑ ↓.

- **Shot mode [ ]:** Allows you to set the shot mode from Marco, Auto focus On and Off.
- **Resolution [ ]:** Allows you to set the image size.(1600x1200), (1280x960) (640x480) and (320x240). Multishot is only available with the (320x240), (640x480) pixel resolution.
- **Quality [ ]:** Allows you to set the image quality from Normal, Fine and Super fine.
- **Flash [ ]:** Allow you to set the flash when you take a photo in dark place.
- **Self timer [ ]:** Allows you to select the delay time (Off, 3 seconds, 5 seconds, 10 seconds). Then the phone takes a photo after the specified time.
- **Save to [ ]:** You can set the space after taking a picture. (External/Phone)
- **Multi shot [ ]:** Allows to take multishot photos successively.
- **Metering [ ]:** Determines the lighting based on a little part of the subject. You can select the Centred and Combined which is to be exposed correctly.
- **Colour effect [ ]:** 4 settings are available. (Negation/Mono/Sepia/Colour)

- **White balance [ ]:** Allows you to change the settings according to the enviroment. (Fluorescent/Cloudy/Incandescent/Daylight/Auto)
- **Shutter tone [ ]:** You can set the sound when taking a picture.
- **Reset settings [ ] :** Allows you to reset the settings.

Video camera

Menu 3.3

1. Select Video camera menu.
2. Video camera settings menu is the same with Photo camera settings, except following items:

- **Mode [ ]:** Allows you to set to send a video file through MMS or General.
- **Resolution [ ]:** You may select the following resolution: 128x96, 176x144 .

Voice recorder

Menu 3.4

You can record voice memo. The following [Options] menus are available.

- **Storage**
  You can choose Phone or External memory.
- **Recording mode**
  You can choose General mode of unlimited recording or MMS mode of recording up to 30 seconds.

Record

1. Press OK to start recording. Once recording is started, the message Recording and the counter is displayed.
2. If you want to pause or resume recording, press left soft key or OK key.
3. If you want to finish recording, press right soft key [Stop].

Album

You can view the Sounds folder which lists allsound files saved in the memory.

Call history

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

All calls

Menu 4.1

You can view all lists of outgoing or incoming calls.

Missed calls

Menu 4.2

This option lets you view the last 50 unanswered calls. You can also:

- View the number if available and call it, or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Dialled calls

Menu 4.3

This option lets you view the last 50 outgoing calls (called or attempted). You can also:

- View the number if available and call it or save it in the Address Book
- Enter new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Received calls

Menu 4.4

This option lets you view the last 50 incoming calls. You can also:

- View the number if available and call it or save it in the Address Book
- Enter new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Call duration

Menu 4.5

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times.

The following timers are available:

- **Last call:** Length of the last call.
- **Dialled calls:** Length of the outgoing calls.
- **Received calls:** Length of the incoming calls.
- **All calls:** Total length of all calls made and incoming calls since the timer was last reset.

Call costs

Menu 4.6

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need to PIN2 code.

Data information

Menu 4.7

You can check the amount of data transferred over the network through the GPRS information option.

In addition, you can also view how much time you are online.

Messaging

New message Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Email, voice mail, as well as the network's service messages.

Text (Menu 5.1.1)

You can write and edit text message.

1. Enter the New messages menu by pressing the left soft key [OK].
2. If you want to write a new message, select Text.
3. To make text input easier, use T9.
4. Press [Options] to attach the followings.

Options

- **Send to:** Sends text messages.

1. Enter numbers of recipient.
2. Press ↓ key to add more recipients.
3. You can add phone numbers in the address book.
4. Press the [Option] and then press send after entering numbers.

- **Insert**

  - **Symbol:** You add special characters.
  - **Image:** You can insert the Default graphics or graphics in My pictures that are available for short messages.
  - **Sound:** You can insert sounds that are available for short messages.
  - **Default images:** You can insert Animations stored.
  - **Default sounds:** You can insert Sounds stored.
  - **Text template:** You can use Text templates already set in the phone.

- **Contacts:** You can add phone numbers or e-mail addresses in address book.
- **My business card:** You can add your Business card to the message.

- **Save to drafts:** Stores messages in Drafts.
- **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- **New T9 word:** Select the New T9 word for inputting New word into the dictionary.
- **Clear text:** You can clear text while writing SMS.
- **Exit:** If you press Exit while writing a message, you can end the writing message and back to the Message menu. The message you have written is not saved.

Multimedia (Menu 5.1.2)

You can write and edit multimedia messages, checking message size.

1. Enter the New message menu by pressing the left soft key [OK].
2. If you want to write a new message, select Multimedia.
3. You can create a new message or choose one of the multimedia message templates already made.

Maximum available file size, that can be inserted to MMS-message, is 300 kb.

Options

- **Send to:** You can send multimedia messages to multiple recipients, priorities your message, and make it sent later as well.
- **Insert:** You can add Symbol, Image, Video, Sound, New slide, Text template, Contact, Business card, Others.

Note

- All messages will be automatically saved in the outbox folder, even after a sending failure.

- **Preview:** You can preview multimedia messages you have created.
- **Save:** You can save multimedia messages To drafts or As templates
- **Edit subject:** Allows you to modify the multimedia message you have chosen.
- **Slide duration:** You can set the duration of slide of multimedia message.
- **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- **New T9 word:** Select the New T9 word for inputting New word into the dictionary.
- **Exit:** You can get back to the Message menu.

Note

- If you select a picture with a large file size (200K for example) on writing multimedia message, the loading duration will take around 10 seconds. Furthermore, you can't activate any keys during the loading time. After about 10 seconds, you should be able to write the message.

Email (Menu 5.1.3)

To send/receive an email, you should set up the email account.

1. You can input up to 20 email addresses in the To and Cc field.

   Tip: To input "@", press the * key and select "@".

2. Key in the subject of the mail and press OK.

3. After writing an email message, press the left soft key [Options]. You can access the following option menus.

- **Send to:** You can edit recipients.
- **Insert:** You can add Symbol, Text template, Contact and Signature.
- **Attachment:** You can attach file with this menu.
- **Preview:** You can preview the writing mail.
- **Save to drafts:** Select this to save the message in Drafts.
- **Edit subject:** You can edit the subject.
- **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
- **New T9 word:** Select the New T9 word menu for inputting a new word into the dictionary.
- **Clear text:** You can clear text while writing the message.
- **Exit:** If you select this while writing the message, you can exit from writing message and go back to the previous screen. The message you have written is not stored.

Note

- For each e-mail account you may save up to 40 messages (totally 200 for five accounts). In Inbox folder you may save not more than 20 messages, in Drafts and Outbox folders - 5 messages, and in Sent folder up to 10 messages. In case Drafts Outbox or Sent folder is full, and you try to save new message to one of this folders, first saved message will be automatically deleted.
- Maximum size for one sent message is 300 kb with attachments, and maximum size for one received message is 300 kb. In case you have received message with more than 5 attachments, only 5 of them will be received. Some attachment may display incorrectly.

Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in Inbox.

If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox. If the phone displays 'No space for message', you can make space of each repository as deleting messages, media and applications.

* **SIM message**

SIM message means the message exceptionally stored in SIM card. You can move this message to the phone.

For notified multimedia message, you have to wait for downloading and processing of the message.

To read a message, select one of the messages by pressing the left soft key .

- **View:** You can view the received messages.

- **Delete:** You can delete the current message.
- **Reply:** You can reply to the sender.
- **Reply to all:** You can reply to all of the sender.
- **Forward:** You can forward the selected message to another party.
- **Return call:** You can call back to the sender.
- **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- **Multi delete:** After selecting the messages you want to remove, you can delete the selected messages.
- **Delete all read:** You can delete all messages read.
- **Delete all:** You can delete all messages.

Email box

Menu 5.3

When you access this menu, you can either connect to your remote mailbox to retrieve your new email messages, or you can view the previously retrieved email messages without logging in to the email server.

You can check the saved emails, drafts, outbox, and sent emails. In the Inbox, up to 20 emails are stored.
(Outbox stores up to 5, Draftes store up to 5, Sent stores up to 10)

Drafts

Menu 5.4

Using this menu, you can preset multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- **View:** You can see the multimedia messages.
- **Edit:** Modifies the message you choose.
- **Delete:** Deletes the message you choose.
- **Information:** You can view information about the message you choose.
- **Multi delete:** After selecting the messages you want to remove, press OK and you can delete the selected messages.
- **Delete all:** Deletes all of the messages in the folder.

Outbox

Menu 5.5

This menu allows to view the message which is about to send or is failed sending.

After sending the message successfully, the message will be moved to sent box.

- **View:** You can view the message.
- **Delete:** You can delete the message.
- **Resend:** You can resend the selected message.
- **Edit:** Modifies the massage you choose.
- **Information:** You can check information of each message.
- **Multi delete:** Select and delete the selected messages.
- **Delete all:** You can delete all messages in outbox.

Sent

Menu 5.6

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

Listen voicemail

Menu 5.7

Once this menu has been selected, simply press the left soft key [OK] to listen to voice mail. You can also hold down the 1 key in standby mode to listen to voice mail.

Note

- When you receive a voice mail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

Info message (Dependent to network and subscription)

Menu 5.8

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Each type of has the number; therefore, you can contact service provider as long as you have input the certain number for the information.

When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed.

To view the message again or not in standby mode, follow the sequence shown below;

Read (Menu 5.8.1)

1. When you have received an info service message and select Read to view the message, it will be displayed on the screen. You can read another message by scrolling , or [Next].
2. The message will be shown until another message is reached.

Topics (Menu 5.8.2)

(Dependent to network and subscription)

- **View list:** You can see Info service message numbers which you added. If you press [Options], you can edit and delete info message category which you added.
- **Active list:** You can select info service message numbers in the active list. if you activate an info service number, you can receive messages sent from the number.

Templates

Menu 5.9

Text (Menu 5.9.1)

You have 6 text templates as below;

- **Please call me back.**
- **I'm late. I will be there at**
- **Where are you now?**
- **I'm on the way**
- **Urgent! Please contact.**
- **I love you**

The following options are available.

- **View:** You can see multimedia templates.
- **Edit:** Use this to write a new message or edit the selected template message from the text template list.

- **Send via**
  - **Text message:** Use this to send the selected template message by SMS.
  - **Multimedia message:** Use this to send the selected template message by MMS.
  - **Email:** This menu allows you to edit, delete or add an email account.
- **Delete:** Deletes the template.
- **New template:** Use this to create new template.
- **Delete all:** Allows you to delete all multimedia messages.

Multimedia (Menu 5.9.2)

After saving new template, you can use the following options.

- **Save:** Allows you to save new multimedia templates you created.
- **Insert:** You can add Symbol, Image, Video, Sound, New slide, Text template, Contact, Business card and Others.
- **Preview:** You can preview multimedia templates you wrote.
- **Edit subject:** Allows you to modify the multimedia message you have chosen.
- **Slide duration:** You can set the duration of slide of multimedia message.
- **T9 languages:** Select the desired language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- **Exit:** Will take you back to the Message menu.

Settings

Menu 5.0

Text message (Menu 5.0.1)

- **Message types:**

  Text, Voice, Fax, Paging, X.400, Email, ERMES

  Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.
- **Delivery report:** If you set to Yes, you can check whether your message is sent successfully.
- **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.
- **Message centre number:** If you want to send the text message, you can receive the address of SMS centre through this menu.
- **Bearer setting:** You can set the bearer setting such as GSM, GPRS.

Multimedia message (Menu 5.0.2)

- **Subject:** You can enter multimedia messages subject when this menu is on.
- **Slide duration:** Display the duration of each page when writing the message.
- **Priority:** You can set the priority of the message you choose.
- **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- **Delivery report:** If it is set to Yes in this menu, you can check whether your message is sent successfully.

- **Read report:** You can receive the report whether the receiver read the message or not.
- **Auto download:** If you select On, you receive multimedia messages automatically. If you select Off, you receive only notification message in the inbox and then you can check this notification. If you select Home network only, you receive multimedia messages depends on home network.
- **Network profile:** If you select multimedia message server, you can set URL for multimedia message server.
- **Permitted message type**

  Personal: Personal message.

  Advertisement: Commercial message.

  Information: Necessary information.

Note

- "You will be charged for sending messages, and additional charges may occur when receiving multimedia messages and emails abroad (see section Auto download on page 61). For details, please contact your service provider."

Email (Menu 5.0.3)

▶ **Email account**

This menu allows you to edit, delete or add an email account.

- **View:** You can see the Email.
- **Set as default**
- **Edit**

Account name: Account name.

Email address: Enter the email address given to you by your service provider.

My name: You can make your nickname.

Incoming mail server: Enter the POP3 address and Port number that receives your email.

User name: Enter your email ID.

Password: Enter your email password.

Outgoing mail server: Enter the SMTP address and Port number of computer that sends your email.

- **Advanced settings**

Protocol type: Choose your protocol type. (POP3/IMAP4)

Maximum receive size: View the Maximum size that you can receive mails.

Save to server: Select Yes to leave the messages on the server.

Insert signature: Select Yes to attach your signature to your email messages.

Reply email address: Email address that you can receive the reply.

Incoming port number: Allow you to edit POP3 port number.

Outgoing port number: Allow you to edit SMTP port number.

Outgoing mail authentication: when you send the mail, you can set authentication whether or not.

Outgoing server ID/password: Enter the ID and password for sending your email.

- **New account:** You can set up to 5 email accounts by selecting New account menu. Using the Edit menu, you can set the following values.
- **Delete:** Deletes the selected account from the list.
- **Delete all:** You can delete all account lists.

▸ Network profile

A profile is the network information used to connect to the Internet. There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

▸ Signature

You can make your signature.

Open the Menu

Select entry "Messaging".

Select entry 0-Settings.

Select entry 3-Email.

Select entry 1 Email account.

Now select the provider of your email account.

Yahoo, BTInternet, or AOL:

Now complete the entries in the empty fields. Do not change the data in the fields which already have data in them.

For editing, please select the desired field and press OK. When you are finished with one field you can directly scroll to the next empty field. When all fields are changed appropriately, press OK.

Email address: Enter your email address, which is used as as sending address.

My name: Enter your name, which will be shown as sender of the email.

User name: Enter your user name.

Password: Enter the password which belongs to your username.

Finally to activate your email account (by default Yahoo account is active), select your desired account and open the options submenu with the left softkey. Press 2-Set as default.

Now your email account is configured.

If your email provider is not preinstalled, please remove one of the existing entries or create a new one.

You will need to receive from your e-mail provider the information to fill out the foregoing fields and further parametres such as server address.

Note

- A charge is made each time you request to download emails. Frequent download requests can result in high cost. For details, please contact your service provider.

Voicemail number (Menu 5.0.4)

You can receive the voicemail if your network service provider supports this feature. When a new voicemail has arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

Push message (Menu 5.0.5)

You can set the option whether you will receive the message or not.

Info message (Menu 5.0.6)

- **Receive**

  Yes: If you select this menu, your phone will receive Info service messages.

  No: If you select this menu, your phone will not receive Info service messages any more.

- **Alerts**

  Yes: Your phone will beep when you have received Info service message numbers.

  No: Your phone will not beep even though you have received info service messages.

- **Language**

  You can select the language you want by pressing OK key. Then, the info service message will be shown in the language that you selected.

Contacts

Search

Menu 6.1

1. Select Search by press the left soft key [OK].
2. Enter the name that you want to search.

Note

- Instant searching is available by inputting the initial letter of the name.

3. If you want to edit, delete, copy an entry, or to add the voice to one, select left soft key [Options].

The following menu will be displayed.

- **View:** You can view each entry in details.
- **Edit:** You can edit the name, number, group, ringtone and picture by using the navigation key.
- **New message:** After you have found the number you want, you can send a message(Text/Multimedia/Email) to the selected number.
- **Send via:** You can send the data of phone book via Text message, Multimedia message, Bluetooth or Email.
- **Delete:** You can delete an entry.
- **New contact:** After selecting the place (SIM/Phone) you want to save, you can add to the phonebook list.
- **Multi delete:** Allows you to remove a number of files selected.
- **Copy to handset/SIM:** You can copy an entry from SIM to phone or from phone to SIM.
- **Main number:** If a contact has more than one number stored, select the one that you use most often. This main number will be displayed first.

New contact

Menu 6.2

You can add phonebook entry by using this function. Phone memory capacity is 1000 entries. SIM card memory capacity depends on the cellular service provider. The number of character is SIM dependent feature.

Note

- Maximum stored name and number length depends on SIM-card type.

1. Select New contact by press left soft key [OK].
2. Input a name.
3. Press ↓, then you can input a number.
4. You can set a group for the entry by pressing , .
5. You can set a ringtone and a photo for the entry by press left soft key [Options].

Speed dials

Menu 6.3

You can assign any of the keys 2 abc to 9 wxyz with a Name list entry. You can call directly by pressing this key.

1. Open the phonebook first by pressing the right soft key [Contacts] in standby mode.
2. Scroll to Speed dial, then press the left soft key [OK].
3. If you want to add speed dial, select <empty> by pressing the left soft key [Assign]. Then, you can search the name in phonebook.
4. After assigning the number as speed dial, you can change and delete the entry. You can also make a call or send a message by this number.

Groups

Menu 6.4

You can list up to the members per each group. There are 7 groups you can make lists to.

- **View members:** Shows the group members you have selected.
- **Group ringtone:** Allows you to specify ring tone for the group members' call.
- **Group icon:** Allows you to select the icon dependent on Group.
- **Add member:** You can add group members.
- **Remove member:** You can remove the member from the Group member list. But the name and the number will be remained in phonebook.
- **Remove all members:** Allows you to delete all the members in the group.
- **Rename:** You can change a group name.

Copy all

Menu 6.5

You can copy entries from SIM card memory to Phone memory and vice versa.

- **SIM to phone:** You can copy the entry from SIM Card to Phone memory.
- **Phone to SIM:** You can copy the entry from Phone memory to SIM Card.

Delete all

Menu 6.6

You can delete all entries from SIM or Phone.

Settings

Menu 6.7

1. Press the right soft [Contacts] in standby mode.
2. Scroll to Settings, then press the left soft key [OK].

- **Default memory**

  You can set the default memory from Always ask, SIM or Handset.

- **View options**

  Scroll to highlight View options, and then press the left soft key [OK].

  - **Name only:** Set the phonebook list with displaying only name.
  - **With picture:** Set the phonebook list with the information of character and picture.

Information

Menu 6.8

- **Service dial numbers**

  Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

- **Own numbers (SIM dependent)**

  You can save and check your own number in SIM card.

- **Business card**

  This option allows you to create your own business card featuring Name and an mobile phone number.

  To create a new business card, press the left soft key [New] and enter the information into the fields.

  If you want to edit, delete or to send a business card, select left soft key [options].

My stuff

Images

Menu 7.1

Show the list of JPG files at My media\Photos in Multimedia memory.

- **View:** You can see the JPG file when pressing OK key or selecting View menu of Option menus.
- **Delete:** Delete a file.
- **Set as**
  - **Full image wallpaper:** Currently selected image can be set as a wallpaper.
  - **Landscape wallpaper:** Currently selected image can be displayed horizontally as a wallpaper.
  - **Picture ID:** Currently selected image can be set as a Picture ID.
- **Send via:** Allows you to send a image through MMS/Bluetooth/Email.
- **File**
  - **Rename:** Change the file name of selected file. You can not change the extension of file.

Note

- You can't use the following characters \ / : * ? " < > |
  - **Move to folder:** Move the selected file to the folder.
  - **Move to external memory:** Move the selected file to the Multimedia memory/external memory.

Warning!

If you remove the external memory during data transfer, it can seriously damage the phone.

  - **Copy to external memory:** Copy the selected file to the Multimedia memory/external memory.

Warning!

If you remove the external memory during data transfer, it can seriously damage the phone.

- **Information:** Show the file information.

- **Print via Bluetooth:** Most pictures that you've taken in the camera mode and downloaded through WAP can be transmitted via Bluetooth to a printer.
- **Slide show**

  You can view a slide show of the files you stored.
- **New folder:** You can create a new folder.
- **Multi delete:** You can remove a number of files you selected.
- **Delete all:** Delete all files in the list.
- **List view:** Allows you to set the view type.

Sounds

Menu 7.2

Show the list of MP3, MP4, AAC, M4A files at My media\Music in Multimedia memory.

- **Play:** You can play the MP3 file when pressing OK key or selecting Play menu of Option menu.
- **Set as:** Currently selected sound can be set as a Ringtone/Ringtone ID.
- **File info:** Show the file information.

Videos

Menu 7.3

Shows the list of 3GP, 3G2 files at My media\Videos in Multimedia memory. Supported file types are 3gp files, that are encoded with MPEG4 and h.263 video-codecs and AMR audio-codec.

- **Play:** You can play the video file when pressing OK key or selecting Play menu of Option menus.
- **Delete:** Delete a file.
- **Send via:** Send the selected file to another device via Multimedia message, Bluetooth or Email.

Note

- You may send files via Bluetooth only if they are stored in phone memory, not on memory card. To send file from external memory, please, firstly copy it to internal phone memory.

- **File:** You can save/move/copy the folder or external memory.

  - **Rename:** Change the file name of selected file.
    The maximum length of characters is 36. And you can not change the extension of file.

Warning!

You can't use the following characters \/: * ? " < > |

- **Move to folder:** Move the selected file to the folder.
- **Move to external memory:** Move the selected file to the Multimedia memory\external memory

Warning!

If you remove the external memory during data transfer it will cause serious damage to your phone.

- **Copy to external memory:** Copy the selected file to the Multimedia memory\external memory.
- **Information:** Shows the file information.

- **New folder:** You can create a new folder.
- **Multi delete:** You can remove a number of files you have selected.
- **Delete all:** Delete all the files in the list.

Documents

Menu 7.4

This menu enables you to view document files (txt, ppt, pdf, doc and excel).

You can use the following Options menu

- **View:** You can see the document file when pressing the OK key or selecting View menu of Option menus.
- **Information:** Show the file information.

Others

Menu 7.5

Show the list of files in My media\Others in the Multimedia memory.

Note

- You may send files via Bluetooth only if they are stored in the phone memory, not on the memory card. To send a file from the external memory you must first copy it to the internal phone memory.

Note

- When you connect the phone with a PC via Bluetooth, you can both send and receive files to the Music and Video folders. You can copy any file type to the Others. You can only receive files from the Photos, Sounds, and Images folders. You can only view or play files in the Others folder if the file types are supported. When connecting with a PC via USB cable you will only see the following folders in the internal memory: Images, Sounds, Videos, and Others. You can see all folders in the external memory.

Games & Apps Menu 7.6

In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option.

External memory Menu 7.7

This menu allows you to view Images, Sounds, Videos, Documents and Others in memory card. If the external memory is not available, a pop up message “Please insert external memory” is displayed.

Note

- The SIM card must be installed in order for the phone to be recognized as a removable disk.

New Fantastic LG

The KE970 works as a mass storage device. If you connect the USB cable, you can use the phone as a Removable Disk. You can download MP3 files, photos, videos, text files etc. this gives you fast access from the PC to phone, by just connecting the USB cable.

Note

- MASS STORAGE function will only work when the phone is in idle mode.
- DO NOT remove the cable while you are downloading files. After you download the files, you need to click “Safely Remove Hardware” on the PC and then disconnect the cable.

My stuff

- When you copy a file to the removable disk, you can see a message on the display "transferring". It means MASS STORAGE is working and data is being transferred. While "transferring", do not disconnect the cable. If you disconnect the cable while "transferring", data will be lost or corrupted and possibly damage the phone.
- If you receive a call when using as MASS STORAGE the call will be rejected, but after you remove the cable you will be able to see the missed call.

Alarm clock

Menu 8.1

You can set the alarm clock to go off at a specified time.

1. Select On and enter the alarm time you want.
2. Select the repeat period: Once, Mon-Fri, Mon-Sat, Sat-Wed, Sat-Thu, Everyday.
3. Select the alarm tone you want and press [Set].

Calendar

Menu 8.2

When you enter this menu a calendar will show up. On top of the screen there are sections for date. Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see marked date in the calendar, it means that there is a schedule or memo that day. This function helps to remind you of your schedule and memo. The phone will sound an alarm tone if you set this for the note.

To change the day, month, and year.

Key	Description
1 , 3 def	Yearly
7 pqrs , 9 wxyz	Monthly
↑ , ↓	Weekly
,	Daily

In the scheduler mode, press left soft key [Options] as follows;

- **View**

  View all schedules and memo for the chosen day.

  Use ↑, ↓ to browse through the note lists.

  If you want to view the note in detail, press left soft key [OK]. Press left soft key [Options] to View, Delete, New schedule, Send via Text message/Multimedia message/Bluetooth/Email, Edit, Calendar, Scheduler tone, All schedules, Go to date, Multi delete and Delete all.

- **New schedule**

  Allows you to add new schedule and memo for the chosen day.

  You can store up to 100 notes. Input the subject and then press left soft key [OK].

  You enter the appropriate information in the follow section; Time, Repeat and Alarm.

- **Scheduler tone**

  You can set the alarm tone of each chosen date.

- **All schedules**

  View all schedules and memo for the chosen day.
  Use ↑, ↓ to browse through the note lists. If you set alarm for the note, the alarm icon is displayed.

- **Go to date**

  You can go to the chosen date directly.

- **Delete old**

  You can delete the past schedule that you have already been notified of.

- **Delete all**

  You can delete all notes.

t-zones

Menu 8.3

With t-zones, you can access various WAP (Wireless Application Protocol) services for downloading e.g. ringtones, wallpapers, videos, games and applications. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Once connected, the t-zones start-page is displayed. To exit the browser at any time, press the ( ) key. The phone will return to the idle menu.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
	Scrolls each line of the content area
	Returns to the previous page
	Selects options and confirms actions

Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

Note

- The WAP browser menus may vary, depending on your browser version.

Home (Menu 8.3.1)

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks (Menu 8.3.2)

This menu allows you to store the URL of favourite web pages for easy access at a later time.

To create a bookmark

1. Press the left soft key [Options].
2. Select Add new and press the OK key.
3. After entering the desired URL and title, press the OK key.

After selecting a desired bookmark, the following options are available.

- **Connect:** Connects to the selected bookmark.
- **View:** You can see the selected bookmark.
- **Edit:** You can edit the URL and/or the title of the selected bookmark.
- **New bookmark:** Select this to create a new bookmark.
- **Send URL via:** Sends the selected bookmark via Text/Multimedia message and Email.

Go to URL (Menu 8.3.3)

You can connect directly to the site you want. After entering a specific URL, press the OK key.

History (Menu 8.3.4)

This menu will shows the recent browsing pages.

Settings (Menu 8.3.5)

You can set the profile, cache and security related to internet service.

Network profiles (Menu 8.3.5.1)

A profile is the network information used to connect to the Internet.

There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

Each profile has submenus as follows:

- **Activate:** Activates the selected profile.
- **View:** You can see the selected profile.
- **Edit:** You can edit the selected profile.
- **New profile:** You can add a new profile.
- **Delete:** Deletes the selected profile from the list.
- **Delete all:** Deletes all profile from the list.
- **Reset all:** Allows you to reset all profiles.

Cache (Menu 8.3.5.2)

The information or services you have accessed are saved in the cache memory of the phone.

Note

- A cache is a buffer memory, which is used to save data temporarily.

Cookies (Menu 8.3.5.3)

The information or services you have accessed are saved in the cache memory of the phone.

Security certificates (Menu 8.3.5.4)

You can see the list of personal. Certificates that have been stored in your phone.

Information (Menu 8.3.6)

You can view the information of WAP browser version.

Calculator Menu 8.4

This contains the standard functions such as +, -, x, ÷ : Addition, Subtraction, Multiplication, and Division.

Furthermore, you can use the various function of calculator such as +/-, sin, cos, tan, log, ln, exp, sqrt, deg, rad.

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press key to view the result.

5. To input the decimal number, press * key.
6. To end Calculator, press the right soft key [Back].

Memo

Menu 8.5

1. Select the Memo by pressing the left soft key [OK].
2. If the entry is empty, press the left soft key [New].
3. Input the memo and then press left soft key [Options] > [Save].

Note

- If you want to change the text input mode, press the # in order.

Stop watch

Menu 8.6

1. Press [Start] to take time and record the lap time by pressing [Lap].
2. Press [Stop] to ascertain the record of lap time.
3. Press [Reset] to default condition.

Unit converter

Menu 8.7

This converts any measurement into a unit you want. There are 7 types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume and Velocity.

1. You can select one of unit types by pressing [OK] key.
2. Select the unit you want to convert by pressing ↑, ↓. It's impossible to input "-" symbol in unit converter.

3. Select the standard value by using , .

World clock

Menu 8.8

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world, using the left/right navigation keys and left soft key [Zoom in].

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys and left soft key [Zoom in] one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press [OK] key.

SIM services

Menu 8.9

This menu depends on SIM and the network services.

Date & Time Menu 9.1

You can set functions relating to the date and time.

Set date (Menu 9.1.1)

You can enter the current date.

Date format (Menu 9.1.2)

You can set the Date format such as YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY.

(D: Day / M: Month / Y: Year)

Set time (Menu 9.1.3)

You can enter the current time.

Time format (Menu 9.1.4)

Your can set the time format between 24 hours and 12 hours.

Auto update (Menu 9.1.5)

Select On, the phone will automatically update the data and time.

Languages Menu 9.2

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Display Menu 9.3

Wallpaper (Menu 9.3.1)

You can select the background pictures in standby mode.

Backlight timer (Menu 9.3.2)

You can set the light-up duration of the display.
(Off/10 secs/20 secs/30 secs/60 secs)

Brightness (Menu 9.3.3)

You can set the brightness of LCD: 100%, 80%, 60%, 40%

Home screen shortcut (Menu 9.3.4)

Selecting On displays the functionalities of 4 Navigation keys and Menu key as pictures on the middle of the idle window. (Profiles/Messaging/ Favourites/Contacts)

Menu style (Menu 9.3.5)

Your phone provides you with Grid and List menu themes. Set the menu style by scrolling and pressing the left soft key [OK].

Dialing style (Menu 9.3.6)

Your phone provides you with four dialing styles.
(Color style/Beads style/Digital style/Sketchbook style)

Standby text (Menu 9.3.7)

If you select On, you can edit the text which is displayed in standby mode.

Network name (Menu 9.3.8)

If this function is activated, network name will be displayed on LCD.

Connectivity Menu 9.4

Bluetooth (Menu 9.4.1)

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

Note

- If you use LG PC Sync via Bluetooth, you can exchange the data only within phonebook
- When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.
- Depending on the file type, it will be stored in the following folders:
  - **Video** (**.3gp, mp4**)**:** Videos folder
  - **Image** (**.bmp, gif, jpg, png**)**:** Images folder
  - **Sound** (**.amr, wav, aac**)**:** Sounds folder
  - **MP3** (**.mp3**)**:** Sounds/MP3 folder
  - **Other files** (**.txt, html**)**:** Others folder

- **Bluetooth on/off**

  You can activate or cancel the Bluetooth function.

- **Device list**

  You can view all devices which your KE970 is already paired to. If you enter Paired devices, you access the options

  - **Connect / Disconnect:** After pairing with headset or stereo headset, you should connect with those devices. Then you can use those devices.

- **Add new:** Allows to search new Bluetooth devices and add them to your phone's list of paired devices. When you select Add new your handset will start to search for Bluetooth devices within range. Once the device you wish to pair appears on the list press the right soft key [Stop]. Scroll to the desired device and press the left soft key [Pair]. You will then be asked to enter a passcode. The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is pre-determined by the manufacturer of the device you are trying to pair with. Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place.
- **Rename:** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.
- **Set as authorised/Set as unauthorised:** Allows you to set an authorised connection between each Bluetooth device. For example if you regularly use a Bluetooth headset with your phone then setting the connection as authorised will mean the headset will automatically connect to the handset each time the headset is powered on.
- **Remove:** Allows to delete a paired Bluetooth device.
- **Remove all:** Allows to delete all a paired Bluetooth devices.

▶ **Bluetooth settings**

- **My visibility:** This indicates whether or not your handset will be visible to other Bluetooth devices.

- **My name:** You can set the name of Bluetooth device. The default name is LG KE970.
- **My address:** You can view the address of your Bluetooth device.

Network (Menu 9.4.2)

You can select a network which will be registered either automatically or manually.

Network selection (Menu 9.4.2.1)

Usually, the network selection is set to Automatic.

- **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected "Automatic", the phone will be set to "Automatic" even though the power is off and on.
- **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.
- **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

GPRS attach (Menu 9.4.2.2)

You can set GPRS service depending on various situations.

- **Power on**

  If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

- **When needed**

  If you select this menu, the GPRS connection is established when you connect a WAP or application service and closed when you end the WAP or application connection.

Network profile (Menu 9.4.2.3)

- **Data connections**

  - **Name:** You can type the network name.
  - **Bearer:** You can set the bearer data service.
    1 Data/2 GPRS

  <Data settings>
  Appears only if you select Data Settings as a Bearer/service.

  - **Dial number:** Enter the telephone number to dial to access your WAP gateway.
  - **User ID:** The users identity for your dial-up server
    (and NOT the WAP gateway).
  - **Password:** The password required by your dial-up server (and NOT the WAP gateway) to identify you.
  - **Call type:** Select the type of data call; Analogue or Digital (ISDN).

- **Call speed:** The speed of your data connection; 9600 or 14400 (Depends on Operator)
- **Linger time:** You need to enter timeout period.
  After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.
- **Primary server:** Input the IP address of the primary DNS server you access.
- **Secondary server:** Input the IP address of the secondary DNS server you access.

<GPRS settings>

The service settings are only available when GPRS is chosen as a bearer service.

- **APN:** Input the APN of the GPRS.
- **User ID:** The users identify for your APN server.
- **Password:** The password required by your APN server.
- **Primary server:** Input the IP address of the primary DNS server you access.
- **Secondary server:** Input the IP address of the secondary DNS server you access.

USB connection (Menu 9.4.3)

You can choose one mode of Data service and Mass storage.

When you have finished using the phone memory, click Exit and take the following steps.

> Caution
>
> ▶ Before you remove the cable, it is necessary that you click Exit. Or, the integrity of transferred data is not guaranteed.

1. Click on the notification area. [Unplug or Eject Hardware]

2. Select USB Mass Storage Device, click on Stop.
   The following message will appear: "The 'USB Mass Storage Device' device can now be safely removed from the system"
3. Then remove the cable.

Call Menu 9.5

You can set the menu relevant to a call by pressing [Select] in the Setting menu.

Call divert (Menu 9.5.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- **All voice calls**

  Diverts voice calls unconditionally.

- **If busy**

  Diverts voice calls when the phone is in use.

- **If no reply**

  Diverts voice calls which you do not answer.

- **If out of reach**

  Diverts voice calls when the phone is switched off or out of coverage.

- **All data calls**

  Diverts to a number with a PC connection unconditionally.

- **All fax calls**

  Diverts to a number with a fax connection unconditionally.

- **Cancel all**

  Cancels all call divert service.

The submenus

Call divert menus have the submenus shown below.

- **Activate**

  Activate the corresponding service.

  To voice mailbox

  Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

  To other number

  Inputs the number for diverting.

  To favourite number

  You can check recent 5 diverted numbers.

- **Cancel**

  Deactivate the corresponding service.

- **View status**

  View the status of the corresponding service.

Answer mode (Menu 9.5.2)

- **Slide open**

  If you select this menu, you can receive an incoming call when you open the slide.

- **Any key**

  If you select this menu, you can receive a call by pressing any key except [End] key.

- **Send key only**

  If you select this menu, you can receive a call by only pressing [Send] key.

Send my number (Menu 9.5.3)

(network and subscription dependent)

- **Set by network**

  If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

- **On**

  You can send your phone number to another party.
  Your phone number will be shown on the receiver's phone.

- **Off**

  Your phone number will not be shown.

Call waiting (Menu9.5.4)

(network dependent)

- **Activate**

  If you select Activate, you can accept a waiting (receiving) call.

- **Cancel**

  If you select Cancel, you cannot recognize the waiting (receiving) call.

- **View status**

  Shows the status of Call waiting.

Minute minder (Menu 9.5.5)

If you select On, you can check the call duration by a beep sound given every minute during a call.

Auto redial (Menu 9.5.6)

- **On**

  When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

- **Off**

  Your phone will not make any attempts to redial when the original call has not connected.

Send DTMF (Menu 9.5.7)

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

Security

Menu 9.6

PIN code request (Menu 9.6.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press [OK].
2. Set On/Off.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Phone lock (Menu 9.6.2)

You can use a security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to When switch on.

If you set phone lock to When SIM changed, your phone will request security code only when you change your SIM card.

Call barring (Menu 9.6.3)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- **All outgoing**

  The barring service for all outgoing calls.

- **Outgoing international**

  The barring service for all outgoing international calls.

- **O/G international except home country**

  The barring service for all international outgoing calls except home network.

- **All incoming**

  The barring service for all incoming calls.

- **Incoming when abroad**

  The barring service for all incoming calls when roaming.

- **Cancel all barrings**

  You can cancel all barring services.

- **Change password**

  You can change the password for Call Barring Service.

The submenus:

- **Activate**

  Allows to request the network to set call restriction on.

- **Cancel**

  Set the selected call restriction off.

- **View status**

  View the status whether the calls are barred or not.

Fixed dial number (Menu 9.6.4)

(SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

- **On**

  You can restrict your outgoing calls to selected phone numbers.

- **Off**

  You can cancel fixed dialling function.

- **List view**

  You can view the number list saved as Fixed dial number.

Change codes (Menu 9.6.5)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes: **Security code**, **PIN1 code**, **PIN2 code**.

1. If you want to change the Security code/PIN1/ PIN2 code input your original code, and then press [OK].
2. Input new Security code/PIN/PIN2 code and verify them.

Flight mode

Menu 9.7

This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

If you set the flight mode on, the icon will be displayed on the screen instead of the network signal icon.

- **On:** You cannot make (or receive) any calls, including emergency calls, or use other features that require network coverage
- **Off:** You can deactivate the flight mode and restart your handset to access the network.

Power saving

Menu 9.8

If you set On, you can save the power when you don't use the phone.

Reset default

Menu 9.9

You can initialize all factory defaults. You will need Security code to activate this function.

Memory status

Menu 9.0

You can check free space and memory usage of each repository, Internal memory and Multimedia memory. You can go to each repository menu.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery

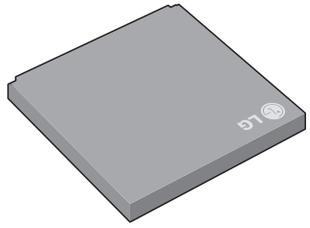

Travel Adapter

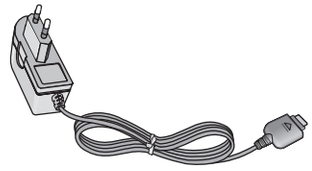

This charger allows you to charge the battery while away from home or your office.

.

Hands free earmicrophone and music player controller combo

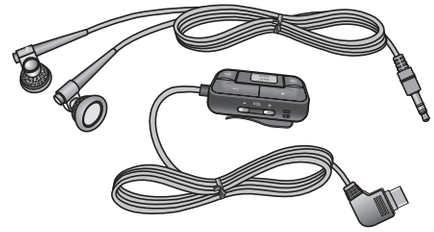

- **Stereo headset**
- **Controller:** Answer & End button, music player control, volume control, Hold button and microphone.

Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquires.

Technical data

General

Product name: KE970

System: GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max: +55°C

Min: -10°C

Q&A

Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.

Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press .

Q Connection is poor or is not audible in certain areas.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q Connection is poor even when established.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic my affect the ability to connect, or the stability of the call.

Q LCD does not turn on.

A Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

Q An echo can be heard during connection with a certain telephone in a certain area.

A It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

Q&A

Q The phone gets warm.

A During long calls, or if games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.

Q The bell does not ring, or lamp or LCD blinks only.

A The phone is set to 'Vibrate' or 'Silent' in the Profiles menu. Please select 'Normal' or 'Loud/.

Q Standby duration of the phone gradually becomes shorter.

A Batteries have a limited life. When the battery lasts for half its original time, it requires replacement.
Only use authorised replacement parts.

Q Usage time of battery becomes shorter.

A If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.

Q No number is dialled when you recall a phonebook entry.

A Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.

Q You cannot be contacted.

A Is your phone switched on (pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?

Q I cannot find the lock, PIN, or PUK code, or password?

A The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the

feature on your mobile phone, here are a few definitions.

Call Barring

Ability to restrict outgoing and incoming calls.

Call Divert

Ability to reroute calls to another number.

Call waiting

Ability to inform users that they have an incoming call when engaged on another call.

GPRS (General Packet Radio Service)

GPRS guaranties continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java™

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.

Calling Line Identification Services (Caller ID)

Service allowing subscribers to view or block the telephone numbers of callers.

MMS (Multimedia Message Service)

A message service for the handset environment, standardised by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)-it provides automatic, immediatedelivery of user-created content from phone to phone numbers, thus the traffic goes from phone to phone. MMS also provides support for e-mail addressing, so that messages can also be sent by email. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and later also video clips and presentation information.

MP3

Moving Picture Experts Group Layer-3 Audio. A file format to provide high-quality audio whose quality is equal to that of CD. MP3 is a digital audio standard developed by MPEG, or Moving Picture Experts Group and is widely used for digital audio files.

Glossary

MPEG4

Motion Picture Experts Group 4. A digital video standard developed by MPEG or Moving Picture Experts Group. MPEG4 compresses video data so that a large video file can be transmitted, and saved more easily. MPEG4 is suitable especially for mobile environment.

Multimedia

Multimedia means media that include various media data such as voice, character string, image, and video data. Currently, the meaning of multimedia includes services provided through multimedia.

Roaming

Use of your phone when you are outside your home area (when traveling for example).

SIM (Subscriber Identification Module)

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited or sent.

SMTP

Simple Mail Transfer Protocol. A protocol to transfer e-mails between computers over the Internet. SMTP defines the format of control messages between computers, and interaction procedures between them to send e-mails.

Sync

Sync means synchronizing PIM (Personal Information Management) data such as contact information, schedule, to-do, and memo with a PC or an external server.

USB

Universal Serial Bus. A bus type interface that provides fast and flexible connection between devices and computer.

Voice mail

Computerised answering service that automatically answers your calls when you are not available, plays a greeting and records a message.

Index

A

Accessories 99
Add Member 68
Address Book 25
Adjusting the Volume 24
Alarm Clock 77
All Calls 47
Answering a Call 24
Answer Mode 93
Auto Redial 94

B

Backlight Timer 85
Battery 16
Bearer Setting 60
Business Card 69

C

Calculator 82
Calendar 77
Caller Groups 37
Call Waiting 94
Cancel All 92
Clear key 13
Conference Calls 31

D

Data Call 90
Display screen 23,24
Display Information 16

E

End key..... 13

Ending a Call 23

Entering Text 25

F

Fixed Dial Number 97

G

Games & Apps 75

Go to URL 80

GPRS Attach 90

Group Icon 68

Group Ringtone 68

H

Headset 17,37

I

Inbox 54

In-Call Menu 30

L

Languages 85

Last Call 48

Lower Case 28

M

Making a Call 23

Making International Calls 23

Menu Tree 34

Microphone 12,31

Minute Minder 94

Muting the Microphone 31

Index

N

Navigation key 12,23

Network Profile 63,90

O

Outbox 55,56

P

Private Call 33

R

Received Calls 48

S

Security code 95,97

Send key 13,23

Send My Number 93

Sent 57

Service Dial Numbers 69

Scheduler Tone 78

Side keys 14,24

Signal Strength 12,24

T

Templates 58

Text 50

Time Format 83

Travel Adapter 20,99

t-zones 79

U

Unit Converter 83

Upper Case 28

W

Wallpaper 70,85
WAP Browser 79
web'n'walk 39
World Clock 84

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20,Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KE970

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name: Jin Seog, Kim / Director

Issued Date: 21. DEC. 2006



Signature of representative

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Memo

Memo