اردو
ENGLISH

LG
Life's Good

PRINTED WITH SOY INK™

CE0168

رہنمائے صارف

LG-T310i

www.lg.com

P/N : MMBB0390445 (1.0)

LG
Life's Good

ENGLISH
اردو

USER GUIDE

LG-T310i

PRINTED WITH SOY INK™

CE0168

P/N : MMBB0390445 (1.0)

www.lg.com

LG-T310i_PAK_Pakistan_Cover_1.0_1103_CS3.indd 1 2010.11.3 2:54:3 PM

Bluetooth QD ID B016848

LG-T310i User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T310i has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 0.961 W/kg (10g) and when worn on the body is 0.974 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR

G-T310i_PAK_E_1.0_1103.indd 2 2010.11.3 2:23:53 PM

limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

⚠ **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

G-T310i_PAK_E_1.0_1103.indd 3 2010.11.3 2:23:53 PM

Guidelines for safe and efficient use

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

G-T310i_PAK_E_1.0_1103.indd 4 2010.11.3 2:23:53 PM

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound and pressure from earphones can causing hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

G-T310i_PAK_E_1.0_1103.indd 5 2010.11.3 2:23:54 PM

Guidelines for safe and efficient use

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

G-T310i_PAK_E_1.0_1103.indd 6 2010.11.3 2:23:54 PM

- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

G-T310i_PAK_E_1.0_1103.indd 7 2010.11.3 2:23:54 PM

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!
The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.

1 Remove the back cover.
2 Lift battery away.
3 Insert the SIM card.
4 Insert the battery pack.
5 Attach the back cover.
6 Charge the battery.

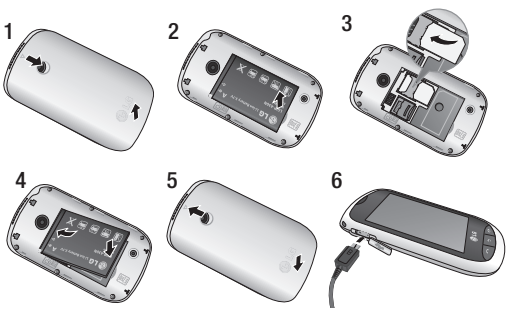

G-T310i_PAK_E_1.0_1103.indd 8 2010.11.3 2:23:58 PM

Phone Components

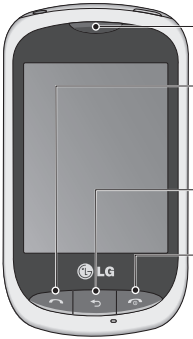

Earpiece

Call key
Dials a phone number and answers incoming calls.

Clear key
Go back to a previous screen.

End key

Volume keys

- **When the screen is at the Home screen:** Ring tone and touch tone volume.
- **During a call:** Earpiece volume.
- **Down volume key:** Press and hold to activate/ deactivate Silent mode.

Power/Lock key

- Short press to turn on/off the screen.
- Long press for power on/off.

Handsfree or Stereo earphone connector

G-T310i_PAK_E_1.0_1103.indd 9 2010.11.3 2:23:59 PM

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T310i is not in use, it will return to the lock screen.

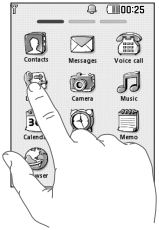

Control the touch screen

The controls on the LG-T310i touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.

Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

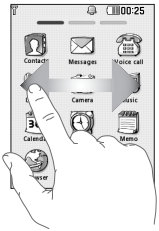

G-T310i_PAK_E_1.0_1103.indd 10 2010.11.3 2:24:0 PM

Your home screen

You can drag and click what you need right away in all home screen types.

Active

Widget home screen - When you touch on the bottom left of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot.

Active

Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.

G-T310i_PAK_E_1.0_1103.indd 11 2010.11.3 2:24:0 PM

Your menu screen

You can drag from side to side to scroll what you need right away in all menu screen. To swap between the menu screens just wipe quickly over the display from left to right, or right to left.

Screen 1

You can open Contacts, Messages, Voice call, Logs, Camera, Music, Calendar, Alarms, Memo, Browser, Games and apps and Settings modules from this screen.

Screen 2

You can open E-mail, SNS, Google search, My stuff, Messanger, Gallery, FM Radio, Voice recorder, Tasks, Profiles, Wifi and Bluetooth modules from this screen.

Screen 3

You can open World clock, Calculator, Unit converter, Stopwatch, Date finder, STK (if supported by network) modules from this screen.

G-T310i_PAK_E_1.0_1103.indd 12 2010.11.3 2:24:0 PM

Calls

Making a Call

1 Touch to open the keypad.

2 Key in the number using the keypad.

3 Touch to initiate the call.

TIP! To enter + for making an international call, press and hold 0+.

Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

1 From the home screen touch to open the **Contacts**.

2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.

4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch to initiate the call to the default number.

Answering and rejecting a call

When your phone rings, press key to answer the call.

To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

G-T310i_PAK_E_1.0_1103.indd 13 2010.11.3 2:24:1 PM

Changing the common call setting

1 Touch **Call settings** in the **Settings** menu.

2 Scroll and touch **Common settings**.

- **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers and All unknown numbers.
- **Send my number** - Choose whether to display your number on an outgoing call.
- **Auto-redial** - Slide the switch left for ON or right for OFF.
- **Answer mode**

  Press send key: Allows you to only answer an incoming call by pressing the key.

  Press any key: Allows you to answer an incoming call by pressing any key, except the key.
- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- **Save new number** - Select ON or OFF to save a new number.

Contacts

Searching for a contact

1 Touch **Contacts**.

2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

G-T310i_PAK_E_1.0_1103.indd 14 2010.11.3 2:24:1 PM

Adding a new contact

1 Touch Contacts and touch Add.

2 Choose whether to save the contact to your **Internal memory** or **SIM**.

3 Enter your first and last name.

4 You can enter up to five different numbers per contact.

5 Add an email addresses. You can enter up to two different email addresses per contact.

6 Assign the contact to one or more groups.

7 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key** and touch **Settings**.

- **Display name** - Choose whether to display the first or last name of a contact first.
- **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts.

G-T310i_PAK_E_1.0_1103.indd 15 2010.11.3 2:24:2 PM

Messaging

Your LG-T310i combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.

2 Touch **Insert** to add an image, video, sound, template and so on.

3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch to select a contact. You can even add multiple contacts.

4 Touch **Send** when ready.

> ⚠ **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering Text

You can choose your input method by tapping and **Input method**.

Touch T9 to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to 123 @#& change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T310i will convert your handwriting into your message.

Setting up your email

Touch **E-mail** in **Application** screen.

If the email account is not set up, start the email set up wizard and finish it.

G-T310i_PAK_E_1.0_1103.indd 16 2010.11.3 2:24:2 PM

You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

G-T310i_PAK_E_1.0_1103.indd 17 2010.11.3 2:24:2 PM

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment - Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

Social network services (SNS)

Your LG-T310i has SNS that lets you enjoy and manage your social network.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and upload the photo by touching **Album > Upload Photo.**

Friends: Search your friends in facebook by selecting Search tap.

Message: You can see the Inbox/Sent folder, and write a SN message.

G-T310i_PAK_E_1.0_1103.indd 18 2010.11.3 2:24:2 PM

Camera

Taking a quick photo

1 Touch **Camera** menu.

2 When the camera has focused on your subject, touch the on the right-center of the screen to take a photo.

> **TIP:** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .

Send - Touch to send the photo as a **Message**, **Email** or via **Bluetooth**.

Set as - Touch to set as Homescreen wallpaper, Lockscreen wallpaper, Contacts image, Incoming call image, Outgoing call image, Startup image and Shut down image.

Rename - Touch to rename the photo.

Edit - Touch to edit the photo.

Touch to delete the image.

Touch to take another photo immediately.

Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch to open all advanced settings options.

After selecting the option, touch the **OK** button.

G-T310i_PAK_E_1.0_1103.indd 19 2010.11.3 2:24:2 PM

Size - Change the size of the photo to save memory

White balance - Choose between **Auto, Incandescent, Sunny, Fluorescent**, and **Cloudy**.

Colour effect - Choose a color tone for your new photo.

Continuous shot - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

Night mode - Useful to user in dark places.

Image quality - Choose between **Super fine, Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Hide icons - Choose the camera setting icons to hide manually or automatically.

Show captured image - Choose On to check the picture you took right away.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose between **Off, Simple cross**, or **Trisection**.

Reset settings - Restore all camera default settings.

G-T310i_PAK_E_1.0_1103.indd 20 2010.11.3 2:24:3 PM

Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

1 Holding the phone horizontally, point the lens towards the subject of the video.

2 Press the red dot .

3 ● **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.

4 To pause the video, touch and resume by selecting .

5 Touch on screen to stop video recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides.

 Touch to play the video.

The following options are available.

Touch .

Send - Touch to send the video as a **Message**, **Email** or via **Bluetooth**.

Rename - Touch to rename the video.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

G-T310i_PAK_E_1.0_1103.indd 21 2010.11.3 2:24:3 PM

Using the advanced settings

From the viewfinder, touch ⚙ to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

Colour Effect - Choose a color tone to use for your new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto, Incandescent, Sunny, Fluorescent**, and **Cloudy**.

Quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Audio recording - Choose Mute to record a video without sound.

Hide icons - Select whether to hide the icons in the camera menu automatically or manually.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

G-T310i_PAK_E_1.0_1103.indd 22 2010.11.3 2:24:3 PM

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

1. Make sure both devices have Bluetooth switched on and are connected to each other.
2. Select the music file on the other device and select send via Bluetooth.
3. When the file is sent, you will have to accept it on your phone by touching **Yes**.
4. The file should appear in **Music** > **All tracks**.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

G-T310i_PAK_E_1.0_1103.indd 23 2010.11.3 2:24:3 PM

Games and Applications

You can download new games and applications to your phone to keep you enjoy.

FM Radio

Your LG-T310i has an FM radio feature so you can tune into your favourite stations to listen on the move.

You can listen to the radio without headphones. It you want to attach headphones, insert them into the headphone socket.

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

1 Scroll and touch **FM radio**, and touch ▤.

2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

Application

Adding an event to your calendar

1 Touch **Calendar**.

2 Select the date you would like to add an event to.

G-T310i_PAK_E_1.0_1103.indd 24 2010.11.3 2:24:4 PM

3 Touch **Add**.

Setting your alarm

1 Touch **Alarms**.

2 Touch **Add**, then you can set and save your alarm in this menu.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Using your calculator

1 Touch **Calculator.**

2 Touch the number keys to enter numbers.

Converting a unit

1 Touch **Unit converter**.

2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.

3 Then select the unit and enter the value you would like to convert from.

The web

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

1 Touch the **Browser**.

2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Access to Google Service

Access to Google Service Touch **Google** Search to launch google search application.

G-T310i_PAK_E_1.0_1103.indd 25 2010.11.3 2:24:4 PM

Settings

Personalising your profiles

You can personalise each profile setting.

1 Touch **Profiles**.

2 Choose the profile you want to edit.

3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

Changing your phone settings

Use the freedom of adapting the LG-T310i to your own preferences.

From the home screen, select and touch **Settings** then scroll to **Device settings**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity**.

Sending and receiving your files using Bluetooth

To send a file:

1 Open the file you want to send, typically this will be a photo, video or music file.

2 Choose **Send via**. Choose **Bluetooth**.

3 If you have already paired the **Bluetooth** device, your LG-T310i will not automatically search for other **Bluetooth** devices. If not, your LG-T310i will search for other **Bluetooth** enabled devices within range.

G-T310i_PAK_E_1.0_1103.indd 26 2010.11.3 2:24:5 PM

4 Choose the device you want to send the file to.

5 Your file will be sent.

To receive a file:

1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.

2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.

3 You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** then select **Options** and choose **Settings**.

Pairing with another Bluetooth device

By pairing your LG-T310i and another device, you can set up a passcode protected connection.

1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.

2 Touch **Search**.

3 Your LG-T310i will search for devices. When the search is completed, **Refresh** will appear on screen.

4 Choose the device you want to pair with and enter the passcode, then touch **OK**.

5 Your phone will then connect to the other device, on which you will need to enter the same passcode.

6 Your passcode protected Bluetooth connection is now ready.

G-T310i_PAK_E_1.0_1103.indd 27 2010.11.3 2:24:5 PM

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The LG-T310i supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

G-T310i_PAK_E_1.0_1103.indd 28 2010.11.3 2:24:5 PM

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger

Stereo headset

Battery

Data cable and CD

NOTE

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

G-T310i_PAK_E_1.0_1103.indd 29 2010.11.3 2:24:9 PM

Technical data

Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-T310i

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
EN 300 328 v1.7.1
EN 60950-1:2006
EN 50360:2001 / EN62209-1:2006
EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Inc. – EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name	Issued Date
Doo Heang Lee / Director	15. Sep. 2010

Signature of representative

G-T310i_PAK_E_1.0_1103.indd 30 2010.11.3 2:24:10 PM

Memo

Memo

Memo

تکنیکی ڈیٹا

محیط ٹمپریچر

زیادہ سے زیادہ: +55°C (ڈسچارجنگ) +45°C (چارجنگ)

کم از کم: -10°C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-T310i

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
EN 300 328 v1.7.1
EN 60950-1:2006
EN 50360:2001 / EN62209-1:2006
EN 301 511 v9.0.2

Supplimentary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Inc. – EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name	Issued Date
Doo Heong Lee / Director	15. Sep. 2010

Signature of representative

لوازمات

آپ کے موبائل فون کے لئے مختلف ا ضافی سامان ہیں آپ اپنی ذاتی مواصلتی ضروریات کے مطابق یہ اختیارات منتخب کرسکتے ہیں۔



چارجر

اسٹریو ہیڈسیٹ

بیٹری

ڈیٹا کیبل اور سی ڈی

نوٹ

- ہمیشہ LG کے اصلی اضافی آلات استعمال کریں۔
- ایسا نہ کرنے سے آپ کی وارنٹی کو باطل کرسکتا ہے۔
- ا ضافی سامان مختلف علاقہ جات میں مختلف ہوسکتی ہیں۔

LG-T310i_PAK_Urdu_CS3_1.0_1103.indd 30 2010.11.3 3:0:58 PM

2 آپ کو ایک لقمیا دیا جائے گا کہ بھیجنے والے سے فائل قبول کریں۔. فائل موصول کرنے کے لئے ہاں چھوئیں۔

3 آپ کو نظر آئے گا کہ فائل کو کہاں محفوظ کیا گیا ہے۔ تصویر کی فائلوں کے لئے آپ فائل کو **دیکھنے**یا **وال پیپر کے طور پر استعما**لکرنے کا انتخاب کرسکتے ہیں۔ فائلوں کو عام طور پر **میرا سامان میں** مناسب فولڈر میں محفوظ کیا جاتا ہے۔

اپنی Bluetooth ترتیبات تبدیل کرنا:

بلوٹوتھ کو چھوئیں پھر اختیار اور پھر ترتیبات چنیں۔

دوسرے Bluetooth آلہ سے متصل ہو رہا ہے۔

اپنے LG-T310i اور کسی دوسرے آلے کی جوڑی بنا کر، آپ پاس کوڈ کے ذریعے محفوظ کردہ کنکشن سیٹ اپ کرسکتے ہیں۔

1 چیک کریں کہ آپ کا Bluetooth **آن ہے** اور **نظر آرہا ہے**. آپ ترتیبات کے مینیو میں اپنے نظر آنے کو تبدیل کرسکتے ہیں۔

2 چھوئیں **تلاش**.

3 آپ کا LG-T310i آلات تلاش کرے گا. تلاش مکمل ہونے پر اسکرین پر**دوبارہ تازہ** ظاہر ہوگا۔

4 وہ آلہ منتخب کریں جس تک آپ جوڑی بنانا چاہتے ہیں اور پاس کوڈ درج کریں پھر چھوئیں **ٹھیک ہے**.

5 آپ کو فون پھر دوسرے آلے سے متصل ہوگا، جس پر آپ کو وہی پاس کوڈ درج کرنے کی ضرورت ہے۔

6 آپ کا حفاظتی Bluetooth لفظ شناخت کنکشن ابھی تیار ہے۔

اپنی فون کی ترتیبات تبدیل کرنا

LG-T310i کو اپنی ترجیحات کے مطابق کرنے کی آزادی کا استعمال کریں۔

ہوم اسکرین سے منتخب کریں ⊞ پھر اسکرال کریں **فون ترتیبات پر۔**

اپنی جڑت ترتیبات کو تبدیل کریں۔

آپ کے نیٹورک کے آپریٹر نے پہلے سے ہی آپ کی کنکشن کی قابلیت کی ترتیبات کو سیٹ اپ کردیا ہے، تاکہ آپ فورا ہی اپنے نئے فون سے لطف اندوز ہوسکتے ہیں۔ کوئی بھی ترتیبات تبدیل کرنے کے لئے اس مینیو کا استعمال کریں:

چھوئیں**کنکشن کی قابلیت**۔

Bluetooth استعمال کرکے اپنی فائلیں بھیجنا اور موصول کرنا

ایک فائل بھیجنے کیلئے:

1 وہ فائل کھولیں جو آپ بھیجنا چاہتے ہیں، تمثیلا ایک فوٹو، ویڈیو یا ایک میوزک فائل۔

2 منتخب کریں **بھیجیں**۔ منتخب کریں **Bluetooth**۔

3 اگر آپ نے **Bluetooth** آلے کی پہلے سے جوڑی بنالی ہو تو آپ کا LG-T310iخودکار طور پر دوسرے **Bluetooth** آلات تلاش نہیں کرے گا۔ ورنہ آپ کاLG-T310i زد میں موجود دوسرے **Bluetooth** سے آراستہ آلات تلاش کرے گا۔

4 وہ آلہ منتخب کریں جس پر آپ فائل کو بھیجنا چاہتے ہیں۔

5 آپ کی فائل کو بھیج دیا جائے گا۔

ایک فائل وصول کرنے کیلئے:

1 فائلیں موصول کرنے کے لئے آپ کے Bluetooth کوآن اور **نظر آنا**دونوں ہی پر مرتب ہونا چاہئیے۔ مزید معلومات کے لئے دیکھیں نیچے دیا گیا **اپنی Bluetooth کی ترتیبات تبدیل کرنا۔**

ویب

براؤزر آپ کو سیدھا آپ کے موبائل فون پر گیمز، میوزک، خبروں، کھیلوں، تفریح کی تیز، رنگین دنیا دکھاتا ہے۔ آپ جہاں بھی ہوں اور آپ کو جس میں بھی دلچسپی ہو۔

ویب پر رسائی کرنا

1 چھوئیں **براؤزر**.

2 براؤزر ہوم کے صفحے پر براہ راست جانے کے لئے منتخب کریں **ہوم**. اس کے بجائے منتخب کریں**پتہ درج کریں** اورURL لکھیں، اور اس کے بعد**متصل**.

نوٹ:ان خدمات سے متصل ہو کر اجزا ڈاؤن لوڈ کرنا اضافی اخراجات کا باعث بنے گا۔ ڈیٹا کے چارجز کے لئے اپنے نیٹورک کے فراہم کنندہ سے رجوع کریں۔

Google خدمت تک رسائی

گوگل سروس کے استعمال کیلئے، گوگل تلاش کا اپلیکشین شروع کرنے کے واسطے گوگل تلاش کو چھوئیں۔

ترتیبات

آپ کا پروفائل ذاتی بنا رہا ہے۔

آپ ترتیبات کے مینیو کے ذریعے ہر پروفائل کی ترتیب کو ذاتی بناسکتے ہیں۔

1 چھوئیں **پروفائلیں**.

2 وہ پروفائل منتخب کریں جسے آپ ترمیم کرنا چاہتے ہیں۔

3 پھر آپ فہرست میں دستیاب تمام آوازیں اور تنبیہہ کی اختیارات تبدیل کرسکتے ہیں، جس میں آپ کیرنگ ٹون اور والیوم، پیغام ٹون ترتیبات اور بہت کچھ شامل ہے۔

میرے سامان کو چھو کر آپ اپنی ملٹی میڈیا فائلیں ذخیرہ کرنے والے فولڈر کی فہرست کھول سکتے ہیں۔

کھیل اور اضافی پروگرام

آپ لطف اٹھانے کے لئے اپنے فون پر نئے گیمز اور اضافی پروگرام ڈاؤن لوڈ کرسکتے ہیں۔

اضافی پروگرام

اپنے کیلنڈر میں واقعہ شامل کریں

1 چھوئیں **کیلنڈر**.
2 تاریخ منتخب کریں جس میں آپ واقعہ شامل کرنا چاہتے ہیں۔
3 چھوئیں **اضافہ**.

اپنے الارم کو ترتیب دینا

1 چھوئیں **الارم**.
2 چھوئیں **اضافہ پھر** آپ اس مینیو میں اپنے الارم کو مرتب اور محفوظ کرسکتے ہیں۔

صوتی ریکارڈر

اپنا وائس ریکارڈ استعمال کرکے وائس میمو یا دوسری آڈیو فائلیں ریکارڈ کریں۔

کیلکولیٹر استعمال کرنا

1 چھوئیں **کیلکولیٹر** ملٹی میڈیا اسکرین میں۔
2 نمبر درج کرنے کے لئے نمبر کے بٹن چھوئیں۔

اکائی تبدیل کرنا

1 چھوئیں**اکائی تبدیل کرنے والا** اضافی پروگرام کی اسکرین میں۔
2 منتخب کریں کہ آپ کرنسی، رقبہ، لمبائی۔ وزن، درجہ حرارت، حجم یا رفتار کو تبدیل کرنا چاہتے ہیں۔
3 پھر اکائی منتخب کریں اور وہ قدر درج کریں جس سے آپ تبدیل کرنا چاہتے ہیں.

تمام ٹریکس - پہلے سے لوڈ کردہ ڈیفالٹ میوزک کے علاوہ آپ کے فون پر تمام گانے شامل ہیں۔

فنکار - اپنے میوزک کے مجموعے کو بمطابق فنکار براؤز کریں۔

البم - اپنے میوزک کے مجموعے کو بمطابق البم براؤز کریں۔

طرز - اپنے میوزک کے مجموعے کو بمطابق طرز براؤز کریں۔

پلے لسٹ - اس میں آپ کی بنائی گئی تمام پلے لسٹ شامل ہیں۔

ٹریکس کو بلاترتیب چلائیں - آپ کے ٹریکس کو بلاترتیب چلاتا ہے۔

اپنے فون پر میوزک منتقل کرنا

اپنے فون میں میوزک منتقل کرنے کا سب سے آسان طریقہ Bluetooth یا ڈیٹا کیبل کے ذریعے ہے۔

آپ LG PC Suite بھی استعمال کرسکتے ہیں۔ Bluetooth کے ذریعے میوزک منتقل کرنے کے لئے:

1 یقین کرلیں کہ دونوں آلات میں Bluetooth آن ہے اور ایک دوسرے سے متصل ہیں۔

2 دوسرے آلے پر میوزک کی فائل منتخب کریں اور Bluetooth کے ذریعے بھیجیں منتخب کریں۔

3 جب فائل کو بھیجا جاتا ہے تو آپ کو**ہاں**منتخب کرکے اسے اپنے فون پر قبول کرنا ہوگا۔

4 فائل**میوزک > تمام ٹریکس میں** ظاہر ہوگی۔

فائلوں کا انتظام کرنا

آپ اپنے فون کے حافظے میں ملٹی میڈیا فائلیں ذخیرہ کرسکتے ہیں تاکہ آپ کے پاس اپنی تصویریں، آوازیں، ویڈیو اور گیمز تک آسانی سے رسائی ہوسکے۔ آپ اپنی فائلیں ایک میموری کارڈ پر بھی محفوظ کرسکتے ہیں۔ میموری کارڈ استعمال کرنے سے آپ اپنے فون کے حافظے میں جگہ خالی کرسکیں گے۔

سفید توازن - سفید توازن اس بات کو یقینی بناتا ہے کہ آپ کے ویڈیو میں سفید علاقے حقیق لگیں۔ اپنے کیمرے کو سفید توازن کو درست طور پر ترمیم کرنے کے قابل بنانے کے لئے، اپ کو روشنی کی صورت حال کے تعین کی ضرورت پڑ سکتی ہے۔

خودکار، روشن، آفتاب رویہ، فلوری اور**ابرآلود**کے درمیان منتخب کریں۔

کوالٹی - منتخب کریں **ایکدم اعلی، اعلی** اور **عام**. جتنی اعلی کوالٹی ہوگی، ویڈیو اتنی ہی تیز ہوگی لیکن فائل کا سائز بڑھ جائے گا۔ اس کے نتیجے میں آپ فون کے حافظے میں کم ویڈیو ذخیرہ کرسکیں گے۔

دورانیہ - اپنی ویڈیو کے لئے دورانیے کی حد مرتب کریں۔ بطور MMS پیغام بھیجنے کے لئے زیادہ سے زیادہ سائز کو محدود کرنے کے لئے عام اور MMSکے درمیان منتخب کریں۔

ذخیرہ منتخب کریں - منتخب کریں کہ کیا آپ کی ویڈیو کو ہینڈسیٹ کے حافظے یا بیرونی حافظے میں محفوظ کیا جاتا ہے۔

آڈیو ریکارڈنگ- آواز کے بغیر ویڈیو ریکارڈ کرنے کے لئے خاموش منتخب کریں۔

آئیکن چھپائیں - منتخب کریں کہ کیمرے کے مینیو میں آئیکنز کو دستی طور پر یا خودکار طور پر چھپایا جاتا ہے۔

ترتیبات دوبارہ سیٹ کریں - ویڈیو کیمرا کی تمام ترتیبات دوبارہ سیٹ کریں۔

موسیقی

میوزک پلئیر تک رسائی کرنے کے لئے چھوئیں **میوزک**. یہاں سے آپ کئی فولڈر تک رسائی کرسکتے ہیں:

حالیہ چلائے گئے - آپ کے حالیہ طور پر چلائے گئے گانے چلاتا ہے۔

3 ● Rec ویو فائنڈر کے نیچے ظاہر ہوگا، جس میں نیچے ایک ٹائمر موجود ہوگا جس میں ویڈیو کی لمبائی دکھائی دیتی ہے۔

4 ویڈیو میں وقفہ دینے کے لئے چھوئیں ⏸ اور بحال کرنے کے لئے منتخب کریں ⏺۔

5 ویڈیو ریکارڈنگ روکنے کیلئے اسکرین پر ■ کو چھوئیں۔

ویڈیو بنانے کے بعد

آپ کی کھینچی گئی ویڈیو کی نمائندگی کرنے والی ساکن تصویر اسکرین پر ظاہر ہوگی۔ ویڈیو کا نام اسکرین کے نچلے حصے میں بائیں اور دائیں جانب موجود آٹھ آئیکنز کے ساتھ چلتا ہے۔

▶ ویڈیو پلے کرنے کے لئے چھوئیں۔

مندرجہ ذیل اختیارات دستیاب ہیں۔

چھوئیں ☰۔

بھیجیں - تصویر کو **پیغام**، **ای میل** یا **Bluetooth** کے ذریعے بھیجنے کے لئے چھوئیں۔

دوبارہ نام - ویڈیو کو دوبارہ نام دینے کے لئے چھوئیں۔

🗑 اپنی حالیہ طور پر بنائی گئی ویڈیو مٹانے کے لئے چھوئیں، اور تصدیق کے لئے چھوئیں **ہاں**. ویوفائنڈر پھر سے ظاہر ہوگا۔

● فوری طور پر دوسری تصویر کھینچنے کے لئے چھوئیں۔ آپ کی حالیہ ویڈیو محفوظ ہو جائے گی۔

🖼 محفوظ ویڈیو اور تصویروں کی گیلری دیکھنے کے لئے چھوئیں۔

برتر ترتیبات استعمال کرنا

ویو فائنڈر سے چھوئیں ⚙ تمام برتر ترتیبات کے اختیارات کو کھولنے کے لئے۔ آپ اختیار کو منتخب کرکے، اوکے والا بٹن دبا کر ویڈیو کیمرا کی ترتیبات کو تبدیل کرسکتے ہیں۔

رنگ کا اثر - اپنے نئے منظر کے استعمال کے لئے رنگ کا ٹون منتخب کریں۔

خودکار ٹائمر - خودکار ٹائمر آپ کو شٹر کے دبانے کے بعد التوا مرتب کرنے دیتا ہے۔ منتخب کریں **بند، 3 سیکنڈ، 5 سیکنڈ** ، یا **10 سیکنڈ**. یہ اس وقت بہترین ہوتا ہے جب آپ اپنے آپ کو تصویر میں شامل کرنا چاہتے ہیں۔

رات کی وضع - صارف کے لئے اندھیری جگہوں میں مفید۔

تصویر کی کوالٹی - **ایکدم اعلی، اعلی**، اور **عام**کے درمیان منتخب کریں۔ جتنی اعلی کوالٹی ہوگی، تصویر اتنی ہی تیز ہوگی۔ تاہم اس کے نتیجے میں فائل کی سائز بڑھ جائے گی، جس کا مطلب ہے کہ آپ حافظے میں کم تصویریں ذخیرہ کرسکیں گے۔

ذخیرہ منتخب کریں - منتخب کریں کہ کیا آپ کو تصویروں کو ہینڈسیٹ کے حافظے میں یا بیرونی حافظے میں محفوظ کیا جاتا ہے۔

اُنیکن چھپائیں - دستی یا خودکار طور پر چھپانے کے لئے کیمرہ ترتیب کے اُنیکنز منتخب کریں۔

کھینچی گئی تصویر دکھائیں - اپنی کھینچی گئی تصویر چیک کرنے کے لئے اُن منتخب کریں،

شٹر کی آواز - تین شٹر کی آوازوں میں سے ایک کو منتخب کریں۔

گرڈ اسکرین - **بند، سادہ کراس**، یا**ٹرائی سیکشن**کے درمیان منتخب کریں۔

ترتیبات دوبارہ مرتب کریں - کیمرے کی تمام ڈیفالٹ ترتیبات کو بحال کریں۔

ویڈیو کیمرا

فوری ویڈیو بنانا

کیمرہ وضع یا ویڈیو وضع پر تبدیل کرنے کے لئے، ویو فائنڈر کے دائیں مرکز پر کیمرہ یا ویڈیو کے اُنیکن کو اوپر یا نیچے اسکرال کریں۔

1 فون کو افقی سمت میں پکڑ کر لینس کو ویڈیو کے موضوع کی طرف کریں۔

2 لال نقطہ دبائیں ◉۔

ااستعمال کریں بطور - چھویں ہوم اسکرین وال پیپر، اسکرین لاک وال پیپر، رابطے، آنےوالی، جانےوالی کال، شروع کی تصویر، بند ہوتے وقت کی تصویر.

دوبارہ نام - تصویر کو دوبارہ نام دینے کے لئے چھوئیں۔

ترمیم - تصویر کو ترمیم کرنے کے لئے چھوئیں۔

تصویر مٹانے کے لئے چھوئیں۔

فوری طور پر دوسری تصویر لینے کے لئے چھوئیں۔ آپ کی حالیہ تصویر محفوظ ہو جائے گی۔

اپنی محفوظ تصویروں کی گیلری دیکھنے کے لئے چھوئیں۔

برتر ترتیبات استعمال کرنا

ویو فائنڈر سے چھوئیں تمام برتر ترتیبات کے اختیارات کو کھولنے کے لئے۔

آپ پہیہ اسکرال کرکے کیمرے کی ترتیب کو تبدیل کرسکتے ہیں۔ اختیار منتخب کرنے کے بعد چھوئیں **ٹھیک ہے** کا بٹن۔

سائز - حافظہ محفوظ کرنے کے لئے تصویر کا سائز تبدیل کریں۔

سفید توازن - **خودکار، روشن، آفتاب رویہ**،، اور **ابرآلود**کے درمیان منتخب کریں۔

رنگ کا اثر - اپنے نئی تصویر کے لئے رنگ کا ٹون منتخب کریں۔

مسلسل شاٹ - موضوع کو ویو فائنڈر میں پوزیشن کریں، پھر کھینچنے کے بٹن کو اسی طرح دبائیں جیسے کہ آپ عام تصویر کھینچتے وقت دباتے ہیں۔ کیمرا فورا ایک کے بعد ایک تصویریں کھینچے گا۔

Facebook (جاری SNS)

ہوم: لاگ ان کریں اور آپ کو اپنے دوست کی جدید کیفیت نظر آئے گی۔ نئی کیفیت کے متعلق اپنی رائے درج کریں یا دوسروں کو چیک کریں۔

پروفائل:آپ دیوار > کیفیت کی تجدیدات منتخب کرکے حالیہ کیفیت لکھ سکتے ہیں۔ اپنے معلومات کی تفصیل دیکھیں اور البم > تصویر اپ لوڈ چھو کر تصویر اپ لوڈ کریں۔

دوست:تلاش کے ٹیب کو منتخب کرکے facebook میں اپنے دوست تلاش کریں۔

پیغام: آپ ان باکس/بھیجے گئے کا فولڈر دیکھ سکتے ہیں اور SN پیغام لکھ سکتے ہیں۔

کیمرا

فوری تصویر کھینچنا

1 چھوئیں **کیمرہ** مینیو۔

2 جب کیمرہ آپ کے موضوع پر فوکس ہوجائے تو چھوئیں اسکرین کے دائیں مرکز پر تصویر کھینچنے کے لئے۔

نوٹ: کیمرہ وضع یا ویڈیو وضع پر تبدیل کرنے کے لئے، ویو فائنڈر کے دائیں مرکز پر کیمرہ یا ویڈیو کے آئیکن کو اوپر یا نیچے اسکرال کریں۔

تصویر لینے کے بعد

کھینچی گئی تصویر اسکرین پر ظاہر ہوگی۔

مندرجہ ذیل اختیارات دستیاب ہیں۔

چھوئیں ▤۔

بھیجیں - تصویر کو پیغام، ای میل یا Bluetooth کے ذریعے بھیجنے کے لئے چھوئیں۔

سلائڈ کا دورانیہ- منتخب کریں کہ آپ کی سلائیڈیں کب تک اسکرین پر ظاہر ہوں گی۔

غیرسہولت یافتہ منسلکہ - منتخب کریں کہ کیا غیرسہولت یافتہ منسلکہ محدود ہے یا نہیں۔

حوالگی کا وقت- منتخب کریں کہ پیغام پہنچانے سے قبل کتنا انتظار کیا جائے۔

MMS مرکز - فہرست سے ایک منتخب کریں یا نئے پیغام کے مرکز کا اضافہ کریں۔

سماجی نیٹورک کی خدمات(SNS)

آپ کے LG-T310i میں SNS ہے جس کے ذریعے آپ اپنے سماجی نیٹورک کو بناسکتے ہیں اور منظم کرسکتے ہیں۔

ٹوکا: Facebookایک اضافی پروگرام ہے جو آپ کے فون پر پہلے سے لوڈ کیا گیا ہے اور اس تک رسائی بہت آسان ہے۔ Twitter، java کا ایپلیکیشن ہے جو Java ٹیکنالوجی پر مبنی ہے۔ دوسرے اضافی پروگراموں کاWAP (وائرلیس اضافی پروگرام کا پروٹوکال) خدمات تک رسائی

نوٹ: SNSکی خصوصیت میں ڈیٹا کا کثیر تعداد میں استعمال ہوتا ہے۔ آن لائن خدمات تک اتصال اور ان کے استعمال کے دوران اضافی اخراجات کا اطلاق ہوسکتا ہے۔ ڈیٹا کے اخراجات کے لئے اپنے نیٹورک فراہم کنندہ سے رجوع کریں۔

ٹیکسٹ پیغام کا مرکز - اپنے پیغام کے مرکز کی تفصیلات درج کریں۔

حوالگی کی رپورٹ -اپنے پیغامات کے پہنچانے کی تصدیق موصول کرنے کے لئے سونچ کو بائیں کی طرف سلائیڈ کریں۔

درستگی کی میعاد - منتخب کریں کہ آپ کے پیغامات کو کتنے عرصے کے لئے پیغام کے مرکز پر ذخیرہ کیا جاتا ہے۔

پیغام کی اقسام - اپنے ٹیکسٹ کو **ٹیکسٹ، وائس، فیکس X.400** یا **ای میل میں تبدیل کریں**.

کریکٹر پر کوڈ لگانا - اپنے کریکٹر پر کوڈ لگانے کا طریقہ کار منتخب کریں۔ اس سے آپ کے پیغامات کے سائز اور لہذا ڈیٹا کے اخراجات متاثر ہوتے ہیں۔

بھیجے لمبا ٹیکسٹ بطور - منتخب کریں کہ کیا لمبے پیغامات کو **متعدد SMS** یا **MMS**کے طور پر بھیجا جاتا ہے۔

اپنی ملٹی میڈیا پیغام کی ترتیبات کو تبدیل کریں۔

چھوئیں **پیغامات** اور چھوئیں **ترتیبات** اور **ملٹی میڈیا پیغام**.

بازیافتگی کی وضع - منتخب کریں **مقامی نیٹورک** یا **گشتی نیٹورک کے درمیان**. پھر اگر آپدستی منتخب کرتے ہیں، آپ کو طرف MMS کی اطلاعات موصول ہوں گی اور پھر آپ انہیں مکمل طور پر ڈاؤن لوڈ کرنے کا فیصلہ کرسکتے ہیں۔

حوالگی کی رپورٹ - حوالگی کی رپورٹ کی درخواست یا اجازت کا انتخاب کریں۔

پڑھنے کی رسید -درخواست کی اجازت یا درخواست کا انتخاب کریں۔

ترجیح - اپنے MMS کے لئے ترجیح کی سطح منتخب کریں.

درستگی کا وقفہ - منتخب کریں کہ آپ کا پیغام کب تک پیغام کے مرکز پر ذخیرہ کیا جائے

⚠ **تنبیہ:** اگر کسی SMS میں کوئی تصویر، ویڈیو یا آواز کا اضافہ کیا جائے ہو خودکار طور پر MMS میں تبدیل کیا جاتا ہے اور آپ پر اس کے مطابق اخراجات لاگو ہوں گے۔

ٹیکسٹ درج کرنا

آپ اپنے مداخلے کا طریقہ منتخب کرنے کے لئے اور **مداخلے کا طریقہ کار** منتخب کرسکتے ہیں۔

چھوئیں T9 وضع آن کرنے کے لئے۔ یہ آئیکن صرف اس وقت دیکھا جاتا ہے جب آپ کیی پیڈ کو بطور مداخلے کا طریقہ کار منتخب کرسکتے ہیں۔

چھوئیں نمبر، علامات اور ٹیکسٹ کے اندراجات کے درمیان تبدیل کرنے کے لئے۔

استعمال کریں **شفٹ** کا بٹن چھوٹے اور بڑے حرف کے مداخلے کے درمیان تبدیل کرنے کے لئے۔

لکھائی کی پہچان

لکھائی کی وضع میں آپ محض اسکرین پر لکھتے ہیں اور آپ کا LG-T310i آپ کی لکھائی کو آپ کے پیغام میں تبدیل کرتا ہے۔

اپنا ای میل کو ترتیب کریں

چھوئیں **ای میل** اضافی پروگرام کی اسکرین میں.

اگر ای میل اکاؤنٹ سیٹ اپ نہ ہو تو ای میل سیٹ اپ وزرڈ شروع کرکے اسے مکمل کریں۔

آپ ترتیبات کو دیکھ، اور اس میں ترمیم کرسکتے ہیں ساتھ ہی آپ اضافی ترتیبات بھی دیکھ سکتے ہیں جو آپ کے اکاؤنٹ کھولتے وقت خودکار طور پر درج ہوجاتی ہیں۔

اپنے ٹیکسٹ پیغام کی ترتیبات کو تبدیل کریں۔

چھوئیں **پیغامات** اور چھوئیں **ترتیبات**. منتخب کریں **ٹیکسٹ پیغام** ۔

- **ہٹائیں** - یہ اسی طرح کام کرتا ہے جس طرح سے نقل کام کرتا ہے، لیکن رابطے کو صرف نئے مقام میں ذخیرہ کیا جاتا ہے۔ لہذا کسی رابطے کو SIM سے اندرونی حافظے پر منتقل کرنے کے بعد، اسے SIM کے حافظے سے مٹادیا جاتا ہے۔
- **تمام روابط کو بذریعہ Bluetooth بھیجیں** - تمام روابط کو Bluetooth کے ذریعے دوسرے ہینڈسیٹ پر بھیجتا ہے۔
- **بیک اپ روابط** / روابط کو بحال کریں - روابط کے ڈیٹا کو دوسرے ذخیرے پر محفوظ یا بحال کریں۔
- **تمام روابط مٹائیں** - اپنے روابط مٹائیں۔ چھوئیں ہاں اگر آپ اپنے تمام روابط کو مٹانا چاہتے ہیں۔

پیغام رسائی

آپ کا LG-T310i، SMS اور MMS کو ایک آسان مینیو میں ایک ساتھ پیش کرتا ہے۔

پیغام بھیجنا

1 چھوئیں **پیغاماتمینیو** میں۔ اور چھوئیں **پیغام لکھیں** نیا پیغام لکھنا شروع کرنے کے لئے۔

2 چھوئیں **داخل** tتصویر، ویڈیو، آواز، ٹیمپلیٹ وغیرہ شامل کرنے کے لئے۔

3 چھوئیں **کو** اسکرین کے اوپر وصول کنندگان شامل کرنے کے لئے۔ پھر نمبر درج کریں یا چھوئیں رابطہ منتخب کرنے کے لئے۔ آپ متعدد روابط بھی شامل کرسکتے ہیں۔

4 چھوئیں **بھیجیں** جب تیار ہوں.

روابط

کوئی رابطہ تلاش کرنا

1 چھوئیں **روابط**.
2 چھوئیں **تلاش**.
3 آپ کو روابط کی فہرست نظر آتی ہے۔ نام کے خانے میں کسی رابطے کے نام کا پہلا حرف ٹائپ کرکے مینیو فہرست کے الفبائی علاقے پر چلا جائے گا۔

نیا رابطہ شامل کرنا

1 چھوئیں روابط اور چھوئیں اضافہ.
2 منتخب کریں کہ کیا آپ رابطے کو اپنے **بیرونی حافظے** یا **SIM** میں محفوظ کرنا چاہتے ہیں۔
3 اپنا پہلا اور آخری نام درج کریں۔
4 آپ ہر رابطے کے لئے پانچ مختلف نمبر تک درج کرسکتے ہیں۔
5 ای میل ایڈریس شامل کرنا۔ اپ ہر رابطے کے لئے دو مختلف ای میل کے ایڈریس تک درج کرسکتے ہیں۔
6 رابطے کو ایک یا ایک سے زیادہ گروپس کو متعین کریں۔
7 چھوئیں **محفوظ** رابطہ محفوظ کرنے کے لئے۔

اپنے رابطے کی ترتیبات تبدیل کرنا

آپ اپنے رابطے کی ترتیبات تبدیل کرسکتے ہیں تاکہ آپ کی **روابط** آپ کی ترجیحات کے مطابق ہو۔

چھوئیں **اختیارات کا بٹن** اور چھوئیں **ترتیبات**.

- **ڈسپلے کا نام** - منتخب کریں کہ کیا کسی رابطے کا پہلا یا آخری نام ظاہر ہو۔
- **نقل** - اپنے رابطوں کو SIM سے داخلی میموری، یا اسی طرح کی دوسری چیز میں کاپی کریں۔

پر تبدیل کرنا بھول جائیں۔ آنے والی کال کو مسترد کرنے کیلئے انتباہی اسکرین کے مسترد والے ٹیب پر چھوئیں۔

مشترکہ کال کی ترتیب تبدیل کرنا

1 چھوئیں **کال ترتیبات** **ترتیبات** مینیو میں.

2 اسکرال کریں اور چھوئیں **مشترکہ ترتیبات**.

- **کال مسترد** - چالو کرنے کیلئے سوئچ کو بائیں جانب کھسکائیں۔ آپ سبھی کالوں، رابطوں، گروپز، تمام غیرشناسا کال کنندگان اور تمام غیرشناسا نمبروں کو منتخب کرنے کیلئے مسترد کی فہرست کو چھو سکتے ہیں۔
- **میرا نمبر بھیجیں** - منتخب کریں کہ کیا آپ کا نمبر باہر جانے والی کال پر دکھایا جانے گا یا نہیں۔
- **خودکار دوبارہ ڈائل** - سوئچ کو آن کے لئے بائیں یا آف کے لئے دائیں سلائیڈ کریں۔
- **جوابی وضع**

بھیجیں کا بٹن دبائیں: آپ کو آنے والی کال کو صرف بٹن دبا کر جواب دینے دیتا ہے.

کوئی بھی بٹن دبائیں: آپ کو کوئی بھی بٹن، علاوہ بٹن کے، دبا کر آنے والی کال کا جواب دینے دیتا ہے۔

- **منٹ مائنڈر** - سوئچ کو کال کے دوران ہر منٹ کے بعد ایک ٹون سننے کے لئے آن پر بائیں کی جانب سلائڈ کریں۔
- **BT جوابی وضع** - منتخب کریں ہینڈزفری کسی کال کا جواب دینے کے لئے Bluetooth ہیڈسیٹ استعمال کرنے کے لئے یا منتخب کریں ہینڈسیٹ کسی کال کا جواب دینے کے لئے ہینڈسیٹ بٹن دبانے کے لئے۔
- **نیا نمبر محفوظ کریں** - منتخب کریں آن یا آف نیا نمبر محفوظ کرنے کے لئے۔

کالز

کال کرنا

1 چھوئیں کی پیڈ کھولنے کے لئے۔

2 بٹن پیڈ استعمال کرکے نمبر درج کریں ۔

3 چھوئیں کال شروع کرنے کے لئے۔

ٹوٹکا! بین الاقوامی کال کرنے کے لئے + درج کرنے کے لئے دبائیں اور تھامیں 0+.

غلطی سے کی جانے والی کالوں کی روک تھام کے لئے ٹچ اسکرین کو لاک کرنے کے لئے پاور کا بٹن دبائیں۔

اپنےروابط سے کال کرنا

1 ہوم اسکرین سے چھوئیں روابط **کھولنے کے لئے**۔

2 اسکرین کے اوپر نام کے خانے کے باکس پر ٹیپ کریں اور کی پیڈ کے ذریعے اس رابطے کے شروع کے چند حرف درج کریں جسے آپ کال کرنا چاہتے ہیں۔

3 فلٹر کی فہرست سے، اس رابطے کے ساتھ کال کا آئیکن چھوئیں جسے آپ کال کرنا چاہتے ہیں۔ اگر اس رابطے کے لئے ایک سے زیادہ نمبر ہو تو کال ڈیفالٹ نمبر استعمال کرے گا۔

4 یا اگر رابطے کے استعمال کے لئے ایک سے زیادہ نمبر ہو تو آپ رابطے کے نام کو چھو کر استعمال کیا جانے والا نمبر منتخب کریں۔ آپ ڈیفالٹ نمبر پر کال شروع کرنے کے لئے کو بھی چھو سکتے ہیں۔

کال کرنا اور کال منع کرنا

جب آپ کا فون بجے تو کال کا جواب دینے کیلئے بٹن دبائیں۔ گھنٹی کو خاموش کرنے کیلئے، انتباہی اسکرین پر خاموش والے ٹیب کو چھوئیں۔ یہ اس وقت کام آتا ہے جب آپ کسی میٹنگ کے لئے اپنی پروفائل کو خاموش

آپ کے مینیو کی اسکرین

آپ تمام مینیو اسکرینوں میں اپنی ضرورت کے مطابق اسکرال کرنے کے لئے ایک طرف سے دوسری طرف تک اسکرال کرسکتے ہیں۔ مینیو اسکرین کے درمیان تبدیل کرنے کے لئے، بائیں سے دائیں، یا دائیں سے بائیں ڈسپلے کے اوپر جلدی سے وائپ کریں۔

اسکرین 1 - آپ اس اسکرین سے رابطے، پیغامات، صوتی کال، فہرست، کیمرا، کیلنڈر، الارمز، میمو، براؤزر، گیمز اور ایپلی کیشنز اور ترتیب کے ماڈیولز کھول سکتے ہیں

اسکرین 2 - آپ اس اسکرین سے ای میل، SNS، گوگل تلاش، مائی اسٹف، میسنجر، گیلری، ایف ایم ریڈیو، صوتی ریکارڈر، ٹاسکس، تاریخ کا تلاش کنندہ، پروفائلز، بلوٹوتھ اور کلکولیٹر ماڈیولز کھول سکتے ہیں

اسکرین 3 - آپ اس اسکرین سے عالمی گھڑی، اکائی تبدیل کرنے والا، اسٹاپ واچ، STK (اگر نیٹ ورک سے اعانت یافتہ ہو) ماڈیولز کھول سکتے ہیں

آپ کی ہوم اسکرین

آپ تمام ہوم اسکرین کی اقسام میں جلد ہی اپنی ضروریات کو گھسیٹ کر کلک کرسکتے ہیں۔

کارآمد

وڈجیٹ ہوم اسکرین - جب آپ اسکرین کے نچلے ▲ بائیں حصے کو چھوتے ہیں تو موبائل وڈجیٹ کا پینل ظاہر ہوتا ہے۔ جب آپ کسی وڈجیٹ کو گھسیٹ کر اسے رجسٹر کرتے ہیں تو وڈجیٹ کو اس جگہ بنایا جاتا ہے جہاں اسے گرایا گیا تھا۔

کارآمد

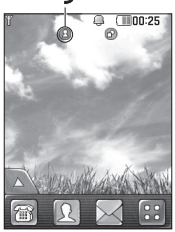

فوری ڈائل ہوم اسکرین - جب آپ چھوتے ہیں ▲، تو فوری ڈائل کی فہرست ظاہر ہوتی ہے۔ آپ اس ہوم اسکرین میں رابطے کو براہ راست کال کرسکتے ہیں، پیغام بھیج سکتے ہیں یا ترمیم کرسکتے ہیں۔

LG-T310i_PAK_Urdu_CS3_1.0_1103.indd 11 2010.11.3 3:1:3 PM

اپنی ٹچ اسکرین استعمال کرنا

ٹچ اسکرین کے ٹوٹکے

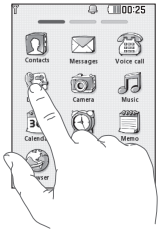

- کوئی آئیٹم منتخب کرنے کے لئے، آئیکن کے درمیان میں چھوئیں ۔
- زیادہ زور سے نہ دبائیں۔ ٹچ اسکرین اتنی حساس ہے کہ وہ ہلکے، لیکن مضبوطی سے دبانے پر پہچان لیتی ہے۔
- اپنے مطلوبہ اختیار کو چھونے کے لئے اپنی انگلی کا استعمال کریں۔ دھیان رکھیں کہ آپ کوئی بھی دوسرے بٹن کو نہ چھوئیں۔
- جب بھی اپ کا LG-T310i استعمال میں نہ ہو تو وہ لاک اسکرین پر واپس چلاجائے گا۔

اسکرال کرنا

اسکرال کرنے کے لئے دائیں اور بائیں گھسیٹیں۔ کچھ اسکرینوں پر، جیسے کہ کال ہیسٹری کی فہرست میں، آپ اوپر یا نیچے بھی اسکرال کرسکتے ہیں۔

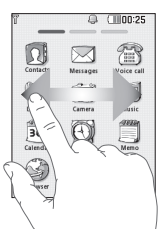

ٹچ اسکرین کو کنٹرول کریں

LG-T310i ٹچ اسکرین کے کنٹرول آپ کے کام کے مطابق متحرک طور پر تبدیل ہوتے ہیں۔

اضافی پروگرام کھولنا

کوئی اضافی پروگرام کھولنے کے لئے صرف اس کے آئیکن کو چھوئیں۔

فون کے اجزا

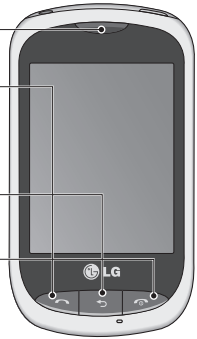

ائیرپیس

کال کا بٹن
ایک فون نمبر ڈائل کرتا ہے اور آنیوالی کالوں کا جواب دیتا ہے۔

صاف کرنے والی بٹن
کسی سابقہ اسکرین پر واپس جائیں۔

اختتامی بٹن

والیوم کے بٹن
- **جب اسکرین ہوم اسکرین پر ہو تو:** رنگ ٹون اور ٹچ ٹون کا والیوم
- **کال کے دوران:** ائیرپیس والیوم۔
- **والیوم نیچے کا بٹن:** خاموش وضع فعال/غیرفعال کرنے کے لئے دبائیں اور تھامیں۔

پاور/قفل کا بٹن
- اسکرین آن یا آف کرنے کے لئے کچھ دیر کے لئے دبائیں۔
- آن یا آف کرنے کے لئے زیادہ دیر کے لئے دبائیں۔



ہینڈزفری یا اسٹیریو ائیرفون کنکٹر

SIM کارڈ اور ہینڈسیٹ کی بیٹری نصب کرنا

SIM کارڈ کي تنصيب کاري

جب آپ کسی سیلولر نیٹورک پر اشتراک کرتے ہیں آپ کو ایکپلگ انسم کارڈ فراہم کیا جاتا ہے، جس میں آپ کی اشتراک کی تفصیلات ہیں جیسے کہ آپ کی PIN، کوئی بھی دستیاب اختیاری خدمات اور بہت کچھ۔

اہم!

› داخلي SIM کارڈ اور اس کے مشمولات رگڑ لگنے یا موڑنے سے آساني کے ساتھ خراب ہوسکتے ہیں، لہذا کارڈ داخل کرتے یا نکالتے وقت دھیان رکھیں۔ تمام SIM کارڈز بچوں کي پہنچ سے دور رکھیں۔

تصویریں

بیٹری نکالنے سے پہلے ہمیشہ آلے کو بند کریں اور چارجر الگ کردیں۔

1 پچھلا کور ہٹائیں۔

2 بیٹری کو اوپر کی طرف اٹھائیں

3 سم کارڈ داخل کریں

4 بیٹری پیک لگائیں

5 پشت کا کور لگائیں

6 بیٹری چارج کریں

LG-T310i_PAK_Urdu_CS3_1.0_1103.indd 8 2010.11.3 3:1:5 PM

- صرف LG کی بیٹریاں اور چارجرز استعمال کریں۔ LG کے چارجر بیٹری کی زندگی کو زیادہ سے زیادہ بڑھانے کے لئے ہیں۔
- بیٹری پیک کے ترکیبی اجزاء کو الگ الگ نہیں کریں اور نہ ہی اس کو شارٹ سرکٹ کریں۔
- بیٹری کے دھاتی کانٹیکٹ صاف رکھیں۔.
- جب بیٹري مناسب کارکردگي فراہم نہیں کرے تو اس کو تبدیل کردیں۔ بیٹری کے پیک کو سینکڑوں بار دوبارہ چارج کیا جاسکتا ہے، جب تک کہ اسے تبدیلی کی ضرورت نہ پڑے۔
- استعمال کی قابلیت کو زیادہ سے زیادہ کرنے کے لئے بیٹری کو لمبے عرصے تک استعمال نہ کرنے کی صورت میں دوبارہ چارج کریں۔
- بیٹری کے چارجر کو براہ راست دھوپ میں نہ رکھیں اور نہ ہی اسے نم ماحول میں استعمال کریں، جیسے کہ غسل خانے میں۔
- بیٹری گرم یا ٹھنڈی جگہوں میں نہیں چھوڑیں ایسا کرنے سے بیٹری کی کارگردگی بگڑ جاتی ہے۔
- بیٹری بدل کر غلط قسم کی بیٹری لگانے پر دھماکہ ہونے کا خطرہ ہے۔
- استعمال شدہ بیٹریوں کو بنانے والے کی ہدایات کے مطابق پھینکیں۔ برائے مہربانی جب ممکن ہو ریسائکل کریں۔ گھریلو گچر بے طور پر ٹھکانے مت لگائیں۔
- اگر آپ کو بیٹری تبدیل کرنے کی ضرورت پیش آئے تو اسے مدد کے لئے قریب ترین مجاز LG Electronics خدمت کے مرکز یا ڈیلر کے پاس لے آئیں۔
- چارجر کے بجلی کا فضول خرچ بچانے کیلئے فون مکمل طور پر چارج ہونے کے بعد چارجر کو ہقیشہ دیواری ساکٹ سے نکال دیں۔
- بیٹری کی عمر کا انحصار نیٹورک کی تشکیل، مصنوعے کی سیٹنگز، استعمال کے طریقہ کار، بیٹری اور ماحولیاتی صورت حالات پر ہے۔

محفوظ اور موثر استعمال کی ہدایات(جاری)

ممکنہ دھماکہ خیز ماحول

- فون کو دوبارہ استعمال کے مقام پر نہ استعمال کریں۔
- کیمیاوی مواد یا ایندھن کے قریب استعمال مت کریں۔
- شعلہ پکڑنے والی گیس، مایعات، یا دھماکہ خیز مواد کو اپنی گاڑی کے اسی خانے میں منتقل اور ذخیرہ نہیں کریں جس میں آپ کا موبائل فون، یا اضافی آلات رکھے ہوں۔

ہوائی جہاز میں

لاسلکي آلات ہوائی جہازوں میں خلل اندازی کا باعث بن سکتے ہیں۔

- کسي بھي جہاز میں سوار ہونے سے پہلے اپنا موبائل فون بند کردیں۔
- جہازی عملہ کی اجازت کے بغیر زمین پر استعمال نہیں کریں۔

بچے

فون کو بچوں کی پہنچ سے دور ایک محفوظ جگہ میں رکھیں۔ یہ چھوٹے اجزاء پر مشتمل ہوتے ہیں جو کہ علیحدہ کرنے کي صورت میں نگل لینے کا خطرہ بن سکتے ہیں۔

ہنگامی کالیں

ہوسکتا ہے کہ تمام موبائل نیٹورکس کے ساتھ ہنگامی کالیں دستیاب نہ ہوں۔ اس لئے، ایمرجنسی کالوں کے لئے کبھی بھی فون پر مکمل بھروسہ مت کریں۔ اپنے مقامی خدمت فراہم کنندہ سے دریافت کریں

بیٹری معلومات اور دیکھ بھال

- بیٹری دوبارہ چارج کرنے کیلئے ضروری نہیں کہ اس کو مکمل طور پر ڈسچارج کیا جائے۔ دوسري بیٹریوں کے نظاموں کے خلاف معمول، اس میں کوئي ایسا حافظہ اثر نہیں ہے جو بیٹری کی کارکردگی سے مفاہمت کرسکے۔

LG-T310i_PAK_Urdu_CS3_1.0_1103.indd 6 2010.11.3 3:1:6 PM

- ڈرائونگ پر مکمل توجہ دیں۔
- اگر دستیاب ہو تو ہینڈ فري کٹ استعمال کریں۔
- کال کرنے یا کال کا جواب دینے، اگر ڈرائونگ کے شرائط کے تحت درکار ہو، سے قبل گاڑی پارک کریں
- ہو سکتا ہے کہ ریڈیو فریکونسی توانائی آپ کی گاڑی میں موجودہ الیکٹرونک سسٹمز جیسے کار اسٹیریو اور حفاظتی لوازمات پر اثر انداز ہو۔
- جب آپ کی گاڑی ائیر بیگ سے آراستہ ہو تو نصب کردہ یا قابل انتقال وائرلیس آلات کے ذریعے مداخلت پیدا نہ کریں۔ ممکن ہے کہ اس کی وجہ سے ائیربیگ درست طور پر کام نہ کرے یا غیردرست کارکردگی کی وجہ سے شدید چوٹ کا باعث بنے۔
- اگر آپ میوزک رَواں اور گرداں سن رہیں ہوں، برائے مہربانی یقین کر لیں کہ آواز ایک منسب سطح پر ہے اس لئے کہ آپ اپنے گرد و پیش سے آگاہ رہیں. یہ اس وقت خاص طور پر اہم ہوتا ہے جب آپ راستوں کے قریب ہوتے ہیں۔

اپنی سماعت کو نقصان سے بچائیں

لمبے عرصے تک بلند آوازیں سننے سے آپ کی سماعت کو نقصان پہنچ سکتا ہے.. لہذا ہم تجویز کرتے ہیں کہ آپ ہینڈسیٹ کو اپنے کان کے پاس آن یا آف نہ کریں۔ ہماری تجویز ہے کہ آپ میوزک اور کال کی آوازیں ایک مناسب سطح پر مرتب کریں۔

نوٹ: ائیرفون سے تیز آواز میں سننے سے کان کے بہرے ہونے کا خطرہ ہوسکتا ہے۔

دھماکہ خیز علاقہ

جہاں دھماکہ ہورہا ہو وہاں فون کا استعمال مت کریں۔ پابندیوں کو بغور دیکھیں، اور اصول و ضوابط پر عمل کریں۔

محفوظ اور موثر استعمال کی ہدایات(جاری)

- ہیٹڈ سیٹ کو آتش گیر مادے کے قریب چارج نہ کریں کیونکہ ہیٹڈ سیٹ گرم ہوکر آتش زدگی کا خطرہ پیدا کرسکتا ہے۔
- آلے کو باہر سے صاف کرنے کے لیے ایک خشک کپڑا استعمال کریں (بینز، ٹنر یا الکحل جیسے محلول استعمال نہیں کریں)۔
- فون کو نرم سامان آرائش پر چارج نہیں کریں۔
- فون اچھی طرح ہوا دار جگہ میں چارج کرنا چاہیے۔
- فون کو گرد وغبار اور دھواں سے بچا کر رکھیں۔
- فون کو کریڈٹ کارڈز یا مواصلاتی ٹکٹوں کے ساتھ نہ رکھیں، یہ مقناطیسی اسٹرپ پر موجود معلومات پر اثر انداز ہوسکتا ہے۔
- اسکرین پر کسی نوکیلی چیز سے نہ تھپھپائیں کیونکہ فون کو نقصان پہنچ سکتا ہے۔
- فون کو مایعات یا رطوبت سے بچا کر رکھیں۔
- ایئر فونز جیسے لوازم کا استعمال احتیاط کے ساتھ کریں۔ اینٹا کو غیر ضروری طور پر ہاتھ نہ لگائیں۔

فون کا موثر استعمال

برقیاتی آلات

- بغیر اجازت حاصل کئے آپ اپنے موبائل فون کو طبی آلہ کے پاس مت استعمال کریں۔ اپنے سینے کي پاکٹ میں پیس میکر وغیرہ جیسے آلہ پر فون رکھنے سے پرہیز کریں۔
- موبائل فونز سماعت کے آلات کے لیے خلل اندازی کا باعث بن سکتے ہیں۔
- آپ کا آلہ ٹی وی، ریڈیو، کمپیوٹرز وغیرہ میں خلل اندازی کا باعث ہوسکتا ہے

راستے پر حفاظت

گاڑی چلاتے وقت علاقے میں موبائل فون کے استعمال کے متعلق قوانین اور ضوابط چیک کریں۔

- گاڑی چلانے کے دوران دستی فون استعمال نہ کریں۔

- ان ملکوں اور علاقوں کے رہنے والوں کے لئے،جنہوں نے برقي اور الکٹرونکز انجینئرز (IEEE) کي سفارشات اپنائے ہیں، AR ڈیٹا کی معلومات کے مطابق SAR ڈیٹا کی حد 1 گرام جسمانی خلیات کے اوسط تناسب پر 1.6 واٹ/کلوگرام ہے۔

مصنوعہ کی دیکھ بھال اور مرمت

⚠ **انتباہ:** صرف اس مخصوص فون ماڈل کے ساتھ استعمال کیلئے منظور شدہ بیٹریاں، چارجر اور لوازم ہی استعمال کریں۔ کسی بھی دوسری قسم کا استعمالآپ کے آلے پر ھی گئی منظوری یا وارنٹی کو بے ضابطہ قرار دینے کے علاوہ ممکن ہے خطرناک ہو

- اس آلے کے ترکیبی حصّوں کو الگ الگ نہیں کریں۔ جب مرمت درکار ہو تو آلے کو کسی مستند خدمت کے تیکنیک کار کے پاس لے جائیں۔
- آلے کو برقی آلات جیسے ٹی وی، ریڈیو اور ڈاتی کمپیوٹر سے دور رکھیں۔
- آلے کو حرارت کے ماخذوں سے دور رکھنا چاہئے جیسے گرمالے اور چولے
- آلہ مت گرائیں۔
- آلے کو میکانکی ٹھرٹھراہٹ یا ضروب نہیں لگائیں۔
- جہاں کہیں ضوابط کے تحت درکار ہو فون بند کر دیں۔ مثال کے طور پر فون کو ہسپتالوں میں استعمال نہیں کریں کیونکہ یہ حساس طبی آلات پر اثرانداز ہو سکتے ہیں۔
- چارج کرنے کے دوران فون کو گیلے ہاتھوں سے نہ چھوئیں کیونکہ یہ برقی شاک کا باعث بن سکتا ہے اور گرم ہونے کے ساتھ ساتھ آپ کے فون کو شدید نقصان پہنچا سکتا ہے۔

محفوظ اور موثر استعمال کی ہدایات

برائے مہربانی یہ آسان رہنما عبارات پڑھیں۔ ان ہدایات پر عمل نہ کرنا خطرناک یا خلاف قانون ہو سکتا ہے۔

ریڈیو فریکونسی اینرجی ایکسپوژر

ریڈیاتی لہروں کے ظہور اور جو مخصوص شرح جاذبہ (SAR) کے متعلق معلومات

یہ موبائل فون LG-T310i ریڈیو لہروں سے ربط کے لئے قابل اطلاق حفاظتی ضروریات کی مطابقت کے لئے بنایا گیا ہے۔ یہ ضروریات تمام صارفین، بلاواسطہ ان کی عمر اور صحت کے، کی حفاظت کو یقینی بنانے کے لئے بنائے گئے حفاظتی حاشیوں کو شامل کرنے والے سائنسی رہنمائی اصولوں پر مبنی ہیں۔

- ریڈیاتی لہروں کے ظہور کے ہدایات پیمائش کی ایک اکائی استعمال کرتے ہیں جو مخصوص شرح جاذبہ یا SAR کے نام سے جانی جاتی ہے۔ SAR کی جانچیں معیاری طریقوں سے کی جاتی ہیں، جن میں فون کو تمام زیر استعمال فریکوینسی بینڈوں میں اعلی ترین سندیافتہ قوت کی سطح پر ترسیل کررہا ہو۔
- مختلف LG فون کے ماڈلوں میں SAR سطح کے مابین اختلاف ہونے کے باوجود یہ تمام ریڈیائی لہروں سے پیدا ہونے والے خطرے سے بچاؤ کے متعلقہ تقاضوں کو پورا کرنے کیلئے ڈیزائن کیے گئی ہیں۔
- International Commission on Non-Ionising Radiation (Protection (ICNIRP کی تجویز کردہ SAR کی حد 2W/kg ہے، جس کا اوسط 10 گرام ٹشو پر لیا گیا ہے۔
- اس ماڈل فون کے لئے DASY4 کی جانچ کردہ SAR کی قدر کان کے قریب استعمال کے لئے 0.961 W/kg (10g)، اور جسم پر پہنتے وقت 0.974 W/kg (10g)) ہے۔

LG-T310i صارف گائیڈ – انگریزی

ہو سکتا ہے کہ اس کتابچے میں موجودہ اجزا آپ کے فون کے اجزا سے مختلف ہوں اس کا انحصار فون کے سافٹ وئیر یا آپ کے خدمت فراہم کنندہ پر ہے۔۔