LG
Life's Good

SoundPlate

Model : LAP250H

ENGLISH | SIMPLE MANUAL (1 of 2)

To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

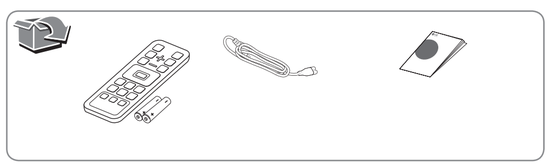

MFL68900715

www.lg.com

Installation

1

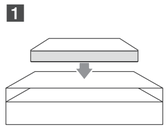

2

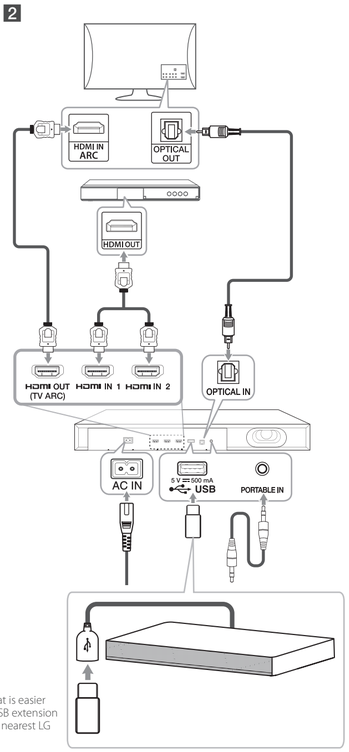

You can connect a USB in a way that is easier and more convenient by using a USB extension cable and purchase the cable from nearest LG Electronic Service point.

3

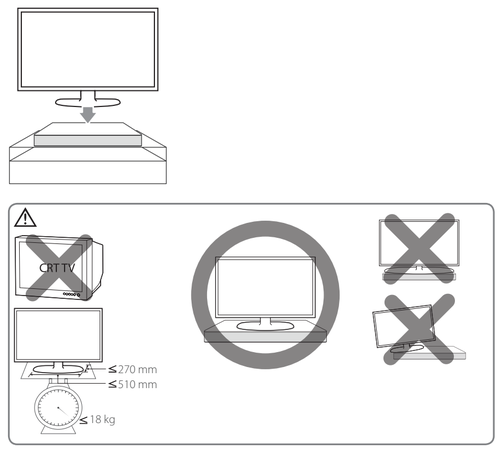

Optical operation

1

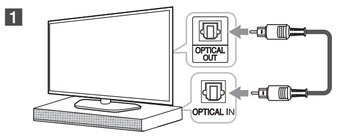

2



Select OPTICAL.



Some TV need to change setting of sound output. Refer to the description below.

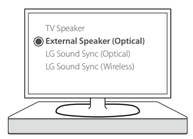

Set up the sound output of your TV : TV setting menu → [Sound] → [TV Sound output] → [External Speaker (Optical)]

Details of TV setting menu vary depending on the manufacturers or models of your TV.

LG Sound Sync

Sound Sync Wireless

LG Sound Sync enables you to control some functions of this unit by a remote control of your LG TV. Controllable functions are volume up/down and mute. Make sure that your TV has LG Sound Sync logo as shown above.

Optical

1

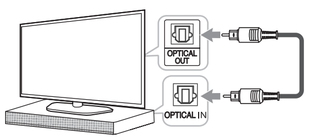

2

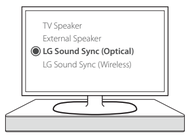

Set up the sound output of your TV : TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Optical)]

3



Select OPTICAL.



Wireless

1



Select LG TV.



2

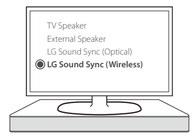

Set up the sound output of your TV : TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]

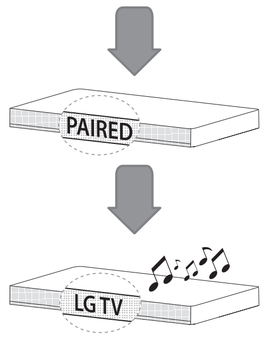

HDMI ARC (Audio Return Channel) operation

The ARC function enables an HDMI capable TV to send the audio stream to HDMI OUT of the unit.

1

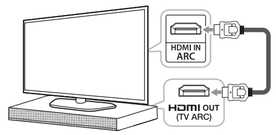

HIGH-DEFINITION MULTIMEDIA INTERFACE

2 Some TV need to change setting of sound output. Refer to the description below.

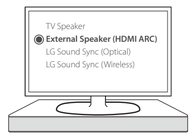

Set up the sound output of your TV :
1. TV setting menu → [Sound] → [TV Sound output] → [External speaker (HDMI ARC)]
2. Set up ARC mode to [On].
3. Activate HDMI CEC and select sound output of your TV.

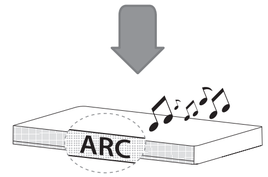

ARC function is automatically selected when you turn on your TV no matter what kind of the function you are using.

SIMPLINK

SIMPLINK enables you to control some functions of this unit by a remote control of your TV. Controllable functions are power on/off and volume up/down, mute, etc. Make sure that your TV has SIMPLINK logo as shown above.

HDMI operation

1

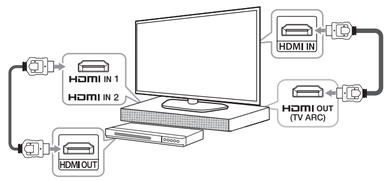

2



Select HDMI IN 1 or HDMI IN 2.

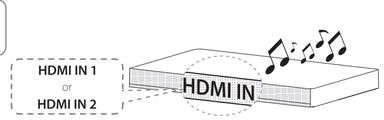

Auto power On/Off

This unit automatically turns on by an input source : Optical, LG TV or Bluetooth.

Turns on or off AUTO POWER function.

Using External device

1

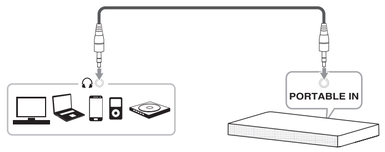

2



Select PORTABLE.



3





Play the music on the connected external device.

Auto Function Change

This unit recognizes input signals such as optical, Bluetooth and LG TV and then changes suitable function automatically.

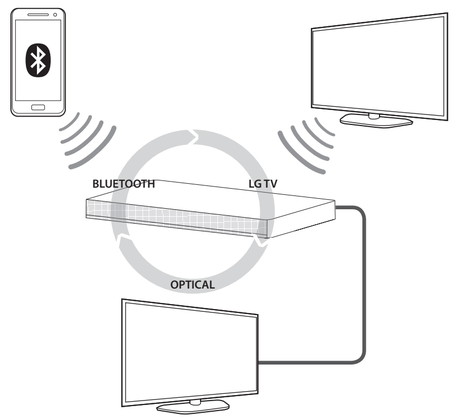

Data Playback

1

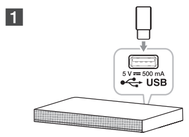

Connect a USB device to the Unit.

2



Select USB.



3



Select the desired song and the song is played.

File Searching

1



Press to move superior or subordinate folder from the root folder.

2



Select the folder to play. The first file of the folder is played.

Using Bluetooth

1



Select Bluetooth function.



2





! Enter the PIN code (0000) as needed.

3





Play music on your Bluetooth device.

! This unit can be connected up to 3 Bluetooth devices when you use Bluetooth mode. However, music playback is possible from only one of connected device.

Using “Music Flow Bluetooth” App

To use this unit more comfortably, install “Music Flow Bluetooth” on your Bluetooth devices. Select a way of installation (ⓐ or ⓑ).

ⓐ

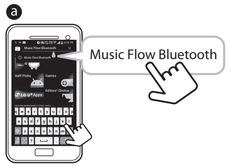

Searching for “Music Flow Bluetooth” on the Google Play Store.

ⓑ

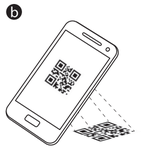

Scanning QR code.

Using your TV remote control

You can control some functions of this unit by your TV remote control even in other company’s product. Controllable functions are volume up/down and mute.



Press and hold to turn on or off this function.

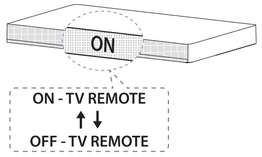

! Supported TV brands

LG	Panasonic	Philips	Samsung	Sharp	Sony	Toshiba	Vizio

! Make sure that the sound output of your TV is set to [External speaker].

! Depending on the remote control, this function may not work well.

LG
Life's Good

SoundPlate

Model : LAP250H

ENGLISH | SIMPLE MANUAL (2 of 2)

To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MFL68762322

www.lg.com

Safety Information

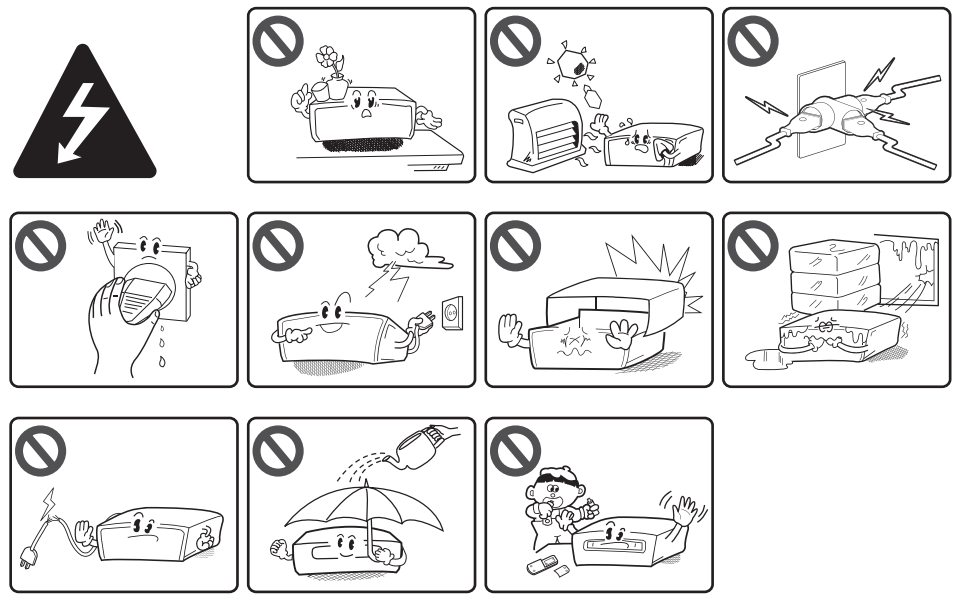

Additional Feature

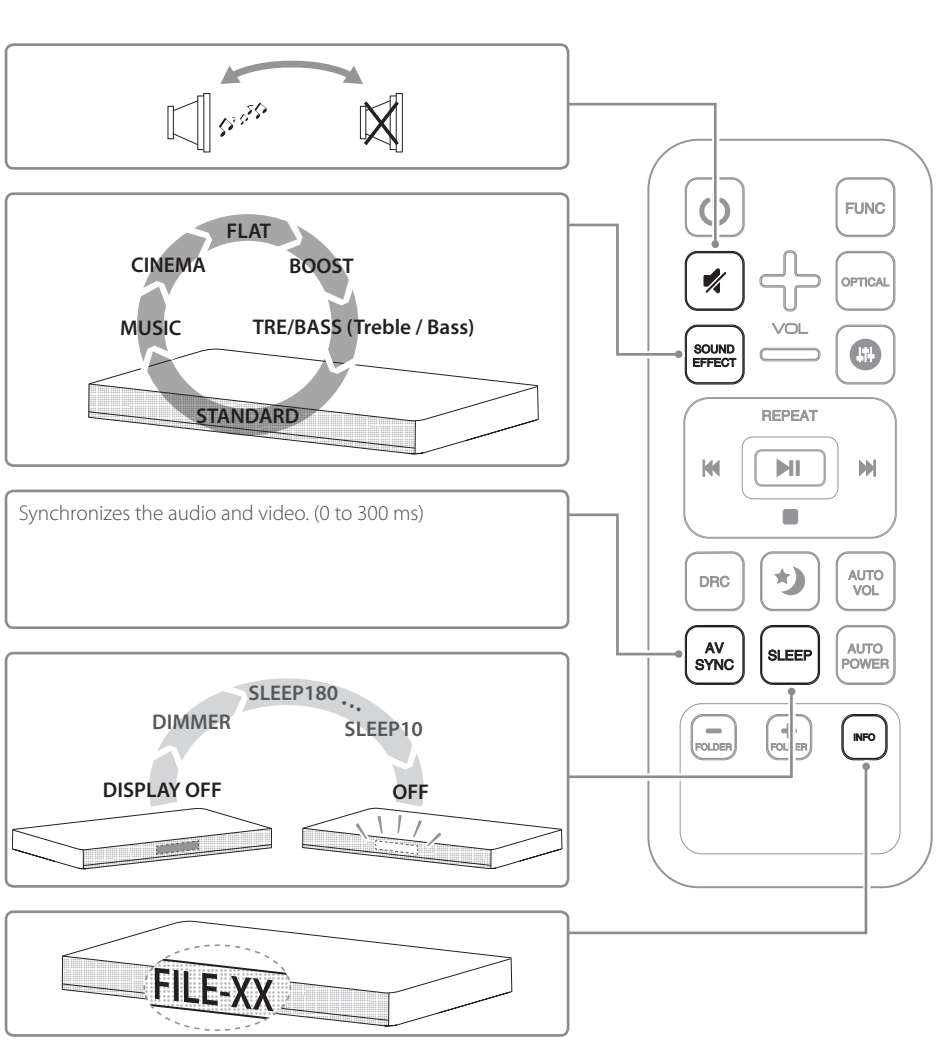

Synchronizes the audio and video. (0 to 300 ms)

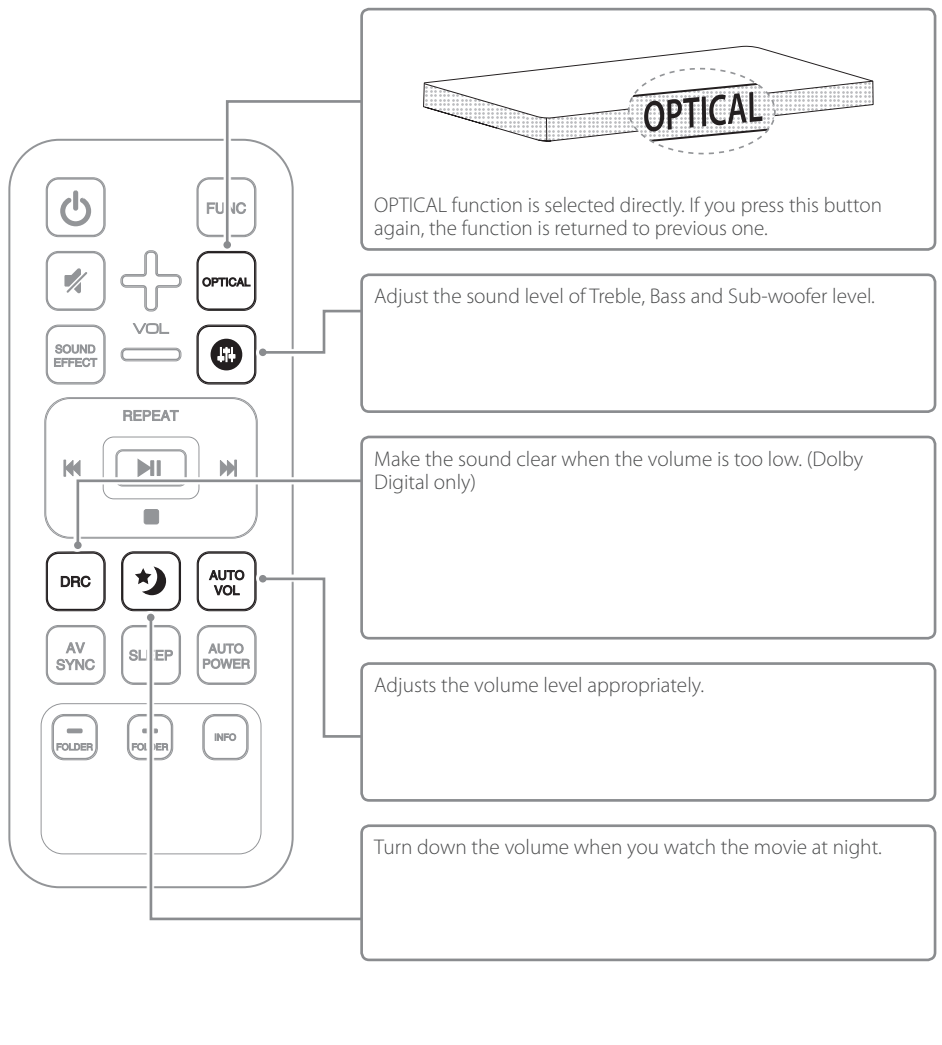

OPTICAL function is selected directly. If you press this button again, the function is returned to previous one.

Adjust the sound level of Treble, Bass and Sub-woofer level.

Make the sound clear when the volume is too low. (Dolby Digital only)

Adjusts the volume level appropriately.

Turn down the volume when you watch the movie at night.

Additional Information

USB	File extensions	• ".mp3" • ".wma" • ".ogg" • ".flac" • ".wav"
	Maximum files	Under 2,000
	USB Flash Drive	Devices that support USB 2.0.
Bluetooth	Codec	SBC

How to disconnect the wireless network connection or the wireless device
- Set up the AUTO POWER function to off and turn off the unit.

Replacement of battery

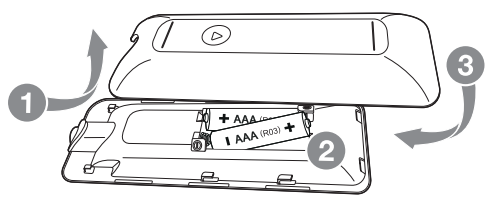

Specification

ENGLISH

Power requirements	Refer to the main label on the unit.
Power consumption	20 W
	Networked standby : 1.5 W (If all network ports are activated.)
Amplifier Total output	100 W
Bus Power Supply	5 V ⎓ 500 mA

Design and specifications are subject to change without notice.

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product.
(ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device.
In case of an emergency, the Power Plug must remain readily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment:
Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery should not be exposed to excessive heat such as sunshine, fire or the like.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or rear of the apparatus.

POWER: This unit operates on a mains supply of 200-240V~, 50/60Hz.
Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:
Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol ⏚ or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.
Important: The wires in this mains lead are coloured in accordance with the following codes:
- BLUE: NEUTRAL, BROWN: LIVE - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Disposal of your old appliance

1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Disposal of waste batteries/accumulators

1. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury,0.002% of cadmium or 0.004% of lead.
2. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of Your old batteries/ accumulators will help to prevent potential negative consequences for the environment, animal and human health.
4. For more detailed information about disposal of Your old batteries/accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

Pb

Declaration of Conformity

CE 0197

Hereby, LG Electronics European Shared Service Center B.V., declares that this SoundPlate is compliant with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V.
European Standard Team
Krijgsman 1
1186 DM Amstelveen
The Netherlands

or can be requested at our dedicated DoC website:

http://www.lg.com/global/support/cedoc/cedoc#

This device is a 2.4 GHz wideband transmission system, intended for use in all EU member states and EFTA countries.

Technology with the human touch

GUARANTEE

- LG Electronics U.K. Ltd. will provide the following services in order to expedite this Guarantee.

1. All faulty components which fail due to defective manufacture will be replaced free of charge for a period of 12 months from the original date of purchase.
2. The dealer (or his service agent) who sold the product will be reimbursed for any labour provided in the repair of this LG equipment, for a period of 12 months from the original date of purchase. These claims must be made in accordance with the published scale of service charges and relevant claims procedure.

PLEASE NOTE:

A. The dealer may restrict the guarantee to the original purchaser.

B. The dealer is not obliged to carry out service under guarantee if unauthorized modifications are made to the apparatus, or if non standard components are used or if the serial number of the apparatus is removed, defaced, misused, or altered.

C. Any claims made under guarantee must be directed to the dealer from whom the equipment was originally purchased. The dealer may, before carrying out service under guarantee, require a receipted account as evidence of the date of purchase.

D. We respectfully point out that your dealer is not obligated to replace batteries if they become exhausted or worn in use.

E. Aerial alignment and consumer control adjustments are not covered by this guarantee.

This guarantee does not affect your statutory rights.

- REQUIREMENTS TO MAINTAIN WARRANTY COVERAGE:
  RETAIN YOUR RECEIPT TO PROVE DATE OF PURCHASE. A COPY OF YOUR RECEIPT MUST BE SURRENDERED AT THE TIME GUARANTEE SERVICE IS PROVED.
- Product Registration Card :
  It is helpful to complete at least your name, address, phone, model & serial numbers and return it. This will enable LG to assist you in the future should you lose your receipt, your units be stolen, or should modifications be necessary.
- To obtain information or assistance:
  Call UK: 0344 847 5454 IE: 01 686 9454

MODEL NO.*	SERIAL NO.*	DATE OF PURCHASE.*

In all cases of difficulty - consult your LG dealer from whom the product was purchased

LGEUK Website : www.lg.com/uk
(Service website : www.lg.com/uk/support)