LG
Life's Good

Mini Hi-Fi System

Model : CM8350

ENGLISH | SIMPLE MANUAL (1 of 2)

To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

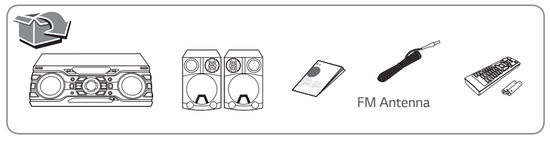

MFL68899724

www.lg.com

Speaker Connection

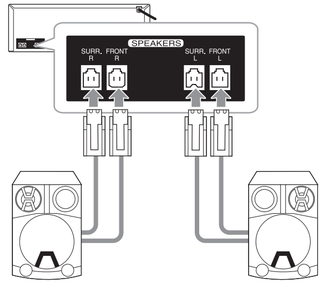

! Make sure to connect the speaker plugs into their corresponding colored speaker connectors.

Using External Device (ⓐ or ⓑ)

1

ⓐ **AUX IN Connection**

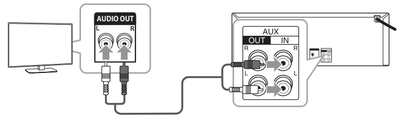

ⓑ **PORT. IN Connection**

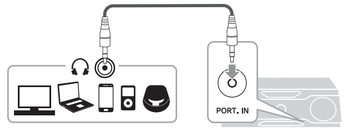

2 Select AUX or PORTABLE.



3



Play the music on the connected external device.

X-BOOM PLUS

You can connect two units to play music together.

1



2 Press **X-BOOM PLUS/DEMO**.



3 Rotate **SCRATCH & CONTROL** to adjust Delay setting.



4 Press **X-BOOM PLUS/DEMO** to save the Delay setting. /



! This function is available on CD, USB 1, USB 2, BT, PORTABLE Function.

Disc & Data Playback

1

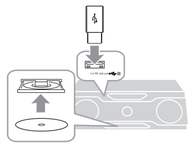

2



Select CD, USB 1 or USB 2.

3



Press ⏮ / ⏭ to select a desired song and press ▶/⏸ to play.

Folder Searching



Press **PRESET·FOLDER** ∧ / ∨ to select a folder and press ▶/⏸ to play the first file of the selected folder.

! Empty folders are not searched.

Radio Operation

1

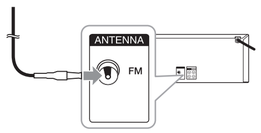

2



Select FM.

3



Tune the desired frequency. (Press and hold for auto tuning. Press for Manual tuning.)

! Select STEREO or MONO on FM Function.

Presetting Radio Station

1



Select the station to preset.

2



Select the preset number and store the station.

3



Select preset station to listen to.

To delete all the saved station

1



Press and hold **PROGRAM/MEMORY**.

2

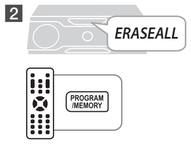

Press **PROGRAM/MEMORY** when 'ERASEALL' blinks to confirm.

Deleting File

1

ⓐ



Select the file you want to delete in stop mode.

ⓑ



Select the folder you want to delete.

2

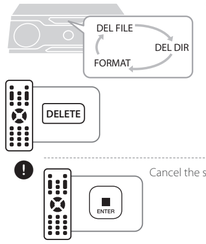

Select to delete the file, folder or format the USB.

! Cancel the selection.

3



Perform the selection.

! This function is supported only in stop status. (USB only)

Using BLUETOOTH®

1



Select BT.

2

ⓐ



- If NFC connection does not work well, try again after checking the location of NFC tag in your phone.
- Android O/S : Ver 4.1.2 (or later)

ⓑ



Set on the **Bluetooth** and select "LG CM8350 (XX)" on your **Bluetooth** device.

- Enter the PIN code (0000) as needed.

3



Play music on your **Bluetooth** device.

- When this unit is successfully connected with your **Bluetooth** device, "PAIRED" will appear on the display window. The display will change to the **Bluetooth** device's name soon after.
- If the device name isn't available on the unit, "_" will be displayed.
- Even when this unit is connected to 3 **Bluetooth** devices in the **Bluetooth** mode, you can play and control music by using only one of the connected devices.
- The multi pairing connection is only supported on Android or iOS devices. (Multi pairing connection may not be supported depending on the connected device specifications.)
- A removable/detachable **Bluetooth** device (Ex : Dongle etc.) doesn't support multi pairing.
- Even when this unit is connected with multiple **Bluetooth** devices, only one device which is playing will keep the **Bluetooth** connection, even if you change the function of the other devices.

Using Music Flow Bluetooth App

To use this unit more comfortably, install "Music Flow Bluetooth" on your **Bluetooth** devices. Select a way of installation (ⓐ or ⓑ).

ⓐ

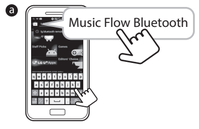

Search for "Music Flow Bluetooth" on the Google Play Store.

ⓑ



Scan QR code.

- Android O/S : Ver 4.0.3 (or later)
- Refer to the guide from the "Music Flow Bluetooth" App on your smart device.

USER EQ

1



Press **USER EQ**.

2



Rotate **BASS** or **TREBLE** to adjust the sound level.

3



Save the setting.

AUTO DJ

Auto DJ blends the end of one song into the beginning of another for seamless playback.



Select a desired AUTO DJ mode.

- AUTO DJ SEQUENTIAL is selected when playing programmed list.

DJ EFFECT

1



Press **DJ EFFECT** to select a desired DJ effect (FLANGER, PHASER, CHORUS, DELAY, DJ OFF).

2



Rotate **SCRATCH & CONTROL** to adjust the effect level.

- You can adjust DJ EFFECT sound gage level between 0 to 15. The initial level is 7.

Additional Feature

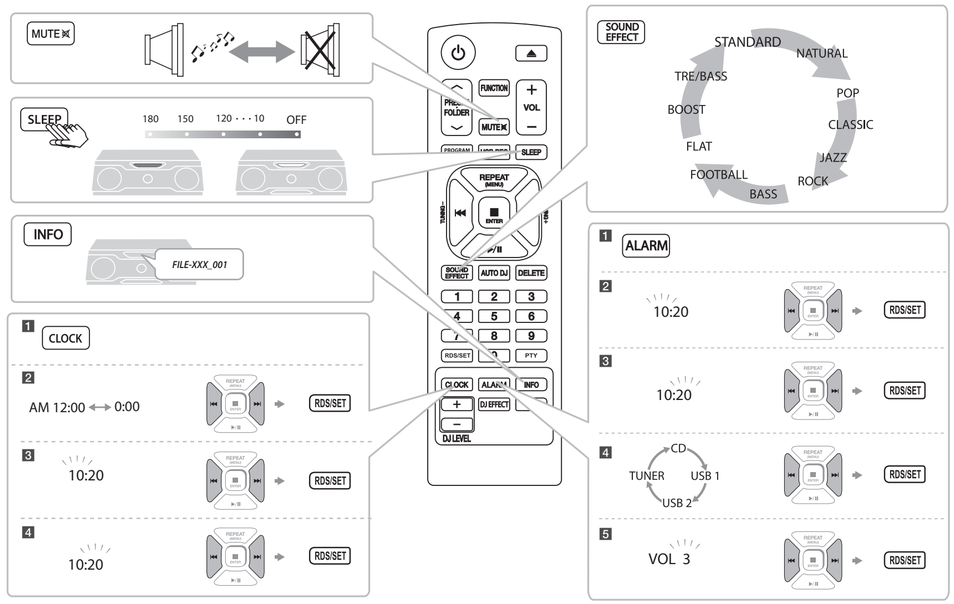

- Alarm function works only after clock is set.

AUTO DJ

AUTO

DJ EFFECT

Additional Feature

LG
Life's Good

Mini Hi-Fi System

Model : CM8350

ENGLISH | SIMPLE MANUAL (2 of 2)

To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MFL68889725

Programmed Playback

You can make a playlist of your favourite tracks/files from a disc or USB device using programmed Playback .

! This function is supported only on stop status.

To make Programmed Playback list

1 

Select CD, USB 1 or USB 2.

2 

Press **PROGRAM/MEMORY**.

3 

Press I◀◀ / ▶▶I to select a track/file and press **PROGRAM/MEMORY**.
Repeat this step to store more files.

4 
Enjoy the music on the Programmed Playback list.

!
- To delete all of the Programmed Playback list, remove the CD or USB device from the unit.
- A playlist of up to 20 tracks/files can be entered for each media.

To enjoy Programmed Playback

1 

Press **PROGRAM/MEMORY** in stop mode.

2 
Play the Programmed Playback list.

! 

Press ■ **ENTER** twice to exit from Programmed Playback mode.

To delete Programmed Playback List

1 

Press **PROGRAM/MEMORY** in stop status.

2 

Press to select a track/file to delete.

3 

Delete selected song.

USB Copying

1 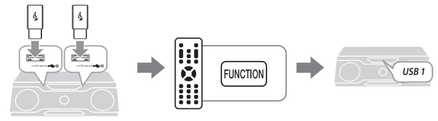

Connect USB devices to USB ports and select USB 1.

2 

Press **USB REC** to start recording. Audio files in USB 1 are copied to USB 2.

! Press ■ **ENTER** to stop recording.

!

Status	Recording
Playback	One track/file
Programmed playback	Programmed track(s)/file(s)
Full stop	All track(s)/file(s)

USB Recording

1 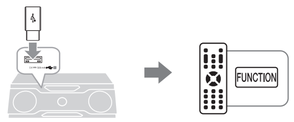

Connect a USB device and select the function (CD, AUX, PORTABLE, Tuner) to record.

2 

Press **USB REC** to start recording. Press ■ **ENTER** to stop recording.

!
- A file is recorded by about 512 Mbyte when you record for a long term.
- When you stop recording during playback, the file that has recorded at that time will be stored.(Execpt MP3/WMA file)
- Recording is not supported in BT or LG TV mode.
- Volume level will be changed between MIN to 30 during recording. (Only CD function)
- Press ▶ / II to pause the recording. (Only Tuner, AUX, PORTABLE)
- It'll be stored as follows. * The other source : AUX and the like.

AUDIO CD	MP3/WMA	TUNER	The other source*
CD_REC TRK_0001 TRK_0002	FILE_REC ABC(File name) DEF(File name)	TUNER_REC AUDIO_001_107.7FM	OTHERS_REC AUDIO_0001 AUDIO_0002

!

Status	Recording (Only CD function)
Playback	One track/file
Programmed playback	Programmed the track(s)/file(s)
Full stop	All track(s)/file(s)

To select bitrate and recording speed

You can select bitrate and recording speed before recording.

1 

Press and hold **USB REC** for 3 seconds.

2 

Press I◀◀ / ▶▶I to select a bitrate and press **USB REC**.

3 

Press I◀◀ / ▶▶I to select a recording speed and press **USB REC**. (Only CD function)

Auto Power On

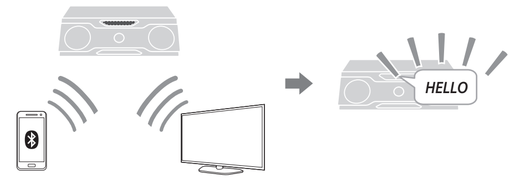

This unit automatically turns on by an input source : LG TV or **Bluetooth**
If you have already paired with this unit, automatically this unit can turn on by an input source when this unit is turned off.

Auto Function Change

This unit recognizes input signals such as **Bluetooth** and LG TV and then changes suitable function automatically.

LG Sound Sync

Sound Sync Wireless

LG Sound Sync enables you to control some functions of this unit by a remote control of your LG TV. Controllable functions are volume up/down and mute. Make sure that your TV has LG Sound Sync logo as shown above.

1



Select LG TV function.

2



Set up the sound output of your TV : TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]





- For specific information of operating, refer to the instruction manual of your TV.
- When the connections failed, make sure of the conditions of this unit and your TV : power, function.
- The amount of time to turn off this unit is different depending on your TV.

How to affix the Ferrite Core

Ferrite core may not be provided depending on each nation's regulations.

1 Pull the stopper [a] of the ferrite core to open.

2 Wind the power cord around the ferrite core twice (Once for 110 V cord).
Wind the SPEAKERS cables around the ferrite core once.

3 Close the ferrite core until it clicks.

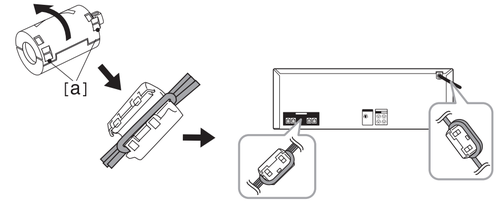

Additional Information

Music File Requirement

Sampling frequency	• MP3 : 32 kHz - 48 kHz • WMA : 32 kHz - 48 kHz
Bit rate	• MP3 : 32 - 320 kbps • WMA : 40 - 192 kbps
Maximum files	Data CD : 999 / USB : 2000
Maximum folders	Data CD : 99 / USB : 200
File extensions	• ".mp3" • ".wma"
CD-ROM file format	ISO9660+JOLIET
USB Flash Drive	Devices that support USB2.0 or USB1.1.
Bluetooth Codec	SBC

- The USB function of this unit does not support all USB devices.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- The DTS is not supported. In case of DTS audio format, audio is not output.

Specification

ENGLISH

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
	Networked standby : 0.4 W (If all network ports are activated.)
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier Total Output	2000 W

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device
Turn off the unit by pressing the power button for more than 5 seconds.

POWER: This unit operates on a mains supply of 200-240V~, 50/60Hz.
Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:
Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol ⏚ or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.
Important: The wires in this mains lead are coloured in accordance with the following codes:
- **BLUE: NEUTRAL, BROWN:** LIVE - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Replacement of battery

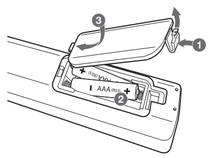

Safety Information

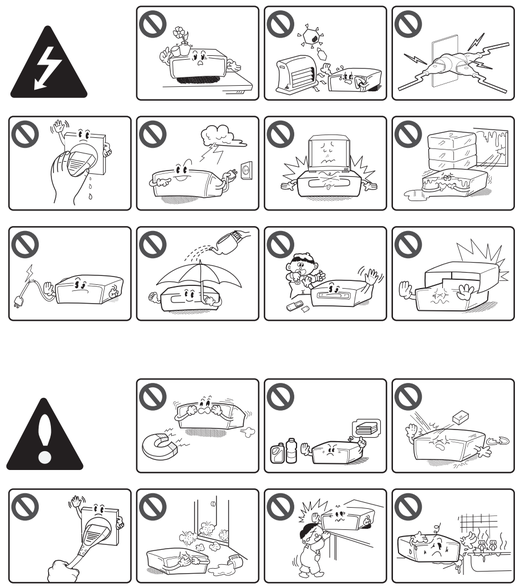

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
CLASSE 1 PRODUIT LASER
KELAS 1 PRODUK LASER
URZĄDZENIA LASEROWE KLASY 1

CAUTION: This product employs a Laser System.To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.
Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Disposal of your old appliance

1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Disposal of waste batteries/accumulators

Pb

1. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
2. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of Your old batteries/ accumulators will help to prevent potential negative consequences for the environment, animal and human health.
4. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city offi ce, waste disposal service or the shop where You purchased the product.

Declaration of Conformity

CE 0197

Hereby, LG Electronics European Shared Service Center B.V., declares that this MINI HI-FI SYSTEM is compliant with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V.
European Standard Team
Krijgsman 1
1186 DM Amstelveen
The Netherlands

or can be requested at our dedicated DoC website:

http://www.lg.com/global/support/cedoc/cedoc#

This device is a 2.4 GHz wideband transmission system, intended for use in all EU member states and EFTA countries.

Technology with the human touch

GUARANTEE

- LG Electronics U.K. Ltd. will provide the following services in order to expedite this Guarantee.

1. All faulty components which fail due to defective manufacture will be replaced free of charge for a period of 12 months from the original date of purchase.
2. The dealer (or his service agent) who sold the product will be reimbursed for any labour provided in the repair of this LG equipment, for a period of 12 months from the original date of purchase. These claims must be made in accordance with the published scale of service charges and relevant claims procedure.

PLEASE NOTE:

A. The dealer may restrict the guarantee to the original purchaser.
B. The dealer is not obliged to carry out service under guarantee if unauthorized modifications are made to the apparatus, or if non standard components are used or if the serial number of the apparatus is removed, defaced, misused, or altered.
C. Any claims made under guarantee must be directed to the dealer from whom the equipment was originally purchased. The dealer may, before carrying out service under guarantee, require a receipted account as evidence of the date of purchase.
D. We respectfully point out that your dealer is not obligated to replace batteries if they become exhausted or worn in use.
E. Aerial alignment and consumer control adjustments are not covered by this guarantee.

This guarantee does not affect your statutory rights.

- REQUIREMENTS TO MAINTAIN WARRANTY COVERAGE:
  RETAIN YOUR RECEIPT TO PROVE DATE OF PURCHASE. A COPY OF YOUR RECEIPT MUST BE SURRENDERED AT THE TIME GUARANTEE SERVICE IS PROVED.
- Product Registration Card :
  It is helpful to complete at least your name, address, phone, model & serial numbers and return it. This will enable LG to assist you in the future should you lose your receipt, your units be stolen, or should modifications be necessary.
- To obtain information or assistance:
  Call UK: 0344 847 5454 IE: 01 686 9454

MODEL NO.*	SERIAL NO.*	DATE OF PURCHASE.*

In all cases of difficulty - consult your LG dealer from whom the product was purchased

LGEUK Website : www.lg.com/uk
(Service website : www.lg.com/uk/support)