Life's Good

日本語

ENGLISH

取扱説明書
LG TONE INFINIM™
***Bluetooth*®ワイヤレスステレオ ヘッドセット**

Rev 1.0 JP

無断複写・転載を禁じます。LG Electronics Inc., 2016

注記：HBS-910の性能を最大限に発揮し、損傷や誤使用を防ぐため、HBS-910のご使用前にすべての情報をよくお読みください。

このマニュアルに誤字や記載情報の誤りがあった場合は、LG Electronics Inc.のみが変更、修正を行います。

HBS-910

www.lg.com

LG TONE INFINIM（HBS-910）は、*Bluetooth*技術を採用した軽量ワイヤレスヘッドセットです。

この製品は、A2DPまたはハンズフリー*Bluetooth*プロファイルをサポートするデバイスのオーディオアクセサリとして使用できます。

安全上の注意

⚠ 注意

お客様自身で分解、改造、修理しないでください。

高温または燃えやすいものの近くに製品を置かないでください。

お客様自身でバッテリーを交換しないでください。破裂する場合があります。

互換性のない充電器を使用すると、製品が損傷する場合があります。

小さいお子様が本製品の磁石または小さな部品を飲み込まないようご注意ください。

埋め込み型医療機器を装着されている場合は、ご使用前に医師にご相談ください。

イヤホンのケーブルは強い力で引っ張らないでください。

安全のため、製品に取り付けられたバッテリーは取り外さないでください。

リチウムイオンポリマーバッテリーは怪我の原因となる場合がある危険な内部部品です。

お客様自身でバッテリーを交換しないでください。バッテリーが損傷し、過熱や怪我の原因となります。

⚠ 警告

本製品を高い場所から落とさないでください。

製品に、水、アルコール、ベンゼンがかからないように気をつけてください。

湿気やほこりの多い場所に保管しないでください。

本製品に重い物を載せないでください。

本製品は防水製品ではありません。湿気や水を避けてください。

❗ メモ

汗で濡れた場合は、きれいに拭き取ってください。

イヤホンのイヤーピースは常に清潔にしてください。

HDスピーカー


接続先のデバイスの通信ネットワークがHD Voice通話に対応している場合は、高音質の音声通話や音楽を楽しむことができます。

Qualcomm® aptX™ audio


LG HBS-910は、Qualcomm aptXオーディオを採用しています。Qualcomm aptXオーディオは、音楽や映画をよりクリアなオーディオで楽しむことができる*Bluetooth*ワイヤレス技術です。

Qualcomm aptXオーディオに対応する携帯電話やオーディオデバイスの場合は、自動的に有効になります。


本体と付属品

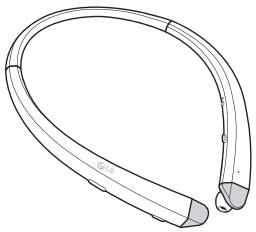

TONE INFINIM HBS-910
（中サイズの
イヤーピース装着）

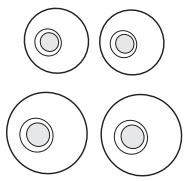

追加イヤーピース
（小および大）



Micro USB充電ケーブル




取扱説明書

メモ：実際の製品デザインは、取扱説明書内の画像と異なる場合があります。

⚠ 注意

必ず正規の付属品を使用してください。正規品以外の付属品を使用すると、製品を損傷する場合があり、保証の対象外となる場合があります。


各部の名称

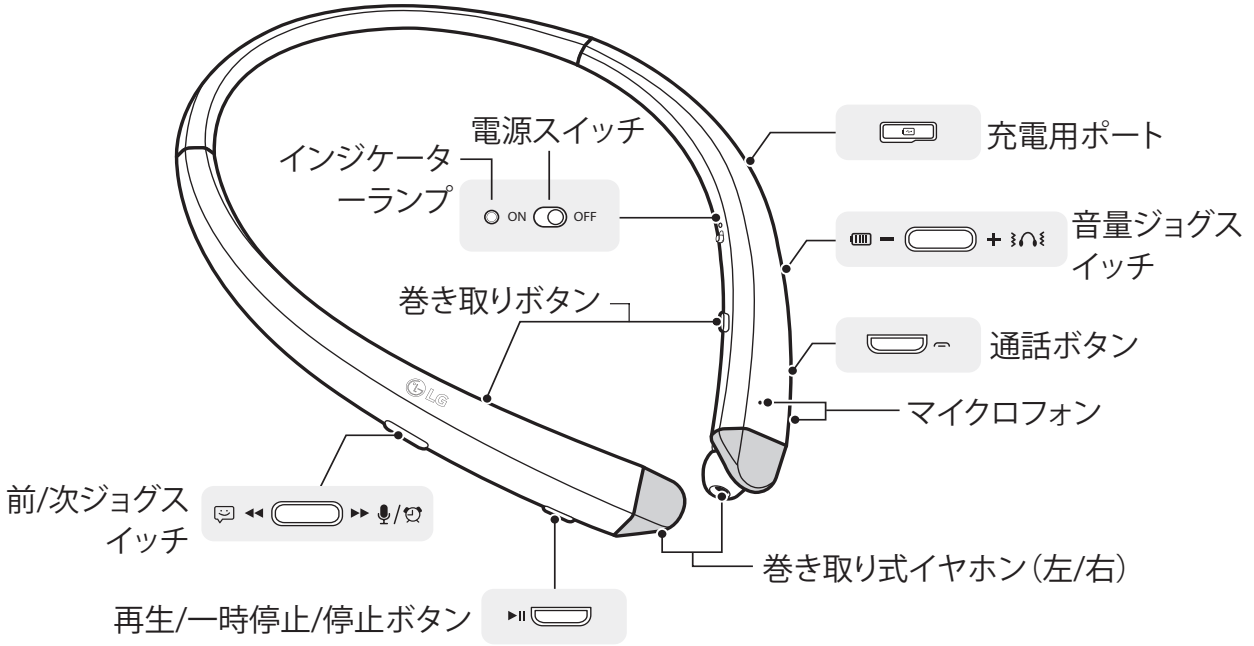

メモ:音量(16段階)を調節する際に、制御音が2回鳴ります。
音量レベル6以上の場合は長い制御音が鳴ります。

バッテリーの充電と通知

充電用ポートカバーを開き、充電器を充電用ポートに接続してください。

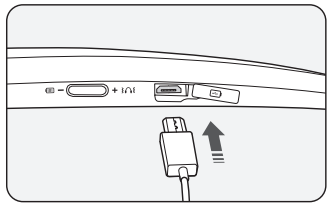

インジケーターランプ	赤色	紫色	青色
バッテリーの状態	充電	80%	完了

インジケーターランプとバッテリーレベルを音声で確認するには、**音量ジョグスイッチ**を音量を下げる(-)側にスライドして1秒間保持します。

バッテリーの状態	十分	普通	不足
インジケーターランプ	青色で3回点滅	紫色で3回点滅	赤色で3回点滅

HBS-910のペアリングと接続




イヤーピースを装着した後に操作を始める場合は、音声案内に従って簡単にペアリングして接続できます。

メモ：認証コード（PINコード）の入力を求められた場合は、**0000**を入力してください。

バッテリー不足とガイダンスされた場合は、ペアリングを行う前にバッテリーを充電します。

ペアリングが3分以内に完了しない場合は、電源が自動的にオフになります。電源が自動的にオフになった場合は、**電源スイッチ**をオフからオンの位置にスライドさせて電源をオンにします。

クイック接続

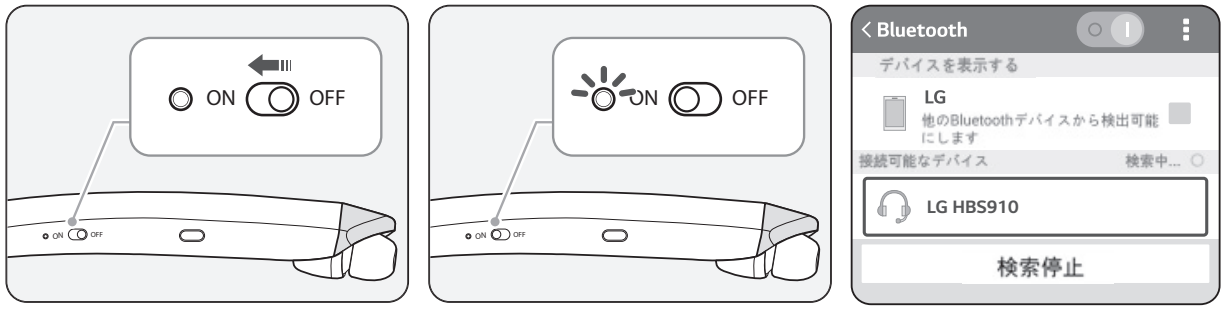

1 **電源スイッチ**をオンの位置にスライドさせ、電源を入れます。
2 青色のインジケーターランプが点灯し、HBS-910が[Search(検索)]モードに切り替わります。
3 携帯電話またはデバイスリストから、接続する**LG HBS910**を選択します。
4 接続が完了すると音声メッセージによる通知があります。
5 HBS-910をその他のデバイスとペアリングする際も、同じ手順で行います。

手動接続

1 **通話ボタン**を長押して、**電源スイッチ**をオンの位置にスライドさせて電源をオンにします。
2 青色のインジケーターランプが点灯し、HBS-910が[Search(検索)]モードに切り替わります。
3 接続するデバイスリストから**LG HBS910**を選択します。

複数接続

HBS-910は、携帯電話とPCに同時に接続することができます。

メモ：2つのデバイスに同時に接続する場合は、「メイン接続デバイス」に従って主な機能が動作します。

1 **通話ボタン**を長押して、**電源スイッチ**をオンの位置にスライドさせて電源をオンにします。
2 「クイック接続」のステップ2から4を行います。そのデバイスが「メイン接続デバイス」になります。
3 前に接続したデバイスを使用して、HBS-910に接続してみます。 そのデバイスが「サブ接続デバイス」になります。

自動再接続

本製品の電源をオンにすると、自動的にデバイスの検索を開始し、前に接続したデバイス(「メイン接続デバイス」および「サブ接続デバイス」)に接続します。(前回接続したデバイスが見つからない場合は、[Search(検索)]モードに切り替わります。)

目的のデバイスに自動的に接続されない場合は、接続するデバイスで本製品を検索し、手動で接続します。

インジケーターランプ

HBS-910の状態	説明
電源オン	青色のインジケーターランプが4回点滅します。
電源オフ	青色のインジケーターランプが4回点滅します。
Search Mode（検索モード）	青色のインジケーターランプが点灯します。
ヘッドセット/ハンズフリープロファイル接続中	青色のインジケーターランプが5秒ごとに点滅します。
通話接続中	青色のインジケーターランプが5秒ごとに点滅します。

携帯電話通話機能

機能	説明
電話を受ける/切る	**通話ボタン**を短く押します。 製品のバイブレーション機能をオフにしたい場合は、音量を下げる(-)側に**音量ジョグスイッチ**を短くスライドさせます。
通話する	携帯電話の使用中に通話する場合は、通話が自動的にHBS-910に接続されます。 携帯電話によっては、通話の切り替えに**再生/一時停止/停止ボタン**を2回短く押す必要があります。
リダイヤル	最後に電話した番号に電話をかけるには、**通話ボタン**を1秒以上長押しします。
音声ダイヤル	**通話ボタン**を短く押します。 音声ダイヤル機能に対応していない携帯電話の場合は、リダイヤル機能を利用できます。
通話を切り替える	通話中に**再生/一時停止/停止ボタン**を2回短く押します。 (これらのいずれかのボタンを押すたびに、携帯電話とHBS-910間で通話が切り替わります。)
通話中に電話を受ける	**通話ボタン**を1秒間長押しすると、通話中に別の電話を受けることができます。 先に通話していた方は、[割り込み通話]ステータスに切り替わります。 **通話ボタン**をもう一度1秒間長押しすると、最初の通話に戻ります。 通話中の電話を切ったり両方の電話を切るには、**通話ボタン**を短く押します。 (携帯電話の設定により動作が異なります。)
着信の拒否	**通話ボタン**を2秒間長押しします。
ミュートを有効にする/無効にする	**音量ジョグスイッチ**を音量を上げる(+)側にスライドして保持しながら、**前/次ジョグスイッチ**を◀◀位置にスライドして1秒間保持します。

注意:ミュートの無効化/有効化には両手を使用する必要があるため、運転中は操作しないでください。

メモ:音声ダイヤル機能とリダイヤル機能は、メイン接続デバイスまたは最後に通話したデバイスで動作します。(音声ダイヤル機能とリダイヤル機能は、ご利用の携帯電話によって動作が異なる場合があります。)

音楽の再生

機能	説明
再生	**再生/一時停止/停止ボタン**を短く押します。 接続デバイスで有効になっているプレーヤーから音楽が再生されます。
一時停止	**再生/一時停止/停止ボタン**を短く押します。
停止	**再生/一時停止/停止ボタン**を1秒間長押しします。
前の曲/次の曲の再生	**前/次ジョグスイッチ**を◀◀または▶▶位置に短くスライドさせます。
高速巻き戻し/早送り	目的のトラックのセクションまで**前/次ジョグスイッチ**を◀◀または▶▶位置にスライドさせます。
イコライザモードの変更	**再生/一時停止/停止ボタン**を2回短く押します。モードの変更はビープ音が鳴り、低音域ブースト(デフォルト)>ノーマル> 高音域ブーストの順に変わります。

音楽プレーヤーの切り替え

プレイバックの途中に停止し、2つの接続デバイスのいずれかで音楽を再生する場合は、HBS-910の音楽プレイバックとコントロールがそのデバイスのものに変わります。

振動通知設定

HBS-910を使用しないときは、**音量ジョグスイッチ**を音量を上げる(+)側にスライドして2秒間保持します。

振動通知をオフにすると、電話の着信時や通信範囲外にいる場合にも振動しません。

メモ:振動通知は、電源をオンにしたときに自動的にオンに設定されます。

通信範囲外

本製品に接続されているデバイスが有効な通信範囲外(33フィート/10メートル)にある場合は、通信シグナルが弱くなり、通信が切断されます。

デバイスが有効な通信範囲内に入ると、自動的にデバイスに再接続します。自動的にデバイスに再接続しない場合は、本製品の**通話ボタン**を押して、手動でデバイスに接続します。

複数のデバイスが接続されている状態で、使用していないデバイスが通信範囲外に入った場合は、本製品が振動し、音声メッセージによって接続が切断されたことが通知されます。この場合、自動再接続機能はサポートされません。


Find Me（本製品の検出）

ハンドセットを検出するには、図1と図2に示すように、**音量ジョグスイッチ**と**前/次ジョグスイッチ**を同時に同じ方向にスライドして1秒間保持します。

例

1 **音量ジョグスイッチ**を音量を上げる（+）位置にスライドしながら、**前/次ジョグスイッチ**を◀◀位置にスライドして1秒間保持します。

2 **音量ジョグスイッチ**を音量を下げる（-）位置にスライドしながら、**前/次ジョグスイッチ**を▶▶位置にスライドして1秒間保持します。

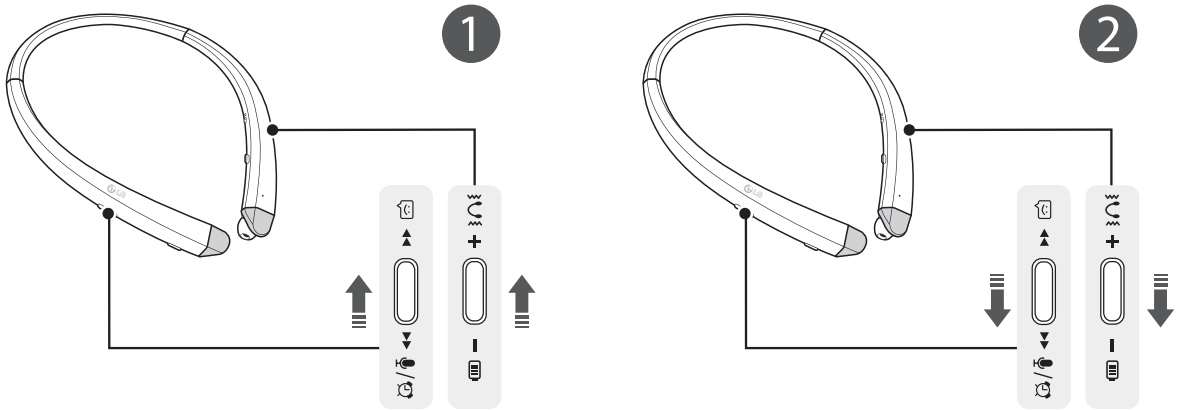

LG Tone & Talk™

Tone & Talkは、テキストや音声指示、通話などのさまざまな機能をサポートします。
Google Play™ストアにアクセスし、「LG Tone & Talk」で検索するか、右のQRコードをスキャンしてTone & Talkをインストールします。

メモ：Tone & TalkはAndroid™スマートフォンでご利用いただけます。

機能	動作
現在時刻アラート	1. Tone & Talkに移動して、**[現在時刻アラート]**を選択します。 2. **前/次ジョグスイッチ**を▶▶位置にスライドして1秒間保持します。
Voice Memo (音声メモ)	1. Tone & Talkに移動して、**[Voice Memo(音声メモ)]**を選択します。 2. **前/次ジョグスイッチ**を▶▶位置にスライドして1秒間保持します。 （一部のデバイスではこの機能に対応していない場合があります。）
新着メッセージを読み上げる	**前/次ジョグスイッチ**を◀◀位置にスライドして1秒間保持します。
Find Me (本製品の検出)	**音量ジョグスイッチ**と**前/次ジョグスイッチ**を同時に同じ方向にスライドして1秒間保持します。
短縮ダイヤルを使用して通話する	1. Tone & Talkに移動して、短縮ダイヤルの連絡先を選択します。 2. **通話ボタン**を短く2回押します。 (Tone & Talkアプリで番号を指定しておく必要があります。)
お気に入りを使用して通話する	1. Tone & Talkに移動して、お気に入りの連絡先を選択します。 2. **通話ボタン**を短く2回押します。 3. **前/次ジョグスイッチ**を◀◀位置または▶▶位置にスライドして1秒間保持し、番号を選択します。 4. **通話ボタン**を短く2回押します。
Call History (通話履歴)から電話をかける	1. Tone & Talkに移動して、**[Call History(通話履歴)]**を選択します。 2. **通話ボタン**を短く2回押します。 3. **前/次ジョグスイッチ**を◀◀位置または▶▶位置にスライドして1秒間保持し、通話履歴の番号を選択します。 4. **通話ボタン**を短く2回押します。

音声案内の言語を変更する	1. Tone & Talkで**[Advanced(詳細)]** > **[View more(詳細表示)]**を選択します。 2. **[Voice prompt language(音声案内の言語)]**を選択し、言語を変更します。

メモ：現在時刻アラート機能と音声メモ機能を同時に使用することはできません。
Tone & Talkアプリで選択する際、一度に使用できる機能は1つのみです。

HBS-910の機能一覧

機能	HBS-910の状態	動作
電源オン	電源オフ	**電源スイッチ**をオンの位置にスライドさせます。
電源オフ	電源オン	**電源スイッチ**をオフの位置にスライドさせます。
音量を上げる	通話/音楽オン	**音量ジョグスイッチ**を音量を上げる（+）位置にスライドさせます。
音量を下げる	通話/音楽オン	**音量ジョグスイッチ**を音量を下げる（-）位置にスライドさせます。
通話の転送	通話	**再生/一時停止/停止ボタン**を2回押します。
着信の応答	着信中	**通話ボタン**を短く押します。
着信時の振動通知を止める	着信中	**音量ジョグスイッチ**を音量を下げる（-）位置に短くスライドさせます。
振動オン/オフ	アイドル	**音量ジョグスイッチ**を音量を上げる（+）位置にスライドして2秒間保持します。
Find Me （本製品の検出）	電源オン	**音量ジョグスイッチ**と**前/次ジョグスイッチ**を同時に同じ方向にスライドして1秒間保持します。
通話の終了	通話	**通話ボタン**を短く押します。
割り込み通話	通話	**通話ボタン**を1秒間長押しします。
最後にかけた番号のリダイヤル	アイドル	**通話ボタン**を1秒間長押しします。

音声ダイヤル (ハンドセットが対応している場合のみ)	アイドル	**通話ボタン**を短く押します。
着信拒否	着信中	**通話ボタン**を2秒間長押しします。
マイクのミュートをオン/オフ	通話	**音量ジョグスイッチ**を音量を上げる(+)位置にスライドして押しながら、**前/次ジョグスイッチ**を◀◀位置にスライドして1秒間保持します。
ペアリングモード (手動)	電源オフ	**通話ボタン**を長押ししながら、**電源スイッチ**をオンの位置に2秒間スライドさせます。
バッテリー状態のチェック	アイドル	**音量ジョグスイッチ**を音量を下げる(-)位置にスライドして1秒間保持します。
再生	電源オン	**再生/一時停止/停止ボタン**を短く押します。
一時停止	音楽オン	**再生/一時停止/停止ボタン**を短く押します。
停止	音楽オン	**再生/一時停止/停止ボタン**を1秒間長押しします。
次の曲	音楽オン	**前/次ジョグスイッチ**を▶▶側に短くスライドさせます。
前の曲	音楽オン	**前/次ジョグスイッチ**を◀◀側に短くスライドさせます。
早送り	音楽オン	**前/次ジョグスイッチ**を▶▶位置にスライドして保持します。
巻き戻し	音楽オン	**前/次ジョグスイッチ**を◀◀位置にスライドして保持します。
イコライザの設定	音楽オン	**再生/一時停止/停止ボタン**を2回短く押します。

トラブルシューティング

問題	解決方法
電源がオンにならない	バッテリーのレベルを確認して充電してください。
HBS-910で通話できない	ヘッドセット機能およびハンズフリー機能に対応していない携帯電話の場合は、通話機能をご利用いただけません。 バッテリーのレベルを確認して充電してください。
HBS-910を携帯電話に登録できない	HBS-910がオンになっているか確認してください。 HBS-910が[Search(検索)]モードになっているか確認してください。 - **通話ボタン**を長押ししながら、**電源スイッチ**をオンの位置にスライドさせると、HBS-910が[Search(検索)]モードに切り替わります。
音量が小さい	HBS-910に接続されているデバイスのサウンドレベルを調節してください。

仕様と機能

項目	コメント
*Bluetooth*の仕様	V 4.1（ヘッドセット//ハンズフリー/A2DPプロファイル/AVRCPプロファイル）
バッテリー	バッテリー3.7 V/210 mAhリチウムイオンポリマー
待受時間	最大22.5日間*
通話時間	最大16時間*
音楽再生時間	最大10.5時間*
充電時間	2時間未満
定格入力電圧	DC 4.75 V～5.3 V、400 mA
動作温度	-10 ˚C（+14 ˚F）～+50 ˚C（+122 ˚F）
寸法/重量	145 mm（幅） x 175 mm（奥行） x 14.7 mm（高さ）/ 51 g
動作周波数	2402 MHzから2480 MHz

*特定の機能ではより電力を消費し、実際の時間は上記と異なる場合があります。

法規適合情報

ユーザーに対するFCC警告：

この機器は、FCC（米連邦通信委員会）ルールのパート15に準拠しています。

この機器の動作は、次の2つの条件を満たします。

(1) 有害な電波干渉を引き起こさず、

(2) 不適切な動作の原因となる可能性のある電波干渉を含む、あらゆる電波干渉の受信に対応します。

重要注意事項：

FCCのRF放射線に関する要件に準拠するため、アンテナやデバイスの改造は許可されていません。アンテナやデバイスの改造を行うと、デバイスがRF放射線の要件を超える可能性があり、ユーザーの機器を操作する権限が無効になる場合があります。

ユーザーに対するCE警告：

LG Electronics Inc.は、HBS-910がDirective 1999/5/ECの基本要件およびその他の関連条項に準拠していることをここに宣言します。

Bluetooth®は世界各国におけるBluetooth SIG, Inc.の登録商標です。

Qualcomm® aptX™ audioは、Qualcomm Technologies International, Ltdの製品です。

Bluetooth® CE 0168

FCC ID: ZNFHBS910

追加情報

1. RF放射線

この*Bluetooth*ステレオヘッドセットHBS-910は、ラジオトランスミッタおよびレシーバです。動作時には、周波数範囲が2.4～2.4835 GHzの無線周波数（RF）電磁場（マイクロ波）を送受信して*Bluetooth*搭載のモバイルデバイスと通信します。
ご使用の*Bluetooth*ヘッドセットは、RF放射線のガイドラインおよび規制に準拠して設計されています。このガイドラインと規制は、国家機関および国際的な保健機関により制定されたものであり、互換性のあるLG Electronicsの携帯電話すべての使用時に該当します。

2. 爆発危険性の注意

ガソリンスタンドなど引火性ガスが発生する可能性のある場所や粉塵が発生する場所に立ち入る場合は必ず事前に本製品の電源を切り、充電をしている場合は中止してください。静電気またはスパークが発生する場合、爆発や火災などの原因となります。

3. バッテリ情報

再充電可能なバッテリは、正しく使用すれば長期間使用できます。新しいバッテリや長期間使用されていないバッテリの場合、最初の数回の使用時には充電量が少なくなる場合があります。バッテリを極端な温度（-10°（+14°F）～+50°（+122°F）の範囲外の温度）にさらさないでください。バッテリ充電量を最大限に利用するには、室温で使用してください。バッテリを低温環境で使用すると、バッテリ充電量が減ります。バッテリは、+10°（+50°F）～+45°（+113°F）の温度でのみ充電可能です。

4. ご使用の*Bluetooth*ヘッドセットのバッテリのリサイクル

ご使用の*Bluetooth*ヘッドセットのバッテリは、一般廃棄物とは別に適切に処分する必要があります。廃棄の方法に関しましては、お住まいの自治体にご相談下さい。

■ 本端末の内蔵電池の種類は次のとおりです。

表示	電池の種類
Li–ion00	リチウムイオンポリマー 電池



5. 緊急通話には使用しないでください。

日本語

操作・故障に関するお問い合わせ窓口

LGモバイルお客様ご相談センター

0120-011-167
(フリーダイヤル)

※携帯電話・PHSからもご利用いただけます。

お客様からご提供いただいた個人情報はお問い合わせへの対応、およびその確認連絡に利用させていただきます。

利用目的の範囲内での当該製品に関連するグループ会社や協力会社にお客様の個人情報を提供する場合があります。

お客様の個人情報は適切に管理し、当社が必要と判断する期間保存させていただきます。

受付時間(土・日・祝日・年末年始を除く)

月～金曜日：9:00 ～ 18:00

故障についてのご案内

取扱説明書を再確認していただき、それでも異常があるときは電源を切り、LGモバイルお客様ご相談センターにご連絡下さい。

■ 保証期間中

別途記載の保証適用規定に基き、当社サービスセンターが製品交換させていただきます。
尚、本製品の保証期間はご購入より1年間となります。

■ 保証期間が過ぎている時

本製品の修理対応はございません。

■ 製品交換依頼の際にご連絡いただきたい内容

・ご住所、お名前、電話番号　・製品名、モデル名、製造番号
・お買い上げ日、ご購入店名　・故障の状況 (できるだけ具体的に)

■ 購入証明別添について

保証適用規定に基き製品交換をお申し出の場合は、ご購入年月日、販売店名、製品名が記載された購入証明をご提示下さい。

■ 保証適用規定

以下の場合は保証対象外となります。

・購入証明のご提示がない場合
・購入証明にご購入日、販売店名、製品名の記載がない場合
　または、購入証明の字句を書き換えられた場合
・使用による外観損傷
・不正な修理や改造
・火災、公害、地震、雷、風害、水害、その他の天災による故障、損傷
・本商品内部への液体の浸入による故障、損傷、または結露による腐食
・落下等による破損
・その他、通常の使用方法による故障ではないと当社が判断した場合

安全上の重要な情報

聴覚障害が起こらないようにするには

ハンズフリーカーキットを大音量で使用すると、永久的な難聴となる可能性があります。音量は安全なレベルに設定してください。長期間大音量で使用していると、それが普通に聞こえる場合がありますが、聴覚には悪影響を与える可能性があります。

耳鳴りがしたり、良く聞こえなかったりする場合は、ヘッドセットのご使用を止めて聴覚の診断を受けてください。音量が大きいほど、短期間で聴覚に影響が出る可能性が高くなります。聴覚の専門家は、聴覚を保護するために次のことをお勧めしています。

- ヘッドセットを大音量で使用する時間を制限する。
- 周囲の雑音を遮断するために音量を上げない。
- 近くにいる人の話し声が聞こえない場合は、音量を下げる。



ヘッドセットの音量レベルの調整方法の詳細については、ご使用のヘッドセットのユーザーガイドを参照してください。

ヘッドセットを安全にご使用いただくために

運転中のヘッドセットの使用は、都道府県により条例で禁止されている場合があります。
尚、本製品を使用することで、外部の音が聞こえ難くなることがあります。ご使用する環境を考慮し、安全ご使用下さい。

LG
Life's Good

ENGLISH

User's Guide

LG TONE INFINIM™

***Bluetooth*® Wireless Stereo Headset**

All rights reserved. LG Electronics Inc., 2016.

NOTE: For the best performance and to prevent any damage to, or misuse of the HBS-910, please read all of the information carefully prior to using the HBS-910.

Any modifications or changes to this manual due to typographical errors or inaccuracies of stated information shall only be made by LG Electronics Inc.

The LG TONE INFINIM (HBS-910) is a lightweight wireless headset that uses *Bluetooth* technology.

This product can be used as an audio accessory for devices supporting either the A2DP or Hands-Free *Bluetooth* Profile.

Safety Cautions

⚠ CAUTION

Do not disassemble, adjust, or repair the product arbitrarily.

Do not place the product near excessive heat or flammable material.

Do not arbitrarily replace the battery as it may explode.

The product may be damaged if an incompatible recharger is used.

Make sure that any infant or child does not swallow a magnet or a small component of the product.

If you have a medical device implanted, contact your doctor before use.

Do not pull the earphone cable with excessive force.

For your safety, do not remove the battery incorporated in the product.

Lithium-ion polymer Battery is hazardous component which can cause injury.

Do not replace the battery by yourself. The battery can be damaged, which can cause overheat and injury.

⚠ WARNING

Do not drop the product from a high place.

Make sure there is no water, alcohol, or benzene in contact with the product.

Do not store the product in a wet or dusty place.

Do not place any heavy objects on the product.

This product is not waterproof. Avoid humidity and water.

❗ NOTE

If the product is exposed to excessive sweat, clean the product.

Keep the earbud of the earphone always clean.

HD Speaker


If the communication network of the device you are connecting to supports HD Voice Calling, you can enjoy making voice calls and listening to music in high definition.

Qualcomm® aptX™ audio


LG HBS-910 is powered by Qualcomm aptX audio. Qualcomm aptX audio is *Bluetooth* wireless technology that provides clearer audio for listening to music and watching movies.

Qualcomm aptX audio is automatically enabled when a mobile phone or audio device supports it.


Product Components

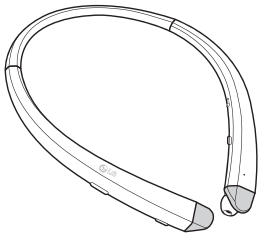

TONE INFINIM HBS-910 (Medium ear pieces installed)

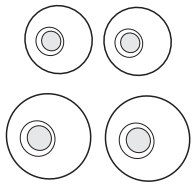

Extra Ear Pieces (small & large)



Micro USB Charging Cable




User's Guide

NOTE: Actual product design may differ from images shown in manual.

⚠ CAUTION

Always use official accessories with this device. The use of unofficial accessories may damage the device or void its warranty.


Product Description

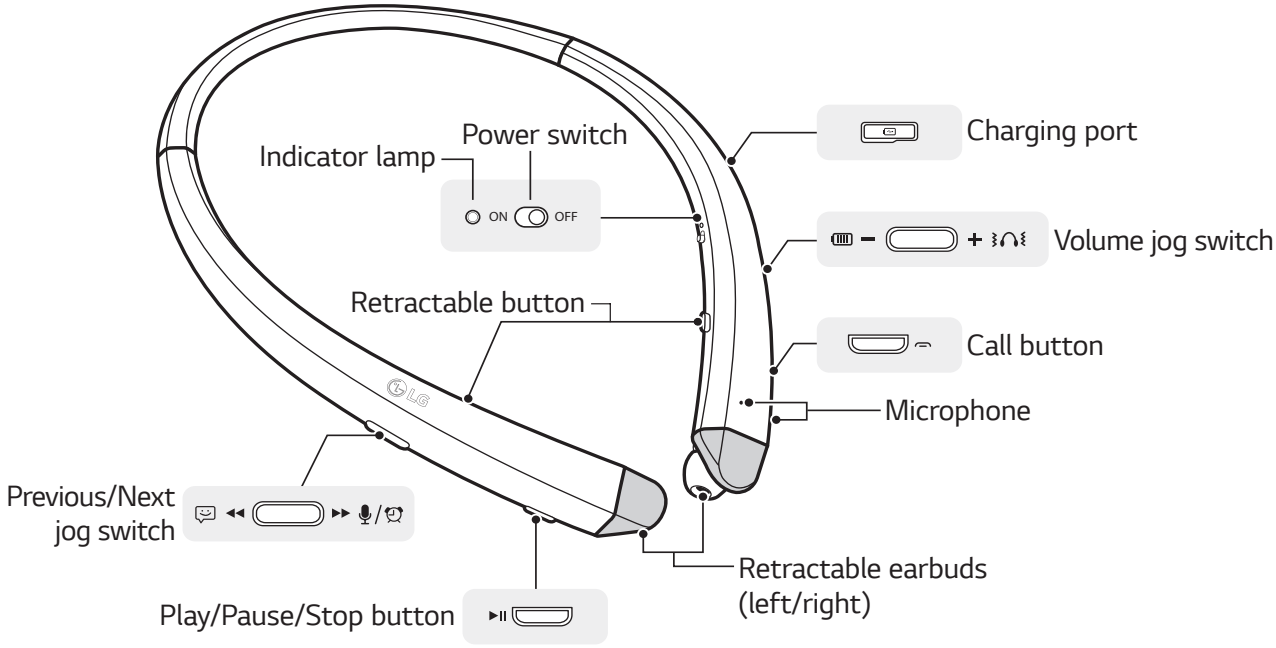

NOTE: When you control the volume (level 16), you will hear a control sound two times or as a long sound from volume level 6 and higher.

Battery Charging and Alerts

Open the Charging port cover and connect the charger to the Charging port.

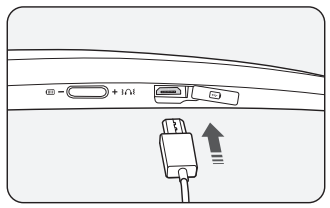


Indicator Lamp	Red	Purple	Blue
Battery Status	Charging	80%	Completed

Slide and hold the **Volume jog switch** in the volume down (-) direction for 1 second to check the Indicator lamp and battery level by voice.

Battery Status	Sufficient	Normal	Insufficient
Indicator Lamp	Blue flashes three times	Purple flashes three times	Red flashes three times

HBS-910 Pairing and Connecting

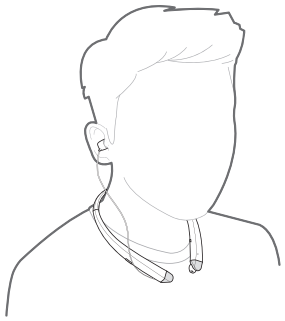


If you start the process after putting in your earbuds, you can easily pair and connect following the voice prompts.

NOTE: If you are prompted for the authorization code (PIN Code), type **0000**.

If you hear that the battery is insufficient, recharge the battery before proceeding with pairing.

If pairing is not completed within 3 minutes, the power automatically turns off. When the power automatically turns off, slide the **Power switch** from the OFF to the ON position to turn the power on.

Connecting Quickly

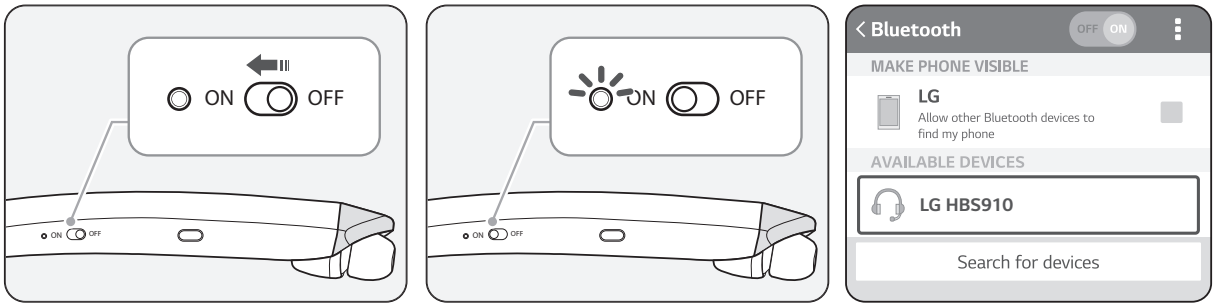

1 Slide the **Power switch** towards the ON position to turn on the power.

2 The blue Indicator lamp turns on and the HBS-910 switches to Search mode.

3 From the mobile phone or device list, select **LG HBS910** to connect.

4 A voice message will indicate that the connection is completed.

5 Use the same process to pair the HBS-910 with other devices.

Connecting Manually

1 Press and hold the **Call button** and slide the **Power switch** to the ON position to turn it on.

2 The blue Indicator lamp turns on and the HBS-910 switches to Search mode.

3 Select **LG HBS910** from the device list to connect.

Multiple Connections

The HBS-910 can be connected to a mobile phone and a PC simultaneously.

NOTE: If simultaneously connected to two devices, the main functions work based on the "Main Connected Device."

1 Press and hold the **Call button** and slide the **Power switch** to the ON position to turn it on.

2 Perform Steps 2 to 4 in "Connecting Quickly." This device becomes the "Main Connected Device."

3 Try to connect to HBS-910 using a previously connected device. This device becomes the "Sub Connected Device."

Automatic Reconnection

If you turn on the product, it automatically searches for and connects to the devices ("Main Connected Device" and "Sub Connected Device") to which it was previously connected. (If the product cannot find the device to which it was connected last time, the product switches to Search mode.)

If the product does not automatically connect to the device you want, search for your product in the device you want to connect to and connect it manually.

Indicator Lamp

HBS-910 Status	Description
Power On	The blue Indicator lamp flashes four times.
Power Off	The blue Indicator lamp flashes four times.
Search Mode	The blue Indicator lamp is on.
Headset/Hands-free Profile Connected	The blue Indicator lamp flashes once every 5 seconds.
Call Connected	The blue Indicator lamp flashes once every 5 seconds.

Mobile Calling Functions

Functions	Description
Receiving a Call/ Hanging Up	Briefly press the **Call button**. If you want to turn off the Vibration function of the product, briefly slide the **Volume jog switch** in the volume down (-) direction.
Making a Call	If you make a call using a mobile phone, the call is automatically connected to the HBS-910. On some mobile phones, you should briefly press the **Play/Pause/Stop button** two times to switch calls.
Redial	Press and hold the **Call button** for more than 1 second to place a call to the last number you called.
Voice Dial	Briefly press the **Call button**. If the mobile phone does not support the Voice Dial function, you can use the Redial function.
Switching Calls	Briefly press the **Play/Pause/Stop button** two times during a call. (Every time you press one of these buttons, the call switches to the mobile phone or the HBS-910.)
Receiving a Call While on the Phone	You can receive another call while on the phone by pressing and holding the **Call button** for 1 second. The existing call switches to a call waiting status. Press and hold the **Call button** again for 1 second to switch back to the previous call. Briefly press the **Call button** to hang up in the middle of a call or to hang up both calls. (It works differently depending on the mobile phone settings.)
Rejecting a Call	Press and hold the **Call button** for 2 seconds.
Enabling/Disabling Mute	Simultaneously slide and hold the **Volume jog switch** in the volume up (+) direction, and slide and hold the **Previous/Next jog switch** in the ◀◀ position for 1 second.

CAUTION: Do not disable/enable the mute while driving, as you need to use both hands.

NOTE: The Voice Dial and Redial functions work on the Main Connected Device or on the device on which you made the last call. (The Voice Dial and Redial functions may work differently depending on the mobile phone being used.)

Playing Music

Functions	Description
Play	Briefly press the **Play/Pause/Stop button**. Music will play from the activated player of the connected device.
Pause	Briefly press the **Play/Pause/Stop button**.
Stop	Press and hold the **Play/Pause/Stop button** for 1 second.
Play Previous/Next Song	Briefly slide the **Previous/Next jog switch** in the ◀◀ or ▶▶ position.
Fast Rewind/Forward	Slide the **Previous/Next jog switch** in the ◀◀ or ▶▶ position until you reach the desired section of the track.
Change Equalizer Mode	Briefly press the **Play/Pause/Stop button** twice. Changes modes with a beeping sound in the following order. Bass Boost (default) > Normal > Treble Boost.

Switching Music Players

If you stop in the middle of playback and then play music on either of the two connected devices, the HBS-910's music playback and control changes to that device.

Vibration Alert Settings

Slide and hold the **Volume jog switch** in the volume up (+) direction for 2 seconds when the HBS-910 is not in use.

If you turn off the vibration alerts, it will not vibrate even when a call is being received or you are out of communication range.

NOTE: The vibration alert is automatically set to the ON position when you turn on the power.

Out of Range

If the device connected to the product is out of effective communication range (33 feet / 10 meters), the communication signal becomes weak and the communication is lost.

If the device comes back within effective communication range, the product automatically reconnects to the device. If the device is not automatically reconnected, press the **Call button** on the product to connect to it manually.

If a device that is not in use goes out of communication range when multiple devices are connected, the product vibrates and a voice message indicates that the connection is lost.
In this case, the automatic reconnection function is not supported.


Find Me

To find handset, simultaneously slide and hold the **Volume jog switch** and the **Previous/Next jog switch** in the same direction for 1 second as shown in figures 1 and 2.

For example,

1 Simultaneously slide and hold the **Volume jog switch** in the volume up (+) position and the **Previous/Next jog switch** in the ◀◀ position for 1 second.

2 Simultaneously slide and hold the **Volume jog switch** in the volume down (-) position and the **Previous/Next jog switch** in the ▶▶ position for 1 second.

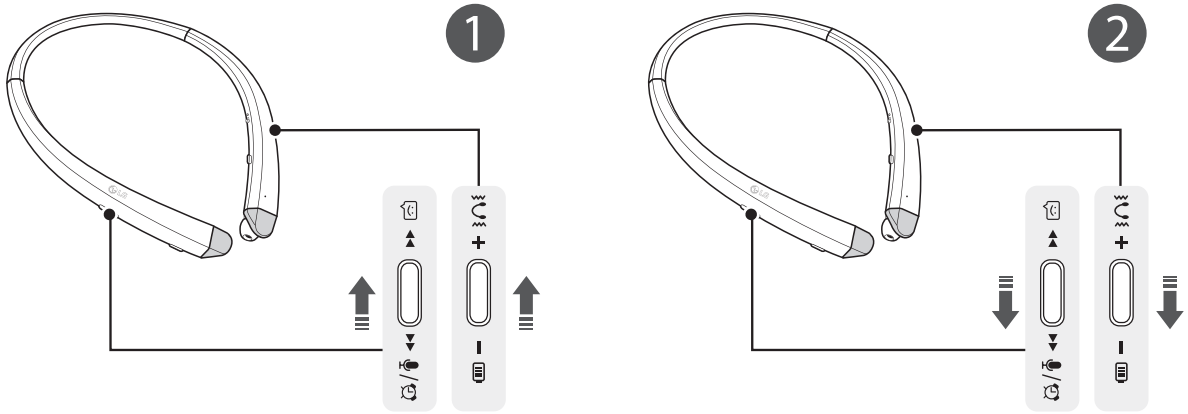

LG Tone & Talk™

Tone & Talk supports various functions including text and voice directions, and calling. Go to the Google Play™ store and search for "LG Tone & Talk" or scan the QR code on the right to install Tone & Talk.

NOTE: Tone & Talk can be used on Android™ smartphones.

Function	Action
Current Time Alert	1. Go to Tone & Talk and select **Current time alert**. 2. Slide and hold the **Previous/Next jog switch** to the ▶▶ position for 1 second.
Voice Memo	1. Go to Tone & Talk and select **Voice memo**. 2. Slide and hold the **Previous/Next jog switch** to the ▶▶ position for 1 second. (This feature may not be supported on some devices.)
Reading Recent Messages	Slide and hold the **Previous/Next jog switch** in the ◀◀ position for 1 second.
Find Me	Simultaneously slide and hold the **Volume jog switch** and the **Previous/Next jog switch** in the same direction for 1 second.
Using Speed Dial to Make a Call	1. Go to Tone & Talk and select a speed dial contact. 2. Briefly press the **Call button** two times. (The number should be specified in the Tone & Talk app.)
Using Favorites to Make a Call	1. Go to Tone & Talk and select a favorite contact. 2. Briefly press the **Call button** two times. 3. Slide and hold the **Previous/Next jog switch** to the ◀◀ or ▶▶ position for 1 second to select a number. 4. Briefly press the **Call button** two times.
Making a Call from Call History	1. Go to Tone & Talk and select **Call History**. 2. Briefly press the **Call button** two times. 3. Slide and hold the **Previous/Next jog switch** to the ◀◀ or ▶▶ position for 1 second to select a Call History number. 4. Briefly press the **Call button** two times.
Changing the voice prompt language	1. Select **Advanced** > **View more** in Tone & Talk. 2. Select **Voice prompt language** to change the language.

NOTE: The Current Time Alert and the Voice Memo features cannot be used at the same time. You can only use one function at a time when you make selections in the Tone & Talk app.

Summary of HBS-910 Functions

Function	HBS-910 Status	Action
Power On	Power off	Slide the **Power switch** to the ON position.
Power Off	Power on	Slide the **Power switch** to the OFF position.
Volume Up	Talking/ Music on	Slide the **Volume jog switch** to the volume up (+) position.
Volume Down	Talking/ Music on	Slide the **Volume jog switch** to the volume down (-) position.
Transferring a Call	Talking	Press the **Play/Pause/Stop button** twice.
Answering a Call	Ringing	Briefly press the **Call button**.
Stop Incoming Call Vibration Alerting	Ringing	Briefly slide the **Volume jog switch** to the volume down (-) position.
Vibration On/Off	Idle	Slide and hold the **Volume jog switch** to the volume up (+) position for 2 seconds.
Find Me	Power on	Simultaneously slide and hold the **Volume jog switch** and the **Previous/Next jog switch** in the same direction for 1 second.
Ending a Call	Talking	Briefly press the **Call button**.
Call Waiting	Talking	Press and hold the **Call button** for 1 second.
Last Number Redial	Idle	Press and hold the **Call button** for 1 second.
Voice Dialing (Handset Must Support)	Idle	Briefly press the **Call button**.
Call Reject	Ringing	Press and hold the **Call button** for 2 seconds.
Mic Mute On/Off	Talking	Simultaneously slide and hold the **Volume jog switch** to the volume up (+) position and the **Previous/Next jog switch** to the ◀◀ position for 1 second.
Pairing Mode (Manual)	Power off	Simultaneously press and hold the **Call button** and slide the **Power switch** to the ON position for 2 seconds.
Battery Status Check	Idle	Slide and hold the **Volume jog switch** to the volume down (-) position for 1 second.

Play	Power on	Briefly press the **Play/Pause/Stop button**.
Pause	Music on	Briefly press the **Play/Pause/Stop button**.
Stop	Music on	Press and hold the **Play/Pause/Stop button** for 1 second.
Next Song	Music on	Briefly slide the **Previous/Next jog switch** to the ▶▶ position.
Previous Song	Music on	Briefly slide the **Previous/Next jog switch** to the ◀◀ position.
Fast Forward	Music on	Slide and hold the **Previous/Next jog switch** in the ▶▶ position.
Rewind	Music on	Slide and hold the **Previous/Next jog switch** in the ◀◀ position.
Equalizer Settings	Music on	Briefly press the **Play/Pause/Stop button** twice.

Troubleshooting

Problems	Solutions
The power does not turn on	Check the battery level and charge it.
Cannot make a call with the HBS-910	If the mobile phone does not support headset and hands-free functions, you cannot use the calling features. Check the battery level and charge it.
Cannot register the HBS-910 to the mobile phone	Check whether the HBS-910 is turned on. Check whether the HBS-910 is in Search mode. - Simultaneously press and hold the **Call button** and slide the **Power switch** to the ON position and the HBS-910 switches to Search mode.
The sound is low	Control the sound level of the device connected to the HBS-910.

Specifications and Features

Item	Comments
Bluetooth Specifications	V 4.1 (Headset/Hands-Free/A2DP Profile/AVRCP Profile)
Battery	Battery 3.7 V / 210 mAh, Lithium-ion polymer
Standby Time	Up to 22.5 days*
Talk Time	Up to 16 hours*
Music Play Time	Up to 10.5 hours*
Charging Time	Less than 2 hours
Rated Input Voltage	DC 4.75 V ~ 5.3 V, 400 mA
Operating Temperature	-10 ˚C (+14 ℉) ~ +50 ˚C (+122 ℉)
Dimensions/Weight	145 mm (W) X 175 mm (L) X 14.7 mm (H) / 51 g
Operating Frequency	2402 MHz to 2480 MHz

*Certain features may use more power and cause actual time to vary.

Declaration of Confirmation

FCC NOTICE TO USERS :

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference and

(2) This device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE :

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

CE NOTICE TO USERS :

Hereby, LG Electronics Inc. declares that this HBS-910 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.

Qualcomm® aptX™ audio is a product of Qualcomm Technologies International, Ltd.

Bluetooth® CE 0168

FCC ID: ZNFHBS910

Additional Information

1. Radio frequency exposure

This *Bluetooth* Stereo Headset HBS-910 is a radio transmitter and receiver. When in operation, it communicates with a *Bluetooth* equipped mobile device by receiving and transmitting radio frequency (RF) electromagnetic fields (microwaves) in the frequency range 2.4 to 2.4835 GHz. Your *Bluetooth* Headset is designed to operate in compliance with the RF exposure guidelines and limits set by national authorities and international health agencies when used with any compatible LG Electronics mobile phone.

2. Explosion Hazard Caution

Please be sure to turn this product off and discontinue charging before entering common sites of flammable gas such as gas stations, and common sites of dust. Static electricity or sparks may cause an explosion and fire.

3. Battery information

A rechargeable battery has a long service life if treated properly. A new battery or one that has not been used for a long period of time could have reduced capacity the first few times it is used. Do not expose the battery to extreme temperatures, never above +50°(+122°F) or below -10°(+14°F). For maximum battery capacity, use the battery in room temperature. If the battery is used in low temperatures, the battery capacity will be reduced. The battery can only be charged in temperatures between +10°(+50°F) and +45°(+113°F).

4. Recycling the battery in your *Bluetooth* Headset

The battery in your *Bluetooth* Headset must be disposed of properly and should never be placed in municipal waste. Contact your local government to find out how to properly dispose of this device.

■ This terminal contains the type of battery listed below.

Displayed	Type of battery
Li–ion00	Lithium-ion polymer battery



5. Do no use for emergency calls.

Contact for questions related to operation and faults

LG Mobile Customer Service Center (Call service is only available in Japanese)

0120-011-167

(Toll Free)

※ You can also use the center from cell phones and PHS.

LG Electronics will use personal information provided by customers to respond to questions and to confirm the communication.

LG Electronics may provide customers' personal information to group companies and associated companies related to the product to the extent that they are used.

LG Electronics will appropriately manage customers' personal information and keep it as long as the company deems necessary.

Contact hours (excluding Saturdays, Sundays, holidays and year end.)

Monday through Friday : 9:00 ~ 18:00

Troubleshooting

Please check the operations manual. If the problem continues, turn off the power and contact the LG Mobile Customer Service Center.

■ During the warranty period

The LG Service Center will replace the product based on separately documented warranty conditions. The warranty period for this product is one year from purchase.

■ If the warranty period is exceeded

There will be no repair support for this product.

■ Please provide the following information when requesting product replacement.

- Name, address, telephone number
- Product name, model name, manufacturing number
- Purchase date, name of store where purchased
- Fault conditions (in as much detail as possible)

■ Attaching proof of purchase

When applying for product replacement based on warranty conditions, provide proof of purchase that contains purchase date, name of store where purchased, and product name.

■ Warranty conditions

The following are not covered by warranty.

- No proof of purchase is presented.
- Proof of purchase does not include date of purchase, name of store where purchased and product name. The text of the proof of purchase has been altered.

- External damage caused by use
- Improper repair or modification
- Faults or damage resulting from fire, pollution, earthquake, lightning, wind, water or other acts of God.
- Faults or damage caused by liquid entering the product, and corrosion caused by condensation
- Damage caused by dropping
- Any other fault not caused by normal usage, as determined by LG Electronics

Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your Handsfree car kit at a high volume.
Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing.

If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked.
The louder the volume, the less time is required before your hearing could be affected.
Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use Headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.



Please refer to your handset user guide for more information on how to adjust listening levels on your handset.

Using headsets safely

The use of headsets while driving is illegal in some jurisdictions. Using this headset may also make it difficult to hear external sound during use.Make sure to consider your surroundings and always use this device in a safe manner.


LG
Life's Good