# User/Installation Manual
# System Air Conditioner

Make sure to read the “Safety Precautions” carefully prior to using this product.
Please keep this manual in a place where the user of the product can see it at any time.
The product’s warranty is included in this manual.

**Model Type : Deluxe Wired Remote Controller**

Whisen installation license – When the product is being installed, make sure to check the installation technician's Whisen Installation License symbol of quality.
Having a technician with a Whisen Installation License install the product will guarantee the product's best performance and lifespan.
NOTICE : Installation and any service work must be done in accordance with this instruction manual and applicable law by a qualified professional who has completed the required LG training.

MFL71781809
Rev.02_040826

www.lg.com

Copyright © 2025 - 2026 LG Electronics Inc. All Rights Reserved.

# TIPS FOR SAVING ENERGY

Here are some tips that will help you minimize the power consumption when you use the air conditioner.
You can use your air conditioner more efficiently by referring to the instructions below:

- Do not cool excessively indoors. This may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, in a short period of time.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or reduce the cooling / dehumidifying functions.

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product.

### ⚠ WARNING

This symbol indicates potentially hazardous situation which, if not avoided could result in death or serious injury.

### ⚠ CAUTION

This symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



**Disposal of waste batteries/accumulators**

1. This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
2. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
4. For more detailed information about disposal of your old batteries/ accumulators, please contact your city office, waste disposal service or the shop where you purchased the product. (http://www.lg.com/global/sustainability/environment/take-backrecycling/global-networkeurope)

UK CA

Hereby, LG Electronics declares that the radio equipment type Wired Remote Controller is in compliance with the relevant statutory requirements.
The full text of the UK declaration of conformity is available at the following internet address :
http://www.lg.com/global/support/cedoc/cedoc#

CE

Hereby, LG Electronics declares that the radio equipment type Wired Remote Controller is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.lg.com/global/support/cedoc/cedoc#

**FOR DISTRIBUTION IN THE UNITED STATES ONLY - IF THERE ARE ANY DISCREPANCIES BETWEEN THE ENGLISH LANGUAGE VERSION OF THIS MANUAL AND THE FRENCH OR SPANISH LANGUAGE VERSIONS, THE ENGLISH LANGUAGE VERSION SHALL PREVAIL.**

**LEGAL DISCLAIMER:** All information provided herein is for informational or educational purposes only. It is not intended to be a substitute for professional advice. Please consult with your engineer or design professionals for application to your system. All illustrations, schematics, and information contained herein are LG Electronics U.S.A., Inc. proprietary information.

**NOTICE:** Installation and any service work performed must be done in accordance with this instruction manual and applicable law by a qualified contractor who has completed LG training to install and repair the LG equipment. For the design and/or installation and service of the LG HVAC Products, utilize or consult with the appropriate Engineering, Installation or Service manuals as well refer to the terms of the applicable LGEUS Standard Limited Warranty. LG disclaims any and all responsibility for improper installation of LG products, and any other claims, damages or liabilities arising from dealings with the contractor(s), including those contractors which are part of LG's referral program. Please refer to Resources for more information on the product's limited warranty, which sets forth the full terms and conditions, including, but not limited to, requirements regarding the use of a qualified contractor. Due to continuous product innovation LG HVAC products, the most current data may be accessed on www.lghvac.com.

LG and the LG logo, are registered trademarks of LG Corp.
Copyright (C) LG Electronics U.S.A., Inc. ALL RIGHTS RESERVED

# ⚠ WARNING

## Installation

- For electrical work, contact the dealer, seller, a qualified electrician, or an authorized service Center.
  – Do not disassemble or repair the product. There is risk of fire, electric shock, explosion, equipment malfunction, or injury.
- Request to the service center or installation specialty store when reinstalling the installed product.
  – There is risk of fire, electric shock, explosion, equipment malfunction, or injury.
- Do not disassemble, fix, and modify products randomly.
  – There is risk of fire, electric shock, explosion, equipment malfunction, or injury.
- The product shall be installed according to the national standards and local code.
- Apply totally enclosed noncombustible conduit in case of local building code requiring plenum.
- Use appropriate unit mounting procedures.
- Avoid direct sunlight.
- Avoid moist areas.
- Precautions when installing the product.
  – When installing the remote control, the indoor temperature cannot be accurately detected if air current occurs inside the wall.
  – If airflow is detected, all holes except the cable path should be blocked to prevent airflow from affecting temperature detection. (The hole can be blocked during installation by using field supplied items or by using the airflow cover (included with the controller.) Failure to install this part may diminish performance. If back plate sheet is not installed, system may not perform optimally.)
  – If airflow is generated but not blocked, the room temperature may be displayed higher or lower than the actual temperature, and the product may malfunction.

## In-Use

- Do not place flammable objects close to the product.
  – There is risk of fire, electric shock, explosion, equipment malfunction or injury.
- Do not allow product to get wet.
  – There is risk of fire, electric shock, explosion, equipment malfunction or injury.

- Avoid dropping the product.
  – There is risk of fire, electric shock, explosion, equipment malfunction or injury.
- If product gets wet, contact your dealer or authorized service center.
  – There is risk of fire, electric shock, explosion, equipment malfunction, or injury.
  If the instructions are not followed, it may cause death or severe injury of the user.
- Do not use sharp or pointed objects on product.
  – There is risk of fire, electric shock, explosion, equipment malfunction or injury.
- Do not touch or pull the lead wire with wet hands.
  – There is risk of product breakdown or electric shock.

## ⚠ CAUTION

### Installation

- If anyone other than a licensed professional installs, repairs, or alters LG Electronics air conditioning products, the warranty is voided.
  – All costs associated with repair are then the full responsibility of the owner.
- Do not install the unit in potentially explosive atmospheres.

### In-Use

- Do not clean using powerful detergents like solvent but use soft cloths.
  – There is risk of fire, electric shock, explosion, equipment malfunction or deformation.
- Do not press the screen using powerful pressure.
  – There is risk of product break-down or malfunction.

INFORMATION REQUIRED FOR WARRANTY

Staple your receipt to this page in case you need it to prove the date of purchase or for warranty purposes.

Write the model number and the serial number here:

Model number :

Serial number :

You can find them on a label on the side of each unit.

Dealer's name :

Date of purchase :

WARRANTY IS VOID if any installation or service work is not done in accordance with applicable law by a qualified professional who has completed the required LG training.

# TABLE OF CONTENTS


## 02 TIPS FOR SAVING ENERGY

## 02 IMPORTANT SAFETY INSTRUCTIONS

## 06 PRODUCT CONFIGURATION AND INSTALLATION OF REMOTE CONTROLLER

06 Product Composition
06 Installation of Remote Controller

## 09 STANDARD OPERATION

11 View Screen
12 Standard Operation
14 Indoor Air Quality
15 Ventilation
17 Room Ventilation operation

## 18 ADDITIONAL FUNCTIONS

## 21 ENERGY RECOVERY

## 22 SCHEDULE COMMERCIAL (STANDARD)

22 Daily Schedule Status
22 View and Edit Schedule
22 Add Schedule
23 Delete Schedule
23 Set Exception Date
23 Reset Schedule

## 24 SCHEDULE RESIDENTIAL (US)

## 27 TIMER

27 Easy Timer
27 Sleep Timer
27 OFF Timer
27 ON Timer

## 28 ENERGY

## 30 MONITORING

## 31 SETTINGS

34 Air Conditioner/Ventilation Settings
40 Service Settings

## 41 INSTALLER SETTINGS

42 Air Conditioner / Ventilation Installer Settings

## 54 USING THE LG THINQ APP

## 55 OTHER MODE OPERATION/OPEN SOURCE INFORMATION

55 Other Mode Operation
55 Open Source Information

## Product Composition




Remote Controller



Remote controller fixing screws (2EA)



Owner's & Installation Manual



Connecting wire (1EA) (Excluding the United States)



Remote controller fixing screws (1EA)

## Installation of Remote Controller

Follow the below guidelines for installing the remote controller.

**NOTE**

- When installing the wired remote controller, do not embed it inside the wall. (Doing so may cause temperature sensor failure.) Do not install a cable over 50 m. (Doing so may cause communication defects.)
- When installing the extension cable, carefully check the direction of the connectors on the side of the remote controller and the side of the product side before installation.
- Extension cable specification: Use AWG 24, 3 conductor equivalent or higher wired cables.
- Do not install cables longer than 50 m, as this may cause communication problems.
- Install the product so that it doesn't bend or cause a clearance with the wall.
- Incorrect wiring can cause damage to the product.
- To avoid damage by static electricity, touch the metal parts before handling the remote controller to discharge the static electricity from the body.
  * 10 m Cable model: PCW-QE10A

**1** Pull the cable from the wall and check the cable direction to install.

**2** Align the back cover (installation plate) and check the positions of two mounting holes on the wall.

**3** Fix the back cover on the installation position through the mounting holes by using screws.

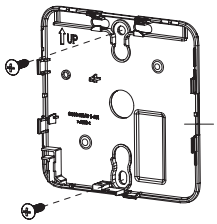


Back Cover (Installation Plate)

**4** Connect the power cable to the terminal at the bottom of the remote controller as shown in the figure below.

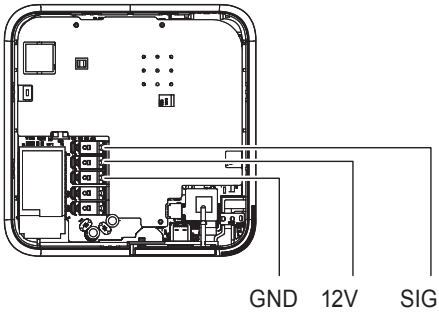


**5** Place the bottom of the remote control against underside of the back cover and connect the power cable in one of three directions, depending on your installation, as shown below.

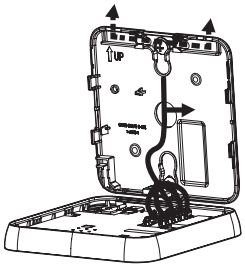


(Figure 1)

**6** You can install the wired remote controller cable in 3 directions. Install it in the direction most suitable for the installation environment.

- Remote control cable connection direction: Center back, top left, Top right
- When installing the remote control cable on an upper side, first remove the remote control cable guide groove before installing it.

※Use a long nose when removing the guide groove, and polish the cut surface after removing it.



**7** Fix the power cable on the back cover hook, and press the upper side of the remote control toward the back cover as in the figure.

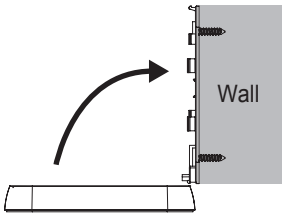


**NOTE**

- Failure to follow the guidelines may result in part damage due to interference with the machine.
- Be careful not to let the cable pass over the wireless equipment.

**8** Engage the remote control assembly screws and close the cover on the bottom.

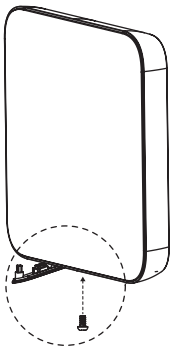

- Use the 'Remote Control Assembly Screws'

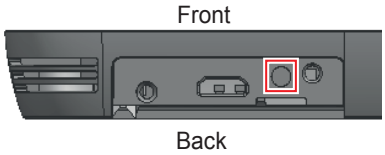

## Using Group Control

Connect 2 to 16 air-conditioner indoor units to a single controller for group control.

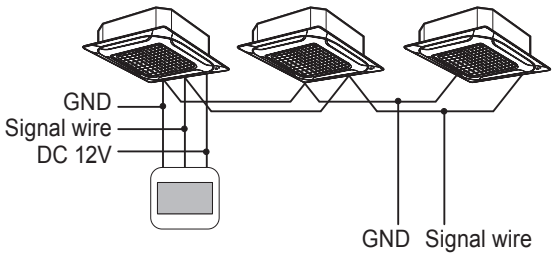


**NOTE**

- Connect using the group control cable. (Model : PZRCWRCG3)
- When using the group control, some advanced functions (excluding basic operation setting, fan speed, lock, and time setting) may be limited.

**1** Set one indoor unit to master and the remaining to slave.




#3 Switch OFF: Master (Default setting for shipment)




#3 Switch ON: Slave

**NOTE**

- For ceiling cassette and duct products, change the switch setting of the indoor PCB as above.
- For wall-mount type and stand type product, change the master/slave setting with the wireless remote controller.

**2** After completing the master/slave setting, turn off the power of the indoor unit, and turn on the power after 1 minute.

**NOTE**

- 2-Remo function is not supported.

# STANDARD OPERATION

**1** The welcome screen will be displayed after synchronizing with the indoor unit. Booting may require up to 90 sec.

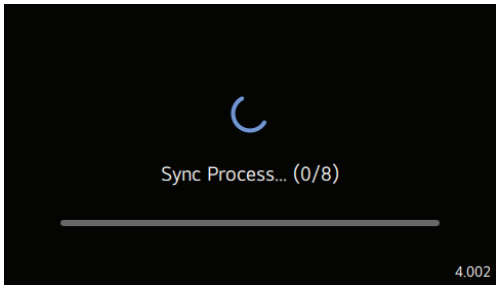


**2** Please check the settings displayed on the screen and set them up.

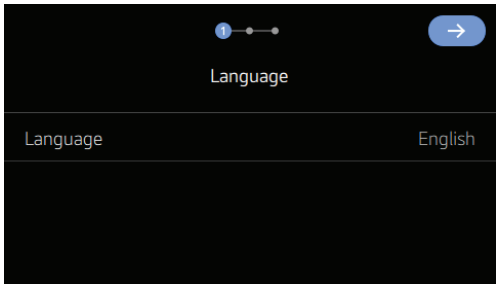


**3** When completely setting the installation wizard, the → button is changed into the ✓ button, and if you press the ✓ button, the installation is done.

| Function | Description |
|---|---|
| Language | A function to set the language displayed on the remote controller. |
| Time zone | Set the time zone, date, time, and time format displayed on the remote controller. |
| Date | |
| Time | |
| Time Format | |
| Scheduling method | It is a feature to set your product to operate automatically on a specified date and time.<br>– Commercial (Standard) type : This is a function that allows you to schedule the operation status of the product at a desired time.<br>– Residential (US) Type: This is a feature that allows you to set a continuous 24-hour schedule based on In-room/sleeping/ going out/weather conditions.<br>– Recommended for customers familiar with using thermostats in North America. |
| Edit Schedule Mode | The ability to set the operation status for each schedule mode and the timetable on which the schedule operates.<br>– Only enabled for the Residential US type.<br>– You can also set it up again after the installation wizard completes. |
| Select Season | It is a feature to change the season of a schedule. You can set up scheduled operation by season (summer, winter).<br>– Only enabled for the Residential US type.<br>– You can also set it up again after the installation wizard completes. |

| Function | Description |
|---|---|
| Use type | You can set the desired temperature setting method as single or dual.<br>• Single Desired Temperature Type: You can set the desired temperature of only one operation mode.<br>– If you select cooling operation, you can only set the desired cooling temperature.<br>– If you select heating operation, you can only set the desired heating temperature.<br>• Dual Desired Temperature Type: You can set the desired temperature for cooling and heating operation mode at the same time.<br>– Recommended for customers familiar with using thermostats in North America. |
| Temperature unit | A function to set the temperature unit displayed on the remote controller. |
| Standby Screen | A function to control the screen OFF time and brightness of the remote controller. |
| Humidity Display | A function that determines whether to display the humidity on the Standby Screen. |
| Main Screen Auto Return | A function that determines whether to automatically return to the main screen when there is no touch input for a certain period of time. |
| Sound | A function to set whether to output a sound when screen touch input is given. |

**NOTE**

- If you don't complete the installation wizard, the installation wizard will start every time you boot.
- Even after the installation wizard completes, you can still use the "Settings → Services → Installation Wizard". However, you cannot reset the "Schedule Method" once the installation wizard is finished. (The "Schedule Method" can be reset by running "Settings → Installer Settings → Factory Reset").
- Refer to the general settings and schedule page for detailed setup instructions.

# View Screen

The wired remote controller displays the following screens in accordance with the schedule method set in the installation wizard and the connected indoor unit.

**1** Air Conditioner




**2** General ventilation

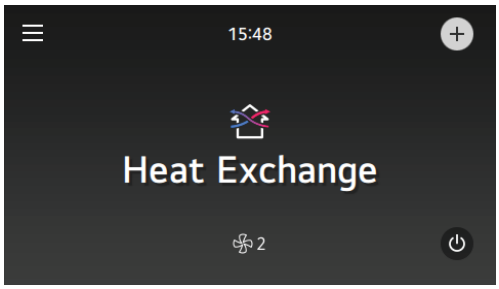


**3** DX Ventilation




**4** Housing Ventilation

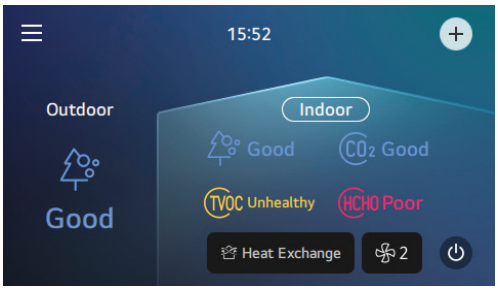


**5** Air Conditioner/Ventilation Interlock

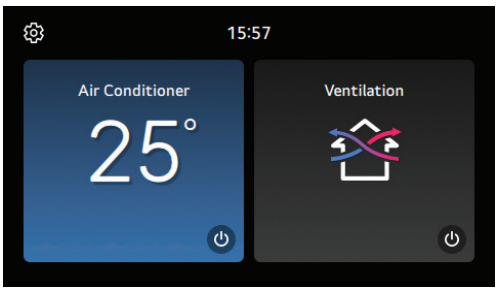


**NOTE**

- Please check the detailed description of each screen in the detailed description page.
- With the “Usage Type - ‘Dual’ or Schedule Method - ‘Residential (US)’ setting,” the top of the screen displays schedule-related information instead of the current time.

# Standard Operation

## Operating Information

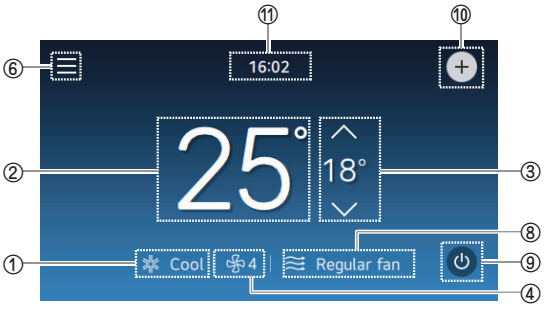


### ① Operation Mode

Select the operation mode to set the desired mode.

- Details of operation mode

| Operation Mode | Description |
|---|---|
| Cool | It cools down the room with pleasant and fresh wind. |
| Heat | It provides a warm breeze to the room. |
| Auto | The product automatically provides the wind of the right temperature for the room. |
| Dry | It removes moisture while providing weak cooling. |
| Fan | It blows the indoor air as is, not cold wind. |
| Emergency Heater | If you set to use the emergency heater, you can select the emergency heater mode which uses the heater. |
| Air Purify | Operates air purifier only. |
| Power Heat | Power heating rapidly increases the room temperature. |
| Power Cool | Power Cool rapidly reduces the room temperature. |
| Himalaya cool | A special function applied to models in the India region, which quickly reduces room temperature. |
| Monsoon dehumidifi-cation | A special dehumidification function applied to models in India. |
| EM Heat | A heater is all you need to heat your space. |
| Ice Cool Power | Ice Cool Power rapidly lowers indoor temperatures. Ice Cool Power mode runs continuously for up to 1 hour. |

**NOTE**

- The reason why the cool air isn't coming out immediately after cooling is started is because of its function to protect the compressor. After 3 minutes, the compressor operates, and a cold wind comes out.
- The emergency heater is activated under emergency heating conditions after the installation and related settings are done.
- Depending on the product, some functions cannot be set.
- "EM Heat" can be activated when the product is running on heating or power heating mode.

### ② Room temperature

Displays room temperature.

### ③ Set Temperature

The set temperature area for the current operation mode is displayed.

| Use type | Operation Mode | | Setting Temperature |
|---|---|---|---|
| Single | Cooling | | 16 ~ 30 °C (60 ~ 86 °F) |
| | Heating | | 16 ~ 30 °C (60 ~ 86 °F) |
| | Auto | Exclusive model for cooling | Cold, A Little Cold, Pleasant, A Little Hot, Hot |
| | | Model for both cooling/ heating | 18 ~ 30 °C (64 ~ 86 °F) |
| Dual | Auto | Cooling | 10 ~ 37.5 °C (50~99 °F) |
| | | Heating | 4 ~ 32 °C (40~90 °F) |

**NOTE**

- When using the dehumidification/fan mode operation, you cannot set the desired temperature.
- The setting temperature may vary depending on the type of indoor unit.

### ④ Wind Strength Settings

Select a wind strength icon and select a desired wind strength in the options list.

| | |
|---|---|
| 1 | Super Low |
| 2 | Low |
| 3 | Med |
| 4 | High |
| 5 | Power |
| A | Auto |

**NOTE**

- Depending on the product, some functions cannot be set.

### ⑤ Menu

Select the menu icon to enter the schedule, reservation, energy, and setting menus.

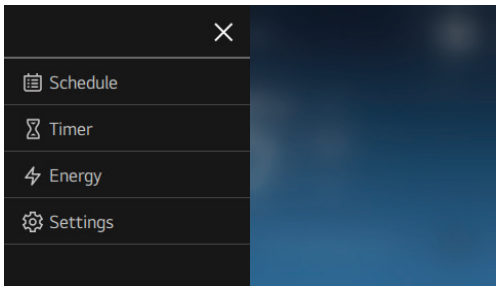


### ⑥ Smart Care

This is a function that uses AI to manage the indoors pleasantly and save energy.

- Select the floating icon to enter the floating menu and then select the Smart Care icon to use the functions.

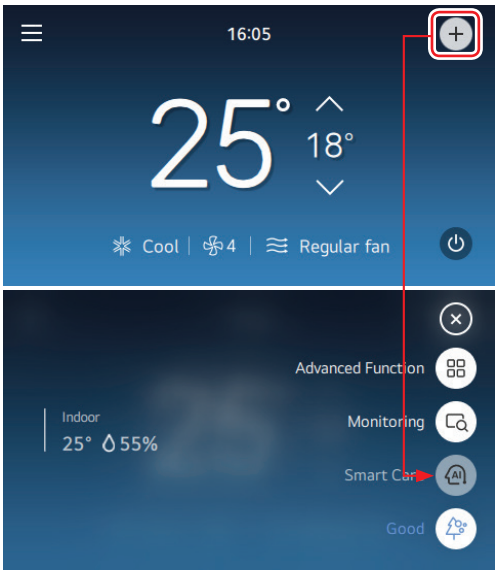


<For commercial use (Standard)>

- If Smart Care operation condition is not met, it will be in standby as displayed below.

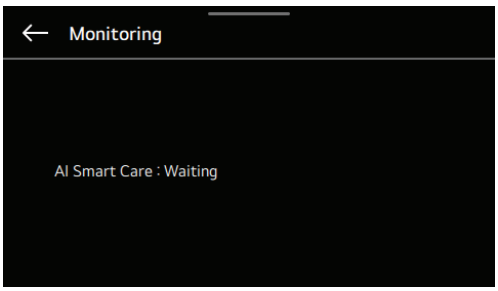


**NOTE**

- Smart Care may not be displayed/operate in some products.
- Smart Care only works when the product is cooling or heating.
- You may feel that cooling and heating are weak due to the power saving operation of Smart Care.
- Precisely set the date and time for the remote control and the central controller when installing the AI engine.

- If you do not set the date and time, it may display an incorrect result value.
- The site connected to our central controller prioritizes the date and time settings of the central controller above those of the wired remote control.
- In case of model for both cooling/heating, if the simultaneous operation of both cooling/heating is operating, Smart Care is not available.

### ⑦ Wind Direction

You can conveniently control the wind direction as you wish.

**NOTE**

- Some wind directions may not be available depending on the product functions.

### ⑧ Start/Stop button

You can turn on/off the indoor unit with the remote control.

### ⑨ Floating Button

Select the floating icon to enter the additional functions, monitoring, Smart Care, and indoor air quality menus.

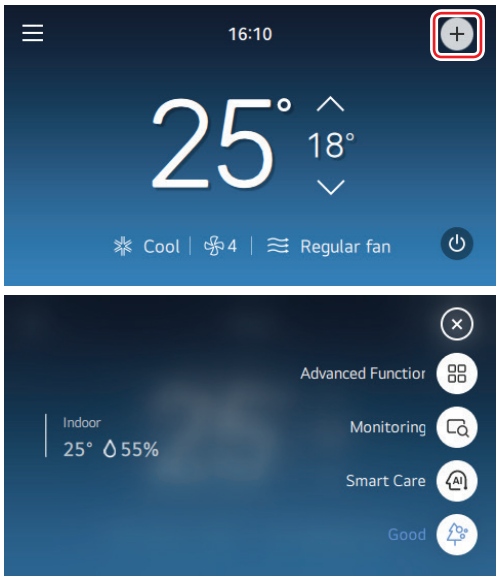


### ⑩ Current Time

Displays current time.

## Indoor Air Quality

A function to monitor the dust value measured by the dust sensor in the indoor unit.

You can check the concentration value of each of fine dust (PM 10), ultra-fine dust (PM 2.5), and extreme ultra-fine dust (PM 1.0) on the air quality screen.

The general quality displays the worst dust status value among the three dust status values.

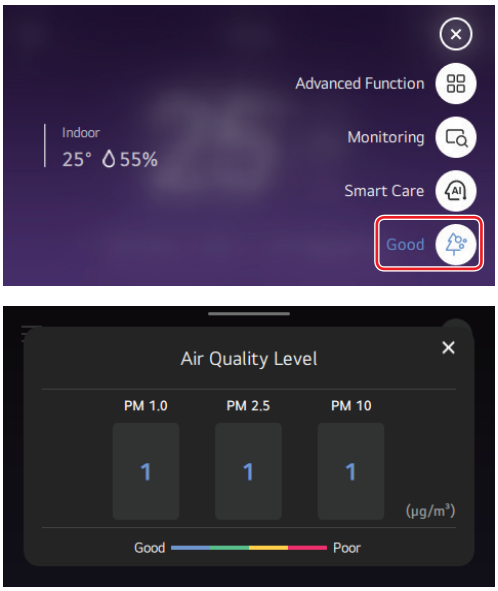


When indoor unit has Weather Interlocking function enabled




**NOTE**

- If the product has the Weather Interlocking function, the outdoor air quality information is also displayed on the Air Quality screen.
- Outdoor air quality is displayed as outdoor fine dust (PM 10) and outdoor ultra-fine dust (PM 2.5).
- During group control, information on the Master indoor unit is displayed on the screen.

# Ventilation

## For commercial use (Standard)

**1** Housing Ventilation

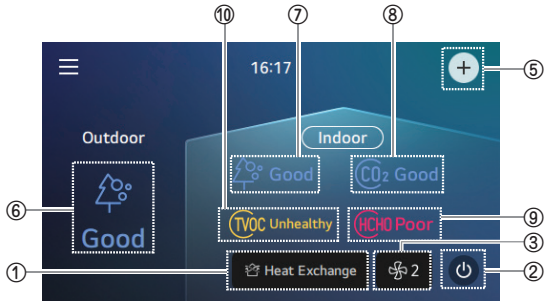


**2** General ventilation

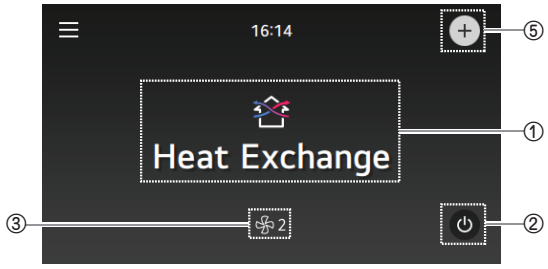


**4** DX ventilation

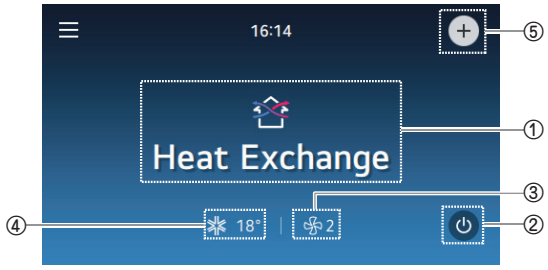


### ① Operation Mode

Select the operation mode to set the desired mode.

- Details of operation mode

| Operation Mode | Description | Applicable Model |
|---|---|---|
| Cool | It cools down the room with pleasant and fresh wind. | DX exclusive |
| Heat | It provides a warm breeze to the room. | DX exclusive |
| Auto | The product automatically provides the wind of the right temperature for the room. | DX exclusive |
| Bypass | A mode in which the exhausted air is ventilated not through the total heat exchanger. It is proper for spring or fall or when the room pollution is severe. | All models |
| Heat Exchange | A mode to ventilate through the total heat exchanger for both air supply/air exhaust. Good for summer or winter when the difference in temperature between indoors and outdoors is high. | All models |
| Auto | The room temperature and the outdoor temperature of the ventilation system are measured and the optimal ventilation mode is run automatically. | All models |
| Indoor circulation | Circulate the air in the room and keep it clean with filters. The lack of outside air can lead to high carbon dioxide levels in the room during prolonged use. | General ventila-tion |

### ② Start/Stop button

You can turn on/off the indoor unit with the remote control.

### ③ Wind strength Settings

Select a wind strength icon and select a desired wind strength in the options list.

| | |
|---|---|
| 1 | Low |
| 2 | High |
| 3 | Power |
| A | Auto |

**NOTE**

- Auto Wind Strength can be manually selected when connecting a $CO_2$ sensor or MEMS sensor.

### ④ Air Conditioner Mode and Desired Temperature

Set the air conditioner operation mode (cooling/heating/auto) and the desired temperature.

### ⑤ Floating Button

Select the floating icon to enter the additional functions, monitoring, energy recovery, and fine-dust status menus.

**NOTE**

- Depending on the product, some functions cannot be activated.

### ⑥ Outdoor Air Quality

It shows the fine dust concentration of the air that is filtered through the product and brought inside.

It is displayed as fine dust (PM 10), ultra-fine dust (PM 2.5), and extreme ultra-fine dust (PM 1.0).

### ⑦ Indoor Air Quality

It shows the fine dust concentration of the indoor air.

It is displayed as fine dust (PM 10), ultra-fine dust (PM 2.5), and extreme ultra-fine dust (PM 1.0).

### ⑧ $CO_2$

Displays the room $CO_2$ concentration (ppm).

### ⑨ HCHO (formaldehyde)

Shows the indoor formaldehyde (HCHO) concentration.

### ⑩ TVOC

Displays the indoor TVOC concentration.

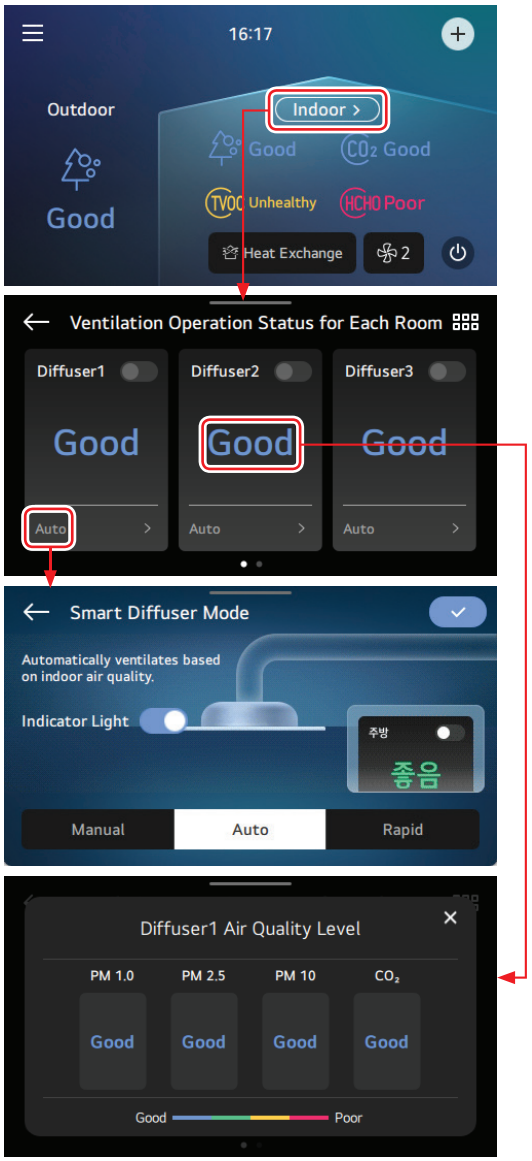


**NOTE**

- A function which can be used when connecting two or more smart diffusers.

# Room Ventilation operation

This function allows you to operate and view the operation status of the diffuser mounted on the indoor.

- You can check the air quality in each room. Select an air quality area to see the status of fine-dust value. When the mode is Manual, you can turn the diffusers on and off using the toggle buttons in each room.
- If the mode is Auto, the diffuser will automatically operate based on the current air quality.
- If the mode is Rapid, the diffusers will turn on in that room only, and the rest of the diffusers will turn off. Rapid mode ends after 30 minutes and changes to automatic mode.
- When you first turn on the product, you might see “--” when it recognizes the sensor. If you consistently see “--”, there may be a problem with the sensor.
- The behavioral LED toggle buttons can be used to turn the diffuser’s LEDs on and off.

# ADDITIONAL FUNCTIONS

You can use the additional functions of the product.

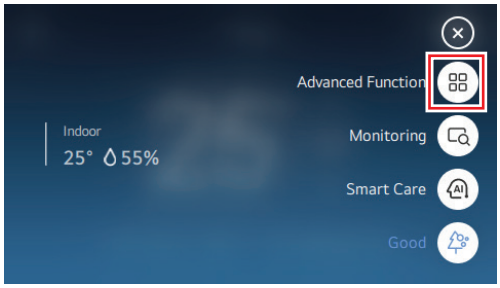


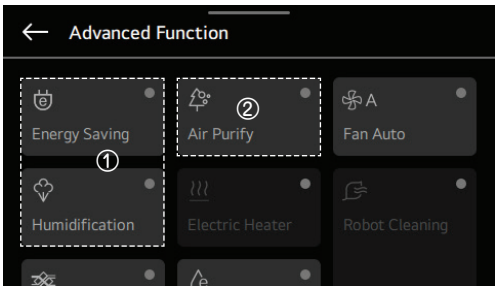


Additional function setting screen

① The functions of the large buttons need detailed settings other than Setting and Cancel.
Tapping an area above the item changes the Setting ↔ Cancel status and tapping an area below moves to the Setup Details page.

② You can only select between Setting or Cancel for the functions of small buttons without detailed settings.

**NOTE**

- Depending on the product, there may be features that are not supported.
- The color of the icons on the screen changes according to the setting status.
  Setting (On): Cancel (Off):

| Function Name | Air Conditioner | Ventilation | Description | Note & Option |
|---|---|---|---|---|
| Electric Heater | ○ | ○ | A function to enhance the heating capacity by turning on the electric heater for heating operation. Available only during the heating operation. | ON / OFF |
| Energy Saving | ○ | | It is the function to adjust the desired temperature during cooling operation to enhance the comfort of the user and improve the power-saving performance. | ON / OFF<br>• It's only possible when you're operating with cooling.<br>• You cannot set the Power-saving cooling, Concentration-adding wind, and the Auto custom wind functions at the same time. |
| Fan Auto | ○ | ○ | A function to set for the operation of the indoor unit fan when the indoor unit is thermal off. | ON / OFF<br>• When it is set to be ON, the indoor fan works when the product is working, and when the room temperature reaches the desired temperature and the outdoor unit stops, the indoor fan stops as well. |

| Function Name | Air Conditioner | Ventilation | Description | Note & Option |
|---|---|---|---|---|
| Comfort Cooling | ○ | DX | A function to automatically control the cooling strength and keep pleasant feeling without turning off the product even after the room temperature has reached the desired temperature. | ON / OFF<br>• The Comfort power-saving function is available only when the product is cooling. |
| Ventilation Kit | ○ | | A function to set the operation for the ventilation kit which can be additionally installed on the indoor unit. | ON / OFF |
| Cooling By Ventilation | ○ | | A function to save energy by using cool outdoor air during the cooling operation with the ventilation product interlocked. | ON / OFF<br>• The ventilation-interlock power-saving cooling function can work only when the air conditioner product is cooling and the ventilation product is operating. |
| Air Purify | ○ | ○ | It makes the indoor air clean and pleasant. | ON / OFF<br>• The air cleaning function is available only when the product is operating.<br>• When connected to the air cleaning-only model, it can work even when the product is not working. |
| Robot Cleaning | ○ | | A function to automatically clean the filter using a cleaner on the product when the air conditioner has been used for a certain period of time. It can be set 30 seconds after the operation stops. | ON / OFF |
| Humidification | ○ | ○ | A function to operate the humidifier on the product when the room is dry. | ON / OFF |
| Mosquito Away | ○ | | Set operation/stop of mosquito away function. | ON / OFF |

| Function Name | Air Conditioner | Ventilation | Description | Note & Option |
|---|---|---|---|---|
| Zone Control | ○ | | A function available when a duct-type air conditioner product is linked. You can set up to eight zones and control the operation of each zone. | The function can be used actively only when the zone type and the number of zones are set.<br>• The duct-type air conditioner product supports the zone control function and an additional damper control apparatus is required to perform the zone control.<br>• Differences according to zone type<br>- Old type: Only the zone operation status using the wired remote controller can be checked.<br>- New type (4 zones or 8 zones): The zone control and monitoring are available through the wired remote controller. |
| Fast | | ○ | It quickly ventilates the room. A function that operates the ventilation function more efficiently through the express setting of ventilation products. | On / Off |
| eSave | | ○ | Ventilates efficiently while also saving power. | On / Off |
| Wind Direction | ○ | | The wind strength automatically changed depending on the amount of indoors TVOCs and formaldehyde concentration. | On / Off |

# ENERGY RECOVERY

You can see how much energy your ventilation system has saved.

The temperature and humidity of the outside air / supply air / return air are displayed together.

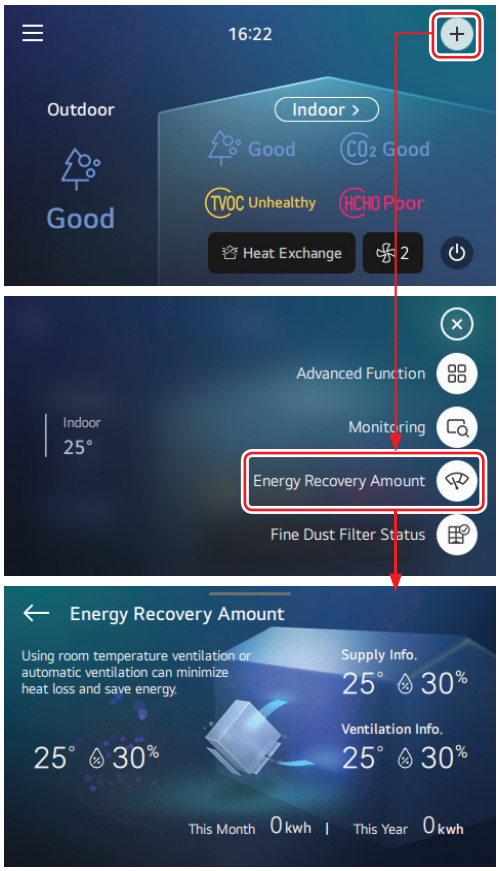


- Displays the current outside air / supply air / return air temperature and humidity.
- Displays the amount of energy saved this month, this year.
- If the current date has been changed, the energy amount may be reset.
- If you change the date on the device, the collected energy recovery may be reset.

# SCHEDULE COMMERCIAL (STANDARD)

The scheduling function that appear when the scheduling method is selected as Commercial (Standard).

Select the Schedule in the menu screen and move to the schedule settings screen.

Select the menu to set in the schedule settings screen and you can move to the details screen.

## Daily Schedule Status

A function to check the schedule status saved in the remote controller.

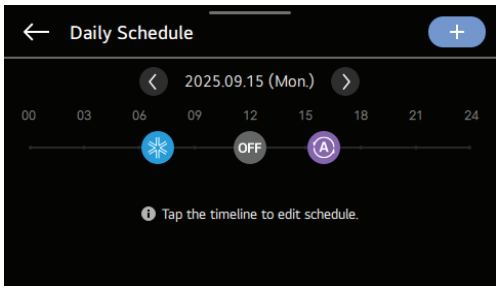


① If a schedule is booked, the operation mode icon is displayed on the time line at the scheduled time.

② An inactivated schedule is not displayed on the time line.

③ If various schedules are booked within one hour, ··· is displayed instead of the operation mode icon.

④ If you select ···, you can check the booked schedule by selecting the left or the right button in the booking details on a lower end of the screen.

## View and Edit Schedule

A function to check the schedule status saved in the remote controller.

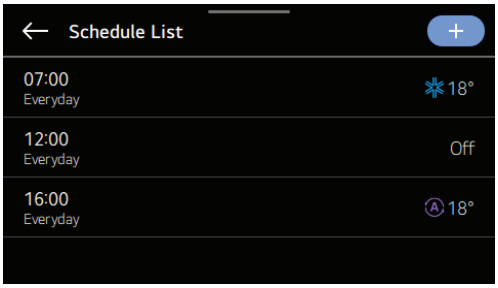


You can check the operation information (operation ON/OFF, operation mode, desired temperature) of the set schedule, the schedule time, period, and day.

You can edit it by selecting the booking information of the saved schedule.

## Add Schedule

You can add a schedule saved in the remote controller.

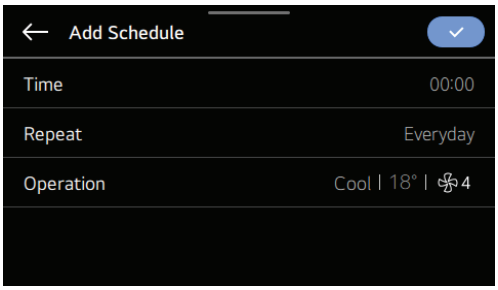


① You can add a new schedule by selecting the '+' button.

② You can set the time for performing the scheduled operation in the 'time settings.'

③ You can set the day or period for operating the schedule in the 'repeat' settings.

④ You can set the operation information for the schedule in the 'operation settings.'
- When OFF, you cannot set the mode, temperature, and the wind strength.

If you have completed adding the schedule by performing ① through ④ and pressing the ✓ button, a message saying 'the schedule is added' appears and you are moved to the schedule view and edit screen.

## Delete Schedule

You can delete the schedule stored in the remote controller.

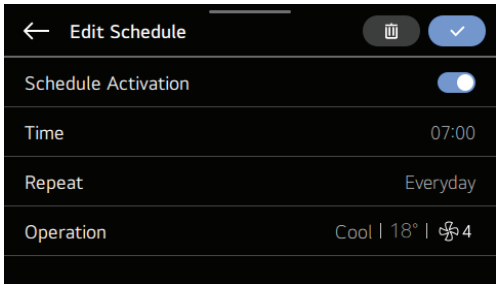


You can select the schedule event to be deleted in the schedule list and press the button to delete it.

## Set Exception Date

A function to automatically stop operation on the preset date.

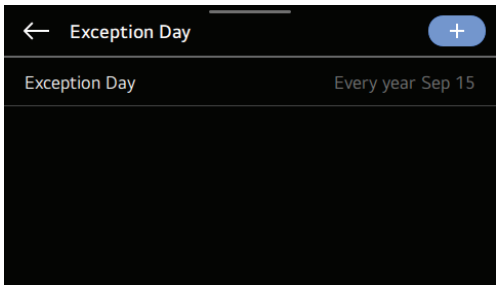


① Select the Set Exception Date item in the schedule list, and you are moved to the details screen for Designate Exceptional Date.

② You can check, add, modify, or delete the exceptional date information stored in the remote control in the Set Exceptional Date.

③ To add an exception date, designate the start/ end date on the details screen for registering the exceptional date, and press the button. Then, the exceptional date is stored.

Press the exceptional date to be edited, and move to the edit screen.

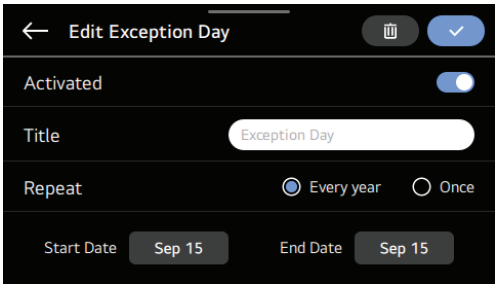


**NOTE**

- Activate: Set the activate/inactivate of the selected exceptional date.
- Title: Change the title of the selected exceptional date.
- Repeat: Modify the repeat or non-repeat of the selected exceptional date.
- Period: Modify the period of the selected exceptional date.

## Reset Schedule

All the schedule-related information will be initialized.

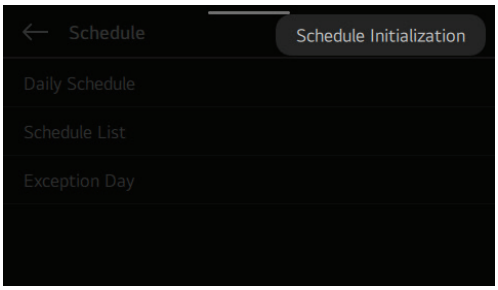

# SCHEDULE RESIDENTIAL (US)

The scheduling function that appear when the scheduling method is selected as Residential (US).

Select the Schedule in the menu screen and move to the schedule settings screen.

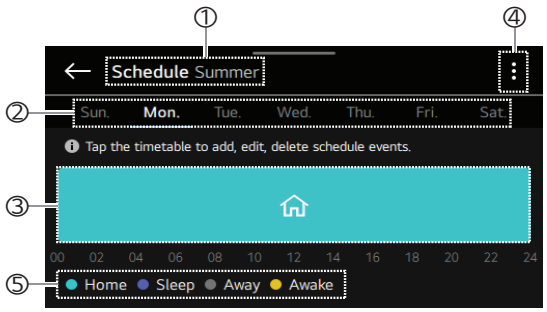


① Displays the seasonal information of the current schedule.
The schedule information for the day of the week selected in number ② is displayed in number ③.

④ Loads the settings menu related to scheduling.

⑤ This is the color legend of the schedule modes displayed in the schedule timetable.

**NOTE**

- The default mode is In-room.
- Refer to each item details page for how to set them up.

## Add/Edit

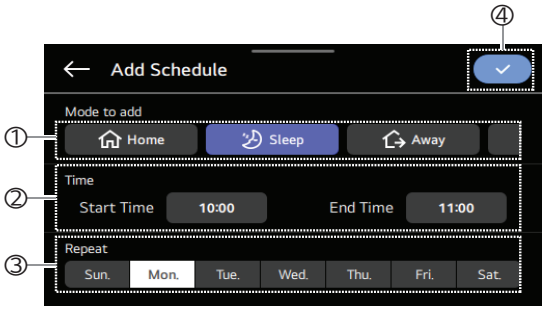


① Select the schedule mode.

② Set the time to operate the schedule.
If the start time is in the afternoon and the end time is in the morning, the schedule after midnight is set as a schedule for the next day.

③ Set the day to run the schedule.

④ Editing of the schedule will be completed and you will return to the schedule status screen.

**NOTE**

- You can only set one schedule mode for the set period.

## Delete

After selecting the schedule event to delete in the timeline, press delete in the Editing screen.

The schedule mode is maintained and only the content of the event set in the schedule mode is deleted.

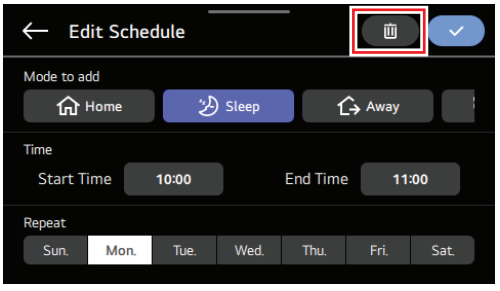

## Schedule Settings

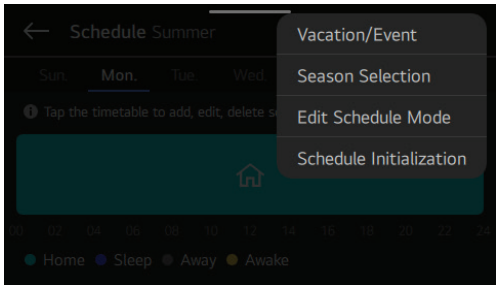


Select the settings icon to use the schedule more efficiently through the additional settings.

| Mode | Description |
|---|---|
| Vacation / Event | You can put an existing registered schedule action on hold and change it to an action mode that you want to use temporarily. |
| Season Selection | Create a comfortable indoor environment suitable to the season with a simple change.<br>– Use the schedule mode edit function first to set the schedule operation mode. |
| Edit Schedule Mode | Register the details of the schedule mode for each season. |
| Schedule Initialization | All the schedule-related information will be initialized. |

### 1 Holiday/Event

① Date to be used in holiday mode. Set the time and product operation criteria. Select the Back button to finish setting.

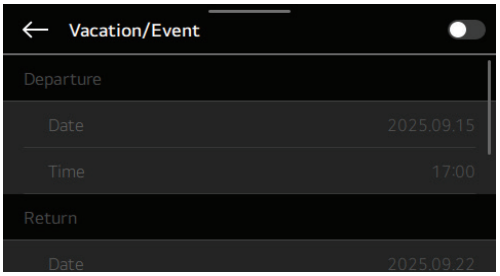


② When the set date arrives, the setting information is displayed at the top and the registered schedule operation is delayed.

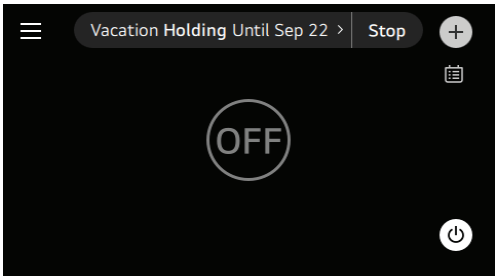


### 2 Select Season

① Use Select Season to change the season. Set a different schedule for every season.

| Select Season | Summer |
|---|---|
| | Winter |

② When the season changes, it operates under the changed season's schedule mode.

### 3 Edit Schedule Mode

① Select the operation to use in each schedule mode and set the detailed operation information.

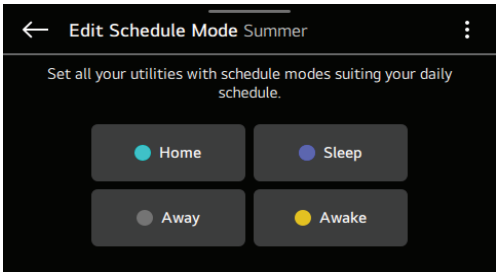


**NOTE**

• Select the Back button to finish setting.

## Display Schedule Status

You can check the schedule status on the Main Screen.

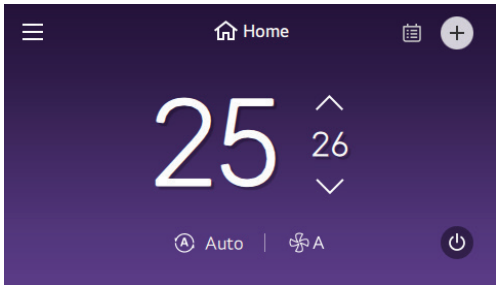


### 1 Default schedule

Displays the currently operating schedule mode.




① Select if you want to change the schedule mode.

**NOTE**

- If you select a different schedule mode, it will operate according to the behavior of that schedule mode.

### 2 Holiday Schedule

If the holiday schedule is operating, it displays Holiday.




① Displays the end date of the holiday schedule.

② Select to end the holiday schedule.

**NOTE**

- The default schedule starts once the holiday schedule ends.

### 3 Temporary Schedule Changes

The currently operating schedule is paused and another operation mode temporarily operates.




① Displays the temporarily changed schedule status.

② The duration of the schedule temporary change is displayed, and you can set the time if you select it.

| Function Names | Option |
|---|---|
| Schedule Holding Time | Next schedule, 30 Minutes, 1 Hour, 1 Hour 30 Minutes, 2 Hours, 2 Hours 30 Minutes, 3 Hours, 4 Hours, Continuous |

③ Uncheck “Temporarily change schedule” and return to the default schedule.

**NOTE**

- If any one of the four items (mode/set temp/reservation mode/flow rate) is changed, the Temporary change schedule function starts.
- The type of temporary schedule change is determined by the changed item.
- The action time of a temporary schedule change is based on the time set in the current time on the remote controller.
- Temporary schedule change function retains the changed schedule until the next registered schedule starts.
- To change the duration, select a time under Temporary schedule changes.

# TIMER

Select the timer item in the menu screen and move to the timer setting screen.

You can move to the details screen by selecting the menu you want to set in the timer settings screen.

## Easy Timer

You can conveniently set the booking for operation or stop.

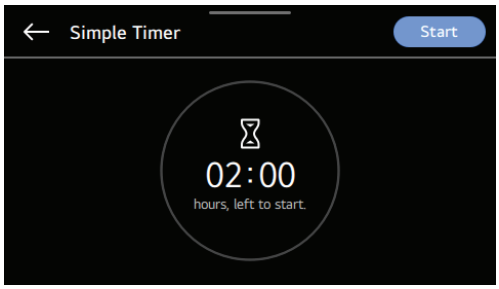


**NOTE**

- If the product operation is ON, the simple timer is turned OFF after the relevant time has passed.
- If the product operation is OFF, the simple timer is turned ON after the relevant time has passed.
- In the simple timer, if the operation is turned ON or OFF before the operation of the timer, the set timer is canceled.

## Sleep Timer

The sleep timer is a function to operate or stop the air conditioner in the sleep mode after a certain period of time before sleep.

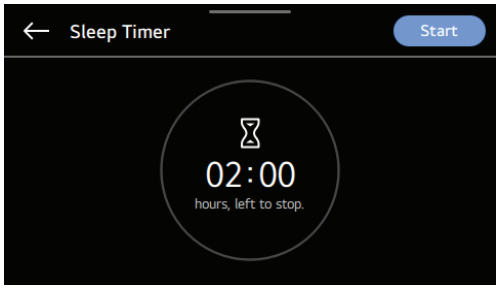


**NOTE**

- The sleep timer can be set when the product is operating.
- In the sleep timer, if the operation is turned OFF before the timer works, the timer is canceled.

## OFF Timer

The product is turned OFF automatically at the set time.

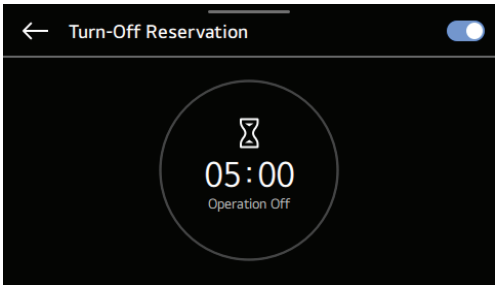


**NOTE**

- The OFF timer is not canceled even if the operation is turned ON or OFF before the timer works.

## ON Timer

The product is turned ON automatically at the set time.

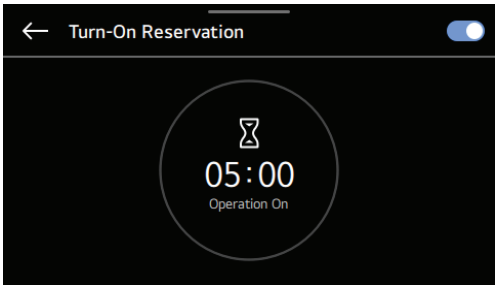


**NOTE**

- The ON timer is not canceled even if the operation is turned ON or OFF before the timer works.

# ENERGY

Tap on the energy item in the menu.

You can check energy usage and set power saving settings for energy saving.

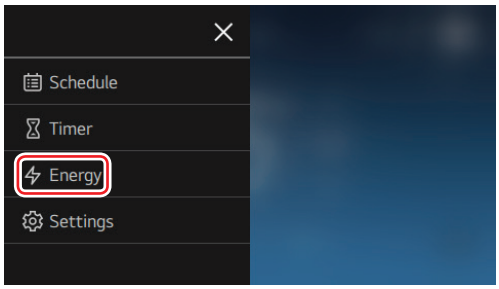


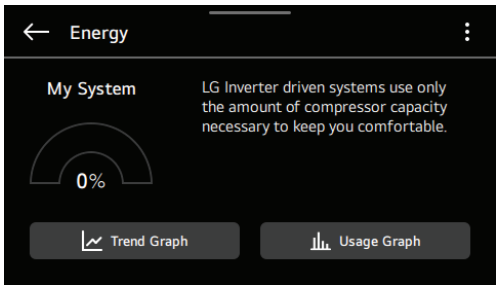


① **Trend Graph**

You can check the trend of the outdoor unit operation rate, indoor temperature, and desired temperature information during the day.

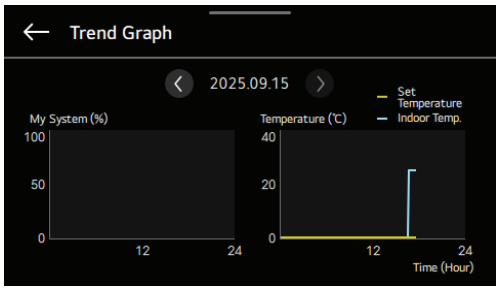


② **Usage Graph**

You can compare energy usage time/power usage on a weekly/monthly/annual basis. You can check by usage time/power usage.

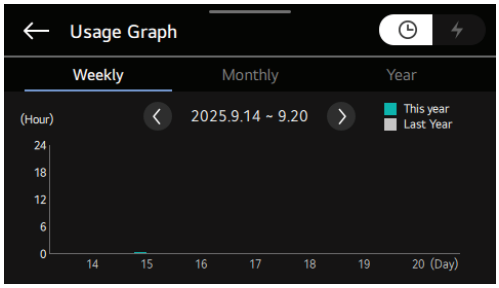


**NOTE**

- Depending on the units selected, the accumulated energy usage/power usage over a day/week/month is displayed.
- This function may not be provided depending on the indoor unit.

## Ai Energy Customized Operation & Convenient Check

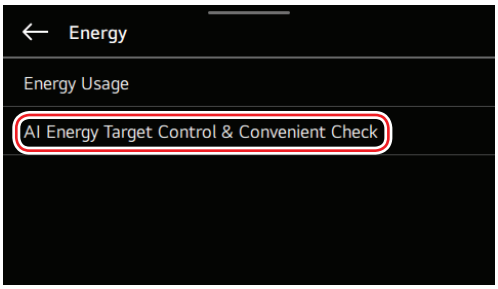


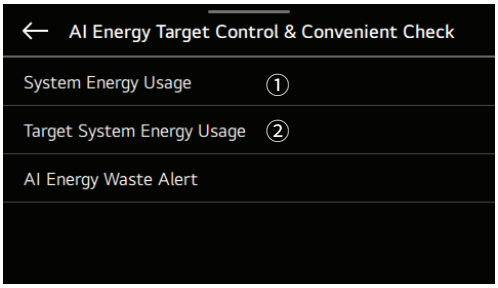


① **System Power Consumption**

When using Smart Care, you can check this month/year's savings rate as calculated by the AI controller.

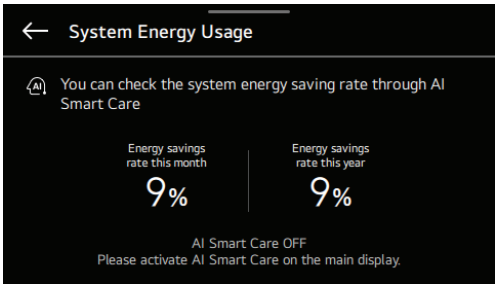

### ② System Target Power Consumption

If the target consumption of the month for which you want to set the system target power consumption to is selected, it moves you to the target consumption settings screen.

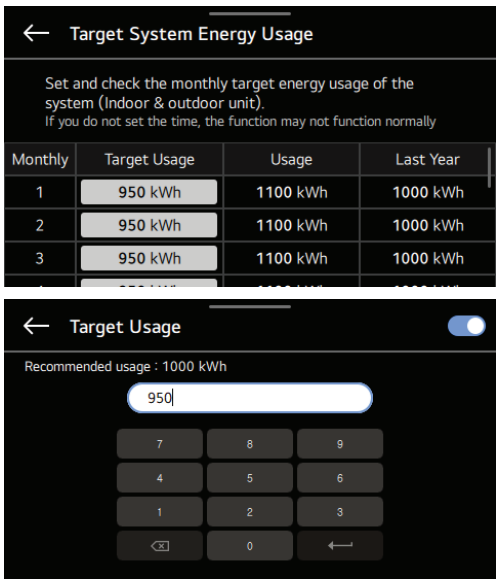


Target consumption screen

### ③ AI Energy Waste Alert

AI Energy Waste Alerts learns your usage patterns to help you save power with an on/off feature when it detects unusual operation patterns.

When you enable the energy-wasting notifications at the top of the screen, you can set the product auto-off, notifications frequency, and learning speed.

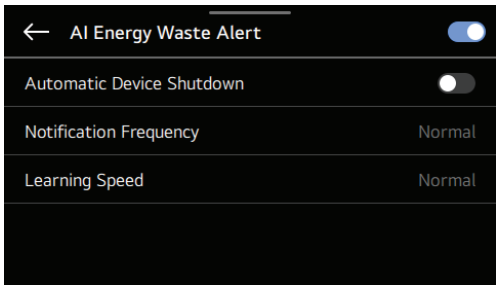


**NOTE**

- The configuration of the screen displayed may vary depending on the product connected.
- When setting the system target power consumption function in the central controller, you cannot use the system target power consumption function of the wired remote controller.

# MONITORING

In the menu screen, select the monitoring item and move to the monitoring screen.

In the center of the monitoring screen, the product operation status is displayed.

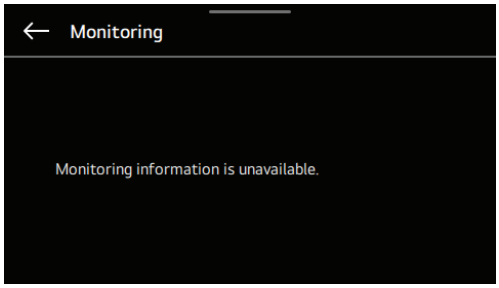


**NOTE**

- The main information that can affect the product operation is displayed on the left lower end of the home screen.
- The warning icons related to oil change, Uvnano operation, and errors are displayed on the left lower end of the home screen.
- UVnano is a compound word of “UV (ultraviolet rays)” and “nanometer (a unit of length)”.

| Icon | Description |
|---|---|
| | GHP outdoor unit engine oil replacement notification. Displayed when 10,000 hours of accumulated operation time of GHP outdoor unit have elapsed. |
| UV | Displayed when repair is needed during the UVnano function. If the UV alarm is displayed, contact LG Electronics Service Center for repair. |

# SETTINGS

Select Settings in the menu.

You can set the general settings, air conditioner/ventilation settings, service settings, and installer settings for the configuration of the usage environment.

Depending on the product, some functions cannot be set.

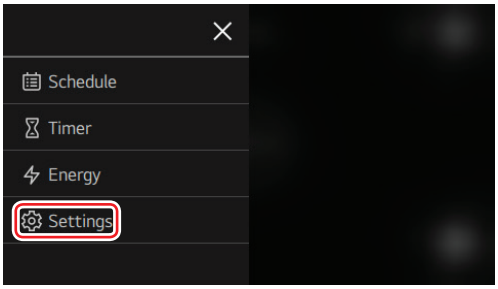


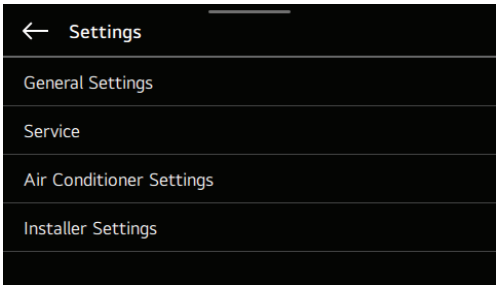


**General Settings**

| Function | Description | Note & Option | |
|---|---|---|---|
| Language | A function to set the language displayed on the remote controller. | 한국어 / English / Español / Français / Italiano / Deutsch / Русский / Polski / Português / 中文 / Čeština / Türkçe | |
| Setpoint Type | A function to set the setpoint type as single or dual.<br>Single setpoint type only allows the user to set one setpoint referring to one operation mode.<br>Dual setpoint type is a function that makes it possible to set the cooling and heating target temperature simultaneously. It is recommended for customers accustomed to using North American thermostats. | Single / Dual | |
| Temperature unit | A function to set the temperature unit displayed on the remote controller. | Celsius | Fahrenheit |
| | | 0.1 °C / 0.5 °C / 1 °C | The Fahrenheit temperature unit operates by receiving the temperature unit from the indoor unit. |

<table>
<tr><th>Function</th><th>Description</th><th colspan="3">Note & Option</th></tr>
<tr><td rowspan="3">Screen Saver</td><td rowspan="3">A function to adjust the screen off time of the remote control and the standby screen brightness.</td><td>Standby screen entry time</td><td>Standby screen brightness</td><td>Content</td></tr>
<tr><td>OFF<br>15 Sec<br>30 Sec<br>1 Min</td><td>OFF<br>25 %<br>50 %<br>75 %<br>100 %<br>Automatic</td><td>Current status<br>Date & Time<br>Weather<br>Air quality</td></tr>
<tr><td colspan="3">• If the Standby Screen Brightness is used at 100%, the LCD life may be reduced.<br>• The ‘Auto’ of the Standby Screen Brightness is activated only in the indoor unit with a human detection sensor kit.<br>• When it is set to be ‘Auto,’ the wired remote control standby screen brightness is controlled in accordance with the intensity of illumination detected by the human detection sensor.<br>• The content set value ‘Weather’ requires connection to the ThinQ app.</td></tr>
<tr><td>Date & Time</td><td>A function to set the date and time displayed on the remote control.</td><td colspan="3">-</td></tr>
<tr><td>Lock</td><td>A function to lock the buttons of the remote control for preventing children or any other person from using the remote control in an improper manner.</td><td colspan="3">All lock/Operation lock/Mode lock/Air volume lock/Temperature lock/Desired temperature range lock</td></tr>
<tr><td>System Reboot</td><td>A function to restart the remote control.</td><td colspan="3">-</td></tr>
<tr><td>Humidity Display</td><td>The function to decide whether to display humidity on the main screen and the standby screen.</td><td colspan="3">ON / OFF<br>• When set to ‘On’, the humidity value depends on the humidity detection location setting (installer setting).<br>1) Remote controller: Displays the humidity that remote control sensed.<br>2) Indoor unit: Displays the humidity that indoor unit sensed. However, if no information is received, humidity is not displayed.</td></tr>
</table>

| Function | Description | Note & Option |
|---|---|---|
| Display Opposite Mode | A function to set whether to display the status where the operation mode selection is unavailable in accordance with the outdoor unit operation when the cooling/heating mode is selected in a product which does not support the cooling/heating operation at the same time. | ON / OFF |
| Password | A function to set a password for preventing children or any other person from randomly changing the remote control settings. | - |
| Remote Controller Wi-Fi Pairing | To connect the remote control to the ThinQ app, the pairing function of the Wi-Fi module built in the remote control is activated. | - |
| Auto return to main screen | A function to set whether to use the auto return to the main screen when there is no touch input for a certain period of time. | ON / OFF |
| Sound | Activates the button touch sound effect. | ON / OFF |
| Dust mark type | A function to set the dust mark phrases. | LG/Standards<br>• It is displayed as fine dust (PM 10), ultra-fine dust (PM.2.5), and extreme ultra-fine dust (PM.1.0).<br>• Standards: PM 10, PM 2.5, PM 1.0 |

# Air Conditioner/Ventilation Settings

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th colspan="2">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td>Elevation Grill</td><td>○</td><td></td><td>A function to operate the elevation grille for cleaning the indoor unit filter.</td><td colspan="2">• Rise: Elevate the elevation grille toward the product.<br>• Stop: Stop the movement of the elevation grille.<br>• Fall: Lower the elevation grille toward the floor.</td></tr>
<tr><td>Robot Cleaning</td><td>○</td><td></td><td>The robot cleaning function is to allow the cleaner on the product to automatically clean the filter when the air conditioner is used for a certain period of time or longer. Sets the robot cleaning to work manually or automatically. It can be set 30 seconds after the operation stops.</td><td colspan="2">• Auto: When the indoor unit’s accumulated operating time exceeds 30 hours, the robot automatically performs cleaning.<br>• Manual: Robot cleaning is conducted manually</td></tr>
<tr><td rowspan="3">Auto Dry</td><td rowspan="3">○</td><td rowspan="3"></td><td rowspan="3">The auto dry function is to remove mold and humidity by drying the inside of the indoor unit when the product is turned OFF after a cooling operation.</td><td>General models</td><td>Auto dry operation time selection available model</td></tr>
<tr><td>Enabled/Disabled</td><td>Enabled/Disabled<br>10 min / 30 min<br>60 min / AI dry</td></tr>
<tr><td colspan="2">• AI Dry: Automatically control the drying time by referring to the humidity.<br>※ It is available only when there is a humidity sensor.</td></tr>
<tr><td>Filter Sign</td><td>○</td><td>○</td><td>You can check the Prefilter Status and initialize the filter usage time.<br>If you plan to reset the default value after the filter’s auto-inspect status is displayed, it’s best to clean the filter before resetting.</td><td colspan="2">• The remaining time to clean the filter is for reference, and the actual filter status may vary depending on the installation environment and usage conditions.<br>• When dust is put on the filter, the cooling/heating capacity is lowered with a high electricity charge, so please clean the filter when the time comes.<br>• Setting the auto-inspect filter function saves the filter’s initial status. The auto-inspect filter function runs every 720 hours to check if the filter is clogged and displays the results.</td></tr>
</table>

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| Wi-Fi | ○ | | This feature enables or disables the Wi-Fi module connected to the indoor unit.<br>When set to Disabled, the Wi-Fi pairing menu is disabled. | - |
| Wi-Fi pairing | ○ | ○ | It is the function to perform the pairing function of the Wi-Fi module connected to the indoor unit. | - |
| Change Temperature | ○ | ○ | The conversion temperature is a function to set a temperature by which cooling and heating operation is automatically converted according to a temperature. | 1~7 °C (2~14 °F) |
| Deadband | ○ | | Dual Desired Temperature<br>This feature sets the minimum difference between the heating and cooling desired temperatures referenced by the autopilot. When using dual desired temperatures, the cooling desired temperature must always be higher than the heating desired temperature. Deadband proactively prevents the desired cooling and heating temperatures from reversing. | Deadband setting is enabled when using Dual Desired Temperature.<br>• If the cooling desired temperature for Dual Desired Temperature Autopilot drops below the heating desired temperature by more than the deadband setpoint, the heating desired temperature value will drop at the same time due to the deadband limit.<br>• If you increase the cooling desired temperature in Dual Desired Temperature Autopilot beyond the cooling desired temperature by more than the deadband setpoint, the deadband limit will cause the cooling desired temperature value to increase at the same time. |
| Zone Name | ○ | | The name of each Zone to be used for zone control can be determined by directly typing it according to the user's style. | - |
| Comfort Cooling | ○ | ○ | A function to set the outdoor unit comfort power-saving operation stage value. | Stage 1 / Stage 2 / Stage 3 |

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th colspan="2">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td>ODU Refrigerant Noise Reduction</td><td>○</td><td>○</td><td>A function to set the refrigerant noise reducing function of the outdoor unit.</td><td colspan="2" rowspan="3">• This function is available only if the outdoor unit Master / Slave setting of the installer settings is Master.</td></tr>
<tr><td>Defrost Mode</td><td>○</td><td>○</td><td>A function to set the defrosting mode operation of the outdoor unit.</td></tr>
<tr><td>Smart Load Control</td><td>○</td><td>○</td><td>A function to set the active power-saving stage value of the outdoor unit. (Active power-saving is a function to operate by calculating the required performance from the air temperature and humidity in the indoors and the outdoors.)</td></tr>
<tr><td>Low Noise Mode Time</td><td>○</td><td>○</td><td>A function to set the start time and end time of the outdoor unit low noise mode operation.</td><td colspan="2">• The outdoor unit low noise operation time settings function can be set only when the installer settings' outdoor unit function M/S setting is 'Master', and the outdoor unit low noise control reference setting is "Remote Controller".</td></tr>
<tr><td>Advanced Fan Speed "Auto"</td><td>○</td><td></td><td>A function to set the auto fan usage based on the temperature of the indoor unit.</td><td colspan="2">ON / OFF</td></tr>
<tr><td rowspan="2">Human Detection Mode</td><td rowspan="2">○</td><td rowspan="2"></td><td rowspan="2">It is the function to set the operation of human detection mode.</td><td>Power Saving Operation Using Body Sensor</td><td>Time</td></tr>
<tr><td>• OFF: Not using the Human detection power-saving operation.<br>• On/Off learned power-saving: When no user is detected for a set time, the product is turned OFF for saving power.<br>• Temperature power-saving: When no user is detected for a set time, the desired temperature of the product is controlled for saving power.<br>• Activity custom power-saving: It can control the set temperature in accordance with the activity and save energy.</td><td>5 / 10 / 15 / 30 / 60 / 90 min.</td></tr>
</table>

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| Top And Bottom Selection | ○ | | This is a function to set the usage of the upper and lower vanes when operating the product. | Entire control / Upper / Lower |
| My Favorite Temperature | ○ | | A function to set the desired temperature in initial operating mode when the user saves a set desired temperature. | ON / OFF |
| Economizer | ○ | | A function to supply external air into the room for saving energy and improving room air quality. | • OFF: Cancel the economizer function and keep the damper closed.<br>• Auto: When the external air condition is lower than the room air condition in case of cooling operation, the external air is supplied to the room to save energy.<br>• Stage 1: Opens the outer air damper opening by one stage to improve the indoor air quality by introducing fresh air into the room.<br>• Stage 2: Opens the outer air damper opening by two stages to improve the indoor air quality by introducing fresh air into the room. |
| Air Conditioner Display Brightness | ○ | | A function to control the indoor unit status display brightness. | • General model: OFF/ON/Auto<br>• Brightness-controllable model: 100%/50%/ OFF/Auto<br>• 'Auto' setting is enabled only in the indoor units equipped with the human body sensor kit.<br>• When it is set to be 'Auto,' it is automatically controlled in accordance with the intensity of illumination detected by the human detection sensor. |
| Air Conditioner Air Quality Brightness | ○ | | A function to control the air quality display brightness of the indoor unit. | ON / OFF |
| UVnano | ○ | ○ | The UVnano function is to sterilize the fan or the filter by using a UV LED at regular time intervals when the indoor unit is working. | ON / OFF |

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th colspan="2">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td>Fine Dust Filter Status</td><td>○</td><td>○</td><td>You can check the fine dust filter status and reset the filter usage time.</td><td colspan="2" rowspan="2">• The used and remaining amount are for reference, and the actual filter status may vary depending on the installation environment and usage conditions.<br>• When dust is caught in the filter, the airflow decreases and the electric bill is high, so be sure to clean or replace the filter when it is time to clean or replace it.<br>• The fine dust filter (HEPA filter) check mark will not be cleared unless you specifically clear it.<br>• The pre-filter check mark will be cleared after a certain time even if you don’t specifically clear it.</td></tr>
<tr><td>Pre-Filter Status</td><td>○</td><td>○</td><td>You can check the pre-filter status and reset the filter usage time.</td></tr>
<tr><td>Delay Time</td><td></td><td>○</td><td>A function to set the operation to work after a delay time in case of ventilation operation.</td><td colspan="2">1-60 min. (by the unit of one min.)</td></tr>
<tr><td>Midnight Air Cooling</td><td></td><td>○</td><td>A function to discharge the room heat and supply the cool external air into the room at summer night for saving energy.</td><td colspan="2">• After setting the function ON, set the start time and the end time.<br>• Only when the air conditioner and the ventilation are both stopped, it is determined whether to operate the night external air cooling or not.<br>• Even if it is the set night external air cooling time, the night external air cooling is started only when the outdoor temperature condition is met.</td></tr>
<tr><td rowspan="2">$CO_2$ Fan Control</td><td rowspan="2"></td><td rowspan="2">○</td><td rowspan="2">This function sets the FAN operating standards based on the $CO_2$ concentration of ventilation products.</td><td>Fan Control During Operation On</td><td>Fan Control During Operation Off</td></tr>
<tr><td>OFF/Sporadic wind/ Weak</td><td>OFF/Sporadic wind</td></tr>
<tr><td rowspan="3">Select Humidification Range</td><td rowspan="3"></td><td rowspan="3">○</td><td rowspan="3">A function to set the room humidification operation range of direct-type ventilation product.</td><td>Min. humidity</td><td>Max. humidity</td></tr>
<tr><td>20% ~ 70%</td><td>50% ~ 80%</td></tr>
<tr><td colspan="2">• The min. humidity and the max. humidity can be changed by 5% at a time.<br>• The min. humidity and the max. humidity must be kept different from each other by 10%.</td></tr>
</table>

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th colspan="4">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td>Interlock air purification with air conditioner and ventilation</td><td></td><td>○</td><td>AC-ventilation air purification interlock is a function that aids with indoor air purification by operating ventilation with the air purification operation of the AC when the indoor fine dust concentration is bad.</td><td colspan="4">ON / OFF<br>• If the AC's fine dust concentration is bad or very bad, ventilation is interlocked.<br>• Ventilation is operated at Special High Speed during interlocking operation.</td></tr>
<tr><td rowspan="3">AI Indoor Space Care</td><td rowspan="3">○</td><td rowspan="3"></td><td rowspan="3">A function where nearby indoor units cooperate to create a pleasant space when the target temperature cannot be reached due to ambient thermal load, even though 100% of the indoor unit's cooling/heating capacity is being used.</td><td>Use (Y/N)</td><td>Search space</td><td colspan="2">Group number</td></tr>
<tr><td>ON/OFF</td><td>Automatic<br>Manual (comfort)<br>Manual (power saving)</td><td colspan="2">00~FF</td></tr>
<tr><td colspan="4">• Auto: Automatic space learning<br>• Manual (comfort): Set manual group/Set comfort first<br>• Manual (power saving): Set manual group/ Set power saving first</td></tr>
<tr><td rowspan="3">Weather Interlocking</td><td rowspan="3">○</td><td rowspan="3"></td><td rowspan="3">Weather Interlocking is a function that operates by referring to outdoor operation information.</td><td>Comfort operation with humidity reference</td><td>Comfort operation with humidity reference is a function that uses the outdoor humidity to actively save power for when the outdoor unit is running.</td><td>ON/OFF</td></tr>
<tr><td>Warm-up operation schedule</td><td>The warm-up schedule is a scheduling function that shortens the time to reach a comfortable temperature by warming up the indoor space before actual use.</td><td>ON/OFF, Day, Time</td></tr>
<tr><td>Set snow removal mode</td><td>The snow removal mode setting is a function to set whether to operate the outdoor fan when it snows to remove the snow.</td><td>ON/OFF</td></tr>
<tr><td>Smart Diffuser Setting</td><td></td><td>○</td><td>You can set the diffuser name, address, and name of each room's ventilation operation.<br>You can use Geolocation to determine the location of that diffuser.</td><td colspan="4">Name: Set a name for each diffuser<br>Check location: You can verify the diffuser by using the LEDs on that diffuser.</td></tr>
</table>

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| Smart Diffuser Air Quality Fan Control | | ○ | Intermittent operation can be done to read air quality even when the unit is off. | ON/OFF |
| Diffuser Indicator Light Brightness | | ○ | You can set the brightness of the LEDs in the diffuser. | OFF / 25% / 50%/ 75% / 100% |

**NOTE**

- AI Indoor Space Care finds surrounding indoor units that can cooperate through AI field learning.
  : It needs at least two weeks for the learning period, and additional learning periods may be required depending on the operation method and environment at the installation site.
- You can operate up to 2 cooperative indoor units.
- After setting to use AI Indoor Space Care, it is available when operating AI Smart Care.
- AI Indoor Space Care indoor units may be automatically turned on and off as a result of AI field learning.
- If you do not wish to use the AI indoor space care operation function, set it to OFF.
- If a model for both cooling/heating, AI Indoor Space Care is not available during simultaneous cooling and heating operation.

**⚠ CAUTION**

- Set it to off if the low noise operation time setting and night outdoor cooling setting functions are not used.
- Low noise operation can reduce cooling capacity.

# Service Settings

| Function | Description |
|---|---|
| Service Contact | A function to check and input the phone number of the available service center when a failure occurs in the product. |
| Model Information | A function to check the indoor and outdoor units product groups and capacity information connected to the remote control. |
| Model Name | A function to check the model name of the remote control. |
| Software Version | A function to check the software version of the remote control. |
| Open Source License | A function to check the open source license of the remote control. |
| Check Error History | A function to search the error history of connected indoor units. |
| Installation Wizard | A function to change the installation wizard settings set for the initial installation of the remote control. |
| Software Update | A function to update the software version of the wired remote control using the OTG port. |

# INSTALLER SETTINGS

**Select the installer settings in the settings menu.**

- Various settings can be made during the installation step before using air conditioner/ventilation products.

**Please enter the password.**

- How to verify password

**Check the software version in the service settings menu.**

- If SW version is 2.000, password is 2000.

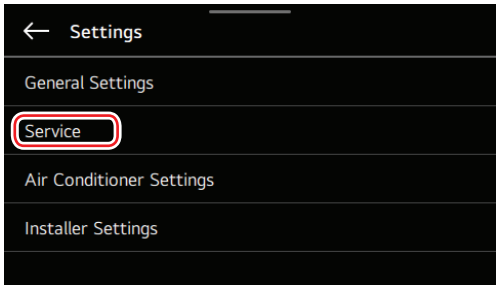


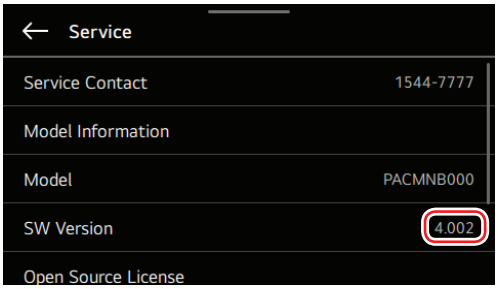


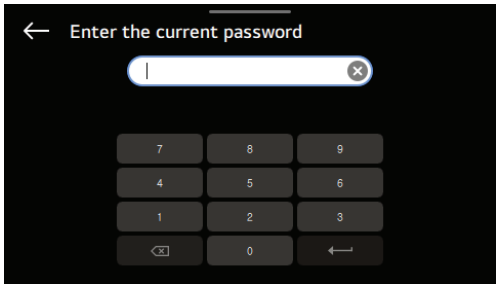


**Tap the Magnifier icon in the upper right corner, making it easy to find what you want.**

- Auto-complete items are displayed based on the characters you enter.
- You can also search by the code number of installer setting.

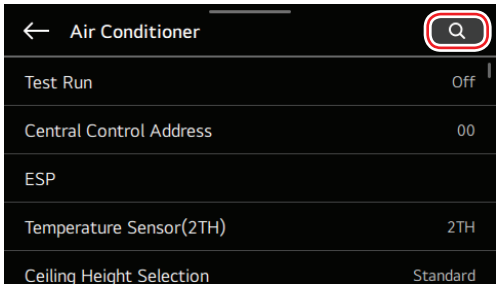


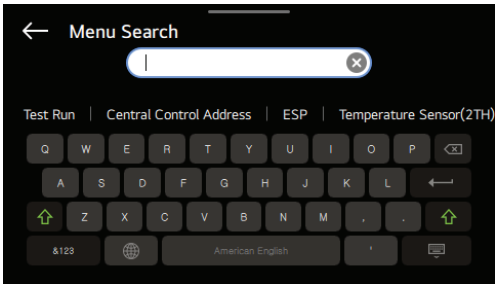

# Air Conditioner / Ventilation Installer Settings

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| Test Run | ○ | ○ | A function to set the test-running when initially installing the product. | - |
| Central Control Address | ○ | ○ | A function to set the central control address of the indoor unit when connecting the central controller. | 00 ~ FF |
| ESP | ○ | | A function for setting the air volume value corresponding to each air volume and to facilitate installation. | Set the RPM value for each fan speed. |
| Temperature Sensor (2TH) | ○ | ○ | A function to select the temperature sensor for determining the room temperature. | Remote control/Indoor unit/2TH |
| Ceiling Height Selection | ○ | | A function to control the stage of air volume in accordance with the height of the ceiling in a ceiling-type product. | Low/Standard/High/Very high |
| Static Pressure | ○ | | This function changes the fan speed in the indoor FAN according to the opening and closing quantity of Damper.<br>It is available only in a duct product. | V-H: Indoor fan speed change, High pressure<br>F-H: Fixed with set fan speed, High pressure<br>V-L: Indoor fan speed change, Low pressure<br>F-L: Fixed with the set fan speed, Low pressure |
| Override Master / Slave | ○ | ○ | A function to prevent another mode operation. In the function, the products set to 'Slave' prevent the selection of the opposite mode of the operation mode of the indoor unit which is set to 'Master.' | Master / Slave |
| Dry Contact Mode | ○ | ○ | A function which is available only when the dry contact apparatus is separately purchased/installed. | Manual / Auto |
| 3 Minutes Delay | ○ | ○ | Temporarily cancel the 3 min. delay function of the outdoor compressor.<br>※Caution: Do not randomly set it since it is a function used for producing the products. | - |
| SEER Mode | ○ | | Measures the operation ability of the duct product. | ON/OFF |

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th colspan="3" rowspan="2">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td>Fixed Air Volume</td><td>○</td><td>○</td><td>A function to set the air volume mode of the indoor unit to be variable/fixed.</td><td colspan="3">Variable: When the Comp is ON, it operates in the set fan speed. Operate to low fan speed at COMP OFF.<br>Fixed: When the Comp is ON, it operates in the set fan speed. Operate to set fan speed at COMP OFF.</td></tr>
<tr><td>Zone Type</td><td>○</td><td></td><td>A function to set the zone type supported by the indoor unit such as the “new” and the “old” types.</td><td colspan="3">Old: You can check only the operation status of the relevant zone by using the wired remote control.<br>New of 8 Zone: You can control and monitor the zones by using the wired remote control.</td></tr>
<tr><td>Zone Number</td><td>○</td><td>○</td><td>A function to set the number of zones. It is available only when the zone type is “New.”</td><td colspan="3">2 ~ 8</td></tr>
<tr><td rowspan="6">Over Heating</td><td rowspan="6">○</td><td rowspan="6">○</td><td rowspan="6">Control the heating thermal ON/OFF temperature conditions.<br>※Caution: If you incorrectly set it, it may cause overheating or weak heating.</td><td></td><td>Thermal On</td><td>Thermal Off</td></tr>
<tr><td>Level 0</td><td colspan="2">Operates in accordance with the product set value</td></tr>
<tr><td>Level 1</td><td>4 °C (8 °F)</td><td>6 °C (12 °F)</td></tr>
<tr><td>Level 2</td><td>2 °C (4 °F)</td><td>4 °C (8 °F)</td></tr>
<tr><td>Level 3</td><td>-1 °C (-2 °F)</td><td>1 °C (2 °F)</td></tr>
<tr><td>Level 4</td><td>-0.5 °C (-1 °F)</td><td>0.5 °C (1 °F)</td></tr>
<tr><td>Pipe Temperature</td><td>○</td><td>○</td><td>You can check the temperature of the pipe connected to the product.</td><td colspan="3">-</td></tr>
<tr><td>Emergency Heater</td><td>○</td><td></td><td>A function to determine whether to use the emergency heater control function and set the usage environment.</td><td colspan="3">Enabled/Disabled</td></tr>
</table>

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| Func. Control During Grp. Control | ○ | | A function to select the operation standards of the product in case of group control. | Type 0<br>All indoor units connected work in the same status. Only the standard functions are available.<br><br>Type 1<br>All indoor units connected work in the same status. The below functions can be additionally used in accordance with the functions of the Master indoor unit.<br>– Wind direction Up/Down/Left/Right/ Breeze, Additional features - Power-saving cooling/heater/fan auto, vertical wind angle - full control.<br><br>Type 2<br>When it is operated by the wired remote control, all the indoor units connected work in the same status. When it is operated by wireless remote control, only the indoor unit which has received the command operates. You can use all the functions of the master indoor unit. |
| Air Purify | ○ | | A function to set whether to additionally install after mass-production or mount after removal for the option units (air cleaning/ heater/humidification/elevation grille/ ventilation/sub heater). | Installed/Not installed |
| Heater Kit | ○ | | | |
| Humidification Kit | ○ | | | |
| Elevation Grill | ○ | | | |
| Ventilation Kit | ○ | | | |
| Aux Heater | ○ | | | |
| Refrigerant Leak Sensor | ○ | ○ | A function to set whether to install a flare fastening unit and welding unit leak sensors on the indoor unit. | Installed/Not installed |
| IDU Address Verification | ○ | ○ | A function to check the address of the indoor unit designated from the outdoor unit. | - |

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th colspan="3">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td rowspan="5">Over Cooling</td><td rowspan="5">○</td><td rowspan="5">○</td><td rowspan="5">Control the cooling thermal ON/OFF temperature conditions.<br>※Caution: If you incorrectly set it, it may cause overheating or weak heating.</td><td></td><td>Thermal On</td><td>Thermal Off</td></tr>
<tr><td>Level 0</td><td colspan="2">Operates in accordance with the product set value</td></tr>
<tr><td>Level 1</td><td>6 °C (12 °F)</td><td>4 °C (8 °F)</td></tr>
<tr><td>Level 2</td><td>4 °C (8 °F)</td><td>2 °C (4 °F)</td></tr>
<tr><td>Level 3</td><td>1 °C (2 °F)</td><td>-1 °C (-2 °F)</td></tr>
<tr><td>Static Pressure Step</td><td>○</td><td></td><td>This function allows you to set the static pressure of the duct product by subdividing it into 11 steps.</td><td colspan="3">Stage 0-Stage 11<br>• If the static pressure stage settings are used, the static pressure settings are not used.<br>• Please refer to the indoor unit product manual for the static pressure value for each stage.</td></tr>
<tr><td>Guard Timer</td><td>○</td><td></td><td>Set the outdoor unit cycle conversion operation standby time, and set the outdoor unit protection time for cycle conversion.</td><td colspan="3">Stage 0: 0 min./Stage 1: 15 min./<br>Stage 2: 30 min./Stage 3: 45 min./<br>Stage 4: 60 min.</td></tr>
<tr><td>Fan Speed In Cooling Thermal Off</td><td>○</td><td>○</td><td>A function to set the operation of the indoor unit fan during the cooling thermal OFF operation.</td><td colspan="3">Weak wind/OFF/Set wind</td></tr>
<tr><td>Primary Heater</td><td>○</td><td></td><td>A function to set the control to be conducted with priority on the heater usage than the outdoor unit cycle in case of operation of the indoor unit heating.</td><td colspan="3">ON/OFF</td></tr>
<tr><td>AC. Fan Oper. Interlocked With Vent.</td><td>○</td><td></td><td>When the air conditioner and the ventilation product are interlocked for operation, the function sets whether to operate the fan of the air conditioner.</td><td colspan="3">ON / OFF</td></tr>
<tr><td>IDU Auto-Start</td><td>○</td><td>○</td><td>In the event of a power outage, you can set whether to recover the product to its previous operating state.</td><td colspan="3">Enabled: Reset to the previous operation status.<br>Disabled: Reset to the operation OFF status.</td></tr>
</table>

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| Occupancy Duration Time | ○ | | A function to set the absence determination maintenance time among the In-room sensor values. | 0 / 10 / 30 / 60 min. |
| CN_CC | ○ | | A function to set whether to install (use) the Dry contact. (It is not a function for installing the dry contact but for setting the usage of the CN_CC port of the indoor unit.) | • Dry contact auto installation: When the power is applied to the product, and when the contact is ON with the dry contact installed, the indoor unit product recognizes the dry contact installation.<br>• Dry contact manual non-installation: Not use (install) the dry contact.<br>• Dry contact manual installation: Use (install) the dry contact.<br>• Simple ON/OFF: Use the Programmable DI/DO (Simple On/Off) usage. |
| CN_EXT | ○ | ○ | A function to set to control the external input and output in accordance with the DI/DO set by the customer by using the dry contact port of the indoor unit. (A function to determine the usage of the contact port (CN_EXT) mounted on the indoor unit PCB.) | • Disabled: Use the simple dry contact set value.<br>• Simple operation control signal: Simple operation ON/OFF<br>• Single dry contact signal: Dry contact (simple contact)<br>• Single emergency stop signal: Indoor unit single emergency stop<br>• In-room/Absence signal: In-room/Absence<br>• Entire emergency stop signal: All indoor units' emergency stop<br>※It can be set only when the indoor units have the emergency stop function.<br>• Window contact: In case of window contact, the indoor unit operation is processed.<br>※It can be set only when the indoor units have the window contact function.<br>• Window contact lock: When the window contact is locked, the indoor unit operation is processed.<br>※It can be set only when the indoor units have the window contact lock function.<br>• MPM: Individual power module interlock mode |

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| ODU Function Master | ○ | ○ | A function to set the function master/ salve of the outdoor unit. | Master/Slave |
| Fan Continuous Operation | ○ | | A function to set the fan non-stop function usage of indoor unit. (A function to operate the fan of the indoor unit for longer than the conventional operation method in the outdoor unit for maximizing the cooling/heating efficiency.) | ON/OFF |
| Low Noise Mode Priority | ○ | ○ | A function to set the control subject of the low noise mode. (A function to set only one of the outdoor unit and the remote control to be able to manage the low noise operation.) | Outdoor unit/Remote control |
| Lamp Color Setting | ○ | | This function selects the LED color to display the fine dust status of the product. | Auto/RGB/YGG |
| Dust Step Color Setting | ○ | ○ | You can change the color display method for each stage of fine dust according to national standards. | • Type 1: Stage 4 (Republic of Korea)<br>• Type 2: Stage 4 (Global)<br>• Type 3: Stage 6 (China) |

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th colspan="2">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td rowspan="5">Human Detection Sensor</td><td rowspan="5">○</td><td rowspan="5"></td><td rowspan="5">It is the function to set whether to install human detection sensor and operation standard value.</td><td>value</td><td>Description</td></tr>
<tr><td>Human Detection Sensor</td><td>Not installed, default installation, 90° rotated installation</td></tr>
<tr><td>Sensing Period</td><td>• Type 1: 5 sec, 30 sec, 1 min, 3 min<br>• Type 2: 5 sec, 10 sec, 30 sec, 1 min<br>※For Type 2, apply it only when the indoor unit product has the custom temperature settings function.</td></tr>
<tr><td>Sensitivity</td><td>Standard, Weak, Strong</td></tr>
<tr><td>Keeps operating even when the temperature power saving is complete</td><td>• Stage 0: Maintain the product operation and use the temperature power-saving function.<br>• Stage 1: Use the temperature power-saving function and stop the operation of the indoor unit.</td></tr>
<tr><td>Humidity Sensing Position</td><td>○</td><td></td><td>A function to decide where to detect humidity.</td><td colspan="2">Remote control/Indoor unit</td></tr>
<tr><td>ODU Cycle Priority</td><td>○</td><td></td><td>You can select standby or cooling.</td><td colspan="2">• Disabled: It does not support the opposite cycle operation with the wired remote control.<br>• Cooling: When the user has selected the opposite operation mode by the wired remote control, the indoor unit stops the heat exchange and the fan.<br>• Standby: There is a priority on the cooling cycle. When the user has changed the operation mode of a specific indoor unit into the cooling or heating cycle, the outdoor unit is switched into the cooling cycle and the indoor unit maintains the heating operation by using the heater.<br>※Before using this function, please set the emergency heater or external heater function.</td></tr>
</table>

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| Outdoor Temp. For Heating Stages | ○ | | You can set the outdoor temperature based on the temperature of the heater combination heating mode. | - |
| Estimated Energy Display | ○ | | A function to set the display of the energy data measured by the outdoor unit. | ON / OFF |
| CN_PTC | ○ | | This is a function to set PTC Port of indoor unit. | ON / OFF |
| Temperature Compensation | ○ | | You can display on the screen by applying the compensation value to the temperature value detected by the remote controller. | In case of Celsius: -5 °C to +5 °C (by the unit of 0.5 °C)<br>In case of Fahrenheit: -10 °F to 10 °F (by the unit of 1 °F) |
| Humidity Compensation | ○ | | Compensation value can be applied to the humidity value detected by the remote controller to display on the screen | -10% to +10% (by the unit of 1%) |
| Dust Lamp Always Displayed | ○ | | A function to set whether to regularly display the dust concentration on the LED lamp mounted on the indoor unit product. | ON / OFF |
| FAN Operation Time | ○ | | A function to display the operation cumulative time of the indoor unit fan motor. | - |
| IDU Operation Time | ○ | | A feature that displays the cumulative time that the indoor unit has been on. | - |
| Indoor Temperature Master / Slave | ○ | | A feature that sets the Master/Slave for the temperature sensors for each indoor unit. | • Cancel: Cancel the function.<br>• Master: Set based on the room temperature.<br>• Slave: Use the reference temperature of the master indoor unit.<br>※When it is set to Slave, you can set the Master indoor unit address (00-FF). |
| Indoor Unit Physical Address | ○ | | Set the physical address of the indoor unit. | - |
| Heating By Sensing Floor Temperature | ○ | | This function sets whether to use the floor temperature detection sensor. | ON / OFF |

| Function | Product | | Description | Option |
|---|---|---|---|---|
| | Air Conditioner | Ventilation | | |
| Auto ESP | ○ | | This function can be used for changing the target air volume. | Disabled/+10%/-10% |
| Fan Setting During Thermal Off (Occupancy / Operation Mode) | ○ | | This function automatically sets the rotary speed of the fan in accordance with each stage of the rated air volume for making it easy to install. | - |
| UVnano | ○ | ○ | This function sets whether or not UV LEDs are installed in order to use the UVnano function. | Installed / Not installed |
| Filter Box | ○ | | A function to set whether to install for using the function of filter box. | Installed / Not installed |
| Password Initialization | ○ | ○ | A function to reset the password (0000) when the password set on the remote control is not remembered. | - |
| Factory Data Reset | ○ | ○ | A function to reset all the settings, timer, schedule, and energy information stored in the remote control. | - |
| Air Supply ESP | | ○ | A function to determine the air volume value falling under the air supply volume. | Set the RPM value for each fan speed. |
| Air Exhaust ESP | | ○ | A function to determine the air volume value falling under the exhaust air volume. | Set the RPM value for each fan speed. |
| Product Direction | | ○ | A function to set the installation direction of the ventilation indoor unit. | Normal/Opposite |
| Express Ventilation Priority | | ○ | A function to set the priority of air supply and air exhaust in case of fast ventilation operation. | Air supply / Air exhaust |
| Hum. Of Stand-alone Vent. Mode | | ○ | A function to set whether to use the humidification function in case of ventilation single operation of direct-type ventilation. | ON / OFF |
| Hum. Of Vent. With Heating Oper. | | ○ | A function to automatically or manually set the heating humidification function of the direct-type ventilation. | Auto / Manual |

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th rowspan="2">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td>Vent. Fan Speed Alignment</td><td></td><td>○</td><td>A function to change the reference air volume of ventilation.</td><td>Default value / Rise by 10% / Fall by 10% / Fall by 20%</td></tr>
<tr><td>Filter Check Alarm</td><td></td><td></td><td>A function to set the filter replacement cycle of the ventilation indoor unit.</td><td>Stage 0-Stage 5</td></tr>
<tr><td>Noise Target Control</td><td>○</td><td></td><td>A function to limit the operation noise of the outdoor unit.<br>Limit the outdoor unit compressor maximum frequency.</td><td>Ver1<br>Setting value: ON/OFF<br>Decibels(dB) : 50 / 55 / 60 / 65 / 70<br>• The range of noise limits may vary depending on the version of the remote control and the connected product.<br>Ver2<table><tr><th>Settings</th><th>Off / On</th></tr><tr><td>Noise limit (daytime / evening / nighttime)</td><td>50~70 (In 5 dB increments)</td></tr><tr><td>Time setting</td><td>AM 1~12, PM 1~12</td></tr></table>• The order must be set as daytime -> evening -> nighttime -> daytime. If the times are not set in this order, the system may not operate properly.<br>• Example: Daytime 7 AM, evening 7 PM, nighttime 1 PM — valid, daytime 7 PM, evening 7 AM, nighttime 1 PM — invalid.</td></tr>
<tr><td>Using the fan while the Aux Heater is running alone</td><td>○</td><td></td><td>This function enables the indoor unit fan even when the Aux Heater is running on its own.</td><td>Setting Value<br>Off: Disable indoor unit fan while Aux Heater is running alone<br>On: Enable indoor unit fan while Aux Heater is running alone</td></tr>
<tr><td>Built-in heater behavior Outdoor temperature</td><td>○</td><td></td><td>This function controls the outdoor temperature at which the built-in heater is activated.</td><td><table><tr><th>On</th><th>Off</th></tr><tr><td>10~21 °C (50~70 °F)</td><td>-</td></tr><tr><td>-5~10 °C (23~50 °F)</td><td>-</td></tr></table>* Temperature range may vary by model.</td></tr>
</table>

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th rowspan="2">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td>Setting the Heater Operating Temperature Differential</td><td>○</td><td></td><td>This function sets the temperature of the Thermo On/Off between room temperature and desired temperature when heater is running.</td><td>
<table>
<tr><td colspan="4">On</td><td>Off</td></tr>
<tr><td>Heater 1 On</td><td>Heater 1 Off</td><td>Heater 2 On</td><td>Heater 2 Off</td><td rowspan="2">On</td></tr>
<tr><td>-5~5 °C (-10~10 °F)</td><td>-5~5 °C (-10~10 °F)</td><td>-5~5 °C (-10~10 °F)</td><td>-5~5 °C (-10~10 °F)</td></tr>
</table>
Minimum Temp Difference to Enable Heater<br>
- Heater 1 Off ≥ Heater 1 On + 1 °C (2 °F)<br>
- Heater 1 Off ≥ Heater 2 On + 0.5 °C (1 °F)<br>
- Heater 1 Off ≥ Heater 2 Off + 0.5 °C (1 °F)<br>
- Heater 2 Off ≥ Heater 2 On + 1 °C (2 °F)<br>
※ Heater 1 Off > Heater 2 Off > Heater 1 On > Heater 2 On<br>
Depending on the number of heaters installed in the indoor unit, some temperature difference values for heater operation may not be displayed.
</td></tr>
<tr><td>Built-in heater behavior during defrosting</td><td>○</td><td></td><td>This function keeps the heater in use during defrosting.</td><td>Setting value: ON/OFF</td></tr>
<tr><td>Setting the piping address</td><td>○</td><td></td><td>This function sets the piping address of the “Multi” series.</td><td>Splitter address: 0~3<br>Pipe address: A~E<br>• The left side is the splitter address and the right side is the pipe address setting value.<br>• This setting value may differ to the address value which is automatically set by the outdoor unit.<br>• This setting value is not set if the outdoor unit is setting the pipe address automatically.</td></tr>
<tr><td>Refrigerant Leak Detection Sensor Lifetime Timer</td><td>○</td><td>○</td><td>This function resets the life timer of the refrigerant leakage detection sensor.</td><td>Please make sure to reset the refrigerant leakage detection sensor, if you replaced it.<br>The product may malfunction, if you don’t reset it.</td></tr>
<tr><td>Smart Diffuser Open Rate</td><td>○</td><td></td><td>You can set the degree to which the diffusers in each room open.</td><td>50% / 70% / 100%</td></tr>
<tr><td>Set how the controller communicates</td><td>○</td><td></td><td>This function sets how the controller communicates.</td><td>See separate page.</td></tr>
</table>

<table>
<tr><th rowspan="2">Function</th><th colspan="2">Product</th><th rowspan="2">Description</th><th colspan="3">Option</th></tr>
<tr><th>Air Conditioner</th><th>Ventilation</th></tr>
<tr><td rowspan="5">FCU Valve Control</td><td rowspan="5">○</td><td rowspan="5"></td><td rowspan="5">The FCU valve control function controls the heating and cooling output flow for ON/OFF valves, constant-flow mode, and variable-flow mode.</td><td>Setpoint values</td><td>Cooling output (V)</td><td>Heating output (V)</td></tr>
<tr><td>ON/OFF Valve</td><td>-</td><td>-</td></tr>
<tr><td>Constant Mode</td><td>1~10</td><td>1~10</td></tr>
<tr><td>Variable Mode</td><td>1~10</td><td>1~10</td></tr>
<tr><td colspan="3">If the valve is set to ON/OFF Valve, the user cannot adjust the heating output value or cooling output value.</td></tr>
<tr><td rowspan="3">Noise Adaptive Control</td><td rowspan="3">○</td><td rowspan="3"></td><td rowspan="3">The Noise Adaptive Control function reduces noise generated by the outdoor unit by limiting its operation according to the surrounding noise level.</td><td>Setpoint values</td><td>GAP(dBA)</td><td>Distance (m)</td></tr>
<tr><td>Off</td><td>-</td><td>-</td></tr>
<tr><td>On</td><td>-6~6 (In 3 dBA increments)</td><td>3~48</td></tr>
<tr><td>Power Line Fault Detection</td><td>○</td><td></td><td>This function protects the product when a fault is detected in the power supply.</td><td colspan="3">Off / On</td></tr>
</table>

# USING THE LG THINQ APP

You can easily change the desired settings through the ThinQ App after directly connecting the wired remote control to the ThinQ App.

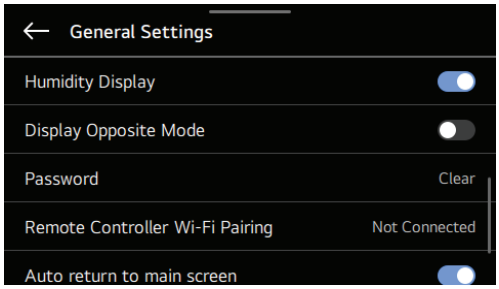


**NOTE**

- Bluetooth function is not supported.
- To connect the wired remote controller to the ThinQ app, select the deluxe wired controller in the product selection stage.
- Controller Wi-Fi pairing is not supported on all models. (PREMTA210)

# OTHER MODE OPERATION/OPEN SOURCE INFORMATION

## Other Mode Operation

Other Mode Operation is a phenomenon that occurs when multiple indoor units are installed in one outdoor unit and the operation modes of the indoor units are different. (The other mode operation does not appear in the cooling exclusive models.)

**Example of Other Mode Operation**

- If one outdoor unit is operating multiple indoor units in cool mode and one indoor unit is operating in heat mode, it will not operate in heat mode.
- If multiple indoor units are running on heating from one outdoor unit while one indoor unit is running on cooling or dehumidifying, the unit will not operate.

## Open Source Information

To obtain the GPL, LGPL, MPL, and other source codes distributed to open source licenses for which the source codes shall be disclosed, or to check the license contents and copyright notices for the open source, please visit https://opensource.lge.com.

In addition, if a consumer sends an e-mail to opensource@lge.com to request the open source code of the software installed in this product, LG Electronics charges the minimum cost required for delivery, such as media costs and transportation costs, and contains the code in a suitable storage medium in order to provide same.

This offer is valid for anyone who receives the information within 3 years of the product's purchase.

## Memo

**Supplier's Declaration of Conformity**

47 CFR §2.1077 Compliance Information

| | |
|---|---|
| Trade Name: | LG |
| Model : | PREMTA211 |
| Responsible Party: | LG Electronics USA, Inc. |
| Address: | 111 Sylvan Avenue, North Building Englewood Cliffs, NJ 07632 |
| Email: | lg.environmental@lge.com |

## FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

# [USA]

## FCC Certification

**FCC Notice**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference and

(2) This device must accept any interference received, including interference that may cause undesired operation of the device.

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC RF Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20 cm (7.8 inches) between the antenna and your body. Users must follow the specific operating instructions for satisfying RF exposure compliance.

**Radio Equipment Specifications**

| Type | Operating Frequency Range | Output Power(Max.) |
|---|---|---|
| Wireless Lan | 2400 MHz ~ 2472 MHz | < 1 W |
| Bluetooth† | 2400 MHz ~ 2483.5 MHz | |

† This feature is only available on some models.

# [MEXICO]

## Regulación Telecom

La operación de este equipo está sujeta a las siguientes dos condiciones:

(1) es posible que este equipo o dispositivo no cause interferencia perjudicial y

(2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

# [CANADA]

## IC Certification

**Industry Canada Statement**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

**IC Radiation Exposure Statement**

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm (7.8 inches) between the antenna and your body.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**Radio Equipment Specifications**

| Type | Operating Frequency Range | Output Power(Max.) |
|---|---|---|
| Wireless Lan | 2400 MHz ~ 2472 MHz | < 1 W |
| Bluetooth† | 2400 MHz ~ 2483.5 MHz | |

† This feature is only available on some models.

## Certification IC

**Avis d'Industrie Canada**

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) Cet appareil ne doit pas provoquer d'interférences.

(2) Cet appareil doit accepter toutes les interférences, y compris celles pouvant entraîner son dysfonctionnement.

**Énoncé d'IC concernant l'exposition à la radiation**

Cet appareil est conforme aux limites d'exposition aux rayonnements d'Industrie Canada pour un environnement non contrôlé. Cet appareil doit être installé et utilisé de façon à garder une distance minimale de 20 cm (7,8 pouces) entre la source de rayonnement et votre corps.

REMARQUE : LE FABRICANT N'EST PAS RESPONSABLE DES INTERFÉRENCES RADIOÉLECTRIQUES CAUSÉES PAR DES MODIFICATIONS NON AUTORISÉES APPORTÉES À CET APPAREIL. DE TELLES MODIFICATIONS POURRAIENT ANNULER L'AUTORISATION ACCORDÉE À L'UTILISATEUR DE FAIRE FONCTIONNER L'APPAREIL.

**Spécifications de l'équipement radio**

| Type | Plage de fréquence de fonctionnement | Puissance de sortie(Max.) |
|---|---|---|
| Réseau local sans fil | 2400 MHz ~ 2472 MHz | < 1 W |
| Bluetooth† | 2400 MHz ~ 2483.5 MHz | |

† Cette fonctionnalité n'est disponible que sur certains modèles.

# [EU, UK, CIS, Singapore, Morocco, Georgia]

**Radio Equipment Specifications**

| Type | Operating Frequency Range | Output Power(Max.) |
|---|---|---|
| Wireless Lan | 2400 MHz ~ 2483.5 MHz | < 100 mw |
| Bluetooth *1 | | |

*1 This feature is only available on some models

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body. / С оглед безопасността на потребителя, това устройство трябва да бъде инсталирано и оперирано от минимално разстояние 20 см между него и тялото. / S ohledem na uživatele by se toto zařízení mělo instalovat a provozovat tak, aby byla minimální vzdálenost mezi zařízením a tělem alespoň 20 cm. / Af hensyn til brugerens sikkerhed skal dette apparat installeres og betjenes med en minimumsafstand på 20 cm mellem apparatet og kroppen. / Zur Rücksichtnahme auf den Nutzer, sollte dieses Gerät mit einem Abstand von mindestens 20 cm zwischen dem Gerät und dem Körper installiert und betrieben werden. / Πληροφοριακά για το χρήστη, αυτή η συσκευή θα πρέπει να εγκατασταθεί να λειτουργήσει με μια ελάχιστη απόσταση 20 cm μεταξύ της συσκευής και του σώματος. / El usuario ha de tener en cuenta que el dispositivo deberá ser instalado y funcionar con una distancia mínima de 20 cm entre el mismo y el cuerpo. / Kasutaja peaks arvestama, et see seade tuleks paigaldada ja sellega töötada nii, et hoitakse minimaalne seadme ja keha vaheline vahemaa 20 cm juures. / Käyttäjän huomioimiseksi, laite tulee asentaa ja sitä tulee käyttää 20 cm:n minimietäisyyden päässä vartalosta. / À l'égard de l'utilisateur, cet appareil doit être installé et utilisé à une distance minimale de 20 cm entre l'appareil et le corps. / Ar mhaithe leis an úsáid, ba chóir an gléas seo a shuiteáil agus a oibriú ar a laghad 20 cm ó do chorp. / Za razmatranje korisnika, ovaj uređaj treba postaviti i njime upravljati s udaljenosti od najmanje 20 cm od tijela. / A felhasználónak vigyáznia kell, hogy ezt a készüléket úgy kell telepíteni és üzemeltetni egy legalább 20 cm távolságot biztosítsanak a készülék és a test között. / Si consiglia agli utenti di installare questo dispositivo ad una distanza minima di 20 cm tra il dispositivo e il corpo. / Vartotojas turi sumontuoti ir eksploatuoti šį įrenginį mažiausiai 20 cm. Nuo įrenginio ir korpuso. / Lietotāja izvērtēšanai, šī ierīce jāuzstāda un jādarbina, ievērojot minimālo distanci 20 cm starp ierīci un karkasu. / Заради грижата за корисникот, овој уред треба да се инсталира и да работи на минимална далечина од 20 cm меѓу уредот и телото на корисникот. / Għall-konsiderazzjoni tal-utent, dan it-tagħmir għandu jiġi installat u mħaddem b'distanza ta' mhux inqas minn 20 ċm bejn l-apparat u l-persuna. / Het is in het belang van de gebruiker dat dit apparaat geïnstalleerd en gebruikt wordt met een minimale afstand van 20 cm tussen het apparaat en het lichaam. / For hensynet til brukeren, bør denne enheten bli installert og brukt med en avstand på minimum 20 cm mellom apparatet og kroppen. / Zaleca się montaż oraz obsługę urządzenia z odległości co najmniej 20 cm. / Para consideração do utilizador, este dispositivo deve ser instalado e operado com uma distância mínima de 20 cm entre o dispositivo e o corpo. / Utilizatorul trebuie să țină cont de faptul că acest dispozitiv trebuie instalat și utilizat cu o distanță minimă de 20 cm între dispozitiv și corp. / Poznámka pre používateľa: toto zariadenie by sa malo montovať a využívať v minimálnej vzdialenosti 20 cm medzi zariadením a telom. / Ob upoštevanju varnosti uporabnika je napravo treba namestiti in upravljati tako, da je med napravo ter telesom najmanj 20 cm. / Për konsideratën e përdoruesit, kjo pajisje duhet të instalohet dhe operohet nga një distancë minimale prej 20 cm mes pajisjes dhe trupit. / Korisnik treba da ima na umu da ovaj uređaj treba postaviti i njime upravljati sa udaljenosti od najmanje 20 cm od tela. / Med hänsyn till användaren, bör denna apparat installeras och drivas med en distans på åtminstone 20 cm mellan apparaten och kroppen. / Korisnik treba znati da ovaj uređaj treba postaviti i njime upravljati sa minimalne udaljenosti od 20 cm između uređaja i tijela. / Օգտատերի նկատառումներից ելնելով՝ այս սարքը պետք է տեղադրվի և շահագործվի սարքի և մարմնի միջև առնվազն 20 սմ հեռավորության վրա

Radio Equipment Specifications / Specifiche delle apparecchiature radio / Especificaciones del equipo de radio / Spécifications de l'équipement radio / Spezifikationen der Funkgeräte / Προδιαγραφές ραδιοεξοπλισμού / Specifikace rádiového zařízení / Specificaties radioapparatuur / Specyfikacje sprzętu radiowego / Specificații echipamente radio / Especificações do Equipamento de Rádio / Rádióberendezés műszaki adatai / Спецификации на радиооборудването / Specifikacije radio-opreme / Specifikacije radijske opreme / Specifikationer för radioutrustning / Spesifikasjoner for radioutstyr / Radiolaitteen tekniset tiedot / Specifikationer For Radioudstyr / Raadioseadme spetsifikatsioonid / Speċifikazzjonijiet tat-Tagħmir tar-Radju / Špecifikácie rádiového zariadenia / Specifikacije radijske opreme / Radioiekārtu specifikācijas / Radijo įrangos specifikacijos / Sonraíocht Trealaimh Raidió / Спецификации за радиоопрема / Specifikimet e pajisjeve radio / Specifikacije radio opreme / Спецификации радиооборудования / 无线电设备规格 / Radyo Ekipman Özellikleri / Технічні характеристики радіообладнання / Радиожабдықтың техникалық сипаттамалары / Тэхнічныя характарыстыкі радыёапаратуры / Radio jihozining texnik xususiyatlari / Ռադիո սարքավորումների տեխնիկական բնութագրերը

Type / Tipo / Tipo / Type / Typ / Τύπος / Typ / Type / Typ / Tip / Tipo / Típus / Тип / Tip / Vrsta / Typ / Type / Tyyppi / Type / Tüüp / Tip / Typ / Tip / Veids / Tipas / Cineál / Тип / Lloji / Vrsta / Тип / 类型 / Tip / Тип / Typi / Тып / Turi / Տեսակ

Operating Frequency Range / Intervallo di frequenza operativa / Rango de frecuencia de funcionamiento / Plage de fréquence de fonctionnement / Betriebsfrequenzbereich / Εύρος συχνότητας λειτουργίας / Provozní frekvenční rozsah / Werkfrequentiebereik / Zakres częstotliwości roboczej / Intervalul frecvențelor de funcționare / Gamas de frequências em funcionamento / Működési frekvenciatartomány / Работен честотен диапазон / Radni frekvencijski raspon / Frekvencijski raspon rada / Arbetsfrekvensområde / Frekvensområde for drift / Käyttötaajuusalue / Driftsfrekvensområde / Töösageduste vahemik / Medda tal-Frekwenza tat-Tħaddim / Prevádzkový frekvenčný rozsah / Območje delovanja frekvence / Darbības frekvenču diapazons / Veikimo dažnių diapazonas / Raon Mhinicíocht Oibríochta / Опсег на работна фреквенција / Diapazoni i Frekuencës së Funksionimit / Raspon radne frekvencije / Диапазон рабочих частот / 工作频率范围 / Çalışma Frekansı Aralığı / Діапазон робочих частот / Жұмыс жиілігі ауқымы / Дыяпазон рабочых частот / Ishlash chastotasi diapazoni / Գործող հաճախականության միջակայք

Output Power(Max.) / Potenza in uscita(Max.) / Potencia de salida (máx.) / Puissance de sortie(Max.) / Ausgangsleistung(Max.) / Τροφοδοσία εξόδου (Μέγ.) / Výstupní výkon (max.) / Uitvoervermogen(Max.) / Moc wyjściowa (maks.) / Puterea de ieșire (max.) / Potência de saída(Máx.) / Kimenő teljesítmény (max.) / Изходяща мощност (макс.) / Izlazna snaga (maks.) / Izlazna snaga (maks.) / Uteffekt (max) / Utgangseffekt (maks.) / Lähtöteho (maks.) / Udgangseffekt(maks.) / Väljundvõimsus (max) / Enerġija tal-Ħruġ (Mass.) / Výstupný výkon (max.) / Izhodna moč (največja) / Izejas jauda (maks.) / Išvesties galia (maks.) / Cumhacht Aschuir (Uasta) / Излезна моќност (макс.) / Energjia në dalje(Maks.) / Izlazna snaga (maks.) / Выходная мощность (макс.) / 输出功率（最大值） / Çıkış Gücü (Maks.) / Вихідна потужність (макс.) / Шығыс қуаты (макс.) / Выходная магутнасць (макс.) / Chiqish quvvati (Maks.) / Ելքային հզորություն (առավ.)

Wireless LAN / LAN wireless / LAN inalámbrica / Réseau local sans fil / WLAN / Ασύρματο δίκτυο LAN / Bezdrátová síť LAN / Draadloos LAN / Bezprzewodowa sieć LAN / LAN wireless / LAN sem fios / Vezeték nélküli LAN / Безжична LAN / Bežični LAN / Bežični LAN / Trådlöst LAN / Trådløst LAN / Langaton LAN-verkko / Trådløst LAN / Juhtmevaba kohtvõrk / LAN bla fili / Bezdrôtová sieť LAN / Brezžični LAN / Bezvadu LAN / Belaidis LAN / LAN Gan Sreang / Безжична LAN / LAN me valë / Bežični LAN / Беспроводная локальная сеть / 无线局域网 / Kablosuz LAN / Бездротова локальна мережа / Сымсыз жергілікті желі / Бесправадная лакальная сетка / Simsiz lokal tarmoq / Անլար LAN

Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / „Bluetooth“ / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / 蓝牙 / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth / Bluetooth

This feature is only available on some models. / Questa funzione è disponibile solo su alcuni modelli. / Esta característica solamente está disponible en algunos modelos. / Cette fonctionnalité n'est disponible que sur certains modèles. / Diese Funktion ist nur bei einigen Modellen verfügbar. / Αυτή η λειτουργία είναι διαθέσιμη μόνο σε μερικά μοντέλα. / Tato funkce je k dispozici pouze u některých modelů. / Deze functie is alleen beschikbaar op sommige modellen. / Ta funkcja jest dostępna tylko w niektórych modelach. / Această caracteristică este disponibilă doar pe anumite modele. / Esta função apenas se encontra disponível em alguns modelos. / Ez a funkció csak bizonyos modelleken érhető el. / Тази характеристика е налична само в някои модели. / Ова функција је доступна само на неким моделима. / Ova značajka dostupna je samo na nekim modelima. / Denna funktion finns bara tillgänglig på vissa modeller. / Denne funksjonen er bare tilgjengelig på noen modeller. / Tämä ominaisuus on saatavilla vain joissakin malleissa. / Denne funktion er kun tilgængelig på visse modeller. / See funktsioon on saadaval ainult mõnedel mudelitel. / Din il-karratteristika hija disponibbli biss fuq xi mudelli. / Táto funkcia je dostupná iba na niektorých modeloch. / Ta funkcija je na voljo le pri nekaterih modelih. / Šī funkcija ir pieejama tikai dažiem modeļiem. / Ši funkcija prieinama tik kai kuriuose modeliuose. / Níl an ghné seo ar fáil ach ar roinnt samhlacha. / Оваа функција е достапна само за некои модели. / Kjo veçori është e disponueshme vetëm në disa modele. / Ova karakteristika je dostupna samo na nekim modelima. / Эта функция доступна только на некоторых моделях. / 只有某些型号提供该功能。 / Bu özellik yalnızca bazı modellerde bulunur. / Ця функція доступна лише в деяких моделях. / Бұл функция тек кейбір модельдерде қол жетімді. / Гэта функцыя даступная толькі ў некаторых мадэлях. / Bu funksiyadan faqat ayrim modellarda foydalanish mumkin. / Այս գործառույթը հասանելի է միայն որոշ մոդելների վրա:

LG Electronics EU Importer names and addresses / Имена и адреси на вносителите на LG Electronics в ЕС / Nazivi i adrese uvoznika LG Electronics u EU / Nazivi i adrese uvoznika LG Electronics u EU / Názvy a adresy dovozců LG Electronics v EU / Navne og adresser på importører af LG Electronics i EU / Namen und Adressen der LG Electronics EU-Importeure / Ονόματα και διευθύνσεις εισαγωγέων της LG Electronics EU / Nombres y direcciones de importadores para la UE de LG Electronics / LG Electronics EL maaletoojate nimed ja aadressid / LG Electronics – EU:n maahantuojien nimet ja osoitteet / Noms et adresses des importateurs pour LG Electronics EU / Ainmneacha agus seolaí Iompórtálaí AE LG Electronics / Nazivi i adrese uvoznika proizvoda tvrtke LG Electronics u Europskoj uniji / Az LG Electronics európai uniós importőreinek neve és címe / Nöfn og heimilisföng LG Electronics innflytjenda innan ESB / Nomi e indirizzi degli importatori UE di LG Electronics / LG Electronics ES importuotojų pavadinimai ir adresai / LG Electronics ES importētāju nosaukumi un adreses / Имиња и адреси на увозници на LG Electronics за ЕУ / LG Electronics: ismijiet u indirizzi tal-importaturi tal-UE / Namen en adressen van importeurs voor LG Electronics EU / Navn og adresser for EU-importører for LG Electronics / Nazwy i adresy importerów produktów LG Electronics w Europie / Nomes e endereços dos importadores para LG Electronics EU / Numele și adresele Importatorului UE al LG Electronics / Názvy a adresy dovozcov LG Electronics do EÚ / Imena in naslovi uvoznikov za LG Electronics EU / Emrat dhe adresat e importuesve të LG Electronics në BE / Nazivi i adrese EU uvoznika kompanije LG Electronics / Namn och adresser för LG Electronics EU-importörer

| | |
|---|---|
| LG Electronics Benelux B.V. | Krijgsman 1, 1186 DM Amstelveen, The Netherlands |
| LG Electronics Deutschland GmbH | Alfred-Herrhausen-Allee 3-5, 65760, Eschborn, Germany |
| LG Electronics France, SAS | Immeuble Workstation, 25 quai du Président Paul Doumer, 92 400 Courbevoie, France |
| LG Electronics España S.A.U. | Calle Chile 1, 28290, Las Rozas, Madrid, Spain |
| LG Electronics Portugal S.A. | Taguspark, Av. Jacques Delors 3, Edifício Inovacao I, Corpo 1, 2740-122, Porto Salvo, Portugal |
| LG Electronics Hellas S.A. | Ethnarhou Makariou str. 1, 17501, Delta Paleo Faliro, Greece |
| LG Electronics Italia S.p.A. | Via Aldo Rossi 4, 20149, Milan, Italy |
| LG Electronics Latvia SIA | Gustava Zemgala gatve 74A, Rīga, LV-1039, Latvia |
| LG Electronics Magyar Kft. | Konyves K. krt.3/a, 1097, Budapest, Hungary |
| LG Electronics Polska Sp. z o.o., | Wołoska 22, 02-675, Warszawa, Poland |
| LG Electronics Magyar Kereskedelmi Kft. Budapesta Sucursala București, | 11-15, Tipografilor Street, S-Park Business Centre, Building B3, 5th Floor, District 1, 013714 Bucharest, Romania |
| LG Electronics Nordic AB | Esbogatan 18, 164 94, Kista, Sweden |
| LG Electronics Shared Services Center B.V. | Krijgsman 1, 1186 DM Amstelveen, The Netherlands |

Depending on products or models, actual importers may be limited to some subsidiaries. For EU-produced units, there is no applicable EU importer. / В зависимост от продуктите или моделите действителните вносители може да са ограничени до някои дъщерни дружества. За апарати, произведени в ЕС, няма приложим вносител в ЕС. / U zavisnosti od proizvoda ili modela, uvoznici mogu biti ograničeni na neka povezana društva. Za jedinice proizvedene u EU ne postoji važeći uvoznik iz EU. / U zavisnosti od proizvoda ili modela, uvoznici mogu biti ograničeni na određene podružnice. Za jedinice proizvedene u EU ne postoji EU uvoznik. / V závislosti na výrobcích nebo modelech mohou být aktuální dovozci omezeni na některé dceřiné společnosti. U výrobků vyráběných v EU není žádný relevantní dovozce do EU. / Afhængigt af produkter eller modeller kan de faktiske importører være begrænset til enkelte datterselskaber. For EU-fremstillede enheder er der ingen relevant EU- importør. / Je nach Produkt oder Modell können die tatsächlichen Importeure auf einige Tochtergesellschaften beschränkt sein. Für in der EU produzierte Geräte gibt es keinen anwendbaren EU-Importeur.

Ανάλογα με τα προϊόντα ή τα μοντέλα, οι πραγματικοί εισαγωγείς ενδέχεται να περιορίζονται σε ορισμένες θυγατρικές. Για μονάδες που παράγονται στην ΕΕ δεν υπάρχει ισχύων εισαγωγέας της ΕΕ. / Dependiendo de los productos o modelos, los importadores efectivos podrían quedar limitados a algunos subsidiarios. Para las unidades producidas en la UE, no hay ningún importador para la UE aplicable. / Sõltuvalt toodetest või mudelitest võivad tegelikud maaletoojad olla piiratud mõnede tütarettevõtetega. EL-is toodetud seadmete puhul ei ole kohaldatavat EL maaletoojat. / Tuotteista tai malleista riippuen todelliset maahantuojat voivat rajoittua muutamiin tytäryhtiöihin. EU:ssa valmistetuilla laitteilla ei ole sovellettavaa EU:n maahantuojaa. / Selon les produits ou les modèles, les importateurs effectifs peuvent être limités à certaines filiales. Pour les unités produites dans l'UE, il n'y a pas d'importateur applicable pour l'UE. / Ag brath ar tháirgí nó múnlaí, d'fhéadfaí go mbeadh iompórtálaithe iarmhír srianta go roinnt fochomhlachtaí. Maidir le aonaid déanta sa AE, níl iompórtálaí AE infheidhme. / Ovisno o proizvodima ili modelima uvoznici mogu biti ograničeni na neke podružnice. Za uređaje proizvedene u Europskoj uniji nije predviđena tvrtka za uvoz iz EU. / A termékektől vagy modellektől függően előfordulhat, hogy a tényleges importőrök egyes leányvállalatokra korlátozódnak. Az EU-ban gyártott készülékek esetében nincs vonatkozó európai uniós importőr. / Raunverulegir framleiðendur geta verið takmarkaðir við tiltekin dótturfélög, en það fer eftir vörum eða vörumódelum. Engin ESB innflytjandi er fyrir hluti sem eru framleiddir innan ESB. / A seconda dei prodotti o dei modelli, gli importatori effettivi potrebbero essere limitati ad alcune filiali. Per le unità prodotte nell'UE, non esiste un importatore UE applicabile. / Priklausomai nuo gaminių ar modelių, tikrieji importuotojai gali apsiriboti kai kuriomis dukterinėmis įmonėmis. ES pagamintiems vienetams nėra tinkamo ES importuotojo. / Atkarībā no produktiem vai modeļiem, faktiskie importētāji var būt dažādi meitasuzņēmumi. ES ražotām vienībām nav piemērojama ES importētāja. / Зависно од производите или моделите, актуелните увозници можеби се ограничени на некои подружници. За единиците произведени за ЕУ, нема применлив увозник за ЕУ. / Skont il-prodott jew il-mudell, l-importaturi attwali jistgħu jkunu limitati għal ċerti sussidjarji. Għall-unitajiet prodotti fl-UE, m'hemmx importatur applikabbli tal-UE. / Afhankelijk van de producten of modellen, kunnen de eigenlijke importeurs beperkt zijn tot enkele dochterondernemingen. Voor in de EU geproduceerde eenheden is er geen toepasselijke EU-importeur. / Avhengig av produkter eller modeller, kan faktiske importører være begrenset til enkelte datterselskaper. Det er ingen gjeldende EU-importør for EU-produserte enheter. / W zależności od produktów lub modeli, rzeczywiści importerzy mogą polegać na swoich podmiotach zależnych. W przypadku wyrobów produkowanych w UE nie ma odpowiedniego importera na region Unii. / Dependendo dos produtos ou modelos, os importadores existentes podem ser limitados a algumas filiais. Para as unidades produzidas na UE, não há nenhum importador da UE aplicável. / În funcție de produse sau modele, importatorii actuali ar putea fi limitați la anumite filiale. Pentru unitățile produse în UE, nu există niciun importator UE aplicabil. / V závislosti od výrobkov alebo modelov môžu byť skutoční dovozcovia obmedzení na niektoré dcérske spoločnosti. Pre zariadenia vyrobené v EÚ neexistuje žiadny príslušný dovozca do EÚ. / Odvisno od izdelkov ali modelov so lahko dejanski uvozniki omejeni na nekatere hčerinske družbe. Za enote, proizvedene v EU, ni ustreznega uvoznika iz EU. / Në varësi të produkteve ose modeleve, importuesit aktual mund të jenë të kufizuar vetëm në disa degë. Për njësitë e prodhuara në BE, nuk ka importues të zbatueshëm të BE-së. / U zavisnosti od proizvoda ili modela, stvarni uvoznici mogu biti ograničeni na neke podružnice. Za jedinice proizvedene u EU ne postoji merodavni EU uvoznik. / Beroende på produkter eller modeller kan faktiska importörer vara begränsade till vissa dotterbolag. För EU-tillverkade enheter finns det ingen tillämplig EU-importör.

İthalatçı Firma: LG ELECTRONICS TİCARET A.S.
İthalatçı Firma Adresi: Kaptanpaşa Mah. Piyalepaşa Bulvarı No. 73. Ortadoğu Plaza Kat:7 34384
Okmeydanı Şişli-İstanbul, Türkiye
Tel: 0212 314 52 52
Faks: 0212 222 61 44
ÜRETİCİ FİRMA
LG Electronics Inc
Changwon 2nd factory 84, Wanam-ro, Seongsan-gu, Changwon-si Gyeongsangnam-do, KOREA

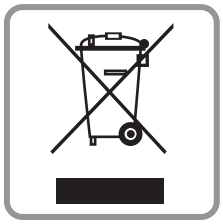

## ENGLISH — Disposal of your old appliance

1. This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.
2. Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
3. You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see www.lg.com/global/recycling

## БЪЛГАРСКИ — Изхвърляне на стария уред

1. Символът със зачертания контейнер показва, че отпадъците от електрическите и електронните продукти (WEEE) трябва да се изхвърлят отделно от битовите отпадъци.
2. Старите електрически продукти могат да съдържат опасни вещества и правилното изхвърляне на Вашия уред ще помогне за предотвратяване на негативните последствия за околната среда и човешкото здраве. Вашият стар уред може да съдържа части за многократна употреба, които биха могли да бъдат използвани за ремонт на други продукти, както и други ценни материали, които могат да бъдат рециклирани с цел запазване на ограничените ресурси.
3. Можете да занесете Вашия уред или в магазина, от който сте го закупили или можете да се свържете с местния държавен офис за отпадъците, за да получите информация за най-близкия РАЗРЕШЕН WEEE пункт за събиране на отпадъци. За най-актуална информация от Вашата държава, моля, погледнете тук: www.lg.com/global/recycling

## HRVATSKI — Zbrinjavanje starog uređaja

1. Ovaj simbol prekrižene kante za smeće na kotačićima označava kako se otpadni električni i električni proizvodi (WEEE) moraju zbrinjavati odvojeno od komunalnog otpada.
2. Dotrajali električni proizvodi mogu sadržavati opasne tvari stoga će ispravno zbirnjavanje vaših dotrajalih uređaja pomoći u sprječavanju potencijalnih negativnih posljedica na okoliš i ljudsko zdravlje. Vaš dotrajao uređaj može sadržavati dijelove koji se mogu ponovo iskoristiti za popravak drugih proizvoda te druge vrijedne materijale koji se mogu reciklirati i tako sačuvati ograničene resurse.
3. Ovisno o razini smetnje / štete i dobi stavke, stari proizvodi mogu se popraviti za više radnog života koji će spriječiti izbjeći otpada. Proizvodi koji nisu prikladni za ponovnu uporabu može se reciklirati da se oporavim vrijedne resurse i pomoći da se smanji globalno potrošnju novih sirovina.
4. Uređaj možete odjnjeti u trgovinu u kojoj ste kupili proizvod ili možete kontaktirati ured za zbrinjavanje otpada kod vaših mjesnih nadležnih tijela te od njih saznati više informacija o najbližem ovlaštenom WEEE sabirnom centru. Za najnovije informacije iz vaše države molimo pogledajte internetske stranice www.lg.com/global/recycling

## ČESKY — Likvidace starého přístroje

1. Tento symbol přešKrtnutého koše značí, že odpad z elektrických a elektronických výrobků (WEEE) je nutné likvidovat odděleně od linky komunálního odpadu.
2. Staré elektrické výrobky mohou obsahovat nebezpečné látky, takže správná likvidace starých přístrojů pomůže zabránit potenciálním negativním důsledkům pro životní prostředí a lidské zdraví. Staré přístroje mohou obsahovat znovu použitelné díly, které lze použít k opravě dalších výrobků a další cenné materiály, které lze recyklovat a šetřit tak omezené zdroje.
3. Přístroj můžete zanést buď do obchodu, kde jste ho zakoupili nebo se obrátit na místní správu komunálních odpadů, kde získáte podrobné informace o autorizovaném sběrném místě WEEE. Pro poslední aktuální informace z vaší země si prosím prostudujte web www.lg.com/global/recycling

## DANSK — Bortskaffelse af dit gamle apparat

1. Dette symbol med en affaldsspand med kryds over angiver at elektrisk og elektronisk affald (WEEE) skal bortskaffes og genbruges korrekt, adskilt fra kommunens husholdningsaffald.
2. Gamle elektriske produkter kan indeholde farlige stoffer, så når du bortskaffer dit gamle apparat på korrekt vis, hjælper du med at forhindre mulige negative konsekvenser for miljø og mennesker. Dit gamle apparat kan indeholde dele som kan genbruges, fx til at reparere andre produkter, eller værdifulde materialer som kan genbruges og derved begrænse spild af værdifulde ressourcer.
3. Du kan enten tage apparatet til den butik hvor du købte det, eller kontakte dit lokale affaldskontor angående oplysninger om det nærmeste, autoriserede WEEE-samlepunkt. Find de sidste nye oplysninger for dit land på www.lg.com/global/recycling

## EESTI — Teie vana seadme hävitamine

1. Läbitõmmatud ristiga prügikasti sümbol tähendab, et elektriliste ja elektrooniliste toodete (WEEE) jäätmeid tuleb olmeprügist eraldi hävitada.
2. Vanad elektriseadmed võivad sisaldada ohtlikke koostisosi, seega aitab prügi nõuetekohane hävitamine vältida võimalikku negatiivset mõju loodusele ja inimeste tervisele. Teie kasutatud seade võib sisaldada taaskasutatavaid osi, millega saab parandada teisi seadmeid ning muid väärtuslikke materjale, mida saab taaskasutada, et säilitada piiratud ressursse.
3. Saate viia oma seadme kas kauplusse, kust see on ostetud või võtta ühendust kohaliku prügiveo ettevõttega, et saada lisainfot oma lähima WEEE jäätmete kogumiskoha kohta. Kõige ajakohasemat infot oma riigi kohta vaadake www.lg.com/global/recycling

## SUOMI — Vanhan laitteesi hävittäminen

1. Tämä ylirastitettu jäteastian merkki ilmaisee, että sähkö- ja elektronikkalaitteiden jätteet (WEEE) tulee pitää erillään kotitalousjätteestä ja viedä kunnalliseen kierrätyskeskukseen.
2. Vanhat sähkötuotteet voivat pitää sisällään vaarallisia aineita, joten loppuun käytetyn laitteen oikea hävittäminen ehkäisee ympäristö- ja terveyshaittoja. Vanha laitteesi saattaa pitää sisällään uudelleen käytettäviä osia, joita voidaan käyttää korjaamaan muita tuotteita sekä arvokkaita materiaaleja, joita voidaan kierrättää rajoitettujen resurssien säästämiseksi.
3. Voit viedä laitteesi joko liikkeeseen, josta hankit laitteen, tai ottaa yhteyttä paikallishallintosi ympäristötoimistoon koskien lähintä valtuutettua WEEE -keräyspistettä. Kaikkein viimeisimmät tiedot koskien maatasi, ks. osoitteessa www.lg.com/global/recycling

## FRANÇAIS — Recyclage de votre ancien appareil

1. Ce symbole de poubelle barrée d'une croix indique que votre équipement électrique et électronique (EEE) ne doit pas être jeté avec les ordures ménagères. Il doit faire l'objet d'un tri et d'une collecte sélective séparée.
2. Les équipements électriques que vous jetez peuvent contenir des substances dangereuses. Il est donc important de les jeter de façon appropriée afin d'éviter des impacts négatifs sur l'environnement et la santé humaine. L'équipement que vous jetez peut également contenir des pièces réutilisables pour la réparation d'autres produits ainsi que des matériaux précieux pouvant être recyclés pour préserver les ressources de la planète.
3. Vous pouvez rapporter votre appareil au commerçant qui vous l'a vendu ou contacter votre collectivité locale pour connaitre les points de collecte de votre EEE. Vous trouverez également des informations à jour concernant votre pays en allant sur www.quefairedemesdechets.fr

## ITALIANO — Smaltimento delle apparecchiature obsolete

1. Tutte le apparecchiature elettriche ed elettroniche, contrassegnate da questo simbolo ("bidone della spazzatura barrato da una croce□), devono essere raccolte e smaltite separatamente rispetto agli altri rifiuti urbani misti mediante impianti di raccolta specifici installati da enti pubblici o dalle autorità locali. Si ricorda che gli utenti finali domestici possono consegnare gratuitamente le apparecchiature elettriche ed elettroniche a fine vita presso il punto vendita all'atto dell'acquisto di una nuova apparecchiatura equivalente. Gli utenti finali domestici possono inoltre consegnare gratuitamente apparecchiature elettriche ed elettroniche di piccolissime dimensioni (non eccedenti i 2□ cm) a fine vita direttamente presso un punto vendita a ci□ abilitato, senza obbligo di acquistare una apparecchiatura nuova ditipo equivalente. Si prega di informarsi previamente presso il punto vendita prescelto circa tale ultima modalità di conferimento dell'apparecchiatura a fine vita.
2. Il corretto smaltimento dell□unità obsoleta contribuisce a prevenire possibili conseguenze negative sulla salute degli individue sull□ambiente. Una gestione responsabile del fine vita delle apparecchiature elettriche ed elettroniche da parte degli utenti contribuisce al riutilizzo, al riciclaggio ed al recupero sostenibile dei prodotti obsoleti e dei relativi materiali.
3. Per informazioni pi□ dettagliate sullo smaltimento delle apparecchiature obsolete, contattare l□ufficio del comune di residenza, il servizio di smaltimento rifiuti o il punto vendita in cui è stato acquistato il prodotto. (www.lg.com/global/recycling)

## DEUTSCH — Entsorgung Ihrer Altgeräte

1. Das durchgestrichene Symbol eines fahrbaren Abfallbehälters weist darauf hin, dass Elektro- und Elektronik- Produkte (WEEE) getrennt vom Hausmüll entsorgt werden müssen. Bitte entsorgen Sie Altgeräte getrennt von anderem Abfall und bringen Sie diese zu einer ausgewiesenen Sammelstelle für das Recycling von elektrischen und elektronischen Geräten. Falls die Geräte Batterien oder Lampen enthalten, die vom Endverbraucher ohne Beschädigung leicht entnommen werden können, trennen Sie diese bitte vor der Entsorgung von den Hauptgeräten, es sei denn, Sie möchten, dass die alten Geräte wiederverwendet werden (alte Batterien und Lampen werden getrennt gesammelt). Bitte beachten Sie auch, dass Sie persönlich dafür verantwortlich sind, personenbezogene Daten auf dem Gerät zu löschen, bevor Sie Ihre Geräte entsorgen.
2. Alte elektrische Produkte können gefährliche Substanzen enthalten, die eine korrekte Entsorgung dieser Altgeräte erforderlich machen, um schädliche Auswirkungen auf die Umwelt und die menschliche Gesundheit zu vermeiden. Ihre ausgedienten Geräte können wiederverwendbare Teile enthalten, mit denen möglicherweise andere Produkte repariert werden können, aber auch sonstige wertvolle Materialien enthalten, die zur Schonung knapper Ressourcen recycelt werden können.
3. Sie können Ihr Gerät entweder in den Laden zurückbringen, in dem Sie das Produkt ursprünglich erworben haben oder Sie kontaktieren Ihre Gemeindeabfallstelle für Informationen über die nächstgelegene autorisierte WEEE Sammelstelle. Bitte beachten Sie, dass einige* Vertreiber verpflichtet sind :
   - bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart unentgeltlich zurückzunehmen, und
   - Altgeräte, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen;

   Wenn Offline oder Online Händler Neugeräte an Privathaushalte liefern, sind sie verpflichtet, Altgeräte direkt bei diesen abzuholen oder Rückgabemöglichkeiten in zumutbarer Entfernung anzubieten. Daher empfehlen wir Ihnen sich für weitere Informationen an Ihren Händler zu wenden.
4. LG Electronic Deutschland GmbH ist ordnungsgemäß als Hersteller in Deutschland registriert. Damit trägt LG deutschlandweit zur Sammlung von Elektro- und Elektronik-Altgeräten bei, die Sie in kommunalen Getrenntsammelstellen abgeben. Die aktuellsten Informationen finden Sie unter: www.lg.com/global/recycling oder https://www.lg.com/de/support/altgeraete-rueckgabe.

* Vertreiber mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Vertreiber von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quatratmetern, die Elektro- und Elektronikgeräte anbieten

## ΕΛΛΗΝΙΚΑ — Απόρριψη της παλιάς σας συσκευής

1. Αυτό το διαγραμμένο σύμβολο του τροχοφόρου κάδου υποδεικνύει ότι τα απόβλητα ηλεκτρικών και ηλεκτρονικών προϊόντων (ΑΗΗΕ) πρέπει να απορρίπτονται χωριστά από τα γενικά οικιακά απορρίμματα.
2. Τα παλιά ηλεκτρικά προϊόντα μπορεί να περιέχουν επικίνδυνες ουσίες και ως εκ τούτου η σωστή απόρριψη της παλιάς σας συσκευής αποτρέπει ενδεχόμενες αρνητικές συνέπειες για το περιβάλλον και την ανθρώπινη υγεία. Η παλιά σας συσκευή μπορεί να περιέχει επαναχρησιμοποιήσιμα ανταλλακτικά που θα μπορούσαν να χρησιμοποιηθούν για την επισκευή άλλων προϊόντων, καθώς και άλλα υλικά αξίας που μπορούν να ανακυκλωθούν για εξοικονόμηση των περιορισμένων φυσικών πόρων.
3. Μπορείτε να πάτε τη συσκευή σας, είτε στο κατάστημα από το οποίο αγοράσατε το προϊόν, ή να επικοινωνήσετε το τοπικό γραφείο απορριμμάτων για λεπτομέρειες σχετικά με το πλησιέστερο εγκεκριμένο σημείο συλλογής ΑΗΗΕ (Απόβλητα Ηλεκτρικών και Ηλεκτρονικών Συσκευών). Για τις πιο πρόσφατες πληροφορίες για τη χώρα σας επισκεφθείτε τη διεύθυνση www.lg.com/global/recycling

## ҚАЗАҚША — Ескі құрылғыны қоқысқа тастау

1. Бұл осы үстіі сызылған шелек таңбасы қоқыс электр және электрондық өнімдер (WEEE) қалалық қоқыс жүйесінен бөлек жойылуы керектігін білдіреді.
2. Ескі электр құрылғыларында зиянды заттар болады, сондықтан ескі құрылғыны тиісті түрде қоқысқа тастау қоршаған орта мен адам денсаулығына тиюі мүмкін кері әсерлердің алдын алуға көмектеседі. Ескі құрылғыңызда басқа өнімдерді және шектеулі ресурстарды сақтау қайта өңделетін маңызды материалдарды жөндеу үшін қолданылатын қайта қолданбалы бөлшектер болуы мүмкін.
3. Құрылғыңызды өнімді сатып алған дүкенге апаруға немесе жақын жердегі өкілетті WEEE жинау нүктесі туралы мәліметтер үшін жергілікті басқару мекемесіне хабарласуға болады. Еліңіз үшін ең соңғы ақпаратты алу үшін www.lg.com/global/recycling веб-сайтын қараңыз

## LATVIEŠU — Jūsu vecās ierīces likvidēšana

1. Šis simbols – pārsvītrota atkritumu tvertne uz riteņiem – norāda, ka elektrisko un elektronisko iekārtu atkritumi (EEIA) jālikvidē atsevišķi no sadzīves atkritumu plūsmas.
2. Veci elektriskie izstrādājumi var saturēt bīstamas vielas, tādēļ jūsu vecās ierīces pareiza likvidēšana palīdzēs novērst iespējamās negatīvās sekas videi un cilvēka veselībai. Jūsu vecā ierīce var saturēt vairākkārt izmantojamas detaļas, kuras var izmantot citu izstrādājumu remontam, un citus vērtīgus materiālus, kurus var pārstrādāt, tādējādi saglabājot ierobežotus resursus.
3. Jūs varat aiznest ierīci vai nu uz veikalu, kurā šo izstrādājumu iegādājieties, vai sazināties ar vietējās pašvaldības atkritumu savākšanas iestādi un uzzināt sīkāku informāciju par tuvāko oficiālo EEIA savākšanas punktu. Jaunāko informāciju par savu valsti skatiet vietnē www.lg.com/global/recycling

## LIETUVIŲ K. — Seno prietaiso utilizavimas

1. Išbrauktos šiukšlių dėžės simbolis rodo, kad elektros ir elektronikos įrangos atliekos (EĮA) turėtų būti utilizuojamos atskirai nuo komunalinių atliekų.
2. Senoje elektrinėje įrangoje gali būti pavojingų medžiagų, taigi tinkamas seno prietaiso utilizavimas padės apsisaugoti nuo galimų neigiamų pasekmių aplinkai ir žmonių sveikatai. Jūsų sename prietaise gali būti dalių, kurias galima panaudoti dar kartą taisant kitą įrangą ir kitų vertingų medžiagų, kurios gali būti perdirbamos siekiant tausoti ribotus išteklius.
3. Savo prietaisą galite nugabenti į parduotuvę, kurioje įrangą įsigijote, arba susisiekite su vietos valdžios atliekų tarnyba norėdami gauti artimiausio EĮA surinkimo vietos informaciją. Norėdami gauti daugiau informacijos savo šalyje, apsilankykite www.lg.com/global/recycling

## NEDERLANDS — Verwijdering van uw oude apparaat

1. Dit symbool van de doorgekruiste vuilnisbak geeft aan dat afgedankte elektrische en elektronische producten (WEEE) afzonderlijk van het huishoudelijke afval moeten worden verwijderd.
2. Oude elektrische producten kunnen gevaarlijke stoffen bevatten, dus een juiste verwijdering van uw oude apparaat helpt bij het voorkomen van mogelijke negatieve gevolgen voor het milieu en de volksgezondheid. Uw oude apparaat kan herbruikbare onderdelen bevatten die gebruikt zouden kunnen worden voor het repareren van andere producten, en andere waardevolle materialen die kunnen worden gerecycleerd voor het behoud van beperkte grondstoffen.
3. U kunt uw apparaat meenemen naar de winkel waar u het product hebt gekocht, of u kunt contact opnemen met uw plaatselijke afvalinstantie voor de gegevens van uw dichtstbijzijnde geautoriseerde WEEE-verzamelpunt. Voor de meest geactualiseerde informatie voor uw land wordt verwezen naar www.lg.com/global/recycling

## NORSK — Avhending av gamle apparater

1. Dette symbolet av en utkrysset avfallsdunk indikerer at kasserte elektriske og elektroniske produkter (WEEE) skal kastes separat fra husholdningsavfall og leveres til den kommunale resirkulering.
2. Gamle elektriske produkter kan inneholde farlige stoffer, så korrekt avfallshåndtering av det gamle apparatet bidrar til å hindre potensielt negative konsekvenser for miljøet og andres helse. Gamle apparater kan inneholde gjenbrukbare deler som kan brukes til å reparere andre produkter og andre verdifulle materialer som kan resirkuleres for å bevare begrensede ressurser.
3. Du kan bringe apparatet enten til butikken der du kjøpte produktet, eller ta kontakt med den lokale myndighetens avfallskontor for informasjon om nærmeste autoriserte innsamlingspunkt for el-avfall (WEEE-avfall). For den mest oppdaterte informasjonen for ditt land, gå til www.lg.com/global/recycling

## POLSKI — Utylizacja starego urządzenia

1. Symbol przekreślonego pojemnika na odpady na kółkach oznacza, że produkty elektryczne lub elektroniczne (WEEE) należy zutylizować poza obiegiem odpadów komunalnych.
2. Stare produkty elektroniczne mogą zawierać niebezpieczne substancje. Właściwa utylizacja starego urządzenia pozwoli uniknąć potencjalnych negatywnych skutków dla środowiska i zdrowia. Stare urządzenie może zawierać części wielokrotnego użytku, które mogą zostać wykorzystane do naprawy innych produktów lub inne wartościowe materiały, które można przetworzyć, aby oszczędzać zasoby naturalne.
3. Możesz zanieść urządzenie do sklepu, w którym zostało kupione lub skontaktować się z lokalnym urzędem gospodarki odpadami, aby uzyskać informacje o najbliższym punkcie zbiórki WEEE. Aby uzyskać aktualne informacje z zakresu gospodarki odpadami obowiązującej w Twoim kraju, odwiedź stronę http://www.lg.com/global/sustainability/environment/take-back-recycling/global-network-europe (plik PDF : „For more information about how to recycle LG products in your country".

## РУССКИЙ — Утилизация старого оборудования

1. Этот перечеркнутый символ мусорной корзины указывает на то, что отработанные электрические и электронные изделий (WEEE) следует утилизировать отдельно от бытовых отходов.
2. Старые электрические изделия могут содержать опасные вещества, поэтому правильная утилизация старого оборудования поможет предотвратить возможные негативные последствия для окружающей среды и здоровья человека. Старое оборудование может содержать детали, которые могут быть повторно использованы для ремонта других изделий, а также другие ценные материалы, которые можно переработать, чтобы сохранить ограниченные ресурсы.
3. Вы можете отнести свой прибор в магазин, где он был приобретен, либо связаться с органами местного самоуправления для получения подробных сведений о ближайшем пункте приема отходов электрического и электронного оборудования (WEEE). Для получения самой свежей информации относительно вашей страны обращайтесь по адресу: www.lg.com/global/recycling

## PORTUGUÊS Eliminação do seu aparelho usado

1. Este símbolo de um caixote do lixo com rodas e linhas cruzadas sobrepostas indica que os resíduos de produtos elétricos e eletrónicos (WEEE) devem ser eliminados separadamente do lixo doméstico.
2. Os produtos elétricos usados podem conter substâncias perigosas, pelo que, a eliminação correta do seu aparelho usado pode contribuir para evitar potenciais danos para o ambiente e saúde humana. O seu aparelho usado pode conter peças reutilizáveis que podem ser usadas para reparar outros aparelhos e materiais úteis que podem ser reciclados para preservar os recursos limitados.
3. Pode levar o seu aparelho à loja onde o adquiriu ou contactar a sua entidade local de recolha e tratamento de resíduos para obter mais informações sobre o ponto de recolha WEEE autorizado mais próximo. Para obter informações mais atualizadas relativas ao seu país, visite www.lg.com/global/recycling

## ROMÂNĂ Eliminarea aparatului vechi

1. Simbolul de pubelă indică faptul că deșeurile electrice și electronice (WEEE) trebuie eliminate separat de celelalte deșeuri.
2. Produsele electrice și electronice vechi conțin substanțe periculoase. Astfel, prin eliminarea corespunzătoare veți contribui la prevenirea deteriorării mediului înconjurător și al sănătății umane. Este posibil ca dispozitivul dvs. vechi să conțină piese componente, care pot fi folosite pentru repararea altor produse sau materiale importante care pot fi reciclate în scopul economisirii resurselor limitate.
3. Dispozitivul vechi poate fi returnat magazinului de unde a fost achiziționat, sau puteți contacta firma responsabilă pentru eliminarea deșeurilor, în scopul aflării locației unității autorizate pentru reciclarea deșeurilor electrice și electronice (WEEE). Pentru informații mereu actualizate și referitoare la țara dvs. vă rugăm vizitați pagina web www.lg.com/global/recycling

## SRPSKI Odlaganje starog aparata

1. Ovaj simbol precrtana kanta za smeće pokazuje da električni i elektronski otpad (WEEE) treba da se odlaže odvojeno od običnog komunalnog otpada.
2. Stari električni aparati mogu da sadrže otrovne supstance, tako da će pravilno odlaganje Vašeg starog aparata pomoći sprečavanju pojave negativnih posledica po životnu sredinu i zdravlje ljudi. Vaš stari aparat može da sadrži delove za višekratnu upotrebu koji se mogu koristiti za zamenu drugih proizvoda i druge vredne materijale koji se mogu reciklirati radi očuvanja ograničenih resursa.
3. Vaš aparat možete da odnesete u radnju gde ste ga kupili ili da kontaktirate lokalnu vladinu kancelariju za otpad kako biste dobili informaciju o najbližoj autorizovanoj WEEE stanici za odlaganje ovog otpada. Za najnovije informacije za Vašu zemlju, molimo Vas da pogledate web stranicu www.lg.com/global/recycling

## SLOVENČINA Zneškodnenie starého spotrebiča

1. Tento symbol prečiarknutého odpadkového koša na kolieskach znamená, že odpad z elektrických a elektronických zariadení (WEEE) musí byť zneškodnený samostatne od komunálneho odpadu.
2. Staré elektrické produkty môžu obsahovať nebezpečné latky, preto správne zneškodnenie vášho starého spotrebiča pomôže zabrániť potenciálnym negatívnym dopadom na prostredie a ľudské zdravie. Váš starý spotrebič môže obsahovať diely, ktoré možno opätovne použiť na opravu iných produktov, a iné cenné materiály, ktoré možno recyklovať s cieľom chrániť obmedzené zdroje.
3. Svoj spotrebič môžete zaniesť do predajne, kde ste produkt zakúpili, alebo sa môžete obrátiť na oddelenie odpadov miestnej samosprávy a požiadať o informácie o najbližšom zbernom mieste odpadu z elektrických a elektronických zariadení (WEEE). Najnovšie informácie platné pre vašu krajinu nájdete na stránke www.lg.com/global/recycling

## SLOVENŠČINA Odstranjevanje vašega starega aparata

1. Na izdelku prečrtan simbol smetnjaka opozarja, da je treba odpadne električne in elektronske izdelke (OEEI) odstranjevati ločeno od ostalih komunalnih odpadkov.
2. Odpadni električni izdelki lahko vsebujejo nevarne snovi, zato s pravilnim odstranjevanjem starega aparata pripomorete k preprečevanju morebitnih negativnih vplivov na okolje in zdravje ljudi. Vaš stari aparat lahko vsebuje dele, ki bi jih bilo mogoče uporabiti za popravilo drugih izdelkov, in druge dragocene materiale, ki jih je mogoče reciklirati in s tem ohranjati omejene vire.
3. Vaš aparat lahko odnesete bodisi v trgovino, kjer ste kupili ta izdelek, ali pa se obrnite na lokalni urad za odstranjevanje odpadkov glede podrobnosti o najbližjem pooblaščenem zbirnem mestu za OEEI. Za najnovejše informacije za vašo državo si oglejte www.lg.com/global/recycling

## ESPAÑOL Símbolo para marcar AEE

1. El símbolo del contenedor de basura tachado con un aspa indica que la recogida separada de aparatos eléctricos y electrónicos (AEE) debe realizarse de manera separada.
2. Los productos eléctricos antiguos pueden contener sustancias peligrosas de modo que la correcta eliminación del antiguo aparato ayudará a evitar posibles consecuencias negativas para el medio ambiente y para la salud humana. El antiguo aparato puede contener piezas reutilizables que podrían utilizarse para reparar otros productos y otros materiales valiosos que pueden reciclarse para conservar los recursos limitados.
3. Puede llevar el aparato a cualquiera de los centros autorizados para su recogida. Para obtener la información más actualizada para su país por favor visite www.lg.com/global/recycling

## SVENSKA Kassera den gamla apparaten

1. Den överkorsade soptunnesymbolen indikerar att elektroniskt och elektrickt avfall (WEEE) ska kasseras separat från hushållsavfallet och lämnas in till av kommunen anvisat ställe för återvinning.
2. Gamla elektroniska och elektriska produkter kan innehålla farliga substanser så korrekt avfallshantering av produkten förhindrar negativa konsekvenser för miljön och den mänskliga hälsan. Din gamla apparat kan innehålla återanvändningsbara delar som används för att reparera andra produkter och andra värdefulla material som kan återvinnas för att spara begränsade resurser.
3. Du kan ta din gamla apparat till butiken där du köpte produkten, eller kontakta din kommun för information om närmaste WEEE-uppsamlingsställe. För den mest uppdateade informationen i ditt land, gå till www.lg.com/global/recycling

## MAGYAR A régi készülék ártalmatlanítása

1. A leselejtezett elektromos és elektronikai termékeket a háztartási hulladéktól elkülönítve kell begyűjteni, a jogszabályok által kijelölt módon és helyen.
2. Régi készülékeinek megfelelő leselejtezése segíthet megelőzni az esetleges egészségre vagy környezetre ártalmas hatásokat.
3. Ha további információra van szüksége régi készülékeinek leselejtezésével kapcsolatban, lépjen kapcsolatba velünk a szelektalok.hu oldalon ahol tájékoztatjuk Önt visszavételi, átvételi, gyűjtési és kezelési kötelezettségeinkről.

## TÜRKÇE Eski cihazınızın atılması

1. Tüm elektrikli ve elektronik atıklar, devlet ya da yerel yetkililer tarafından belirlenen toplama merkezlerinde ayrı olarak imha edilmelidir. Atık eletrikli ve elektronik aletler belediyeler tarafından kurulan toplama noktalarına teslim edilmeli veya aldığınız yeni ürünü satıcınız adresinize teslim ederken, satıcınızdan atık elektrikli ve elektronik aletinizi teslim almasını istemelisiniz.
2. Atık ürünün doğru imhası çevre ve insan sağlığı üzerindeki potansiyel olumsuz sonuçların engellenmesine yardımcı olacaktır.
3. Eski ürününüzün imhası hakkında daha fazla bilgi için lütfen belediyeniz ya da ürünü aldığını mağaza ile iletişime geçiniz.
4. AEEE Yönetmeliğine Uygundur.
5. Bu işareti içeren ürünler tehlikeli madde içerebilir. Ürünler içerisindeki tehlikeli maddeler çevre kirlenmesine veya yaralanma/ölüme sebebiyet verebilir. (www.lg.com/global/recycling)

## УКРАЇНСЬКА Утилізація старого обладнання

1. Цей перекреслений символ сміттєвого кошика вказує, що відпрацьовані електричні та електронні вироби (WEEE) потрібно утилізувати окремо від побутових відходів.
2. Старі електричні вироби можуть містити небезпечні речовини, тому правильна утилізація старого обладнання допоможе запобігти можливим негативним наслідкам для навколишнього середовища та здоров'я людини. Старе обладнання може містити деталі, які можуть бути використані повторно для ремонту інших виробів, а також інші цінні матеріали, які можливо переробити, щоб зберегти обмежені ресурси.
3. Ви можете віднести свій прилад в магазин, де його було придбано, або зв'язатися з органами місцевого самоврядування, щоб отримати докладні відомості про найближчий пункт прийому відходів електричного та електронного обладнання (WEEE). Щоб отримати найсвіжішу інформацію щодо вашої країни, звертайтеся за адресою: www.lg.com/global/recycling

