LG
Life's Good

ENGLISH
ARABIC

OWNER'S MANUAL
REFRIGERATOR

Please read this manual carefully before operating your set and retain it for future reference

MFL70370109

P/NO : MFL70370109
Rev.03_050321

www.lg.com

Copyright © 2020-2021 LG Electronics. All rights reserved

CONTENTS

IMPORTANT SAFETY INFORMATION.....3

INSTALLATION.....11

INNER PARTS.....12

OPERATIONS / FEATURES 14

- Starting
- Before Setting the Temperature
- Self Test
- Controls For Freezer Compartment
- Controls For Refrigerator Compartment
- Vegetable Drawer (Optional)
- Humidity Controller
- Defrosting
- Deodorizer (Optional)
- Ice Making (Optional)
- Door Cooling+ (Optional)
- Door Alarm (Optional)
- Lamp Replacement
- Vacation Time

SMART FUNCTIONS (Optional) 17

SUGGESTIONS ON FOOD STORAGE 19

CLEANING 20

GENERAL INFORMATION 21

IMPORTANT WARNINGS 22

BEFORE CALLING FOR SERVICE 23

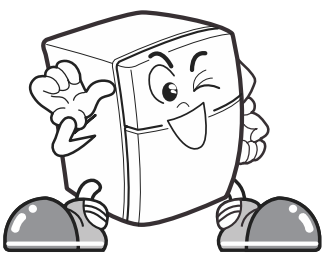

IMPORTANT SAFETY INFORMATION

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

⚠ This is a safety alert symbol. It alerts you to safety messages that inform you of hazards that can hurt or seriously injured or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

⚠ **DANGER**	You will be hurt or seriously injured if you don't follow instructions.
⚠ **WARNING**	To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.
⚠ **CAUTION**	Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INFORMATION

⚠ WARNING

- ⚠ Keep ventilation openings, in the appliance enclosure or in the built-in-structure, clear of obstruction.
- ⚠ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ⚠ Do not damage the refrigerant circuit.
- ⚠ Do not use electrical appliances inside the food storage compartment, unless they are recommended by the manufacturer.
- ⚠ The refrigerant and insulation blowing gas used in the appliance requires special disposal procedures. When disposal, please consult with services agent or a similarly qualified person.

IMPORTANT SAFETY INFORMATION

Risk of Fire and Flammable Materials



This symbol alerts you to flammable materials that can ignite and cause a fire if you do not take care.

- This appliance contains a small amount of isobutane refrigerant (R600a), but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes. In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance is used should correspond to the amount of refrigerant used. The room must be 1 m^2 in size for every 8 g of R600a refrigerant inside the appliance.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

IMPORTANT SAFETY INFORMATION

1. When connecting the power

Dedicated outlet should be used.

- Using several devices at one outlet may cause fire.

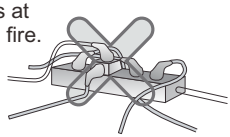

Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

Plug may get damaged, which causes fire or electric shock.

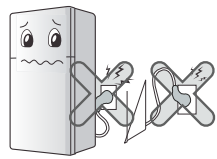

Do not allow the power cord to bend or pressed by heavy object.

It may damage the power cord and cause fire or electric shock.

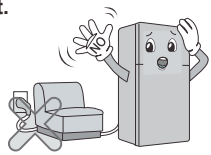

Do not extend or modify the length of the power plug.

It damages the power cord and cause electric shock or fire.

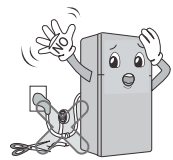

Unplug the power plug while cleaning, handling or replacing the interior LED lamp of the refrigerator.

- It may cause electric shock or injury.

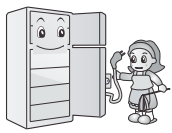

Do not pull out the cord or touch the power plug with wet hands.

- It may cause electric shock or injury.

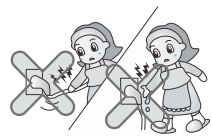

Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may cause fire or electric shock.



Make sure of grounding.

Incorrect grounding may cause breakdown and electric shock

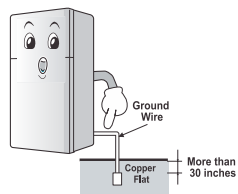

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

It may cause electric shock or short circuit.

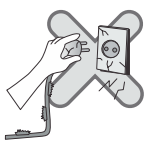

The tempered glass on door can be broken by impact, do not touch the broken parts you may injured.



IMPORTANT SAFETY INFORMATION

2. When using the refrigerator

Do not place heavy object or the dangerous object (container with liquid) on the refrigerator.

It may fall and cause injury, fire or electric shock when opening or closing the door.



Do not cling to the door or the shelves of the door or home bar of the freezer or the cool chamber.

It may make the refrigerator fall over or damage the hands. Especially, do not allow the children to do the above.



Do not install the refrigerator in wet place or place where water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.



Do not use or store inflammable materials like ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

- It may cause explosion or fire.

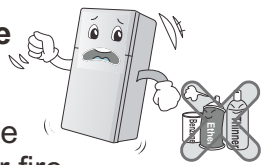

Do not use drier to dry the inside, nor light a candle to remove odor

It may cause explosion or fire.



Do not store medicine or academic materials in the refrigerator.

When the material with strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.

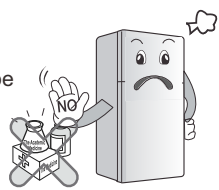

Do not use the combustible spray near the refrigerator.

It may cause fire.

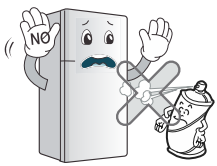

Install in places away from the fire such as the place where flammable gas is leaked.

It may cause fire.

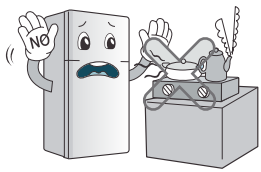

2. When using the refrigerator

Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.

It may cause fire, electric shock or injury by dropping down.



When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.

If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately. This appliance uses a refrigerant gas (isobutane,R600a). Although it uses a small amount of the gas, it is still combustible gas. Gas leakage during appliance transport, installation or operation can cause fire, explosion or injury if sparks are caused

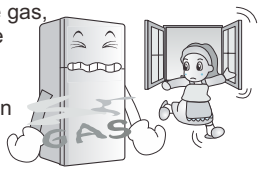

Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock or fire.

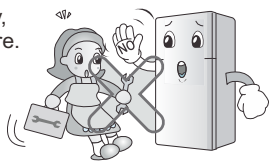

When disposing the refrigerator, remove the packing materials like gasket from the door

It may cause to lock out the child.



Use the submerged refrigerator only after checking it.

It may cause electric shock or fire.

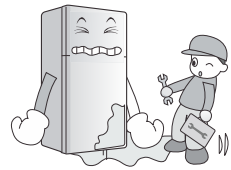

Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.

Deterioration of insulation of electric parts may cause electric shock or fire.

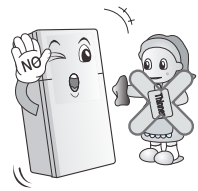

When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.

It may cause fire.

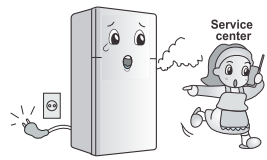

Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

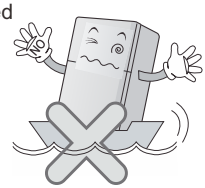

Install the refrigerator on a solid and level floor.

Installing it on an unstable place may cause injury by falling down the refrigerator when opening or closing the door.

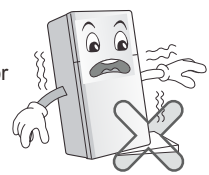

IMPORTANT SAFETY INFORMATION

2. When using the refrigerator

Do not insert hand or metal stick into the exit of cool air, cover, bottom of the refrigerator, heat proof grill (exhaust hole) at backside.

It may cause electric shock or injury.

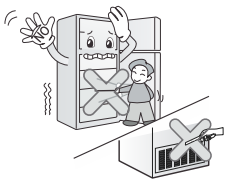

What to do with your old refrigerator,

Your refrigerator contains liquid (refrigerant, lubricant) made of recyclable materials, All these materials must be sent to a recycling waste disposal site as they can be reused after a specific recycling process.



In case of thunder and lightning, or if not in use for a long period of time, detach the power plug.

There is a danger of electric shock or fire.



Place all the components in the right places before connecting the power.



Never leave lit candles on the fridge, high risk of causing fire or product damage.

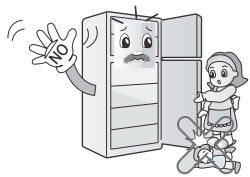

⚠CAUTION

Violating these directions may cause injury or damage to health, house or furniture. Always be careful, please.

Do not touch food or containers at the freezer with wet hands.

It may cause frostbite.

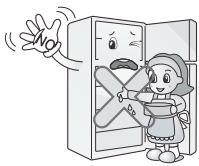

Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the freezer to fail.

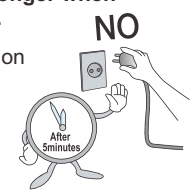

Do not put bottle in the freezer.

Do not place glass containers, bottles or cans (especially those containing carbonated drinks) in the freezer compartment, shelves or ice bin that will be exposed to temperatures below freezing.



Pull out the power plug not by grasping the cord. But by the plug of its end.

It may cause electric shock or short circuit to fire.



IMPORTANT SAFETY INFORMATION

Carry the refrigerator with the handle bar provided at the bottom-front and top-rear of the refrigerator.

Otherwise, your hands may be slipped to cause injury.

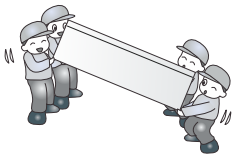

Do not insert hand into the bottom of the refrigerator.

The iron plate of the bottom may cause injury.



Completely empty inside before taking out the container from the door.

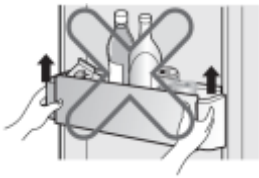

Opening or closing the door of the refrigerator may cause injury to the person around it, please be careful.

Opening or closing the door may cause feet or v hands to be caught in the chink in door or child hand get hurt by the corner.

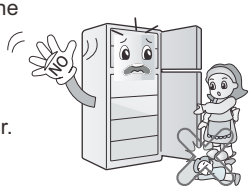

Do not put any living animal in the refrigerator.



Do not lean on the doors, Hinges may deregulate themselves, causing air leak and performance deterioration



Movable parts like shelf, basket, etc should be handled with care.

May get damaged or break if dropped.

⚠ WARNING

- Please do not use a dishwasher to clean the lower drawers; the high temperature may cause damage to the baskets which make them unusable.
- If the appliance is equipped with a lock (some countries only), keep the key out of reach of children.

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.

WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.

BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY.

IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

INSTALLATION

1. Select a good location.

Place your refrigerator where it is easy to use.

2. Avoid placing the unit near heat sources, direct sunlight or moisture.

3. To avoid vibrations, the unit must be level.

If required, adjust the leveling screws to compensate for unevenness of the floor.

The front should be slightly higher than the rear to aid in door closing.

Leveling screws can be turned easily by tipping the cabinet slightly.

Turn the leveling screws clockwise ( ) to raise the unit, counterclockwise ( ) to lower it.

4. Don't install this appliance below 5 °. It may cause the debasement of the refrigerator.

NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.

2. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.

3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.

4. Prior to storing food, leave your refrigerator on for 2 or 3 hours.

Check the flow of cold air in the freezer compartment to ensure proper cooling. Your refrigerator is now ready for use.

5. After installing the appliance, connect the power plug into a socket outlet. Before moving and discarding the appliance, disconnect the plug from the socket outlet.

Dimensions and Clearances

Too small of a distance from adjacent items may result in degradation of freezing capability and increased electricity costs. Allow over 50mm clearance from each adjacent wall when installing the appliance.

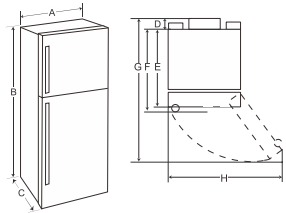

Image for representation purpose only

-	Bar Handle	Pocket Handle
A	585	585
B	1475	1475
C	703	669
D	55	55
E	614	614
F	648	614
G	1200	1200
H	991	991

Ambient Temperature

The appliance is designed to operate within a limited range of ambient temperatures, depending on the climate zone. do not use the appliance at a temperature exceeding the limit. The internal temperatures could be affected by the location of the appliance, the ambient temperature, the frequency of door opening and so on.

The climate class can be found on the rating label.

Climate Class	**Ambient Temperture Range °C**
SN (Extended Temperate)	+10 - +32
N (Temperate)	+16 - +32
ST (Subtropical)	+16 - +38
T (Tropical)	+16 - +43/+10 - +43*

*Australia, India, Kenya

NOTE

The appliances rated from SN to T are intended to be used at an ambient temperature between 10^{0}C and 43^{0}C

INNER PARTS

- Entire freezer compartment is 2 STAR. (**)

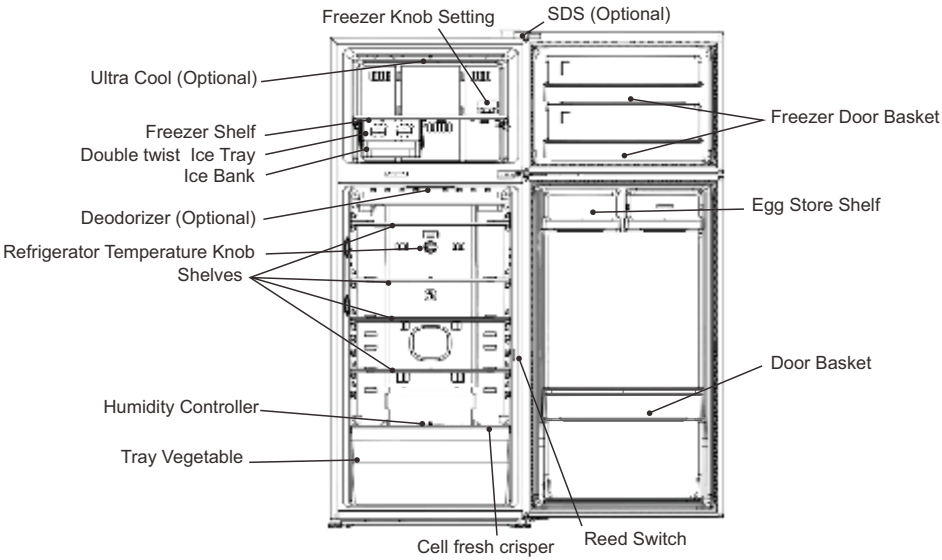

NOTE

- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.
- Due to continuously development, model specification subjected to change.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put I enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.
- The automatic defrosting system in the appliance ensures that the compartment remains free of ice build up under normal operating conditions
- If gasket is damaged, efficiency may be lowered owing to the escape of cool air

* Please store this manual in a place where it can be easily accessed whenever required.

INNER PARTS

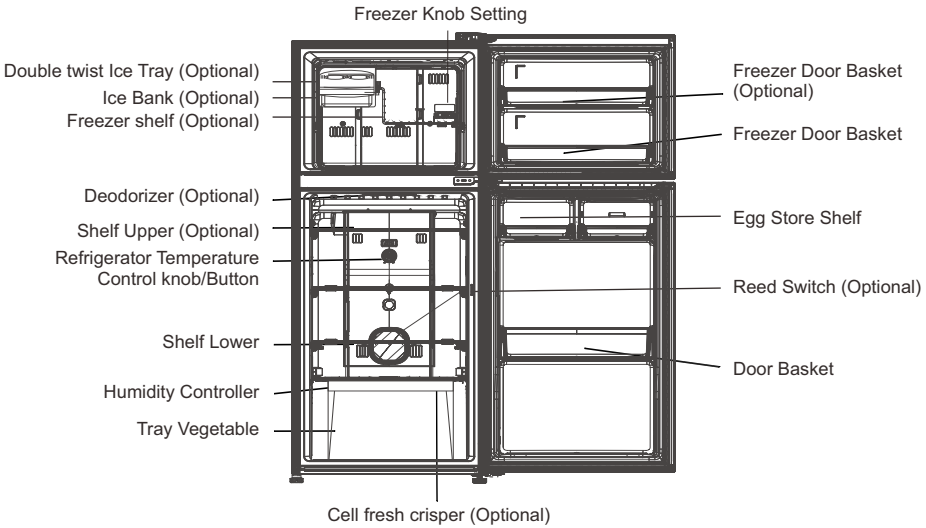

NOTE

- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.
- Due to continuously development, model specification subjected to change.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put I enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.
- The automatic defrosting system in the appliance ensures that the compartment remains free of ice build up under normal operating conditions
- If gasket is damaged, efficiency may be lowered owing to the escape of cool air

* Please store this manual in a place where it can be easily accessed whenever required.

OPERATIONS / FEATURES

STARTING

When your refrigerator is firstly installed, allow 6 hours for the temperature to stabilize prior to filling it with fresh or frozen foods.
If operation is interrupted, wait 5 minutes before restarting.

BEFORE SETTING THE TEMPERATURE

- The temperature of the refrigerator is kept constant regardless of changes in room temperature. It is recommended that, once set, the temperature settings (the controls for the refrigerator and freezer compartments) not be changed unless necessary.
- This refrigerator has one temperature control dial for the refrigerator compartment and one temperature control dial for the freezer compartment.
- The default setting of the temperature control dial for the refrigerator compartment is '4'
- The default setting of the temperature control dial for freezer is '3'.
- This refrigerator has a temperature sensor in the refrigerator compartment. It will start and stop the compressor automatically as needed.

SELF TEST

- Your refrigerator contains a built in diagnostic capability. If it develops a malfunction in certain areas, it will display an error code to assist the repair technician. While an error code is displayed, other control and display functions will not operate.
- If an error code is displayed, contact a service center. Do not disconnect the power cord from the outlet.

CONTROLS FOR FREEZER COMPARTMENT

- The higher number on control setting is, the lower the temperature of the freezer compartment becomes.
- Since the temperature of the refrigerator and freezer compartments is controlled with a fixed amount of cooled air, the refrigerator compartment will be warmer if the freezer compartment becomes colder.
- When the freezer compartment is not cold enough in winter, adjust the control for the freezer to High (3 / • / ••).
- For achieving temperature in Freezing, Energy and Storage Test, Freezer control may be required to set at • or ••.

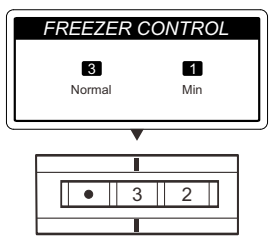

CONTROLS FOR REFRIGERATOR COMPARTMENT

For colder temperatures, adjust the control knob to COLDEST, and for warmer temperatures, adjust the control knob to COLD position.

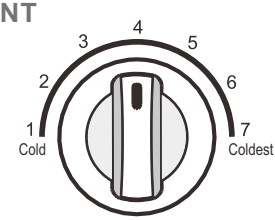

OPERATIONS / FEATURES

VEGETABLE DRAWER (OPTIONAL)

Cell Fresh Crisper
It keeps your vegetables fresh by holding moisture & prevents them from getting rotten.

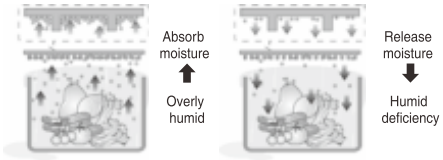

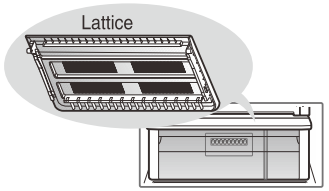

HUMIDITY CONTROLLER

- Humidity Controller is for controlling the humidity inside the vegetable box.

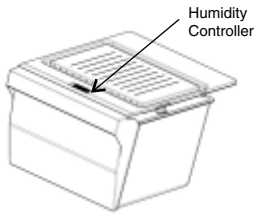

DEFROSTING

- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.

DEODORIZER (OPTIONAL)

- Unpleasant odor of food in fresh food compartment is deodorized with no harm to the user and the food.

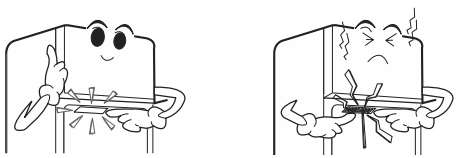

How to use

- As Deodorizer is located in cooling air inlet for circulating air in fresh food compartment, there is no need for any handling.
- Do not prick the cooling air inlet with a sharp tip because Deodorizer may get damaged.
- When storing food with strong odor, wrap it or store it in a container with a lid because odor may be passed on to other foods.

Re-Using of Deodorizer

- Used some length and the odor is strong, Deodorizer can be revived and re-used.
- Separate Deodorizer in ceiling of refrigerator compartment, using hair drier to remove moisture or malodor and oxidize under sunlight to decomposing malodor by ultraviolet.

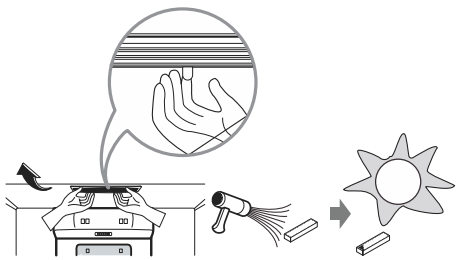

OPERATIONS / FEATURES

ICE MAKING (OPTIONAL)

Twisting Ice Serve Type

- To make ice cubes, fill the ice tray with water and insert in its position.
- To remove ice cubes, hold the lever of the tray and pull turn gently. Then, ice cubes drop into the ice cube box.
- You can remove the Twisting Ice Serve to make the freezer compartment larger.
- You should remove the ice Trays and Ice Cube Box first, and then pull the frame out toward the right side.
- Do not use anything other than water. Fill the water up to the marked line.

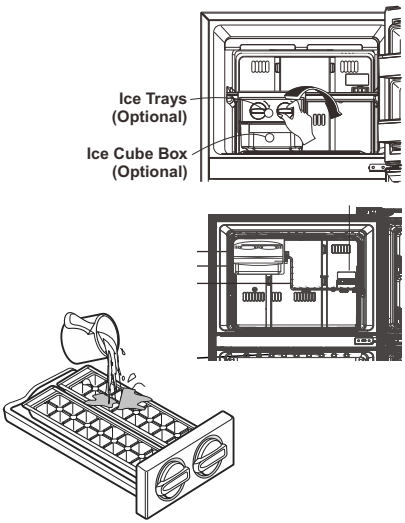

Door Cooling+ (Optional)

- If water or foreign substances enter the cool air vent while cleaning, efficiency will be lowered.

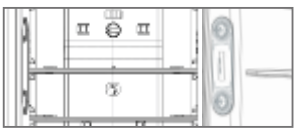

Door Alarm (Optional)

When the door of refrigerator is opened for 1 minute, an alarm will sound.



LAMP REPLACEMENT

NOTE : This product applies LED Lamp which cannot be replaced by the user. Please contact authorized service centre for the lamp replacement.

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life.

If you are leaving the appliance turned off for an extended period of time, remove all food and unplug the power cord. Clean the interior, and leave the doors slightly ajar to prevent mould from growing in the appliance.

SMART FUNCTIONS (Optional)

LG ThinQ Application

This feature is only available on models with the

or logo.

The LG ThinQ application allows you to communicate with the appliance using a smartphone.

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

Smart Diagnosis

- If you experience a problem while using the appliance, this smart diagnosis feature will help you diagnose the problem.

NOTE

- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

Installing the LG ThinQ Application

Search for the LG ThinQ application from the Google Play Store or Apple App Store on a smart phone.

- Follow instructions to download and install the application.
- Run the LG ThinQ application and follow the instructions in the application to register the appliance.

Smart Diagnosis

This feature is only available on models with the

or logo.

Use this feature to help you diagnose and solve problems with your appliance.

NOTE

- For reasons not attributable to LGE's negligence, the service may not operate due to external factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.
- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

SMART FUNCTIONS (Optional)

This feature is only available on models with the or logo.

Use this feature to help you diagnose and solve problems with your appliance.

Using Audible Diagnosis to Diagnose Issues

1. Open all the doors of the refrigerator.SDS can be input even in Test Mode & Error status.

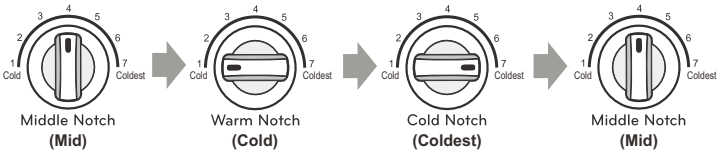

2. Turn knob to Middle notch.
3. Turn knob to Warm notch and keep that status for 2sec.
4. Turn knob to Cold notch within 3sec and keep that status for 2sec.
5. Turn knob to Middle notch within 3sec and keep that status for 2sec.
6. Place the phone near the speaker hole in the top right side door hinge.
Ensure the microphone of the telephone is toward the speaker hole.

Do not take away the telephone while data is being transmitted.

During the data transmission for smart diagnosis, hold the telephone 10cm away from the speaker hole and avoid any background noises.

⚠ CAUTION

The transmission sound may be irritating. Do not take away the telephone until the sound stops for good diagnosis.

7. When SDS is input, buzzer let you know by ringing 4times.
(Frequency of SDS Buzzer is 2000Hz, 0.2sec Off/ 0.2sec On 4times)

8. After inputting SDS, SDS buzzer will ring.

9. After the data transfer is complete, the diagnosis will be displayed in the application.

When the data transmission is completed, the refrigerator will be automatically turned Off and On a few seconds later.

SUGGESTIONS ON FOOD STORAGE

STORING FOOD

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher electric bills!
- When storing the food, cover it with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.
- In the event of a blackout, call the electricity company and ask how long it is going to last.
  -You should avoid door openings while the power is off.
  -When the power supply gets back to normal, check the condition of the food.

FREEZER COMPARTMENT

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Freezer section marked ** is -12C compartment/section, that is suitable for short term storage of frozen food(optional).

REFRIGERATOR COMPARTMENT

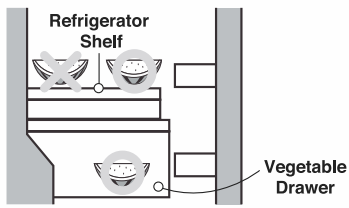

- Avoid placing moist food on deep interior refrigerator shelves, it could freeze by direct contact with chilled air. To avoid this it is better to store food in the covered container.
- It is desirable to store moist food (especially vegetable and fruit) in the vegetable storage compartment. If it is necessary to store on a shelf of the refrigerator, put it close to the door away from the back wall of the refrigerator to avoid being frozen by direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in a upright position, which keeps them fresh for longer time.
- If there are chill compartments in the appliance, do not store vegetables and fruits with higher moisture content in the chill compartments as they may freeze due to the lower temperature.

CLEANING

It is important that your refrigerator is kept clean to prevent undesirable odors. Spilled food should be wiped immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR - Regular cleaning of the interior and interior parts is recommended. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR PARTS - Wash compartment shelves, door racks, storage trays and magnetic door seals etc. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

⚠WARNING

Always remove power cord from the wall outlet prior to cleaning. Wipe excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing electric shock. Do not use flammable or toxic cleaning liquids.

- Caution for Cleaning - Not to use : Surface active agent, Car wax, Anti-corrosive, All sorts of oil, Gasoline, Acids, Wax.
- Mild detergents, dish washable solutions and soapy water can be used.
- Careless usage can lead to colour change.

GENERAL INFORMATION

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

IF YOU MOVE

Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the leveling screw(s), turn them all the way into the base.

ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed. This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent "sweating" on the outer cabinet wall.

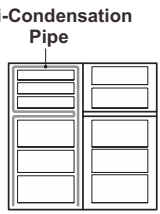

⚠CAUTION

Electrical Shock Hazard

Before replacing a burned-out light bulb, either unplug the refrigerator or turn off power at the circuit breaker or fuse box.

NOTE : Moving the control to OFF position does not remove power from the light circuit.

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

ACCESSIBILITY OF SUPPLY PLUG

The refrigerator-freezer should in such a position that the supply plug is accessible for quick disconnection when accident happens.

SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

ABOUT GROUNDING (EARTHING)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

DO NOT MODIFY OR EXTEND THE POWER CORD LENGTH

It will cause electric shock or fire.

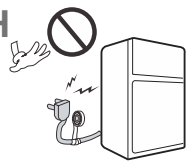

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless.

This appliance must be grounded (earthed).

DON'T WAIT! DO IT NOW!

Do not store Inflammable materials, explosives or chemicals In the refrigerator.

Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision."

"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance."

BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	• Has a house fuse blown or circuit breaker tripped? • Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	• Temperature control not set on proper position. • Appliance is placed close to wall or heat source. • Warm weather-frequent door openings. • Door left open for a long time. • Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	• Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting. • Unnecessary objects placed in the back side of the refrigerator.
REFRIGERATOR HAS ODOR	• Foods with strong odors should be tightly covered or wrapped. • Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	• Not unusual during periods of high humidity. • Door may have been left ajar.

Symptoms	Possible Cause & Solution
There is no refrigeration or freezing.	**Is there a power interruption?** • Check the power of other appliances.
	Check the power of other appliances. • Plug the power plug in the outlet properly.
	A fuse in your home may be blown or the circuit breaker tripped. Or the appliance is connected to a GFCI (Ground Fault Circuit Interrupter) outlet, and the outlet's circuit breaker has tripped. • Check the main electrical box and replace the fuse or reset the circuit breaker. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician. • Reset the circuit breaker on the GFCI. If the problem persists, contact an electrician.

Name of the Importer	Country	Address of the Importer
LG ELECTRONICS GULF FZE	UAE	GF-JEBEL ALI MAIN WAREHOUSE, JEBEL ALI FREE ZONE, P.O. BOX : 61445 DUBAI, UAE
Al Yousuf Electronics LLC	UAE	AL YOUSUF ELECTRONICS LLC P.O.BOX NO 25 DUBAI, UAE TEL: +971-4-2957300 FAX: +971-4-2957988
VIDEO HOME ELECTRONIC CENTRE W.L.L	QATAR	Video Home and Electronics Centre WLL PO BO 4668, Doha Qatar
OMAN GULF ENTERPRISE LLC	OMAN	OMAN GULF ENTERPRISES LLC P.O. BOX 421, CODE 118 , MUSCAT, SULTANATE OF OMAN, 118, ATTN:Mr.Rajesh Radhakrishnan, +96896372373,rajeshr@otegroup.com C.R. No.: 1/33586/3
AL-BABTAIN ELECTRONICS CO.	KUWAIT	Al-Babtain Electronics COMPANY WLL Al Babtain P.O Box 599, Safat 13006 Kuwait
SALEM MOHAMMED SHAMMAKH & CO.	YEMEN	Salem Mohammed Shammakh & CO. PO Box 3372, Hodeidah Republic of Yemen
A.J.M. KOOHEJI GROUP B.S.C. ©	BAHRAIN	A.J.M. Kooheji Group B.S.C. © P.O. Box74, Manama kingdom of Bahrain
UNITED YOUSUF M. NAGHI CO LTD.	SAUDI ARABIA	UNITED YOUSEF M. NAGHI CO. LTD. P.O BOX 453, JEDDAH 21411 SAUDI ARABIA
UNITED ELECTRONICS CO (eXtra)	SAUDI ARABIA	P.O. Box 76688 Khobar 31952, Saudi Arabia

LG
Life's Good

MFL70370109

عنوان المستورد	البلد	اسم المستورد
- مستودع GF جبل علي الرئيسي، منطقة جبل علي الحرة، ص.ب. :61445 دبي، الإمارات العربية المتحدة	الإمارات العربية المتحدة	LG ELECTRONICS GULF FZE
اليوسف للإلكترونيات ذ م م صندوق بريد رقم 25 دبي، الإمارات العربية المتحدة رقم الهاتف : 971-4-2957300+ رقم الفاكس : 971-4-2957988+	الإمارات العربية المتحدة	اليوسف للإلكترونيات
بيت الفيديو والمركز الإلكتروني ذ.م.م ص ب :- 4668، الدوحه قطر	قطر	شركة بيت الفيديو والمركز الإلكتروني ذ.م.م
شركة عمان الخليج ذ.م.م، صندوق بريد 421، الكود 118، مسقط، سلطنة عمان، 118، عناية: السيد راجيش رادكريشنان rajeshr@otegroup.com ،+96896372373 سجل تجاري رقم: 1/33586/3	عُمان	المشاريع العمانية الخليجية ش.م.م
شركة إلكترونيات البابطين ذ. م. م. البابطين ص.ب. 599، الصفاة 13006 الكويت	الكويت	شركة إلكترونيات البابطين ذ. م. م.
سالم محمد شماخ وشركاه ص.ب. 3372، الحديدة جمهورية اليمن	اليمن	سالم محمد شماخ وشركاه
مجموعة عبد الجبار الكوهجي ش م ب © صندوق بريد 74، المنامة مملكة البحرين	البحرين	مجموعة عبدالجبار الكوهجي ش.م.ب (م)
شركة يوسف محمد ناغي المتحدة ص.ب ٤٥٣ جدة ٢١٤١١ المملكة العربية السعودية	المملكة العربية السعودية	شركة محمد يوسف ناغي المتحدة
صندوق بريد 76688 الخبر 31952 المملكة العربية السعودي	المملكة العربية السعودية	الشركة المتحدة للإلكترونيات (إكسترا)

LG
Life's Good

MFL70370109

قبل طلب الخدمة

كثيراً ما يمكن تجنب الاتصال بالصيانة.
إذا كنت تشعر أن ثلاجتك لا تعمل على النحو الجيد، عليك فحص هذه الأسباب المحتملة أولاً:

المشكلة	الأسباب المحتملة
الثلاجة لا تعمل	• هل انفجر أحد المنصهرات أو توقف قاطع الدائرة؟ • هل تم إزالة كابل الطاقة أو تحريره من المنفذ الكهربي الحائطي؟
درجة حرارة مقصورة الثلاجة أو الفريزر دافئة للغاية	• زر التحكم غير مضبوط على الوضع المناسب. • تم وضع الجهاز بالقرب من الحائط أو مصادر الحرارة. • فتح الباب بشكل متكرر في طقس دافئ. • تم ترك الباب مفتوحاً لفترة طويلة. • تم الاحتفاظ بمقادير كبيرة من الأطعمة في الثلاجة.
ضوضاء غير عادية	• تم تركيب الثلاجة في مكان ضعيف أو غير مستقر، أو أن مسمار المستوى يحتاج للتعديل. • تم وضع عناصر غير ضرورية في الجانب الخلفي من الثلاجة.
وجود رائحة في الثلاجة	• لابد من تعبئة الأطعمة ذات الروائح القوية أو تغليفها بإحكام. • تحتاج الثلاجة للتنظيف من الداخل.
تكون رطوبة على أسطح الثلاجة	• لا تعمل على نحوٍ غريب أثناء فترات الرطوبة المرتفعة. • تم ترك الباب مفتوحاً جزئياً.

الأعراض	السبب والحل المحتمل
لا يوجد تبريد أو التجميد.	**هل هناك انقطاع في التيار الكهربائي؟** • تحقق من قوة الأجهزة الأخرى.
	تحقق من قوة الأجهزة الأخرى. • قم بتوصيل قابس الطاقة في المنفذ بشكل صحيح.
	ينفجر أحد المصهرات في منزلك أو قد يتعطل قاطع الدائرة. أو أن الجهاز متصل بمأخذ GFCI (قاطع دائرة الأعطال الأرضية) ، وتعطل قاطع دائرة المنفذ. • افحص الصندوق الكهربائي الرئيسي واستبدل المنصهر أو أعد ضبط قاطع الدائرة. لا تقم بزيادة سعة المصهر. إذا كانت المشكلة عبارة عن حمل زائد للدائرة ، فقم بتصحيحها بواسطة كهربائي مؤهل. • أعد ضبط قاطع الدائرة على GFCI. إذا استمرت المشكلة ، فاتصل بفني كهربائي.

تحذيرات هامة

لا تستخدم كابل تمديد

عند الإمكان، عليك توصيل الثلاجة بمنفذ كهربائي منفرد لمنع أي أجهزة أخرى أو أضواء منزلية من التسبب في حمل زائد من الممكن أن يتسبب في انقطاع الطاقة.

سهولة الوصول لقابس الطاقة

لابد أن تكون الثلاجة/الفريزر في موضع يسهل الوصول من خلاله لقابس الطاقة لفصله سريعاً عند حدوث أي ظرف طارئ.

استبدال كابل الطاقة

إذا تلف كابل الطاقة، يجب استبداله بمعرفة جهة التصنيع أو وكيل الخدمة أو الأشخاص المؤهلين لتجنب المخاطر.

عن التأريض (الأرضي)

في حالة الماس الكهربي، فالتأريض (الارضي) يخفف من خطر الصدمة الكهربائية بتوفير سلك هروب للتيار الكهربي.
لمنع الصدمة الكهربائية الممكنة، لابد من تأريض هذا الجهاز.
الاستخدام غير المناسب لقابس التأريض من الممكن أن ينتج عنه صدمة كهربائية. استشر فني مؤهل أو فرد خدمة ما إذا فهم تعليمات التعريض بشكل كامل، أم إذا كان لديه شك بشأن ما إذا كان تأريض الجهاز جيداً.

لا تقم بتعديل أو تمديد طول كابل الطاقة.

سيتسبب ذلك في حدوث صدمة كهربائية أو حريق.

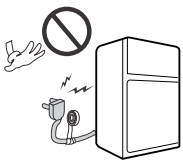

مكان جذب خطير للغاية

الثلاجة الفارغة من الممكن أن تكون مكان جذب خطير للأطفال. عليك إزالة المزالج، والحشايا، والأغطية، أو الباب بالكامل من جهازك الغير مستخدم، أو اتخاذ بعض الإجراءات الأخرى لجعله غير مؤذي.

لابد من تأريض (الأرضي) هذا الجهاز.

لا تنتظر! افعلها الآن!

لا تخزن مواد قابلة للاشتعال، أو متفجرات، أو مواد كيمائية في الثلاجة.

التخلص من الجهاز القديم

هذا الجهاز يحتوي على سوائل (تبريد، تشحيم)، وهو مصنوع من أجزاء ومواد يمكن إعادة استخدامها و/أو إعادة تدويرها.
يجب إرسال جميع المواد الهامة لمركز تجميع مواد النفايات ويمكن إعادة استخدامها بعد (إعادة تدويرها). للإعادة، يرجى الاتصال بالوكالة المحلية.

لا يجب على الأطفال أن يقوموا بتنظيف الجهازأوصيانته من دون إشراف."

"هذا الجهاز غير معد للاستخدام من قبل الأشخاص (بما يشمل الأطفال) ذوي الإعاقة البدنية، أو الحسية، أو الذهنية، أو الذين يفتقرون للخبرة والمعرفة، إلا إذا كان ذلك تحت إشراف أو تعليمات تخص استخدام الجهاز من قبل شخص مسئول عن سلامتهم.
يجب الإشراف على الأطفال للتأكد من عدم لعبهم بالجهاز."

أنبوب مضاد التكاثف

قد يصبح الجدار الخارجي للثلاجة دافئاً أحياناً، وبخاصة بعد التركيب مباشرة.
لا تندهش. فذلك بسبب أنبوب مضاد التكثف، والذي يضخ المبرد الحار لمنع "التعرق" على الجدار الخارجي.

انقطاع الطاقة

يتم تصحيح معظم أعطال الطاقة في حوالي ساعة أو اثنان، ولن تؤثر على درجة حرارة ثلاجتك. ومع ذلك، عليك تخفيض عدد فتحات الباب أثناء انقطاع الطاقة. وعند انقطاع الطاقة لفترات أطول، ضع قطعة من الثلج الجاف أعلى عبواتك المجمدة.

إذا انتقلت

عليك إزالة أو ربط جميع العناصر الحرة داخل الثلاجة بإحكام.
لتجنب تلف مسمار(مسامير) المستوى، عليك تدويرها حتى القاعدة.

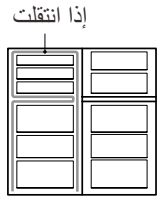

⚠ احذر

خطر الصدمة الكهربائية

قبل استبدال مصباح الإضاءة المحترق، عليك إما نزع قابس الثلاجة أو إيقاف الطاقة من قاطع الدائرة أو صندوق الصمامات.
مُلاحظة: تحريك زر التحكم إلى وضع الإيقاف لا يزيل الطاقة من دائرة الضوء.

التنظيف

من المستحيل أن تظل ثلاجتك نظيفة لمنع الروائح الغير مرغوب فيها. يجب مسح الطعام المسكوب في الحال، حيث أنه من الممكن أن يتحمض ويلوث الأسطح البلاستيكية إذا تم تركه.

لا تستخدم ألواح تنظيف معدنية، أو فرش، أو أدوات تنظيف خشنة، أو محاليل قلوية قوية على أي سطح.

قبل التنظيف، تذكر أن الأجسام الرطبة قد تلتصق بالأسطح الباردة للغاية. لا تلمس الأسطح المجمدة بأيدي مبللة أو رطبة.

الخارج - استخدم محلول فاتر من الصابون المعتدل أو محلول غسيل الأطباق لتنظيف ثلاجتك من الخارج. امسحها بقطعة قماش نظيفة، ورطبة، ثم عليك تجفيفها.

الداخل - ينصح بالتنظيف المنتظم للثلاجة من الداخل والأجزاء الداخلية. استخدم محلول فاتر من الصابون المعتدل أو محلول غسيل الأطباق لتنظيف ثلاجتك من الداخل. امسحها بقطعة قماش نظيفة ورطبة، ثم عليك تجفيفها.

عليك غسل أرفف المقصورة، وحوامل الباب، -الأجزاء الداخلية وصواني التخزين، والأقفال المغناطيسية للباب، .. إلخ. استخدم محلول فاتر من الصابون المعتدل أو محلول غسيل الأطباق لتنظيف ثلاجتك من الداخل. امسحها بقطعة قماش نظيفة ورطبة، ثم عليك تجفيفها.

⚠ تحذير

عليك دائماً إزالة قابس الطاقة من المنفذ الحائطي قبل التنظيف.
وعليك مسح الرطوبة الزائدة بقطعة اسفنج أو قطعة قماش لمنع المياه أو أي سائل آخر من التسرب إلى أي جزء كهربي والتسبب في صدمة كهربائية. لا تستخدم سوائل التنظيف القابلة للاشتعال أو السامة.

- ·تنبيهات للتنظيف – لا تستخدم: مواد الأسطح النشطة: مثل شمع السيارة، أو مضادات التآكل، وجميع أنواع الزيوت، أو البنزين، أو الأحماض، أو الشمع.
- ·يمكن استخدام المنظفات الفاترة، أو محاليل غسيل الأطباق، أو الماء بالصابون.
- من الممكن أن يؤدي الإهمال في الاستخدام إلى تغير اللون.

اقتراحات لتخزين الطعام

تخزين الأطعمة

- عليك تخزين الطعام الطازج في مقصورة الثلاجة. كما أن كيفية تجميد وذوبان الطعام هو عامل هام في الحفاظ على نضارته ونكهته.
- لا تخزن الطعام الذي يفسد بسهولة في درجات حرارة منخفضة مثل البطيخ و الاناناس و الموز.
- اترك الطعام الساخن ليبرد قبل تخزينه. فوضع الطعام الساخن في الثلاجة من الممكن أن يفسد الأطعمة الأخرى، ويؤدي إلى فواتير كهرباء أعلى.
- عند تخزين الطعام، عليك تغطيته بغطاء من الفينيل أو تخزينه في حاوية ذات غطاء. سيمنع ذلك من تبخر الرطوبة و سيساعد الطعام على الحفاظ على نكهته وعناصره الغذائية.
- لا تحجب فتحاتا لتهوية بالطعام. فالتوزيع السلس للهواء البارد يحافظ على درجة حرارة الثلاجة متساوية.
- لا تفتح الباب على نحو متكرر. ففتح الباب يؤدي إلى إدخال الهواءا لدافئ إلى الثلاجة، ويتسبب في ارتفاع درجة الحرارة.
- في حالة حدوث انقطاع التيارا لكهربائي،ا تصل بشركة الكهرباء واسأل عن مدة الانقطاع.
  - يجب أن تتجنب فتح الأبواب أثناء فصل الطاقة عن الجهاز.
  - عندما يعود مصدر الطاقة إلى وضعها الطبيعي، تحقق من حالة الطعام.

مقصورة الفريزر

- ·لاتخزنالزجاجاتفيمقصورةالفريزر–فقدتنكسرعندتجمدها.
- ·لاتُجمدالطعامالذيقدتمإذابتهمنقبل.سيتسببذلكفيفقدانالنكهةوالقيمةالغذائية.
- ·عندتخزينطعاممجمدمثلالأيسكريملفترةطويلة،ضعهعلىرفالفريزر،وليسفيحاملالباب.
- سلة باب الثلاجة ،العلامة ✻✻ هي حجرة ب 12 درجة مئوية ، و هي مناسبة للتخزين على المدى القصير للمواد الغذائية المجمدة (اختياري).

مقصورة الفريزر

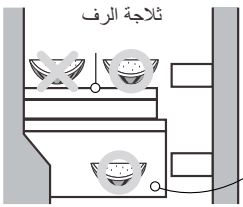

- تجنب وضع الطعام الرطب في العمق الداخلي لأرفف الثلاجة، حيث أنها من الممكن أن تتجمد بسبب اتصالها بالهواء البارد. لتجنب ذلك، من الأفضل تخزين الطعام في حاوية مُغلقة.

- من المرغوب فيه تخزين الطعام الرطب (بخاصة الخضراوات والفواكه) في مقصورة تخزين الخضراوات.
  وإذا كان من الضروري تخزينها على رف الثلاجة، ضعها بالقرب من الباب وبعيداً عن الجدار الخلفي للثلاجة لتجنب تجمدها بالاتصال المباشر بالهواء البارد.

- عليك دائماً تنظيف الطعام قبل وضعه في الثلاجة. يجب غسل الخضراوات والفواكه و مسحها، وبالنسبة للطعام المعبأ فينبغي أن يتم مسحه لتنظيفه، وذلك لمنع تلف الأطعمة المجاورة.

- عند تخزين البيض في حامل تخزينه، تأكد من أنه طازج، وعليك دائم أتخزينه في الموضع الأيمن العلوي، مما يحافظ عليه طازجا ًلفترة أطول.

في حال وجود حجيرات تبريد في الجهاز، لاتخزن الخضروات والفواكه التي تحتوي على محتوى ذي رطوبة عالية في حجيرة التبريد لأنها قد تتجمد بسبب إنخفاض درجة الحرارة.

الوظائف الذكية (اختياري)

تتوفر هذه الميزة فقط في الطرز التي تحمل العلامة أو .
يمكنك الاستعانة بهذه الميزة لتشخيص المشكلات التي تواجهك أثناء استخدام الجهاز وحلها.

لتشخيص المسموع" بغرض تشخيص المشكلات

1. **افتح كافة أبواب البرّاد. يمكن إدخال SDS حتى في وضع الاختبار وحالة الخطأ.**

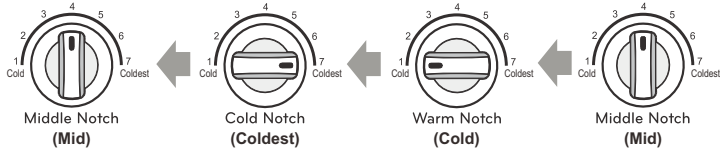

2. **أدِر المفتاح إلى الإعداد متوسط.**
3. **أدِر المقبض إلى الإعداد دافئ وأبقِه على هذا الإعداد**
4. **أدِر المقبض إلى الإعداد بارد في غضون ٣ ثوانٍ وأبقِه على هذا الإعداد**
5. **أدِر المقبض إلى الإعداد متوسط في غضون 3 ثوانٍ وأبقِه على هذا الإعداد**
6. **ضع الهاتف بالقرب من فتحة مكبّر الصوت عند مفصلة الباب في الجهة اليمنى العليا**

احرص على أن يكون ميكروفون الهاتف موجّهًا نحو فتحة مكبّر الصوت.

لا تُبعد الهاتف أثناء نقل البيانات.

أثناء نقل البيانات لوظيفة التشخيص الذكي، احمل الهاتف وأبقِه على بُعد 10 سم من فتحة مكبّر الصوت وتجنب حدوث أي ضجة في الخلفية.

⚠ إنذار

صوت الإرسال قد يكون مزعج. لا تقم بإبعاد التليفون إلى أن يتوقف لالصوت و ذلك من اجل كشف جيد للأعطال.

7. **ستعلم بإدخال SDS من الصوت الطنان الذي يصدر 4 مرات.**
(يبلغ تردد الصوت الطنان لـ SDS 2000 هرتز، يتوقف الصوت لـ 0.2 ثانية ثم يرنّ 4 مرات كل مرة لمدة 0.2 ثانية)
8. **بعد إدخال SDS, سيصدر الصوت الطنان.**
9. بعد إتمام نقل البيانات، سيظهر التشخيص على شاشة التطبيق.

عند انتهاء نقل البيانات، سيتوقف البرّاد تلقائيًا عن التشغيل ويعود إلى العمل بعد ثوانٍ قليلة.

الوظائف الذكية (اختياري)

تطبيق LG ThinQ

تتوفر هذه الميزة فقط في الطرز التي تحمل العلامة أو .

يسمح تطبيق **LG ThinQ** لك بالتواصل مع الجهاز باستخدام هاتف ذكي.

مزايا تطبيق LG ThinQ

تواصل مع الجهاز من هاتف ذكي باستخدام الميزات الذكية المريحة.

التشخيص الذكي

- تساعدك ميزة التشخيص الذكي على تشخيص أي مشكلة تواجهك أثناء استخدام الجهاز.

ملاحظة

- يخضع التطبيق للتغيير لأغراض تحسين الجهاز بدون إشعار المستخدمين.
- قد تتغيير الميزات حسب الطراز.

تثبيت تطبيق LG ThinQ

ابحث عن تطبيق **LG ThinQ** على Apple App Store & Google Play Store من على هاتف ذكي.

- اتبع التعليمات لتنزيل التطبيق وتثبيته.
- شغّل تطبيق **LG ThinQ** واتبع التعليمات في التطبيق لتسجيل الجهاز.

التشخيص الذكي

تتوفر هذه الميزة فقط في الطرز التي تحمل العلامة أو .

يمكنك الاستعانة بهذه الميزة لتشخيص المشكلات التي تواجهك أثناء استخدام الجهاز وحلها.

ملاحظة

- قد لا تعمل هذه الخدمة وذلك يعود لعوامل خارجية على سبيل المثال لا الحصر، عدم توفر شبكة Wi-Fi أو انقطاع الاتصال بشبكة Wi-Fi أو السياسة المحلية لمتجر التطبيقات أو عدم توفر التطبيق وهذه أسباب لا تدم عن تقصير من LGE.
- قد تتعرض هذه الميزة لتغيرات دون سابق إنذار وقد يختلف شكلها وفقًا للمنطقة التي تسكن فيها.

صانع مكعبات الثلج (اختياري)

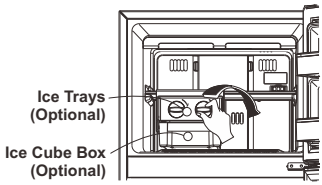

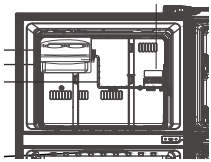

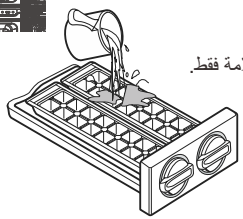

صنع الثلج

- لصنع مكعبات الثلج، املأ درج الثلج بالماء وأدخله إلى موقعه.
- لإزالة مكعبات الثلج، أمسك الدرج من أسفل واسحبه برفق. ثم ستنزلق مكعبات الثلج في صندوق مكعبات الثلج.
- يمكنك سحب صينية صنع الثلج القابل للتدوير لجعل مساحة الفريزر أكبر.
- لا بد من إزالة صينية صنع الثلج وصندوق المكعبات الثلجية أولا ثم اسحب الإطار الى اليمين.
- لا تستخدم أي شيء بخلاف الماء. أملأ الماء حتى خط العلامة فقط.

تبريد الباب+ (اختياري)

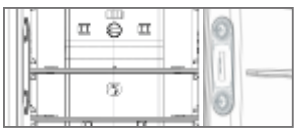

- إذا دخل هواء أو مواد غريبة إلى فتحة الهواء البارد أثناء التنظيف، سوف يقل مستوى الكفاءة.

إنذار الباب (اختياري)



عندما يكون باب الثلاجة مفتوحاً لمدة ١ دقيقة، سوف يصدر صوت إنذار.

استبدال المصباح

ملاحظة يأتي هٰذا المنتج مزودًا بمصباح بتقنية LED لا يمكن استبداله من قبل المستخدم.
يرجى الاتصال بمركز الخدمة المعتمد لاستبدال المصباح.

وقت العطلات

أثناء العطلات التي لا تستغرق وقتاً طويلاً، ربما تجد أن من الأفضل عدم إيقاف تشغيل الثلاجة. ضع الأغراض القابلة للتجمد في المُجمد للحفاظ على صلاحيتها لمدة أطول.

إذا كنت تنوي إيقاف تشغيل الجهاز لفترة طويلة، يُراعى إخراج جميع المواد الغذائية منه، وفصل سلك الطاقة. قم بتنظيف الجهاز من الداخل، واترك الأبواب مفتوحة قليلاً لمنع تكوّن العفن في الجهاز.

درج الخضروات (اختياري)

وحدة الطعام الطازج الهش

تحافظ على الخضروات طازجة و ذلك من خلال إمساكها للرطوبة و منع الخضروات من التعفن.

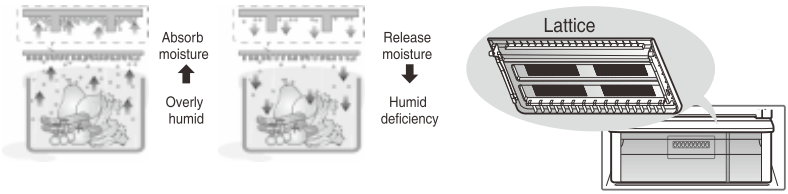

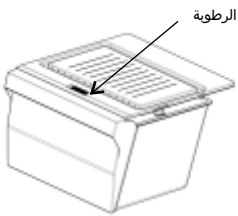

جهاز التحكم في الرطوبة

• جهاز التحكم في الرطوبة مُصمم للتحكم في مستوى الرطوبة داخل صندوق الخضروات

ازابة التجمد

• .ازابة الـتـجمد يـحـدث آلـيا ·
• المياه المذابة تسير للأسفل إلى مسار التبخير الذي يوجد في الجانب الخلفي السفلي للثلاجة و تتبخر أليا.

مزيل الرائحة (اختياري)

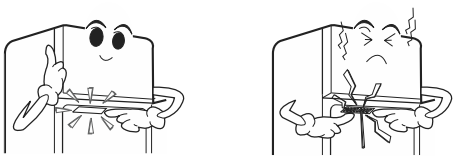

• الرائحة الغير طيبة للطعام في حجيرة الأطعمة الطازجة يتم إزالتها بدون أي ضرر على المستخدم أو على الطعام.

كيفية الاستخدام

• بما أن مزيل الروائح يوجد في مدخل الهواء البارد لتدوير الهواء في حجيرة الطعام الطازج، فانه لا يوجد حاجة لأي إدارة ·
• لا توخز مدخل الهواء البارد بأداة حادة لان مزيل الروائح قد يتلف ·
• عند تخزين الطعام ذات الرائحة النفاذة، غلفه أو خزنه في وعاء بغطاء لان الرائحة قد تتسرب إلى الأطعمة الأخرى.

كيفية الاستخدام

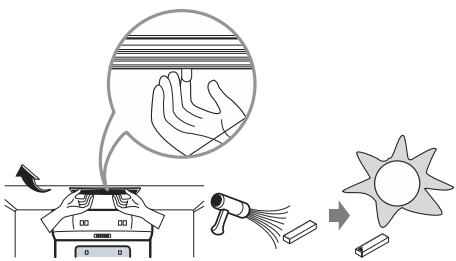

• بالاستعانة ببعض الأطوال و رائحة نفاذة، ففي هذه الحالة يمكن · إحياء و إعادة استخدام مزيل الرائحة.
• افصل مزيل الرائحة في سقف حجيرة الثلاجة، و باستخدام مجفف الشعر قم بإزالة الرطوبة أو الرائحة النتنة و تأكسدها تحت ضوء الشمس لتحلل الرائحة النتنة بواسطة الأشعة فوق البنفسجية.

التشغيل

البدء

عند تثبيت البرّاد للمرة الأولى، اتركه قيد التشغيل مدة ٦ ساعات لتستقر درجة الحرارة قبل وضع الطعام الطازج أو المجمّد فيه.
إذا تم إيقاف التشغيل، انتظر ٥ دقائق قبل إعادة التشغيل.

قبل ضبط درجة الحرارة

- درجة حرارة الثلاجة تبقي ثابتة بغض النظر عن التغيرات في درجة حرارة الغرفة. يوصى بأن، بمجرد ضبط، إعدادات درجة. الحرارة (التحكم الخاص بحجيرة الثلاجة و الفريزر) ألا يتم تغييرها إلا إذا كان ذلك ضروريا.
- هذه الثلاجة بها زر واحد للتحكم في درجة حرارة حجيرة الثلاجة و قرص واحد للتحكم في درجة حرارة حجيرة الفريزر.
- الإن الضبط الافتراضي للتحكم بدرجة حرارة البرّاد هو "4"
- إن الضبط الافتراضي للتحكم بدرجة حرارة الثلاجة هو "3"
- هذه الثلاجة بها حساس لدرجة الحرارة في حجيرة الثلاجة. سوف يشغل و يطفئ المكبس أليا حسب الحاجة.

الاختبار الذاتي

- تحتوي ثلاجتك على قدرة التشخيص الذاتي. فإذا حدث عطل بها في مناطق محددة، سيظهر كود الخطأ لمساعدة فني الإصلاح. عند عرض كود الخطأ، لن تعمل وظائف التحكم والعرض الأخرى.
- إذا تم عرض كود الخطأ، اتصل بمركز الخدمة. لا تفصل كابل الطاقة من منفذ الطاقة.

تحكم حجيرة الفريزر

- .كلما زاد عدد إعدادات التحكم، كلما أصبحت درجة حرارة حجيرة الفريزر اقل ·
- بما أن درجة حرارة حجيرة الثلاجة و الفريزر يتم التحكم بهما من خلال كمية ثابتة من الهواء المبرد، فان حجيرة الثلاجة سوف تكون · اسخن إذا صارت حجيرة الفريزر ابرد.
- إذا كانت حجيرة الفريزر غير باردة بما يكفي في فصل الشتاء، قم بضبط التحكم الخاص بالفريزر ليكون مرتفع (3/•/••).
- لضبط درجة الحرارة المطلوبة في اختبار التبريد والطاقة والتخزين، قد يلزم ضبط مفتاح التحكم بدرجة حرارة الثلاجة على
- أو••.

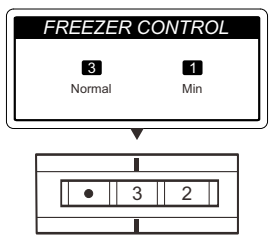

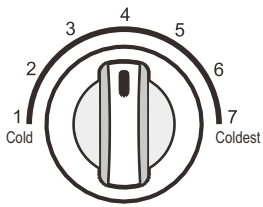

تحكم حجيرة الثلاجة

لدرجات حرارة أكثر انخفاضًا، اضبط مفتاح التحكم على الحد الأقصى، ولدرجات حرارة أكثر ارتفاعًا، اضبط مفتاح التحكم على الحد الأدنى

الأجزاء الداخلية

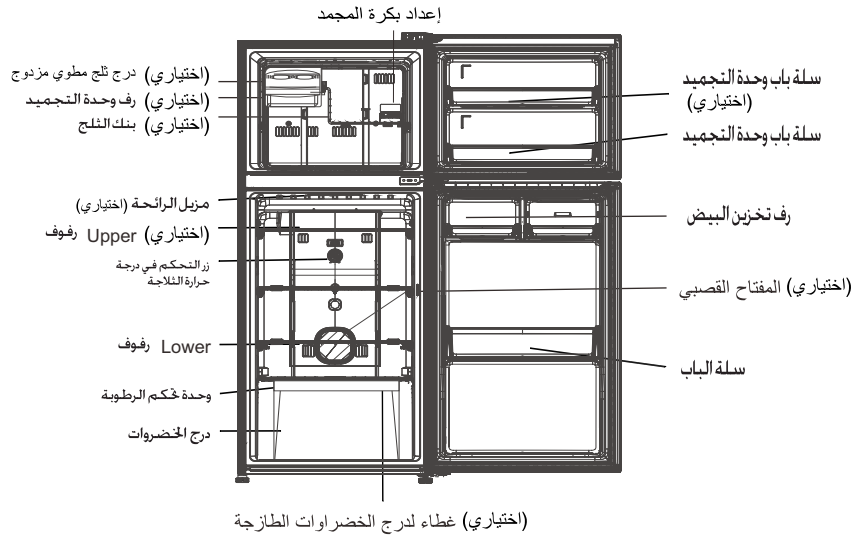

ملاحظة

- هذا الدليل يغطي انواع مختلفة متعددة. الثلاجة التي قمت بشرائها قد يكون بها بعض أو كل الخصائص الموضحة في الاعلى.
- للحفاظ على مكان الاجزاء الداخلية مثل السلال، الادراج و الارفف المتوفرة من قبل المصنع هي الاكثر كفاءة في الاستخدام من اجل توفير الطاقة.
- نتيجة للتطور المستمر، مواصفات الانواع قد تتعرض للتغيير.

اقتراحات من اجل توفير الطاقة

- رجاءا لا تترك باب مفتوح لفترة طويلة، أغلق الباب في اقل وقت.
- لا ينصح بوضع الكثير من الطعام بحيث يجب ترك فراغ كاف ليسمح بالهواء البارد الدوران بحرية.
- لا تضبط درجة حرارة الثلاجة لتكون اقل من الاحتياج. لا تضع الطعام بالقرب من حساس درجة الحرارة.
- اسمح للطعام الساخن أن يبرد قبل تخزينه. وضع الطعام الساخن في الثلاجة- الفريزر قد يفسد الطعام الآخر، و يتسبب في فواتير كهرباء باهظة.
- لا تسد فتحات التهوية بالطعام. الدوران السلس للهواء البارد يبقي درجة حرارة الثلاجة- الفريزر متكافئة.
- لا تفتح باب الثلاجة بشكل متكرر. فتح باب الثلاجة يجعل الهواء الساخن يدخل الى الثلاجة- الفريزر، و يسبب ارتفاع درجة الحرارة.
- يضمن نظام إزالة الثلج تلقائياً في الجهاز خلو حجيرة المُجمد من تراكم الثلج في ظروف التشغيل العادية.
- في حال تلف الجوان، قد يقل مستوى الكفاءة بسبب خروج الهواء البارد.

الأجزاء الداخلية

- وحدة المُجمد كاملة ٢ نجمة (**)

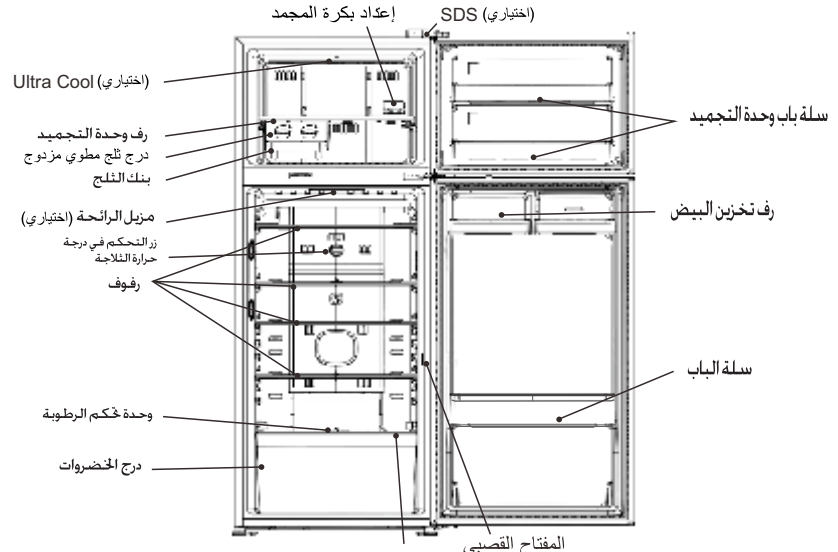

ملاحظة

- هذا الدليل يغطي انواع مختلفة متعددة. الثلاجة التي قمت بشرائها قد يكون بها بعض أو كل الخصائص الموضحة في الاعلى.
- للحفاظ على مكان الاجزاء الداخلية مثل السلال، الادراج و الارفف المتوفرة من قبل المصنع هي الاكثر كفاءة في الاستخدام من اجل توفير الطاقة.
- نتيجة للتطور المستمر، مواصفات الانواع قد تتعرض للتغيير.

اقتراحات من اجل توفير الطاقة

- رجاءا لا تترك باب مفتوح لفترة طويلة، أغلق الباب في اقل وقت.
- لا ينصح بوضع الكثير من الطعام بحيث يجب ترك فراغ كاف ليسمح بالهواء البارد الدوران بحرية.
- لا تضبط درجة حرارة الثلاجة لتكون اقل من الاحتياج. لا تضع الطعام بالقرب من حساس درجة الحرارة.
- اسمح للطعام الساخن أن يبرد قبل تخزينه. وضع الطعام الساخن في الثلاجة- الفريزر قد يفسد الطعام الآخر، و يتسبب في فواتير كهرباء باهظة.
- لا تسد فتحات التهوية بالطعام. الدوران السلس للهواء البارد يبقي درجة حرارة الثلاجة- الفريزر متكافئة.
- لا تفتح باب الثلاجة بشكل متكرر. فتح باب الثلاجة يجعل الهواء الساخن يدخل الى الثلاجة- الفريزر، و يسبب ارتفاع درجة الحرارة.
- يضمن نظام إزالة الثلج تلقائياً في الجهاز خلو حجيرة المُجمد من تراكم الثلج في ظروف التشغيل العادية.
- في حال تلف الجوان، قد يقل مستوى الكفاءة بسبب خروج الهواء البارد.

التركيب

1. لا تقم بتركيب هذا الجهاز في درجة حرارة اقل من ٥ درجات. هذا قد يسبب تدهور الثلاجة.

2. اختر مكان جيد.
ضع ثلاجتك بحيث تكون سهلة الاستخدام.

3. للتأكد من الدوران الجيد للهواء حول الثلاجة – الفريزر، رجاءا حافظ على فراغ كاف على كلا الجانبين و أيضا من الأعلى و حافظ على ٢ بوصة (٥سم) على الأقل من الحائط الخلفي.

4. لتفادي الاهتزازات، يجب أن تكون الوحدة مستوية.
إذا لزم الأمر، اضبط مسامير ضبط المستوى بما يتكافأ مع تفاوت الأرض.
المقدمة يجب أن تكون أعلى قليلا من الخلف لأفضل أداء و ليساعد في غلق الباب.
مسامير ضبط المستوى يمكن أن يتم تغييرها بسهولة من خلال إمالة الخزانة قليلا.
غير مسامير ضبط المستوى في اتجاه عقارب الساعة (↻) لرفع الوحدة، و عكس عقارب الساعة (↺) .لخفضها

التالي

1. قم بتنظيف ثلاجتك بالكامل و امسح كل التراب المتراكم أثناء الشحن.

2. ركب الملحقات مثل صندوق مكعبات الثلج، الخ.، في أماكنهم المناسبة. يتم تغليفهم معا لمنع التلف المحتمل أثناء الشحن.

3. .قم بتوصيل كابل مصدر التيار (أو قابس) إلى المخرج لا تشركه مع الأجهزة الأخرى على نفس المخرج.

4. قبل وضع الطعام، اترك البرّاد قيد التشغيل لمدة ٦ ساعات.
تأكد من أن سريان الهواء البارد في حجرة الفريزر للتأكد من التبريد الجيد.
ثلاجتك الآن جاهزة للاستخدام.

5. بعد تركيب الجهاز، قم بتوصيل قابس الطاقة بمأخذ التوصيل. قبل نقل الجهاز وإخراجه، افصل القابس من مأخذ التوصيل.

الأبعاد والخلوصات

قد تؤدي المسافة الصغيرة جداً بين الجهاز والعناصر المجاورة له إلى تدني قدرته على التجميد وزيادة تكاليف الكهرباء. يُراعى أن تكون المسافة بين الجهاز وأي حائط مجاور له أكثر من ٥٠ مم عند تركيب الجهاز.

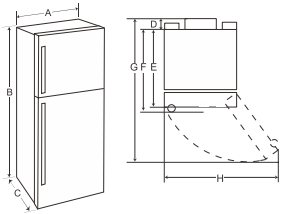

صورة لغرض التمثيل فقط

-	مقبض عمودي	مقبض جانبي
A	585	585
B	1475	1475
C	703	669
D	55	55
E	614	614
F	648	614
G	1200	1200
H	991	991

درجة الحرارة المحيطة

تم تصميم الجهاز للعمل ضمن نطاق محدود من درجات الحرارة المحيطة، وذلك حسب المنطقة المناخية. تجنب استخدام الجهاز في درجة حرارة تتجاوز هذا النطاق.

قد تتأثر درجات الحرارة الداخلية بسبب موقع الجهاز، ودرجة الحرارة المحيطة، ووتيرة فتح الباب، وما إلى ذلك.

يمكنك العثور على فئة المناخ في ملصق التصنيف.

فئة المناخ	نطاق درجة الحرارة المحيطة "درجة مئوية"
(درجة الحرارة الممتدة) SN	+10 - +32
(درجة الحرارة) N	+16 - +32
(شبه استوائي) ST	+16 - +38
(استوائي) T	+16 - +43/+10 - +43*

***أستراليا، الهند، كينيا**

ملاحظة

الأجهزة التي تندرج ضمن فئة "درجة الحرارة الممتدة" (SN)إلى درجة الحرارة "الاستوائية" (T)

مُصممة للاستخدام في درجة حرارة محيطة تتراوح بين ١٠ و ٤٣ درجة مئوية.

معلومات هامة للسلامة

احمل الثلاجة من خلال عمود المقبض المتوفر أسفل أمام و أعلى خلف الثلاجة.

و إلا قد تنزلق يديك لتسبب الإصابة.

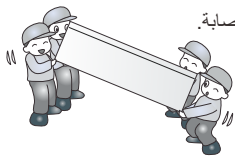

لا تدخل يدك في أسفل الثلاجة.

اللوح الحديدي الخاص بالقاعدة قد يسبب إصابة.



افرغ الداخل بالكامل قبل خلع الرف الحاوي من الباب.

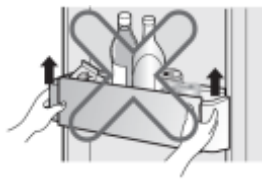

فتح و غلق باب الثلاجة قد يسبب إصابة للشخص الموجود حولها، رجاءا كن حذر.

فتح آو غلق الباب قد يسبب تعلق القدم آو اليد في شق الباب آو قد تصاب يد الطفل من الأركان.

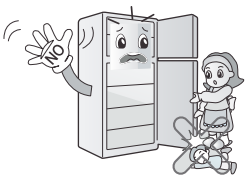

لا تستند على الأبواب، المفصلات قد تفصل نفسها، مسببة تسرب الهواء و تدهور الأداء.



الأجزاء المتحركة مثل الرف، السلة، الخ يجب أن يتم التعامل معها بعناية.



تأكد من أن سريان الهواء البارد في حجرة الفريزر للتأكد من التبريد الجيد.
ثلاجتك الآن جاهزة للاستخدام.

⚠ تحذير

- درجة الحرارة ;رجاءا لا تستخدم غسالة الأواني لتنظيف الأدراج السفلى المرتفعة قد تسبب تلف للسلال مما يجعلها غير صالحة للاستخدام.
- كُن حذرًا عند تثبيت الرفّ الزجاجي وفكّه.
- إذا كان الجهاز مُجهزاً بقفل (بعض البلدان فقط)، احتفظ بالمفتاح بعيداً عن متناول الأطفال.

هذه الثلاجة تم تصنيعها بعناية كبيرة، و استخدمت الأحدث في التكنولوجيا.
نحن نثق بأنك سوف تكون راضي بالكامل بأدائها و اعتماديتها.
قبل أن تشغل الثلاجة الخاصة بك، رجاءا قم بقراءة الكتيب بعناية.
انه يقدم تعليمات دقيقة للتركيب، التشغيل و الصيانة, كما يوفر أيضا بعض التلميحات المفيدة.

معلومات هامة للسلامة

٢. عند استخدام الثلاجة

لا تقم بإدخال يدك أو قضيب معدني في مخرج الهواء البارد، الغطاء، أو أسفل الثلاجة، الشبكة الصامدة للحرارة (فتحة الانبعاثات) في الخلف.

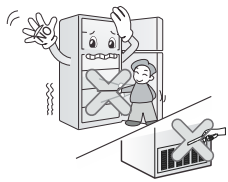

قد تسبب الصدمة الكهربية أو الإصابة.

ماذا تفعل بثلاجتك القديمة،



ثلاجتك تحتوي سائل(مبرد، مشحم)مصنوع من مواد إعادة تدوير، كل هذه المواد يجب أن يتم إرسالها إلى موقع إعادة تدوير النفايات التي تم التخلص منها حيث يمكن أن يتم استعمالها مرة أخرى بعد عملية إعادة تدوير محددة.

في حالة الرعد و البرق أو إذا لم يتم الاستخدام لفترة طوية، قم بنزع مقبس الكهرباء.



هناك خطر صدمة كهربية أو حريق.

ضع كل المكونات في أماكنها الصحيحة قبل توصيل الكهرباء.



لا تترك أبدا شموع مشتعلة فوق الثلاجة، خطر كبير قد يتسبب في الحريق أو تلف المنتج

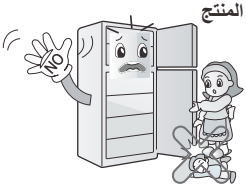

تحذير ⚠

مخالفة هذه التوجيهات قد يؤدي إلى الإصابة أو تدمير الصحة، المنزل أو الأثاث.
كن على حذر دائما، رجاءا.

لا تلمس الطعام أو الأواني داخل الفريزر بأيدي مبللة.

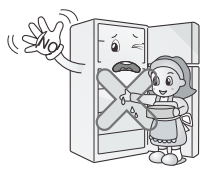

قد تسبب عضة الصقيع.

انتظر خمس دقائق أو أكثر عند إعادة توصيل المقبس.



قد تؤدي إلى فشل تشغيل الفريزر.

لا تضع الزجاجة في الفريزر.



تجنب وضع الحاويات أو القناني أو العلب الزجاجية (خاصة تلك التي تحتوي على مشروبات غازية) داخل المُجمد أو على الرفوف أو في صندوق الثلج الذي سيتعرض لدرجات حرارة دون التجمد.

اسحب قابس الكهرباء ليس عن طريق إمساك الكابل. لكن من نهاية القابس.



قد تسبب صدمة كهربية أو قصر في الدائرة يؤدي إلى الحريق.

٢. عند استخدام الثلاجة

لا تضع فازات الزهور، الاكواب، مستحضرات التجميل، الادوية أو أي وعاء به ماء على الثلاجة.



قد يسبب حريق، صدمة كهربية أو الاصابة من السقوط.

قم باستخدام الثلاجة المغمورة فقط بعد فحصها.

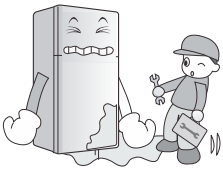

قد تسبب صعق كهربي أو حريق.

اذا حدث ارتشاح للغاز، لا تلمس الثلاجة أو المخرج و قم بتهوية الغرفة مباشرة.

في حال وجود تسريب غاز (أيسوبوتان، وبروبان، وغاز طبيعي، وما إلى ذلك)، لا تلمس الجهاز أو مقبس الطاقة وقم بتهوية المنطقة فورًا. يستخدم هذا الجهاز غاز تبريد من نوع (isobutane، R600a) على الرغم من استخدامه لكمية صغيرة من الغاز، فهو ما زال غاز قابل للاحتراق.
تسرب الغاز أثناء نقل الجهاز أو تركيبه أو تشغيله يمكن أن يتسبب بحريق أو انفجار أو إصابة في حال وجود شرر.

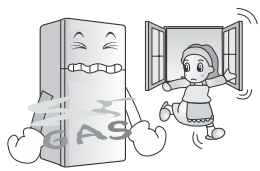

لا تقم برش الماء خارج او داخل الثلاجة أو لا تنظفها باستخدام البنزين او التينر

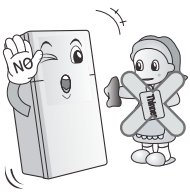

تلف عزل الاجزاء الكهربية قد يسبب صدمة كهربية أو حريق.

عند اكتشاف أي رائحة غريبة أو دخان من الثلاجة، قم بفصل مقبس الكهرباء في الحال و اتصل بمركز الخدمة.

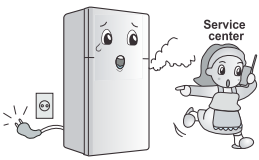

قد يسبب ذلك حريق

يجب أن يتم استخدام المخرج المخصص لذلك.

استخدام عدة أجهزة على مخرج واحد قد يسبب الحريق.

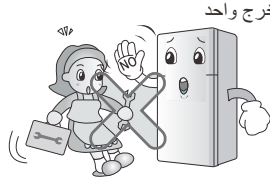

لا تستخدم الثلاجة لأغراض غير منزلية (تخزين الأدوية أو أدوات الاختبار، استخدامها في الشحن، الخ).

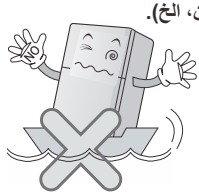

قد تسبب خطورة غير متوقعة مثل الحريق، الصدمة الكهربية، تلف المواد المخزنة أو تفاعلات كيميائية.

عند القيام بترتيب الثلاجة، أزل مواد التغليف مثل الحشية من الباب.



قد تتسبب في محاصرة الأطفال.

تركب الثلاجة فوق ارض صلبة و مستوية.

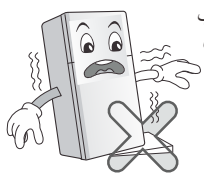

تركيبها في مكان غير مستقر قد يسبب الإصابة من سقوطها عند فتح أو غلق الباب.

٢. عند استخدام الثلاجة

لا تقم بوضع أجسام ثقيلة أو أجسام خطرة (إناء به سائل) على الثلاجة.



قد تسقط و تسبب الإصابة، الحريق أو الصدمة الكهربية عند فتح أو غلق الباب.

لا تعلق بالباب أو ارفف الباب أو او باب الفريزر ويغلق تلقائيا أو , الذي يفتح بالدفع من الاتجاهين غرفة التبريد.



قد يؤدي الى توقف الثلاجة أو تلف اليد. خاصة، لا تسمح للاطفال بعمل ما سبق.

لا تركب الثلاجة في مكان مبتل أو تضعها في مكان حيث ترش المياه أو الأمطار.



إتلاف عزل الأجزاء الكهربية قد يؤدي إلى التسرب الكهربي.

لا تستخدم أو تخزن مواد قابلة للاشتعال مثل الاثير، البنزين، كحول، الادوية، الغاز النفطي المسال، بخاخ العطر او مستحضرات التجميل بالقرب من أو بداخل الثلاجة.

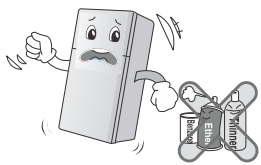

قد تؤدي الى الانفجار أو الحريق.

لا تستخدم المجفف لتجفيف الداخل، و لا تشعل شمعة لإزالة الرائحة



قد يؤدي إلى الانفجار أو الحريق.

لا تستخدم أو تخزن مواد قابلة للاشتعال مثل الاثير، البنزين، كحول، الادوية، الغاز النفطي المسال، بخاخ العطر او مستحضرات التجميل بالقرب من أو بداخل الثلاجة.

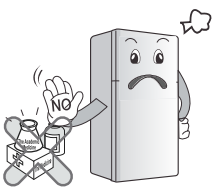

قد تؤدي الى الانفجار أو الحريق.

البخاخات القابلة للاشتعال بالقرب لا تستخدم من الثلاجة.



قد تسبب حريق.

قم بالتركيب في الاماكن البعيدة عن اللهب مثل مكان تسرب الغاز القابل للاشتعال.

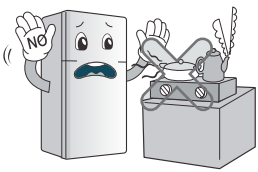

قد يسبب حريق

معلومات هامة للسلامة

١. عند توصيل مصدر التيار

يجب أن يتم استخدام المخرج المخصص لذلك.

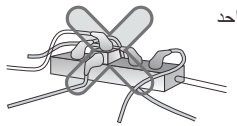

استخدام عدة أجهزة على مخرج واحد قد يسبب الحريق.

لا تسمح بان يكون مقبس الكهرباء مواجه للأعلى أو أن يكون مضغوط في ظهر الثلاجة.

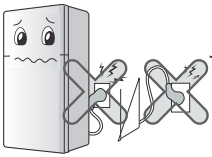

قد يؤدي ذلك إلى تلف المقبس، مما قد يسبب حريق أو صدمة كهربية.

لا تسمح بانثناء سلك التيار أو ضغطه من قبل الأجسام الثقيلة.

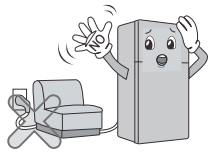

قد يسبب ذلك تلف سلك التيار و يؤدي إلى الحريق أو الصدمة الكهربية.

لا تقم بمد أو تعديل طول سلك التيار.

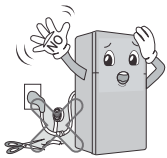

ذلك يتلف سلك التيار و يسبب صدمة كهربية أو حريق.

افصل قابس الطاقة أثناء التنظيف أو التعامل مع أو استبدال مصباح LED الخاصة بالثلاجة.

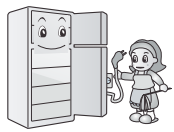

قد يسبب صدمة كهربية أو إصابة.

لا تقم بسحب السلك أو لمس مقبس الكهرباء بأيدي مبللة.

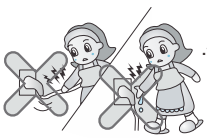

قد يسبب ذلك صدمة كهربية أو إصابة.

قم بازالة المياه أو الأتربة من مقبس الكهرباء و ادخله مع توصيل نهايات الدبابيس بدقة.



الأتربة، المياه أو التوصيل الغير ثابت قد يؤدي إلى الحريق أو الصدمة الكهربية.

تأكد من التأريض

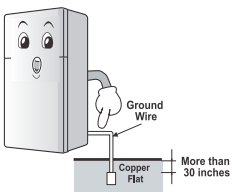

التأريض الخاطئ قد يؤدي إلى التعطل و الصدمة كهربية.

عندما يكون السلك الكهربي أو مقبس الكهرباء تالف أو فتحات المخرج ضعيفة أو متفككة، لا تستخدمهم.

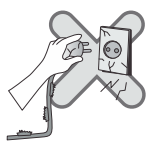

قد تؤدي إلى الصدمة الكهربية أو قصر الدائرة.



الزجاج المقسى على الباب يمكن ان ينكسر بالتصادم، لا تلمس الاجزاء المكسورة فقد تتجرح.

معلومات هامة للسلامة

مخاطر الحريق والمواد القابلة للاشتعال



يُحذرك هذا الرمز بأن المواد القابلة للاشتعال يُمكن أن تشتعل أو أن ينشب عنها حريق في حالة عدم توخي الحذر.

- يحتوي هذا الجهاز على كمية صغيرة من وسيط تبريد الآيزوبوتان (R600a)، ولكنه قابل للاشتعال أيضًا. عند نقل وتركيب الجهاز، يجب توخي الحذر لضمان عدم تعرض أجزاء من دائرة التبريد للتلف.
- في حال اكتشاف تسريب، تجنب أية ألسنة لهب مكشوفة أو مصادر محتملة للاشتعال وقم بتهوية الغرفة التي يتواجد بها الجهاز لعدة دقائق. لكي تتجنب تكون خليط هواء غازي قابل للاشتعال في حال حدث تسريب في دائرة التبريد، يجب أن يتماشى حجم الغرفة المستخدم فيها الجهاز مع كمية غاز التبريد المستخدم. يجب أن تكون مساحة الغرفة متر مربع لكل ٨ جرام من غاز التبريد R600a داخل الجهاز.
- تأكد عند وضع الجهاز من أن سلك التيار الكهربائي غير عالق أو تالف.
- لا تضع المآخذ المحمولة متعدد المقابس أو أسلاك التيار الكهربائي المحمولة خلف الجهاز.

معلومات هامة للسلامة

تحذير

- ابق فتحات التهوية، في نطاق الجهاز أو في التكوين المدمج، بعيدة عن أي عواقب.
- لا تقم باستخدام أجهزة ميكانيكية أو وسائل أخرى لتسريع عملية إذابة التجميد، ماعدا الموصى به من قبل المصنع.
- لا تقم بإتلاف دائرة المبرد.
- لا تقم باستخدام أجهزة كهربية داخل حجيرة تخزين الطعام، إلا إذا كان الموصى به من قبل الشركة المصنعة.
- المبرد و غاز العزل المستخدم في الجهاز يتطلب خطوات تصريف خاصة. في حالة التصريف، برجاء استشارة وكيل الصيانة أو شخص بنفس الكفاءة.

معلومات هامة للسلامة

تحذير ⚠

لتقليل خطر الحريق، الصدمة الكهربية، أو الجروح للأشخاص في حالة استخدام المنتج الخاص بك، يجب أن يتم إتباع احتياطات الأمان الأساسية، بما يشمل التالي. اقرأ كل التعليمات قبل استخدام هذا الجهاز.

احتياطات الأمان الأساسية

.هذا الدليل يحتوي على الكثير من رسائل الأمان الهامة. دائما قم بقراءة و إتباع كل رسائل الأمان.

⚠ هذا يعتبر رمز تنبيه الأمان. انه ينبهك إلى رسائل الأمان التي تعطيك معلومات عن الأخطار التي قد تؤذي أو تسبب أضرار جسيمة أو تسبب تلف في المنتج. كل رسائل الأمان سوف يسبقها رمز تنبيه الأمان و الكلمات التي ترمز للخطر هي خطر، تحذير، أو إنذار. هذه الكلمات تعني:

⚠	**خطر** سوف تؤذى أو تتعرض لأضرار جسيمة إذا لم تتبع التعليمات
⚠	**تحذير** لتقليل خطر الحريق، الصدمة الكهربية، أو الجروح للأشخاص في حالة استخدام المنتج الخاص بك، يجب أن يتم إتباع احتياطات الأمان الأساسية، بما يشمل التالي. اقرأ كل التعليمات قبل استخدام هذا الجهاز.
⚠	**إنذار** تشير إلى موقف خطر وشيك والذي، إذا لم يتم تفاديه، قد ينتج عنه أصابه صغري أو متوسطة، أو قد يتلف المنتج فقط.

جميع رسائل الأمان سوف تحدد الخطر، و تخبرك كيف تقلل فرصة الإصابة، و تخبرك عما يمكن أن يحدث إذا لم يتم إتباع التعليمات.

المحتويات

معلومات هامة للسلامة 3

التركيب 11

الأجزاء الداخلية 12

التشغيل 14

البدء

قبل ضبط درجة الحرارة

الاختبار الذاتي

تحكم حجيرة الفريزر

تحكم حجيرة الثلاجة

درج الخضروات (اختياري)

جهاز التحكم في الرطوبة

إذابة التجمد

مزيل الرائحة (اختياري)

صانع مكعبات الثلج (اختياري)

تبريد الباب+ (اختياري)

إنذار الباب (اختياري)

استبدال المصباح

وقت العطلات

الوظائف الذكية (اختياري) 17

اقتراحات لتخزين الطعام 19

التنظيف 20

معلومات عامة 21

تحذيرات هامة 22

قبل طلب الخدمة 23

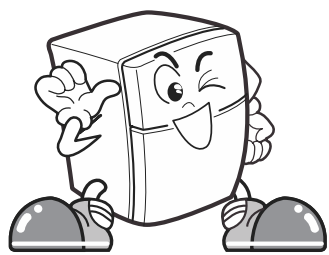

ARABIC

دليل مالك

ثلاجة

رجاءا قم بقراءة هذا الدليل جيدا قبل تشغيل جهازك و احتفظ به للرجوع إليه مستقبلا

MFL70370109

www.lg.com

حقوق الطبع والنشر © لعام 2021 لشركة LG Electronics. جميع الحقوق محفوظة

P/NO : MFL70370109