LG
Life's Good

ENGLISH
DEUTSCH
FRANÇAIS
NEDERLANDS
ITALIANO

SIMPLE MANUAL

Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL

DSL4

MFL71380174
2105_Rev02

www.lg.com
Copyright © 2021 LG Electronics Inc. All Rights Reserved.

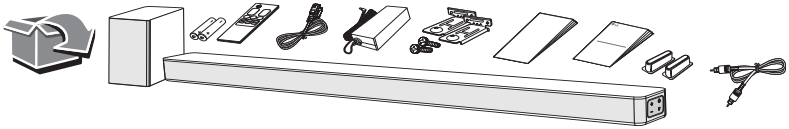

Front Panel



⏻ (Standby) ····· Switches the unit ON or OFF.
F (Function) ····· Selects function.
—/+ (Volume) ····· Adjusts volume.

Rear Panel

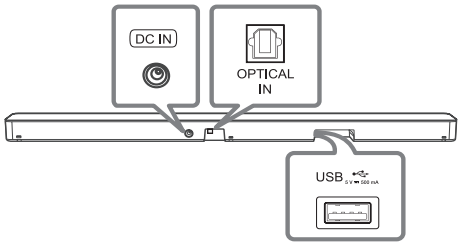

DC IN ····· Connect to the AC adapter.
OPTICAL IN ····· Connect to an optical device.
USB Port ····· Connect to a USB device.

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
2. Turn on the sound bar.
   - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's yellow - green LED turns on.

Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

1. Press **PAIRING** on the rear of the wireless subwoofer.
   - The yellow - green LED on the front of the wireless subwoofer blinks quickly. (If the yellow - green LED does not blink, press and hold the **PAIRING**.)
2. Turn on the sound bar.
   - Pairing is completed. The yellow - green LED on the front of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

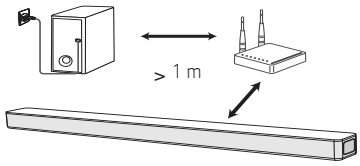

TV Connection

1. Connect the sound bar to the TV using Optical cable.
2. Set up [External Speaker (Optical)] on your TV setting menu.

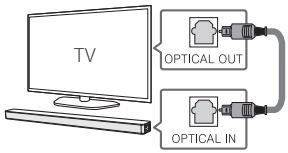

Additional Device Connection

1. Connect to the external device like as follow.

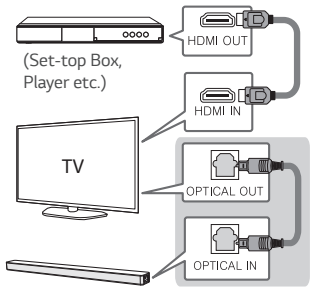

2. Set the input source by pressing **F** repeatedly.

Remote control

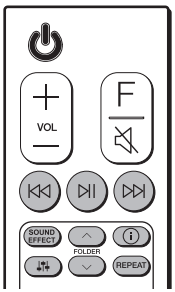

Replacement of Battery

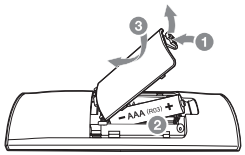

⏮/⏭: Skip/Search

⏯: Play/Pause

- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing **F** repeatedly. Long press ⏯ and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.

- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER ∧/∨: Searches a folder.

ⓘ: Displays the information of a file, an input source or connected **Bluetooth** device name.

- **Auto Power ON/OFF:** Long press ⓘ and press it again.

🎚: Adjusts sound level of each speaker.

REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Specification

Power consumption	Refer to the main label.
	Networked standby : 0.5 W (If all network ports are activated.)
AC adapter	• Model : DA-38A25 • Manufacturer : Asian Power Devices Inc. • Input : 100 - 240 V ~ 50 - 60 Hz • Output : 25 V ⎓ 1.52 A
	• Model : MS-Z1520R250-038A0-P • Manufacturer : MOSO POWER SUPPLY TECHNOLOGY CO., LTD. • Input : 100 - 240 V ~ 50/60 Hz • Output : 25 V ⎓ 1.52 A
Dimensions (W x H x D)	Approx. 890.0 mm X 57.0 mm X 85.0 mm With foot
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier (Total RMS Output power)	300 W RMS

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Declaration of Conformity

CE

Hereby, LG Electronics declares that the radio equipment type Wireless Sound Bar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://www.lg.com/global/support/cedoc/cedoc#

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm
5730 to 5821 MHz	13 dBm