LG
Life's Good

Quick Start Guide

LED TV
20MT48AF / 22MT48AF /
24MT48AF / 28MT48AF / 29MT48AF

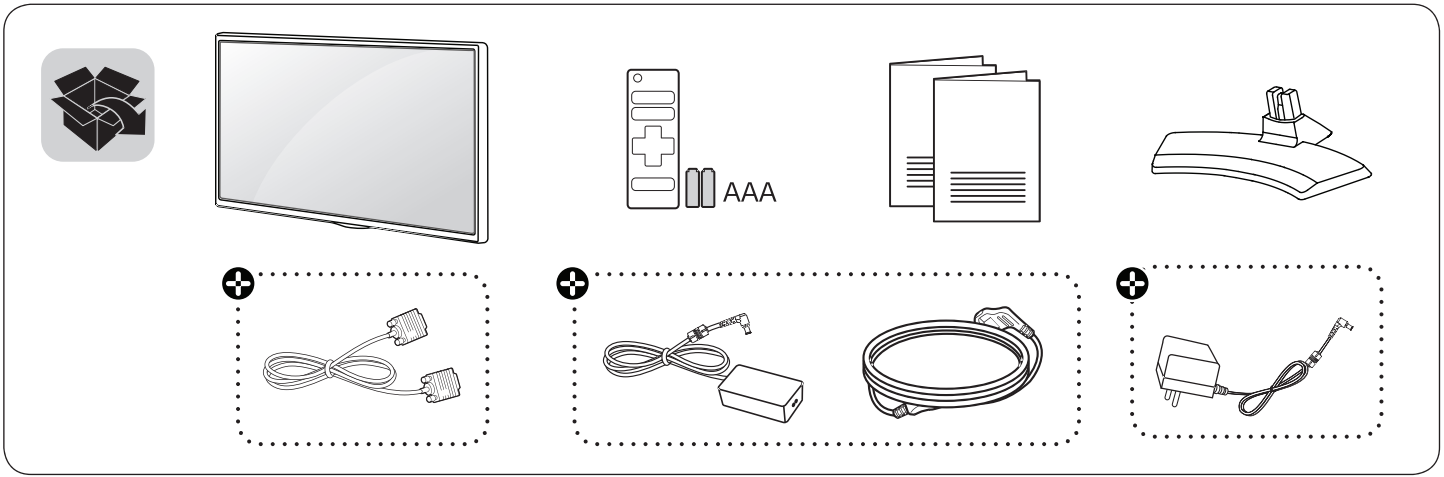

www.lg.com

English Read **Safety and Reference**.

⊕ Depending on model

Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

*Images may vary depending on models.

MBM64536727

P/NO : MBM64536727 (1602-REV00)

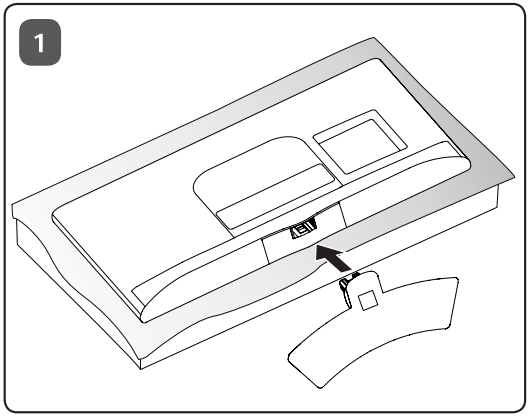

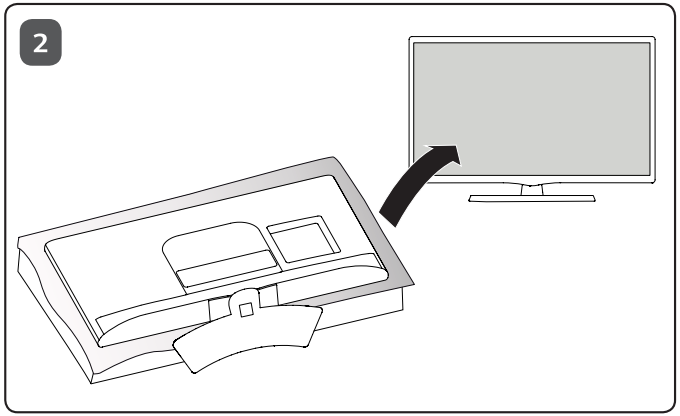

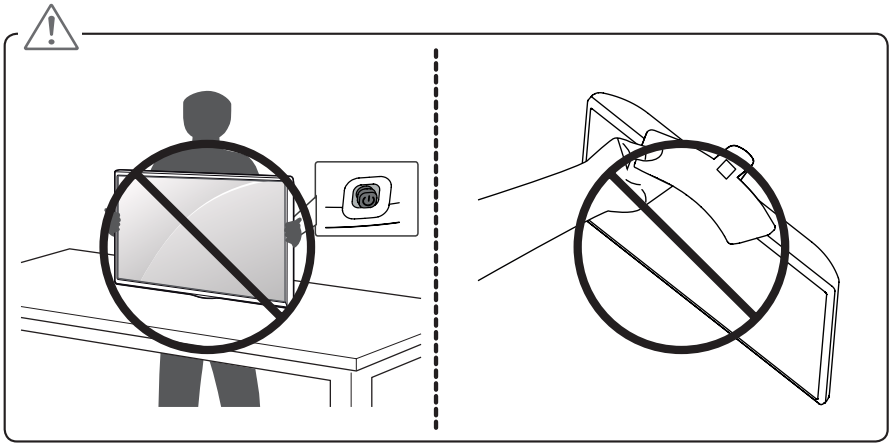

CAUTION

Image shown may differ from your TV.

When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.



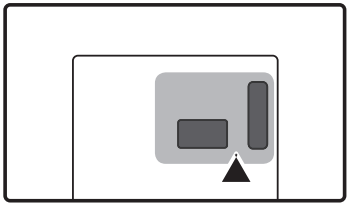

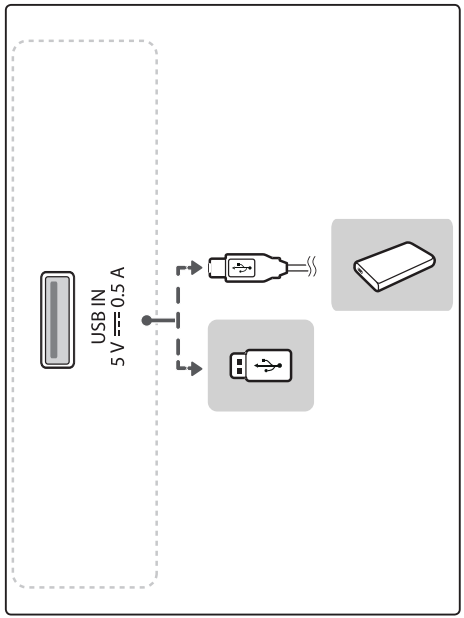

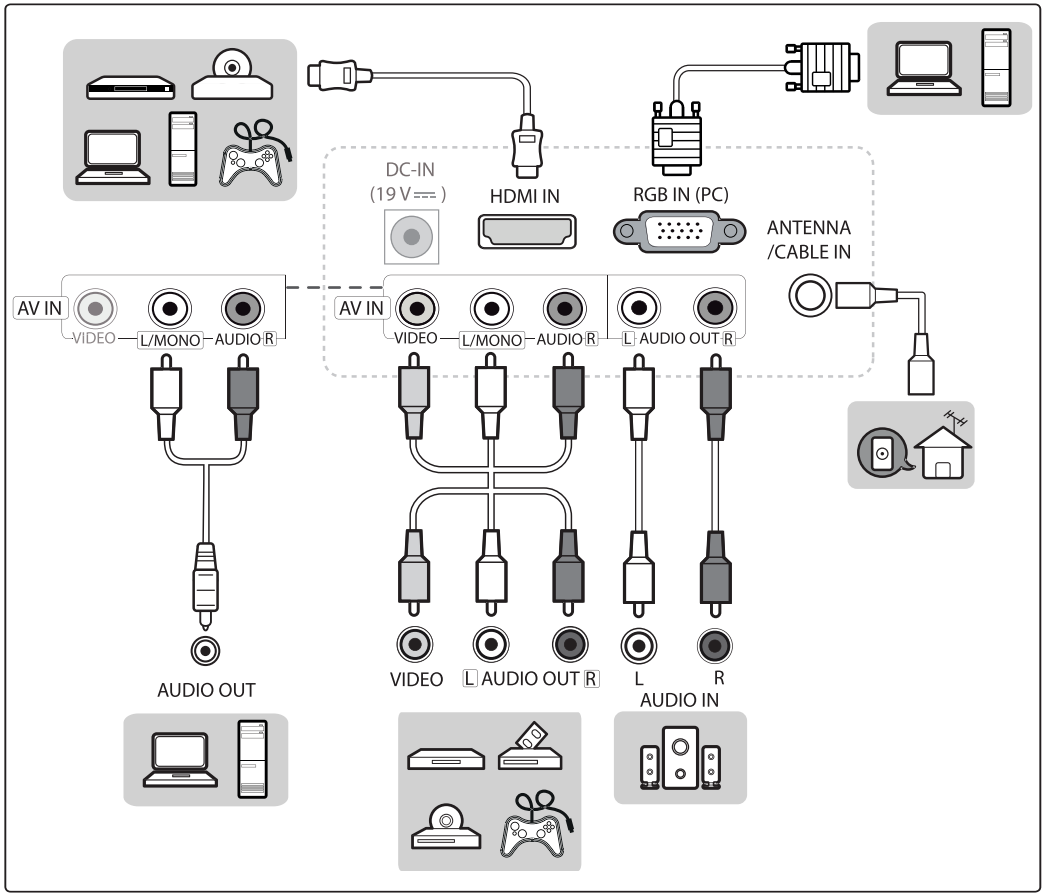

NOTE

Image shown may vary depending on model.
All connection cables & devices shown inthe picture are not included along with the TV set.

DC-IN
(19 V ⎓)

NOTE
Image shown may vary depending on model.

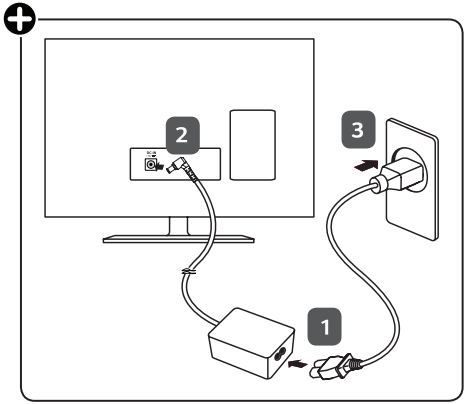

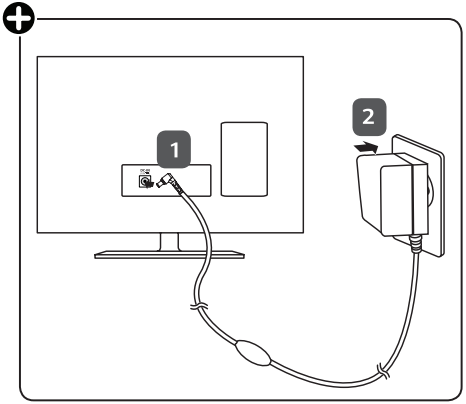

⊕ Depending on model

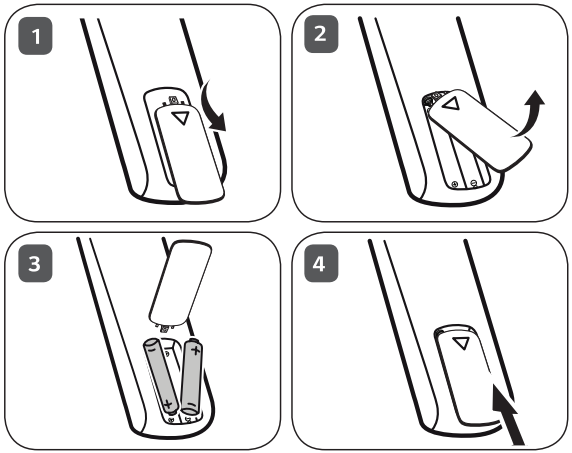

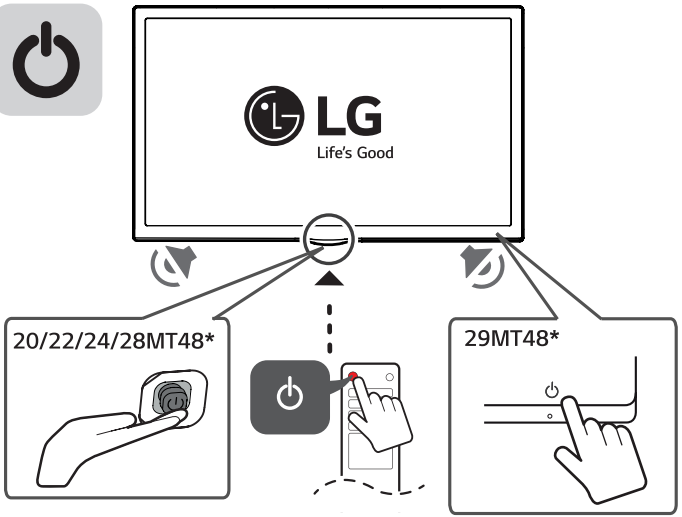

IN020222