



ENGLISH

OWNER'S MANUAL

DIGITAL SIGNAGE MEDIA PLAYER

(Hardware)

Please read this manual carefully before operating your set and retain it for future reference.

DIGITAL SIGNAGE MEDIA PLAYER

NC1000 NC1100 NA1000 NA1100
NC2000 NC2100 NA2000 NA2100

www.lgsupersign.com
www.lgsolutions.com

CONTENTS

NC1000

Specifications	4
General Specifications	4
Multi I/O Port	4
Operational Specifications	4
Included in the Box	5
Basic Components	5
Optional Items	5
Connections	6
Back Panel	6
Installation	7
In/Out Cable Connection	9
Connecting a Monitor with D-sub Cable	9
Connecting a Monitor with an HDMI Cable	12
Connecting/Disconnecting HDMI Audio Device in Windows	14
Connection to Multiple Monitors	15

NC2000

Specifications	16
General Specifications	16
Multi I/O port	16
Operational Specifications	16
Included in the Box	17
Basic Components	17
Connections	18
Back Panel	18
Installation	19

NC1100/NA1000/NA1100

Specifications	20
General Specifications	20
Multi I/O Port	20
Operational Specifications	20
Included in the Box.....	21
Basic Components	21
Optional Items	21
Connections	22
Back Panel	22
Installation	23
In/Out Cable Connection.....	25
Connecting a Monitor with D-sub Cable.....	25
Connecting a Monitor with an HDMI Cable	28
Connecting/Disconnecting HDMI Audio Device in Windows.....	30
Connecting a Monitor with DP Cable	31
Connection to Multiple Monitors.....	34

NC2100/NA2000/NA2100

Specifications	35
General Specifications	35
Multi I/O Port	35
Operational Specifications	35
Included in the Box.....	36
Basic Components	36
Connections	37
Back Panel	37
Installation	38

Appendix

Limitations of Microsoft Windows Embedded Standard.....	39
Frequently Asked Questions (FAQs).....	39

Specifications

Attention

- Product specifications may change without prior notice to improve performance.

General Specifications

Dimensions	250 mm (W) x 220 mm (H) x 45 mm (D) (only Set)
Weight	1.43 kg (only Set)
CPU	Intel ATOM Processor 330 1.6 GHz(Dual Core), FSB 533 MHz
Chip Set	Nvidia MCP7A-I ON
Main Memory	DDR3 1066 SODIMM type 1 GB, 2 GB
Secondary Storage Device	SATA SSD 8 GB, 16 GB, 32 GB
O/S	Windows Embedded Standard

NC1000

Multi I/O Port

Serial Port	One external RS-232 Serial port
USB Port	Hi-Speed USB 2.0 port 480 Mbps rate (x5)
LAN Port	Realtek RTL8103E 10/100 Mbps Ethernet controller (NC1000-**A**/*B*) Realtek RTL8111E Gigabit Ethernet controller (NC1000-**P**/*Q*)
VGA / HDMI	Nvidia MCP7A-I ON integrated Graphic chipset
4-in-1 Card	Secure Digital (SD) / MultiMedia Card (MMC/MMC4.0) / Memory Stick (MS/MS-Pro) / xD Memory Card
PCI Express Card Slot	Supported
LINE OUT	Supported
SPDIF (Digital Audio Out)	5.1 Channel Supported (depending on source signal)









Operational Specifications

Resolution	Maximum Resolution	1920 x 1080 @ 60 Hz			
	Recommended Resolution	1920 x 1080 @ 60 Hz			
Power	Rated Voltage	100-240 V~ 50/60 Hz 1.2 A			
Operating Condition		Sync (H/V)	Video	LED	
	Normal Mode	On/On	Active	On	
	Deep Sleep Mode (Set = Off)	Off/Off	Off	Off	
Operating Conditions	Operating Conditions	Temperature	5 °C to 40 °C	Humidity	10 % to 80 %
	Storage Conditions	Temperature	-20 °C to 60 °C	Humidity	5 % to 95 %

Included in the Box

Basic Components

The NC1000 with the following components. Please check that these components have been included prior to installation.

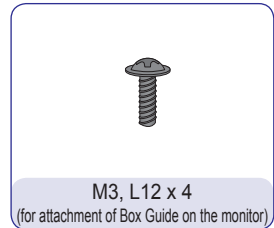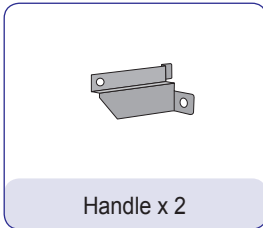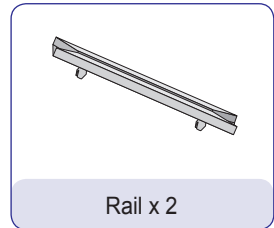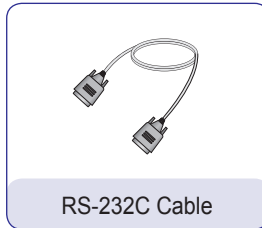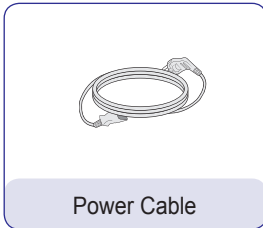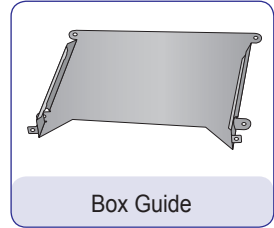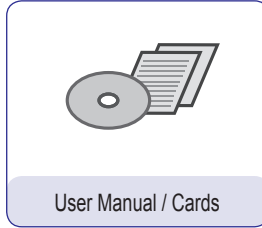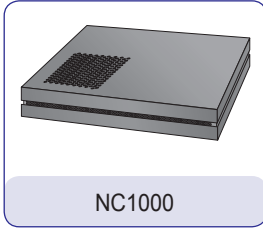

NC1000

Attention

- These illustrations may differ from your product and are subject to change.

Optional Items

The following items are supported by the NC1000, but are not provided with the product.


Please purchase optional items as needed.

- HDMI cable, D-sub cable, LINE-OUT cable, fiber optic cable, LAN cable, mouse, keyboard.

Connections

Back Panel

NC1000

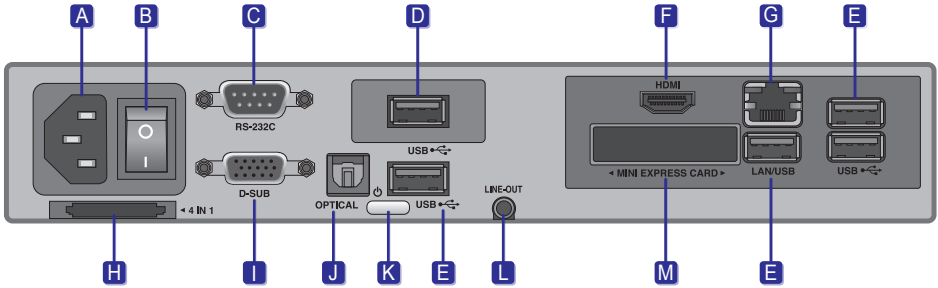

Number	Connection	Description
A	Power Cable In	For the power cable.
B	Power Switch	Provides power to the NC1000.
C	RS-232C Out	For the RS-232C cable.
D	USB Wireless Modem In	For a USB-type wireless modem.
E	USB In	For USB-type devices, including memory, hard disk, CD-ROM, keyboard, and mouse.
F	HDMI Out	For an HDMI-compatible monitor.
G	LAN Connector	For a LAN cable.
H	4 IN 1 Multi-Card Slot	Accommodates memory cards for storing video or reading images. Supported cards include Secure Digital (SD), MultiMedia (MMC/MMC4.0), Memory Stick (MS/MS-Pro), and xD Memory Cards.
I	D-sub Out	For the monitor's RGB video in.
J	OPTICAL Out	For an optical cable for digital audio transfer.
K	NC1000 Power Button	Turns NC1000 on.
L	LINE-OUT Connector	For a LINE-OUT cable for analog audio transfer.
M	PCI MINI EXPRESS Card Slot	Provided for PCI Mini Express Cards.


Attention Turn on the power switch (B) and then turn on the power button (K) to power on NC1000.

Installation


We recommend you to use the items provided with your NC1000 and follow our instructions for integrating the product with your monitor in order to ensure the correct results.

Attention
The illustrations shown are to guide your integration and may differ from your product.


1 Place the handle into the slots on the side of the product.

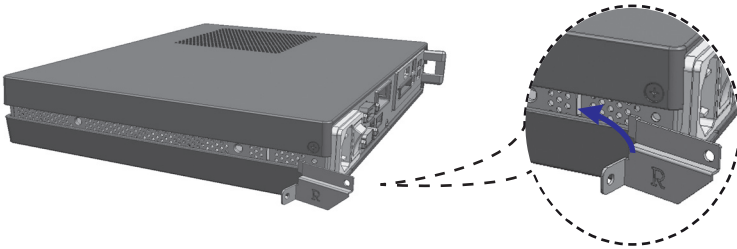

2 Use screws to secure the handle.

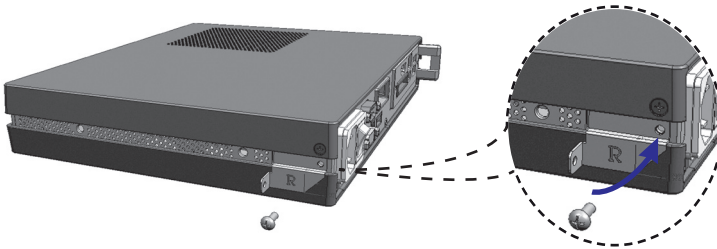


3 Place the rail in the slots on the side of the product.

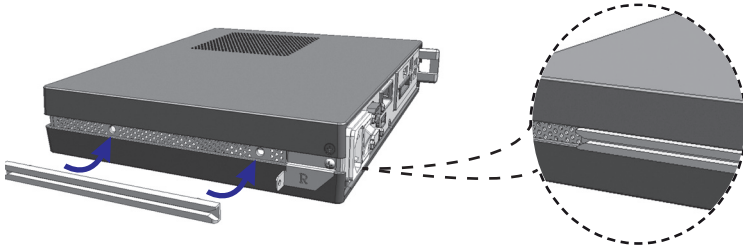


Warning
• Be careful of sharp edges on the rail and the handle.


4 As shown below, use screws to secure the Box Guide in the four slots at the back of the monitor.

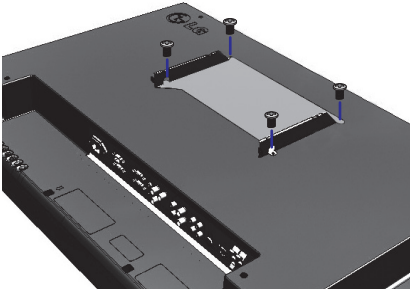

5 Attach the Box Guide to the rail slots, and press it upward.

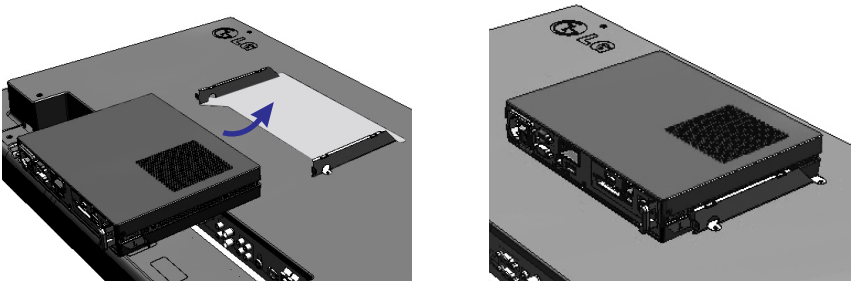

6 Use screws to secure the player and the Box Guide as shown below.

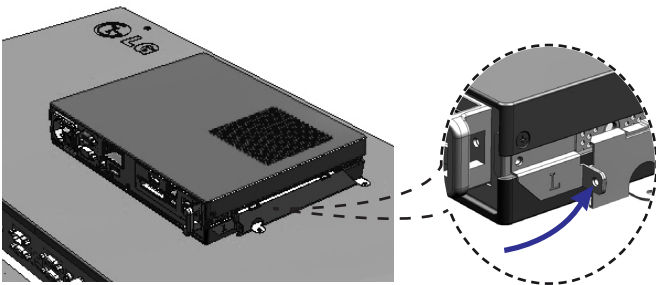

In/Out Cable Connection

In order to watch video on a monitor, you need to use a D-sub cable or an HDMI cable to connect the NC1000 to a monitor.

Attention

- D-sub, HDMI, LINE-OUT, OPTICAL, and LAN cables are not included with the NC1000. If the cables were not provided with your monitor, you may need to purchase them separately.
- After cabling is complete, assign the SET ID of the monitor to be connected to NC1000.
- To configure the SET ID, please refer to the owner's manual for your monitor.

Note

When using the SuperSign Manager software:

- The monitor SET ID is a unique number used to identify the monitor. You can choose a number from 1 to 25. The SET ID allows the SuperSign Manager software to identify the monitor.
- In order to directly connect the monitor to NC1000, its SET ID must be set to 1.
- To use SuperSign Manager, the monitor that will be connected to NC1000 must support the LG RS232C protocol. A monitor supporting the LG RS232C protocol can control the monitor functions, such as brightness and sound, using SuperSign Manager.

Connecting a Monitor with D-sub Cable


Attention

- A D-sub cable connection does not include an audio signal. For audio, you need to connect a LINE-OUT or OPTICAL cable.

Note

- D-sub cables are also known as RGB cables.


1 Connect the appropriate power cables to a monitor and NC1000 respectively.

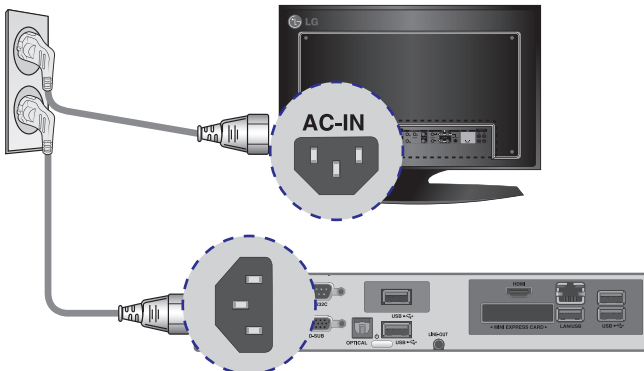


In/Out Cable Connection

NC1000

- 2 Connect the D-sub port of NC1000 and RGB-IN port of the monitor with a D-sub cable.

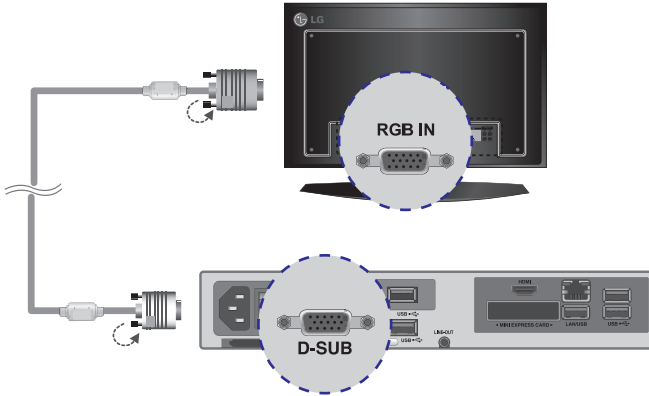


- 3 Connect NC1000 (OUT) to the monitor (IN) with an RS-232C cable.

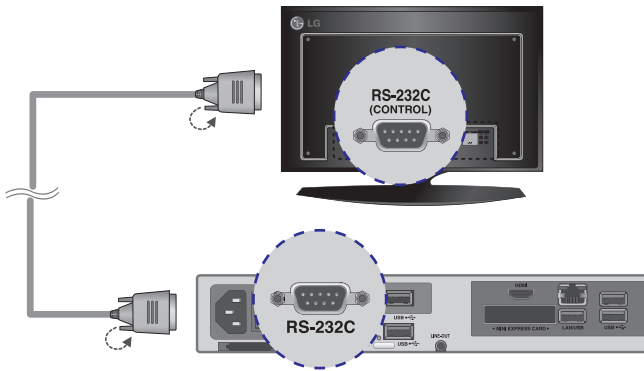


In/Out Cable Connection

4 Connect the NC1000 to the monitor with a LINE-OUT cable.

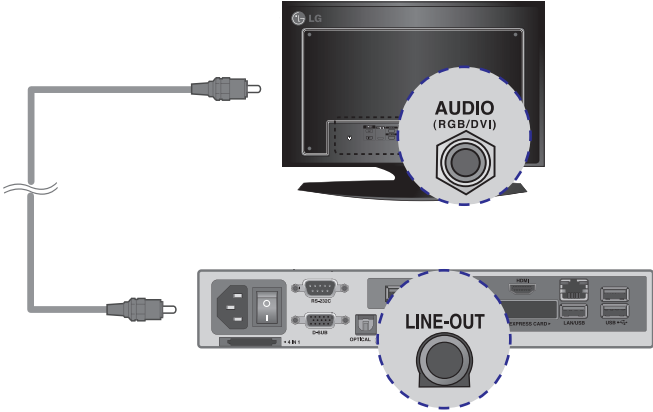

5 Connect a LAN cable to the NC1000.

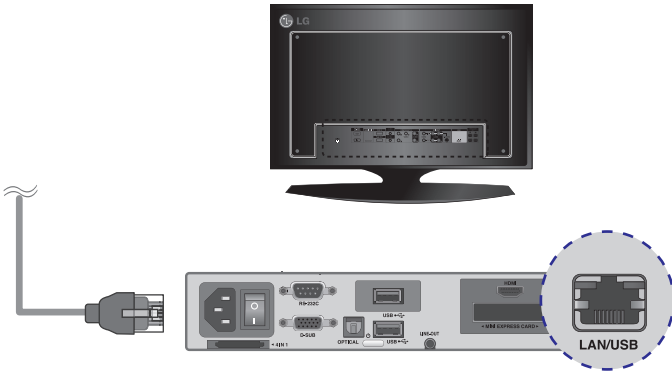

In/Out Cable Connection

Connecting a Monitor with an HDMI Cable


HDMI connections allow digital video and audio signals to be transferred with one cable. HDMI cable connections do not require an additional audio in cable.

Attention


- The monitor to connect with NC1000 should have the HDMI in for the HDMI connection.
- To use the HDMI device, you need to activate the HDMI device in Microsoft Windows Embedded Standard, the operating system of the NC1000. To connect and disconnect the HDMI audio device, see the Connecting/Disconnecting HDMI Audio Device in Windows section of this document.

NC1000

1 Connect the appropriate power cables to a monitor and NC1000 respectively.

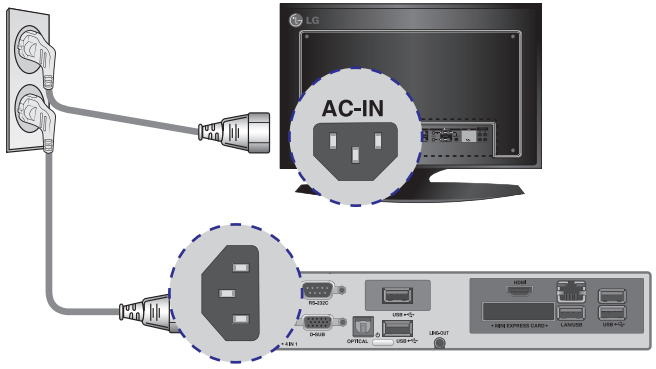


2 Connect NC1000 to a monitor with an HDMI cable.

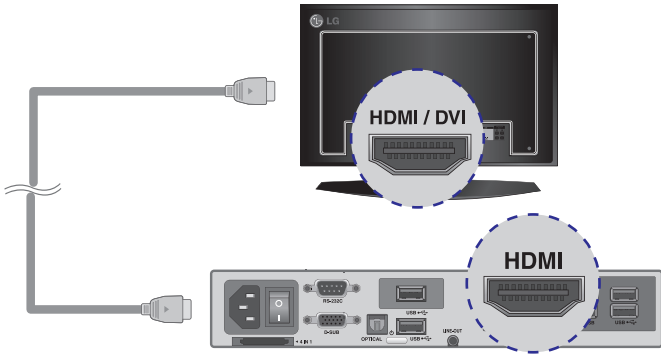


In/Out Cable Connection

3 Connect NC1000 (OUT) to the monitor (IN) with an RS-232C cable.

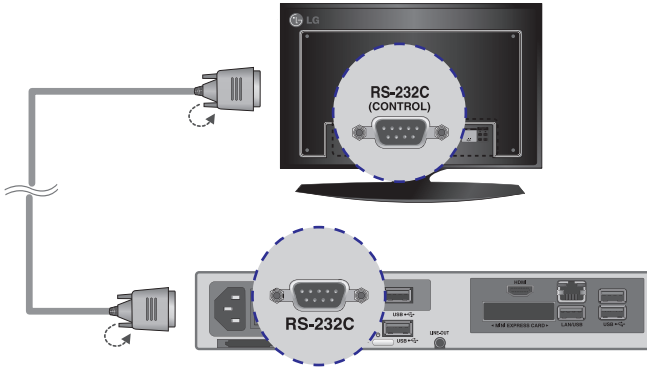


4 Connect a LAN cable to NC1000.

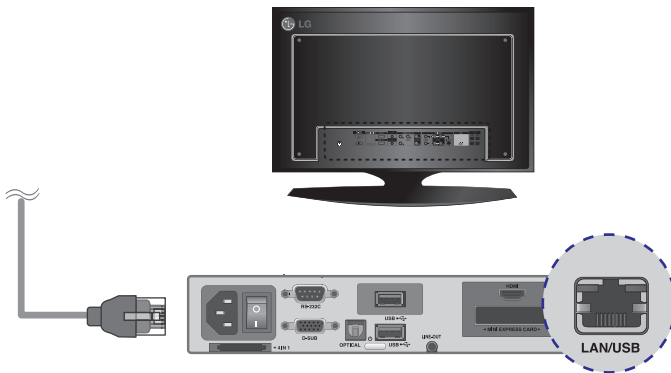

Connecting/Disconnecting HDMI Audio Device in Windows


Connecting HDMI Audio Device

Move to the desktop of the monitor connected to the NC1000.

- 1 Click the  button in the lower left of the screen.
- 2 Select **Start > Control Panel > Sounds and Audio Devices > Audio**.
- 3 Select **Play Sounds > NVIDIA High Definition Audio from the list** and click **OK**.

Disconnecting HDMI Audio Device

Move to the desktop of the monitor connected to the NC1000.

- 1 Click the  button in the lower left of the screen.
- 2 Select **Start > Control Panel > Sounds and Audio Devices > Audio**.
- 3 Select **Play Sounds > Realtek HD Audio output from the list** and click **OK**.

Attention

- If you do not reset after disconnecting the HDMI cable from the NC1000, the sound will not work.
- In order for the sound to work properly, stop playing the content and restart the NC1000.

Connection to Multiple Monitors

Each NC1000 can accommodate up to 25 monitors for video playback. (SET ID: 1 to 25)
 You can set the tile mode by connecting multiple monitors.

- 1 Connect the NC1000's **D-sub OUT** to the **D-sub IN** of the first monitor, which has **SET ID = 1**.
- 2 Connect other monitors with **D-sub** cables as shown below (**IN/OUT** separated).



- 3 Connect the NC1000's **RS-232C OUT** to the **RS-232C IN** of the first monitor, which has **SET ID = 1**.
- 4 Connect other monitors with RS-232C cables as shown below (**IN/OUT** separated).



Attention

- You may want to purchase additional RS-232C cables to use several monitors together.
- You cannot use multiple monitors with the HDMI cable.

Specifications

Attention

- Product specifications may change without prior notice to improve performance.

General Specifications

Dimensions	99.8 mm (W) x 183.3 mm (H) x 28.4 mm (D) (only Set)
Weight	0.215 kg (only Set)
CPU	Intel ATOM Processor 330 1.6 GHz(Dual Core), FSB 533 MHz
Chip Set	Nvidia MCP7A-I ON
Main Memory	DDR3 1066 SODIMM type 1 GB, 2 GB
Secondary Storage Device	SATA SSD 8 GB, 16 GB, 32 GB
O/S	Windows Embedded Standard

Multi I/O port

Serial Port	N/A
USB Port	Hi-Speed USB 2.0 port 480 Mbps rate (x3)
LAN Port	Realtek RTL8103E 10/100 Mbps Ethernet controller (NC2000-**A**/B*) Realtek RTL8111E Gigabit Ethernet controller (NC2000-**P**/Q*)
VGA / HDMI	Nvidia MCP7A-ION integrated Graphic chipset
4-in-1 Card	N/A
PCI Express Card Slot	Supported
LINE OUT	N/A
SPDIF (Digital Audio Out)	N/A



Operational Specifications

Resolution	Maximum Resolution	1920 x 1080 @ 60 Hz			
	Recommended Resolution	1920 x 1080 @ 60 Hz			
Power	Rated Voltage	12 V --- 3.5 A			
Operating Condition		Sync (H/V)	Video	LED	
	Normal Mode	On/On	Active	On	
	Deep Sleep Mode (Set = Off)	Off/Off	Off	Off	
Operating Conditions	Operating Conditions	Temperature	5 °C to 40 °C	Humidity	10 % to 80 %
	Storage Conditions	Temperature	-20 °C to 60 °C	Humidity	5 % to 95 %

Included in the Box

Basic Components


The NC2000 consists of the following components. Please check that these components have been included prior to installation.

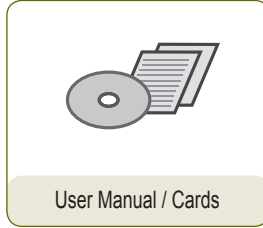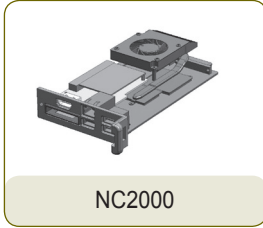

Attention

- These illustrations may differ from your product and are subject to change.


Attention

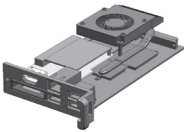

The NC2000-**A*/**B* model, as shown in the image, is compatible with the following models.

Applicable models: M3204C**A**, M4214C**A**, M4716C**A**

Attention

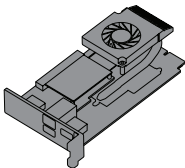

The NC2000-**P*/**Q* model, as shown in the image, is compatible with the following models.

Applicable models: M3204C**R**, M4214C**R**, M4716C**R**, 32VS10, 42VS10, 47VS10


Attention

Without prior notice, applicable models for NC2000 are subject to change to improve the performance of the product.

Connections

Back Panel

NC2000

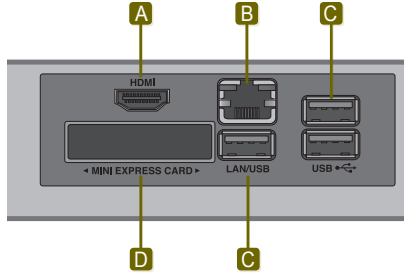

Number	Connection	Description
A	HDMI Out	For an HDMI-compatible monitor.
B	LAN Connector	For a LAN cable.
C	USB In	For USB-type devices, including memory, hard disk, CD-ROM, keyboard, and mouse.
D	PCI MINI EXPRESS Card Slot	Provided for PCI Mini Express Cards.


Installation

We recommend you to use the items provided with your NC2000 and follow our instructions for integrating the product with your monitor in order to ensure the correct results.


Attention

The illustrations shown are to guide your integration and may differ from your product.

1 Remove the screw and Metal cover.

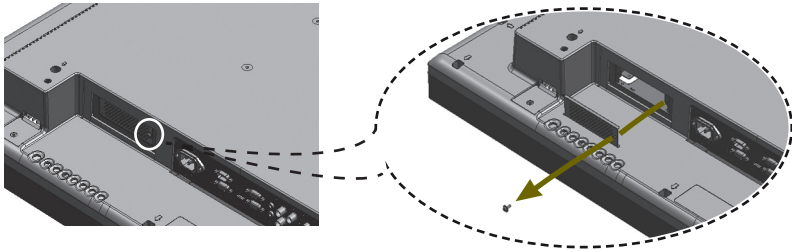


2 Attach the Box Guide to the rail slots, and press it upward.

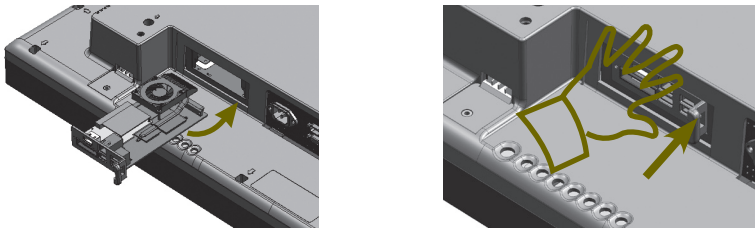

Note

If card does not become fully inserted into the insertion direction.
Hit by hand carefully to make fully connected.

3 Use screws to secure the player and the Box Guide as shown below.

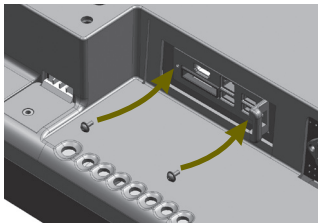

Specifications

Attention

- Product specifications may change without prior notice to improve performance.

General Specifications

Dimensions	250 mm (W) x 220 mm (H) x 45 mm (D) (only Set)		
Weight	SSD	1.590 kg (only Set)	
	HDD	1860 g (only Set)	
CPU	NC1100	Intel® Celeron® Processor P4500 (2M Cache, 1.86 GHz)	
	NA1000	Intel® Core™ i7-620M Processor (4M Cache, 2.66 GHz)	
	NA1100	Intel® Core™ i5-520M Processor (3M Cache, 2.40 GHz)	
Chip Set	Mobile Intel® QM57 Express Chipset		
Main Memory	DDR3 1066 SODIMM type 1 GB, 2 GB		
Secondary Storage Device	SATA SSD	8 GB, 16 GB, 32 GB, 64 GB	
	SATA SSD	320 GB	
O/S	Microsoft® Windows® Embedded Standard		
	Microsoft® Windows® Embedded Standard 7 E		
	Microsoft® Windows® Embedded Standard 7 P		

Multi I/O Port

Serial Port	One external RS-232 Serial port
USB Port	Hi-Speed USB 2.0 port 480 Mbps rate (x4)
LAN Port	Intel® 82577 Gigabit Ethernet PHY
VGA / HDMI / DP	Intel® HD Graphics Controller
4-in-1 Card	Secure Digital (SD) / MultiMedia Card (MMC/MMC4.0) / Memory Stick (MS/MS-Pro) / xD Memory Card
PCI Express Card Slot	Supported
LINE OUT	Supported
MIC IN	Supported

Operational Specifications










Resolution	Maximum Resolution	1920 x 1080 @ 60 Hz			
	Recommended Resolution	1920 x 1080 @ 60 Hz			
Power	Rated Voltage	100-240 V~ 50/60 Hz 1.5 A			
Operating Condition		Sync (H/V)	Video	LED	
	Normal Mode	On/On	Active	On	
	Deep Sleep Mode (Set = Off)	Off/Off	Off	Off	
Operating Conditions	Operating Conditions	Temperature	5 °C to 40 °C	Humidity	10 % to 80 %
	Storage Conditions	Temperature	-20 °C to 60 °C	Humidity	5 % to 95 %

NC1100/NA1000/
NA1100

Included in the Box

Basic Components

The NC1100/NA1000/NA1100 with the following components. Please check that these components have been included prior to installation.

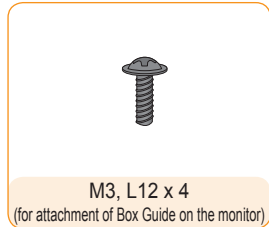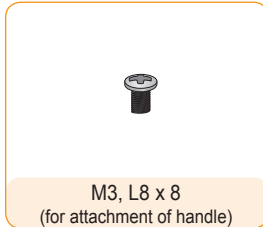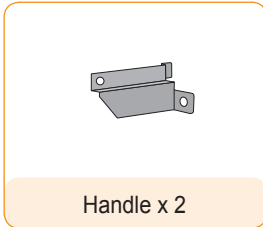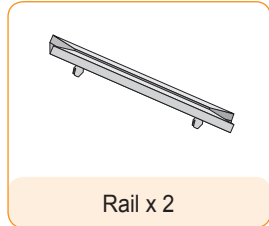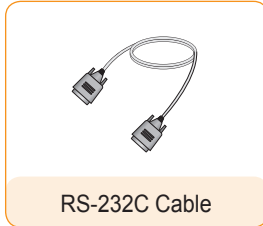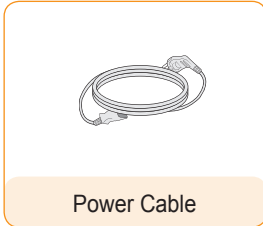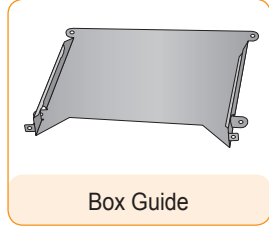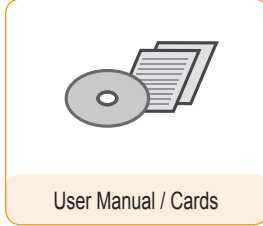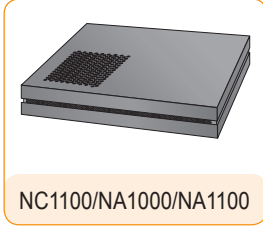

Attention

- These illustrations may differ from your product and are subject to change.


Optional Items

The following items are supported by the NC1100/NA1000/NA1100, but are not provided with the product. Please purchase optional items as needed.

- HDMI cable, D-sub cable, DP cable, LINE-OUT cable, MIC-IN cable, LAN cable, mouse, keyboard.

Connections

Back Panel

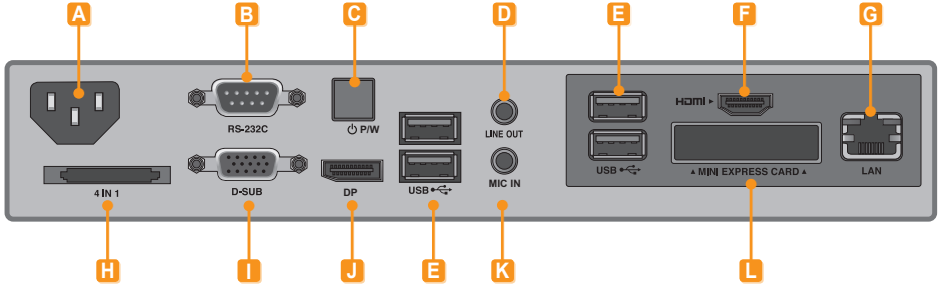

Number	Connection	Description
A	Power Cable In	For the power cable.
B	RS-232C Out	For the RS-232C cable.
C	Power Button	Turns the power on for NC1100/NA1000/NA1100's.
D	LINE-OUT	Connector For a LINE-OUT cable for analog audio transfer.
E	USB In	For USB-type devices, including memory, hard disk, CD-ROM, keyboard, and mouse.
F	HDMI Out	For an HDMI-compatible monitor.
G	LAN Connector	For a LAN cable.
H	4 IN 1 Multi-Card Slot	Accommodates memory cards for storing video or reading images. Supported cards include Secure Digital (SD), MultiMedia (MMC/MMC4.0), Memory Stick (MS/MS-Pro), and xD Memory Cards.
I	D-sub Out	For the monitor's RGB video in.
J	DP Output Port	Connects the cable to the DP-supporting monitor.
K	MIC-In	Connects the Mic-In cable to transfer analog audio input.
L	PCI MINI EXPRESS Card Slot	Provided for PCI Mini Express Cards.


Installation

We recommend you to use the items provided with your NC1100/NA1000/NA1100 and follow our instructions for integrating the product with your monitor in order to ensure the correct results.


Attention

The illustrations shown are to guide your integration and may differ from your product.


- 1 Place the handle into the slots on the side of the product.

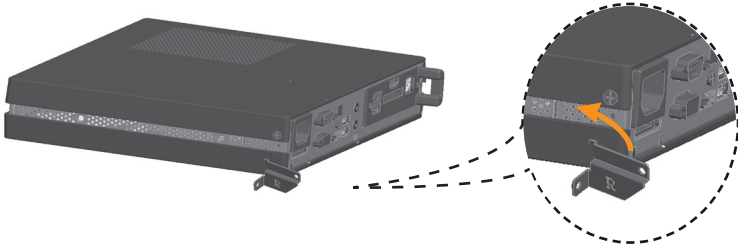

- 2 Use screws to secure the handle.

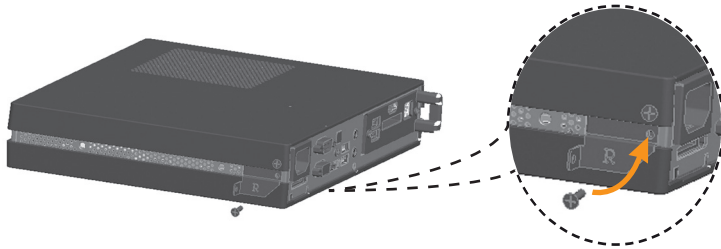


- 3 Place the rail in the slots on the side of the product.

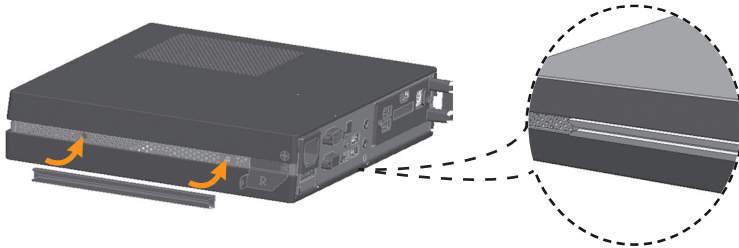


Warning

- Be careful of sharp edges on the rail and the handle.


- 4 As shown below, use screws to secure the Box Guide in the four slots at the back of the monitor.

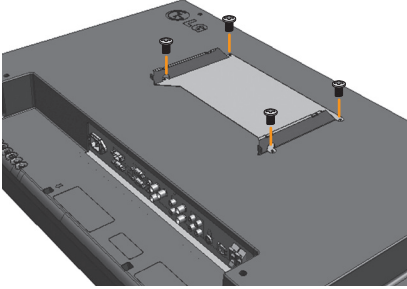

- 5 Attach the Box Guide to the rail slots, and press it upward.

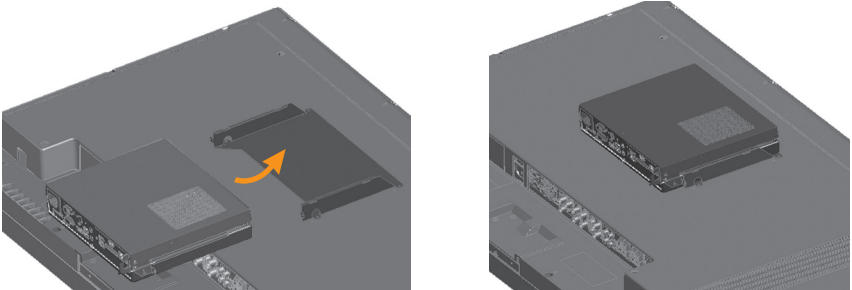

- 6 Use screws to secure the player and the Box Guide as shown below.

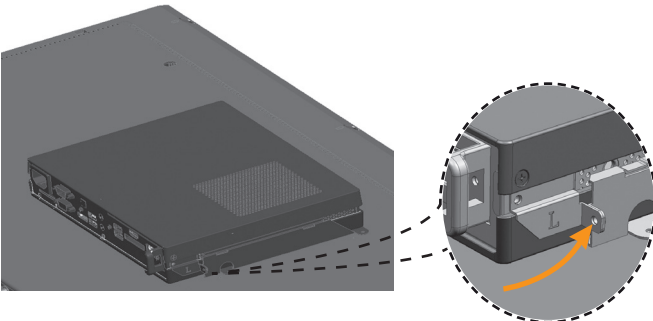

In/Out Cable Connection

To view images on the monitor, you need to connect NC1100/NA1000/NA1100 to the monitor via a D-SUB, HDMI or DP cable.

⚠ Attention

- D-SUB, HDMI, DP, LINE-OUT, MIC-IN and LAN cables are not included in the basic components. If the cables were not provided with your monitor, you may need to purchase them separately.
- After cabling is complete, assign the SET ID of the monitor to be connected to NA1000/NC1100/NA1100.
- To configure the SET ID, please refer to the owner's manual for your monitor.

📌 Note

When using the SuperSign Manager software:

- The monitor SET ID is a unique number used to identify the monitor. You can choose a number from 1 to 25. The SET ID allows the SuperSign Manager software to identify the monitor.
- In order to directly connect the monitor to NC1100/NA1000/NA1100, its SET ID must be set to 1.
- To use SuperSign Manager, the monitor that will be connected to NC1100/NA1000/NA1100 must support the LG RS232C protocol. A monitor supporting the LG RS232C protocol can control the monitor functions, such as brightness and sound, using SuperSign Manager.

Connecting a Monitor with D-sub Cable


⚠ Attention

Audio is not available when only the D-SUB cable is connected to the monitor. A LINE-OUT cable must be connected for audio output to function.

📌 Note


D-sub cables are also known as RGB cables.

- 1 Connect the appropriate power cables to a monitor and NC1100/NA1000/NA1100 respectively.

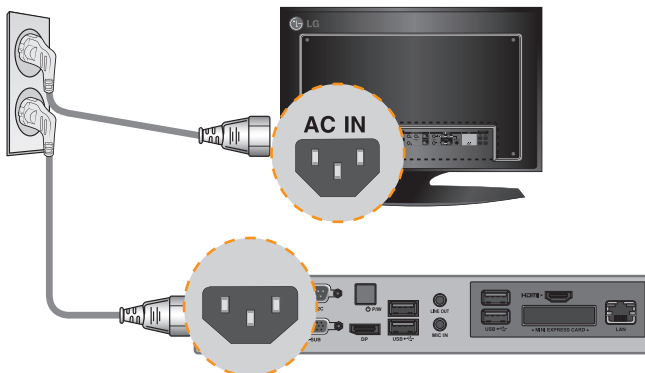


In/Out Cable Connection

- 2 Connect the D-sub port of NC1100/NA1000/NA1100 and RGB-IN port of the monitor with a D-sub cable.

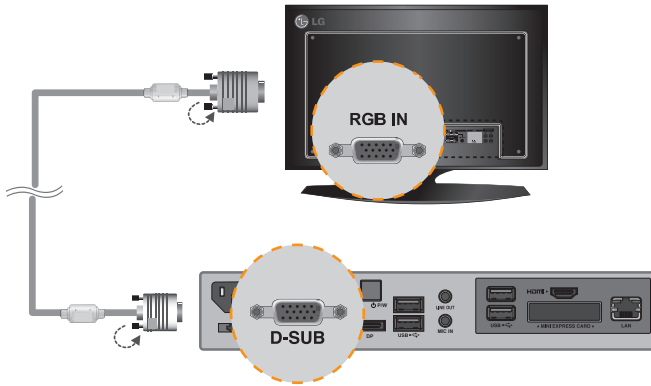


- 3 Connect NC1100/NA1000/NA1100 (OUT) to the monitor (IN) with an RS-232C cable.

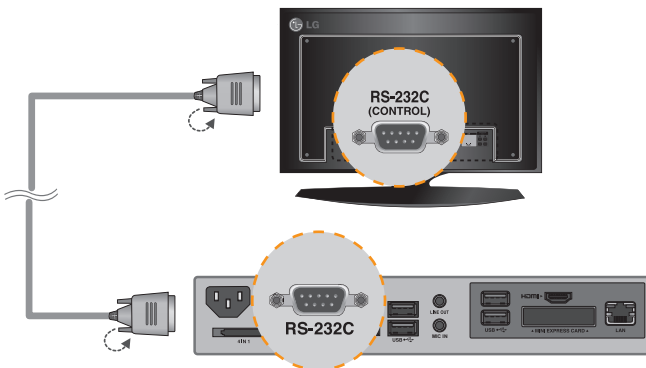


In/Out Cable Connection

- 4 Connect the NC1100/NA1000/NA1100 to the monitor with a LINE-OUT cable.

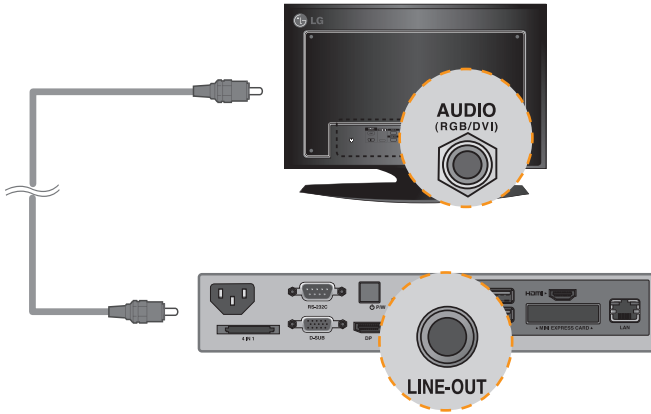

- 5 Connect a LAN cable to the NC1100/NA1000/NA1100.

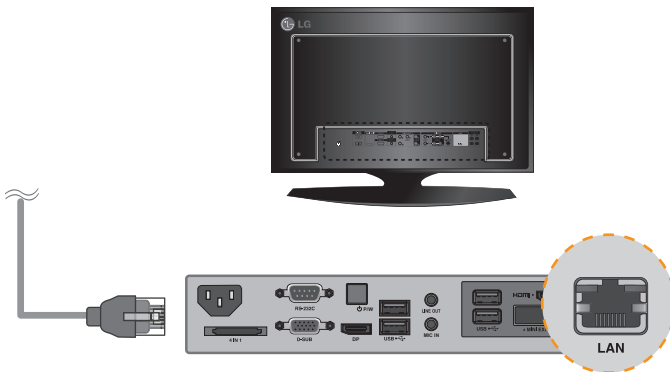

In/Out Cable Connection


Connecting a Monitor with an HDMI Cable

HDMI connections allow digital video and audio signals to be transferred with one cable. HDMI cable connections do not require an additional audio in cable.


Attention

- The monitor to connect with NC1100/NA1000/NA1100 should have the HDMI in for the HDMI connection.
- To use the HDMI device, you need to activate the HDMI device in Microsoft Windows Embedded Standard, the operating system of the NC1100/NA1000/NA1100. To connect and disconnect the HDMI audio device, see the Connecting/Disconnecting HDMI Audio Device in Windows section of this document.

- 1 Connect the appropriate power cables to a monitor and NC1100/NA1000/NA1100 respectively.

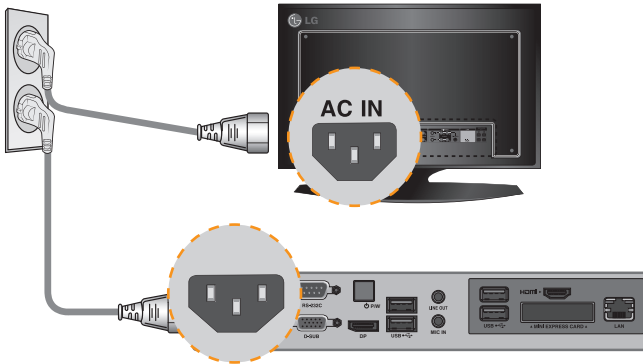


- 2 Connect NC1100/NA1000/NA1100 to a monitor with an HDMI cable.

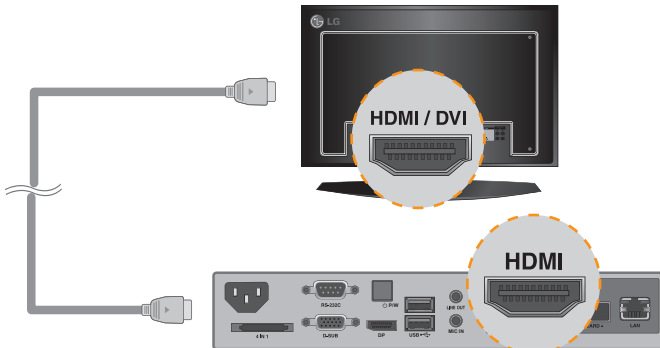


In/Out Cable Connection

3 Connect NC1100/NA1000/NA1100 (OUT) to the monitor (IN) with an RS-232C cable.

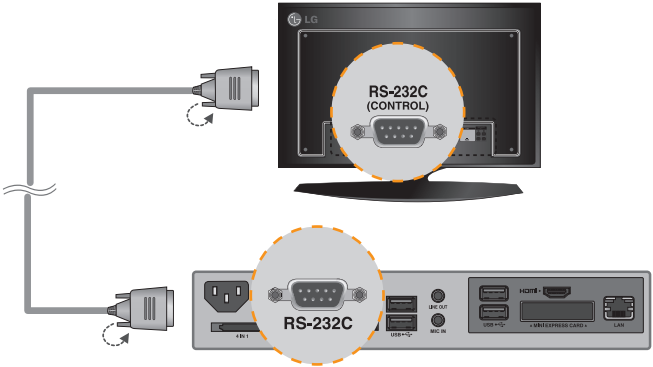

4 Connect a LAN cable to NC1100/NA1000/NA1100.

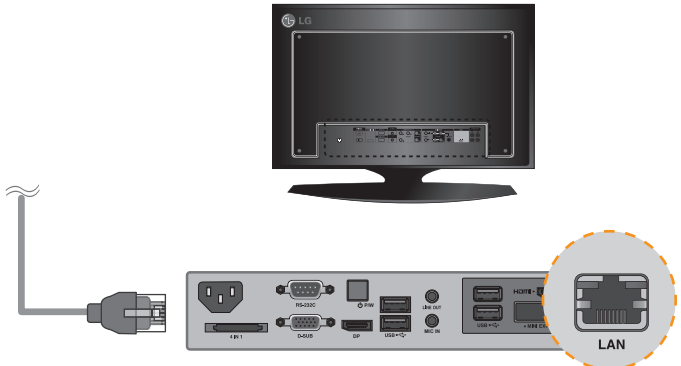


NC1100/NA1000/
NA1100

Connecting/Disconnecting HDMI Audio Device in Windows


Connecting HDMI Audio Device

Move to the desktop of the monitor connected to the NC1100/NA1000/NA1100.

- 1 Click the  button in the lower left of the screen.
- 2 Select **Start > Control Panel > Sounds and Audio Devices > Audio**.
- 3 Select **Play Sounds > Intel(R) Display Audio Output 1** from the list and click **OK**.

Disconnecting HDMI Audio Device

Move to the desktop of the monitor connected to the NC1100/NA1000/NA1100.

- 1 Click the  button in the lower left of the screen.
- 2 Select **Start > Control Panel > Sounds and Audio Devices > Audio**.
- 3 Select **Play Sounds > Realtek HD Audio output from the list** and click **OK**.

Connecting/Disconnecting HDMI Audio Device in Windows Embedded Standard 7 E,P

- 1 Select **Start > Control Panel > Hardware and Sound > Sound**.
- 2 Click the **Play** tap first. Right-click on the **HDMI device** or **speakers** you want and select **Set as Default Device** then click **OK** to connect the HDMI audio device or select **Disable** to disconnect it.
 ※ In order to change the audio devices, you must restart the computer.

Attention


- If you do not reset after disconnecting the HDMI cable from the NC1100/NA1000/NA1100, the sound will not work.
- In order for the sound to work properly, stop playing the content and restart the NC1100/NA1000/NA1100.

Connecting a Monitor with DP Cable


Attention

To enable DP connection, the monitor that will be connected to NC1100/NA1000/NA1100 must support the DP input port.


- 1 Connect the appropriate power cables to a monitor and NC1100/NA1000/NA1100 respectively.

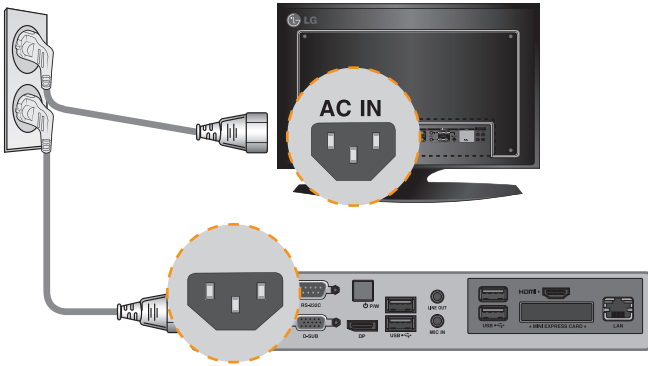


- 1 Connect NC1100/NA1000/NA1100 to the monitor via a DP cable.

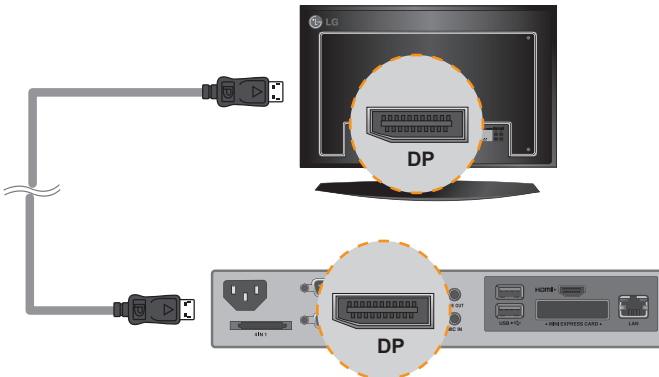


3 Connect NC1100/NA1000/NA1100 (OUT) to the monitor (IN) with an RS-232C cable.

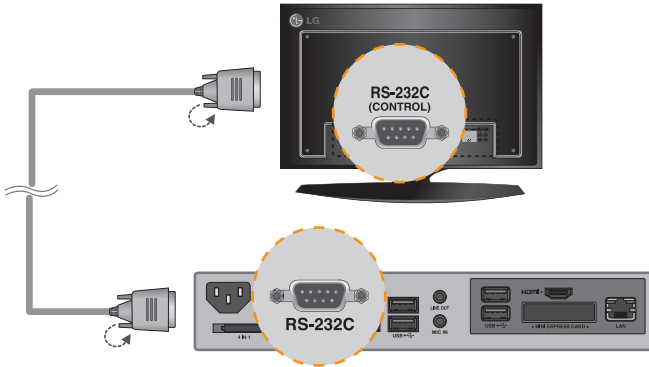

4 Connect the NC1100/NA1000/NA1100 to the monitor with a LINE-OUT cable.

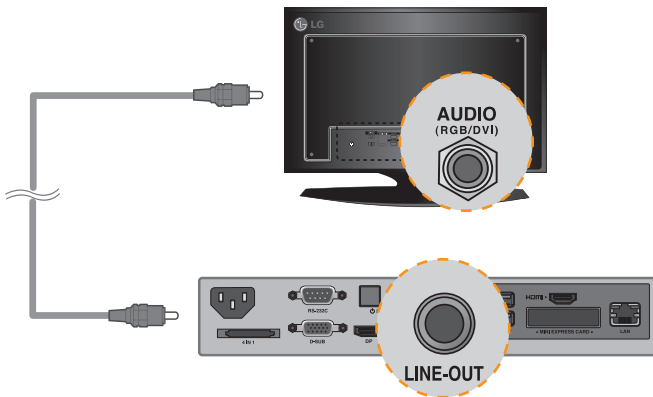

- 5 Connect a LAN cable to NC1100/NA1000/NA1100.

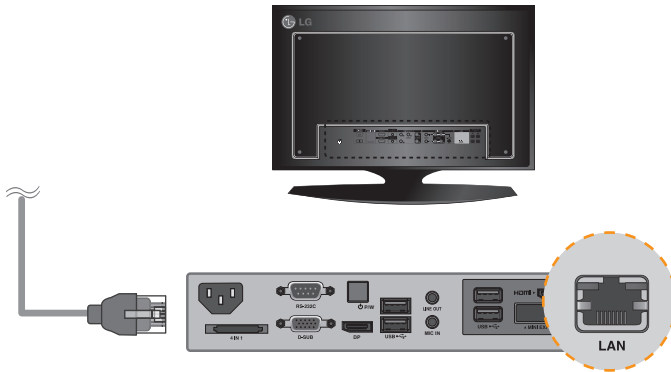

Attention

- NC1100/NA1000/NA1100 prioritizes video output in the following order: RGB → DP → HDMI. If you connect multiple cables simultaneously and turn the product on, video output is prioritized accordingly.
- When the product is turned on after cable connection or the operating system is completely booted, DP and HDMI video output start operating.
- The product does not support a dual mode where DP can be switched either to HDMI or DVI. It is only for DP output.
- The display port (DP) of the NC1100, NA1000 and NA1100 does not support digital audio output. It is recommended to use it with a line-out cable for analog audio output.

Connection to Multiple Monitors

Each NC1100/NA1000/NA1100 can accommodate up to 25 monitors for video playback. (SET ID: 1 to 25)

- 1 Connect the NC1100/NA1000/NA1100's **D-sub OUT** to the **D-sub IN** of the first monitor, which has **SET ID = 1**.
- 2 Connect other monitors with **D-sub** cables as shown below (**IN/OUT** separated).



- 3 Connect the NC1100/NA1000/NA1100's **RS-232C OUT** to the **RS-232C IN** of the first monitor, which has **SET ID = 1**.
- 4 Connect other monitors with RS-232C cables as shown below (**IN/OUT** separated).



Attention

- You may want to purchase additional RS-232C cables to use several monitors together.
- You cannot use multiple monitors with the HDMI cable.

Specifications

Attention

- Product specifications may change without prior notice to improve performance.

General Specifications

Dimensions	99 mm (W) x 179 mm (H) x 28.5 mm (D) (only Set)
Weight	0.288 kg (only Set)
CPU(NC2100)	Intel® Celeron® Processor P4500 (2M Cache, 1.86 GHz)
CPU(NA2000)	Intel® Core™ i7-620M Processor (4M Cache, 2.66 GHz)
CPU(NA2100)	Intel® Core™ i5-520M Processor (3M Cache, 2.40 GHz)
Chip Set	Mobile Intel® QM57 Express Chipset
Main Memory	DDR3 1066 SODIMM type 1 GB, 2 GB
Secondary Storage Device	SATA SSD 8 GB, 16 GB, 32 GB, 64 GB
O/S	Windows Embedded Standard

Multi I/O Port

Serial Port	N/A
USB Port	Hi-Speed USB 2.0 port 480 Mbps rate (x2)
LAN Port	Intel® 82577 Gigabit Ethernet PHY
VGA / HDMI / DP	Intel® HD Graphics Controller
4-in-1 Card	N/A
PCI Express Card Slot	Supported
LINE OUT	N/A
MIC IN	N/A




Operational Specifications

Resolution	Maximum Resolution	1920 x 1080 @ 60 Hz			
	Recommended Resolution	1920 x 1080 @ 60 Hz			
Power	Rated Voltage	12 V $\overline{\text{---}}$ 4.5 A			
Operating Condition		Sync (H/V)	Video	LED	
	Normal Mode	On/On	Active	On	
	Deep Sleep Mode (Set = Off)	Off/Off	Off	Off	
Operating Conditions	Operating Conditions	Temperature	5 °C to 40 °C	Humidity	10 % to 80 %
	Storage Conditions	Temperature	-20 °C to 60 °C	Humidity	5 % to 95 %

Included in the Box

Basic Components

The NC2100/NA2000/NA2100 consists of the following components. Please check that these components have been included prior to installation.

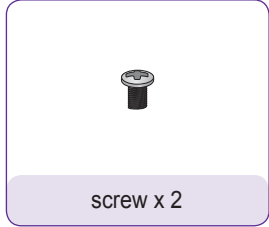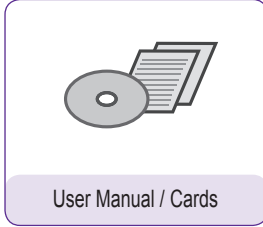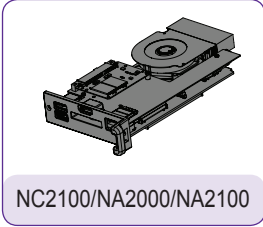

Attention

These illustrations may differ from your product and are subject to change.

Attention


The NC2100/NA2000/NA2100 model is compatible with the following models.
Applicable models: 32VS10, 42VS10, 47VS10

Attention

Without prior notice, applicable models for NC2100/NA2000/NA2100 are subject to change to improve the performance of the product.

Connections

Back Panel

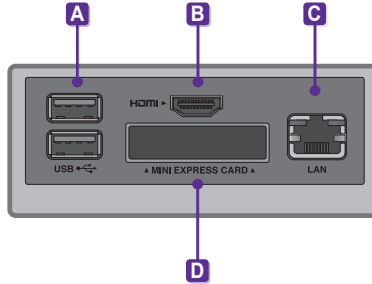

Number	Connection	Description
A	USB In	For USB-type devices, including memory, hard disk, CD-ROM, keyboard, and mouse.
B	HDMI Out	For an HDMI-compatible monitor.
C	LAN Connector	For a LAN cable.
D	PCI MINI EXPRESS Card Slot	Provided for PCI Mini Express Cards.

Installation


We recommend you to use the items provided with your NC2100/NA2000/NA2100 and follow our instructions for integrating the product with your monitor in order to ensure the correct results.

Attention


The illustrations shown are to guide your integration and may differ from your product.

NC2100/NA2000/
NA2100

- 1 Remove the screw and Metal cover.

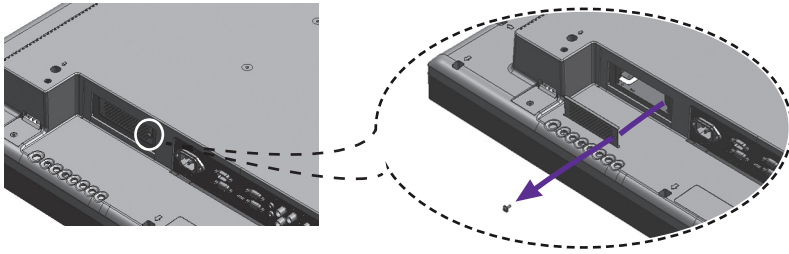


- 2 Attach the Box Guide to the rail slots, and press it upward.

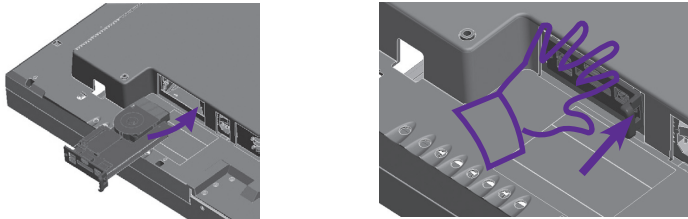

Note

If card does not become fully inserted into the insertion direction.
Hit by hand carefully to make fully connected.

- 3 Use screws to secure the player and the Box Guide as shown below.


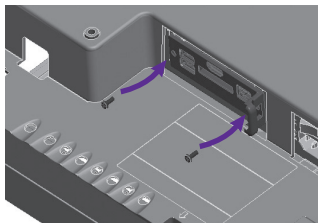


Limitations of Microsoft Windows Embedded Standard

The following are potential errors that may occur due to internal limitations of Microsoft Windows Embedded Standard, which is the OS of SuperSign Player.

- If you press **Alt + Enter** on the DOS window, text other than English may be shown corrupted.
- If you use **Save As** function in the **Print** window, the menu window name will be displayed in English.
- When you move to sub-menu items such as Control Panel, some of the items, such as hyper terminal, country and language setting, will be written in English.

Frequently Asked Questions (FAQs)

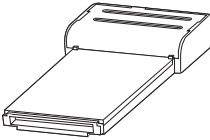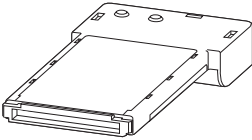Question	Answer
Where can I download the driver file?	<ul style="list-style-type: none"> • You can obtain the file from the SuperSign Support website (http://www.lgsupersign.com).
The Express Card does not work. What should I do?	<ul style="list-style-type: none"> • For NC1000/NC2000, insert the Express Card with the top side facing upward. (See Figure 1) • For NC1100/NA1000/NA1100/NC2100/NA2000/NA2100, insert the Express Card with the bottom side facing upward. (See Figure 2) <div style="text-align: center;">   </div> <p style="text-align: center;"> < Figure 1 > < Figure 2 > </p>
Where can I get a vaccine program?	This media player comes packaged with the Windows program only. Please purchase a vaccine program separately for use.



Make sure to read the Important Precautions before using the product.

Keep the User's Guide(CD) in an accessible place for future reference.

The model and serial number of the SET is located on the back and one side of the SET. Record it below should you ever need service.

MODEL _____

SERIAL _____

WARNING - This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Temporary noise is normal when powering ON or OFF this device.