



USER MANUAL

LG Lifeband Touch

To maximize the full functionality of the LG Lifeband Touch, please read the user manual carefully.

Model : FB84-BM / FB84-BL / FB84-BX / FB84-SM /
FB84-SL / FB84-SX / FB84-RM / FB84-RL /
FB84-RX

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

This device is not intended to diagnose, treat or prevent any disease or medical condition. Always seek the advice of a qualified professional before making any changes to your exercise, sleep or nutrition.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment:

Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Do not remove battery incorporated with product for your safety. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.

NOTICE: For safety making information including product identification and supply ratings, please refer to the main label on the rear of the apparatus.



Caution

CAUTION when using this product in environments of low humidity

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

For Wireless product European Union Notice

CE 0197

LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC, 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Please contact to the following address for obtaining a copy of the DoC (Declaration of Conformity).

Contact office for compliance of this product :

LG Electronics Inc.

EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

- Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Disposal of waste batteries/accumulators



1. When this crossed-out wheeled bin symbol is attached to batteries/ accumulators of Your product it means they are covered by European Directive 2006/66/EC.
2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
4. The correct disposal of Your old batteries/ accumulators will help to prevent potential negative consequences for the environment, animal and human health.
5. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:


Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol ⏏ or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE:** As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

 **Warning**

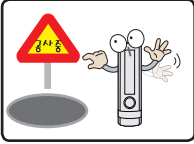


Be aware of obstacles and approach with caution when using this device.

- Obstacles carry the risk of injury.




Keep the device away from children.

- This device may pose the risk of injury to children.

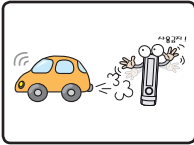


Do not use your device while driving.

- Store the device in a safe place.

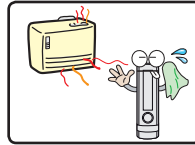

Do not place the device and accessories near/in heating appliances.

- It may cause deformation.

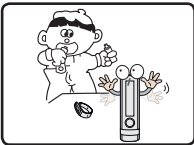


Do not let children put the device in his/her mouth.

- Children may swallow a small part of the device in curiosity because the parts are small. When the child swallows the part, see a doctor immediately after giving first-aid.
- There is a danger of electric shock or damage of the product.




Disconnect the AC adapter and the cable in case of lightning or thunder.

- Otherwise, an electric shock may occur.

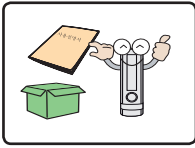**Caution**


Read the web manual and quick guide offered in the box before using the device.

- Otherwise, there is a possibility of malfunction or failure of the product.

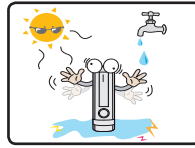


Do not soak the product in the water.

- There is a danger of electric shock or failure.

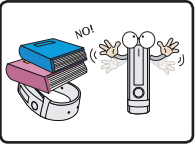


Do not place an object on the product.

- It may cause failure.

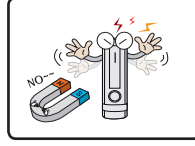


Do not place the device near a magnet or within the magnetic field.

- It may cause failure.

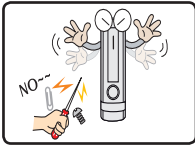

Do not disassemble, repair, or remodel the product.

- There is a danger of damage or failure.

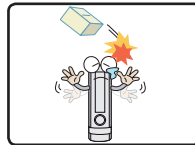

Do not drop an object or give shock on the product.

- LCD may be broken.
- There is a danger of damage or failure.

- Dry off the water before wearing the wristband. It can cause skin irritation or itchiness.
- Do not perform Bluetooth operation near medical appliances, because it may cause electromagnetic interference.
- Follow all posted warnings and directions from authorized personnel in areas where the use of wireless devices is restricted, such as airplanes and hospitals.
- LG Lifeband Touch does not support tablet products and may malfunction with some smartphones.

Maintenance

Cleaning the device

- Clean the device with soft and dry cloth.
- Do not use strong chemical that include alcohol, such as benzene, thinner, FLUX, oil.

Handling the device

- Handle the device as carefully as possible and not to expose it to water. This device is not designed to be used underwater or come into continuous contact with water.
- This device features a liquid contact indicator that changes color when it comes in contact with water. In this case, the warranty may be voided.
- Do not use a screen protector. This causes sensor malfunctions.
- Do not allow water to contact the touch screen. The touch screen may malfunction in humid conditions or when exposed to water.

Table of Contents

1 Before Using

- 2 Safety Information
- 7 Maintenance

2 Using the LG Lifeband Touch

- 10 LG Lifeband Touch is your friend
- 10 Package Contents
- 11 Product Overview
- 12 Charging battery
 - 12 - Using the USB charging dock
 - 12 - Checking battery status
 - 13 - Checking battery charging status
 - 14 - Battery charging time and average battery usage time
 - 14 - Low Battery Warning
- 14 Choose your size
- 15 Wearing the LG Lifeband Touch
 - 15 - Using Gesture function

3 Starting the LG Lifeband Touch App

- 16 Device registration and sign up
 - 16 - Step 1 Installing the LG Fitness app
 - 16 - Step 2 Device registration
 - 17 - Step 3 Sign Up
- 18 - Reconnecting Bluetooth

4 Operating the LG Lifeband Touch

- 19 Check the function of the button
- 19 - Bluetooth connection setting
- 19 - Select Orientation (Left or Right)
- 20 - Turning off power
- 20 - Auto Restarting
- 21 OLED touch display information
- 21 - Changing the mode
- 22 Mode Overview
- 22 - Time mode
- 23 - Activity mode
- 24 - Music control mode
- 25 - Using Workout
- 28 Alert
- 28 - Checking an incoming call
- 30 - Checking the received message (Android only)
- 31 - Checking Alarm
- 31 - Notification message information
- 32 Updating LG Lifeband Touch firmware
- 34 LED Indications

5 Using the LG Lifeband Touch App

- 35 How to use LG Fitness app
- 35 - Home menu
- 37 - Activity
- 39 - Workout
- 40 - More

6 Support

- 45 Frequently Asked Question (FAQ)
- 47 Smartphone compatibility list
- 47 Open source software notice
- 48 Specifications

1

2

3

4

5

6

LG Lifeband Touch is your friend

- LG Lifeband Touch helps you to check daily activity goal achievement rate and consumed calories in real time for effective management by offering your hourly activity pattern, range and goal achievement progress.
- LG Lifeband Touch shows not only the activity record in specific time(time, calories, step, speed, pace) but also detailed information such as the activity course, speed, pace graph using the app.
- LG Lifeband Touch informs you of incoming and missed calls & message but also time, date and remaining battery in real time, and allows to control the music in your smartphone. But, iOS does not inform you of message reception.
- LG Lifeband Touch can be connected to your smartphone via Bluetooth(Bluetooth 4.0 LE). The smartphone model compatible with the App can be added or changed depending on the phone manufacturer.


How LG Lifeband Touch works

- LG Lifeband Touch can detect movement using tri accelerometer and altimeter. And calculate user's consumed calories base on the user's body information such as height, age, weight and gender by analyzing user's everyday activity such as steps, distance, time and intensity.
- LG Lifeband Touch motivates you to work out by sending you messages along with vibrations, when you're reaching your goal or have been sedentary for long.

Package Contents




LG Lifeband Touch

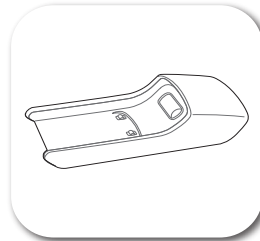

USB charging dock




USB cable

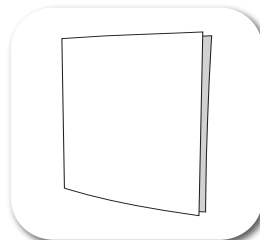

Quick setup guide/
Warranty card

Product Overview

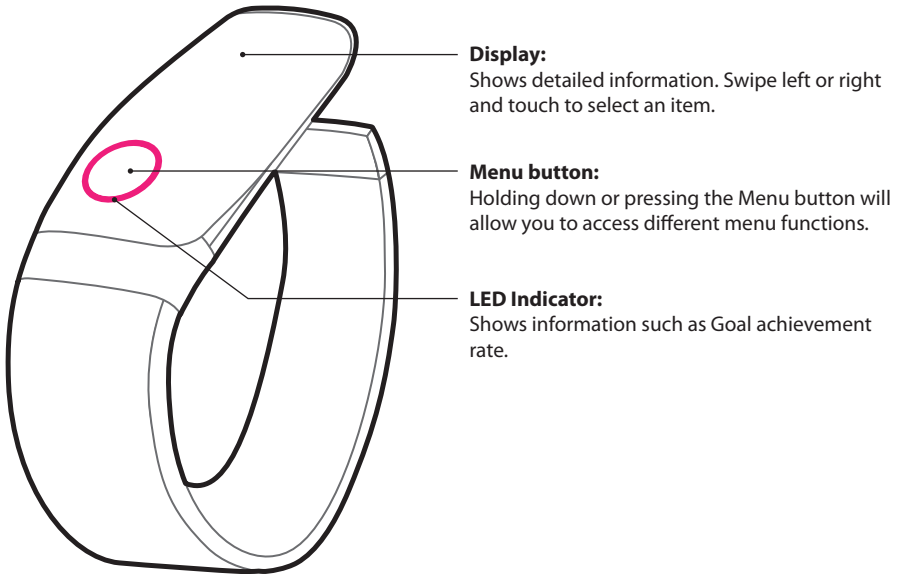

Note


When powering on the LG Lifeband Touch for the first time, press and hold the Menu button for 2 seconds.

Charging battery

Using the USB charging dock

You can charge LG Lifeband Touch using the USB charging dock.

1. Connect the USB charging dock to LG Lifeband Touch.
2. Connect the USB cable to the USB charging dock.
3. Connect the USB cable to the adapter.

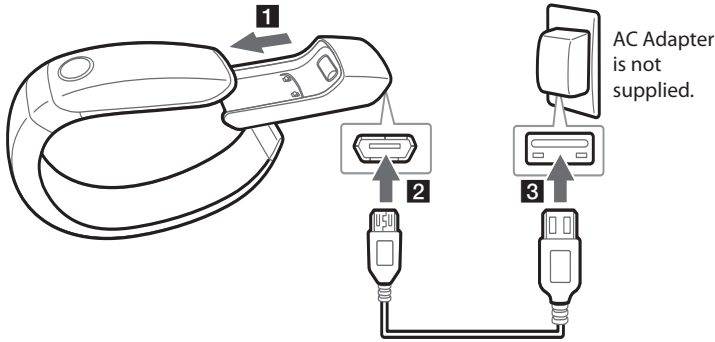

4. Battery starts charging and the device shows battery indicator.

! Note

- Fully charge the device before using for the first time or after long period of non-use.
- The battery can be charged even if LG Lifeband Touch is connected to PC using the USB cable.
- To charge this product, you must always use a USB port/adaptor rated at 100mA or higher.













Checking battery status

1. Press Menu button to select Time mode.
2. Swipe the screen in Time mode to check remaining battery.

Battery Status	Battery indicator	LED indicator	Battery Status	Battery indicator	LED indicator
Less than 10 %		 Red / Blinks.	Less than 60 %		-
Less than 20 %		-	Less than 80 %		-
Less than 40 %		-	more than 81 %		-

Checking battery charging status

Check Battery icons on the displays as below during charging.

Battery Status	Battery indicator	LED indicator
Less than 20 %	 → 	 Red / Turned on during charging.
Less than 40 %	 → 	
Less than 60 %	 → 	
Less than 80 %	 → 	
Less than 99 %	 → 	
Charged		LED Indicator off

! Note

- LED indicator blinks when battery is low. Please charge.
- LG Lifeband Touch automatically turns off when the battery is empty.
- Fully charge the device before using for the first time or after long period of non-use.
- If you use USB HUB, the battery may not be charged.
- Operating temperature of LG Lifeband Touch is -15 °C ~ 45 °C. The battery capacity may decrease if you use in too high or low temperature.
- If the temperature is too low or high, the device may not be charged, charge again at the room temperature. (10 °C ~ 45 °C)


Battery charging time and average battery usage time

Battery charging time and average battery usage time may vary depending on the battery charging status, operational status and environment conditions.


Battery charging time	3 hours to fully charge battery
Average battery usage time (when fully charged)	If the smartphone is not connected (when the Bluetooth is disconnected) : approximately 5 days
	If the smartphone is connected : approximately 2 days (when the Bluetooth is connected)

Low Battery Warning

LED Indicator blinks red when remaining battery is less than 10%.




LG Lifeband Touch is turned off with [TURNING OFF] message when the battery is empty.



Choose your size


LG Lifeband Touch's size is different depending on the model. Please check before purchasing. You can choose the size of LG Lifeband Touch to fit your wrist.

FB84-BM,SM,RM

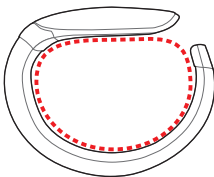


Circumference
166 mm

FB84-BL,SL,RL

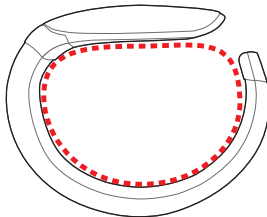

Circumference
181 mm


FB84-BX,SX,RX

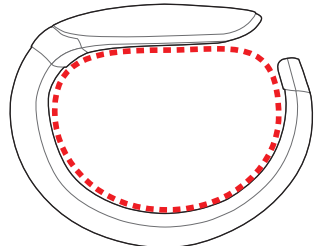

Circumference
196 mm

Wearing the LG Lifeband Touch

Stretch the tip of the band and slide it over your wrist. Face the open end towards the outside for a more comfortable fit.

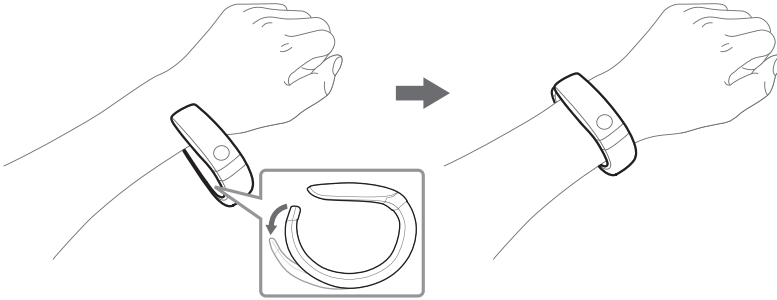


! Note

Do not bend or open excessively. The product may be damaged.

Using Gesture function

Make a gesture as if to look at the watch after wearing LG Lifeband Touch. The screen turns on automatically. The screen turns off when you bring your arm down.

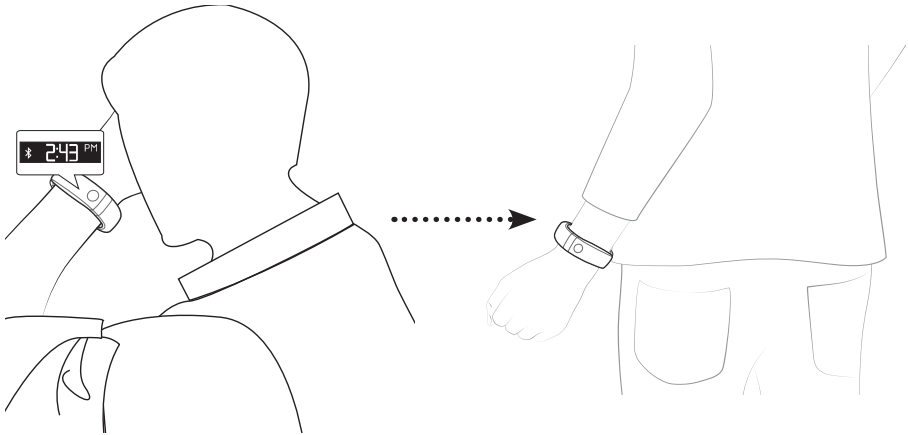

! Note

You can set [Automatic screen on/off] in [More → LG Lifeband Touch Settings] on LG Fitness app. Refer to the description about Enable Gestures function on LG Lifeband Touch settings. (Refer to page 41.)


Device registration and sign up

Step 1 Installing the LG Fitness app



1. Search for "LG Fitness" in Play Store (Android phone) or App Store (iPhone).
2. Install "LG Fitness" app.

Step 2 Device registration

1. Run the "LG Fitness" app.
2. Touch [Sign Up] in the screen.
Select [Sign In] if you have already signed up or want to log in with your facebook ID.

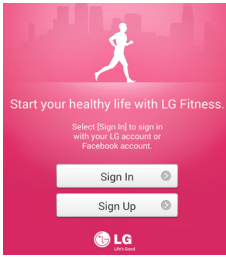

3. Set Bluetooth setting to "Enable" or "On" before searching for the device.
4. Be sure that LG Lifeband Touch and Bluetooth are turned on and select [Search] of [LG Lifeband Touch] tab on the LG Fitness app.
5. [Pairing? → YES | NO] appears on the screen. Touch [YES].

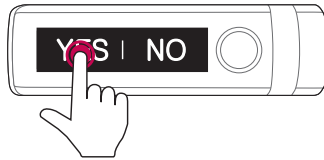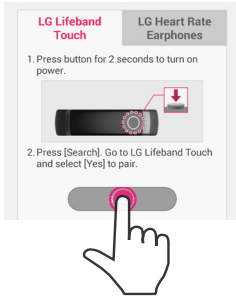

6. Once the device registration is complete, [Paired] appears on the screen.

Note

- The way of Bluetooth setting may differ depending on the smartphone manufacturer.
- To connect with the smartphone, touch [YES] within 10 seconds. In case that the connection has failed, repeat step 4 and step 5.
- When using Bluetooth® technology, you have to make a connection between the LG Lifeband Touch and the smartphone and stay in range.
- Bluetooth uses the same frequency as some industrial, scientific, medical, and low power products and interference may occur when making connections near these types of products.
- LG Electronics is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth feature.

Step 3 Sign Up

* Enter each of the items and select [Next] to go to next page.


1. Select the country and agree with terms and conditions.
2. Enter the email ID and password to use.
3. Enter your gender, birthday, height and weight.
4. Set your Daily goal.

Note

- You can change daily goal on [Home] or [More] whenever you want.
- Once you select the country, It can not be changed without reinstallation of the App when you sign up for LG Fitness app account. To change your email adress and the country, reinstall the app after uninstalling.
- LG Electronics have no responsibility for the service quality or legal issues in case that the country you selected differs from the country you use the device in.
- If you do not agree with terms and conditions, service is limited.

Reconnecting Bluetooth

- To reconnect to the smartphone, turn the Bluetooth setting [OFF] and [ON] again by pressing and holding the Menu button for 2 seconds when the app is running.




- Pairing is kept even if the Bluetooth connection on your smartphone is turned off and on again.


Check the function of the button

Bluetooth connection setting

1. Press and hold Menu button for 2 seconds after turning on the LG Lifeband Touch.
2. [BLUETOOTH] appears with first vibration.

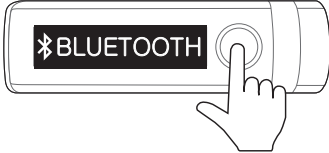

3. Touch [ON] or [OFF] on the screen.

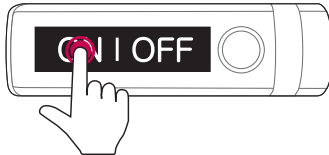

- To connect LG Lifeband Touch with your smartphone, select [ON]. Bluetooth icon appears on the display when the device is connected with the smartphone.



- To use LG Lifeband Touch without connection to your smartphone, select [OFF]. (Use for battery saving)


Note

When you purchase and first turn on LG Lifeband Touch, Bluetooth is already turned on and is ready to pair with a smartphone.


Select Orientation (Left or Right)

Measurement algorithm and on-screen display is optimized according to different orientation.

1. Press and hold the menu button for 4 seconds after turning on the LG Lifeband Touch.
2. [L/R WRIST] mode appears with the second vibration.

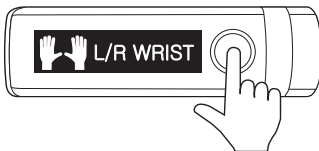


3. Touch [LEFT] or [RIGHT] on the screen.

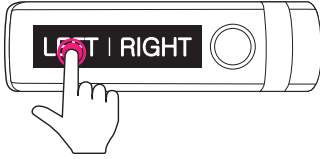


Turning off power

1. Press and hold Menu button for 6 seconds after turning on the LG Lifeband Touch.
2. [POWER] mode appears with third vibration.

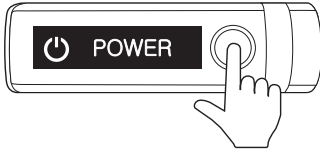

3. Touch [OFF] on the screen to turn off the power.

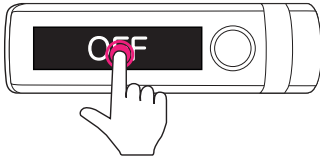

! Note

Press and hold the menu button for 2 seconds to turn on LG Lifeband Touch.

Auto Restarting

In case there is an error and device stops functioning, press and hold the menu button for about 10 seconds.



! Note



The clock screen and saved data remains even if the device restarts and synchronizing automatically starts.

OLED touch display information

Changing the mode

Press the menu button to turn screen on.

Press the menu button again to navigate through 3 types of modes.

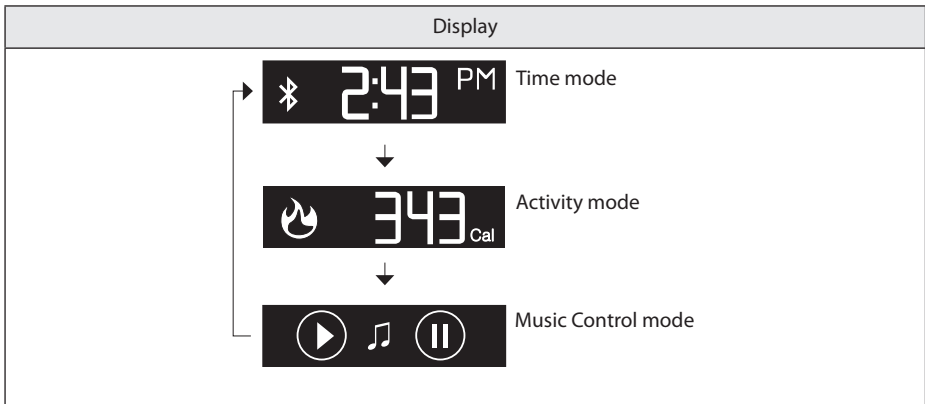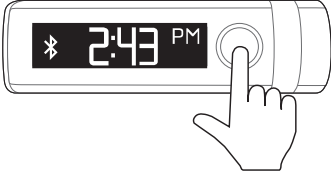


! Note

- LG Lifeband Touch should be connected to your smartphone at least once to display Time and date.
- LG Lifeband Touch should be connected to your smartphone via Bluetooth to control the Music.

Mode Overview

Time mode

To change modes, swipe the display screen.

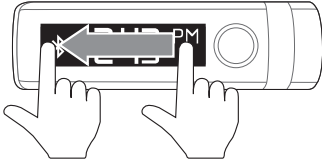



- **Time:** It displays time. The alarm icon appears if you set an alarm on the LG Fitness app. The Bluetooth icon appears if LG Lifeband Touch is connected to your smartphone via Bluetooth.
- **Date:** It displays today's day and date.
- **Battery life:** It displays remaining battery life. For more detail, refer to Checking battery status. (Refer to page 12.)

! Note

- Swipe screen in opposite direction to see modes in reverse order.
- LG Lifeband Touch should be connected to your smartphone at least once to display time and date.
- You can change the time display format setting displayed on LG Lifeband Touch On LG Fitness app. [Run the App ➔ More ➔ LG Lifeband Touch settings] (Refer to page 41.)

Activity mode

To move to Total burned calories / Goal burned calories / Goal achievement rate, Total distance, Number of steps or [START] of Workout, swipe the screen. Touch [START] to start Workout.

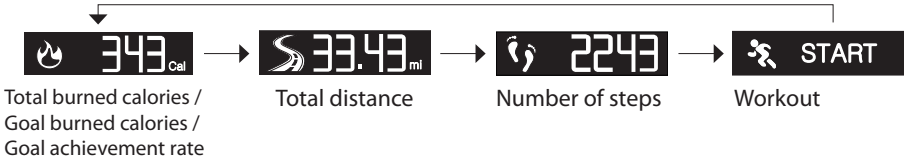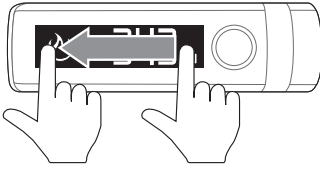

• **Total burned calories / Goal burned calories / Goal achievement rate :**

To display your Goal burned calories or Goal achievement rate, touch the screen when Total burned calories is displayed.



- **Total distance:** Shows today's total distance so far.
- **Number of steps:** Shows today's total step so far.
- **Workout:** To start workout (Interval measurement), touch [Start].



Note

- Swipe screen in opposite direction to see modes in reverse order.
- You can change your Daily Goal in LG Fitness app. [Run the app ➔ Home ➔ Change Goal]. (Refer to page 36.)
- LG Lifeband Touch's LED Indicator color is changed depending on the goal achievement rate. Refer to LED Indications. (Refer to page 34.)

Music control mode

You can control the volume of the music in your smartphone connected via Bluetooth on the LG Fitness app.

To change the display items in a mode, swipe the display screen.

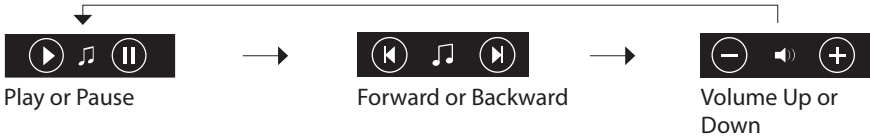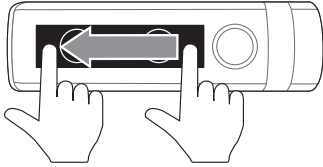

- **Play or Pause:** Press to play or pause.
- **Forward or Backward:** Press to play previous or next music.
- **Volume Up or Down:** Controls the volume level of the music being played.


! Note

- Swipe screen in opposite direction to see modes in reverse order.
- To control the music, your smartphone should be connected via Bluetooth.
- To control the music with LG Lifeband Touch, check [Music control user settings] on LG Fitness app.(Refer to page 41.)
- On the LG Fitness app, you can select and play the music you want to listen when you workout. [Run the App → Home → Music selection], [Run the App → Workout → Listening music] (Refer to page 35 and 39.)
- You can only control the general music player on the smartphone.

Using Workout

You can check various workout information in Workout mode.

1. Press Menu button to select Activity mode.
2. Swipe the screen on the Activity mode to select [START].
3. Touch [START] to start Workout Mode.
To check the various workout information, swipe the display screen.
4. Once Lifeband Touch is connected to the mobile app, start workout mode to begin.

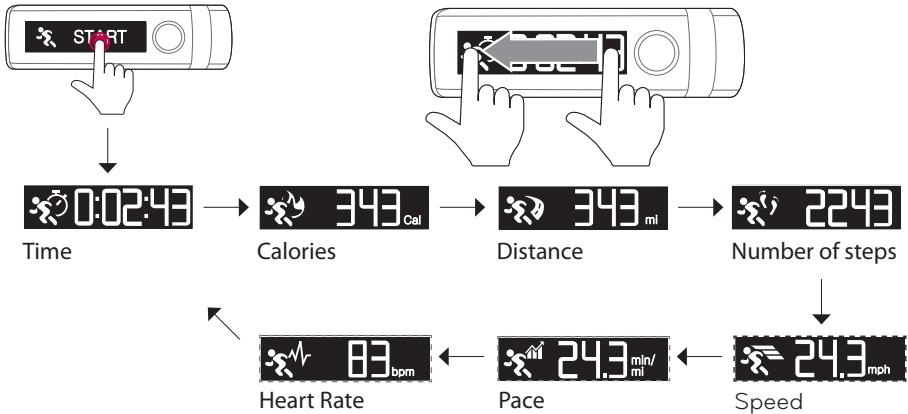

- **Time:** Shows total workout time.
- **Calories:** Shows total burned calories during workout.
- **Distance:** Shows total workout distance.
- **Number of steps:** Shows total workout steps during workout.
- **Speed:** Shows instantaneous speed during workout.
- **Pace:** Shows current pace during workout.
- **Heart Rate:** Shows current heart rate during workout. The heart rate measuring device should be connected via Bluetooth to measure the heart rate.


! Note

- Swipe screen in opposite direction to see modes in reverse order.
- The workout is stopped automatically 10 hours after starting.
- The display setting such as speed, pace and heart rate is available on LG Fitness app. [Run the App → More → LG Lifeband Touch settings] (Refer to page 41.)


Short cut to the workout heart rate screen

You can jump to the workout heart rate screen from workout information screen.

1. Touch and hold the screen In the Workout menu.

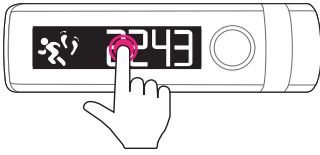

2. Light Blue LED Indicator blinking means that your heart rate is being measured.



3. When measurement is completed, the current heart rate is displayed on the screen, and the heart rate zone is displayed on LED Indicator.




! Note

- On LG Fitness app, You can decide whether the heart rate should be displayed or not. [More → LG Lifeband Touch settings] (Refer to page 41.)
- Short cut to the workout heart rate screen is available in only Workout mode.
- The heart rate measuring device should be connected via Bluetooth to measure the heart rate.

Exit from the Workout mode

Exits from the Workout mode and returns to the Activity mode.


1. [STOP PAUSE] appears when you touch or cover the screen with your hand in workout mode.
2. To complete Workout mode, touch [STOP].

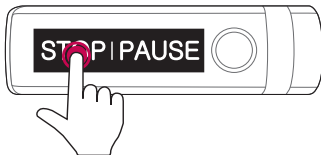


Pause and resume Workout

You can pause and resume the workout mode.

1. [STOP PAUSE] appears when you touch or cover the screen with your hand in workout mode.
2. To pause Workout mode, touch [PAUSE].

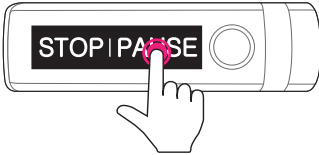

3. To resume to Workout mode after pausing Workout mode, touch [RESUME].

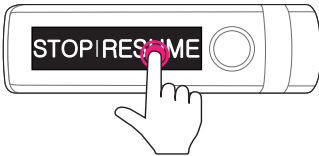

Note

- [STOP PAUSE] disappears if you don't select the button within 3 seconds.
- The measurement continues even while [STOP PAUSE] is being displayed.


Alert

LG Lifeband Touch provides a multitude of notifications: incoming calls, text messages, personal alarm clock, goal achievement, bluetooth connection, and battery status.

LG Lifeband Touch should be connected to your smartphone via Bluetooth to check Alert function.

Checking an incoming call

You can be notified of an incoming call using the LG Lifeband Touch.

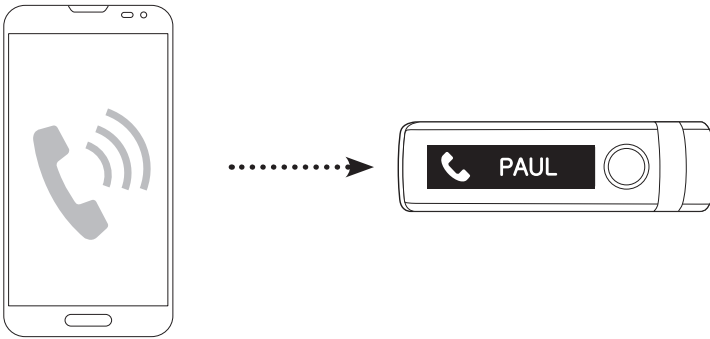

Sender	Screen (Android phone)	Screen (iPhone)
Registered Caller		
Unregistered Caller		
Unknown Caller		

! Note

- The display shows up to 13 letters, numbers, symbols. In case of Korean, up to 9 letters can be displayed.
- In case of iPhone, the caller's number and information are not displayed.
- The text used in this function may be replaced with the icon depending on the device or OS.

Converting to mute mode(Android only)

Touch or cover the display when receiving a call.
LG Lifeband Touch converts to mute mode automatically.

Checking a missed call(Android only)

The missed calls are displayed as [MISSED] on LG Lifeband Touch. You can check the information of each call. The displayed number of the missed call decreases whenever you check the missed call information.




Note

- If the number of the missed call you have not checked is more than 10, these are displayed as [MISSED 9+].
- The missed calls are displayed as [MISSED] on LG Lifeband Touch
- Touch the screen to see the latest missed call information, and touch the screen again to display the next missed call information.
- Press the menu button to delete all missed call information.
- LG Lifeband Touch does not support handsfree function. You cannot receive or end a call with the LG Lifeband Touch.

Checking the received message (Android only)

You can check the received message using LG Lifeband Touch. To delete displayed notification, touch the screen.

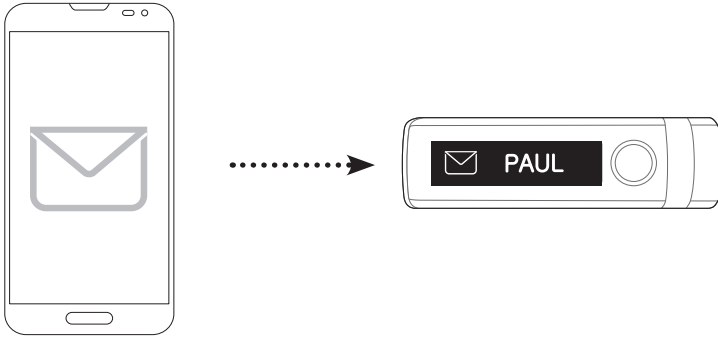

Sender	Screen
Registered Sender	
Unregistered Sender	
Unknown Sender	

! Note

- The message you have not yet checked by LG Lifeband Touch are displayed on the screen as [NEW].
- Touch the display. The latest message or phone number and reception time is displayed. To check the next message information, touch the screen again.
- To delete the new messages information, press the menu button.
- The text used in this function may be replaced with the icon depending on the device or OS.

📄 Checking new messages

The message you have not yet checked by LG Lifeband Touch are displayed on the screen as [NEW]. You can check the caller's number and information. The number behind [NEW] decreases after checking.



! Note

[NEW 9+] is displayed when you have more than 10 new messages.

Checking Alarm


You can set the alarm from LG Lifeband Touch on the app.

Go to [More ➔ Vibration alarm] on LG Fitness app.

If you touch or cover the screen with your hand when the alarm is ringing, [STOP] appears.

Touch [STOP]. The alarm will turn off.

If you do not turn off the alarm, the snooze function works.

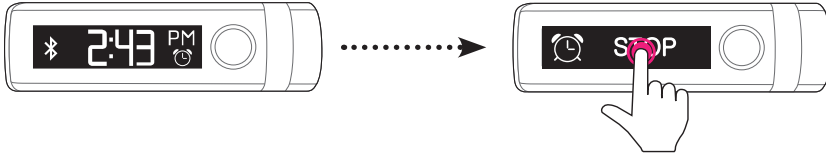

Note

- Lifeband Touch will vibrate at the time you set the alarm.
- For more details about setting the alarm, refer to [More ➔ Vibration alarm] on LG Fitness app (Refer to page 42.)

Notification message information

The notifications about the activity status, goal achievement, Bluetooth disconnection and battery life are displayed.


Conditions	Notification	Vibration
Prolonged sedentary time and physical activity	MOVE MOVE!	Two times short vibration
	STRETCH NOW!	
Goal Achievement	25% ACHIEVED	
Bluetooth Disconnected	BLUETOOTH	One time long vibration (Cautionary notice)
Need to sync.	NEED SYNC	
Lack of the battery	10%	

Updating LG Lifeband Touch firmware


An LG Lifeband Touch update will be made available if the firmware is improved or new functions are added.

When the latest version of firmware is listed on the server, the app informs you that an update of LG Lifeband Touch is available.


1. [Lifeband Touch Updates] window appears if there is an available update when running the application.
2. Select [Update Now] to update LG Lifeband Touch.

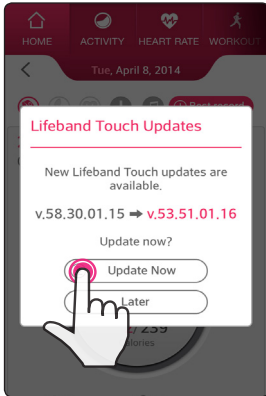

3. Synchronizes with LG Lifeband Touch and the update file is downloaded from the update server.

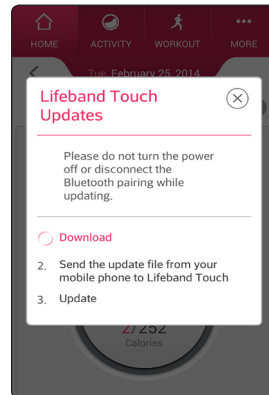

4. The file is transferred to LG Lifeband Touch from your smartphone.

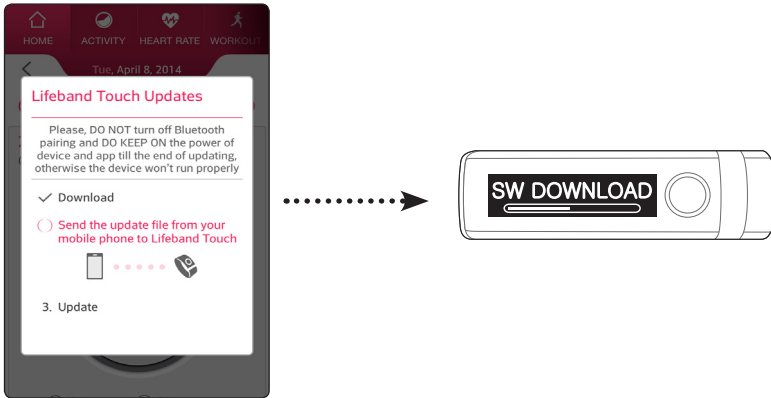

5. The update of LG Lifeband Touch is performed.



6. Once the update is completed, [Finished] appears on display screen of LG Lifeband Touch.


















7. Check [Update complete] and touch [Close] to close LG Lifeband Touch update window.

! Note

- You cannot downgrade LG Lifeband Touch to previous version.
- Do not turn off Bluetooth when updating LG Lifeband Touch. Do not turn off the app forcibly.
- Internet network should be available to update LG Lifeband Touch.
- When upgrading your device, be sure to fully charge your smartphone and LG Lifeband Touch.

LED Indications


Performance	LED indicator
Ready to pair	 Violet / Blinks.
Paired	 Violet / Fade in and out
Battery	LED indicator
Low (less than 10%)	 Red / Blinks.
Charging	 Red / Turned on dimly.
Charged	 LED off / When pressing MENU button, LED indicator turns Green.
Target Achievement Rate	LED indicator
1 ~ 50 %	 Red / Fade in
51 ~ 80 %	 Yellow / Fade in
81 ~ 99 %	 Green / Fade in
100 %	 Green / Blinks.
Heart rate measurement	LED indicator
Heart rate is being measured	 Light Blue / Blinks.
Warm Up	 Light Blue / Turned on during LED Indicator display time.
Endurance	 Blue / Turned on during LED Indicator display time.
Aerobic	 Green / Turned on during LED Indicator display time.
Anaerobic	 Yellow / Turned on during LED Indicator display time.
High intensity	 Red / Turned on during LED Indicator display time.

How to use LG Fitness app

- You can check your activity and workout record measured by LG Lifeband Touch.
- It helps you to manage your activity systematically by offering the hourly activity pattern, activity distribution and goal achievement progress.
- It motivates you to workout by informing you whenever you break your personal record.

Home menu

You can check your activity, workout record and total record measured by all of LG Fitness products.

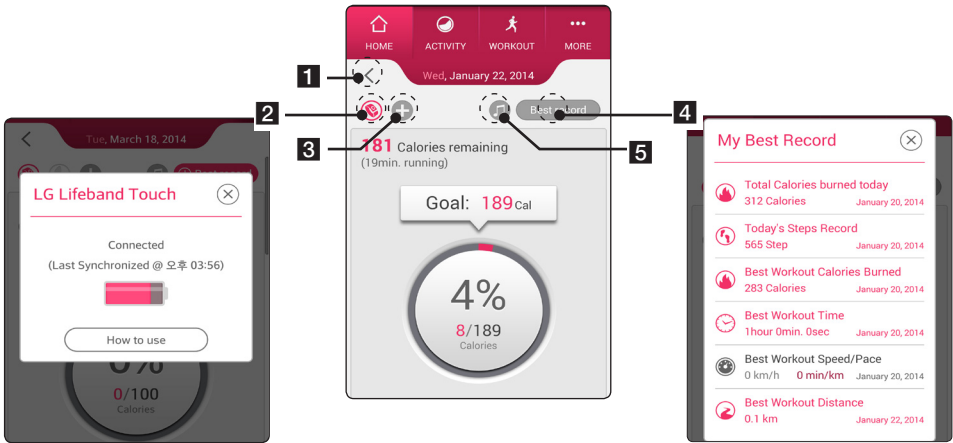

- 1 < > Searching for date: Shows previous activity records.
- 2 Device connection status: Shows current device connection status and connected device's battery status.
- 3 Add and register other devices.
- 4 Best record : Shows my best record listed in the history of my activity and Workout.
- 5 Music selection: Selects music to play.


Note

- You can control the music playback in the smartphone connected with LG Lifeband Touch. Refer to the description about music playback control mode. (Refer to page 24.)
- You can check your activity and workout record and other various progress. Sync your data at least once a week.
- Upload activity data: Drag and release the Home page to sync device and upload data.

• **Checking today's activity record**

You can check today's total activity record, hourly activity pattern and weekly goal achievement progress.



To check more detailed activity and workout information, go to [Activity].

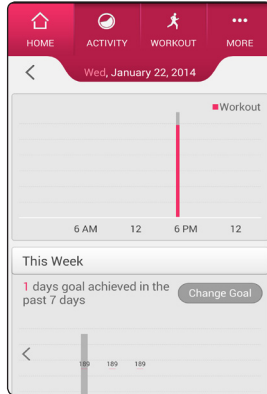

• **Changing daily goal**

You can easily change your daily goal. Adjust your goal considering your physical condition.

To adjust the goal, select displayed goal on today's total activity record screen or [Change goal] on the weekly goal achievement graph. Or it is also available on [More → User Profile → Daily Goal].

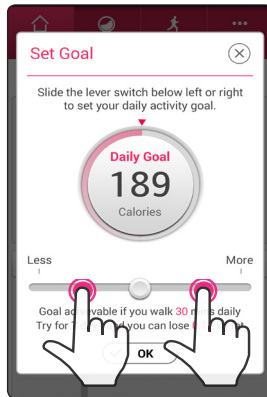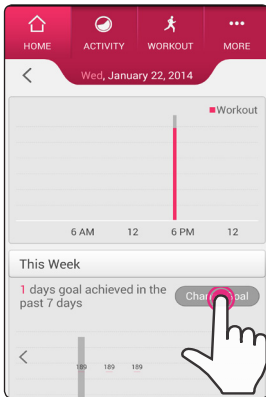


Note

You can check daily goal on LG Lifeband Touch's screen. Check the description about activity display mode. (Refer to page 23.)

Activity

Check the amount of activity measured by LG Lifeband Touch.



- **Activity analysis:** To show this menu, device registration is needed. In this menu, you can check all of the activity and workout record measured by LG Lifeband Touch. And also you can see the daily average consumed calories progress.

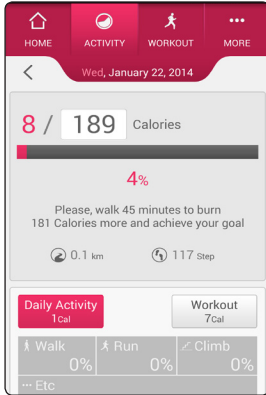

! Note

Your activity history service may be updated to provide more useful data for you.


- **Enter Workout Manually:** If you want to record workouts such as swimming or golf, use [Enter Workout manually]. You can manage workout that the device does not measure. If you enter the workout, corresponding consumed calories are reflected.

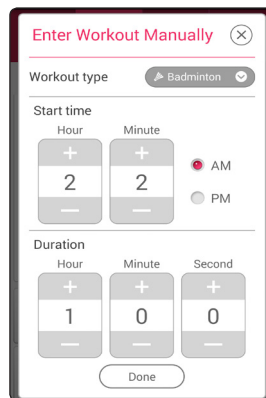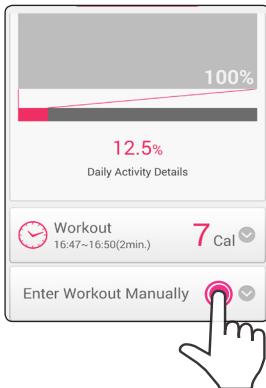

! Note

The total consumed calories or goal achievement rate in LG Lifeband Touch may differ from those of the app because the figures you entered on the app is not reflected in LG Lifeband Touch.


- **Modification of the workout record entered manually:** Touch the item you entered manually to change the start time or workout time.

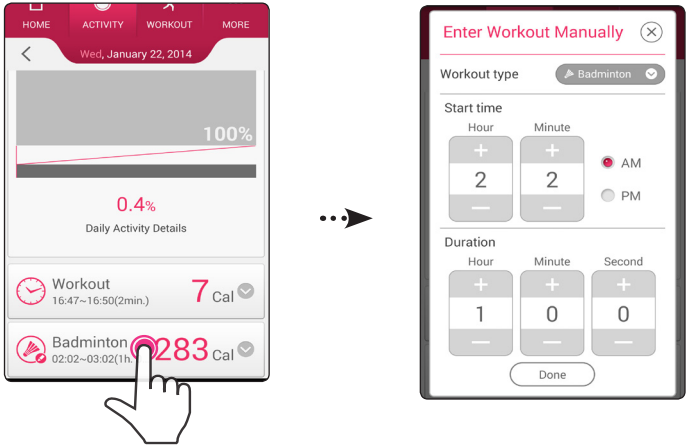

Workout

You can check your real time workout information and workout route, and change the music. Also you can mark your workout route with various color depending on the workout intensity.


1. Drag the slide bar into [Start]. The workout is started with the countdown.
To check your workout route, turn on the GPS on your smartphone.
For rhythmic workout, play the music.
2. To Stop or Pause your workout, move the slide bar into desired direction. Workout course is displayed when you stop the workout.

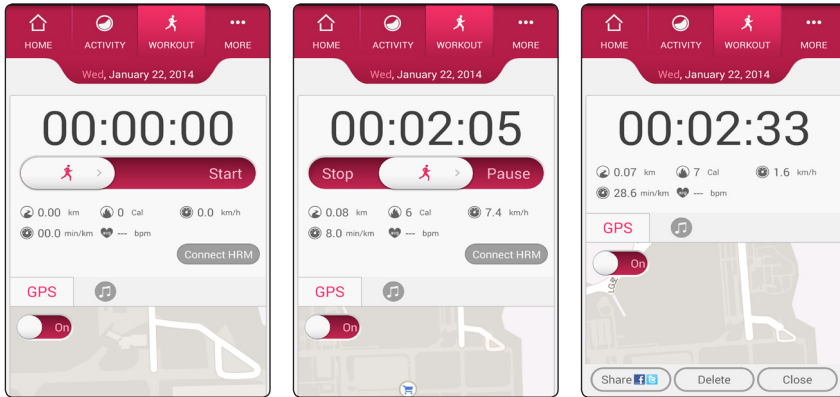


! Note

When using GPS indoors, the map may not be displayed due to lack of satellite signal.

Listening to music

1. If you want to listen to music during workout, touch  button.

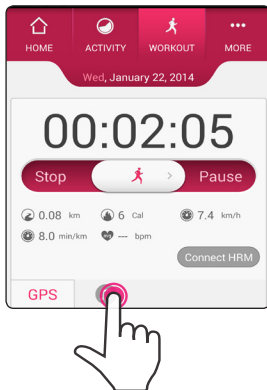

2. Music player on the smartphone will appear.
3. Select the music you want to play.

Note


- You can control the music playback in the smartphone connected with LG Lifeband Touch. Refer to the description about music playback control mode. (Refer to page 24.)
- Handling method of music control mode may differ depending on the device.

More

User Profile



Sign out, deactivate the service or change password.

Also you can reset the display unit, body measurement information and daily goal.

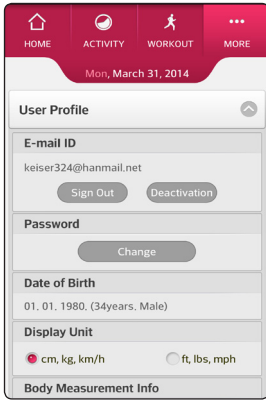

Weight and BMI

BMI(Body Mass Index) is calculated based on the weight and height you entered. If there are changes on your body size, touch [Setting] and enter the new figure to update your body measurement information. It shows BMI update history as a whole.

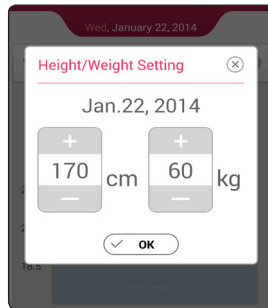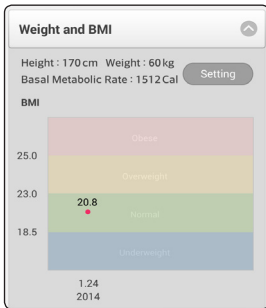


***What is BMI level (Body Mass Index)?

BMI (Body Mass Index) is the value calculated as your weight (kg) divided by the squared value of your height (m²). It is an important medical index for determining if he/ she is underweight, normal weight, overweight, or obesity. It indicates risk of obesity-related diseases

(Refer to the table below.)

BMI	Range	Risk of Diseases
18.5 or less	Underweight	Increasing
18.5~25.0	Normal	Low
25.0~30.0	Overweight	Increasing
30.0 or more	obese	High

📄 LG Lifeband Touch settings

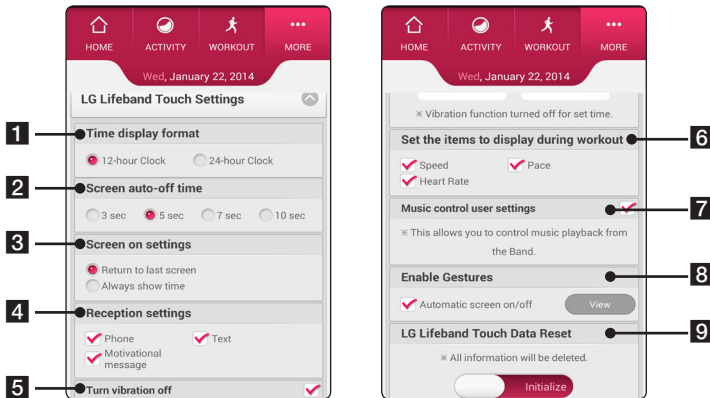


- 1 Time display format:** You can set time displayed on LG Lifeband Touch to 12-hour time or 24-hour time.
- 2 Screen auto-off time:** Set the auto screen off time. The screen is turned off in time you set.
- 3 Screen on settings:** Choose the starting screen displayed when LG Lifeband Touch turned on.
- 4 Reception settings:** Set to receive call & text notifications and motivational messages
- 5 Turn vibration off:** Set time you want to turn off the vibration. The vibration is turned off during the set time. But, if you set the vibration alarm at the time when you have set vibration off for, the vibration stays turned on.
- 6 Set the items to display during workout:** You can set the item displayed in workout mode.
- 7 Music control user settings:** To use music control, check [Music control user settings]. Refer to the description about Music control mode. (Refer to page 24.)
- 8 Enable Gestures:** To use gesture function, check [Automatic screen on/off]. Refer to the description about gesture function. (Refer to page 15.)
- 9 LG Lifeband Touch Data Reset:** To initialize the data saved in LG Lifeband Touch, drag the slide bar to [Initialize].

Vibration alarm

Set the alarm time, snooze function, weekly repetition.


You can modify or delete the alarm. Up to 5 alarms are available.

To set the alarm on LG Lifeband Touch, refer to the description about checking the alarm. (Refer to page 31.)

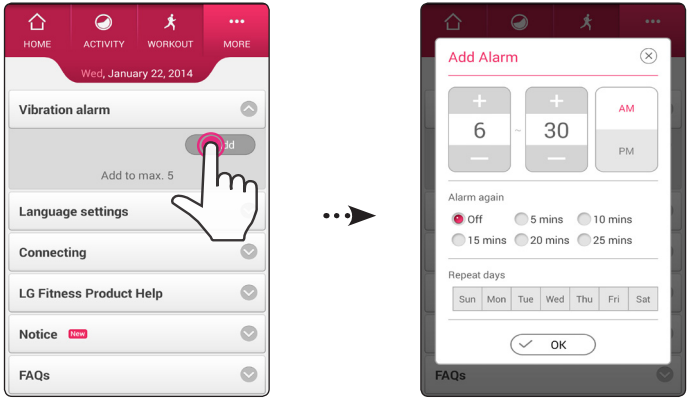



Language Setting

Set the language displayed on LG Lifeband Touch.

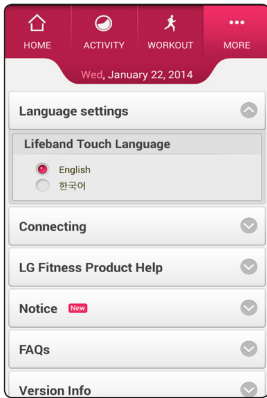

Connecting

You can register fitness devices other than LG Lifeband Touch and check the connection condition. Select desired device and the screen for connection status and/or adding new devices.

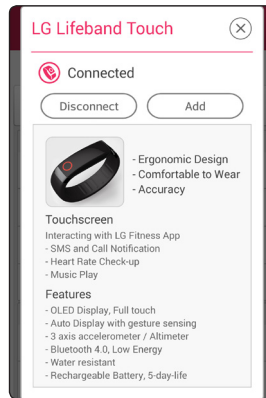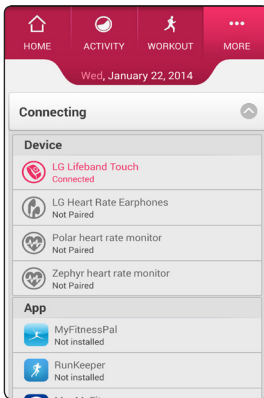

- You can manage the data from various connected fitness devices comprehensively.
- You can share your workout record by connecting with other workout app or SNS accounts such as Facebook or Twitter.


! Note

This device is not intended to diagnose, treat or prevent any disease or medical condition. Always seek the advice of a qualified medical professional before making any changes to your exercise, sleep, or nutrition.

LG Fitness Product Help

Find more information on LG Fitness products.

You can also read more about the general use of LG Lifeband Touch.

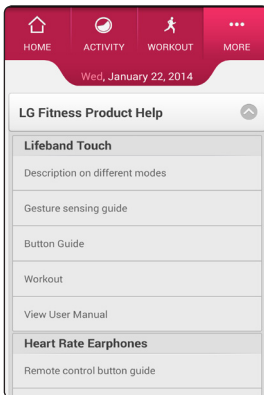


Notice

You can check notices about the update or system from app manager.

FAQs


You can search for FAQ such as features of the product, way of use, pairing related questions.

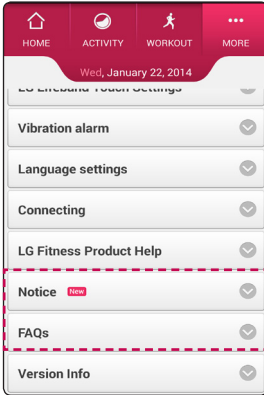

Version Information

You can read LG Fitness app's version information, terms and privacy.

To use the latest version, select [Update].

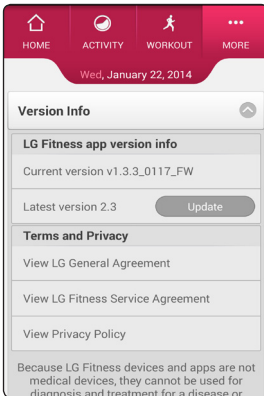

Frequently Asked Question (FAQ)

Q: What are the general instructions for using LG Lifeband Touch?

- A:**
- 1) Check the product components.
 - 2) Search for LG Fitness on Play store(Android) or App store(iphone) and install it.
 - 3) Register the LG Lifeband Touch in LG Fitness app and sign up.
 - 4) Wear LG Lifeband Touch and measure your activity or workout.
 - 5) Check detailed information about your activity or workout on LG Fitness app.

Q: Are there any possibilities that my data recorded by LG Lifeband Touch will be shared?

- A:** LG Fitness service does not share customer's data with a third party or person. But, about the only service or person you have selected, related information can be shared with the selected third party or person you have selected such as a fitness service or SNS service.

Q: How long should I charge the battery for?

- A:** It takes 3 hours to charge the battery. You can charge using USB connecting gender. LED Indicator lights turn red while charging. If the smartphone is not connected and Bluetooth connection is turned off, the battery power can last for approximately 5 days, if connected, 2 days. The lack of the battery icon appears when charging is needed.

Q: What happens if the battery is fully discharged while using the LG Lifeband Touch?

- A:** After the battery is dead, the data is not saved but the previous data remains. When resynchronizing with smartphone after discharging, you can check the previous record through the app, but workout information is deleted on the device screen.

Q: How does LG Lifeband Touch differ from other activity management or measurement devices?

- A:** LG Lifeband Touch motivate you to do fitness activity through fine design, superior wear sensation, convenient function, high accuracy, and simple mobile app.

Q: What does the LG Fitness app do?

- A:** You can check and analyze the hourly pattern or proportion of your activity and workout, and share it on SNS. You can modify your daily goal, and record manually your unmeasured workout. You can modify the setting of your LG Lifeband Touch.

Q: The clock screen does not appear.

A: After installing the LG Fitness app, sign up to synchronize your account with your LG Lifeband Touch. You need to sync device with smartphone to see time and date.

Q: How can I check the measurements for yesterday?

A: If you synchronize your data using smartphone app, you can check already synchronized data on your smartphone app.

Q: How can I use Bluetooth transfer?

A: Before registering your LG Lifeband Touch, install LG Fitness app on your smartphone. The data transfers automatically between the devices connected via Bluetooth. Bluetooth connection to the LG Lifeband Touch may be disconnected due to the Wi-Fi interference.

Q: What does the LG Lifeband Touch screen show?

A: In the screen, clock mode, activity display mode and music playback mode are displayed whenever pressing the menu button. On clock mode, current time, day and date and remaining battery are displayed, and activity display mode is made up total consumed calories, total distance, total steps and workout (Section measurement) start button. On music playback mode, music play, pause, searching for music and volume control are available. On each mode, you can drag the screen to change the item.

Q: I would like to know limited warranty, return, and exchange policy.

A: Please refer to the quality certificate provided.

Q: I would like to know How to change a LG Lifeband Touch after the replacement or maintenance of the product.

A: 1) Turn on the LG Lifeband Touch you want to newly register.
2) Select [LG Lifeband Touch] and touch [add] on [Run the App ➔ More ➔Connecting]
3) Select the LG Lifeband Touch you want to connect and select [YES] when [Pairing? ➔YES | NO] appears on the screen.

Q: The battery depletes faster than when first purchased.

A: When you expose the device to very cold or very hot temperatures, the useful charge may be reduced. The battery is consumable and the useful charge will get shorter over time.

Smartphone compatibility list

Manufacturer	Model	OS Version	Bluetooth Version
Apple	iPhone® 4S	iOS 6/ 7	Bluetooth 4.0 LE
	iPhone® 5, 5s, 5c		
	iPod Touch (5 th Generation)		
LG	LG G2™	Android Jelly Bean 4.3 or more	
	Google Nexus™ 5		
	LG G Flex™		
Samsung	Galaxy S® 4		
	Galaxy S® 3		
	Galaxy Note® 2		
	Galaxy Note® 3		
	Galaxy round®		



Note

The smartphone model compatible with the App can be added or changed depending on the phone manufacturer.

Open source software notice

To obtain the corresponding source code under GPL, LGPL and other open source licenses, please visit <http://opensource.lge.com>. All referred license terms, warranty disclaimers and copyright notices are available to download with the source code.

Specifications

Appearance	Menu button	
	Size : X-Large 196 mm, Large 181 mm, Medium 166 mm, Thickness : 10 mm or less	
	Weight: X-Large 53.11 g, Large 50.12 g, Medium 49.86 g	
	Display: OLED touch, LED Indicator	
General	Device	Sensor: Triaxial acceleration Sensor, Pressure Sensor
		Connectivity options: Bluetooth
		Supported devices: Android Phone, iPhone
		Operating Temperature: -15 ~ 45 °C
	Android / iOS Application	Android 4.3 or higher(Jelly Bean), iOS 6 or later
		Resolution(Android): 1920*1080, 1280*720 Resolution(iOS): 960*640, 1136*640
	Bluetooth	Bluetooth regulation: Bluetooth 4.0 LE
RF Channel : 40 / Modulation : GFSK / Power : 10 dBm or less / Rx Sen : -85 dBm		
Range of frequency: 2.4 GHz (2402 - 2480 MHz)		
Key Feature	Support operating Touch screen	
	Display the time, date and remaining battery on the screen.	
	Activity: Total consumed calories, Goal consumed calories, Goal achievement rate, Total distance, Number of steps	
	Workout: Time, Calories, Distance, Number of steps, Speed, Pace, Heart Rate(when pair with Heart rate measurement device)	
	Music Control: Play, Pause, Forward, Backward, Volume +/-	
	Checking incoming a call and text	Android phone: phone call (caller identification) and text message reception are supported.
		iPhone: Only phone call reception (caller identification is unavailable) is supported.
	Notice message: Goal achievement rate, Activity encouragement, Low battery alert, Bluetooth Disconnected	
	Vibration alarm: support up to five (You can set it in LG Fitness app.)	
	Support the Korean and English display on the screen. (You can set it in LG Fitness app.)	
	Support LG Fitness smartphone app (for Android phone and iPhone)	
Water Resistance	Splash proof	

Battery	Battery Charging Temperature: + 10 °C ~ 45 °C
	Capacity: Built-in Li-polymer Battery 90 mAh
	Battery life: approximately 2 days (when device is connected with smartphone), approximately 5 days (when the device is disconnected from the smartphone or Bluetooth connection is disconnected)
	Charging method: USB charging dock, USB cable (full charging time: 3 hours or less)

- Design and specifications are subject to change without notice. Default app that is shipped with the device are subject to updates and may no longer be supported without prior notice.

