



LG

Life's Good

한국어

사용 설명서 벽걸이 지지대

사용전에 안전을 위한 주의사항을 반드시 읽고 정확하게 사용하세요.

벽걸이 지지대 모델 목록
WM-B840H

목차

3 안전을 위한 주의 사항

4 제품 구성

5 설치 방법

- 5 체결 홀 준비 및 고정 작업
- 8 체결 시 상하 확인 및 고정 홀 위치
- 9 간격 조절용 지그(JIG) 장착
- 10 VESA 브라켓에 모니터 설치
- 11 모니터를 벽면 브라켓에 설치(가로)
- 11 모니터를 벽면 브라켓에 설치(세로)
- 12 제품 조작
- 14 홀(Hole) 가공 위치

16 제품 규격

안전을 위한 주의 사항

전문 설치업자는 설치전에 이 설명서를 잘 읽은 후 올바른 설치를 해 주세요.

전문 설치업자는 이 설명서를 설치 완료 후 고객에게 전달해 주시고, 고객이 잘 읽은 후 보관할 수 있도록 의뢰해 주세요.

사용 설명서를 읽고 난 뒤에는 제품을 사용하는 사람이 항상 볼 수 있는 곳에 보관해 주세요.

⚠ 경고

제품 설치는 반드시 판매점에서 지정한 전문 설치업자에게 의뢰해 주세요.

전문 설치업자가 아닌 사람이 설치하면 대단히 위험한 일이며, 부상의 원인이 될 수 있습니다.

설치 후 제품을 이동시키거나, 교체할 경우에는 반드시 판매점에서 지정한 전문 설치업자에게 문의 하세요.

설치는 기술을 요하는 작업이므로 개인이 임의로 이동 및 설치할 경우 안전상의 문제가 발생할 수도 있습니다.

제품의 무게를 견디지 못하는 곳에는 설치하지 마세요.

설치하는 곳의 강도가 약하면 제품이 떨어져 부상의 원인이 될 수 있습니다.

설치 후 제품에 매달리거나 심한 충격을 주지 마세요.

제품이 떨어져 부상의 원인이 됩니다.

⚠ 주의

반드시 사용설명서의 지시에 따라 제품을 설치하세요.

사용설명서의 지시를 따르지 않을 경우 잘못된 설치로 인해 심한 부상 및 제품 피해의 원인이 될 수 있습니다.

설치 시에는 반드시 먼저 벽체 종류를 확인하고, 조건이 맞다면 동봉한 앵커와 나사를 사용하세요.

지정되지 않은 앵커와 나사를 사용할 경우 제품의 무게를 지탱하지 못해 안전상의 문제가 발생할 수도 있습니다.

제품을 물에 젖은 수건으로 닦지 마시고, 제품이 설치된 장소 아래에서 열기구 및 가습기 등을 사용하지 마세요.

물기가 제품 안으로 들어 가거나 수증기 및 열기로 인해 화재, 감전, 고장의 원인이 될 수 있습니다.

제품을 설치 하기전 콘센트에서 전원 코드를 분리하세요.

전원코드가 꽂힌 상태에서 제품을 설치할 경우 감전, 화재의 원인이 될 수 있습니다.

제품을 설치할 때 또는 제품 설치 후 높이 조절시에는 반드시 두사람 이상이 함께 하세요.

혼자서 하게 되면 제품이 떨어져 부상 또는 제품 파손의 원인이 될 수 있습니다.

벽에 천공시 반드시 지정된 직경의 드릴 비트 및 드릴을 사용하세요. 그리고 구멍 깊이도 지정된 사항을 따르세요.

지정되지 않은 방법으로 천공하여 설치할 경우에는 불안정하게 설치되어 안전상의 문제가 발생할 수도 있습니다.


제품을 수직벽 이외의 스프링클러나 감지기 옆, 진동이나 충격이 미칠 우려가 있는 곳, 고압 전선이나 동력원 근처에는 설치하지 마세요.

제품 설치 시 맨손으로 설치하지 말고, 반드시 작업용 장갑을 착용하세요.


부상의 원인이 될 수 있습니다.

제품 구성


제품 상자 안에 아래 부속품이 들어 있는지 확인하세요. 누락된 부속품이 있는 경우 제품을 구입한 판매처에 문의하시기 바랍니다. 부속품은 실물과 다르게 보일 수 있습니다.

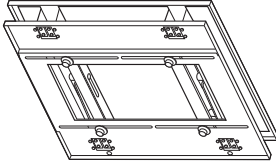


벽면 브라켓

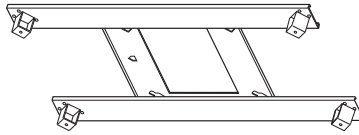


VESA 브라켓

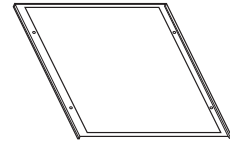


간격 조정 지그(JIG)

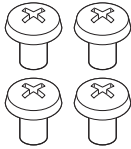


SET 고정용 나사(M6) 4개

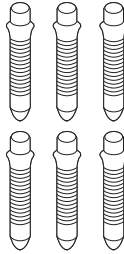

벽걸이 고정 앵커 6개

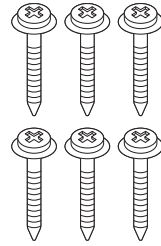

벽걸이 고정 나사
(M5 x 65L) 6개

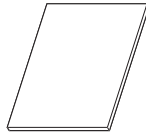

사용 설명서



케이블 홀더



주의

- 안전 및 제품 수명을 위해 불법 복제품은 사용하지 마십시오.
- 불법 복제품 사용으로 인한 모든 파손이나 부상에는 품질 보증이 적용되지 않습니다.



참고


- 제품의 부속품은 모델에 따라 다르게 제공될 수 있습니다.
- 이 사용 설명서의 제품 사양이나 내용은 제품의 품질 향상을 위해 예고 없이 변경될 수 있습니다.

설치 방법


체결 홀 준비 및 고정 작업

벽걸이 1대 설치


- 1 벽면에 브라켓 설치용 홀(hole)을 뚫으세요.

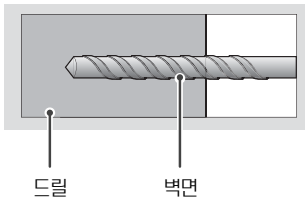


- 2 벽걸이 고정용 앵커(Anchor)를 삽입하세요.

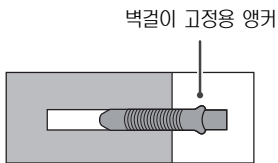


- 3 벽걸이 고정용 나사로 벽면 브라켓을 고정하세요.

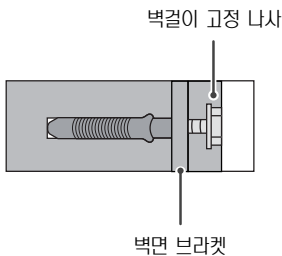


나사를 사용하여 벽걸이를 벽면에 체결하세요.

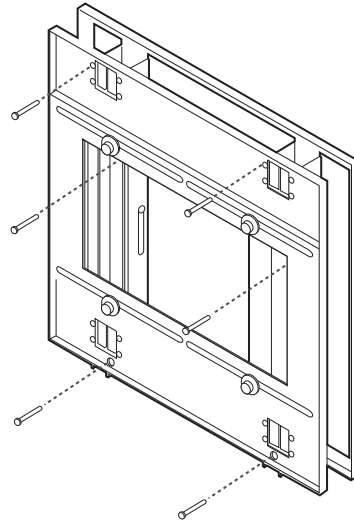

VESA 벽걸이를 가로 혹은 세로로 설치할 수 있습니다.

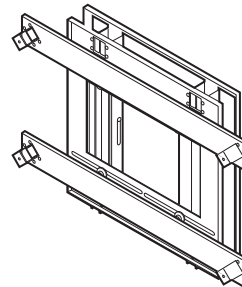

〈모니터를 가로로 설치 시〉

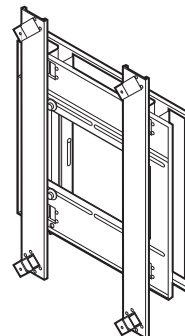


〈모니터를 세로로 설치 시〉

! 참고


- 각 홀(hole)은 M6 이하 크기의 나사 체결이 가능합니다.
- 체결용 홀(Hole)을 설치 전 벽에 만들어야 하며, 14 페이지의 홀(Hole) 간 치수 도면 참조 바랍니다.

여러대의 벽걸이 설치(가로 설치)

간격 조정 지그(JIG)를 사용하여 벽에 설치하세요.

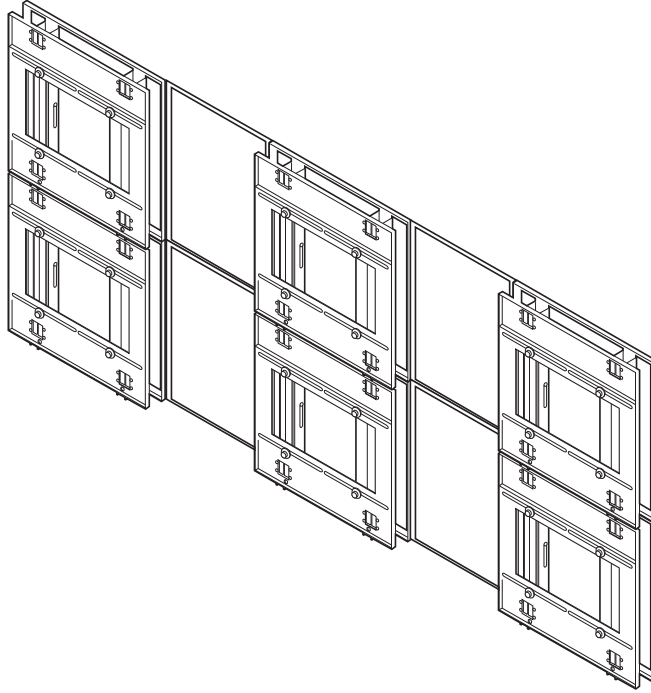


VESA 벽걸이를 가로로 설치하여 모니터를 가로로 걸 수 있도록 하세요.

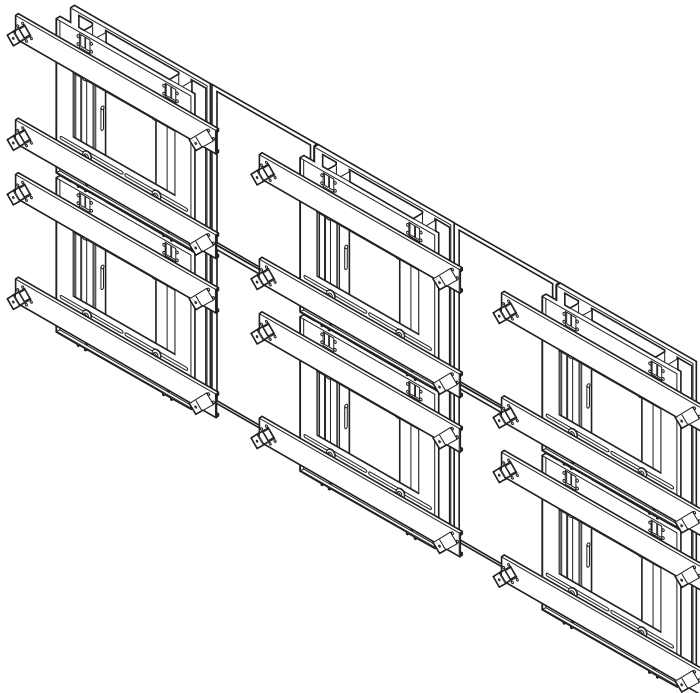


여러대의 벽걸이 설치(세로 설치)

간격 조정 지그(JIG)를 사용하여 벽에 설치하세요.


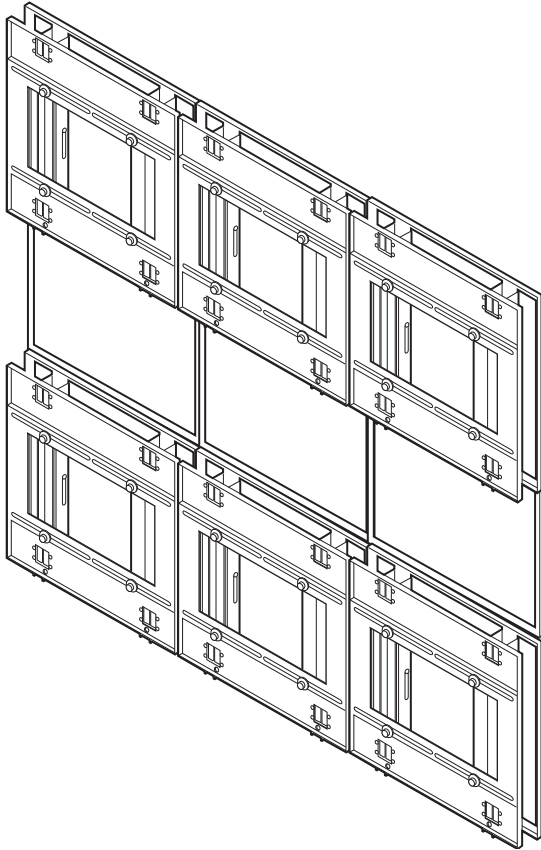


VESA 벽걸이를 세로로 설치하여 모니터를 세로로 걸 수 있도록 하세요

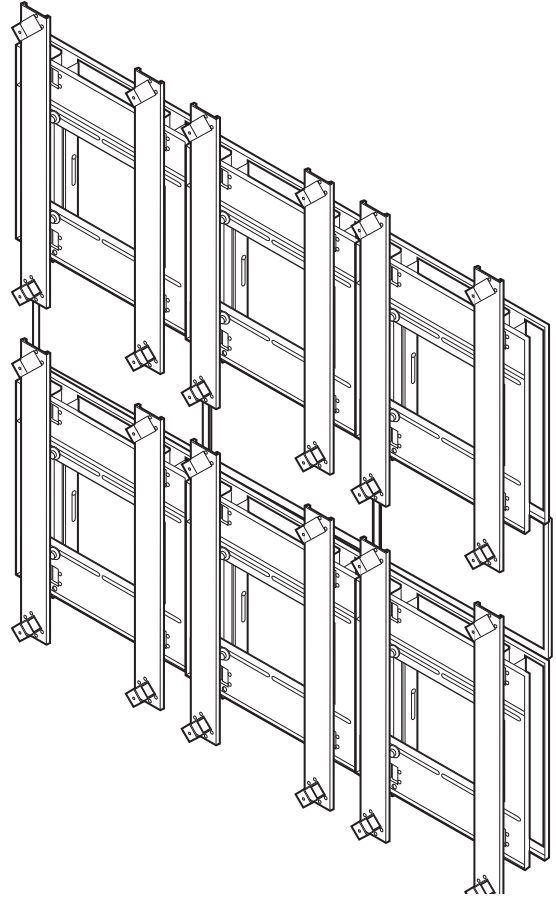

체결 시 상하 확인 및 고정 홀 위치



- 1 벽면 브라켓 설치 시 그림과 같이 상하 조정 Screw 부분이 아래에 위치하도록 설치 하세요.
- 2 브라켓 고정시 VESA 브라켓 길이 부분을 움직여 그림과 같이 홀(Hole)이 보이도록 한 후에 나사로 벽에 고정 하세요.

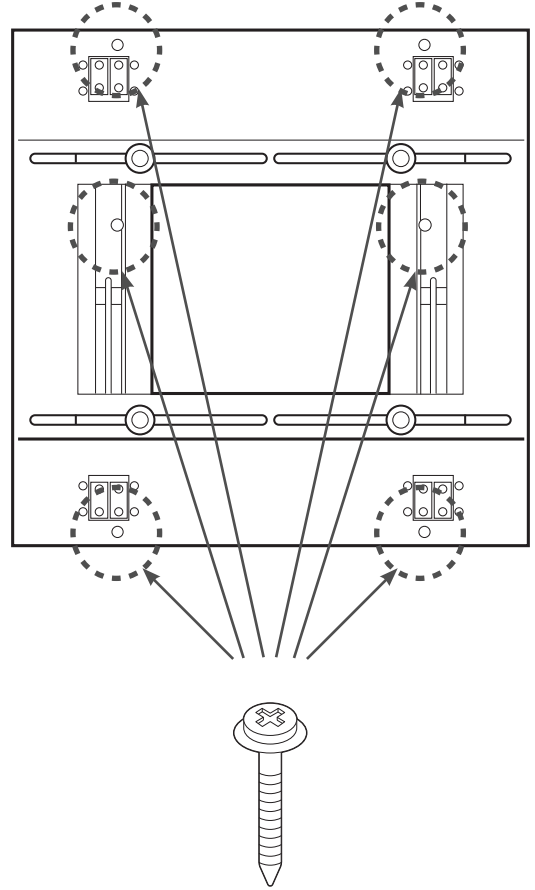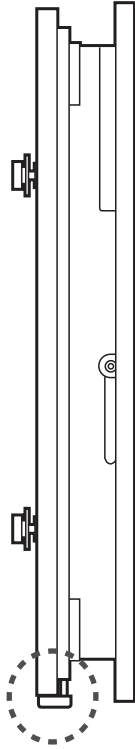

벽걸이 고정 나사



간격 조정 지그(JIG) 장착

- 1 멀티 장착시 거리 조절용 브라켓 설치용 홀(Hole)에 나사를 이용하여 고정하세요. (나사는 동 제품에 동봉 안 됨) 단, 필요 시에만 나사로 고정을 하고, 불필요시 홈에 끼워 사용하세요.

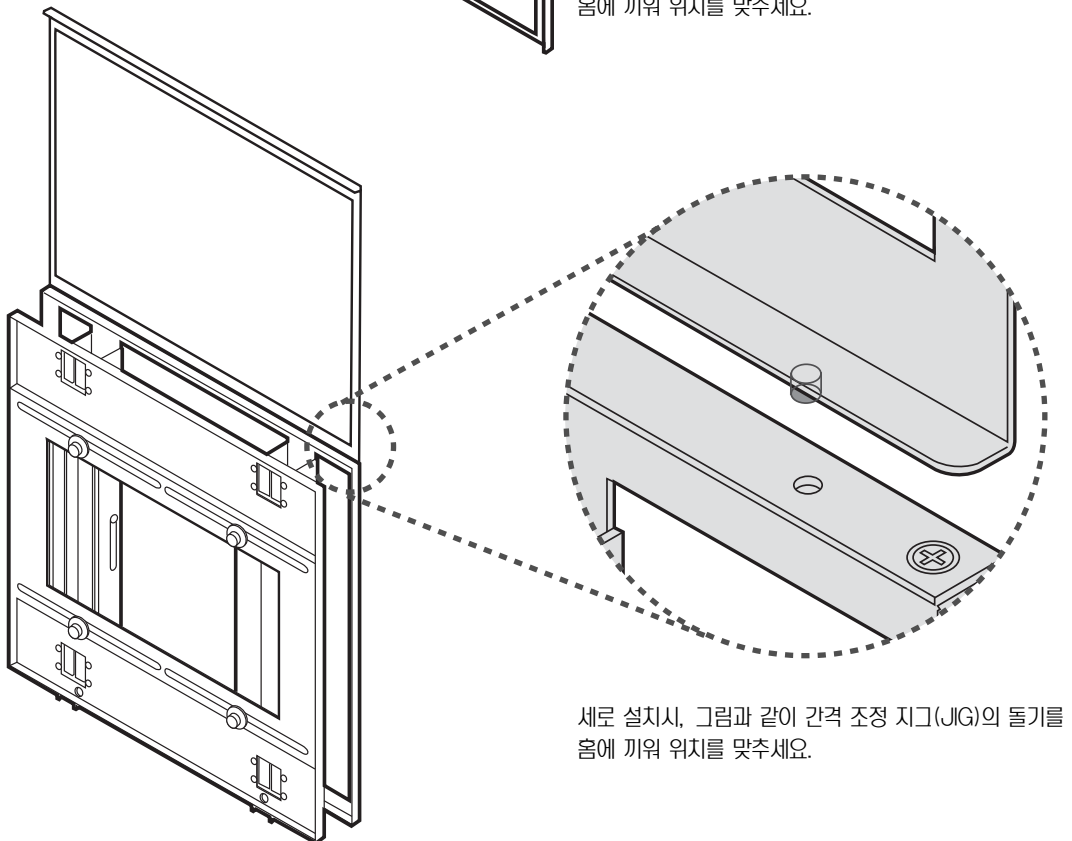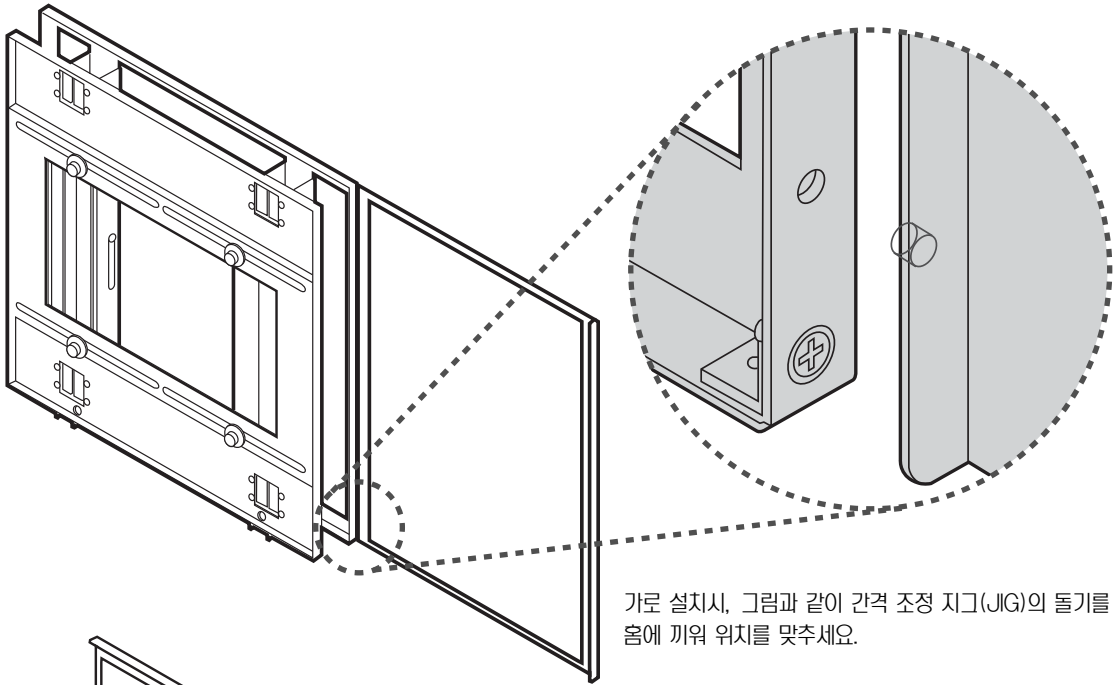


VESA 브라켓에 모니터 설치


제품 후면에 동봉된 M6 나사를 이용하여 VESA 브라켓을 장착하세요.

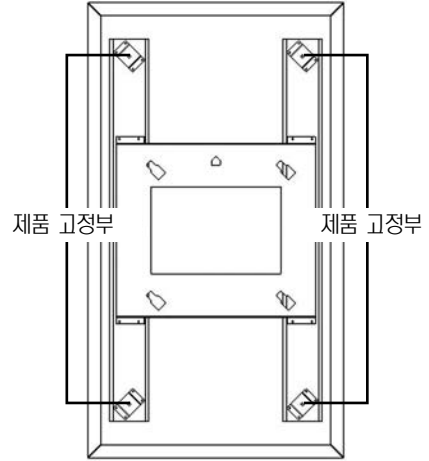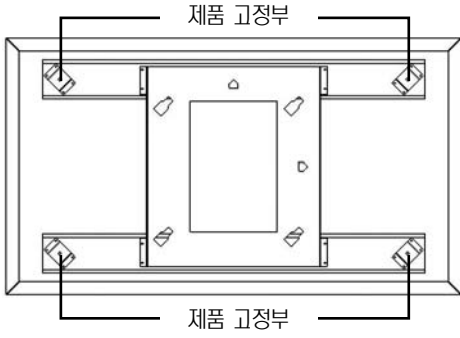

표시부가 제품 상단을 향하도록 장착합니다.

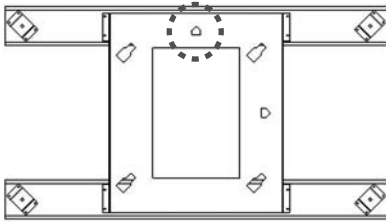



〈가로 설치 시〉

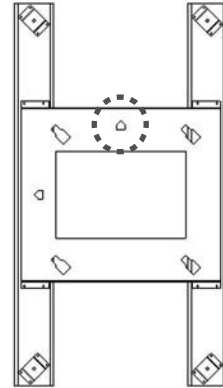

〈세로 설치 시〉



모니터를 벽면 브라켓에 설치(가로)

설치된 벽면용 브라켓의 GUIDE SPACER에 모니터와 VESA 브라켓 조립체를 걸어서 설치합니다.

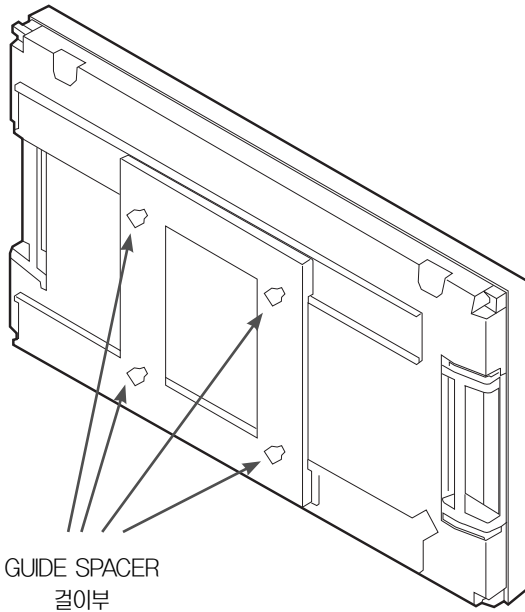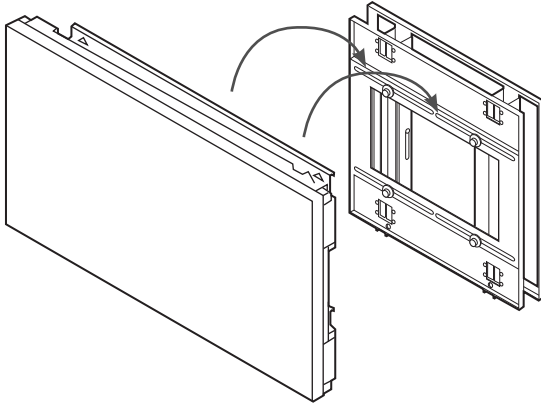


모니터를 벽면 브라켓에 설치(세로)

설치된 벽면용 브라켓의 GUIDE SPACER에 모니터와 VESA 브라켓 조립체를 걸어서 설치합니다.

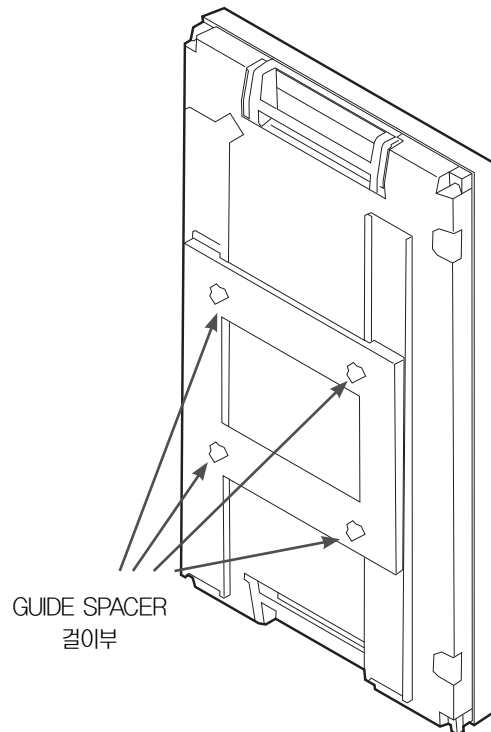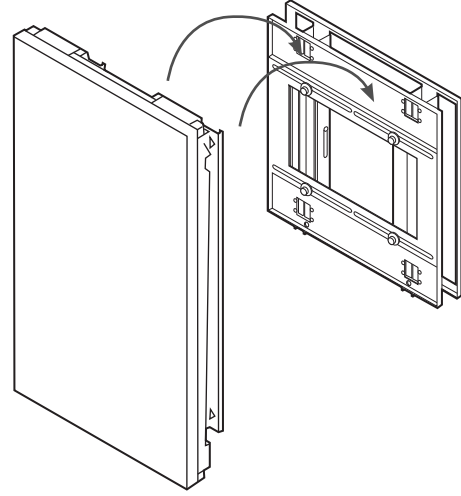


제품 조작

좌우 슬라이딩, 상하 조절

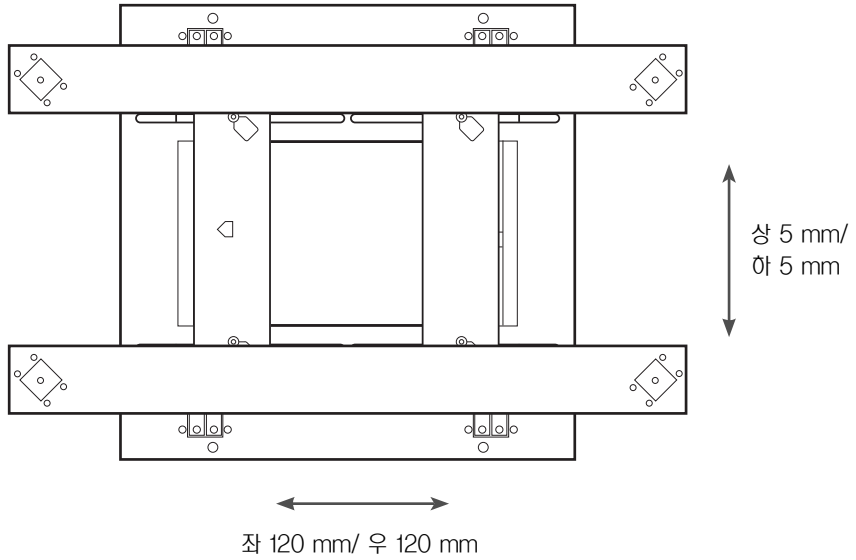


전후 조절

최대 90 mm 이상 돌출이 가능합니다.

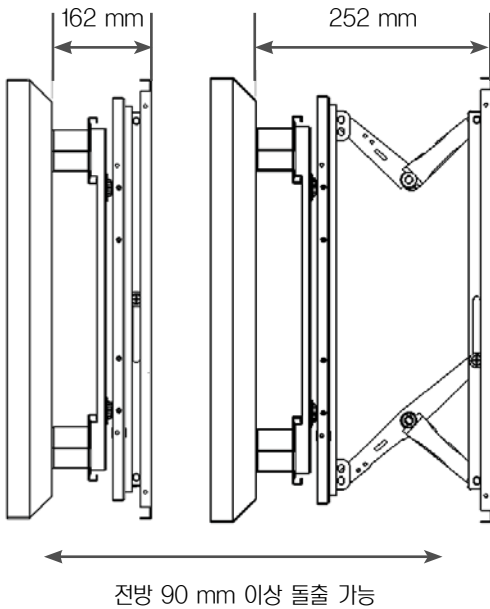


TILT

아래로 TILT가 가능합니다.

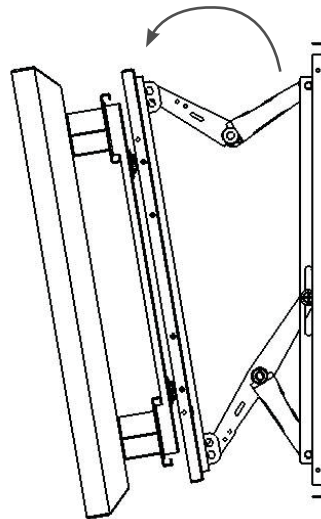


전후 조절 시 전방 최대 돌출 상태 고정을 위하여 고정 바(bar)를 장착해주세요.
 약 87 mm 돌출 량 유지할 수 있습니다.

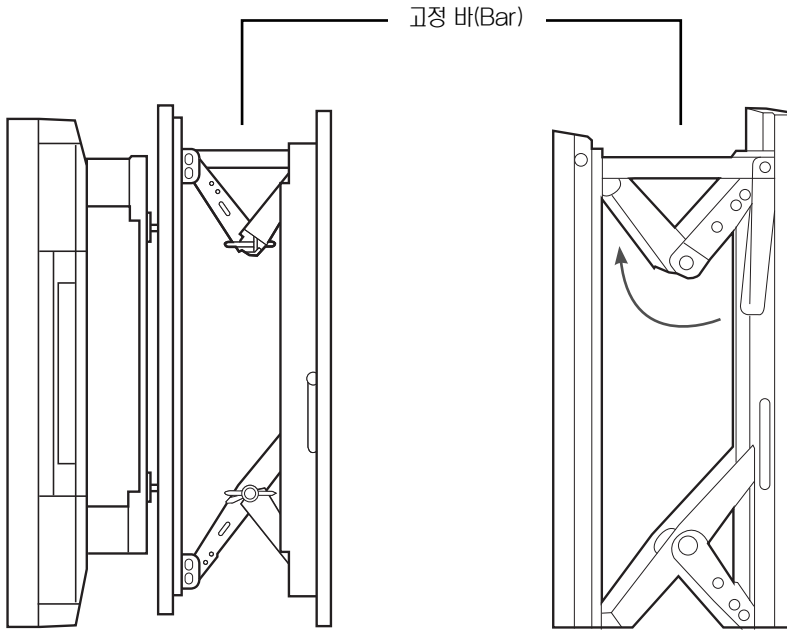


홀(Hole) 가공 위치


1대 설치 시 홀(Hole)의 위치

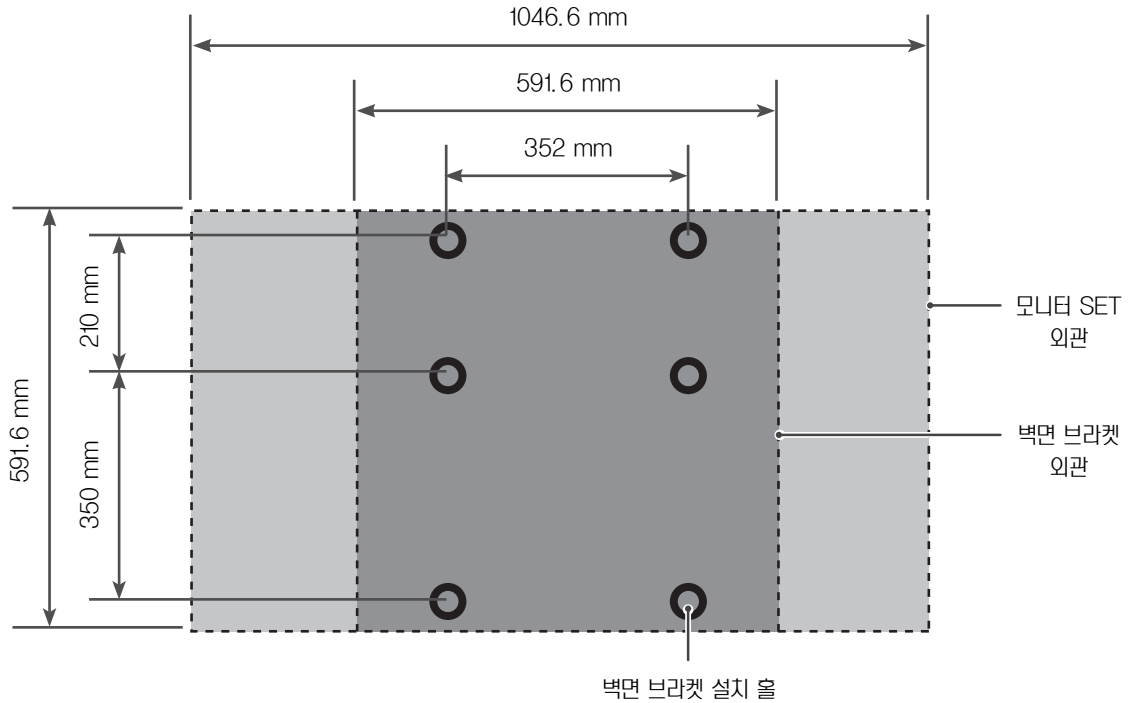

여러대 설치 시 홀(Hole)의 수평 위치

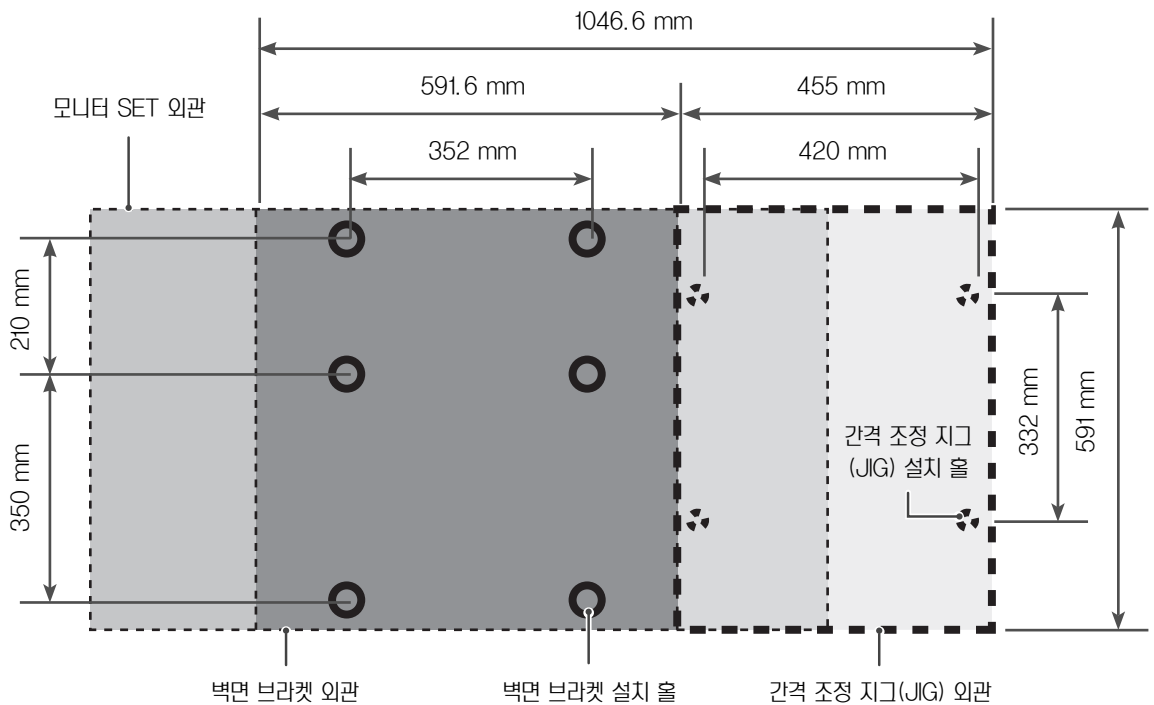

여러대 설치 시 홀(Hole)의 수직 위치

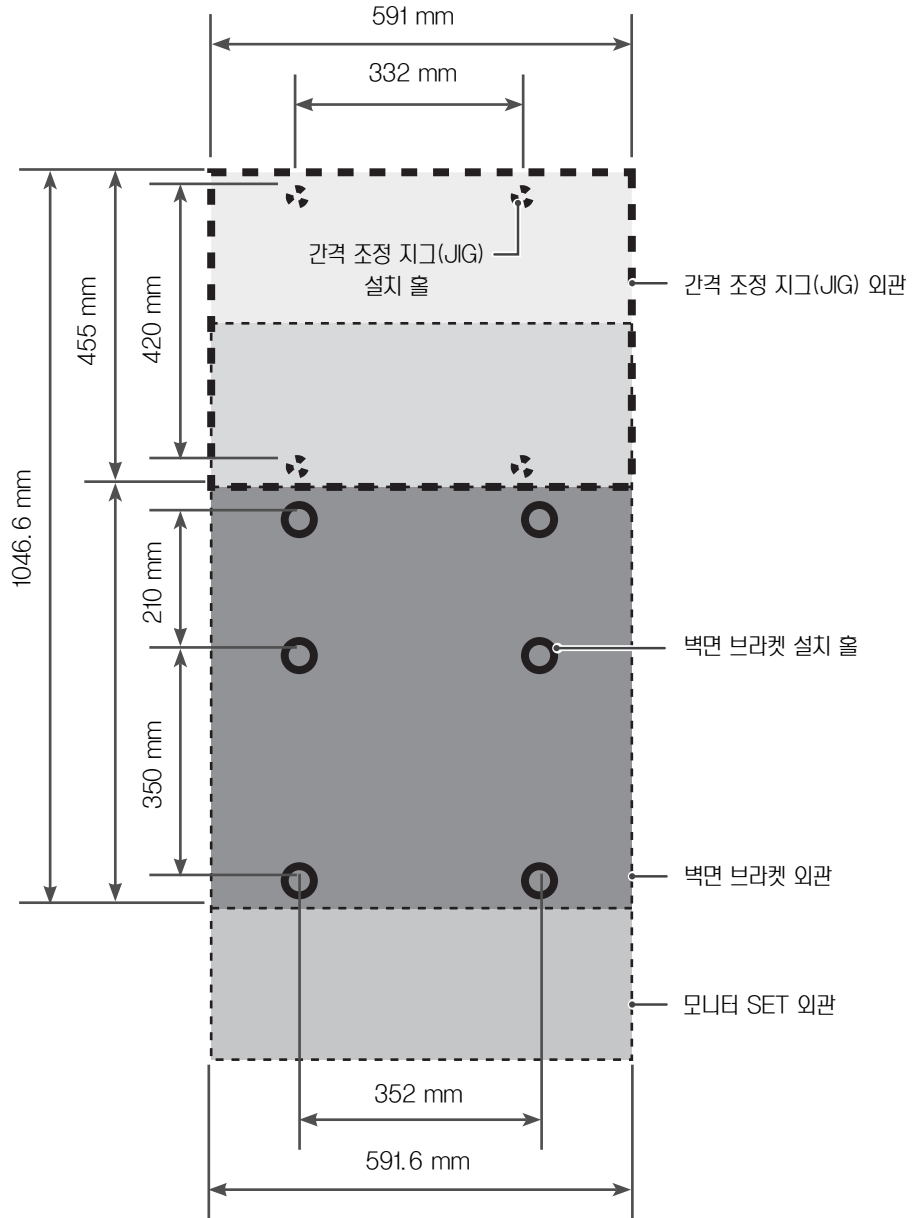


! 참고

- 간격 조정 지그(JIG) 설치 홀은 필요할 경우에만 벽에 작업하세요.
- 벽에 홀이 없더라도 벽면 브라켓의 측면 홀(Hole)에 조립을 통해 장착이 가능합니다.
- 벽걸이와 SET 의 상하 중심은 일치하지 않습니다.

제품 규격

10. 본체

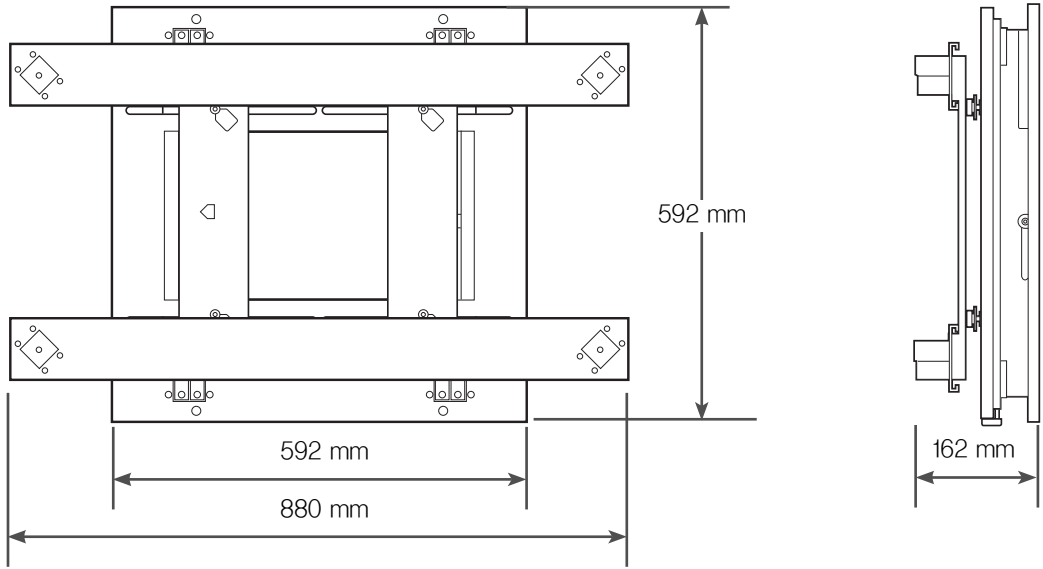

모델명	WM-B840H
벽걸이 폭x높이x깊이 (mm)	880 x 592 x 162
BOX 크기 (WxDxH), (mm)	974 x 674 x 252
무게 (kg)	15 Kg
벽걸이 Vesa 규격	800*400
최대 인장 하중 (kg, f)	100 kgf
위치 조정	상하 합계 : 약 10 mm 좌우 합계 : 약 240 mm 전방 돌출 : 최소 90 mm
SET와 벽간 최소 이격 거리	약 160 mm
Special feature	전하방 Tilt 기능



서비스품질(SQ)인증마크란?

서비스품질이 우수한 기업에 대한 품질을 국가 기관인
지식경제부 기술표준원이 보증하는 인증 마크입니다.

서비스센터 대표 전화번호 (전국 어디서나)	인터넷 서비스 신청	자가 진단
고장접수 및 사용설명은 ☎ 1544-7777, 1588-7777	www.lgservice.co.kr	www.lgservice.co.kr 온라인 상담 > 제품 자가진단
☞ 전화 걸기 전, 제품 모델명, 고장상태, 전화번호, 주소를 정확히 알고 계시면 보다 빠른 서비스를 받으실 수 있습니다. ☞ 전화 연결 시, ARS 안내에 따라 제품을 정확하게 선택하 시면 해당 제품의 전문 상담원에게 최고의 서비스를 받으실 수 있습니다. ※ 고객 상담실 (제한 및 불만사항) ☎ 080-023-7777	☞ 인터넷 서비스를 이용하시면 원하시는 날짜와 시간에 서비스 신청, 실시간 PC 원격 상담이 가능하여 보다 편리하게 이용하실 수 있습니다. ☞ 인터넷으로 출장 서비스를 신청하시면 수리비 할인 혜택을 드립니다. (단, 당사의 사정에 의해 변경될 수 있습니다.)	☞ 불편사항에 대한 자가진단 방법을확인하실 수 있습니다. ☞ 모델 별 증상에 대한 상세한 조치 방법을 확인하실 수 있습니다.

Owner's manual

WALL MOUNTING BRACKET

Please read the safety information carefully before using the product.

List of Wall Mounting Bracket Model
WM-B840H

CONTENTS

3 SAFETY PRECAUTIONS

4 PRODUCT COMPONENTS

5 HOW TO INSTALL

- 5 Drill holes for the brackets and fixings
- 8 Check the position of the bracket and bracket holes
- 9 Attach spacing Jig
- 10 Mount the monitor into the VESA bracket
- 11 Mount the monitor onto the wall mounting bracket (landscape)
- 11 Mount the monitor onto the wall mounting bracket (portrait)
- 12 Product Operation
- 14 Location of the holes

16 PRODUCT SPECIFICATIONS

SAFETY PRECAUTIONS

If you are a professional installer, please read this manual carefully before installing the product. After installing the product according to the manual, ensure that the user also reads the manual carefully.

After reading the manual, please keep it handy for future reference.



WARNING

The product should be installed by a qualified professional specified by the retail store.

Installing the product without a qualified professional is dangerous and may cause personal injury.

The product should be installed where its weight can be supported.

If the product is installed on a weak surface, the product may fall and cause personal injury.

When moving or replacing the product after installation, contact a qualified installer specified by the retail store.

Installation or movement of the product must be carried out by a skilled professional. If unqualified persons move and install the product, it may cause safety issues.

Do not hang on the product or apply shock to the product.

The product may fall, which may cause personal injury.



CAUTION

Follow the instructions of the manual to install the product.

If you do not follow the instructions, the product may not be installed properly, causing serious injury or damage to the product.

When drilling the holes in the wall, make sure you use a drill and a drill bit of the specified size. Ensure that you also follow the instructions regarding the depth of the holes.

Otherwise, the product may be installed improperly, causing safety issues.

During installation, check whether the wall is strong enough to hold the product and use the anchors and screws provided.

If you use anchors and screws that are not specified by the manufacturer, they may not hold the weight of the product, causing safety issues.

Keep the product away from sprinklers, sprinkler sensors, high-tension wires or power sources, and do not install the product in a location where vibrations or shock impacts are likely to occur.

Do not clean the product with wet towels, and do not use a heater or a humidifier underneath the product.

Moisture permeating into the product, including through steam and heat, may result in a fire, electric shock or damage to the product.

Wear working gloves when installing the product. Do not use bare hands.

Otherwise, it may cause personal injury.

Make sure that the power cord is removed from the outlet before installing the product.


Otherwise, it may cause an electric shock or a fire.

Installing or adjusting the height of the product requires two or more people.


If you try to install or move the product alone, it may fall and cause personal injury or damage to the product.

PRODUCT COMPONENTS


Please check whether all the components are included in the box before using the product. If there are missing components, contact the retail store where you purchased the product. Note that the accessories may look different from those shown here.

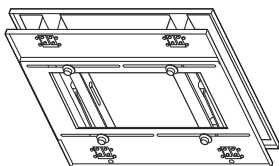


Wall mounting bracket

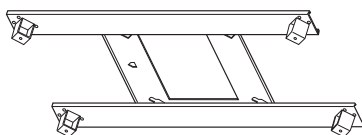


VESA bracket

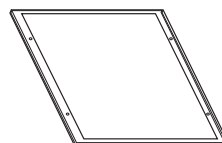


Attach Spacing jig

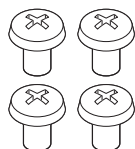


Four set fixing screws (M6)

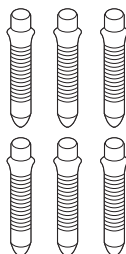

Six wall mounting fixing
Anchor

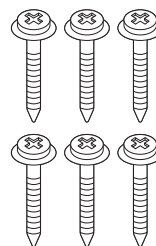

Six wall mounting fixing
screws (M5 x 65L)

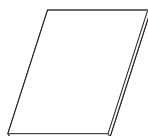

Owner's manual



Cable holder



CAUTION

- Always use genuine components to ensure safety and product life.
- The product warranty will not cover damage or injury caused by the use of counterfeit components.




NOTE

- The accessories supplied with your product may vary depending on the model.
- Without prior notice, all information and specifications in this manual are subject to change to improve the performance of the product.


HOW TO INSTALL

Drill holes for the brackets and fixings


- 1 Drill the necessary holes in the wall for the wall mounting bracket.

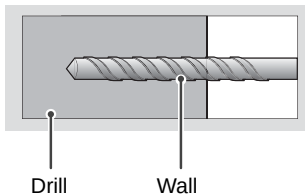

- 2 Insert anchors into the bracket holes.

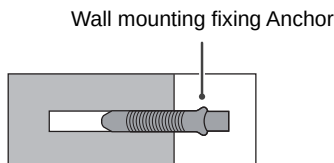


- 3 Attach the wall mounting bracket using the fixing screws.

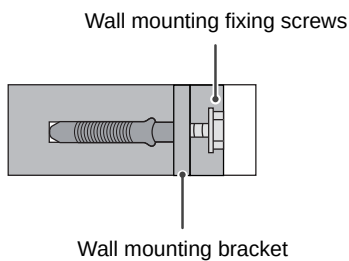


For single installation


Attach the wall mounting bracket on the wall using the screws.

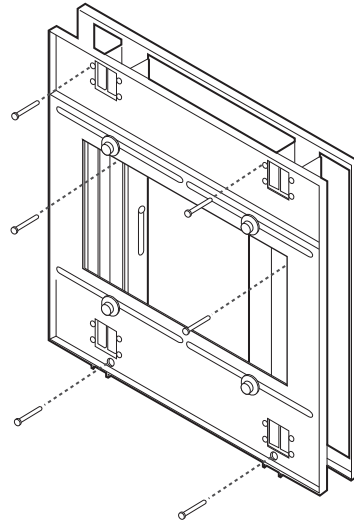

The VESA bracket can be installed for either landscape or portrait display.

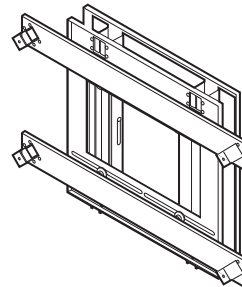

<Installing in landscape mode>

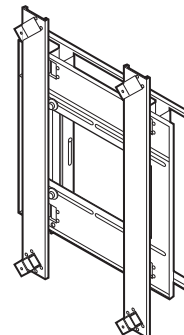


<Installing in portrait mode>

! NOTE


- M6 screws or smaller can be used in each hole.
- The bracket holes must be drilled before the bracket is mounted. See the diagram in the 14 page for the location and distance between holes.

For multi-installation(Landscape)

Use the attach spacing jig to install the wall mounting bracket on the wall as shown in the diagram.

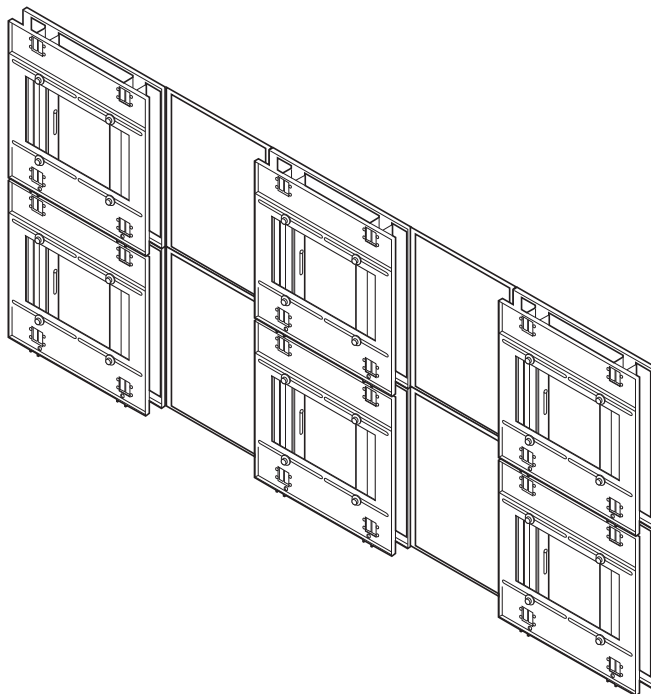


Mount the VESA bracket horizontally to install the monitor in landscape mode.

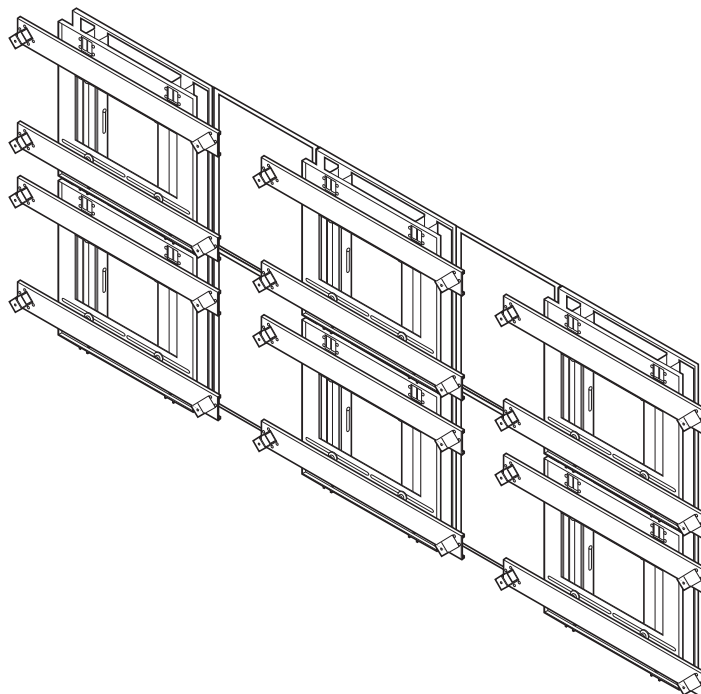


For multi-installation(Portrait)

Use the attach spacing jig to install the wall mounting bracket on the wall as shown in the diagram.


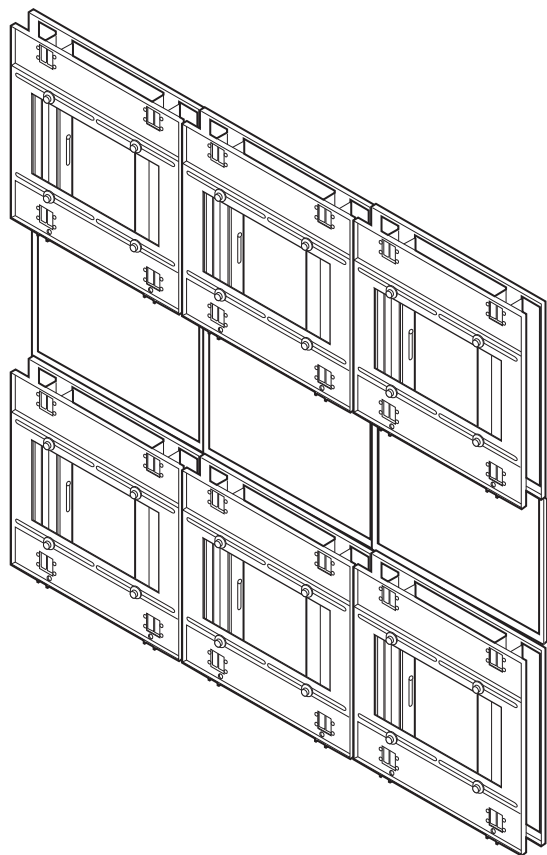


Mount the VESA bracket vertically to install the monitor in portrait mode.

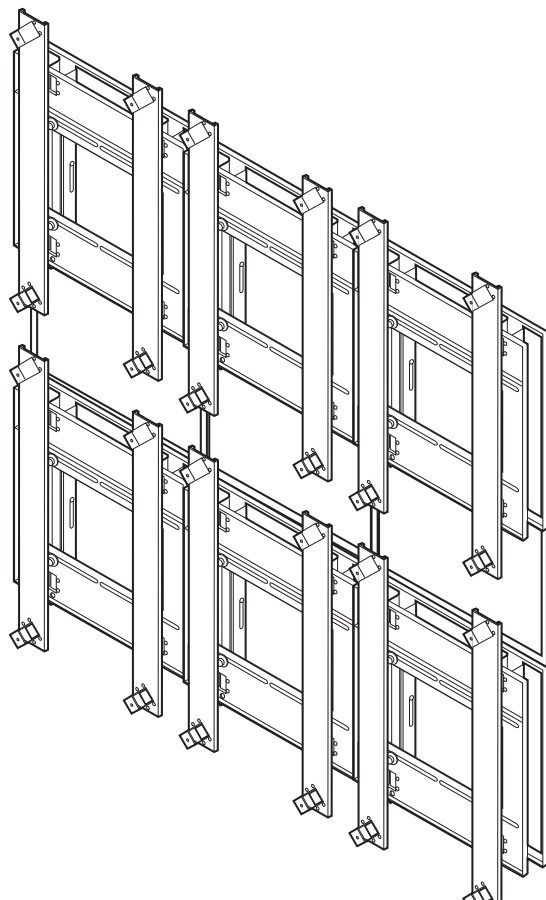

Check the position of the bracket and bracket holes


- 1 When installing the wall mounting bracket, make sure that the up/down adjustment screws are located at the bottom of the bracket as shown in the diagram.
- 2 To mount the bracket, move the VESA bracket so that the holes appear as shown in the diagram.

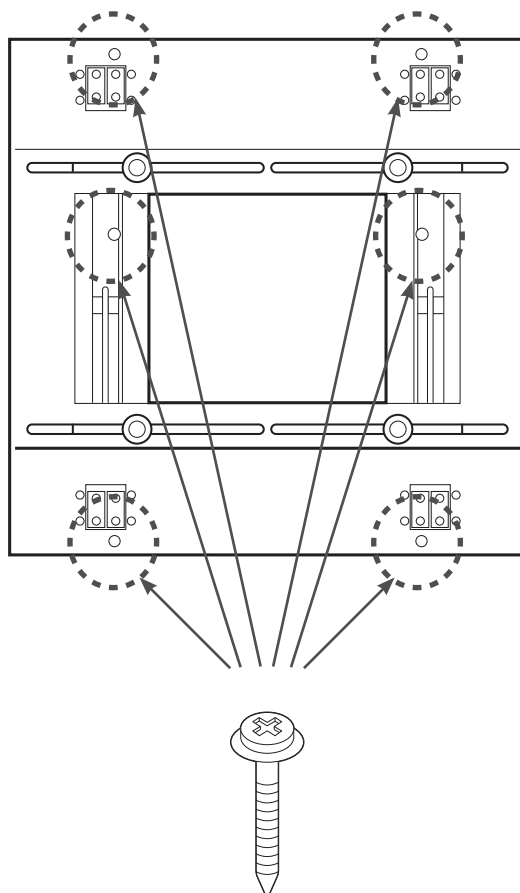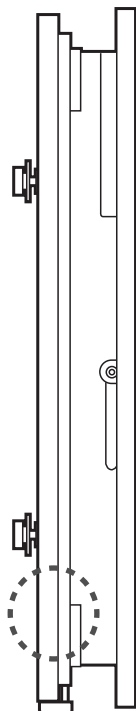


wall mounting fixing screws

Attach spacing Jig

- 1 For multi-installation, mount the spacer bracket into the holes using screws. (Screws are not included in the package.) Use the screws to fix the product, if necessary; otherwise hang the attach spacing jig by inserting it into the holes.

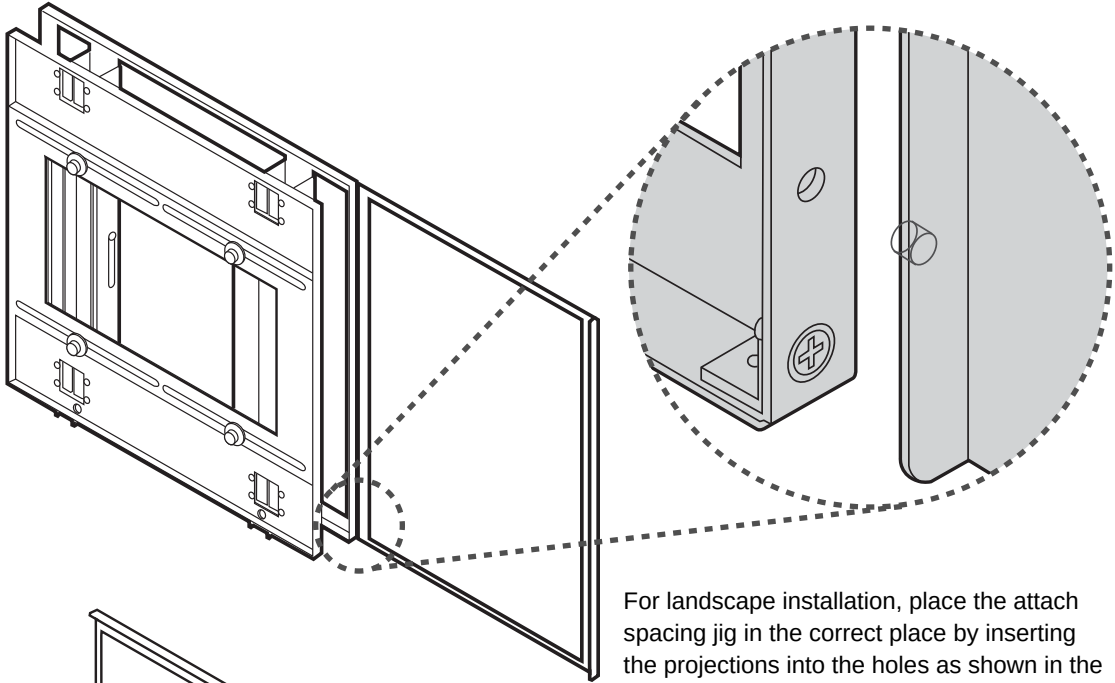



For landscape installation, place the attach spacing jig in the correct place by inserting the projections into the holes as shown in the diagram.

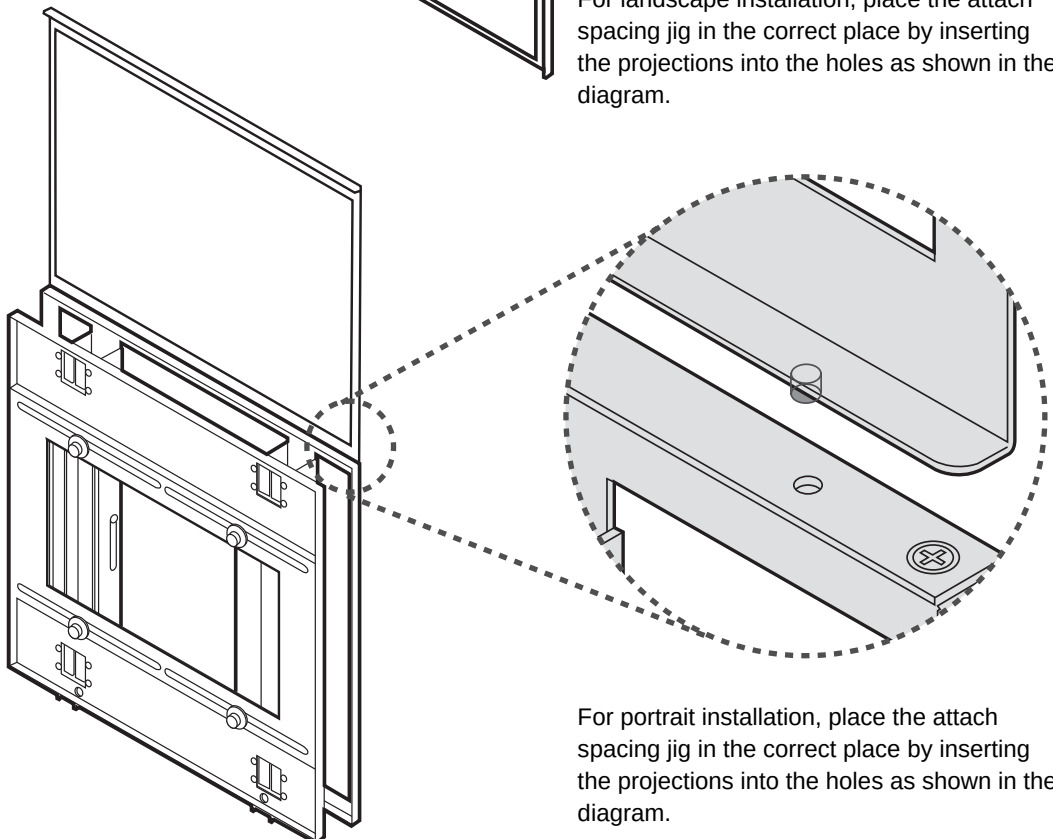


For portrait installation, place the attach spacing jig in the correct place by inserting the projections into the holes as shown in the diagram.

Mount the monitor into the VESA bracket


Mount the VESA bracket by attaching the enclosed M6 screws on the back of the product.

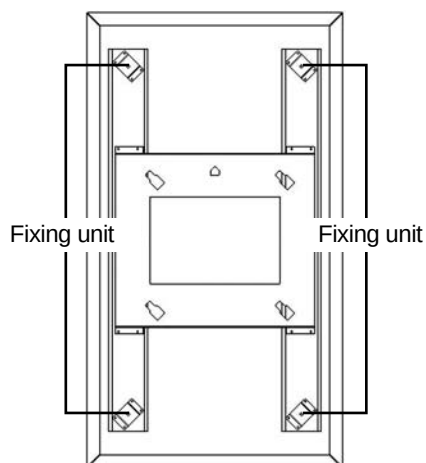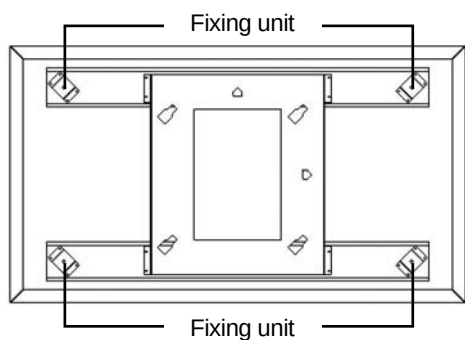

Install it so that the part in the red circle is placed at the top.

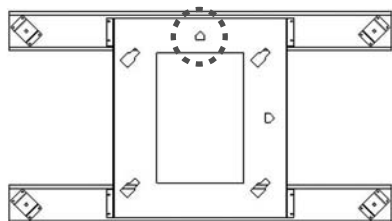


<For landscape installation>

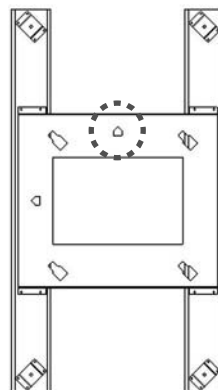

<For portrait installation>




Mount the monitor onto the wall mounting bracket (landscape)

Mount the monitor with the VESA bracket attached onto the guide spacer of the wall mounting bracket.

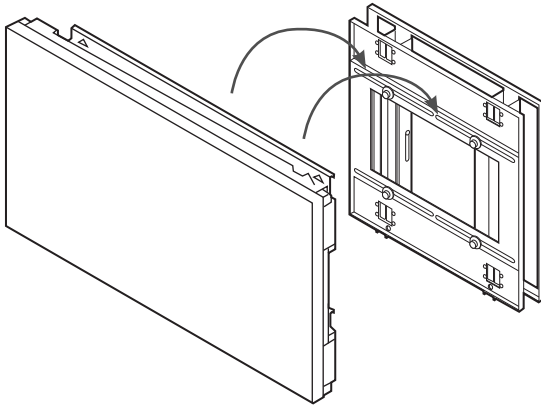


Mount the monitor onto the wall mounting bracket (portrait)

Mount the monitor with the VESA bracket attached onto the guide spacer of the wall mounting bracket.

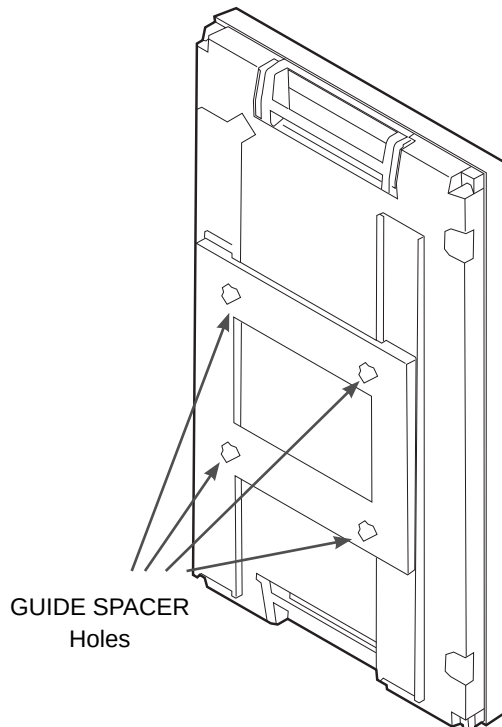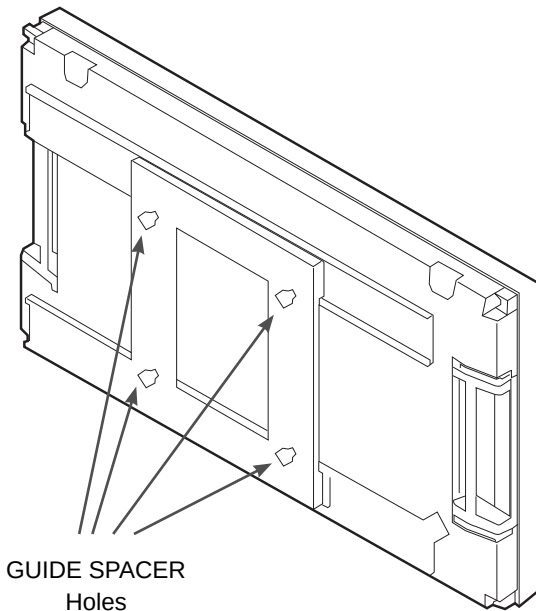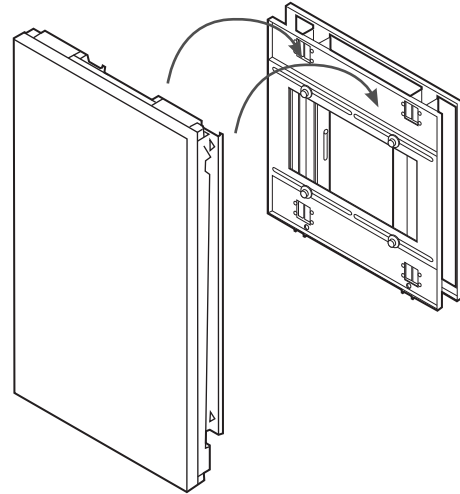


Product Operation

Left/right sliding, Up/down adjustment

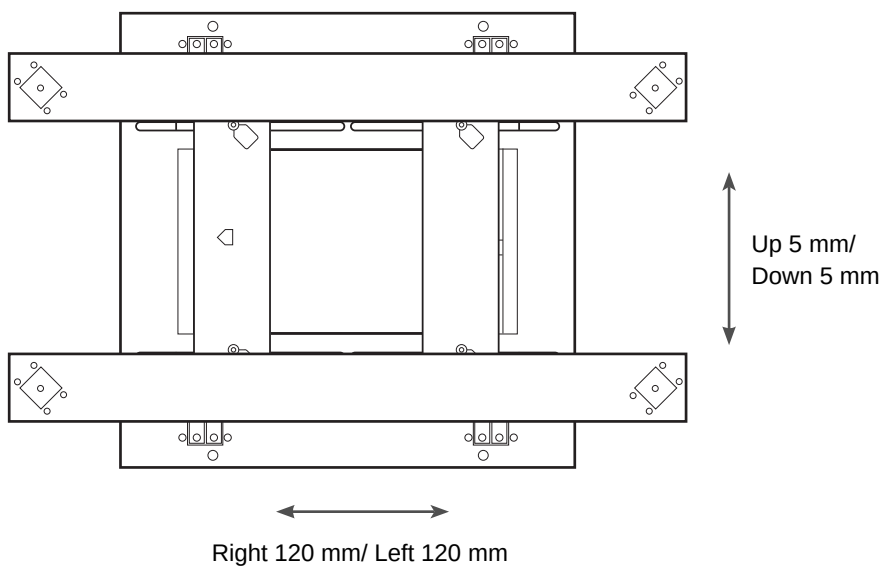

Forward/backward adjustment


It can stretch out up to 90 mm forward.

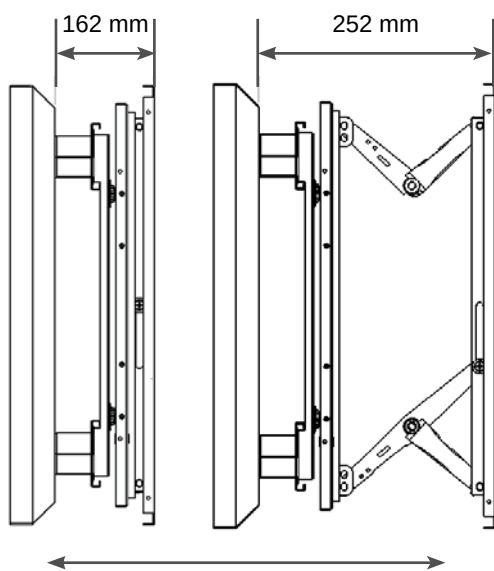


It can stretch out up to 90 mm forward.

TILT

The monitor can be tilted downward.

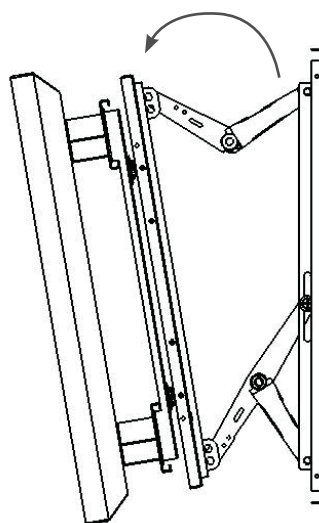


When adjusting it forward or backward, mount the fixing bar to maintain the maximum stretched position. The monitor can be moved forward by approximately 87 mm and maintained.

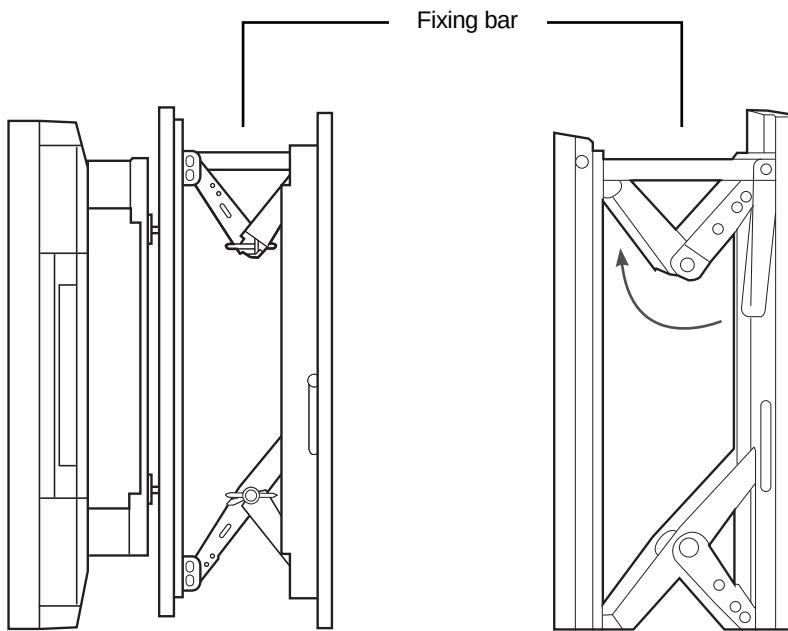


Location of the holes


Location of the holes for single installation

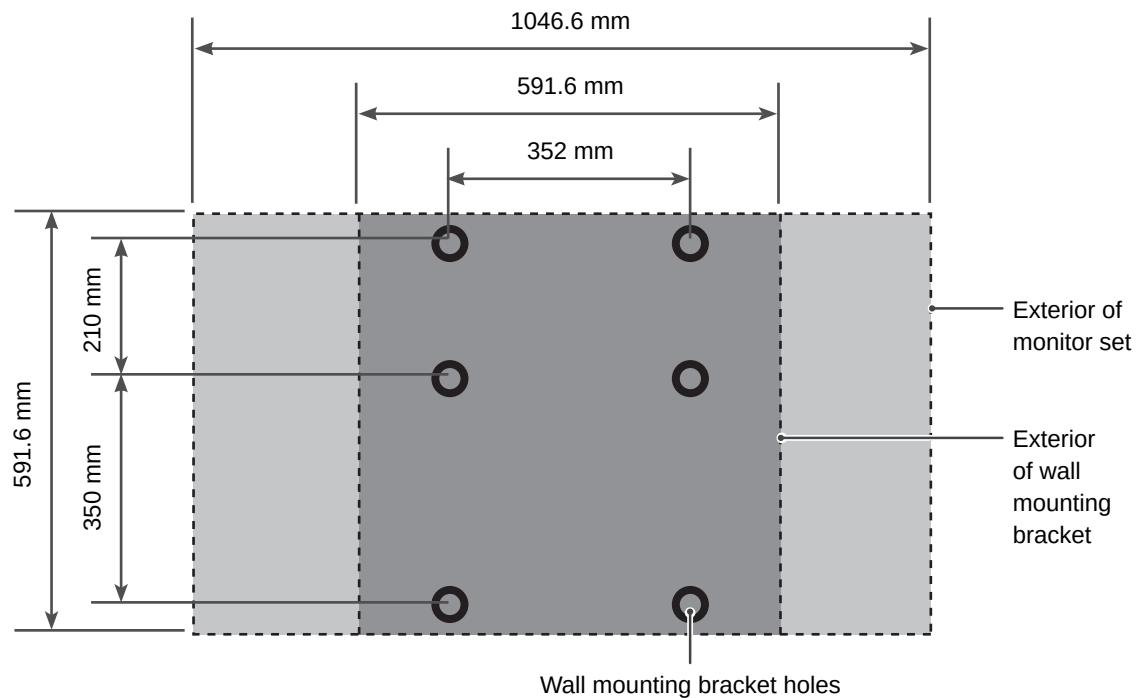

Location of the holes for multiple installation: landscape

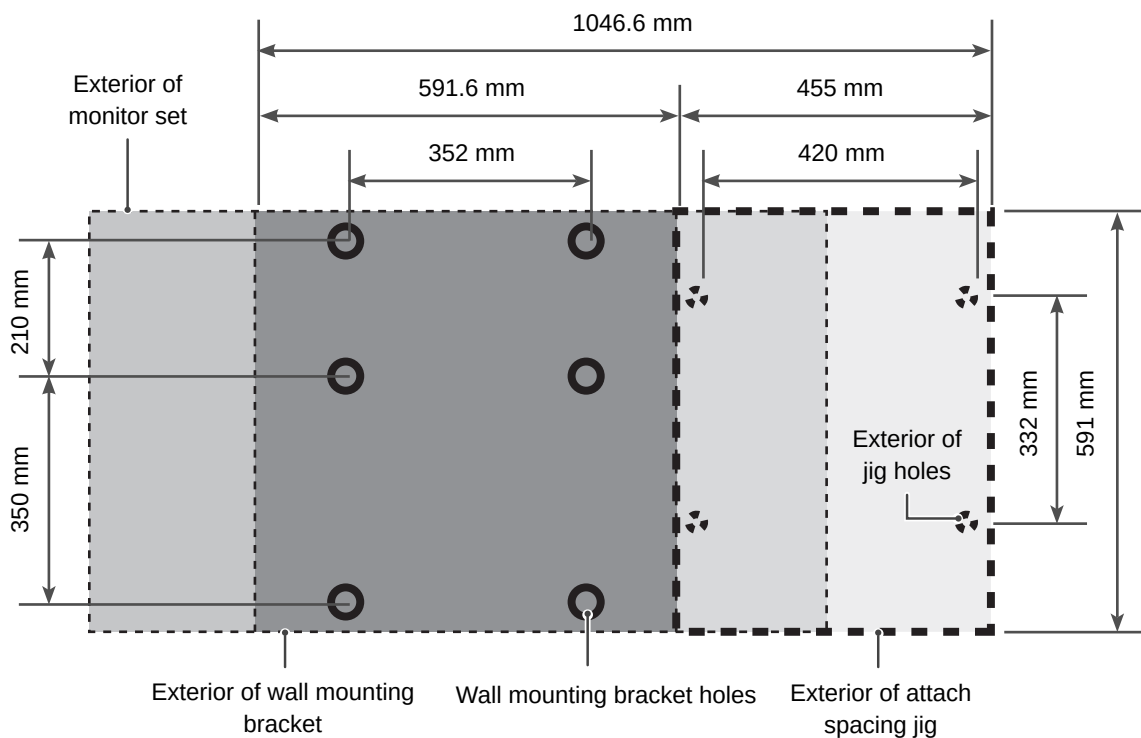


Location of the holes for multiple installation: portrait

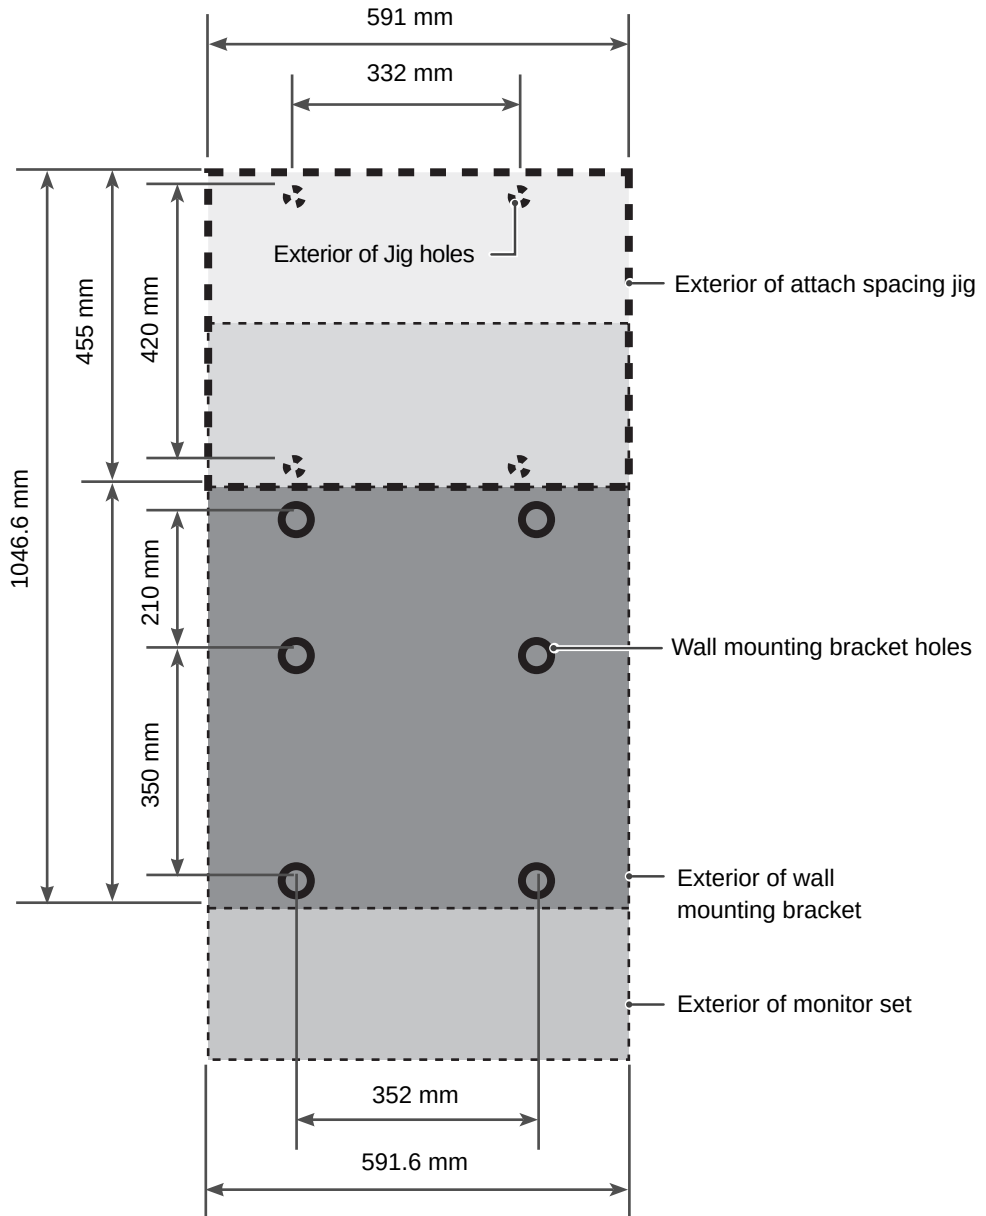

! NOTE

- Only drill the holes into the wall for the attach spacing jig if necessary.
- It can be mounted by using the side holes of the wall mounting bracket; no drilling is necessary.
- The center of the wall mounting bracket and the set is not met.

PRODUCT SPECIFICATIONS

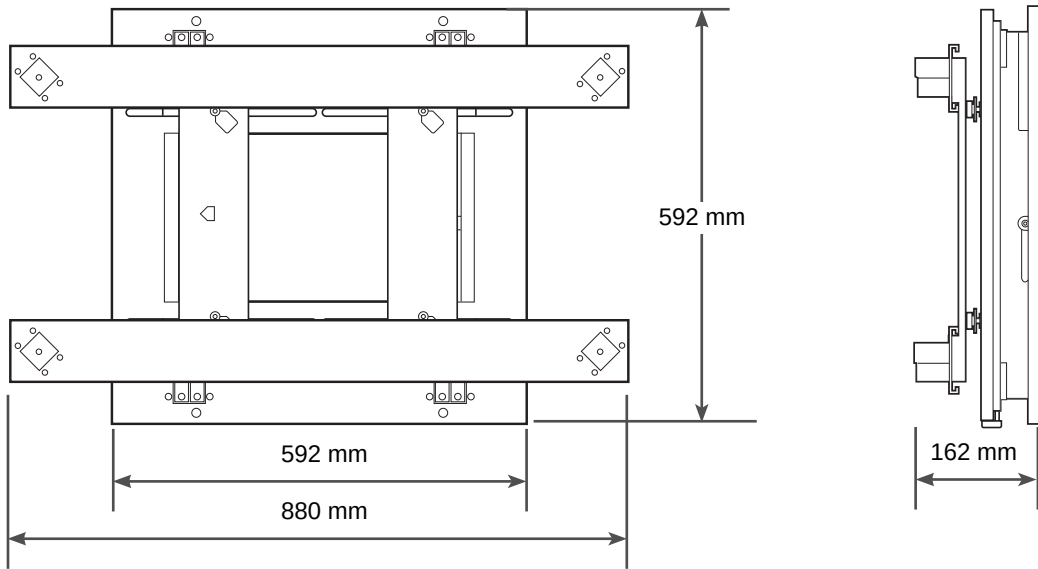

Model Name	WM-B840H
Wall mounting (width x height x depth) (mm)	880 x 592 x 162
BOX size (W x D x H), (mm)	974 x 674 x 252
Weight (kg)	15 Kg
VESA Standard	800 x 400
Max. Tensile Load (kg, f)	100 kgf
Position adjustment	Vertical adjustment in total: approx. 10 mm Horizontal adjustment in total: approx. 240 mm Forward: min. 90 mm
Minimum distance between the set and the wall	Approx. 160 mm
Special feature	Forward and downward tilt

