

OWNER'S MANUAL

MONITOR SIGNAGE

Please read this manual carefully before operating the your set and retain it for future reference.

MONITOR SIGNAGE MODELS

26TS30MF

47TS30MF

CONTENTS

3 INSTALLATION PREPARATION

- 3 Accessories
- 4 Mounting Holes
- 6 Unpacking and Cabling
- 8 Portrait Layout (Only supported for 47TS30MF)
- 9 Storage Method for Panel Protection
 - 9 - Correct Method
 - 9 - Incorrect Method

10 PRODUCT INSTALLATION

- 10 Lighting Installation
- 11 Installation in Enclosure
- 12 Precaution
 - 12 - Correct Method
 - 12 - Incorrect Method

13 TROUBLESHOOTING

14 SPECIFICATIONS

- 14 26TS30MF
- 15 47TS30MF

16 LVDS PIN MAP GUIDE

- 16 26TS30MF
- 17 47TS30MF

**NOTE**

- The warranty will not cover any damages caused by using the product in an excessively dusty environment.

INSTALLATION PREPARATION

Accessories

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and accessories.



**CD (Owner's Manual)/
Easy Setup Guide**



CAUTION

- Do not use any unapproved or counterfeit parts or accessories to ensure the safety and product life span.
- Any damages or injuries by using unapproved items are not covered by the warranty.




NOTE

- The accessories supplied with your product may vary depending on the model.
- Product specifications or contents in this manual may be changed without prior notice due to upgrade of product functions.


Mounting Holes

26TS30MF

Use M3 x 4 mm screws to mount the monitor. There are 16 positions for screws on the rear side of the product.

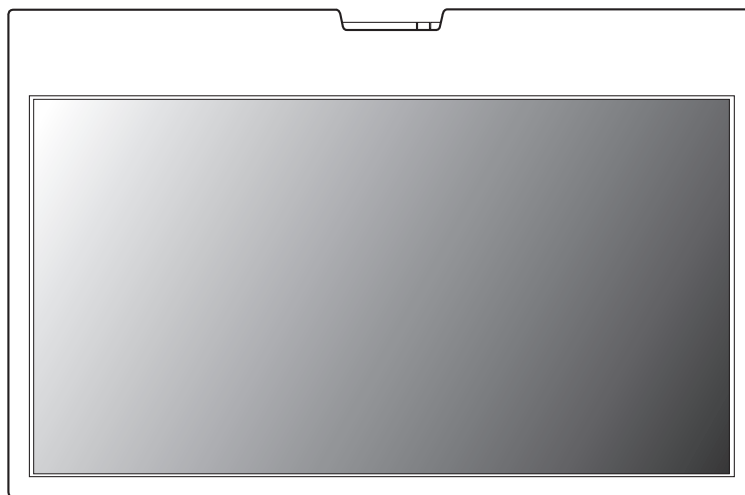

Front side of the product

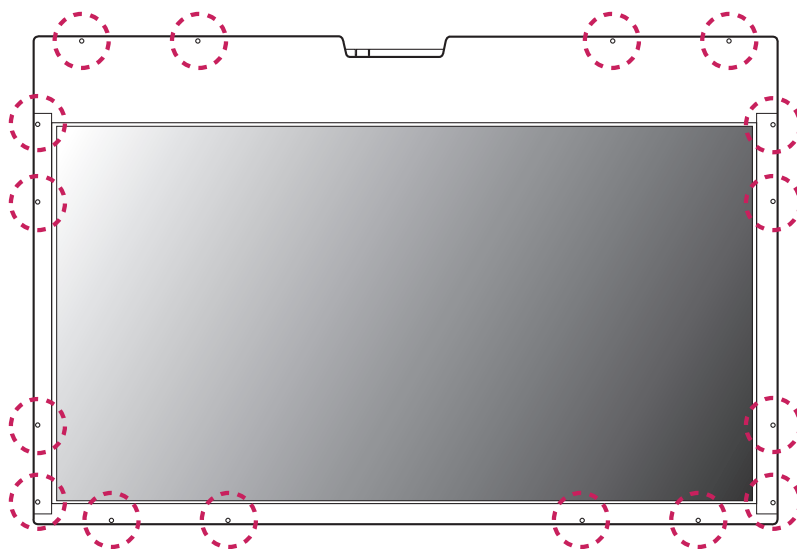


Rear side of the product

47TS30MF

Use M3 x 4 mm screws to mount the monitor. There are 20 positions for screws on the rear side of the product.



Front side of the product

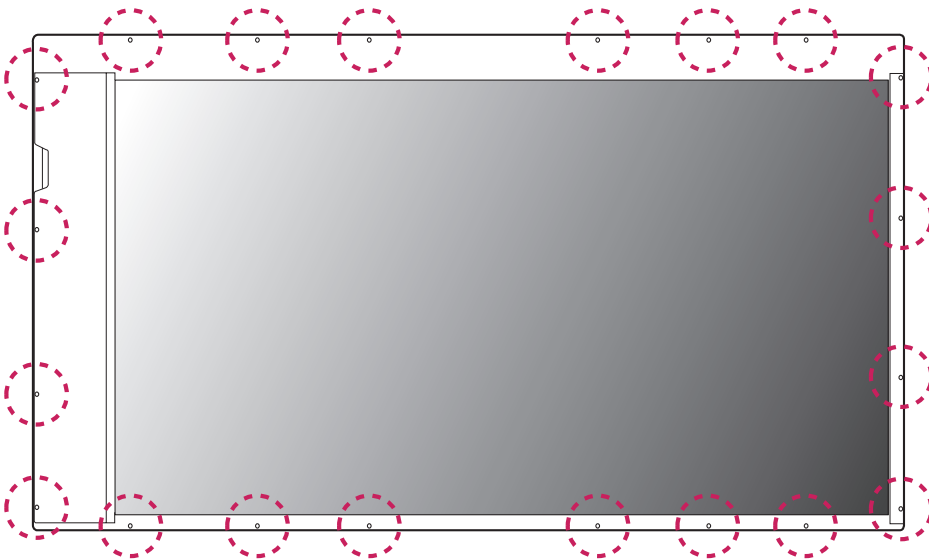

Rear side of the product


**CAUTION**

- This product has the front and back sides. Make sure the product is installed with the front side facing forward.
- Image is displayed reversely on the back side.


Unpacking and Cabling

26TS30MF


- 1 Lift up the cover of the box.

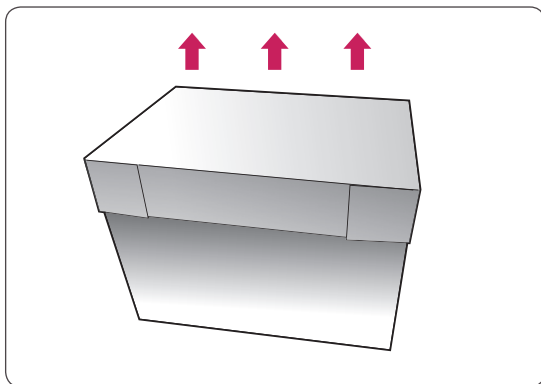


- 2 Remove the top packaging.

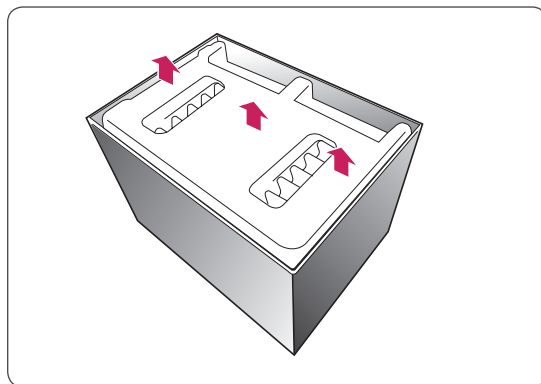


- 3 Hold both sides of the product and lift it up.

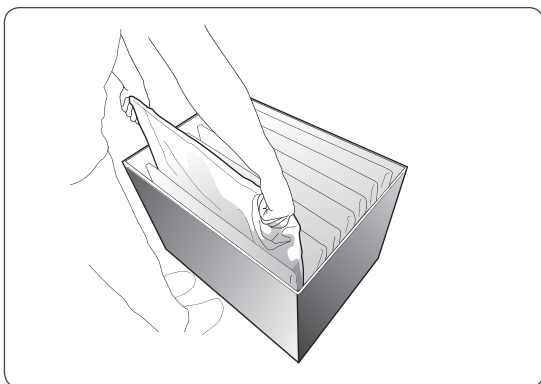


- 4 Remove the poly bag.

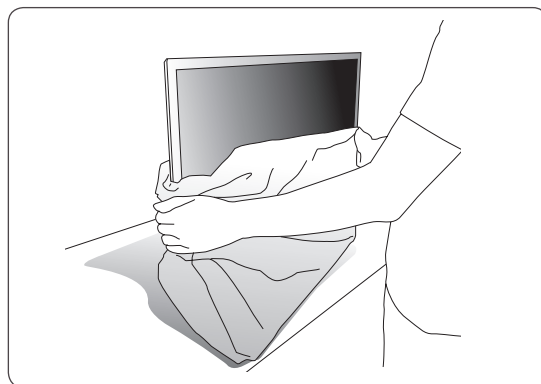

- 5 Place a soft cloth on the table and put the product down with the screen facing downward.

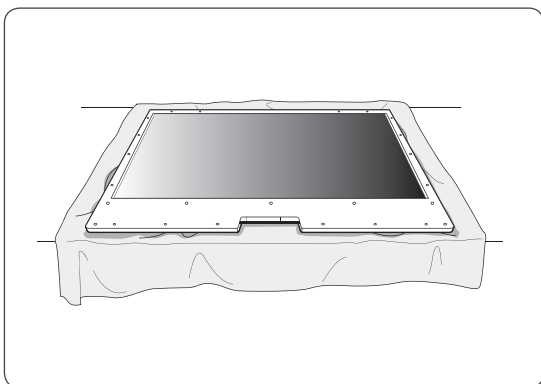


- 6 Connect the LVDS cable (Additional assembly is required). A scaler board or LVDS cable is optional and not provided with the product.

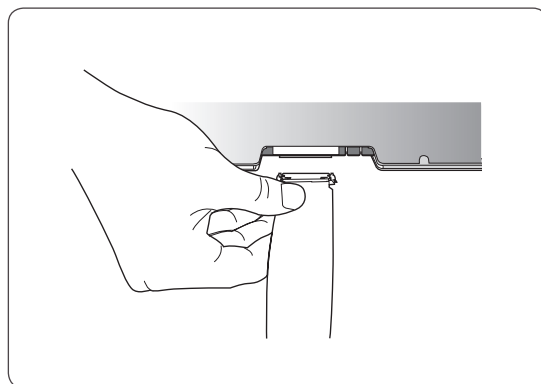


47TS30MF


1 Lift up the cover of the box.

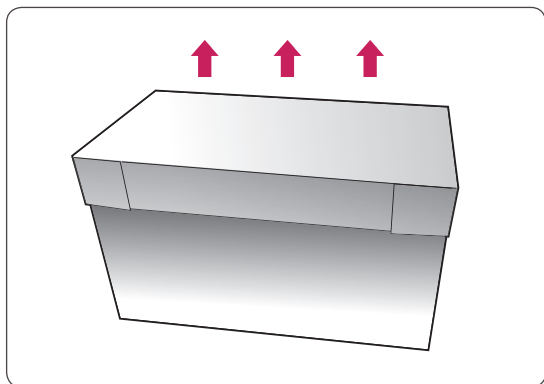


2 Remove the top packaging.

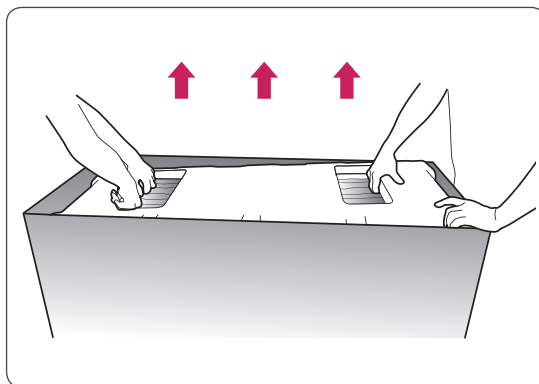


3 Hold both sides of the product and lift it up.

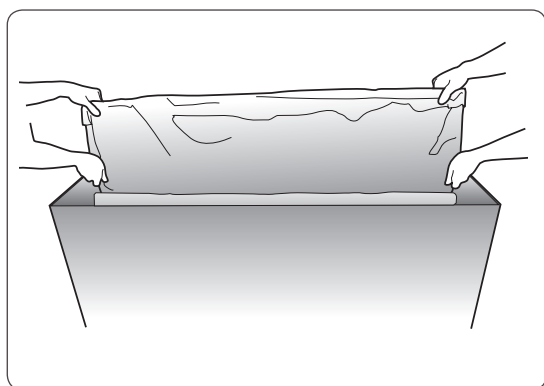


4 Remove the poly bag.

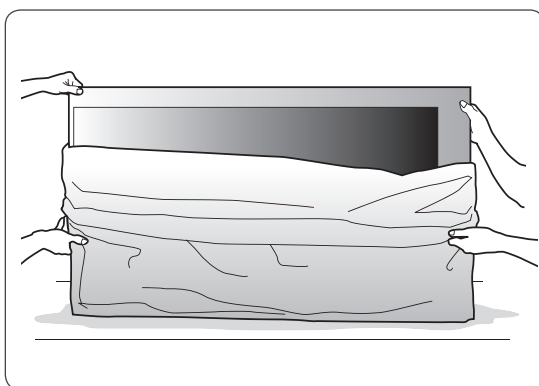

5 Place a soft cloth on the table and put the product down with the screen facing downward.

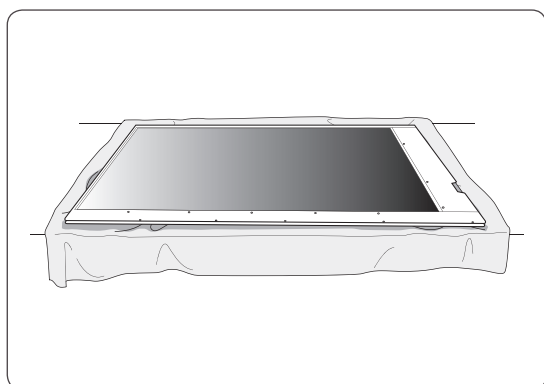

6 Connect the LVDS cable (Additional assembly is required). A scaler board or LVDS cable is optional and not provided with the product.

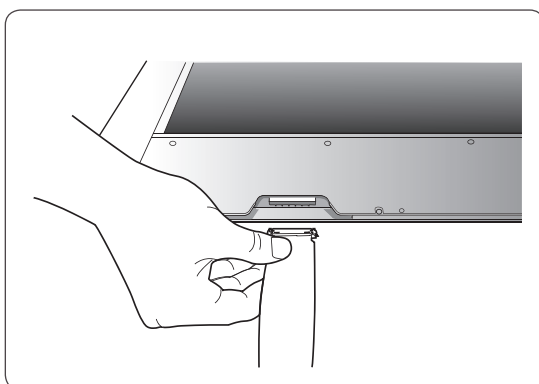


NOTE

- Please refer to "LVDS Pin Map Guide" on pages 16 to 18 for the LVDS cable assembly.

Portrait Layout (Only supported for 47TS30MF)

To install in portrait mode, rotate the set clockwise 90 degrees when looking at from the front. The portrait mode is only available on the scaler board. (The scaler board should support portrait mode.)

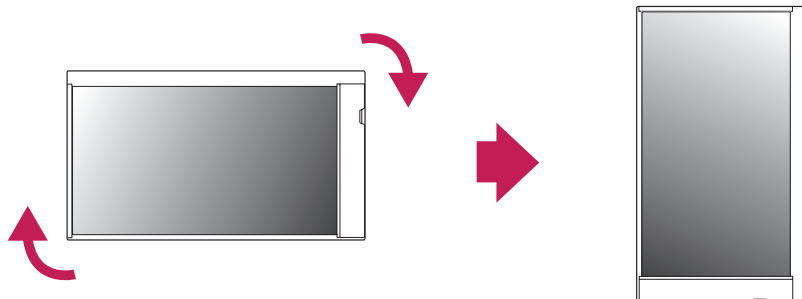


CAUTION


- The 26TS30MF model cannot be rotated.
- The scaler board is optional and it is not part of the product.

Storage Method for Panel Protection

Correct Method

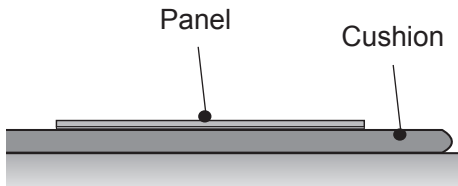


When laying the product on a flat floor, pit it face down on a cushion or blanket to prevent scratching and damage.

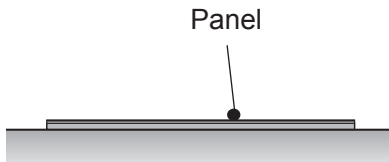


If there is no a cushion or a soft cloth available, ensure the floor is clean. Then lay the product down carefully with the panel facing either upward or downward. At this time, make sure that no object falls on the panel.

Incorrect Method

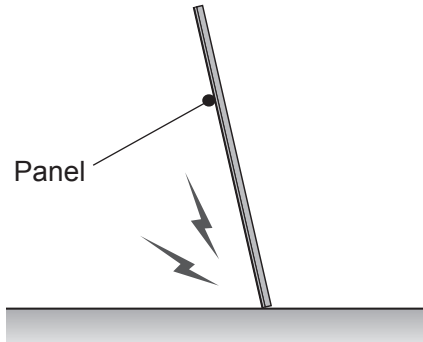

If the product is tilted onto the bezel, the bottom of the panel may be damaged.

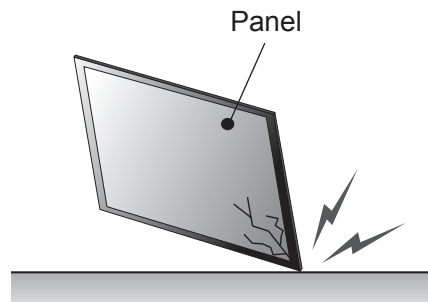


If the product is tilted onto the edge of the panel, the panel may be damaged.

PRODUCT INSTALLATION


Lighting Installation

This product must be installed with backlighting.

Lighting must be installed behind the product so that the display can be seen clearly.

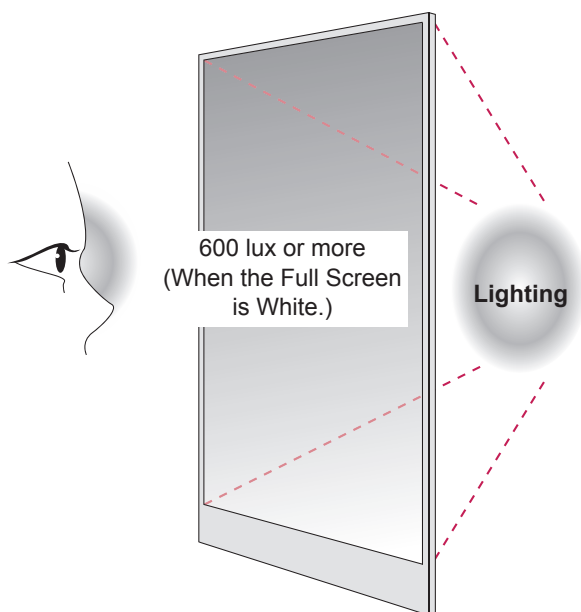


If something obstructs the backlighting, additional lighting may be required.

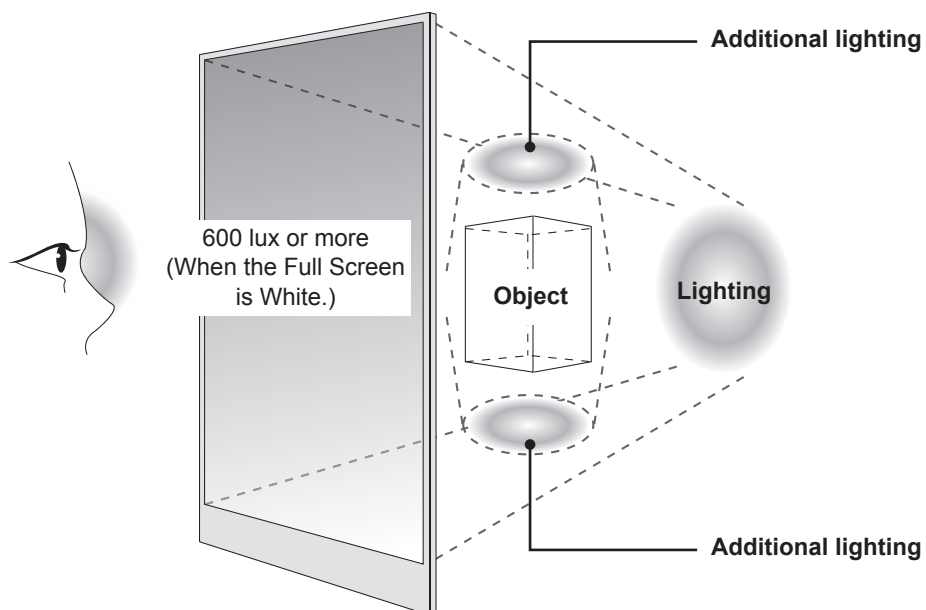

Installation in Enclosure

Install the product in the enclosure. Wear working gloves when installing the product. Do not use bare hands. Otherwise, it may cause personal injury.

- 1 Place the product in the enclosure.
- 2 Attach the product using the prepared screw holes and an additional enclosure guide frame.

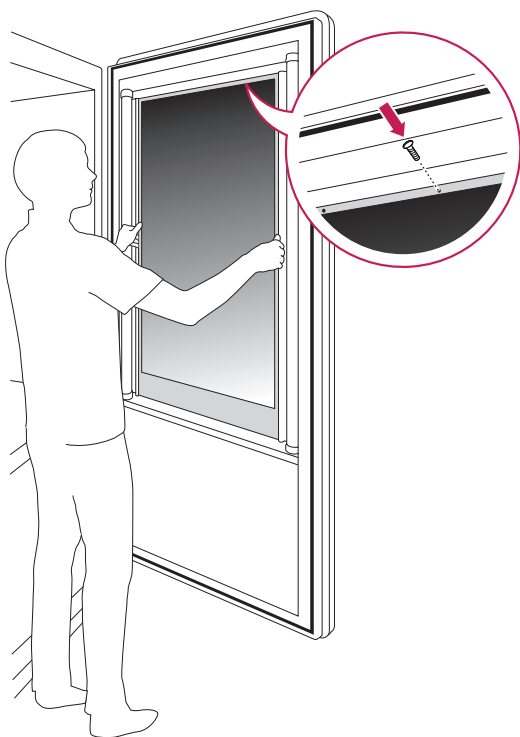


NOTE

- This product can be installed in various locations besides the enclosure.




CAUTION

- The panel of this product is so thin that it can be easily broken when it is exposed to the outside. Use a clear protective cover to keep the product from exposure to the elements.

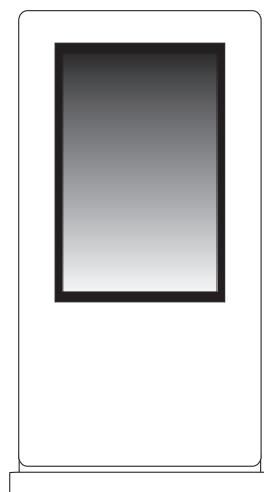


Example of the product in the enclosure

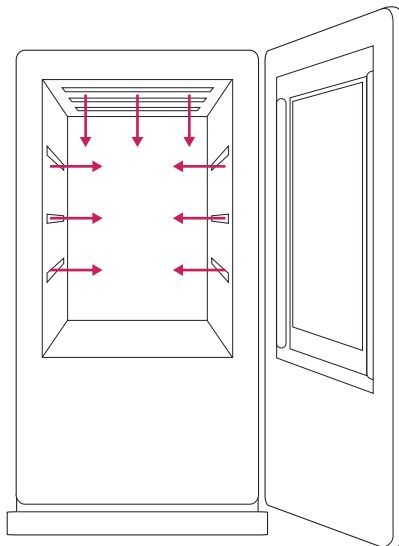


Example of the lighting installation
Lighting must be installed in the enclosure.

Precaution

Correct Method

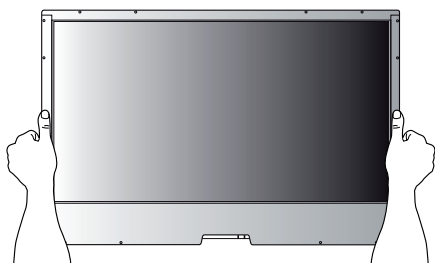

Do not hold the screen area when holding the product.

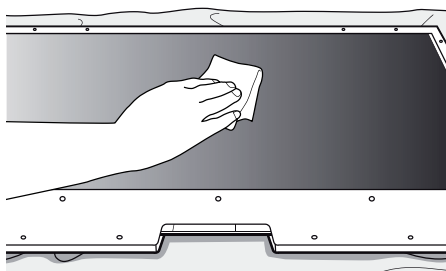


Use a soft cloth moistened with n-hexane to remove dust or stains on the screen.



CAUTION

- If a fixed image displays on the screen for a long period of time, it will be imprinted and become a permanent disfigurement on the screen. This is image burn or burn-in and not covered by the warranty.
- To prevent image sticking, do not play a still image for more than two hours.
- Recommended operation time for optimum performance and reliability is 12 hours or less per day.

Incorrect Method

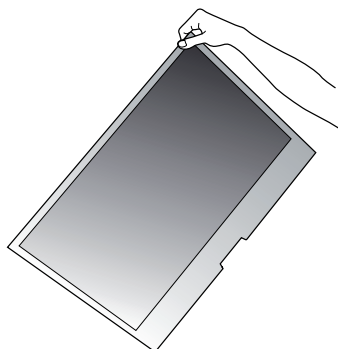

Do not lift up the product by holding a corner.



CAUTION

- Make sure the power is disconnected before moving or installing the product. Otherwise electric shock may occur.
- Wear working gloves when installing the product. Do not use bare hands. Otherwise, it may cause personal injury.
- If you install the product on a ceiling or slanted wall, it may fall and result in severe injury.
- Do not fasten the screws too tightly; this may cause damage to the product and void your warranty.
- Use M3 x 4 mm screws to mount the monitor. Any damages or injuries caused by misuse or use of improper accessories are not covered by the warranty.

TROUBLESHOOTING


After-image appears on the product.

Problem	Resolution
After-image appears when the product is turned off.	• If you use a fixed image for a long time, the pixels may be damaged quickly. Use the screen-saver function. • When a dark image is displayed on the screen after an image with high contrast (black and white or gray), this may cause image sticking. This is normal for LCD screen.


Screen color is abnormal.

Problem	Resolution
Screen color is unstable or mono-colored.	• Check the connection status of the LVDS cable. • Check whether the LVDS cable is connected correctly following the LVDS Pin Map Guide.
Do black spots appear on the screen?	• Several pixels (red, green, white or black color) may appear on the screen, which can be attributable to the unique characteristics of the LCD panel. It is not a malfunction of the LCD.

26TS30MF

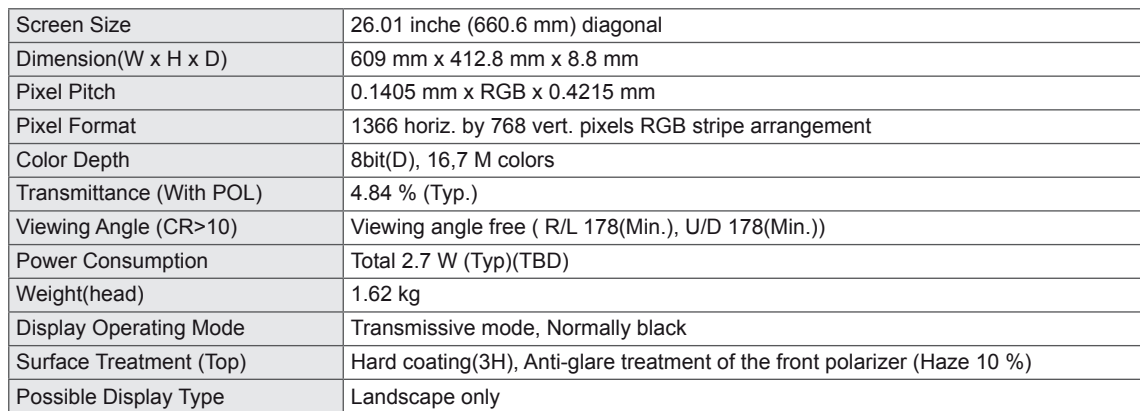

47TS30MF

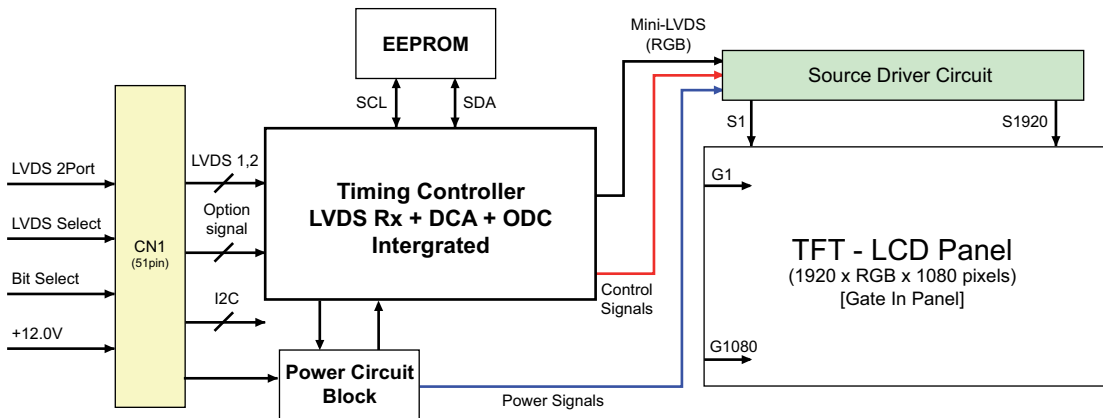

Screen Size	46.96 inch (1192.87mm) diagonal
Dimension(W x H x D)	1165.9 mm x 663.27 x 8.8 mm
Pixel Pitch	0.5415 mm x 0.5415 mm
Pixel Format	1920 horiz. by 1080 vert. Pixels, RGB stripe arrangement
Color Depth	10Bit (D), 1.07 Billion colors
Transmittance (With POL)	5,5 %(Typ.)
Viewing Angle (CR>10)	Viewing angle free (R/L 178 (Min.), U/D 178 (Min.))
Power Consumption	Total 6.6W (Typ.)(TBD)
Weight(head)	4.56 kg
Display Operating Mode	Transmissive mode, Normally black
Surface Treatment (Top)	Hard coating(3H), Anti-glare treatment (Reflectance < 2 %),
Possible Display Type	Landscape and Portrait Enabled

LVDS PIN MAP GUIDE

26TS30MF

- LVDS Connector(CN1) : KDF71G-30S-1H(Hirose) or Compatible, Refer to below table.
- Mating Connector : FI-X30C2L(Manufactured by JAE) or Equivalent
- Cable length: 1 m of FFC cable or less

Pin No.	Symbol	Description	Note
1	VLCD	Power Supply+12.0V	
2	VLCD	Power Supply+12.0V	
3	VLCD	Power Supply+12.0V	
4	VLCD	Power Supply+12.0V	
5	GND	Ground	
6	GND	Ground	
7	GND	Ground	
8	GND	Ground	
9	LVDS Select	'H' = JEIDA, 'L' or NC = VESA	
10	NC	No Connection	4
11	GND	Ground	
12	RA-	LVDS Receiver Signal(-)	
13	RA+	LVDS Receiver Signal(+)	
14	GND	Ground	
15	RB-	LVDS Receiver Signal(-)	
16	RB+	LVDS Receiver Signal(+)	
17	GND	Ground	
18	RC-	LVDS Receiver Signal(-)	
19	RC+	LVDS Receiver Signal(+)	
20	GND	Ground	
21	RCLK-	LVDS Receiver Clock Signal(-)	
22	RCLK+	LVDS Receiver Clock Signal(+)	
23	GND	Ground	
24	RD-	LVDS Receiver Signal(-)	
25	RD+	LVDS Receiver Signal(+)	
26	GND	Ground	
27	NC	No Connection (Note 4)	4
28	NC	No Connection (Note 4)	4
29	NC	No Connection (Note 4)	4
30	GND	Ground	

- Note :
1. All GND (Ground) pins should be connected together to the LCD module's metal frame.
 2. All VLCD (power input) pins should be connected together.
 3. All Input levels of LVDS signals are based on the EIA 644 Standard.
 4. These pins are used only for LGD (Do not connect).

47TS30MF

- LVDS Connector(CN1) : FI-RE51S-HF or Equivalent, Refer to below table.
- Mating Connector : FI-RE51S or Equivalent
- Cable length: 1 m of coaxial cable or less

Pin No.	Symbol	Description	Note
1	GND	Ground	1
2	NC	No Connection	4
3	NC	No Connection	4
4	NC	No Connection (Reserved for LGD)	4
5	NC	No Connection (Reserved for LGD)	4
6	NC	No Connection (Reserved for LGD)	4
7	LVDS Select	'H' = JEIDA, 'L' or NC = VESA	
8	NC	No Connection	
9	NC	No Connection	
10	NC	No Connection	
11	GND	Ground	1
12	RO0N	FIRST LVDS Receiver Signal(A-)	
13	RO0P	FIRST LVDS Receiver Signal(A+)	
14	RO1N	FIRST LVDS Receiver Signal(B-)	
15	RO1P	FIRST LVDS Receiver Signal(B+)	
16	RO2N	FIRST LVDS Receiver Signal(C-)	
17	RO2P	FIRST LVDS Receiver Signal(C+)	
18	GND	Ground	1
19	ROCLKN	FIRST LVDS Receiver Clock Signal(A-)	
20	ROCLKP	FIRST LVDS Receiver Clock Signal(A+)	
21	GND	Ground	1
22	RO3N	FIRST LVDS Receiver Signal(D-)	
23	RO3P	FIRST LVDS Receiver Signal(D+)	
24	RO4N	FIRST LVDS Receiver Signal(E-)	5
25	RO4P	FIRST LVDS Receiver Signal(E+)	5
26	NC	No Connection	
27	Bit Select	'H' or NC = 10bit(D), 'L' = 8bit	
28	RE0N	SECOND LVDS Receiver Signal(A-)	
29	RE0P	SECOND LVDS Receiver Signal(A+)	
30	RE1N	SECOND LVDS Receiver Signal(B-)	
31	RE1P	SECOND LVDS Receiver Signal(B+)	
32	RE2N	SECOND LVDS Receiver Signal(C-)	
33	RE2P	SECOND LVDS Receiver Signal(C+)	
34	GND	Ground	1
35	RECLKN	SECOND LVDS Receiver Clock Signal(-)	
36	RECLKP	SECOND LVDS Receiver Clock Signal(+)	
37	GND	Ground	1
38	RE3N	SECOND LVDS Receiver Signal(D-)	
39	RE3P	SECOND LVDS Receiver Signal(D+)	
40	RE4N	SECOND LVDS Receiver Signal(E-)	5
41	RE4P	SECOND LVDS Receiver Signal(E+)	5

Pin No.	Symbol	Description	Note
42	NC	No Connection	
43	NC	No Connection	
44	NC	No Connection	
45	GND	Ground	
46	GND	Ground	
47	GND	Ground	
48	VLCD	Power Supply+12.0V	2
49	VLCD	Power Supply+12.0V	2
50	VLCD	Power Supply+12.0V	2
51	VLCD	Power Supply+12.0V	2

Note : 1. All GND (Ground) pins should be connected together to the LCD module's metal frame.

2. All VLCD (power input) pins should be connected together.

3. All Input levels of LVDS signals are based on the EIA 644 Standard.

4. Specific pins(pin No. #2~#6) are used for internal data process of the LCD module.
These pins should be no connections.

5. LVDS pin (pin No. #24,25,40,41) are used for 10Bit (D) of the LCD module.

If used for 8Bit (R), these pins are no connection.



Make sure to read the Safety Precautions before using the product.
Keep the Owner's Manual(CD) in an accessible place for future reference.
The model and serial number of the SET is located on the back and one side of the SET. Record it below should you ever need service.

MODEL _____

SERIAL _____

Temporary noise is normal when powering ON or OFF this device.