



LG Pra.L

User Manual

Facial Contouring Device

For user safety and convenience, please read the user manual before using the product.

Model
BLQ1

www.lg.com

Table of contents

Safety Precautions

- 4 Safety and Regulatory
- 8 Storage

Precautions for skin care

- 9 Things to Know for Safe Use
- 12 Q&A

Things to Know

- 14 Product Features
- 15 Components

Exploring the Product

- 16 Main Body
- 18 Charging Cradle

Caring Skin

- 19 Note before skin care
- 21 Preparing for Care
- 28 Caring

Charging the Battery

- 38 Charging
- 40 Checking Usage Status
- 41 Checking Charging Status

Additional Functions

- 42 Disinfection
- 43 Replacing the Cartridge
- 44 Initializing the Product

Maintaining the Product

- 45 Keeping the Main Body Clean

Before Reporting Product Malfunction

- 46 Troubleshooting

Appendix

- 48 Specification

This manual is a standard version. Images and contents in this manual may not be identical to the actual product. This manual is subject to change at the manufacturer's discretion.

Safety Precautions

| Safety and Regulatory



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING:

- TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
- Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION:

- Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

- The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.
 - For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.
 - Do not place metal objects such as metal pins, metal beauty tools, coins, etc. on the charging pins. It may cause a fire. If it is not charging, unplug the power plug.
 - It is recommended that you use the 5 V DC adapter (more than 2 A) with this device. If you do not use the recommended adapter, charging is unavailable or charging time may differ.
1. The appliance is not to be used by persons (including children aged from 8 years) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 2. Children being supervised not to play with the appliance.
 3. Cleaning and user maintenance shall not be made by children without supervision.
 4. Instructions for class III appliances state that it must only be supplied at SELV.

CAUTION: when using this product in environments of low humidity

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

For models using a battery

This device is equipped with a portable battery or accumulator.

CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect type.

How to Safely remove the batteries or the battery pack from the equipment:

To Remove the old batteries or battery pack, follow the assembly steps in reverse order. To prevent contamination of the environment and bring on possible threat to human and/or animal health, the old batteries or the battery pack must be put in an appropriate container at designated collection points. Do not dispose of batteries or battery pack together with other waste. It is recommended that you use local, free reimbursement systems batteries or battery packs, (may not be available in your area). The batteries or the battery pack should not be exposed to excessive heat such as sunshine, fire or the like.

For models using a built-in battery

Do not store or transport at pressures lower than 11.6 kPa and at above 15,000 m altitude.

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- when the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off;
- for additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- This appliance contains batteries that are only replaceable by skilled persons.

Symbols	
~	Refers to alternating current (AC).
≡	Refers to direct current (DC).
□	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refers to "ON" (power).
⚡	Refers to dangerous voltage.

| Storage

- As the charging adapter is not waterproof, do not place it near water.
- If any charging components are in water, immediately disconnect the charging adapter before touching either the charging cable.
- Do not place the cable near heated objects or sources of heat.
- Avoid leaving the device is left unused for a long time, and charge the battery at least every 3 months to maintain the battery life.
- Do not prick the groove of the device with sharp metal objects such as keys, hairpins, necklaces, and nails.
- Do not throw away the product packaging. It should be used when repackaging the product for transportation.
- Do not put volatile liquids such as pesticides near the device or charger.
- Wiping the product surface vigorously can damage the device.
- Do not place plastic devices or rubber on the device for a long time.
- When cleaning the product, use a soft, dry cloth, and when the surface is dirty, use a soft, damp cloth or wet tissue. Do not use strong chemicals such as alcohol, benzene and thinner as they may deteriorate the surface of the device.
- Be careful not to allow water or cosmetics to enter the ventilation holes of the product.
- Do not put the device inside a dishwasher, oven, or washing machine.
- Do not expose the device directly to strong sunlight and do not put it near hot or boiling water.
- When charging the product, be careful not to smear any foreign substances such as moisture or cosmetics on the charging area. Otherwise, it may cause damage to the device or cause a fire.

Precautions for skin care

| Things to Know for Safe Use

General precautions



- It is not recommended that pregnant or breastfeeding women use this device. (Because hormonal balance can become unstable during pregnancy or breastfeeding, skin troubles may worsen temporarily, regardless of the use of the product.)



- Those who are not able to communicate clearly, including children, are recommended to use the product under the guidance of a guardian. (Ensure that infants under 36 months of age do not use this product.)



- Please use the product at least two months after cosmetic surgery or skin treatments. It is recommended to use it when your skin is recovered.
- Do not use the product over the areas injected with fillers or autologous fat or the areas inserted beneath the skin with thread lift.




- Those who have a facial skin disease or frequently suffer from skin problems on the face should consult a dermatologist before use.
- Regardless of using the product, skin condition can temporarily change by environmental or bodily factors such as seasonal change, drinking or stress. If your skin conditions become worse, stop using the product immediately and consult a specialist. It is recommended to use it again when your skin has been recovered.
- For those who wear implanted artificial cardiac pacemakers, we do not recommend using the product.

- Efficacy and safety have been verified by an external accredited organization.
- However, in the case of people who have serious diseases or who are under treatment, please consult a doctor before use.
- After the procedure, please refrain from using scrubs, peeling agents for at least 2-3 days.
- If you notice any scratches or breaks on the part of the head that comes into contact with your skin, discontinue use and receive serviced from a service center.

Precautions for use



- When using the product, put the applicator against the skin tightly.
- Do not apply excessive force when contacting the product to skin. When pushing with excessive force, a point of energy coagulation is created in an area deeper than the skin layer, which may cause more severe pain or other troubles. Therefore, adhere to the skin with appropriate force when using the product.
- Do not irradiate in the air without appropriate skin contact.

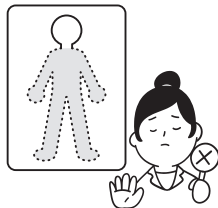

- As a product used on the face and neck, it is not recommended to use on other parts of the body.



- Care must be avoided between the eyebrows, around the eyes, around the mouth (1cm from the oral angle), jawbone line, and uvula line.



- Various skin irritations may occur depending on the skin condition. When starting to use it for the first time, begin with LEVEL (intensity) 1 and adjust the strength according to skin tolerance.
- Do not use repetitively or consecutively in the same location.



- Please do not use the product for other purposes that are not indicated in the manual.

I Q&A

Q1


What cosmetics do you apply before using the product?

Be sure to cleanse your face and apply a moisturizing gel before using this product.

If the moisture gel is dry or insufficient, the shot may not be properly fired. Make sure that you apply a sufficient amount of moisture gel evenly to the Ultrasound irradiation part and the facial skin when you use the product.

Q2

What can I do if I feel my skin is dry?

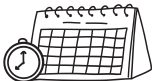

- Please reduce the frequency of shots you use per week.
- It is recommended to apply moisturizing cream after using the product.
- If you are taking medications, consult your doctor to check if they make your skin dry before using the product.

Q3

How should I take care of my skin after using the product?

- Depending on the individual, the skin may turn red along with a sensation of warmth. In most cases, it will naturally revert to its original state, so avoid saunas, steam rooms for at least a day. Instead, cleanse gently with lukewarm water.
- Avoid cleansers with exfoliating scrub ingredients as much as possible. If you plan to go outside, make sure to absorb or wipe off the moisturizing gel and then apply plenty of sunscreen before heading out.
- Using skincare products like moisturizing masks and creams can promote skin regeneration by providing essential hydration.

Q4

My skin gets irritated when using the product. Is this normal?

- Depending on your skin condition, you may feel a slight tingling sensation. This is a typical skin response observed with micro-focused ultrasound beauty products, and the degree of pain may differ for each area. If it is too painful to endure, lower the level of usage.
- Also, if the moisturizing gel is dry or insufficient, the tingling sensation may intensify. Make sure that you apply a sufficient amount of moisture gel evenly to the Ultrasound irradiation part and the facial skin when you use the product.

Q5

You may feel less irritation (pain) compared to the initial use. Is it normal?

- If skin compliance for the pain increases as use time increases, you may feel less irritation when using in the same energy continuously.
- Once your skin is improved by using Dermathera continuously, you can feel less irritation.
- If you do not feel irritation, use it by increasing 1~2 level(s).
- If you do not hear an operation sound when irradiating a shot, or if there is no pain on the forehead even in level 3 or higher, it is recommended to visit the service center to inspect the device.

Things to Know

※ This product is a skin care device, not a medical device, and produces no medical effect whatsoever other than the cosmetic effects related to the product function.

| Product Features


Improving skin elasticity with the micro-focus ultrasound

The product focuses ultrasound energy on the target area of a skin layer, creating a point of energy coagulation and promoting the generation of new collagen and elastin in the area.

※ The produced effects may vary depending on the skin properties of the user and the cosmetics that the user uses.

| Components


Main Body

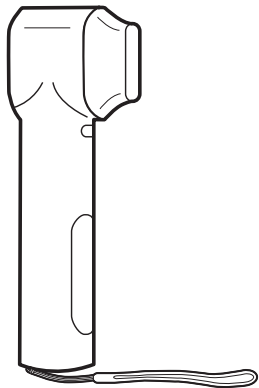


Charging Cradle



USB cable (C type)

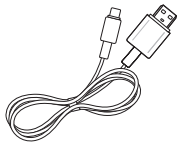


Manual

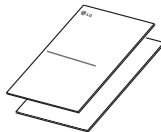

Exploring the Product

I Main Body

Front

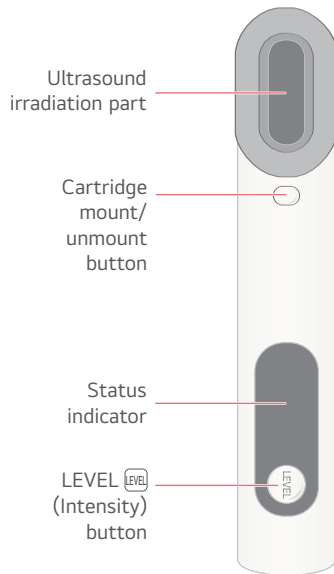


Back



✓ Note

- If you press the Power (⏻) button briefly, the product may not turn on or off. Press and hold the Power (⏻) button.


Bottom

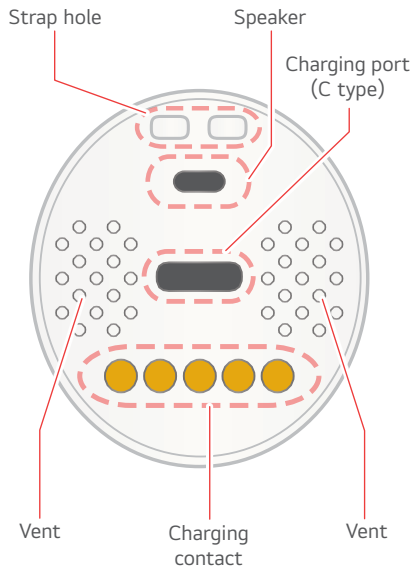

| Charging Cradle

✓ Note

- When using it, be careful so that the charging contact does not touch the skin.

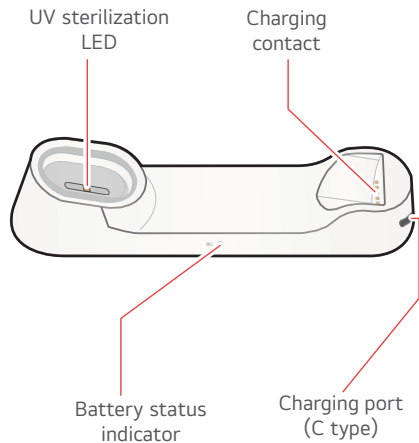

Caring Skin

| Note before skin care

Recommended usage frequency

When using this product, it is advisable to use a total of 300 shots once a week on the entire guided area.

Using the product more frequently than the recommended use frequency may cause skin irritation.

Make sure that you use the product after applying a moisture gel.

Cleanse thoroughly and apply an ample amount of moisturizing gel to each guide area you wish to care for before using the product.

If you don't apply a sufficient amount of moisture gel or the gel dries out, shots may not be fired properly or there can be skin irritations such as tingling. Make sure that you apply a sufficient amount of moisture gel to the applicator and the facial skin when you use the product.


! Parts where Care Must Be Avoided

● Areas to avoid




- Care must be avoided between the eyebrows, around the eyes, around the mouth (1cm from the oral angle), jawbone line, and uvula line.

- Adjust the intensity according to the skin properties and do not fire shots to the same area repeatedly or continuously.

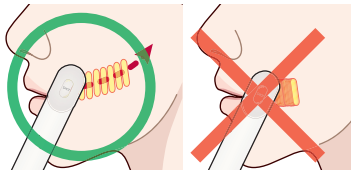

- Adjust the number of shots according to the size of a user's guide area when using the device.
- The manufacturer is not responsible for any side effect occurred by providing care to the part that must be avoided.
- 15 dots are irradiated per shot sequentially as below.

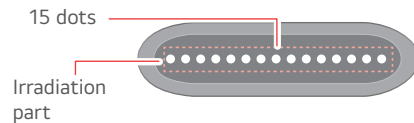

| Preparing for Care


Setting Voice Guide

Please check the following first.

- If a voice guide is set to Guide Off (Mute), no voice guidance or sound effects are provided. If you need a voice guide, turn on the voice guide.
- If you press the Power  button briefly, the product may not turn on or off. Press and hold the Power  button.
(When turning on: Press and hold for 2 seconds or longer.
When turning off: Press and hold for 3 seconds or longer.)


- At first, follow the voice guide. Once you become familiar with the proper usage, feel free to adjust the settings to either sound effects or silent mode.

- 1 Press and hold the Power  button for about 2 seconds or more to turn on the product.
- 2 With the product powered on, each time you press and hold the LEVEL  (intensity) button on the front of the product and the Power  button on the back of the product simultaneously for about 3 seconds to switch between the voice guide settings in the following order. (Voice guide on → Sound effect → Voice guide off (Mute))

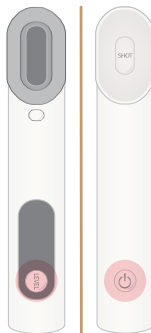

Setting language

- 1 Press and hold the Power  button for about 2 seconds or more to turn on the product.
- 2 With the product powered on, each time you press and hold the LEVEL  (intensity) button on the front of the product and the SHOT  button on the back of the product simultaneously for approximately 3 seconds, the language used will change.
(English → Mandarin → Korean)

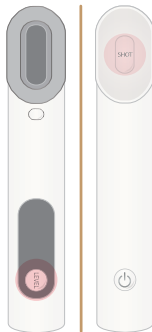


Changing the User

- 1 Press and hold the Power  button for about 2 seconds or more to turn on the product.
- 2 With the product powered on, each time you press and hold the LEVEL  (intensity) button on the front of the product for more than about 3 seconds, the user changes.



Getting to Know the Status Indicator

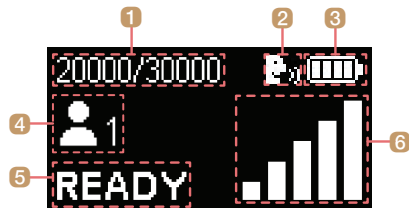

1 Number of shots fired / Total number of shots recommended

2  : Voice guide on
 : Sound effect
 : Voice guide off (Mute)

3  : Battery level
 : Battery charging status


4  : User number

5 Product status display

- **READY:** The product power is turned on and ready for use.
- **Number:** Indicates the number of shots fired.
- **REPLACE:** There is no shot left in the cartridge. Please replace the cartridge.
- **NO CARTRIDGE:** The cartridge is absent or not mounted properly. Please mount the cartridge properly.
- **NO BATTERY:** The battery has exhausted. Please recharge the battery.
- **TILT:** The product is tilted and deviates from the recommended use angle. Please adhere to the recommended use angle. (→ See "How to Use the Device Correctly" on page 26.)
- **CHARGING...:** The product is turned on while being charged. Please use the product after charging is complete.


6 Care LEVEL (intensity): 1 - 5

Removing/Reconnecting the Strap from the Main Body

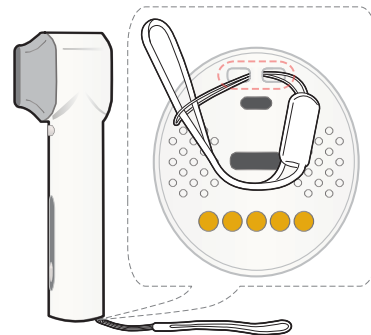


The strap is provided connected to the main body in advance. For safe use, wear it on the wrist before use. To reconnect the strap after removing it, connect to the bottom of the main body tightly. (If it is difficult to connect, use a pin, etc.)

How to Hold a Product

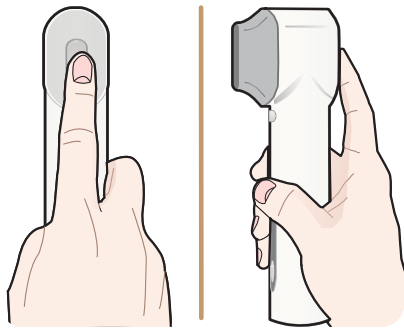

Wrap the product so that the finger touches the SHOT  button.

How to Use a Product



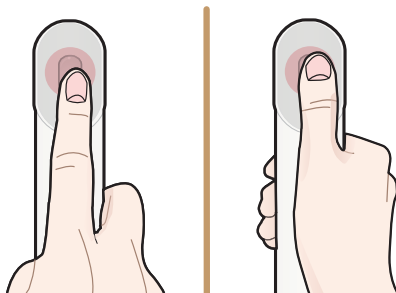


Press the SHOT  button with the finger for use. Each time you press the button, 1 shot is irradiated.

- In case of uncomfortable posture during the care, switch the finger pressing the button or hand holding the product to perform the care.

How to Use the Device Correctly

 Care angle at which the shot is irradiated

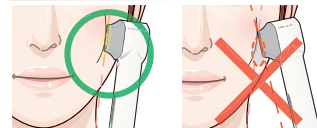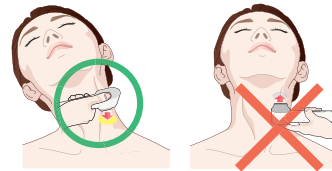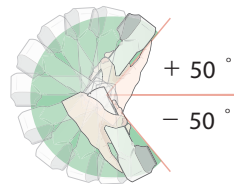

- 1) During the care, apply force to the device and adhere the irradiation part to skin properly for use.
- 2) Do not irradiate to the part same as the one irradiated previously.
- 3) Place the irradiation part in a proper angle to use the product.
- 4) For parts with thin skin, such as neck, use in level 1.

Please check the following first.

- It is advisable to use a total of 300 shots once a week on the entire guided area.
- It is okay to apply shots only to the areas you want, but make sure that you give at least a week of rest to the areas applied with shots.
- Make sure that you use the product after applying a moisture gel.
- If the moisturizing gel is insufficient, you may experience skin irritation, such as a tingling sensation.
- If you don't apply a sufficient amount of moisture gel or the gel dries out, shots may not be fired properly or there can be skin irritations such as tingling. Make sure that you apply a sufficient amount of moisture gel to the applicator and the facial skin when you use the product.

- It is not recommended to use it for anything other than dermatologic purposes.
- If you turn on the product and then leave it unused for more than five minutes, the product powers off automatically.
- While using the product, the film area of the irradiation part may swell up. As a temporary phenomenon due to the characteristic of product use, it returns to the original state when placed at a room temperature, so use with confidence.

The care consists of a total of 300 shots, as follows.

① Left cheek (80 shots) → ② Right cheek (80 shots) → ③ Left forehead (20 shots) → ④ Right forehead (20 shots) → ⑤ Left temple (10 shots) → ⑥ Right temple (10 shots) → ⑦ Left double chin (10 shots) → ⑧ Center double chin (20 shots) → ⑨ Right double chin (10 shots) → ⑩ Left neck (20 shots) → ⑪ Right neck (20 shots) → End the guide.

① Wash your face thoroughly before starting the care.



② Press and hold the Power  button for 2 seconds or longer to turn on the product.



✓ Note

- If you press the Power (⏻) button briefly, the product may not turn on or off. Press and hold the Power (⏻) button.
(When turning on: Press and hold for 2 seconds or longer.
When turning off: Press and hold for 3 seconds or longer.)

- 3 Press the LEVEL (Intensity) button to choose the intensity of the care that suits you. The intensity is divided into 5 levels, with the strength increasing as you go from Level 1 to Level 5. Test each level and choose the intensity that works for you.



✓ Note

- When using for the first time, make sure to start from the intensity level 1.

Status Display	Status	Description
	Level 1	Weak
	Level 2	Mild
	Level 3	Moderate
	Level 4	Strong
	Level 5	Intense


- 4 Apply moisture gel thoroughly in the irradiation part on the device or desired guide areas.



✓ **Note**

- If you don't apply a sufficient amount of moisture gel or the gel dries out, shots may not be fired properly or there can be skin irritations such as tingling. Make sure that you apply a sufficient amount of moisture gel to the applicator and the facial skin when you use the product.


- 5 Wrap the product so that the finger touches the SHOT  button.

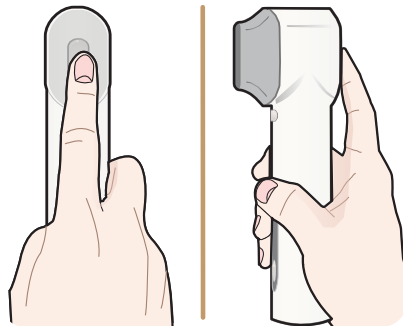

✓ **Note**

- In case of uncomfortable posture during the care, switch the finger pressing the button or hand holding the product to perform the care.

- 6 Press the SHOT  button with the finger for use. Each time you press the button, 1 shot is irradiated.

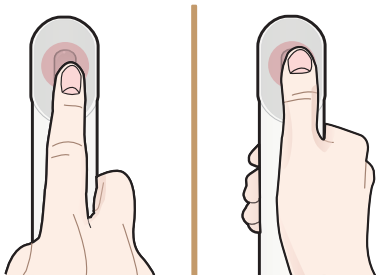


✓ **Note**

- Care must be avoided between the eyebrows, around the eyes, around the mouth (1 cm from the oral angle), jawbone line, and uvula line. (→ See “Parts where Care Must Be Avoided” on page 20.)
- Ensure that the Ultrasound irradiation part is properly adhered to the skin and use the product at the correct angle. (→ See “How to Use the Device Correctly” on page 26.)


Left Cheek (80 shots) → Right Cheek (80 shots)

- 7 Left cheek Front - Middle - Back (40 shots) / Top - Middle - Bottom (40 shots)
→ Right cheek Front - Middle - Back (40 shots) / Top - Middle - Bottom (40 shots)

Left Cheek

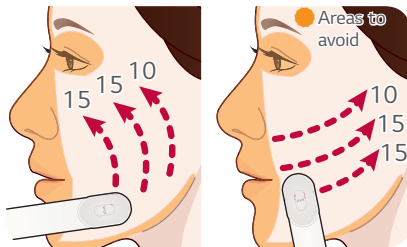


Right Cheek

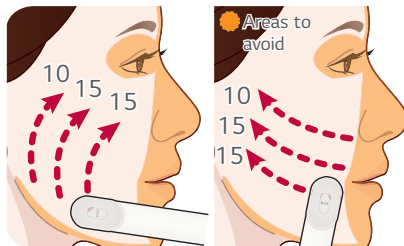

- (Common) Move towards each arrow gradually and shoot 1 shot each time. Make sure to repeat shooting the next 1 shot after shooting 1 shot is completely finished each time. For each arrow, perform care as much as the indicated number.
- After irradiating 1 shot, move the product from bottom to top gradually and shoot 1 shot each time along with the facial contour.
- During the care, maintain the arm angle at about 45 degrees for comfortable use.

Forehead (40 shots)


- 8 Left bottom - Top (20 shots) → Right bottom - Top (20 shots)

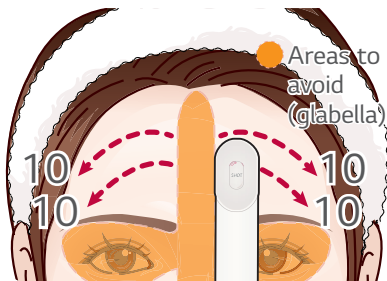

- After irradiating 1 shot, move the product towards each arrow direction and shoot 1 shot each time along with the forehead curve.
- Place the product vertically as shown in the image, and perform care by moving it outward on your face.
- During the care, maintain the arm angle perpendicular to the face and move the product left and right gradually.

Temple (20 shots)


9 Left front - Bottom (10 shots) → Right front - Bottom (10 shots)

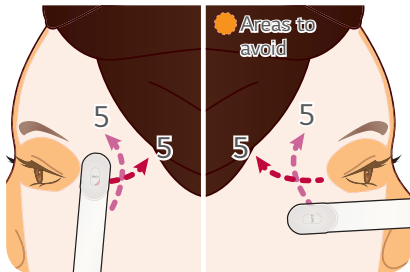

- After irradiating 1 shot, move the product towards each arrow direction and shoot 1 shot each time along with the temple contour.
- Raise the angle of the arm holding the product and adhere the product to the skin to perform care. If the angle is uncomfortable, change a wrist direction left and right to perform care.
- Raise your arm sufficiently to perform care.
- Since it is a narrow part, the product must be used delicately.

Double Chin (40 shots)


10 Left back - Inside (10 shots) → Middle (20 shots) → Right back - Inside (10 shots)

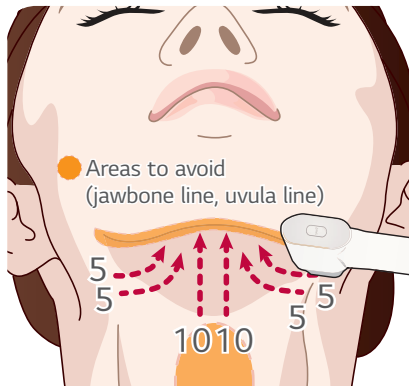

- After irradiating 1 shot, move the product towards each arrow direction and shoot 1 shot each time as if pulling it forward.
- During the care, make sure that the irradiation part does not face towards sky by tilting your face to adhere it to the skin.
- Since it is a narrow part, the product must be used delicately.
- In case of uncomfortable posture during the care, switch the finger pressing the button or hand holding the product to perform the care.

Neck (40 shots)

11 Left back - Inside (20 shots) → Right back - Inside (20 shots)

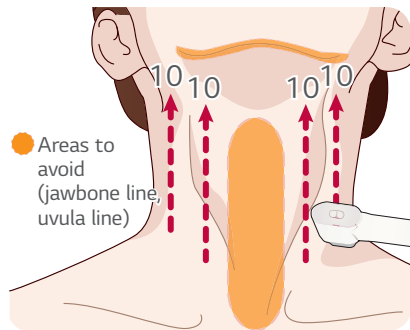

- After irradiating 1 shot, move the product towards each arrow direction and shoot 1 shot each time as if pulling it upward.
- Since it is a narrow part, the product must be used delicately.
- In case of uncomfortable posture during the care, switch the finger pressing the button or hand holding the product to perform the care.


Charging the Battery

I Charging

Fully charge the battery before using the product.

- 1 Use a USB cable to connect it to the charging adapter.
- 2 Connect the USB cable to the charging cradle.
- 3 Connect the charging adapter to the power outlet.
- 4 Align the charging terminals on the main body with those on the charging cradle and insert them.

- 5 When you plug the Ultrasound irradiation part into the part of the charging cradle with the UV sterilization LED, charging begins, and the battery status indicator changes based on the battery level. (→ See "Checking Charging Status" on page 41.)

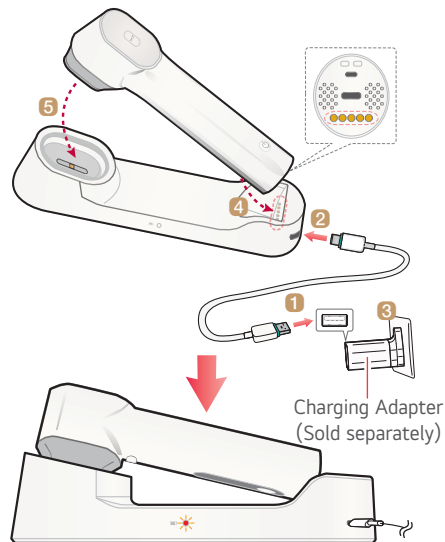

✓ Note

- You can save energy by disconnecting the power after fully charging the battery.
 - This product can be charged with a supplementary battery with the 5 V, 2.0 A power rating.
 - When charging, make sure to fit the main body with charging contact of the charging cradle properly and place the main body.
 - Charging is also available through the charging port at the bottom of the main body.
 - The product cannot be used when charging by connecting the USB cable to the charging port at the bottom of the main body.
 - When using it, be careful so that the charging contact does not touch the skin.
-

⚠ CAUTION

- The DC Adapter must be purchased separately, and a certified DC adapter (5 V, 2.0 A or higher) must be used. If you use an uncertified charger, there is a risk of breakdown and change in charging time. If charging is unsuccessful, it is recommended to try again with an alternative certified DC adapter.
 - Do not place metal objects such as metal pins, metal beauty tools, coins, etc. on the charging pins. It may cause a fire.
If it is not charging, unplug the power plug.
-

| Checking Usage Status



The status indicator lets you see the battery level.

In use

Status Display	Battery Status
 Sufficient	The battery level changes based on the usage time.
	
	
 Low	The battery is low.
 Need to charge	The battery is low. Please charge the product.

Checking Charging Status



(Status Display)



(Charging Cradle)

The status indicator on the product or the battery status indicator on the charging cradle allows you to see the battery charging status.

Charging

Status Display	Battery Status
 Low	The battery is low.
	The battery charging status changes based on the charging level.
	
	
 100% Finished charging	

Battery status indicator	Battery Status
 Charging	Charging is in progress.
 Finished charging	Charging is complete.


✓ Note

Charging and operating durations may vary depending on the battery status or operational status.

Additional Functions

| Disinfection

- 1 After cleaning the Ultrasound irradiation part, align the charging contacts on the product with the charging contacts on the charging cradle and plug it in.
- 2 When you insert the Ultrasound irradiation part into the area on the charging cradle with the UV sterilization LED, charging will start, and the UV sterilization LED function will automatically activate.

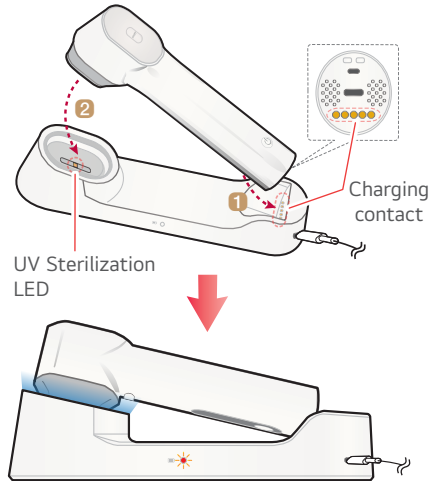

✓ Note


- When placing the main body on the charging cradle, make sure that the charging contacts on the base and the charging contacts on the charging cradle are in good contact.
- Keep the UV sterilization LED area clean by ensuring there are no foreign substances.
- The UV sterilization LED will automatically turn off after approximately 2 minutes and 40 seconds.

Replacing the Cartridge

Please check the following first.


- Check if the power is turned off before replacing it.
- The cartridge is a consumable. After all shots are used, purchase and replace to a new cartridge.

Separating the cartridge from the main body

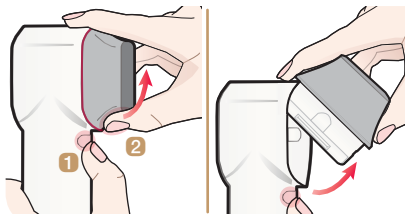

- 1 Hold the product main body with one hand and press the Mount/Unmount button.
- 2 At the same time, push up the lower part of the cartridge with the other hand to separate it from the main body.

Mounting the cartridge on the main body

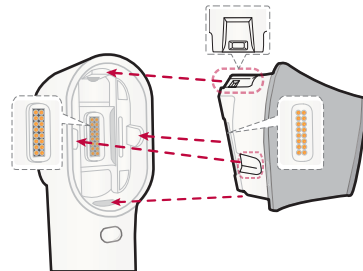

Place the main body with the top/bottom and insertion areas on both sides properly, and push until you hear a click sound to fit it.

- Check if there are any foreign substances (dust, cosmetics, etc.) inside before connecting the cartridge. If there are foreign substances, use a cotton swab or dry cloth to wipe it off before connecting it.

Initializing the Product

If the product is not functioning properly, you can reset it. When you initialize a product, it initializes the product settings, the user settings.

- 1 Press and hold the Power (⏻) button for about 2 seconds or more to turn on the product.
- 2 With the product powered on, press and hold the LEVEL (intensity) button on the front of the product for more than about 10 seconds to initialize the Product settings and user settings.



✓ Note

- Even if you initialize the product, the number of shots taken with the cartridge will not be reset.

Maintaining the Product

I Keeping the Main Body Clean

Do not wash with water as it is not waterproof. It may cause product malfunction. If there are foreign substances left on the product or product head after the care, wipe off that part with water tissue and wipe again with a soft dry towel or cloth.

⚠ CAUTION

- Do not use strong chemicals such as alcohol, benzene, or acetone.
- Make sure that no water or cosmetics gets inside the vent or gap in the product.
- Make sure that the film of the irradiation part is not torn by a sharp object such as a knife or nail.
- This product is vulnerable to shock, so make sure that it does not fall to the ground and gets damaged.

Before Reporting Product Malfunction

| Troubleshooting

If you experience the following symptoms while using the product, please check them again. They may not be malfunctions.

Symptoms	Cause and Solution	Symptoms	Cause and Solution	Symptoms	Cause and Solution
The product does not operate normally.	• Make sure that you have pressed the Power button properly. • If you press the power button briefly, the product may not turn on or off. Press and hold the power button longer. (When turning on: Press and hold for 2 seconds or longer. / When turning off: Press and hold for 3 seconds or longer.)	The product does not operate normally.	• Charge the product following the guideline provided in the user manual. • When charging this product, check the battery charge status in the battery status indicator on the charging cradle or the status indicator on the main body.	Power is not supplied.	• If the battery is low and needs charging, you will receive voice guide or a sound effect, the battery level in the status indicator will flash, and the power will automatically turn off. • The battery is discharged. Please recharge the battery. • Connect the charging adapter to the power supply.

Symptoms	Cause and Solution	Symptoms	Cause and Solution	Symptoms	Cause and Solution
Power is not supplied.	• Check the charger to see if it operates properly. • Check if the voltage indicated on the product matches the power outlet voltage of your region.	The voice guide is not provided.	• The speaker is located at the bottom of the product. Hold and use the product without covering it. • Voice guidance may be turned off. Please turn on the voice guidance by referring to the voice guidance settings. (→ See "Setting Voice Guide" on page 21.)	It seems that the shots are not being properly irradiated.	• Make sure your product is out of the angle of use. It should be used at the correct angle to function properly. (→ See "How to Use the Device Correctly" on page 26.)

Appendix

I Specification

General	
Dimensions (W x H x D)	Main body: Approx. 36 mm x 40 mm x 200 mm Charging cradle: Approx. 50.8 mm x 56.2 mm x 235.7 mm
Operating temperature	5°C - 35°C
Operating humidity	0% - 90%
Storage temperature	1 °C - 60 °C ※ If the storage temperature is 0 °C or lower, the cartridge may freeze and burst, so be careful.
Storage humidity	0% - 90%

Recommended number of uses	Once a week, 300 shots each time - When fully charged, you can use the product four times (300 shots each) at LEVEL 5. (Internal test result) - The hours of use and lifetime can vary depending on the battery warranty period, ambient temperature and conditions of use.
Time to full charge	Less than 4 hours - Based on a 5 V, 2.0 A charging adapter - Charging time may vary depending on charging adapter specifications, battery level, ambient temperature and charging conditions.

- Design and specifications are subject to change without notice.

