



Owner's Manual

Wearable Air Purifier

Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

ENGLISH

AP300A Series



MFL71724104
Rev.04_011321

www.lg.com

Copyright © 2020 - 2021 LG Electronics Inc. All rights reserved.

TABLE OF CONTENTS

SAFETY PRECAUTIONS

- 03 Using the Product
- 05 Storing the Product
- 05 Battery Safety

UNPACKING

- 06 Components
- 07 Appliance Overview

ASSEMBLY

- 08 Installing the PuriCare Filters
- 09 Assembling the Face Guard
- 10 Installing the Inner Cover

CHARGING

- 11 Charging the Battery
- 11 Checking Remaining Battery Level

OPERATION

- 13 Turning Product On and Adjusting Fan Speed
- 14 Wearing and Using the Product

MAINTENANCE

- 15 Filter Replacement
- 16 Maintaining the Face Guard
- 17 Cleaning the Product
- 17 Cleaning the Exhaust Unit
- 18 Maintaining the Ear Straps
- 18 Washing the Portable Pouch

TROUBLESHOOTING

- 19 Before Calling for Service

APPENDIX

- 20 Product Specifications

This manual may contain images or content different from the model you purchased.
This manual is subject to revision by the manufacturer.

SAFETY PRECAUTIONS

Please make sure to read the following safety precautions as they are designed to prevent unexpected danger and damage.

These safety precautions are divided into two sections, Warning statements and Caution statements.



WARNING: Failure to follow the instructions laid down in this manual may cause serious injury or death.



CAUTION: Failure to follow the instructions laid down in this manual may cause minor injury or product damage.

Using the Product



WARNING

- This product is an Air Purifier that protects the respiratory organs from harmful particulate substances such as yellow dust and fine dust. Do not use this product for other purposes.
- Do not use the product in a poorly ventilated area where oxygen is not continually supplied.
- To avoid the risk of infection, do not share the product with other users or transfer use to another person.
- Do not use or charge the product when it is wet. If the product has been submerged, stop using the product and contact an LG Electronics Customer Information Center.
- Do not use or store firearms, combustibles or inflammables near the product.
- Do not disassemble or damage the product, battery or parts. Do not use the product if the product, battery or any part has been damaged.
- Do not use disinfectants and/or sterilizers on any part of the product.
- Do not exercise strenuously while wearing the product.
- If you experience respiratory discomfort while using the product, discontinue use and consult a physician, if needed.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate this product while driving.
- If you detect a strange sound, a chemical or burning smell, or smoke coming from the appliance, discontinue use immediately, and contact an LG Electronics Customer Information Center.
- Repair or immediately replace all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- Do not allow foreign substances such as water, coffee, or soft drinks to enter the product.
- Dispose of the packing materials safely so as to keep them out of the reach of children.



CAUTION

- Do not use strong detergents or solvents to clean the product.
- Do not wear the product in the rain.
- Do not apply excessive impact to the product.
- Do not place obstacles around the air inlet of the product.
- If you experience skin problems while using the product, stop using it and consult a doctor.

| Storing the Product



WARNING

- Do not place the product near a car window where it is exposed to direct sunlight or on top of an electric pad or heater.
- Do not place the product near humid areas such as saunas, swimming pools, or bathrooms.
- Do not store the product in a place where there is a lot of salt.

| Battery Safety



WARNING

- This product uses an integrated battery. Do not separate or replace the battery. If the battery is faulty, the product and charging accessories should be replaced by an authorized LG service provider.

UNPACKING


Components



Main unit



Face guard

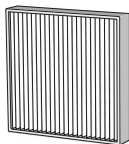

PuriCare Filters(2EA)




Inner cover(10EA)



Strap Extender




Charging cable

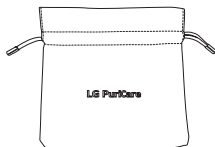

Portable pouch

Appliance Overview

Front View

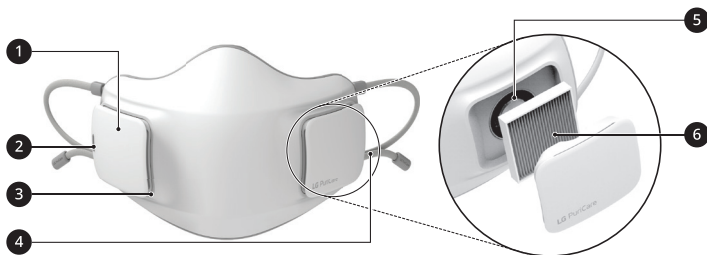

1 Filter case

2 Power button/battery indicator light


3 Air inlet

4 Ear strap

5 Suction fan

6 PuriCare filter

Rear View

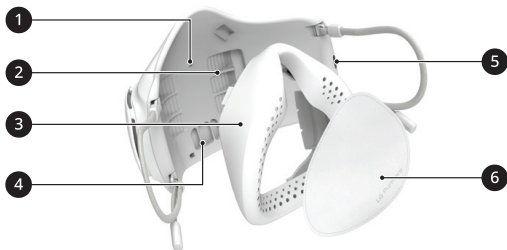

1 Respiratory sensor

2 Air inlet

3 Face guard


4 Exhaust unit

5 Charging unit

6 Inner Cover

ASSEMBLY

Installing the PuriCare Filters

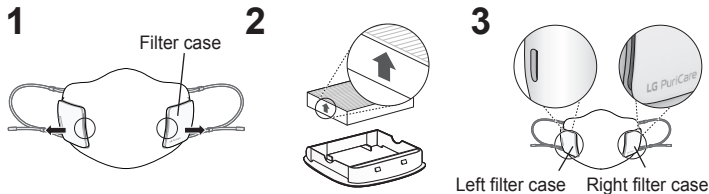


- 1** Separate the filter cases from the product.
 - Pull the filter cases at the spots marked in Figure 1 above to separate the cases from the product.
- 2** Insert the PuriCare Filters into the filter cases with the arrow on the PuriCare Filters facing up.
- 3** Align the filter cases with the grooves at the front of the product and press the cases in until they click into place.
 - Make sure to align the filter cases correctly before reassembling. The LG PuriCare logo is on the right filter case.

✓ NOTE


- Do not press the center of the PuriCare Filter too hard when installing the filter. Doing so may lead to the filter blocking the air inlet.
- Pay attention to the direction indicated by the arrow on the filter when installing the PuriCare Filter. Otherwise, product performance may be degraded.
 - The horizontal or vertical direction of the PuriCare Filter does not affect product performance.
- Ensure the product is turned off before replacing the filter.
- Make sure that the PuriCare Filters are installed before using the product. Do not use the product without the filters in place.

Assembling the Face Guard


- 1 Slide the 2 hooks at the bottom of the face guard into the slots at the bottom of the product and press to secure.

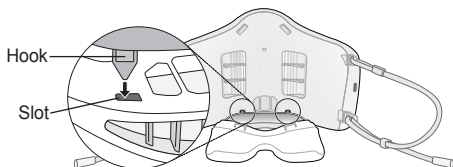

- 2 Attach the 2 metal pieces at the top of the face guard to the magnets at the top of the product.

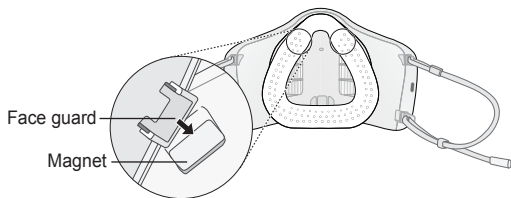


- 3 Ensure that the face guard and the product are assembled correctly.

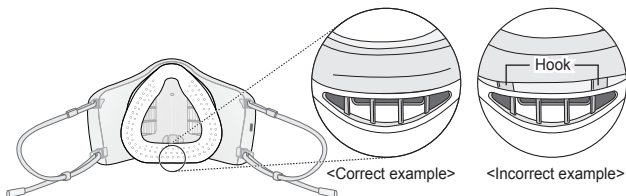

CAUTION

If the face guard and the product are not assembled correctly, product performance may be affected due to air leakage.

Installing the Inner Cover

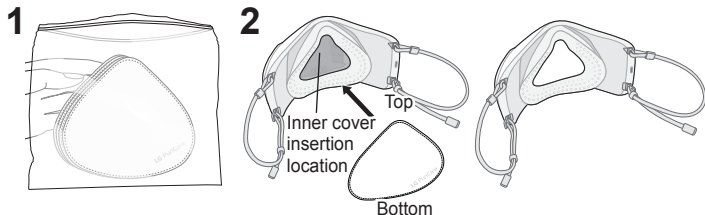

- 1 Remove 1 inner cover from the inner cover packaging.
- 2 Align the inner cover with the top and bottom as shown, and insert it into the face guard.




CAUTION

Do not use the Air Purifier without the inner cover installed. Without the inner cover installed, moisture from your breath could enter the Air Purifier and cause it to fail.

CHARGING

Charging the Battery

This product has a built-in battery. Charge the battery fully before using the Air Purifier by connecting the USB cable to an AC adapter.

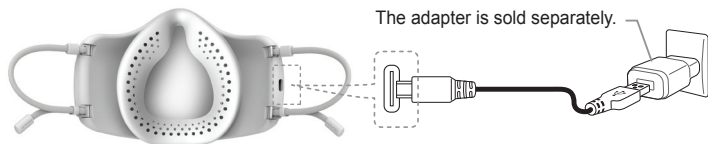

- The battery will begin charging when the USB cable is connected from the product to an electrical outlet. The charging status indicator is located on the Power button.

Indicator light color/status	Description
Green/On	Charging completed
Red/On	Charging in progress

Checking Remaining Battery Level

The LED indicators on the Power button show the remaining battery level.

Indicator light color/status	Remaining battery level
Green/On	More than 70 %
Orange/On	Over 15 % ~ Below 70 %
Red/Blinking	Below 15 %

- When the battery level is at 15 %, the product will chime 3 times twice.
 - If the fan speed indicator alarm coincides with the battery alarm, the fan speed alarm will sound first, followed by the battery alarm.
- Only the charging status can be checked during charging.



CAUTION


- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance from an AC adapter (5 V, 1.8 A). The AC adapter should be purchased separately. Using an unapproved charger may cause failure or variation in the charging time.
 - This appliance contains batteries that are non-replaceable.
 - Charge the battery at temperatures ranging between 10 °C~ 40 °C. Charging the battery at temperatures outside this range may reduce battery life or increase the charging time, and charging may be suspended for safety reasons.
 - The recommended temperature range for operation is -20 °C ~ 50 °C. Operating outside of this range may shorten the run time and the battery life.
 - Charging from the USB port in a vehicle or computer may be slower or cause product failure.
-

✓ NOTE

- It takes approximately 2 hours for a full charge.
 - With a fully charged battery, the run time for the product is approximately 4 hours in High, 6 hours in Medium, and 8 hours in Low.
 - Charging times and run times may vary depending on the condition of the battery and the product.
 - The run time of the product will decrease gradually over the useful life of the battery.
 - The product ships with the battery not fully charged. Charge the battery fully before using the product for the first time.
-

OPERATION

Turning Product On and Adjusting Fan Speed

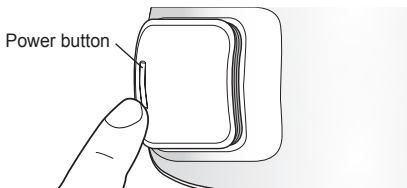


Press the Power button to turn the product on. Change the fan speed to suit your requirements.

- Press the Power button once to turn the product on with the fan speed set to Low. Press the Power button repeatedly to adjust the fan speed from Low > Medium > High > Off.
- When the fan speed is changed, chimes sound to indicate each level.
 - Low (1 chime): Use while seated.
 - Medium (2 chimes): Use while walking at a normal rate.
 - High (3 chimes): Use while walking quickly.
 - Off (long chime)

✓ NOTE

- If the product is not being used, it will turn off automatically after 30 seconds.

Wearing and Using the Product

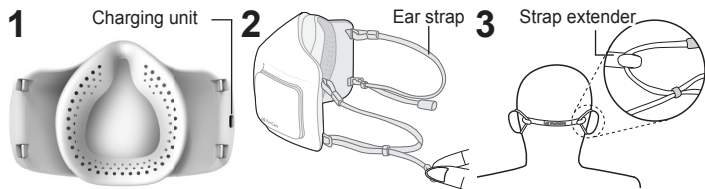

- 1 With the inside of the product facing you, the charging unit should be on the right side.
- 2 Holding the product in place, slide the ear straps around your ears. Pull on the ends of the ear straps to adjust the length and keep the product in place over your nose and mouth.
- 3 If you find the ear straps uncomfortable, use the strap extender to reduce the tension around your ears.
 - Attach the strap extender so that the LG PuriCare logo and the hooks face out.
 - Adjust the ear straps as needed to keep the Air Purifier comfortably in place.
- 4 Press the Power button to operate the Air Purifier.

NOTE

- Before wearing the Air Purifier, check the battery status. Refer to Checking Remaining Battery Level for details.
- If the inner cover is dirty, replace it with a new one. Refer to Installing the Inner Cover for details.
- If the face guard is dirty, wash it. Refer to Maintaining the Face Guard for details.
- When you are not using the product, store it in the portable pouch.
- If you are not going to use the product for an extended period of time, separate the charging cable from the product before storing.
- Replacement face guard, strap extender, and ear straps are available by calling an LG Electronics Customer Information Center or by visiting the LG Electronics website at www.lg.com.

MAINTENANCE

Filter Replacement


Component	Replacement Period and Method
 PuriCare Filter	Replacement period: 1 month (Based on 10 hours use per day) Replace the filters when they become dirty. See the Installing the PuriCare Filters section.
 Inner cover	Replacement period: Disposable (Varies depending on level of activity.) Replace the inner cover when it becomes dirty. See the Installing the Inner Cover section.

✓ NOTE

- Do not wash the filter with water. Doing so damages the filter.
- The filter replacement period may vary depending on the operating environment.
- Purchase new filters by calling an LG Electronics Customer Information Center or visiting the www.lg.com website.

Maintaining the Face Guard

Separating the Face Guard

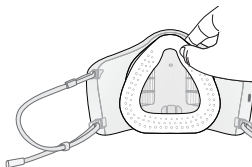

Separate the face guard from the product by pulling on the top of the face guard.

Cleaning the Face Guard

- 1 After removing the face guard from the product, clean it with a swab or soft cloth moistened with alcohol or clean water.
 - Use a mild detergent if needed for stubborn soil.
- 2 Dry the face guard completely after cleaning and reassemble it on the Air Purifier.



CAUTION


If the face guard becomes stained by cosmetics, wipe it with a tissue and wash it with clean water immediately after use.

- Stains from some cosmetics may be difficult or impossible to remove even if the face guard is washed immediately after use.

✓ NOTE

- For best results, clean the face guard after each use.

Cleaning the Product

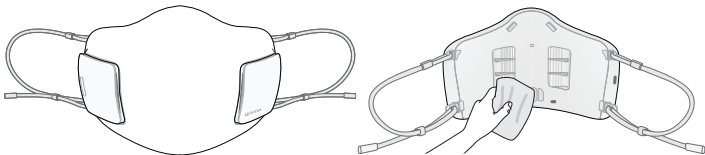


Use a soft, damp cloth to wipe the surface of the product clean.



CAUTION

Do not allow water to get inside the product. Doing so could cause product failure, fire, or electric shock.

Cleaning the Exhaust Unit

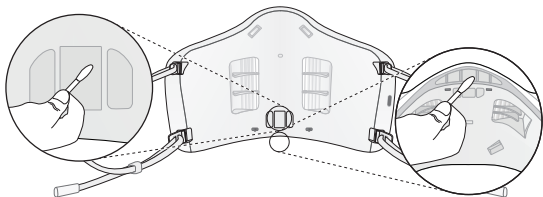


Wipe the exhaust unit with a cotton swab soaked with water or alcohol and then wipe it dry using a dry cotton swab.

NOTE

- For best results, clean the exhaust unit after each use.

Maintaining the Ear Straps

Replacing the Ear Straps

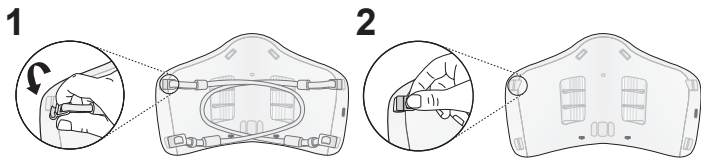

- 1 Fold the ear straps and ear strap hooks toward the inside of the product. Lift one side of the ear strap hook up to separate the ear strap.
- 2 To assemble new ear straps, fold the ear strap hooks toward the inside of the product and slide the ends of the ear straps into the grooves in the ear strap hooks.

Cleaning the Ear Straps

- 1 If the ear straps become dirty, separate them from the product and wash them in water and a mild detergent.
- 2 Allow the ear straps to dry completely before reassembling.



CAUTION

Do not expose the ear straps to direct sunlight for long periods (over 72 hours) or they can become discolored.

Washing the Portable Pouch

If the portable pouch becomes dirty, have it dry cleaned.



CAUTION

Washing the portable pouch with water may damage its surface and cause deformation.

TROUBLESHOOTING

Before Calling for Service

If a failure occurs in the product, check the following before contacting the Service Center.

Symptoms	Solution
The appliance does not operate.	• The battery is discharged or needs to be replaced. See Charging the Battery.
	• The ambient temperature is too high or too low. Check the ambient temperature.
Fan is noisy even on the lowest speed.	• The PuriCare Filters are clogged with dirt and need to be replaced. The filter replacement period may vary depending on the nature of particular operating environments.
The appliance does not charge.	• The charger and the charging terminal are not connected. Reconnect the charger to the charging terminal.
	• There is foreign material on the charging terminal. Clean off the foreign material with a soft, dry cloth.
The product turns off earlier than expected.	• The battery is not fully charged. See Charging the Battery for instructions.
Abnormal smells emanate from the product.	• The PuriCare Filters are dirty and need to be replaced. The frequency of filter replacement depends on the usage environment.
	• The inner cover is dirty and needs to be replaced.
	• The face guard needs to be cleaned.

Product Specifications

Appearance and specifications may vary without notice in order to improve the quality of this product.

Product	
Power	5 V  1.8 A (AC adapter) Built-in rechargeable battery
Power Input	1.8 W
Dimensions (W*D*H)	156 mm × 63 mm × 110 mm
Recommended operating temperature range	-20 °C ~ 50 °C
Recommended operating humidity range	5 % ~ 95 %

Battery		
Capacity	(Typ) 860 mAh, 3.182 Wh	
	(Min) 820 mAh, 3.034 Wh	
Operating time (with a fully charged battery)	High	Approximately 4 hours
	Medium	Approximately 6 hours
	Low	Approximately 8 hours
Charging time	Approximately 2 hours	
Recommended charging temperature	10 °C ~ 40 °C	

- The charging and operating times of the product may vary depending on the operating status of the battery or the product.

使用者手冊

口罩型空氣清淨機

操作此電器前, 請仔細閱讀本使用者手冊,
並將其放在手邊隨時參考。

繁體中文

AP300A Series

進口商: 台灣樂金電器股份有限公司
地址: 臺北市內湖區基湖路3巷47號6樓
電話: (02) 26272788
免貼貨物稅查驗證
許可證號碼
財政部台財稅800384907號
免費諮詢服務電話: 0800-898-899

目錄

安全預防措施

- 03 使用本產品
- 05 存放本產品
- 05 電池安全性

拆開包裝

- 06 組件
- 07 產品概覽

組裝

- 08 安裝 PuriCare HEPA 濾網
- 09 組裝面罩
- 10 安裝內蓋

充電

- 11 為電池充電
- 11 檢查電池剩餘電量

操作

- 13 開啟產品並調整風扇轉速
- 14 佩戴及使用本產品

保養

- 15 濾網更換
- 16 進行面罩維護
- 17 清潔產品
- 17 清潔排氣裝置
- 18 進行耳帶維護
- 18 清洗收納袋

故障排除

- 19 呼叫服務之前

附錄

- 20 產品規格

目錄本手冊可能包含與您購買的型號不同的圖像或內容。

製造商可能修訂本手冊。

安全預防措施

請務必閱讀下列安全預防措施，其設計為防止意外的危險和損壞。
這些安全預防措施分成兩個章節，警告聲明和注意聲明。



警告：如果未遵循本手冊制定的說明，可能導致嚴重受傷或死亡。



注意：如果未遵循本手冊制定的說明，可能導致輕微受傷或產品損壞。

使用本產品



警告

- 為了減少爆炸、火災、死亡、觸電、燙傷或人員受傷等危險，使用本產品時，請遵循以下的基本安全預防措施：
- 請勿在沒有持續供氧通風不佳的地方使用本產品。
- 為避免感染風險，請勿將本產品與其他使用者共用，或轉讓給其他人使用。
- 請勿在本產品潮濕時使用本產品或為其充電。如果產品被水浸濕，請停止使用本產品並聯絡 LG 電子客戶服務中心。
- 請勿在本產品附近使用或存放火器、易燃物或可燃物。
- 請勿拆卸或損壞本產品、電池或部件。如果本產品、電池或部件已損壞，請勿使用。
- 請勿在產品的任何部分使用消毒劑及 / 或殺菌劑。
- 佩戴本產品時請勿進行劇烈運動。
- 如果您在使用本產品時出現呼吸不適，請停止使用本產品，如有需要，請諮詢醫生。

- 本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用,除非在對其負有安全責任的人員之監護或指導下安全使用。
- 孩童應受監護,以確保孩童不嬉玩產品。
- 請勿在開車時操作本產品。
- 如果您發現電器發出奇怪的聲音、化學或燃燒氣味,請立即停用本電器,並聯絡 LG 電子客戶服務中心。
- 請維修或立即更換所有已磨損或損壞的電線。請勿使用其本身或兩端有出現裂縫或磨損的電線。
- 僅能使用電器上標記的對應特低安全電壓為電器供電。
- 請勿讓水、咖啡或軟性飲料等異物進入本產品。
- 安全的處理包裝材料,以免讓兒童接觸到。

 注意

- 請勿使用強力清潔劑或溶劑清潔本產品。
- 請勿在雨中佩戴本產品。
- 請勿對本產品施以過度的撞擊。
- 請勿在本產品的進風口周圍放置障礙物。
- 如果您在使用本產品時出現皮膚問題,請停用本產品並諮詢醫生。

存放本產品

警告

- 請勿將本產品放在陽光直射的車窗旁，或將其放在電熱墊或加熱器上方。
- 請勿將本產品放在潮溼的區域旁，例如蒸氣室，游泳池或浴室。
- 請勿將本產品存放在有大量鹽的地方。

電池安全性

警告

- 本產品使用整合型電池。請勿拆下或更換電池。如果電池故障，本產品及充電配件應由授權的 LG 電子客戶服務中心

拆開包裝


組件



主體



面罩

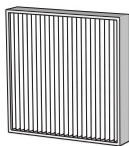

PuriCare HEPA 濾網 (2EA)




內蓋 (10EA)



延長帶




充電線

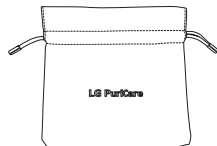

收納袋

產品概覽

正面視圖

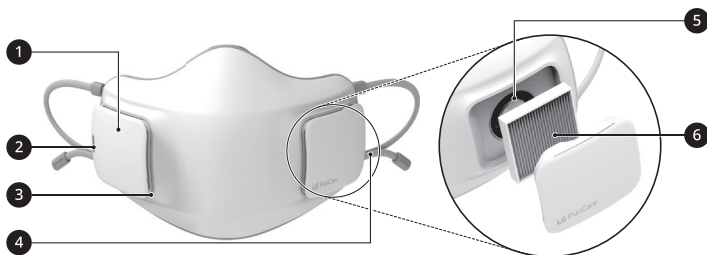

1 濾網蓋

2 電源按鈕 / 電池指示燈


3 進風口

4 耳帶

5 吸氣風扇

6 PuriCare HEPA 濾網

背面視圖

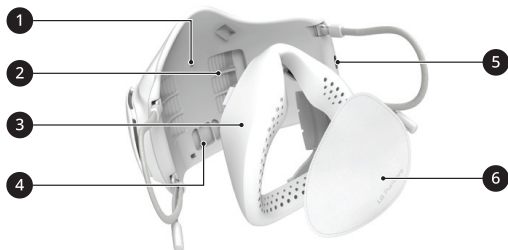

1 吸氣感測器

2 進風口


3 面罩

4 排氣裝置

5 充電裝置

6 內蓋

安裝 PuriCare HEPA 濾網

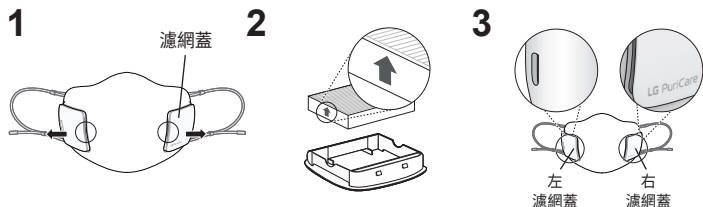


- 1 將濾網蓋從產品上拆下。
 - 從上面圖 1 標記的記號處將濾網蓋拉出以將濾網蓋從產品上拆下。
- 2 將 PuriCare HEPA 濾網插入濾網蓋內, 並使 PuriCare HEPA 濾網上的箭頭朝上。
- 3 將濾網蓋與產品前面的凹槽對齊, 並將濾網蓋按下直至其卡入到位。
 - 重新組裝前, 請確保正確對齊濾網蓋。LG PuriCare 標誌的位置在右邊濾網蓋上。

備註


- 安裝濾網時, 請勿用力按壓 PuriCare HEPA 濾網的中心。可能因此導致濾網堵塞進風口。
- 安裝 PuriCare HEPA 濾網時, 請注意濾網上箭頭指示的方向。否則產品性能可能會下降。
 - PuriCare HEPA 濾網是以水平或垂直方向放置皆不會影響產品性能。
- 更換濾網前, 請確保產品已關閉。
- 使用本產品前, 請確保已安裝 PuriCare HEPA 濾網。請勿在未安裝好濾網的情況下使用本產品。

組裝面罩


- 1 將面罩底部的 2 個扣鉤滑入產品底部的槽中，並按壓將其固定。

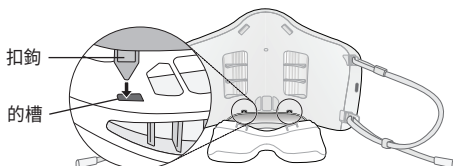

- 2 將面罩頂部的 2 個金屬片連接至產品頂部的磁鐵上。

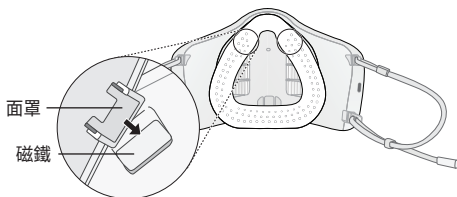


- 3 確保面罩與產品組裝正確。

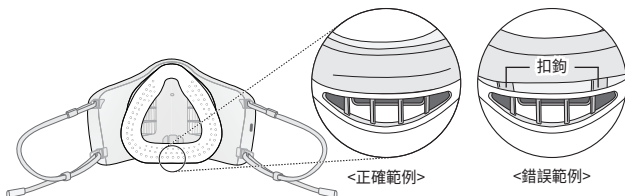

注意

若面罩與產品未正確組裝，則可能會因漏氣而影響產品效能。

安裝內蓋

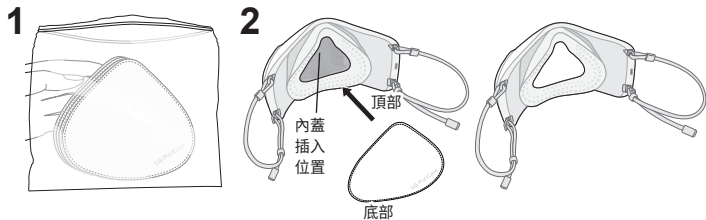

- 1 從內蓋包裝中取出 1 個內蓋。
- 2 如圖所示, 對齊內蓋的頂部和底部, 並將其插入面罩。




注意

請勿在沒有安裝內蓋的情況下使用空氣清淨機。在沒有安裝內蓋的情況下, 吸氣中的水份可能會進入空氣清淨機, 導致其故障。

充電

為電池充電

本產品有內建電池。使用空氣清淨機前，將 USB 線連接至 AC 變壓器將電池充飽電。

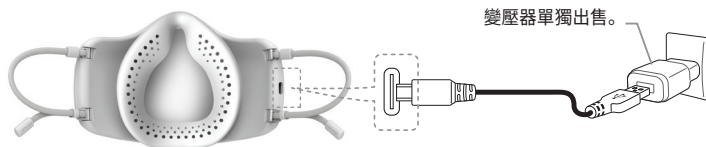

- 當 USB 線從產品連接至電源插座時，電池會開始充電。
充電狀態指示燈位於電源按鈕上。

指示燈顏色 / 狀態	說明
綠燈 / 照明	充電完成
紅燈 / 照明	充電中

檢查電池剩餘電量

電源按鈕上的 LED 指示燈顯示電池剩餘電量。

指示燈顏色 / 狀態	電池剩餘電量
綠燈 / 照明	70 % 以上
橘燈 / 照明	超過 15 % ~ 未滿 70 %
紅燈 / 閃爍	未滿 15 %

- 當電池電量到達 15 % 時，產品將發出 3 聲提示音兩次。
 - 如果風扇轉速指示器警告與電池警告同時發生，則風扇轉速警告會先響起，接著電池警告才響起。
- 充電期間只能檢查充電狀態。


注意

- 僅能使用交流電適配器 (5 V、1.8 A) 為電器提供電器上標記對應的安全特低電壓。AC 變壓器需另外購買。使用未經核准的充電器可能導致故障或充電時間變化。
- 本電器包含不可更換的電池。
- 在 10 °C 至 40 °C 的溫度範圍之間為電池充電。在超出這個溫度範圍的情況下為電池進行充電可能會降低電池壽命或增加充電時間，且可能會因為安全原因而暫停充電。
- 建議的操作溫度範圍是 -20 °C 至 50 °C。在此溫度範圍外進行操作可能縮短運作時間和電池壽命。
- 從汽車內或電腦的 USB 埠進行充電可能較慢或可能導致產品故障。

備註

- 電池充飽電約需 2 小時。
 - 在電池充飽電的情況下，本產品在高速運作的情況下可以使用約 4 小時、中速運作的情況下可以使用約 6 小時，低速運作的情況下可以使用約 8 小時。
 - 充電時間和運作時間可能依電池和產品的情況而有所不同。
 - 產品的運作時間將隨著電池的使用壽命而逐漸減少。
 - 產品出貨時電池並未充飽電。第一次使用本產品前請將電池充飽。
-

開啟產品並調整風扇轉速

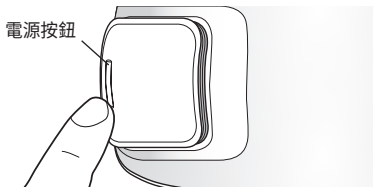


按下電源按鈕開啟產品。變更風扇轉速以符合您的需求。

- 按一次電源按鈕以開啟產品，風扇轉速設定為低。
重複按電源按鈕從低 > 中 > 高 > 關來調整風扇轉速。
- 當風扇轉速改變時，會以提示音指示每個級別。
 - 低 (1 聲提示音): 坐著時使用。
 - 中 (2 聲提示音): 以正常速度行走時使用。
 - 高 (3 聲提示音): 快速行走時使用。
 - 關 (長提示音)

✓ 備註

- 本產品停止使用後 30 秒後自動關閉。

佩戴及使用本產品

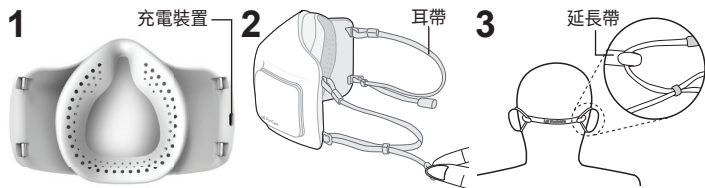

- 1** 將產品內部面向您，充電裝置應該在右邊。
- 2** 將本產品放在適當的位置，滑動耳朵周圍的耳帶。拉住耳帶末端來調整長度，並將產品放在您的鼻子和嘴巴上。
- 3** 如果您覺得耳帶讓您感到不適，可以使用延長帶來減輕耳朵周圍的緊繃感。
 - 安裝延長帶，使 LG PuriCare 標誌和扣鉤朝外。
 - 根據需要調整耳帶以將空氣清淨機舒適的放在適當的位置。
- 4** 按下電源按鈕來操作空氣清淨機。

✔ 備註

- 佩戴空氣清淨機前，請檢查電池狀態。請參閱檢查電池剩餘電量部分了解詳細資訊。
- 如果內蓋髒污，請更換新的。請參閱安裝內蓋部分了解詳細資訊。
- 如果面罩髒污，請清洗。請參閱進行面罩維護部分了解詳細資訊。
- 當您不使用本產品時，請將其存放在收納袋內。
- 如果長時間不打算使用本產品，請在存放本產品前將充電線從產品中拔下。
- 透過致電 LG 電子客戶服務中心或造訪 LG 電子網站 www.lg.com 購買面罩、耳帶及延長帶的更換件。

濾網更換


組件	更換週期及方法
 PuriCare HEPA 濾網	更換週期:1 個月 (以一天使用 10 小時為基礎) 濾網髒污時, 請進行更換。 請參閱安裝 PuriCare HEPA 濾網部分。
 內蓋	更換週期:一次性用品 (依活動程度而有所不同。) 內蓋髒污時則進行更換。 請參閱安裝內蓋部分。

✓ 備註

- 請勿用水清洗濾網。如此會損壞濾網。
- 濾網更換週期可能因操作環境而異。
- 透過致電 LG 電子客戶服務中心或造訪 www.lg.com 網站購買新的濾網。

進行面罩維護

將面罩拆下

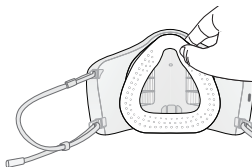

透過拉動面罩的頂部將面罩從產品上拆下。

清潔面罩

- 1 從本產品上取下面罩後，請用沾有酒精或清水的棉籤或軟布清潔本產品。
 - 如果需要清潔頑固的髒汙，請使用溫和的清潔劑。
- 2 清潔後徹底擦乾面罩並將其重新組裝至空氣清淨機上。



注意


如果面罩被化妝品弄髒，請使用面紙擦拭並於使用後立即用清水清洗。

- 即使在使用後立即清洗面罩，部分化妝品造成的髒汙可能也難以或無法去除。

備註

- 為求最佳效果，請在每次使用後清潔面罩。

清潔產品

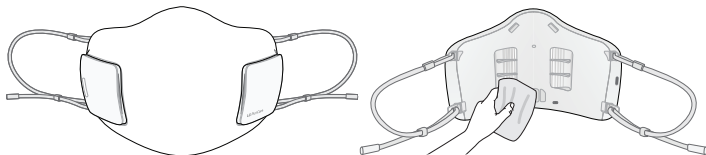


使用柔軟的濕布將產品表面擦拭乾淨。

⚠ 注意

請勿讓水進入產品內部。如此可能會導致產品故障、起火或觸電。

清潔排氣裝置

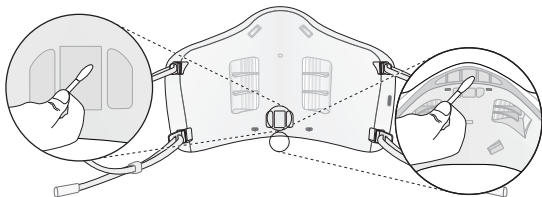


用以水或酒精浸濕的棉籤擦拭排氣裝置，然後再用乾棉籤將其擦乾。

✓ 備註

- 為求最佳效果，請在每次使用後清潔排氣裝置。

進行耳帶維護

更換耳帶

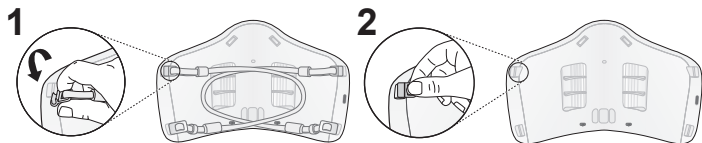

- 1 將耳帶和耳帶扣鉤向產品內部折疊。提起耳帶扣鉤的一側將耳帶拆下。
- 2 要組裝新的耳帶，請將耳帶扣鉤向產品內部折疊並將耳帶末端滑入耳帶扣鉤的凹槽中。

清潔耳帶

- 1 如果耳帶髒污，請將其從產品上拆下並用水和溫和的清潔劑清洗。
- 2 重新組裝前，請讓耳帶徹底乾燥。

注意

請勿讓耳帶長時間(超過 72 小時)暴露在直射的陽光下，否則可能褪色。

清洗收納袋

如果收納袋髒污，請進行乾洗。

注意

用水清洗收納袋可能損壞其表面及導致變形。

故障排除

呼叫服務之前

如果產品發生故障，請在聯絡服務中心前，檢查以下事項。

症狀	解決方案
產品無法運行。	• 電池放電或需要進行更換。請參閱為電池充電部分。
	• 環境溫度過高或過低。請檢查環境溫度。
風扇即使在最低速度下也很嘈雜。	• PuriCare HEPA 濾網被灰塵堵塞，需要進行更換。濾網更換週期可能依特定操作環境的性質而有所不同。
電器無法充電。	• 充電器與充電接頭沒有連接。將充電器重新連接至充電接頭。
	• 充電接頭上有異物。請使用軟的乾布清除異物。
產品比預期的時間更早關閉。	• 電池無法完全充電。相關說明，請參閱為電池充電部分。
產品散發出異味。	• PuriCare HEPA 濾網髒污，需要進行更換。濾網更換的頻率取決於使用環境。
	• 若內蓋髒污，請進行更換。
	• 面罩需要進行清潔。

產品規格

為提升本產品的品質，產品外觀和產品規格可能進行變更，恕不另行通知。

產品	
電源	5 V  1.8 A (AC變壓器) 內建充電電池
輸入功率	1.8 W
尺寸(寬x深x高)	156 mm × 63 mm × 110 mm
建議操作溫度範圍	-20 °C ~ 50 °C
建議操作濕度範圍	5 % ~ 95 %

電池		
容量	(典型值) 860 mAh, 3.182 Wh	
	(最小值) 820 mAh, 3.034 Wh	
操作時間 (電池充飽電的情況下)	高	約 4 小時
	中	約 6 小時
	低	約 8 小時
充電時間	約 2 小時	
建議充電溫度	10 °C ~ 40 °C	

- 產品的充電和操作時間可能根據電池或產品的運行狀態而有所不同。

限用物質含有情況標示

設備名稱：空氣清淨機 型號(型式)：

AP300A Series

單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr+6)	多溴聯苯 (PBB)	多溴二 苯醚 (PBDE)
注塑件 (外殼,風扇, 控制盒)	○	○	○	○	○	○
電機及其配件	-	○	○	○	○	○
控制部件 (PCB元件, 保險絲)	○	○	○	○	○	○
金屬結構件 (鈹金,螺絲)	○	○	○	○	○	○
線材 (電源線, 連接線)	○	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出 0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。

備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。

備考3. “—”係指該項限用物質為排除項目。

備忘

使用者手冊

穿戴式空氣清新機

在操作此電器前, 請先閱讀本使用者手冊
並將其妥善保存以供參考。

粵語

AP300A Series

安全注意事項

- 03 使用產品
- 05 儲存產品
- 05 電池的安全

開啟包裝

- 06 組件
- 07 產品概覽

組裝

- 08 安裝 PuriCare 濾網
- 09 組裝面部防護罩
- 10 安裝內罩

充電

- 11 為電池充電
- 11 檢查剩餘電量

操作

- 13 開啟產品及調節風扇速度
- 14 佩戴及使用產品

保養維護

- 15 更換濾網
- 16 維護面部防護罩
- 17 清潔產品
- 17 清潔排氣零件
- 18 維護耳帶
- 18 清洗手提袋

疑難排解

- 19 致電求助前

附件

- 20 產品規格

此手冊可能包含與您購買的型號不同的影像或內容。
此手冊以製造商的修訂版本為準。

安全注意事項

為免構成意外危險或損壞，請確保閣下已細閱以下安全注意事項。

此等安全注意事項分為警告聲明和注意聲明兩個部分。



警告：若不遵照本手冊的說明，則可能會導致嚴重的人命傷亡。



注意：若不遵照本手冊的說明，則可能會導致輕傷或產品損壞。

使用產品



警告

- 此產品為空氣清新機，可保護呼吸道器官免受黃沙及微塵等有害顆粒物質的侵害。請勿將本產品用於其他目的。
- 請勿在沒有持續供氧或通風不良的地方使用產品。
- 為免感染，請勿與其他使用者共用產品或將其轉讓予他人使用。
- 當產品未乾時，請勿使用或充電。如果產品浸水，則請停止使用該產品並與LG Electronics 客戶資訊中心聯絡。
- 請勿在本產品附近存放槍械、可燃或易燃物品。
- 請勿拆開或破壞產品、電池或零件。若產品、電池或任何部件受損，則請勿使用該產品。
- 請勿在產品的任何部分使用消毒劑和/或消毒器。
- 在佩戴本產品時，請勿進行劇烈運動。
- 若在使用產品時呼吸不適，則請停止使用並向醫生查詢。

- 除非有負責其安全的人員給予有關使用本電器的監督或指引，否則身體、感知或心理能力較弱者或缺乏經驗及知識的群體（包括兒童）不宜使用本電器。
- 應監督兒童，避免其把玩本電器。
- 在駕駛時請勿操作本產品。
- 若你發現電器發出怪聲、化學品或燃燒氣味，或者有煙霧湧出，請立即停止使用並聯絡 LG Electronics 客戶資訊中心。
- 修理或立即更換所有已磨損或損壞的電源線。請勿使用兩端或沿線出現裂紋或磨損的電源線。
- 根據產品上的指引，此產品必須使用安全的特低電壓供電。
- 請勿讓水、咖啡或飲料等液體進入產品。
- 為免兒童接觸，請安全地棄置包裝物料。

 注意

-
- 請勿使用強力的清潔劑或溶劑清潔產品。
 - 請勿在雨中佩戴此產品。
 - 請勿對產品施加壓力。
 - 請勿將障礙物置於產品的進氣口。
 - 若在使用產品時出現皮膚問題，請停止使用並向醫生查詢。

儲存產品

警告

- 請勿將本產品放置在暴露於陽光的車窗附近，又或者是電墊或加熱器的頂部。
- 請勿將產品放在桑拿室、游泳池或浴室等潮濕的地方。
- 請勿將產品存放在鹽份過多的地方。

電池的安全

警告

- 本產品使用整合電池。請勿將電池拆除或更換。如果電池故障，則應由授權的 LG Electronics 客戶資訊中心產品和充電配件。

開啟包裝


組件



主機



面部防護罩

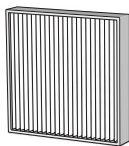

PuriCare 濾網 (共2組)




內罩 (共10組)



耳帶伸延器




充電線

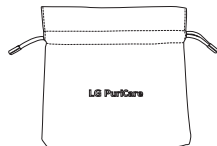

手提袋

產品概覽

外部

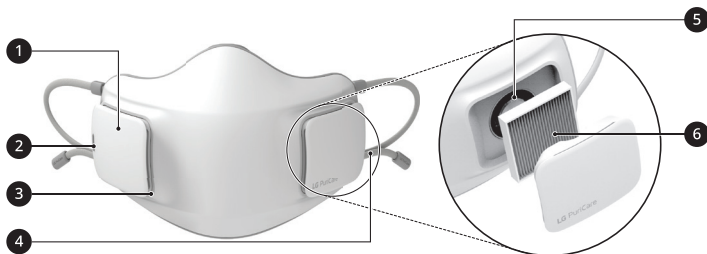

① 濾網保護蓋

② 電源按鈕／電池指示燈


③ 進氣口

④ 耳帶

⑤ 抽氣扇

⑥ PuriCare 濾網

內部

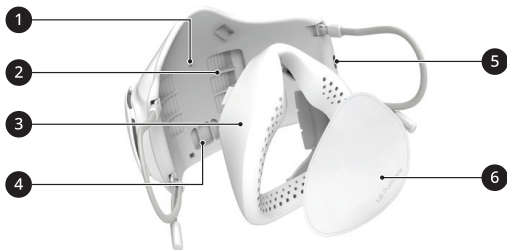

① 呼吸感應器

② 進氣孔


③ 面部防護罩

④ 排氣孔

⑤ 充電接口

⑥ 內罩

安裝 PuriCare 濾網

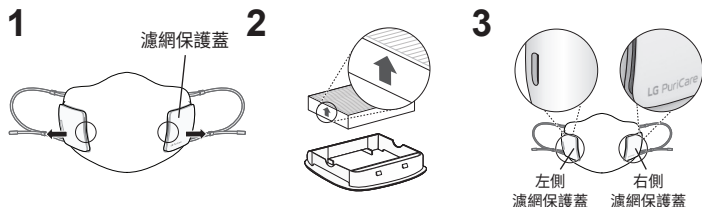


- 1 將濾網保護蓋從主機上移除。
 - 將濾網保護蓋向外拉出，如圖1所示方向。
- 2 將 PuriCare 濾網安裝在濾網保護蓋內，並需注意安裝時 PuriCare 濾網的箭嘴應朝向上方。
- 3 將濾網保護蓋對齊產品前端的凹槽，並將濾網保護蓋安裝至合適位置。
 - 在重新組裝前，請確保正確對齊濾網保護蓋。LG PuriCare 標誌應在右側濾網保護蓋上。

備註


- 為免 PuriCare 濾網堵塞進氣孔，在安裝 PuriCare 濾網時，請勿過分按壓 PuriCare 濾網的中心。
- 在安裝 PuriCare 濾網時，請注意 PuriCare 濾網上箭嘴指示的方向。否則，產品性能可能會下降。
 - 不論是水平還是垂直，PuriCare 濾網的方向不會影響產品性能。
- 在更換 PuriCare 濾網前，請確保已關閉產品。
- 在使用產品前，請確保已安裝 PuriCare 濾網。請勿在未安裝 PuriCare 濾網的情況下使用產品。

組裝面部防護罩


- 1 將面部防護罩底部的 2 個掛勾安裝在產品底部的插槽，並按壓以固定位置。

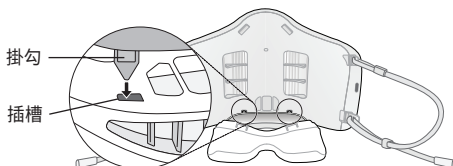

- 2 將面部防護罩頂部的 2 個金屬接位連接到產品頂部的磁鐵。

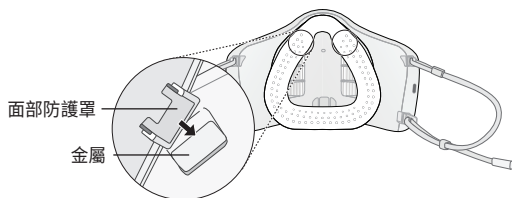


- 3 確保正確安裝面部防護罩及產品。

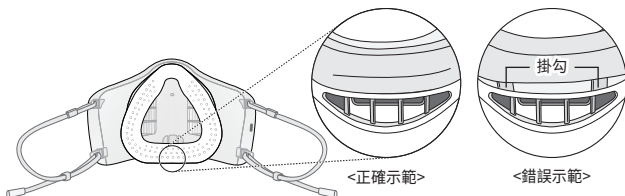

注意

如果面部防護罩及產品未正確組裝，則可能漏氣而影響產品效能。

安裝內罩

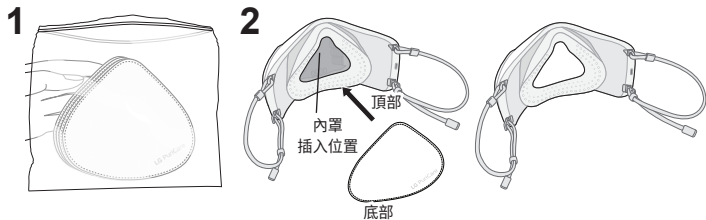

- 1 從內罩包裝袋取出 1 個內罩。
- 2 如圖所示，對齊內罩的頂部和底部，然後將其放入面部防護罩內。




注意

在未安裝內罩的情況下，請勿使用本產品。若未安裝內罩，您呼吸所構成的濕氣可能會滲至本產品內並導致其失效或損壞。

充電

為電池充電

本產品有內置電池。使用本產品前，請先將 USB 電源線連接到 AC 充電器並將電池充滿電。

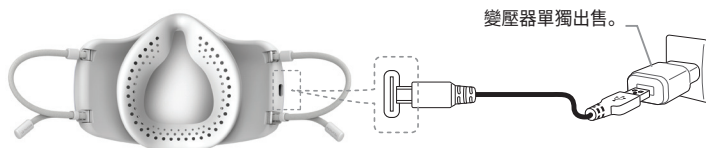

- 將 USB 電源線從產品連接到電源插座時，電池將開始充電。充電狀態指示燈位於電源按鈕上。

指示燈顏色/狀態	描述
綠燈 / 燈光	充電完成
紅燈 / 燈光	充電中

檢查剩餘電量

電源按鈕上的 LED 指示燈顯示剩餘電量。

指示燈顏色/狀態	剩餘電量
綠燈 / 燈光	高於 70 %
橙燈 / 燈光	超過 15 % ~ 低於 70 %
紅燈 / 閃爍	低於 15 %

- 當電量為 15 % 時，產品將發出 3 聲鳴響兩次。
 - 如果同時出現風扇速度指示器警報與電池警報，則會先響起風扇聲音警報再響起電池警報。
- 在充電期間只能檢查充電狀態。


注意

- 需按照充電器上的指引 (5 V, 1.8 A), 此產品必須使用安全的特低電壓供電。AC 充電器需單獨購買。使用未經批准的充電設備可能會導致故障或充電時間有所變化。
- 本電器包含不可更換的電池。
- 請在 10 °C 至 40 °C 的溫度範圍內為電池充電。在此範圍之外的溫度下充電可能會縮短電池壽命或加長充電時間, 且充電可能出於安全原因而暫停。
- 建議的操作溫度範圍是 -20 °C 至 50 °C。在此範圍之外操作可能會縮短運行時間和電池壽命。
- 透過車輛或電腦的 USB 連接埠充電可能會令充電速度變慢或導致產品故障。

備註

- 電池完全充滿需要約 2 小時。
 - 若電池完全充滿, 則產品的運行時間在高速模式下約為 4 小時, 在中速模式下約為 6 小時, 在低速模式下約為 8 小時。
 - 充電時間和運行時間可能會因電池和產品的狀況而有所不同。
 - 電池使用越久, 則產品的運行時間將越來越短。
 - 產品在出廠時尚未充滿電。首次使用產品前, 請先將電池充滿。
-

開啟產品及調節風扇速度

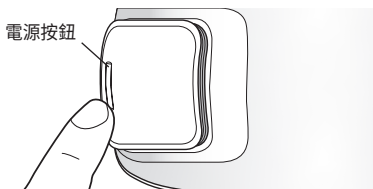


按下電源按鈕啟動產品，更改風扇速度以切合要求。

- 按一下電源按鈕，將風扇速度設置為「低」來開啟產品。重複按電源按鈕以調節風扇速度為低 > 中 > 高 > 關閉。
- 更改風扇速度時，產品會發出提示音以指示每個級別。
 - 低速模式 (1 下鳴響)：坐下使用。
 - 中速模式 (2 下鳴響)：以正常速度行走時使用。
 - 高速模式 (3 下鳴響)：快速行走時使用。
 - 關閉 (長鳴)

✓ 備註

- 如果不使用該產品，它則於30秒後自動關閉。

佩戴及使用產品

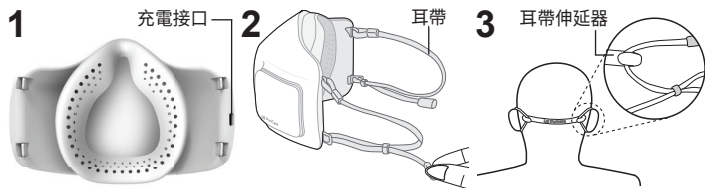

- 1** 產品內部朝向您時，充電接口應位於右側。
- 2** 固定產品，將耳帶戴到耳朵。拉動耳帶的末端以調節長度，並將產品固定在鼻子和嘴巴上。
- 3** 如果發現耳帶不舒服，請使用耳帶伸延器減輕耳朵周圍的拉力。
 - 安裝耳帶伸延器時 LG PuriCare 標誌和掛鉤應朝外顯示。
 - 因應需要調整耳帶，並舒適地固定空氣清新機。
- 4** 因應需要調整耳帶，並舒適地固定空氣清新機。

備註

- 戴上空氣清新機之前，請檢查電池狀態，請參閱「檢查剩餘電量」以了解相關的詳細資訊。
- 如果內罩髒了，請更換新的內罩，請參閱「安裝內罩」以了解有關詳細資訊。
- 如果面部防護罩髒了，請將其清洗乾淨，請參閱「維護面部防護罩」以了解有關詳細資訊。
- 在不使用產品時，請將其存放在手提袋中。
- 如該產品長期暫停使用，請移除本產品充電線。
- 致電 LG Electronics 客戶資訊中心或造訪 LG Electronics 網站 www.lg.com 進行更換面部防護罩、耳帶伸延器及耳帶。

更換濾網


配件	更換期限和方法
 PuriCare 濾網	更換期限:1個月 (每天基本可使用 10 小時) 如果 PuriCare 濾網變髒, 請更換。 請參閱「安裝 PuriCare 濾網」部分。
 內罩	更換期限:一次性 (因應活動程度而定。) 如果內罩髒了, 請更換。請參閱「安裝內罩」部分。

✓ 備註

- 為免損壞 PuriCare 濾網, 請勿以水將其清洗。
- PuriCare 濾網的更換時間可能會因操作環境而有所不同。
- 致電 LG Electronics 客戶資訊中心或瀏覽 www.lg.com 網站以購買新的濾網配件。

維護面部防護罩

拆開面部防護罩

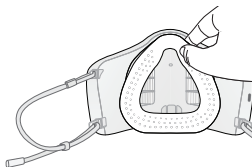

拉起面部防護罩的頂部，並分開面部防護罩及產品。

清潔面部防護罩

- 1 從產品移除面部防護罩後，用棉籤或沾有酒精或清水的軟布清潔。
 - 如有頑固污漬，則需要使用溫和的清潔劑。
- 2 清潔後，請完全弄乾面部防護罩，然後將其重新裝在空氣清新機上。



注意


如果面部防護罩被化妝品弄髒，請在使用後立即用紙巾擦拭並用清水洗淨。

- 即使在使用後立即清洗面部防護罩，也可能難以或無法去除某些化妝品的污漬。

✓ 備註

- 為了獲得最佳效果，每次使用後都要清潔面部防護罩。

清潔產品

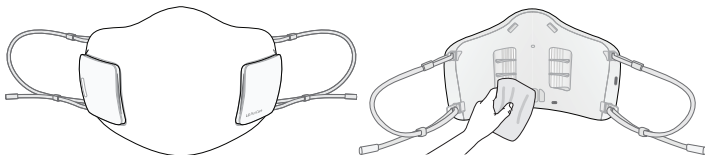


請使用柔軟的濕布將產品表面擦拭乾淨。



注意

請勿讓水進入產品內部，否則可能會導致產品故障、火災或觸電。

清潔排氣零件

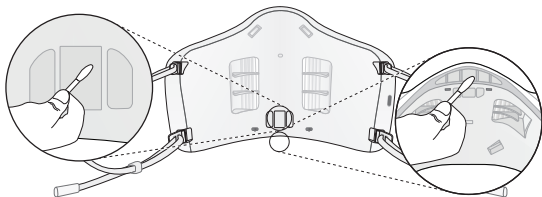


用蘸有清水或酒精的棉花棒擦拭排氣零件，然後用乾燥的棉花棒擦乾。

✓ 備註

- 為取得最佳效果，請在每次使用後清潔排氣零件。

維護耳帶

更換耳帶

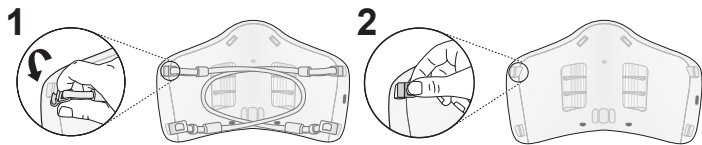

1 將耳帶和耳帶掛鉤往產品內部折，提起耳帶掛鉤的一側以分開耳帶。

2 要組裝新的耳帶，請將耳帶掛鉤往產品內部折，然後將耳帶的末端滑至耳帶掛鉤的凹槽。

清潔耳帶

1 如果耳帶髒了，請將其與產品分拆，然後用清水和中性清潔劑清洗。

2 在重新組裝之前，請先將耳帶完全弄乾。



為免變色，請勿長時間（超過 72 小時）將耳帶暴露在陽光下。

清洗手提袋

如果手提袋髒了，請將其乾洗。



用水清洗手提袋可能會損壞其表面並引起變形。

致電求助前

如果裝置出現故障，請在聯絡服務中心前檢查以下內容。

癥狀	解決方法
設備無法運作。	電量已耗盡或需要更換，請參閱「為電池充電」部分。
	環境溫度過高或過低，請檢查環境溫度。
風扇即使低速度運行亦會產生噪音。	PuriCare 濾網被髒物堵塞而需要更換。過濾器的更換期限可能會因特定操作環境的性質而有所不同。
電器無法運作。	設備和充電端子未連接，請將設備重新連接到充電端子。
	充電端子上有異物，請用柔軟的乾布將其清潔。
產品關閉時間早於預期。	電池未充滿電，請參閱「為電池充電」部分以了解說明。
產品發出異味。	PuriCare 濾網髒了，需要更換。更換過濾器的頻率取決於使用環境。
	內罩髒了，需要更換。
	面部防護罩需要清潔。

產品規格

產品外觀及規格會有所差別，因提高產品品質而恕不另行通知。

產品	
電源	5 V  1.8 (AAC 充電器) 內置可充電電池
電源輸入	1.8 W
尺寸(寬*深*高)	156 mm × 63 mm × 110 mm
建議工作溫度範圍	-20 °C ~ 50 °C
建議工作濕度範圍	5 % ~ 95 %

電池		
容量	(一般值) 860 mAh、3.182 Wh	
	(最小值) 820 mAh、3.034 Wh	
操作時間 (使用充滿電的電池)	高	約 4 小時
	中	約 6 小時
	低	約 8 小時
充電時間	約 2 小時	
建議充電溫度	10 °C ~ 40 °C	

・ 本產品充電與操作時間因電池或產品操作狀態而異。

備忘録

