LG
Life's Good

ENGLISH | ESPAÑOL

OWNER'S MANUAL

TOP MOUNT REFRIGERATOR

Please read this manual carefully before operating your set and retain it for future reference.

MANUAL DE USUARIO

REFRIGERADOR CON CONGELADOR SUPERIOR

Lea detenidamente este manual antes de empezar a utilizar el refrigerador y guárdelo como referencia para el futuro.

Model Name / Nombre de Modelo:
GT28BPP, GT28BPPM, GT28BPPX, GT28BPW, GT28BPWM, GT28BPWX, GT28WPP, GT28WPPM, GT28WPPX, GT28WPW, GT28WPWM, GT28WPWX, GT29BPP, GT29BPPM, GT29BPW, GT29BPWM, GT29WPP, GT29WPPM, GT29WPW, GT29WPWM, GT29BPPX, GT29BPWX, GT29WPPX, GT29WPWX, GT32WPZ, GT32BGZ, GT32BGW, GT32BPPK, GT32BPZ, GT32BPW, GT32WPS, GT32BGS, GT32BPS, GT32WPP, GT32BGP, GT32BPP, GT32WPW.

MFL68882502

www.lg.com

SAFETY MESSAGES

THIS MANUAL CONTAINS SEVERAL IMPORTANT SAFETY NOTICES. ALWAYS READ AND OBEY ALL OF THE FOLLOWING SAFETY MESSAGES.

⚠DANGER If you fail to follow these instructions you will be killed or seriously injured.

⚠WARNING Misuses of the product will cause you physical damage or personal wounds.

⚠CAUTION Inadequate use and installation will cause damage to your property.

All safety labels will inform you of potential danger, ways to reduce chance of injury and what can happen if instructions are not followed.

WARNINGS AND IMPORTANT SAFETY MEASURES
Read all instructions before use your product.

⚠ **WARNING.** This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that any part of the refrigerating circuit is damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is placed for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be placed depends on the amount of refrigerant used. The room must be $1m^2$ in size for every 8 grams of R600a refrigerant inside the appliance.

The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never start up an appliance showing any signs of damage. If in doubt, consult your service center.

⚠ **CAUTION. Risk of Fire**, keep in mind next caution points when you move or install your refrigerator, gas used in your appliance is inflammable:
- Avoid use any flame or heat sources to access to sealing system when the appliance is being fulled with refrigerant.
- In case of refrigerant leak the area must be completely ventilated before start working.
- Be careful, DO NOT damage refrigeration circuit.

⚠ **CAUTION. Risk of Fire or Explosion (Inflammable Refrigerant)**, the refrigerator only must be repaired by qualified personal. Do not drill refrigeration circuit. Read instructions in your Owner's Manual before use this product, all safety messages must be followed.

⚠ **CAUTION.** This appliance is not intended for being used by children, persons with physical or mental disabilities, persons with reduced sensory or mental capacity, or persons with lack of experience or know-how, unless they have supervision or instruction in relation to the use of the appliance by the person responsible for their safety. Children should be supervised to assure that they do not play with the appliance.

⚠ **NEVER USE EXTENSION CORDS.** Never connect multiple machines in the same socket, this can cause wiring to overcharge, warming, voltage vibrations and bad functioning.

⚠ **ELECTRICAL CORD REPLACEMENT.** If electrical cord gets damaged it must be replaced by the manufacturer, our service center or qualified LG Electronics personnel to minimize risks.

⚠ **GROUND CONNECTION.** In case of electrical surge, connection to ground will reduce risks of electric shock hazard. This unit must be grounded. Consult a qualified electrician. When moving your refrigerator, be careful not to step on the electrical cord with the machine's rollers.

⚠ **¡¡¡NEVER KEEP EXPLOSIVES INSIDE!!!.** Never store explosive substances or chemicals in your refrigerator such as benzene, alcohol, etc. It is DANGEROUS!!

⚠ **DANGEROUS FUN.** An empty refrigerator can be very dangerous for children. Remove doors or magnetic packaging when not be in use or secure it in a way to make it impossible to open and allow a child to go in as this can lead to suffocation. Never allow a child to climb, hang or play with the refrigerator compartments. They can get hurt themselves and damage the refrigerator.

⚠ **PLUG ACCESS.** The refrigerator-freezer must be placed in a way that the electrical cord can be pulled easily in case of emergency.

⚠ **WHAT TO DO WITH YOUR OLD REFRIGERATOR.** Your refrigerator contains liquids (refrigerant, lubricant) made of recyclable materials. All these materials must be sent to a recycling waste disposal site as they can be reused after a specific recycling process. Contact local authorities.

⚠ **WHEN CLOSING REFRIGERATOR DOOR.** Never place your thumb or fingers on the superior part of the handle, as it can be pressed against the lower part of the freezer handle. Keep away all fingers from injury areas such as where doors close cabinets and hinges, etc. Be careful when closing doors if children are nearby.

⚠ **DO NOT STORE ANIMALS.** Do not store any living animal in your refrigerator.

⚠ **NEVER USE MECHANICAL DEVICES.** Never use mechanical devices or any other means to accelerate the thawing process, use only those which are approved by the manufacturer.

⚠ **NEVER STORE ELECTRONIC DEVICES.** Never use electronic equipment to store food unless they are specific models approved by the manufacturer.

⚠ **WARNING.** The maintenance of the lowest area from the refrigerator's back side (see image) only must be done by qualified personal, do it by non qualified technician can produce risk of electric shock.

⚠ **CAUTION.** This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

⚠ **WARNING**. Keep free from any obstruction the air vents around the appliance and assembly structure.

⚠ **WARNING**. Do not damage the refrigerant circuit.

INSTALLATION

1. UNPACKING
Before installing your refrigerator, remove any tape or temporary stickers. Do not remove any stickers that feature warnings, the model serial number or the technical label of the product located on the back of the refrigerator. To remove adhesive tape residue, rub it well with your fingers and a little liquid detergent. Clean with warm water and let dry.

Do not use sharp instruments, rubbing alcohol, flammable liquids or abrasive cleaning products to remove the adhesive tape or glue. These products can damage the surface of your refrigerator. The shelves come already installed in their factory position. Remove the shelves and replace them according to your spacing needs.

2. INSTALL IT AWAY FROM HEAT SOURCES AND HUMID AREAS
In places with high temperatures, freezing capacity can be affected and cause high consumption of electrical energy. Never install in places with high humidity as this can cause oxidation and electric shock hazard.

3. THOUGH AND EVEN FLOOR
Your refrigerator must be leveled and placed on a strong floor. An unstable installation can produce noise and vibrations. If the floor is uneven, level the unit by twisting the height adjusting screw, this will eliminate unwanted sounds and vibrations.

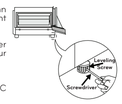

NOTE. For adjusting leveling screws lift the front of the refrigerator and insert a screwdriver in the holes located in the leveling screws, then turn them clockwise ( ) to raise your refrigerator and counter-clockwise ( ) to lower it.

4. AMBIENT TEMPERATURE
The refrigerator will work efficiently if room temperature is between 10 °C and 43 °C (50 °F and 109.4 °F).

5. A PROPER DISTANCE FROM ADJACENT ITEMS
Adequate air flow is needed for an efficient operation. Keep your refrigerator at a relative distance from other objects. Reduced distances between the unit and other nearby objects can diminish freezing capacity and rise consumption of electrical energy. **NOTE:** Be careful when you open the doors, one of them can be open more than the other one. Avoid hit the doors with items around the refrigerator area.

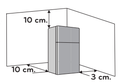

The room must be $1m^2$ in size for every 8 grams of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification label inside the appliance.

⚠ **WARNING. EXCESSIVE WEIGHT HAZARD.** Use the assistance of two or more persons to move or install the refrigerator. Not following these instructions may cause injury to the back and other parts of the body.

6. WAITING PERIOD
Wait at least one hour before connecting, after installation was completed.

7. CONNECTION
⚠ **DANGER FOR YOUR PERSONAL SAFETY,** this device must be properly grounded. Connect to a single undamaged socket. Not having proper installation will require you to call qualified personnel to achieve it.

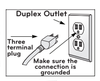

Do not, under any circumstance, cut or extract the third prong from the plug. It is your responsibility and obligation to replace two-prong outlets with that of an adequately grounded three-prong outlet.

⚠ **WARNING. REPLACING ELECTRICAL CORD,** if the electrical cord is damaged, it must be replaced by our service center or qualified LG technician to avoid any risk. NEVER disconnect the refrigerator by pulling the electrical cord, always grip the plug firmly and disconnect it directly from the outlet.

8. BEFORE STORING FOOD
Leave your refrigerator working from 2 h to 3 h before storing food. If operation is interrupted wait 5 min before trying again.

9. IN CASE OF UN INSTALLING
If you wish to dispose of your refrigerator, keep in mind the following **Warning.**

⚠ **WARNING.** If the use of this unit is no longer needed, please contact local authorities to dispose of this product in a safe way due contains Pentane-cycle or pentane as gas for insulation and R600a as refrigerant. Insulation gases and refrigerant require a special elimination process. This product contains flammable insulation and refrigerant.

IDENTIFICATION OF PARTS

NOTE: This guide covers different models. Your refrigerator could have some or all of the features and parts listed below. The location of some of the parts may not correspond with your model.

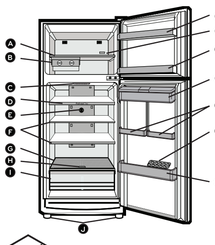

- Ⓐ Freezer Shelf (Glass)
- Ⓑ Ice Maker (Twist'n Serve)
- Ⓒ Refrigerator Lamp (LED)
- Ⓓ Refrigerator Shelf (Pull-out Tray)
- Ⓔ Temperature Control (Refrigerator)
- Ⓕ Refrigerator Shelf (Glass)
- Ⓖ Magic Crisper (Plastic), cover for vegetable drawer, it controls humidity
- Ⓗ Humidity Control
- Ⓘ Vegetable Drawer, keeps vegetables and fruits fresh
- Ⓙ Leveling Screws
- Ⓚ Freezer Basket
- Ⓛ Temperature Control (Freezer)
- Ⓜ Water Container
- Ⓝ Refrigerator Small Basket
- Ⓞ Egg Tray
- Ⓟ Refrigerator Big Basket

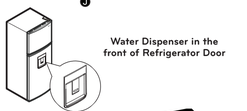

Water Dispenser in the front of Refrigerator Door

Ice Maker (Twist's Serve)

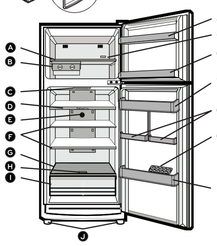

- Ⓐ Freezer Shelf (Glass)
- Ⓑ Ice Maker (Twist'n Serve)
- Ⓒ Refrigerator Lamp (LED)
- Ⓓ Refrigerator Shelf (Pull-out Tray)
- Ⓔ Temperature Control (Refrigerator)
- Ⓕ Refrigerator Shelf (Glass)
- Ⓖ Magic Crisper (Plastic), cover for vegetable drawer, it controls humidity
- Ⓗ Humidity Control
- Ⓘ Vegetable Drawer, keeps vegetables and fruits fresh
- Ⓙ Leveling Screws
- Ⓚ Freezer Basket
- Ⓛ Temperature Control (Freezer)
- Ⓜ Refrigerator Big Basket
- Ⓝ Refrigerator Small Basket
- Ⓞ Egg Tray

OPERATIONS AND FUNCTIONS

1. CONNECTION
Remember that your refrigerator must be grounded.

⚠ **CAUTION**. If operation is interrupted, wait 5 minutes before restarting it.

2. ICE MAKER OPERATION
Ice Maker "Twist'n Serve"
- For filling your ice shelves first you must remove ice container (Figure 1), then pull out the ice shelves (Figure 2) and fill them with water until the indicated level (Figure 3).

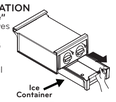

Figure 1

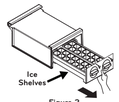

Figure 2

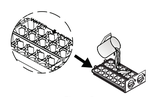
Figure 3

⚠ **WARNING.**
Fill only with potable water.

- Place the ice shelves and ice container in their original position. For removing ice cubes, turn the knob clockwise and the ice cubes will fall into ice container (Figure 4).
- In order to accomplish with your spacing needs, your ice maker can be moved from one side to another (Figure 5).

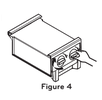
Figure 4

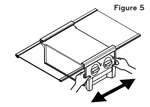
Figure 5

3. THAWING
Thawing occurs automatically, you do not need to worry about this. Thawed water will flow into the evaporation shelf at the back of the refrigerator.

4. TEMPERATURE CONTROL SETTINGS
Control types for adjusting cooling.

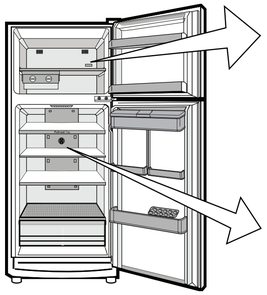

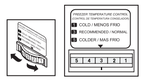

Freezer Temperature Control

NOTE: Be careful of not blocking or moving with food packages the temperature controls, you might change or not recognize the temperature in which your refrigerator is set.

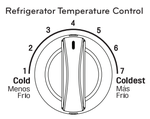

Refrigerator Temperature Control

Control of:	¿What does it control?	¿How it can be adjusted?
Freezer	Controls the flow of cold air that goes from the freezer into the refrigerator.	Change the control by sliding it softly, the arrow shows the temperature selected for your freezer compartment.
Refrigerator	Controls the temperature of the refrigerator (See table in next page as reference).	Turn the knob until indicates the desired temperature (See table below as reference).

Control of:	Amount of Stored Food: Big Amount	Regular Amount	Few Amount
Freezer	 Adjust in 3	 Adjust in 3	 Adjust in 1
Refrigerator	 Adjust in 7	 Adjust in 4	 Adjust in 1

NOTE: For an optimal performance of your refrigerator, it is necessary adjust the control in the settings recommended by the manufacturer.

USING YOUR REFRIGERATOR

1. SHELVES
The shelves of your refrigerator can be adjusted to comply with your storage necessities; depending on the model you have it can include glass shelves or plastic shelves. Storing your foods together and adjusting the shelves to different heights will help you to locate what you need in an easier way. This also helps your refrigerator to stay shut longer which will save you energy.

IMPORTANT. While your refrigerator glass shelves are cold do not clean with hot or warm water. The glass shelves may break if they're exposed to rapid temperature changes or hard impacts. For your safety the glass shelves are made out of tempered glass so when at breaking they will fracture into tiny fragments. **NOTE:** Be careful while moving or relocating the shelves, they are heavy. If moving the shelves is required keep in mind to locate them in a safe environment to prevent them from breaking.

Shelf Refrigerator
In order to remove the refrigerator shelves follow these instructions:
1. Lift the back of the shelf from below, see Figure 6. Use enough force to lift the shelf and release it from the holders, see Figure 7.
2. Slide the shelf forward to remove it completely, see Figure 8.

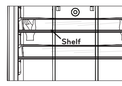

Figure 6

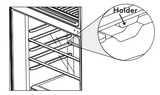

Figure 7

Figure 8

NOTE: Be careful when you remove the shelves from the refrigerator, because they are secured to the refrigerator walls.

2. COMPARTMENTS
• Door Baskets
The door baskets are removable for easy cleaning and adjustment.
1. To remove the basket, simply lift the bin up and pull straight out.
2. To replace the basket, slide it in above the desired support and push down until it snaps into place.



NOTE: Empty the food charge before you move the door basket.

⚠ **WARNING.** Someone could get hurt if the baskets are not well assembled.

⚠ **CAUTION.** DO NOT allow children play with baskets. Sharp corners on basket could cause injury.

• Vegetable Drawer (Magic Crisper)
The magic crisper provides freshier tasting fruit and vegetables by letting you easily control humidity.

High lets moist air out of the crisper for best storage of fruit.



Low keeps moist air in the crisper for best storage of fresh, leafy vegetables..

To remove the crisper, follow these instructions:
1. Pull out the crisper to full extension, lift the front up, and pull straight out.
2. To install the crisper, slightly tilt up the front, insert the drawer into the frame and push it back into place.

3. WATER CONTAINER (some models)
Your refrigerator has a system that allows you having cold water without opening refrigerator door. For dispensing water, push backward the dispenser lever with a glass until the water flows.

NOTE: After using your dispenser, it is normal if some drops fall, you can reduce this by removing slowly the glass from the lever.

3.1 Water Tank Cleaning
For cleaning the water tank of your dispenser, follow the next steps:
- Take the water tank with both hands and pull it out to you, this will remove it from refrigerator (Figure 9).
- Once the tank is uninstalled from the door, lift up the holders of the lid and take it out (Figure 10).
- Wash the tank with water and do not use detergents or cleaners with odor, after this, dry with a piece of cloth (see Figure 11).
- Finally, align the lid with the water tank (see figure 12), then close the holders (see Figure 13), you must listen a "click", this means that the lid has been correctly assembled.

Figure 9



Figure 10

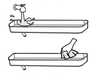
Figure 11

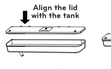

Figure 12



Figure 13

3.2 How install the Water Tank
For installing the tank in its original position (in refrigerator's door), follow the next instructions:
- Take the water tank and insert the valve in the hole of the refrigerator (Figure 14).
- Put the tank over the guides and push it down (Figure 15).

NOTE: If the water container is not well placed, water could spill or drain and no water will come out from the dispenser in the door.

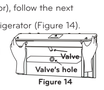

Figure 14

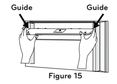

Figure 15

3.3 Filling Water Tank
For supply the tank with water, follow the instructions below:
- With the tank already assembled in the refrigerator, lift the tank's lid and use a glass or jar for fill up the tank (see Figure 16).
- Close the lid by pushing and release until you hear a "click", this means that the lid was correctly closed (Figure 17).
- **Dispense 2 or 3 times to purge the system.**

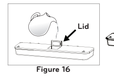

Figure 16

Figure 17

NOTE: Do not fill the tank completely in order to avoid water spills, the maximum capacity it is indicated in your water tank.

⚠ **WARNING.** Fill only with potable water. Using other beverages (as beer, soda or liquids with sugar) may damage the dispensing system.

If you need to empty the water tank, follow the next steps:
- Remove the water tank and its lid, see section "3.1 Water Tank Cleaning".
- Dispose the leftover water.
- Assemble the lid and put the tank in the refrigerator (See section "3.2 How Install the Water Tank").

4. DOOR ALARM (in some models)
The Door Alarm function is designed to prevent refrigerator malfunctioning that could occur if refrigerator door remains open. If refrigerator door is left open for more than 1 minute, a warning alarm sounds at 30 second intervals.

NOTE: This function can not be deactivated.

5. SMART DIAGNOSIS™ (in some models)
Use the function to contact the service center and receive precise diagnosis when the refrigerator malfunctions or fails. Use it only to connect to the consultant and do not use it in normal times.

5.1 How to use this function
1. Open all the doors of the refrigerator.
2. Inside your refrigerator you will find a switch (Figure 18), you have to identify the switch used in your device, according to the model it can be button type (Figure 19) or magnetic type (Figure 20).

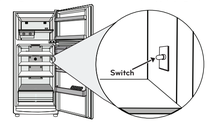

Figure 18

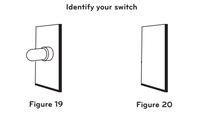

Figure 19

Figure 20

3. For button type switch, press the switch 5 times within 8 seconds. For magnetic type switch, open the refrigerator door and after this close it and open it 5 times within 8 seconds, now the feature SMART DIAGNOSIS™ is activated.
4. Hold the mouthpiece of your phone in front of the speaker that is located on the right hinge of the refrigerator door (Figure 21).
5. Keep the phone in place until the tone transmission has finished. Once the data transmission is completed and the tones have stopped, resume your conversation with the specialist, who will then be able to assist you in using the information transmitted for analysis.

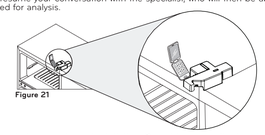
Figure 21

⚠ **CAUTION.** The transmission sound may be irritating. Do not take away the telephone until the sound stops for good diagnosis.

6. After the completion of the data transmission, listen to the explanation of the consultant about the result of the smart diagnosis. When the data transmission is completed, along with the display of the data transmission completion, the refrigerator will be automatically turned off and on a few seconds later. Listen to the explanation of the consultant about the result of the analyzed diagnosis and follow the instructions.

Please consider next points when you are using SMART DIAGNOSIS™.
- Call quality differences by region may affect the function.
- Use the home telephone for better communication performance, resulting in better service.
- Bad call quality may result in poor data transmission from your phone to the machine, which could cause Smart Diagnosis™ to malfunction.

CLEANING

In order to avoid bad or unwanted odors, is important to keep the refrigerator clean. Any spilled food must be cleaned immediately, they can stain and/or acidify the plastic parts of the refrigerator if they are let to get dry.

⚠ **WARNING.**
- Unplug the electrical cord always before cleaning around the electrical parts (lamps, switches, etc.).
- Clean any humidity to avoid any liquid might get into any electrical part.
- Do not touch the frozen parts with wet objects, humid or wet hands, they can stick to frozen surfaces.

Exterior. Use a warm mixture of mild detergent or soap to clean the refrigerator's surface. Clean with a damp cloth and dry immediately.

Interior. It is recommended to clean the interior often. Wash all the baskets and drawers with a mixture of bicarbonate or mild detergent with water. Clean and dry. Using other kinds of products might damage your refrigerator.

After Cleaning. Check that the electrical cord is not damaged or overheated and it is properly plugged.

Door lining and gaskets. For plastic parts do not use cleaners, hard detergents, bleach or cleaners with petroleum.

Plastic Parts. Do not use paper towels, abrasive cleaners or flammable products, these could damage or scratch the product.

Back Cover. In order to get an efficient performance of your refrigerator, clean its back cover at least twice a year. Verify that electrical cord is not damaged and the plug is not overheated and it's connected in outlet in a proper way.

STORING FOOD SUGGESTIONS

- Keep fresh food in the refrigerator compartment.
- Freeze only small amounts of food.
- After you freeze some food, once you thaw it do not freeze it again, it looses its taste and nutritional value; after thawing it, you might keep it in the refrigerator up to 48 hours.
- Do not store food that might get decomposed under low temperatures (ie. pineapple, bananas and cantaloupe).
- Do not store garlic in the refrigerator.
- When you store food in the refrigerator use closed containers in order to avoid odor mixing and loosing of humidity.
- Always clean the food before placing them in the refrigerator. Wash and dry the fruits and vegetables. Keep fresh food in the refrigerator.
- It is recommendable to store onion in plastic bags to avoid other food odor to get mixed with it odor.
- If you are going to store ice cream for a long period of time, place it on the freezer shelf and not on the freezer door.
- When storing eggs always place them in the highest shelf or in the first basket in order to keep them fresh for a longer period of time.
- Throw away any food that is being decomposed; it may contaminate other foods.
- Store cold cuts, cheese and sausages in bags or plastic sealed containers.
- Do not store on freezer glass containers, they might break.
- Do not store hot food inside the refrigerator they might decrease the refrigerator's efficiency.
- For models with water dispenser it is recommended change water in container at least once per week.
- Do not store any medicine in your refrigerator because they can be damaged or cause an unexpected reaction.

WHAT TO DO WHEN...

The refrigerator does not work	• Check if any fuse is broken in the electric facility. • Check if the power cord is correctly plugged. • Check if the power outlet is not damaged. • Identify if there are any high consume electrical appliances working at the same time, unplug the one that are not necessary.
There is a power interruption	In case of a black out, call your electric company and ask how long it will last. • In case of a 24 hour or less black out, do not open the refrigerator, this will keep the food fresh. • In case of a longer black out, do one of the following options: 1. Pull out all of the frozen food and keep them in an ice chest. 2. Put 2 lbs (0, 907 Kg) of frozen ice (make sure you use gloves) for each square foot (28 L) inside the freezer. This task will preserve the food for 2 to 4 days. While handling dry ice (CO_2), wear gloves to protect your hands from frostbite. 3. In case you do not possess neither ice chest or dry ice (CO_2), consume your food as soon as possible.
The temperature of the refrigerator or the freezer is too warm or hot	• Check that the temperature control is in the right position. • Place the refrigerator away from any heat sources or direct sunlight. • Open the doors only when is necessary. • There is too many food that blocks the air vents. • Don't let the doors open for a long period of time.
I can hear some weird or abnormal sounds	• Check that the refrigerator is placed over an even leveled surface, if not, adjust the refrigerator using the leveling height adjusting screws. • Remove the unnecessary object from the back or top of the refrigerator. • Check that the voltage is the correct one, if not call your electric company.
There are some odors in the refrigerator	• Store all food in sealed containers. • Frequently clean the refrigerator inside.
Some humidity is formed in the cabinet's surface	• When the weather is humid is normal. • The door might be opened, check that is properly closed.
The front part of the refrigerator is getting warm	• Do not worry, is part of the normal functioning of the refrigerator, and this happens in order to avoid condensation or "sweat". If this comes to happen, just clean with a dry piece of cloth.
The compressor works too frequently and for extended periods of time	• Check if the temperature controls are placed in the maximum, if so, placed them in the middle setting. • Check that the doors are properly closed. • Do not store over heated products. • Do not let the doors open for a long period of time. • Move away from any heat sources the refrigerator.

REMEMBER: In a power failure, a full freezer stays cold longer than a partially filled one. A freezer full of meat stays cold longer than a freezer full of baked goods.

WHAT YOU NEED TO KNOW ABOUT YOUR REFRIGERATOR

1. THE OVERALL PERFORMANCE OR EFFICIENCY OF YOUR REFRIGERATOR MAY BE AFFECTED IF:
- It is placed near a heat source or humid area.
- You open the door frequently.
- If you introduce water or any object in the cold air vents.
- You block the air vents with food.
- You store hot food.

2. DURING VACATIONS WE RECOMMEND YOU THE FOLLOWING:
- If the vacations are for a short period of time place the freezable food in the refrigerator.
- If you are going to be outside or away for a longer period of time, do the following:
  1. Take out all food.
  2. Unplug the electrical cord.
  3. Leave the doors open to avoid bad odors.
  4. Thoroughly clean the refrigerator.
  5. Empty and clean the water bin not forgetting to purge the system (turning on the switch).

3. IF YOU ARE PLANNING TO MOVE OR TO CHANGE YOUR REFRIGERATOR FROM ITS CURRENT POSITION
- Remove and secure all attachments inside the refrigerator.
- To avoid any damage to the leveling height adjusting screws, turn them completely until the base.

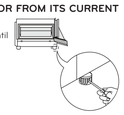

- Place the electrical cord in the hook located in the upper left side.
- Clean and empty the water container and do not forget to purge the system (turning on the switch).
- After these procedures, you will be able to move your refrigerator.



- When you move your refrigerator, place a protection sheet, such as packing cartoon under the refrigerator to avoid floor damage. Always pull your refrigerator straight out. Do not shift from side to side or "walk" the refrigerator when you are moving it.
- Use the assistance of two or more persons to move or install the refrigerator. Not following these instructions may cause injury to the back and other parts of the body.

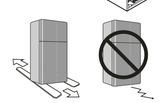

4. IN CASE OF REFRIGERANT LEAK
- Do not touch the refrigerator or the outlet and ventilate the room immediately.
- The explosion by spark may cause fire or burn.
- Because this refrigerator uses natural gas (isobutene, R600a) as the environment-friendly refrigerant, even a small amount (80-90 g) is combustible.
- When the gas is leaked by the severe damage during delivering, installing or using the refrigerator, any spark may cause fire or burn.

5. LAMP REPLACEMENT (LED)
Your refrigerator has a LED lamp for changing it you must call Service Center to perform the replacement by qualified technician.

⚠ **WARNING.** In case of replacement, the new lamp must have the same specification than the original one.

6. THE FRONT SIDE WARMS UP
The front wall of the cabinet of the refrigerator might warm up sometimes specially during installation. DO NOT ALARM! It's normal due to avoid humidity or "sweat".

7. THE BACK AND LATERAL SIDE OF THE REFRIGERATOR WARM UP (some models)
¡DO NOT ALARM! The warming up is normal because in both sides the refrigeration pipes are located.

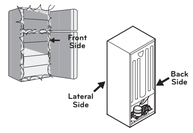

⚠ **WARNING.** In case of your refrigerator was damaged for some flood, do not use it until qualified technician confirms its performance.