



# Colour Monitor

USER GUIDE

BENUTZERHANDBUCH

MANUEL D'UTILISATION

GUIDA UTENTE

GUIA DEL USUARIO

MODEL : StudioWorks 44i



## Table of Contents

Monitor Registration .....	1
Important Precautions .....	2
Tilt/Swivel Base .....	4
Installation .....	5
Control Layout and Descriptions .....	6
Power Management System .....	8
Low Radiation Compliance .....	8
DDC (Display Data Channel) .....	8
General Operation .....	9
Troubleshooting .....	10
Service .....	11
Specifications .....	12

영머

## Monitor Registration

The model and serial numbers are found on the rear of this unit. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase : \_\_\_\_\_  
Dealer Purchased From : \_\_\_\_\_  
Dealer Address : \_\_\_\_\_  
Dealer Phone No. : \_\_\_\_\_  
Model No. : \_\_\_\_\_  
Serial No. : \_\_\_\_\_

### Notice

All rights reserved. Reproduction in any manner, in whole or in part, is strictly prohibited without the written permission of LG Electronics Inc.

### Trademark Acknowledgments

**LG** is a trademark of **LG Electronics Inc.**

**IBM** is a registered trademark and **VGA** is a trademark of International Business Machines Corporation.

---

**WARNING** : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**AVERTISSEMENT** : Ne pas placer cet appareil dans un endroit humide. Cela peut entraîner un incendie ou une décharge électrique.

## Important Precautions

This unit has been engineered and manufactured to assure your personal safety, but improper use can result in potential electrical shock or fire hazard. In order not to defeat the safeguards incorporated in this monitor, observe the following basic rules for its installation, use, and servicing. Also follow all warnings and instructions marked directly on your monitor.

### On safety

1. Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable standards (UL/CSA or VDE) if not being provided by the supplier.
2. Operate the monitor only from a power source indicated in the specifications of this manual or listed on the monitor. If you are not sure what type of power supply you have in your home, consult with your dealer.
3. Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.
4. **DO NOT OPEN THE MONITOR.** There are no user serviceable components inside. There are Dangerous High Voltages inside, even when the power is Off. Contact your dealer if the monitor is not operating properly.
5. To avoid personal injury :
  - Do not place the monitor on a sloping shelf unless properly secured.
  - Use only a stand recommended by the manufacturer.
  - Do not try to roll a stand with small casters across thresholds or deep pile carpets.
6. To prevent Fire or Hazards:
  - Unplug the monitor when you leave the room for a long time.
  - Never leave the monitor On when leaving the house.

- Keep children from dropping or pushing objects into the monitor's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this monitor.
- During a lightning storm or when the monitor is to be left unattended for an extended period of time, unplug it from the wall outlet.
- Do not bring magnetic devices such as magnets or motors near the picture tube.

### **On installation**

1. Do not allow anything to rest upon or roll over the power cord, and do not place the monitor where the power cord is subject to damage.
2. Do not use this monitor near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
3. Monitors are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built up heat can cause failures which may result in a fire hazard. Therefore, NEVER:
  - Block the bottom ventilation slots by placing the monitor on a bed, sofa, rug, etc.
  - Place the monitor in a built-in enclosure unless proper ventilation is provided.
  - Cover the openings with cloth or other material.
  - Place the monitor near or over a radiator or heat source.

### **On cleaning**

- Unplug the monitor before cleaning the face of the picture tube.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the picture tube because overspray may cause electrical shock.

### **On repacking.**


- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

## Tilt/Swivel Base

- Turn Off the equipment and all attached options.
- Carefully set the monitor face-down with the underside facing you.

### Installation

1. Align the hooks on the tilt/swivel stand with the matching slots in the base of the monitor.
2. Insert the hooks into slots.
3. Slide the tilt/swivel stand toward the front of the monitor until the latches click into the locked position.

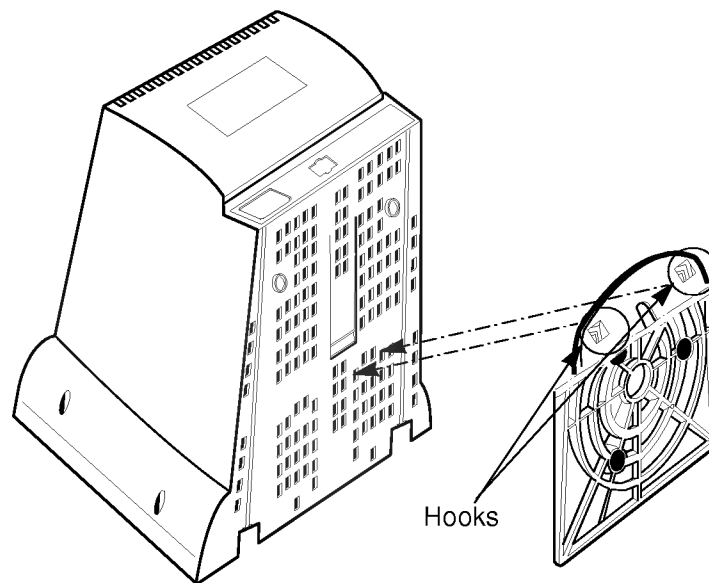

## **Installation**

The supply voltage is marked on the ID label located on the rear panel of the monitor. If your local voltage is different, do not use the monitor and contact your supplier before using the display.


## **Connections**

To connect your monitor after the video adapter is properly installed:


1. Turn OFF the power to your computer and all its attached options.
2. Position the monitor and the computer so that you can easily get to the back panel of each.
3. Connect the signal cable with D-sub connector to the graphics board on your PC as described in your PC Owner's Manual.
4. Tighten the screws on the video cable connectors to keep them from coming loose and to prevent radio and TV interference.
5. Connect the power cord to the AC receptacle on the back of the monitor. Plug the other end of the power cord into a properly grounded electrical outlet.
6. The socket-outlet should be installed near the equipment and should be easily accessible.

## Control Layout and Descriptions

### Front View

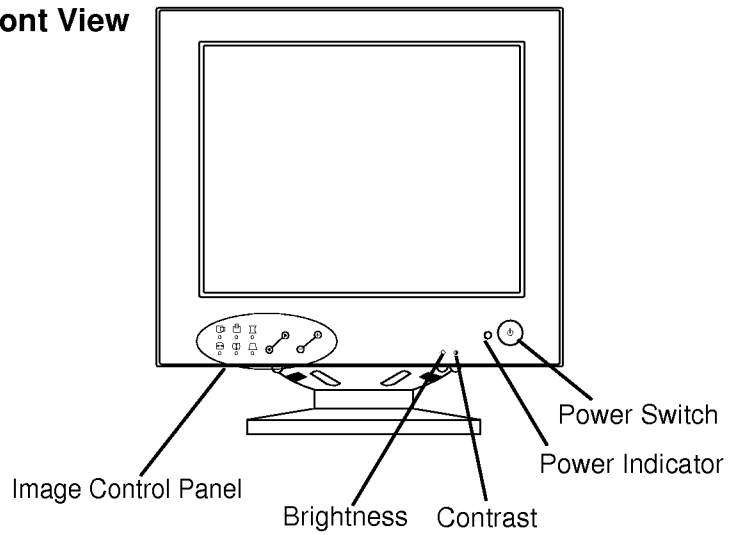

### Rear View

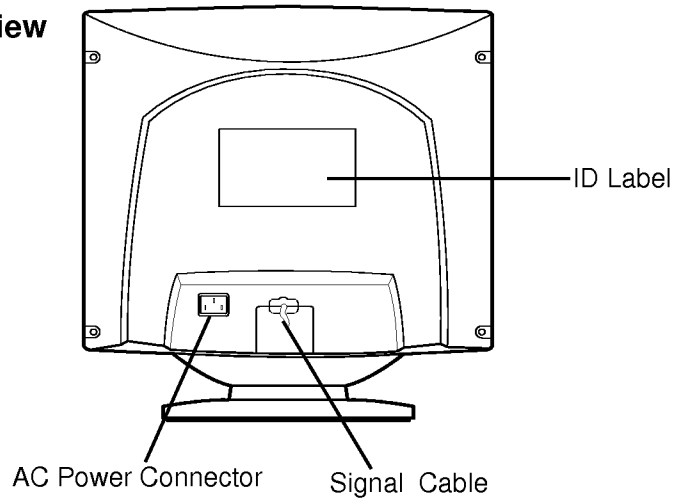




**Power Switch**

Used to turn the power On or Off.

**Power Indicator**

The power indicator lights when the power is On, and indicates the operating status of the display.

- Contrast (To adjust Contrast level)
- ☉ Brightness (To adjust Brightness level)

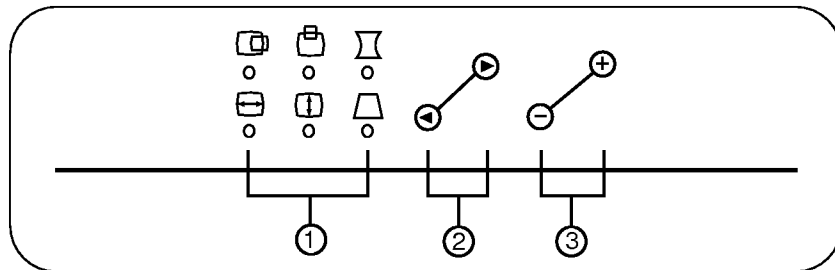**Image Control Panel****① Image control icons**

- ☐ Horizontal Position (To move picture image left and right)
- ☐ Horizontal Width (To adjust image width)
- ☐ Vertical Position (To move image up and down)
- ☐ Vertical Height (To adjust image height)
- ▭ Side Pincushion (To correct the bowing in and bowing out of the image)
- ▭ Trapezoid (To correct geometric distortion)

**② Image adjustment**

Use either the ◀ or ▶ button to select the icons which you wish to adjust and display.

**③ -/+ buttons**

Used to set digital values for each of the select on screen control item by pressing + button for increment or - button for decrement.

**\* Recall function**

When the user wants to recall one of the 5 factory fixed image modes, push the - and + buttons simultaneously. To recall the next image mode, press both the - and + buttons again.

## **Power Management System**

When used in conjunction with a PC having power saving circuitry, or a PC running screen blanking software this monitor automatically reduces its power consumption when the computer is not in use. The monitor has power-saving states, indicated by the light-emitting diode (LED) on the front panel. These power-saving states exceed the Environmental Protection Agency (EPA) Energy Star requirements using the methodology for Display Power Management Signals (DPMS). Developed by the Video Electronics Standards Association (VESA).

## **Low Radiation Compliance (MPR II)**

This monitor meets one of the strictest guidelines available today for low radiation emissions, offering the user extra shielding and an anti-static screen coating. These guidelines, set forth by a government agency in Sweden, limit the amount of emission allowed in the Extremely Low Frequency (ELF) and Very Low Frequency (VLF) electromagnetic range.

## **DDC (Display Data Channel)**

DDC is a communication channel over which the monitor automatically informs the host system (PC) about its capabilities. This monitor has three DDC functions; DDC2B and DDC2AB. DDC2B carry out uni-directional communication between the PC and the monitor. Under these situations, the PC sends display data to the monitor but not commands to control the monitor settings. DDC2AB has the function of bi-directional communication. For example, the PC can fetch screen data from monitor and adjust the screen with the PC keyboard.

NOTE: Your PC must support DDC functions for this feature to work.

## General Operation

After following the installation instructions and getting familiar with the controls, you are ready to operate the monitor.

1. Turn on the monitor, PC and other peripherals you plan to use.
2. After the PC has booted (powered up and finished self-testing), enter a software application that uses the full screen display.
3. While looking at the image on the screen, adjust the controls for the image size, centering, brightness and contrast levels you prefer.
4. This monitor is an auto scanning monitor, capable of synchronizing with a variety of video standards automatically. The Scanning Mode Table below indicates the resolution, as well as the horizontal and vertical refresh rates, of some of the modes that this monitor can match to the output of your PC's graphics card.  
Other resolutions and standards can also be synchronized and displays on this monitor as long as they are within the horizontal and vertical frequency range of this monitor. See the specifications for this information.
5. You should use vertical frequencies above 72Hz, because of ergonomical reasons.
6. Because of ergonomical reasons you should not use the colour blue on a dark background. (Bad readability at low character contrast)

**Scanning Mode Table**

Mode	Display Mode	Horizontal Frequency	Vertical Frequency	Polarity		Comments
				Horiz sync	Verti sync	
1	VGA640 x 400	31.47 KHz	70 Hz	-	+	Factory fixed, but may be updated by user's setting.
2	VGA640 x 480	31.47 KHz	60 Hz	-	-	
3	VESA640 x 480	37.50 KHz	75 Hz	-	-	
4	SVGA/VESA75,800 x 600	46.88 KHz	75 Hz	+	+	
5	1024 x 768	48.40 KHz	60 Hz	-	-	

## Troubleshooting

**Symptom:** The power LED is amber.

**Possible causes:**

- Display power management mode.
- There is no sync signal.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapters configuration.
- The frequency of the sync input is outside the operating range of the monitor.

HORZ: 30KHz-50KHz

VERT: 50Hz-90Hz

**Symptom:** The image on the SCREEN is not centered, or too small or not a rectangle shape.

**Possible Causes:** Image adjustment not been done yet in the current operating mode. Use the SELECT and +/- buttons to set the image to your liking.

**Symptom:** The monitor doesn't enter the power saving off mode (Amber led).

**Possible Causes:** Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

## **Service**

1. Unplug the monitor from the wall outlet and refer servicing to qualified service personnel when :
  - The power cord or plug is damaged or frayed.
  - Liquid has been spilled into the monitor.
  - The monitor has been exposed to rain or water.
  - The monitor does not operate normally following the operating instructions. Adjust only those controls that are covered in the operating instructions. An improper adjustment of other controls may result in damage and often requires extensive work by a qualified technician to restore the monitor to normal operation.
  - The monitor has been dropped or the cabinet has been damaged.
  - The monitor exhibits a distinct change in performance.
  - Snapping or popping from the monitor is continuous or frequent while the monitor is operating. It is normal for some monitors to make occasional sounds when being turned on or off, or when changing video modes.
2. Do not attempt to service the monitor yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
3. When replacement parts are required, have the service technician verify in writing that the replacements used have the same safety characteristics as the original parts. Use of manufacture specified replacements can prevent fire, shock, and other hazards.
4. Upon completion of any service or repairs to the monitor, ask the service technician to perform the safety check described in the manufacturer's service manual.
5. When a video monitor reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the monitor.

## Specifications

**Picture tube** : 14 inch (12.9 inches viewable), Tinted,  
90 degree deflection  
0.28 mm, Non-Glare screen

**Horizontal Frequency** : 30 ~ 50 KHz

**Vertical Frequency** : 50 ~ 90 Hz

**Video Bandwidth** : 65 MHz

**Display Area** : 250 X 185mm/9.8 X 7.3 inches (HXV)

**Signal connector** : 15 pin D-Sub type

**Power input** : 100-240VAC, 50/60Hz, 1.5A

### Power Consumption Table

LED Color	States	Power Consumption
Green	On	≤80 watts
Amber	Stand-by/ Suspend	≤15 watts
Amber	Off	≤ 5 watts

**Dimensions** : 13.9 X 15.6 X 14.3 inches (Without T/S Base)  
(WXDXH) 352 X 395 X 361 mm

**Weight (net)** : 23.2 lbs (10.5Kg)

Information in this document is subject to change without notice and does not represent a commitment on the part of LG Electronics Company, Ltd.

## **FCC Compliance Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by LG Electronics Inc. for compliance could void the user's (or your) authority to operate the equipment. Only peripherals (digital input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this monitor. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Only shielded Signal Cables may be used with this System.

### **Canadian D. O. C. Notice**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

**MODEL : StudioWorks 44i**

P/NO : 3828TUL003W (S-9611)



## DECLARATION OF CONFORMITY

We LG Electronics Inc.  
184 Kongdan-dong, Kumi-city  
Kyoungbuk, Korea

declare under our sole responsibility that the product

Colour Display Monitor Model StudioWorks 44i

to which this declaration relates is in conformity with the following  
standard or other normative documents:

EN 50082-1/1992, EN 55022/1987, EN 60555-2,-3/1987

following the provisions of the EMC Directives

89/336/EEC, 92/31/EEC and 93/68/EEC.

Monitor OBU, Kumi Plant  
LG Electronics Inc. Korea

Kumi, October 20, 1995

\_\_\_\_\_  
(place and date of issue)

D.H.Jeong, Manager

\_\_\_\_\_  
(Name and signature of authorized person)

