



SIMPLE MANUAL

Wireless Sound Bar

To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL
SH5



ENGLISH

DEUTSCH

FRANÇAIS

NEDERLANDS

SLOVENŠČINA

ITALIANO

ESPAÑOL

EAHHNIKA


PORTUGUÊS

www.lg.com

Copyright © 2017 LG Electronics. All Rights Reserved




Front Panel



The buttons are located on the rear.

- P/I** Standby / On
- F** Selects Function
- +** Adjusts Volume

Rear Panel

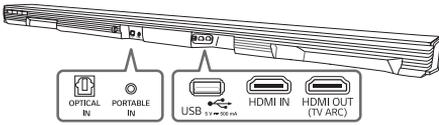

- OPTICAL IN** Connect to an Optical device
- PORTABLE IN** Connect to a Portable device
- USB port** Connect to a USB device
- HDMI IN** Connect to HDMI out on a device
- HDMI OUT (TV ARC)** Connect to a TV

1 Subwoofer Connection

Place the wireless subwoofer near the speaker and follow steps below.

- 1 Connect the power cord of wireless subwoofer to the outlet.
- 2 Turn on the main unit. :
The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

Subwoofer Connection Manually

- 1 Reset the Subwoofer
If the green LED on the subwoofer blinks quickly, skip this step and go to 2
 - Press and hold **pairing** button for 5 seconds.
 - The LED lights up alternately in red and green.
 - Plug out the power cord. After the LED turns off completely, plug in the power cord again.

When the reset is completed, the subwoofer's green LED blinks quickly.

- 2 Reset the sound bar
 - Adjust volume to minimum. "MIN" appears on display window.
 - Press and hold **Mute** (M) button on the remote control for 3 seconds. "SUB - WF RESET" appears on display window.
 - Turn the sound bar's power off and on while the subwoofer's green LED blinks.


When the connection is completed, you can see the green LED on the subwoofer.

! Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1m to prevent wireless interference.

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

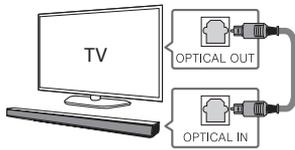

B HDMI(ARC) Connection


- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

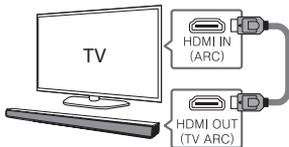

HDMI connection is unavailable if your TV does not support HDMI ARC.

Additional Device Connection

- 1 Connect to the external device as follows.

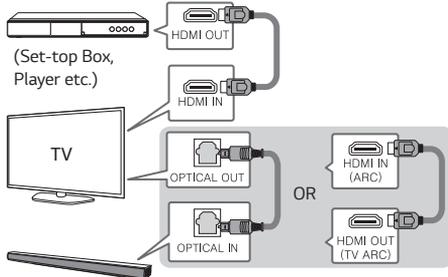

- 2 Set the input source by pressing F on the remote control or unit repeatedly.




: Turns down the volume at night.

AV SYNC: Synchronizes the audio and video.

AUTO VOL: Adjusts the volume level appropriately.

AUTO POWER: Automatically turns on by an input source.

Replacement of battery

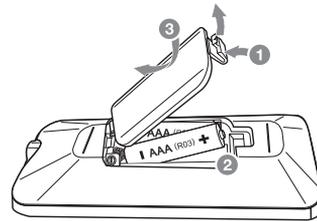

Additional Information

Specification

Power consumption	Refer to the main label.
	Networked standby : 0.5 W (If all network ports are activated.)
AC adapter	<ul style="list-style-type: none">• Model : DA-38A25• Manufacturer : Asian Power Devices Inc.• Input : 100 - 240 V ~ 50 - 60 Hz 1.2 A• Output : 25 V  1.52 A
Dimensions (W x H x D)	Approx. 945 mm x 53 mm x 85 mm Without foot
Net Weight	Approx. 2.6 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS Output power)	320 W RMS

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type Wireless Sound Bar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm
5730 to 5821 MHz	13 dBm

Wireless function S/W version: 1.0