



LG

Life's Good

ENGLISH

OWNER'S MANUAL

SXS REFRIGERATOR

Please read this guide thoroughly before operating and keep it handy for reference at all times.

Table of contents

Introduction	Entry	4
	Important safety instruction	4
	Important safety instruction	5
	Identification of parts	13
Installation	Where to install	14
	Method to remove protection film (Feature not available in all countries)	14
	Door removal	15
	Door replacement	15
	Height adjust	16
	When the freezer door does not align with the height of the refrigerator door	16
Operation	Starting	17
	Adjusting the temperatures and functions	17
	Ice making	20
	Refreshment center (Feature not available in all countries)	21
	Shelf	22
	LED indicator (Freezer/Refrigerator)	23
	Pure N Fresh (Feature not available in all countries)	23
	Wine holder (Feature not available in all countries)	24
	Egg box (Feature not available in all countries)	24
	Fresh box (Feature not available in all countries)	24
Deodorizer (Feature not available in all countries)	24	
Suggestion on food storage	Location of foods	25
	Storing foods	26
Care and maintenance	How to dismantle parts	27
	General information	29
	Cleaning	29
	Trouble shooting	30
	It is normal...	34

Entry

The model and serial numbers are found on the inner case, outer right hand side, of refrigerator compartment of this unit. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt to this page.

Date of purchase : _____
 Dealer purchased from : _____
 Dealer address : _____
 Dealer phone no. : _____
 Model no. : _____
 Serial no. : _____

Important safety instruction

Before it is used, this refrigerator must be properly installed and located in accordance with the installation instructions in this document.

When moving your appliance away from the wall, be careful not to roll over the power cord or to damage it in any way.

After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when your hands are damp or wet. Skin could adhere to these extremely cold surfaces.

Unplug the power cord from the power outlet for cleaning or other requirements. Never touch it with wet hands because you can get an electric shock or be hurt.

Never place glass products in the freezer because they may be broken due to expansion when their contents are frozen.

Never allow your hands within the ice storage bin of the automatic ice maker. You could be hurt by the operation of the automatic ice maker.

The appliance is not intended for use by young children or infirm persons without supervision.

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

The refrigerator-freezer should be so positioned that the supply plug is accessible for quick disconnection should an accident happen .

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.



Don't use an extension cord

**Accessibility of Supply Plug
Supply Cord Replacement**

Important safety instruction

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

 This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can cause death or serious personal injury or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

 **DANGER** You will be killed or seriously injured if you don't follow instructions.

 **WARNING** You can be killed or seriously injured if you don't follow instructions.

 **CAUTION** Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.


WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

1. When connecting the power


A dedicated outlet should be used.

- Using several devices on one outlet may cause fire, and cause the circuit breaker to trip.

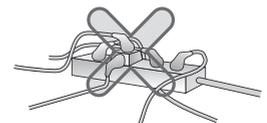

Do not allow the power plug to face upward or to be crushed at the back of the refrigerator.

Water may drop into the plug or the cord may be damaged, which causes fire or electric shock.

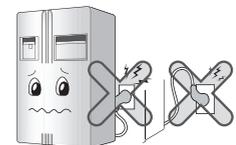

Do not allow the power cord to be bent or crushed by heavy objects.

It may damage the power cord and cause fire or electric shock.



Do not extend or modify the length of the power plug.

It can cause electric shock or fire from incorrect installation or unsafe connection.




Unplug the power plug when cleaning, handling or replacing the interior lamp of the refrigerator.

- It may cause electric shock or injury.
- Where normal filament lamps are used, make sure that the rubber ring that prevents moisture from entering within the socket is not taken off .
- If the refrigerator uses LED lighting, an authorised service provider must be called.



Do not pull out the cord or touch the power plug with wet hands.

- It may cause electric shock or injury.

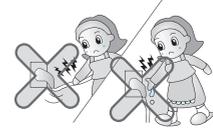

Remove water or dust from the power plug and insert it with the ends of the pins securely connected.


Dust, water or unstable connection may fire or electric shock.



Make sure of grounding.


Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

The incorrect grounding may cause breakdown and electric shock.

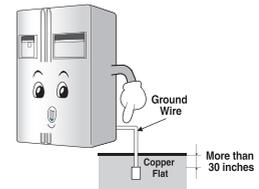

When the power cord or the power plug is damaged or the holes of the outlet are loosed, donot use them.

It may cause electric shock or short circuit to make fire.

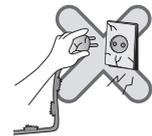

2. When using the refrigerator

Do not place dangerous items,or heavy objects (including containers with liquid) on the refrigerator.

They may fall or spill and cause injury, fire or electric shock when opening or closing the door.



Do not install the Refrigerator in a wet place or any outdoor sheltered environment where it can be exposed to rain or moisture.

Doing this can cause corrosion and rust as well as electrical hazards.



Do not hang or cling from the door, or the shelves of the door, or any opening, or removable compartment of the refrigerator.

Doing so will damage the refrigerator or its parts and may cause personal injury.



Do not use or store inflammable materials such as chemicals, solvents, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

It may cause explosion or fire.



Do not use any heating or drying appliances inside the refrigerator, or use lit candles to remove odours.

It may cause explosion or fire.



Do not insert hands into the ice bucket or the ice dispenser. (only for the model with the dispenser).

It may cause injury while operating the icemaker.



Do not store medicines or any pharmaceuticals in the refrigerator that require strict temperature control. They may deteriorate and cause risks to their applications.



Do not use combustible sprays near the refrigerator.

They may cause a fire or explosion.




Install in places away from heat sources or gas outlets.

Not doing so could cause a fire risk.




Fill the automatic ice maker with drinkable water only (only for the model with the dispenser).

Otherwise, it may cause a health risk.

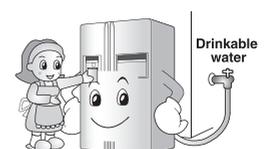


Do not place flower vases, cups, cosmetics, medicines or any container with water on the refrigerator.

If it spills, it may cause an electrical short, fire or damage to the unit.

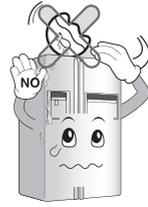

If the refrigerator has been exposed to any water submersion, it must not be used until it has been checked and certified by a licenced Electrician.


It may cause electric shock or fire.

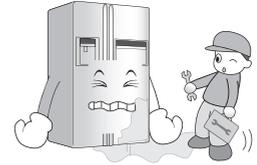

If the refrigerant gas has leaked, do not touch the refrigerator or the power outlet. Ventilate the room immediately.

- Because this refrigerator uses natural gas (R600a) as the environment-friendly refrigerant, even a small amount (80~90g) is combustible.

If a leak is detected due to severe damage caused during delivery or installation, any spark can cause a small explosion or fire, so all care should be taken. (Only for the model with the R600a.)

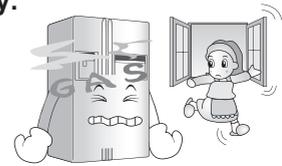

Do not spray water on the outside or the inside of the refrigerator, and do not clean it with harsh chemicals or solvents such as thinners or benzine.

Doing so can cause a fire, electric shock, malfunction. It can also damage the refrigerators finish.



When any burning smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact the manufacturer or an authorised service provider.

Although some smells and odors can be normal, no risks should be taken.




Do not allow any person except a qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock, malfunction or fire.



This refrigerator must not be used for any Commercial retail purpose or mobile applications. It has been designed for normal Domestic, indoor use only.

Applications outside of its intended purpose may cause malfunctions, breakages, electrical shock, fire, and loss of its stored contents.

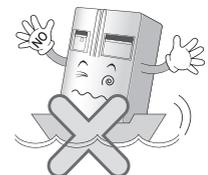


When disposing the refrigerator, remove the doors but leave the shelves in place so that children may not easily climb inside.

This can prevent prevent injury or death.



Install the refrigerator on a solid and level floor.

Installing it on an unstable surface may cause death or injury as the refrigerator may lean and fall due to an unbalanced installation.

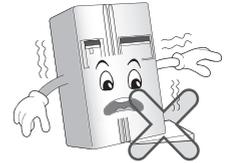

Do not insert hands or any objects or instruments into the bottom of the refrigerator, or the heatproof grill (exhaust vents) at the rear side of the cabinet.

It may cause electric shock or injury.



When disposing the refrigerator, contact your local City Council.

Your local Council can offer disposal options and advise the best method of disposal.



CAUTION

Violating these instructions may cause injury or damage to your home or its contents. Always be careful, please.

Do not touch food or containers in the freezer with wet hands.

It may cause frostbite.



Do not put ice in thin crystal cup or ceramic ware.

It may break cup or ceramic ware and cause injury.



When the electricity is off, remove ice from the ice bucket (only for the model with the dispenser).


A long term power failure may thaw ice and leak water onto the floor.

When a long term power failure is expected, remove ice from the ice bucket.



Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the appliance to fail.

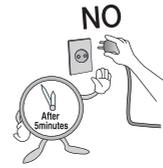

Do not put bottles in the freezer.

It will cause the contents of the bottle to freeze and the bottle to crack or explode.



Pull out the power plug by grasping the plug, not the cord.

Not doing so can cause electric shock, short circuit or fire.



Do not install the refrigerator in a wet place or outdoors in any sheltered area where the unit can be exposed to any weathering conditions.

Weathering conditions, water or moisture will cause corrosion, rust and electrical hazards.




Do not insert hands into the bottom of the refrigerator.

The iron plate of the bottom may cause injury.



Always use a mechanical device to transport the refrigerator. If lifting the unit is necessary, always handle in accordance to occupational health and safety. The refrigerator is heavy, so carrying it alone may cause serious injury.

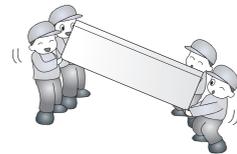

Care should be taken when opening or closing the doors to prevent injury to anyone who may be too close to the doors.

Children may be hurt by the handle or lower corners of the door when it is opened.



Do not put any living animal, plant or object in the refrigerator.



WARNING

1. When connecting the power

Prevent the power cord from being crushed or imprinted when the refrigerator is pushed in after the power plug is connected during the installation.

When moving your appliance away from the wall, be careful not to roll over or damage the power cord.

It can be the cause of fire or electric shock.

Only connect the refrigerator to an approved outlet with the correct specified supply voltage.

It can be the cause of fire.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid any hazard.

2. When using the refrigerator,

prevent children from entering the product.

It may endanger the life of a child if the child enters the refrigerator. Never leave a child near the refrigerator unsupervised.



Opening and closing the door of the refrigerator aggressively may cause the stored food in the refrigerator basket to fall and cause injury, so take precautions.

Do not put heavy things on the Home Bar door. (Only for the models with the Home Bar)
Heavy Items will cause damage to the door and possible injury.



It is recommended that the refrigerator be disconnected during severe electrical storms or if not in use for long periods.

Power surges from electrical storms can seriously damage the refrigerators electrical components. If the refrigerator is not used for long periods, storage measures should be taken to avoid odours and vermin contamination.



CAUTION

Do not insert hands into the ice bucket or the ice dispenser.

Operating the ice maker may cause injury.

Do not remove the external cover of the water and ice dispenser.

(Only for the models with automatic ice maker)

The mechanical and electrical parts of the icemaker may cause injury or an electrical shock hazard.



Arrange food and items appropriately inside the refrigerator.

The food may fall during opening and closing of the doors causing both damage to the unit or injury to persons.

CAUTION

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

WARNING

-  Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
-  The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposing, please consult with service agent or a similarly qualified person.



This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant leaking out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1m² in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

Child entrapment warning

! WARNING : Risk of child entrapment.

Before you throw away your old refrigerator or freezer: Take off the doors but leave the shelves in place so that children may not easily climb inside.

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

Don't store


Don't store or use gasoline or other flammable vapor and liquids in the vicinity of this or any other appliance.

Grounding (Earthing)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

Identification of parts

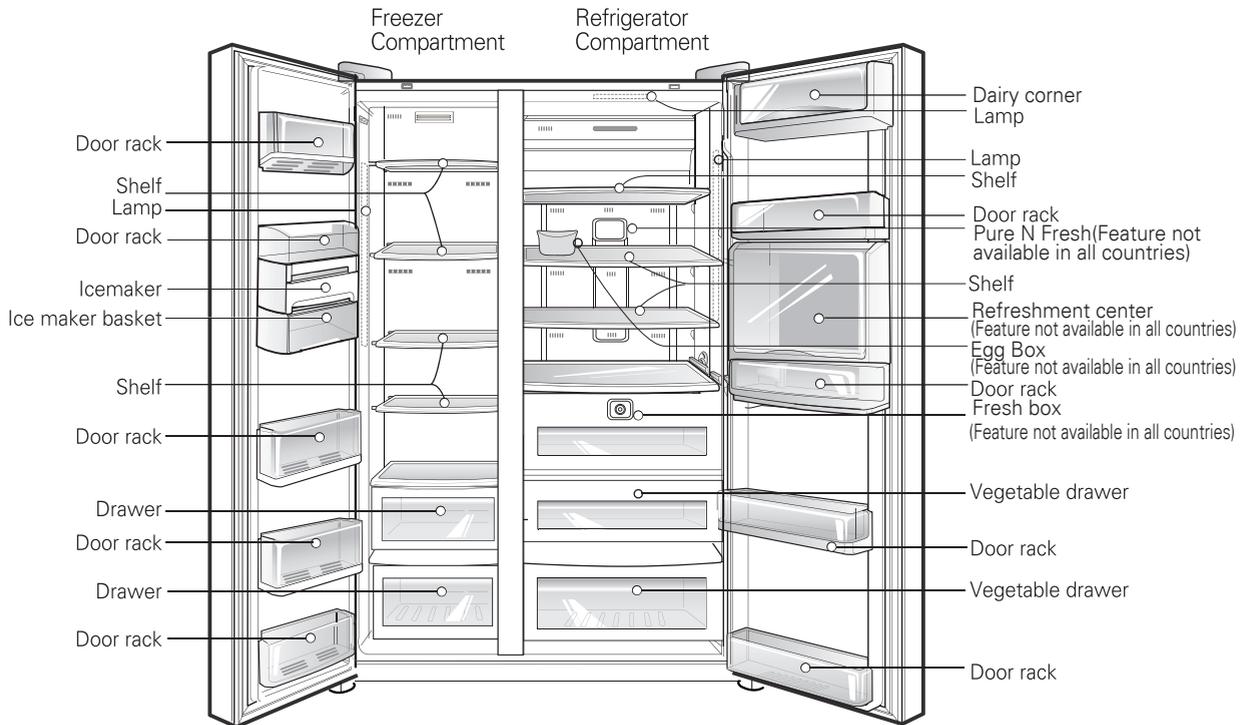

NOTE

- Parts, features, and options vary by model. Your model may not include every option.

Select a good location

Where to Install

1. Place your appliance where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To ensure proper air circulation around the fridge-freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall.
4. To avoid vibrations, the appliance must be leveled.
5. Don't install the appliance below 5°C. It may affect the performance.




Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to a waste material collection center, or call your local City Council for collection or disposal advice.

Method to remove protection film (Feature not available in all countries)

1. Grasp the handles with both hands and push them upward to remove.
2. Entirely remove the protection film adhered to the external surface of the door.
3. Align the fixing bracket on both ends of the handle to the fixing bolt of the door and lower the handle downward until it is entirely fixed.

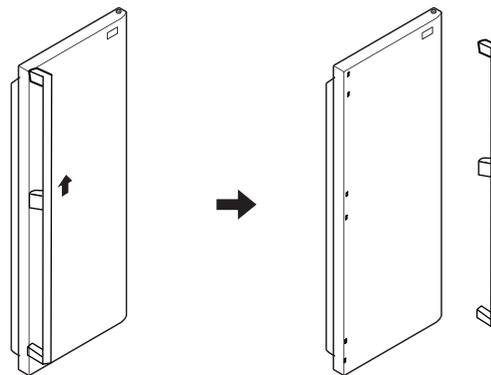

WARNING

Remove the freezer compartment door


Door removal

Electric Shock Hazard

Disconnect electrical supply to refrigerator before installing. Failure to do so could result in death or serious injury.

If your access door is too narrow for the refrigerator to pass through, remove the refrigerator door and pass the refrigerator laterally.


- 1) Removing the hinge cover, and Main PCB cover by loosening the screws. Separate all connection wires except for the earth line after.
- 2) Remove the keeper by rotating it counter clockwise (①) and then lifting the upper hinge up (②).

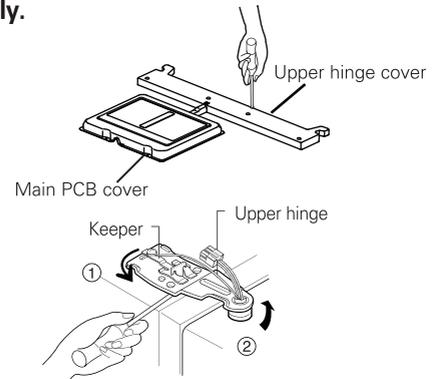

CAUTION


When removing the upper hinge, be careful that the door does not fall forwards.

- 3) Remove the freezer compartment door by lifting it upward.



Remove the refrigerator door

- 1) Removing the hinge cover, and Main PCB cover by loosening the screws. Separate all connection wires except for the earth line after.
- 2) Remove keeper by rotating it clockwise (①) and then remove the upper hinge by lifting it up (②).
- 3) Remove the refrigerator compartment door by lifting it up.

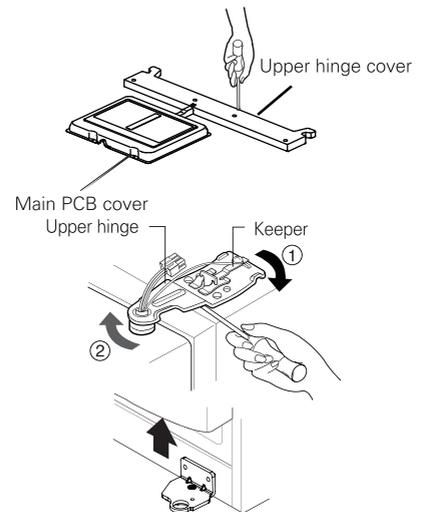

Pass the refrigerator

Pass the refrigerator laterally through the access door as shown in the right figure.



Door replacement


Mount them in the reverse sequence of removal after they pass through the access door.

Height adjustment

If the height of freezer door is different from the height of Refrigerator door


If the freezer compartment door is lower than the refrigerator compartment door

Level the door by inserting flat (-type) driver into the groove of the left height adjusting screw and rotate it clockwise (①).

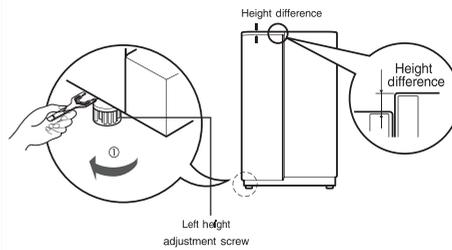

If the freezer compartment door is higher than the refrigerator compartment door


Level the door by inserting flat (-type) driver into the groove of the right height adjusting screw and rotate it clockwise (①).

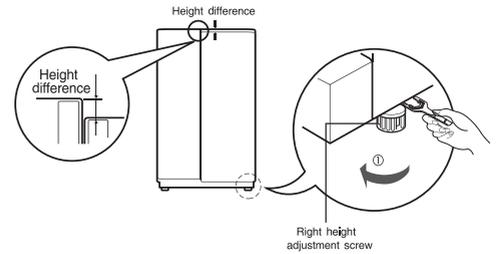

When the freezer door does not align with the height of the refrigerator door

Even if the height can not be aligned by using the height adjustment screw, insert the transparent sheet supplied with the product.

- Open the door and lift it up to the correct height, use a (+) type screwdriver to unscrew the screw at the bottom hinge as shown at Figure ①, insert the transparent sheet between the bottom hinge and the bottom bracket, and then fix it with the screw as shown at Figure ②.
- Insert more transparent sheets enough to align the height. (4 sheets are supplied in total.)

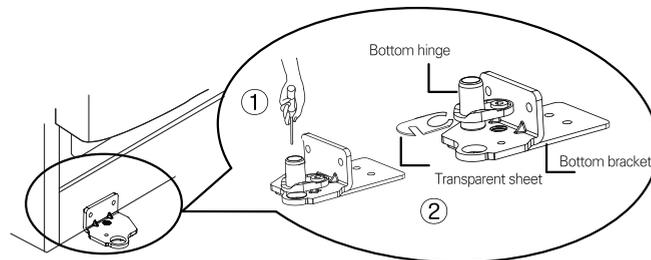

After leveling the door height

Next



The refrigerator doors will close smoothly by lifting the height of the front of the refrigerator by adjusting the height adjusting screws, or feet. If the doors do not close correctly, performance may be affected. It is normal for the refrigerator to have a backward lean even before any height adjustment has been made.

1. Wipe off all dust accumulated during shipping and clean your appliance thoroughly.
2. Install accessories, where supplied, in their proper places. They are packed together to prevent possible damage during shipping.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.

Starting

When your refrigerator is first installed, allow it to stabilize at normal operating temperatures for 3~4 hours prior to filling it with fresh or frozen foods. If operation is interrupted, wait 5 minutes before restarting.

Adjusting the temperatures and functions

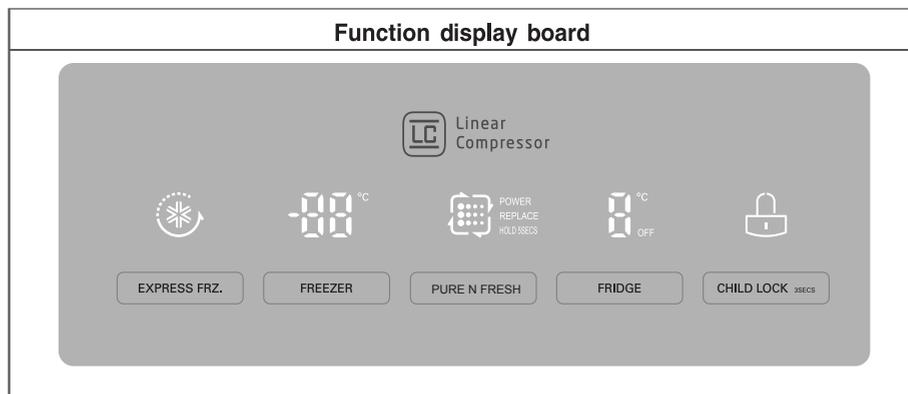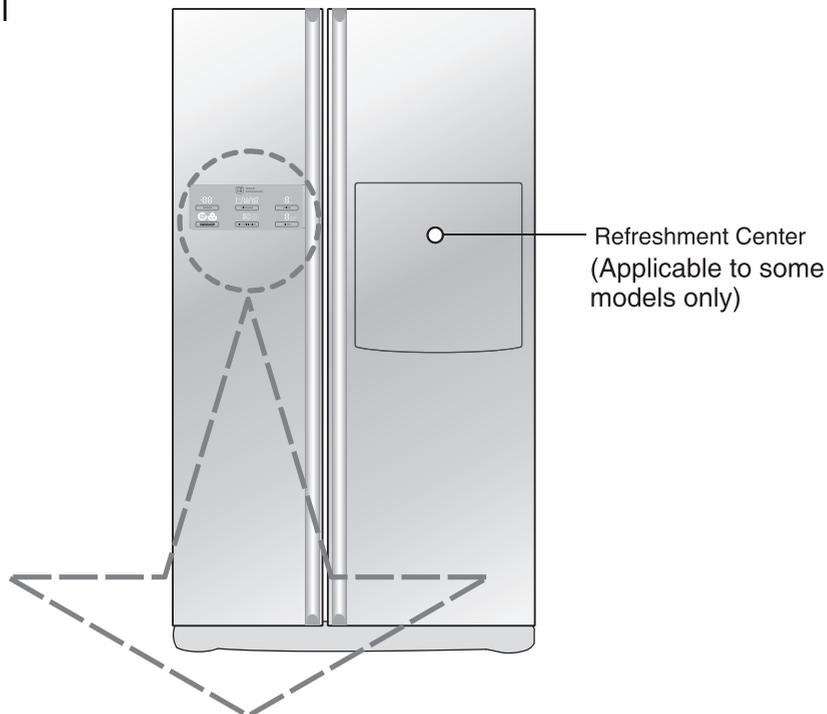

NOTE

- Your model may not include every option.

Display Power Saving Mode


This function places the display into power saving mode until the next time the door is opened. Press the FREEZER and EXPRESS FRZ. buttons simultaneously and hold them for 5 seconds until the chimes sound. All LED light will then turn ON, then OFF. When the power saving mode is activated, the display will remain off until the next time the door is opened. Then, it will come on whenever a door is opened or a button is pressed and remain on for 20 seconds after the last door opening or button selection. To deactivate the power saving mode, press the FREEZER and EXPRESS FRZ. buttons simultaneously and hold them for 5 seconds until the chimes sound.

How to adjust the temperature in the freezer compartment

You can adjust temperature of the freezer room and refrigerator room.


NOTE:

The recommended temperature for continuous icemaking is -18 degrees. The icemaking will be impaired if Freezer temperature is set to -17 or warmer.

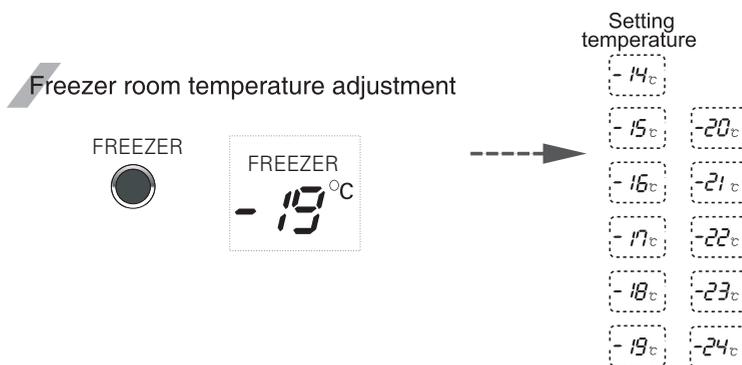

※ Whenever pressing FREEZER button, the setting is repeated in the order of (-19°C → -20°C → ... → -24°C → -14°C → ... → -19°C).

How to adjust the temperature in the refrigerator compartment

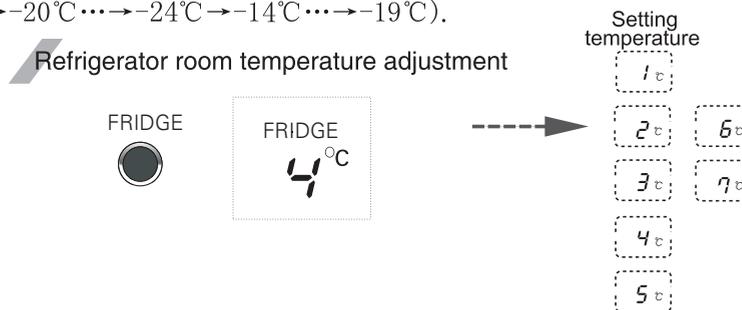

※ Whenever pressing FRIDGE button, the setting is repeated in the order of (4°C → 5°C → 6°C → 7°C → 1°C → ... → 4°C).


NOTE:

- The actual inner temperature varies depending on the food status, as the indicated temperature is a target temperature, not actual temperature within refrigerator.
- The refrigerator temperature will take 1~2 days to stabilize after initial installation, therefore it is recommended to adjust temperature as above after using refrigerator for minimum 1~2 days.

Express freezer

Please select this function for express freezer.

- "on" and "off" is repeated whenever pressing **EXPRESS FRZ.** button.
- The EXPRESS FRZ display will illuminate when selected.
- If the EXPRESS FRZ is "ON", press the button again to turn it off, or it will automatically turn off after the Express Freeze function has completed.

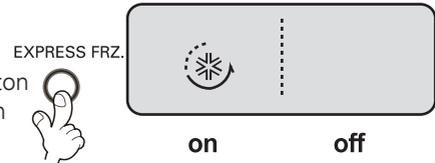


Child Lock

When engaged, the lock function prevents other display settings from being changed.

NOTE: It does not stop water or Ice from dispensing.


- Locking or Release is repeated whenever the button is held pressed for more than 3 seconds.
- When you use the **CHILD LOCK 3SECS** button, you cannot select or change any other setting until you unlock the unit. If any button is pressed while the Child Lock is engaged, the  will flash 3 times to indicate the locked condition.

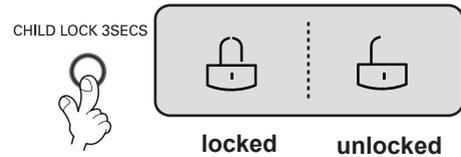

Pure N Fresh (Optional)

When you need to remove odours, this function can be used.

- When Pure N Fresh is selected,  rotates 3 times and shows as . Re-select this button,  rotates 3 times and shows as . Re-select this button and the Pure N Fresh display will turn off.
- When Pure N Fresh is off, the internal lamp surrounding the Pure N Fresh will not illuminate.
- After a year of normal refrigerator usage, the "REPLACE HOLD 5SECS" displays indicating the Pure N Fresh needs to be replaced. Customers can replace it based on personal needs.
- After replacing the filter, or if replacement is not needed, press and hold the **PURE N FRESH** button for more than 5 secs, the timer of the indicator will be reset and the reminder lamp will turn off.
- Water cannot be used for washing the filter as it may affect the efficiency. If the operation time exceeds the validity time, it may affect the deodorization ability.
- If you need to replace the Pure N Fresh filter, please contact local service center.

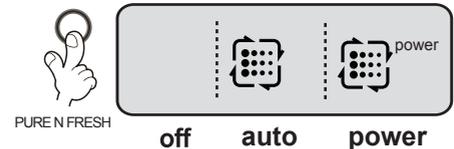

! CAUTION

The other functions

Door open warning

- Three beeps will sound at 30 second intervals if either of the refrigerator doors remain open or are not completely closed after 1 minute.
- Please contact your service provider if the 3 warning beeps continue to sound even after closing the doors.


Diagnosis (failure detection) function

- The inbuilt diagnostic function automatically detects certain faults during the refrigerators operation.
- If a fault is detected during operation, the display cannot be changed by pressing any button. The display will then show an Error indication and the refrigerator will continue to operate at a predetermined setting. Should an error be displayed, do not turn off the refrigerator as it will increase the time it takes for the Serviceman to diagnose any possible fault.


Ice making

Ice making

- Pour water into the ice making container. If you pour too much water, the ice cannot be split into cubes easily. Water droplets will fall down which make the ice cubes cling to each other.

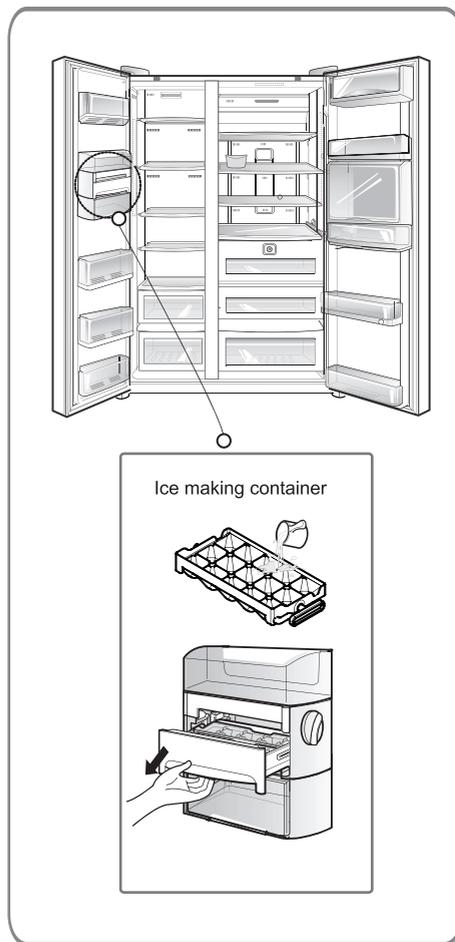

- Rotate the ice splitting knob in the ice making compartment. The ice cubes will fall into the ice storing container.

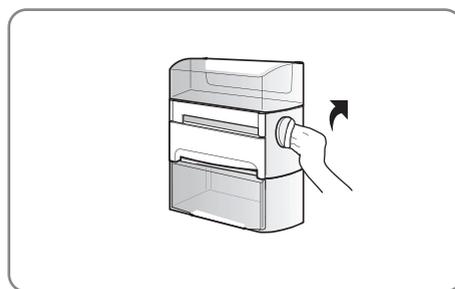

NOTE:

- If you rotate the ice splitting knob before the ice is completely frozen, the remaining water will drop into ice storing container, which will make the ice cubes cling to each other.

How to use the Home Bar

Refreshment center (Feature not available in all countries)

1. Press the top central part of the Home Bar door until you hear the "Click" sound.


- The home bar allows you to save energy by not having to open the refrigerator door every time.

- It also allows convenience of access to frequently used bottles or containers without opening the refrigerator door.

- When closing the Home Bar door, press until you hear the "Click" sound.



Press until you hear the "Click" sound

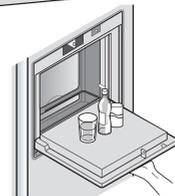

2. Use the opened Home Bar door as a convenient support board for bottles and glasses only.

Precaution

1. Do not use the Home Bar with the Home Bar cover removed.

- If the cover is taken out, the Home Bar function cannot work safely or efficiently.




2. Be careful not to damage the Home Bar door when opened or closed.

- Do not allow children to swing, or hang from the opened HomeBar door. Do not place heavy objects or apply excessive pressure onto the open Home Bar door when using it as a support board.

- Do not use the support board as a cutting board or use sharp tools on the support board to prevent any scratches.

- Clean any spillages from the Home Bar door before closing it.

- Failing to follow these instructions can cause damage to the unit and injury to persons especially children.

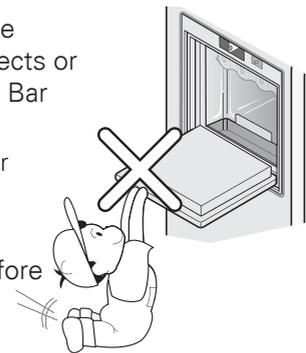

Shelf


How to use

You can store dishes, plates or refrigerated food on the shelf with sufficient space in between the containers.




How to disassemble


1. Hold the front part of the shelf and pull it out until it is stopped by the guide rail.

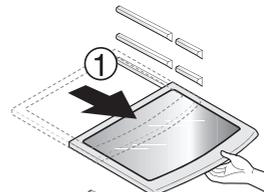

2. When you cannot pull out the shelf any further lift it up slightly.

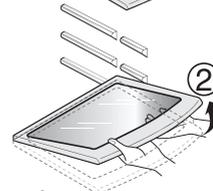

3. While slightly lifted continue to pull it out until it is removed.

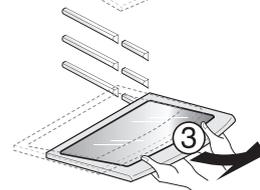

Two stars section **

(Feature not available in all countries)

Freezer basket (two stars section)


- A two star section means that only items that can be stored between -12 ~ -18 degrees can be placed into this basket. Foods such as icecream or meats cannot be stored long term in this basket as they will not freeze correctly.

LED indicator (Freezer/Refrigerator)

LED lights are used to light up the refrigerator and freezer compartments.

– When the freezer/refrigerator door is opened, The perspective built-in LED lamp will light up.


* The refrigerator LED lamp will light up when the refrigerator or Home bar door is opened.

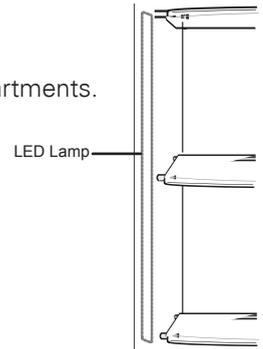

Pure N Fresh (Feature not available in all countries)


How to use the Pure N Fresh

- Pure N Fresh is already installed on the refrigerator wall, so installation is not needed.
- Always use containers with tight lids to store spicy foods otherwise odors can contaminate other foods.

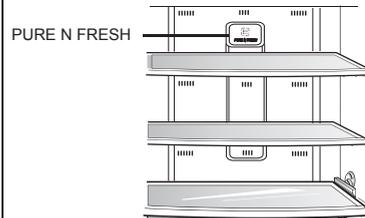

Disassembling and replacing the Pure N Fresh Filter

- Hold the Pure N Fresh casing and rotate it counterclockwise about 15 degrees as shown in (a). Take out the Pure N Fresh filter from the case.
- Replace the new Filter into the case as shown in picture (b) (Note the direction of installation).
- To refit the Pure N Fresh casing, place it as shown in picture (c), insert and rotate it clockwise until the Pure N Fresh is returned to its normal position.

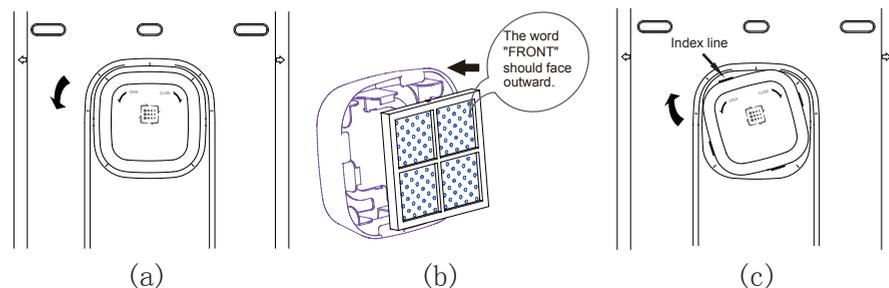


- When the display shows "REPLACE" (with a filter icon) and "HOLD 5SECS", please contact the manufacturer for details about where to purchase the Pure N Fresh filter.

! WARNING

- When the Pure N Fresh is removed, do not place fingers or foreign objects into the fan. Doing so can cause injury or damage to the fan.

Wine holder (Feature not available in all countries)

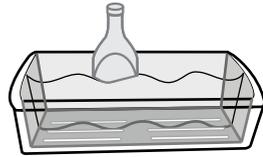


Wine holder adjustment

Bottles can be stored laterally with this additional partition.

Egg box (Feature not available in all countries)

This bin allows you to store eggs without risk of damage to them from other items that may be placed nearby.

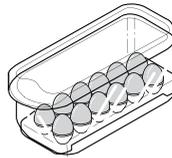


CAUTION

- Never use the egg box as an ice storage bin. It can be broken.
- Never store the egg box in the freezer compartment or the refrigerator fresh compartment as they are likely to freeze.

Fresh box (Feature not available in all countries)

- This refrigerator drawer is for storing vegetables or meats.
- This draw will self seal shortly after ambient temperature items are placed inside it. To open the draw when it is sealed, the switch must be pressed.

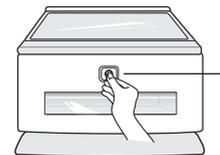


switch

Deodorizer (Feature not available in all countries)





This system efficiently absorbs strong odors by using the optical catalyst. This system does not have any effect on stored food. The deodoriser should be replaced when it is no longer able to filter odors effectively.

Deodorizing system

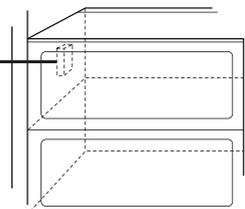

Location of foods

(Refer to identification of parts)

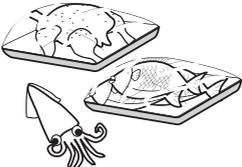Wine holder	Store wine.	
Freezer compartment shelf	Store various frozen foods such as meat, fish, ice cream, frozen snacks, etc..	
Freezer compartment door basket	<ul style="list-style-type: none"> ▪ Store small packed frozen food. ▪ Temperature is likely to increase as door opens. So, do not store long-term food such ice cream, etc.. 	
Freezer compartment drawer	<ul style="list-style-type: none"> ▪ Store meat, fish, chicken, etc.. after wrapping them with thin foil or placing them in sealed bags. ▪ Store dry foods. 	
Milk product corner	Store milk products such as butter, cheese, etc..	
Egg box	Place this egg box in the proper location.	
Refreshment center	Store foods of frequent use such as beverage, etc..	
Refrigerator compartment shelf	Store side dishes or other foods at a proper distance.	
Refrigerator compartment door basket	Store small packed food or beverages such as milk, juice, beer, etc..	
Vegetable drawer	Store vegetables or fruits.	
Vegetable drawer /meat drawer conversion corner	Store vegetable, fruits, meat to thaw, raw fish, etc.. Foods in this draw should also be wrapped or sealed in plastic food bags.	
		

Storing foods

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, and melons.
- Allow hot food to cool prior to storing, placing hot food in the refrigerator could spoil other food, and lead to higher energy consumption.
- When storing the food, cover it with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.
- Never keep too much food in door rack because they may push against by inner racks so that the door cannot be fully closed.
- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrient.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door basket.
- Do not touch cold foods or containers- especially made of metal , with wet hands or place glass products in the freezer compartment.

Freezer compartment

Refrigerator compartment



CAUTION

- Frostbite or personal injury can occur when frozen foods or internal freezer parts are touched with bare hands.

- Avoid placing moist food in top refrigerator shelves, it could freezing by direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack or box, ensure that they are fresh, and always store them in an upright position, which keeps them fresh longer.

NOTE

- If you keep the refrigerator in a hot and humid place, frequent opening of the door or storing a lot of vegetables in it may cause condensation to form which has no effect on its performance. Remove any dew or condensation with a soft dust free cloth.


How to disassemble partially

NOTE:

- After you have disassembled the parts, you can re-assemble them with the inverse order of assembling. After disassembling or before assembling, make sure the refrigerator is unplugged. Do not use excessive force, otherwise the parts can be damaged.


Freezer rack

To remove the rack, push the rack to the left(1), slightly lift up the left side of the rack(2), lift up the right side(3), and pull the rack out.

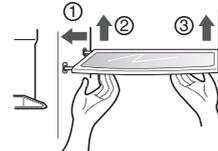


Door rack and support

Hold the two sides of the rack and lift it towards the (1) direction, then pull the rack out towards the (2) direction.

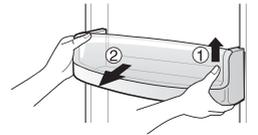

Ice maker

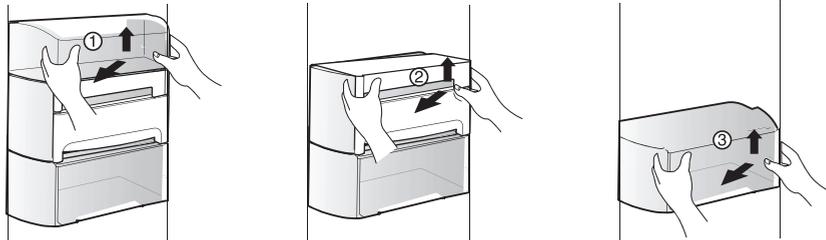

- Lift up (1), then pull the rack towards your body.
- Lift up (2), then pull the ice making container towards your body.
- Lift up (3), then pull the ice storing container towards your body.

When you do not use the ice making, you can take out the ice container, and use the ice storing container as a rack.


! NOTE

- When you clean the ice maker, please do not put it into water or wash it with water. You should wipe it with wet towel and dry it before use. If moisture remains in the ice maker, the normal operation of ice maker may be affected.



**Refreshment center
(Applicable to
Home bar
models only)**

- Lift the shelf (①) and remove it.
- Hold and press the bottom part (a,b) of the Refreshment center cover (②) inward, then pull to remove.
- Lift the shelf (③) and remove it.

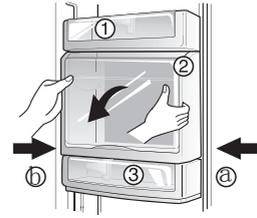

NOTE

Be sure to remove items from the refrigerator door when removing the vegetable compartment, snack drawer or refreshment center cover.

General information

Vacation time

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life.

When you plan not to operate, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

Power failure

Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures.

However, you should minimize the number of door openings while the power is off.

If you move

Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the height adjusting screws, turn them all the way into the base.

Anti condensation pipe

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed. This is due to the anti-condensation pipe, which pumps hot refrigerator to prevent "sweating" on the outer cabinet wall.

Cleaning

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Exterior

Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator.

Wipe with a clean damp cloth and then dry.

Interior

Regular cleaning is recommended. Wash all compartments with a baking soda solution or a mild detergent and warm water. Rinse and dry.

After cleaning

Please verify that the power cord is not damaged, power plug is not overheated, and that the power plug is well inserted into the power outlet.

WARNING

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts (lamps, switches, controls, etc.).

Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing an electric shock.

Never use metallic scouring pads, brushes, coarse abrasive cleaners, strong alkaline solutions, flammable or toxic cleaning liquids on any surface.

Do not touch frozen surfaces with wet or damp hands, because damp object will stick or adhere to extremely cold surfaces.

Trouble shooting

Before calling for service, review this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Occurrence	Possible cause	Solution
Runing of refrigerator		
Refrigerator compressor does not run.	Refrigerator control is off.	Set refrigerator control. See setting the controls.
	Refrigerator is in defrost cycle.	This is normal for a fully automatic defrosting refrigerator. The defrost cycle occurs periodically.
	Plug at wall outlet is disconnected.	Make sure plug is tightly pushed into outlet.
	Power outage. Check house lights.	Call local electric company.
Refrigerator runs too much or too long	Refrigerator is larger than the previous one you owned.	This is normal. Larger, more efficient units run longer in these conditions.
	Room or outside weather is hot.	It is normal for the refrigerator to work longer under these conditions.
	Refrigerator has recently been disconnected for a period of time.	It takes some hours for the refrigerator to cool down completely.
	Large amounts of warm or hot food may have been stored recently.	Warm food will cause the refrigerator to run longer until the desired temperature is reached.
	Doors are opened too frequently or too long.	Warm air entering the refrigerator causes it to run longer. Open the door less often.
	Refrigerator or freezer door may be slightly open.	Make sure the refrigerator is level. Keep food and containers from blocking door. See problem section. OPENING/CLOSING of doors.
	Refrigerator control is set too cold.	Set the refrigerator control to a warmer setting until the refrigerator temperature is satisfactory.
	Refrigerator or freezer gasket is dirty, worn, cracked, or poorly fitted.	Clean or change gasket. Leaks in the door seal will cause refrigerator to run longer in order to maintain desired temperatures.
Sensors are keeping the refrigerator at a constant temperature.	This is normal. Refrigerator goes on and off to keep the temperature constant.	

Occurrence	Possible cause	Solution
Refrigerator compressor does not run.	Sensors are keeping the refrigerator at a constant temperature.	This is normal. The refrigerator goes on and off to keep the temperature constant.
Temperatures are too cold		
Temperature in the freezer is too cold but the refrigerator temperature is satisfactory.	Freezer control is set too cold	Set the freezer control to a warmer setting until the freezer temperature is satisfactory.
Temperature in the refrigerator is too cold and the freezer temperature is satisfactory.	Refrigerator control is set too cold.	Set the refrigerator control to a warmer setting
Food stored in drawers freezes.	Refrigerator control is set too cold.	See above solution.
Meat stored in fresh meat drawer freezes.	Meat should be stored at a temperature just below the freezing point of water (32°F, 0°C) for maximum fresh storage time.	It is normal for ice crystals to form due to the moisture content of meat.
Temperatures are too warm		
Temperatures in the refrigerator or freezer are too warm.	Freezer control is set too warm.	Set the freezer or refrigerator control to a colder setting until the freezer or refrigerator temperature is satisfactory.
	Refrigerator control is set too warm. Refrigerator control has some effect on freezer temperature.	Set the freezer or refrigerator control to a colder setting until the freezer or refrigerator temperature is satisfactory.
	Doors are opened too frequently or too long.	Warm air enters the refrigerator/ freezer whenever the door is opened. Open the door less often.
	Door is slightly open.	Close the door completely.
	Large amounts of warm or hot food may have been stored recently.	Wait until the refrigerator or freezer has a chance to reach its selected temperature.
	Refrigerator has recently been disconnected for a period of time.	A refrigerator requires some hours to cool down completely.
Temperature in the refrigerator is too warm but the freezer temperature is satisfactory.	Refrigerator control is set too warm.	Set the refrigerator control to a colder setting.

Occurrence	Possible cause	Solution
Sound and noise		
Louder sound levels when refrigerator is on.	Today's refrigerators have increased storage capacity and maintain more even temperatures.	It is normal for sound levels to be higher.
Louder sound levels when compressor comes on.	Refrigerator operates at higher pressures during the start of the ON cycle.	This is normal. The sound will level off as the refrigerator continues to run.
Vibrating or rattling noise.	Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly.	Be sure floor is level and solid and can adequately support refrigerator.
	Items placed on the top of the refrigerator are vibrating.	Remove items.
	Dishes are vibrating on the shelves in the refrigerator.	It is normal for dishes to vibrate slightly. Move dishes slightly. Make sure refrigerator is level and firmly set on floor.
	Refrigerator is touching wall or cabinets.	Move refrigerator so that it does not touch the wall or refrigerator.
Water/Moisture /Ice inside refrigerator		
Moisture collects on the inside walls of the refrigerator.	The weather is hot and humid which increases the rate of frost buildup and internal sweating.	This is normal.
	Door is slightly open.	See problem section opening/closing of doors.
	Door is opened too often or too long.	Open the door less often.
Water/Moisture /Ice outside refrigerator		
Moisture forms on the outside of the refrigerator or between doors.	Weather is humid.	This is normal in humid weather. When humidity is lower, the moisture should disappear.
	Door is slightly open, causing cold air from the inside the refrigerator to meet warm air from the outside.	This time, close the door completely.

Occurrence	Possible cause	Solution
Odors in refrigerator		
	Interior needs to be cleaned.	Clean interior with sponge,warm water and baking soda.
	Food with strong odor is in the refrigerator.	Cover food completely.
	Some containers and wrapping materials produce odors.	Use a different container or brand of wrapping materials.
Opening/Closing of doors/Drawers		
Door(s) will not close.	Food package is keeping door open.	Move packages that keep door from closing.
Door(s) will not close.	Door was closed too hard, causing other door to open slightly.	Close both doors gently.
	Refrigerator is not level. It rocks on the floor when it is moved slightly.	Adjust the height adjusting screw.
	Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly.	Be sure floor is level and can adequately support refrigerator. Contact carpenter to correct sagging or sloping floor.
	Refrigerator is touching wall or cabinets.	Move refrigerator..
Drawers are difficult to move.	Food is touching shelf on top of the drawer	Keep less food in drawer.
	Track that drawer slides on is dirty.	Clean drawer and track.
Other	Please thoroughly read 'Automatic ice maker and dispenser' in this manual.	

It is Normal...

The following occurrences are normal.

	Occurrence	Solution
Noise	When you hear "Tak" or "Took" sound	This is the sound of various parts expanding/contracting or various control devices operating depending on the temperature change within the refrigerator.
	When you hear "Deureureuk~", "Dulkuk" or "Woong" sound	This is the count of compressor or fan operating when the operation of the refrigerator is starting or ending. This is the same phenomenon of the sound generated when starting or turning off the engine of a car.
	When you hear "Kureureuk" sound of water flowing	This is the sound of refrigerant changing the condition in the freezer/fridge. When the liquid changes to gas, you will hear the sound of water flowing and when gas changes to liquid, you will hear the "Kureureuk" sound.
	When you hear the sound of wind such as "Shoo~" or "Shik" right after you close the door	This is the sound generated when the internal pressure is temporarily lowered when the warm air entered through the fridge or freezer is cooled fast.
	When you hear the vibrating sound	If the refrigerator is installed on wooden floor or wooden wall, or if the refrigerator is not leveled properly, the sound can be loud from the vibration.
	When you hear a loud sound after installing the product for the first time	When you operate the refrigerator for the first time, the refrigerator will operate at high speed to cool fast and the sound can seem louder. When the internal temperature falls below a certain level, the noise will subside.
Door open	When the door is slightly opened after closing the door	Depending on the force or speed of closing the fridge or freezer door, the door can open slightly but then will close. Be careful not to close the door too hard.
Icing/ Dew drops	When there is icing or condensation formed on the inner or outer side of the refrigerator	When external air flows into the cool inner surface of the refrigerator, condensation can be formed. Especially, this will happen more easily when you open and close the refrigerator door more frequently. Also if the humidity of the installed location is high or during the rainy season or on a rainy day, condensation can form on the outer side of the refrigerator. This is a natural phenomenon that occurs during humid weather. Wipe the condensation with a dry cloth.
Temperature	When the front side of the refrigerator is warm	Heat pipes are installed around the front part of the refrigerator and on the divider of the freezer and fridge to prevent condensation from forming. The refrigerator may feel warmer after the installation or during summer periods. This is quite normal.

