



Printed in Korea

OWNER'S MANUAL LG-Connect 4G

LG Electronics



OWNER'S MANUAL

LG CONNECT™ 4G

P/NO : MFL67218101 (1.0) 

www.lg.com

By selecting a rate plan and activating your phone, you agree to the metroPCS Terms and Conditions of Service available at metropcs.com.

Al seleccionar un plan y activar su teléfono, usted acuerda a los términos y condiciones de servicio disponible en metropcs.com.

*Copyright ©2012 LG Electronics, Inc. **All rights reserved.**
LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.*

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the product operating instructions. To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

ELECTRICAL SAFETY

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

CAUTION: Connecting to improperly grounded equipment can result in an electric shock to your device. This product is equipped with a USB cable for connecting to a desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

SAFETY PRECAUTIONS FOR POWER SUPPLY UNIT

Use the correct external power source

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

Handle battery packs carefully

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 60°C (140°F).

WARNING: *Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.*

Take extra precautions

- Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- The phone should be only connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not use a battery that appears damaged, deformed, or discolored, or one that has any rust on its casing, overheats, or emits a foul odor.
- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult a doctor immediately if the battery is swallowed.
- Only use the battery with a charging system that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- If the battery leaks:

Do not allow the leaking fluid to come in contact with skin or clothing. If contact occurs, flush the affected area immediately with clean water and seek medical advice.

Do not allow the leaking fluid to come in contact with eyes. If contact occurs, DO NOT rub; rinse with clean water immediately and seek medical advice.

Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

SAFETY PRECAUTIONS FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 140°F (60°C), such as on a car dashboard, window sill, or behind glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

PREVENTION OF HEARING LOSS

CAUTION: *Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.*

SAFETY IN AIRCRAFT

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when its use is restricted on board an aircraft, remember to switch to Airplane Mode which turns off RF functions that could cause interference.

ENVIRONMENT RESTRICTIONS

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fueling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

EXPLOSIVE ATMOSPHERES

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

ROAD SAFETY

Vehicle drivers in motion are not permitted to use communication services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

SAFETY PRECAUTIONS FOR RF EXPOSURE

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCE WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is prohibited in most hospitals and medical clinics.

If you use any personal medical device(s), consult the manufacturer of your device(s) to determine if the device(s) are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

NON-IONIZING RADIATION

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety from interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for personal safety, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment. Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country. To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Important Customer Information.....	1
Table of Contents	7
Technical Details.....	8
The Basics	13
Connecting to Networks and Devices	47
microSD Card	52
Calls	55
Communication	76
Entertainment	115
Tools.....	149
Settings	159
Safety.....	160
Specifications	183
FAQ	184
LIMITED WARRANTY STATEMENT	196

Cautions

- ▶ The user interface of Google applications (Google Search, Google Maps, Navigation, etc.) can vary depending on its software version.
- ▶ Locations are inaccurate when GPS and Wi-Fi are not set to On.
- ▶ With the Android operating system, some available Market applications only operate correctly with phones that have a specific screen resolution. Please be advised that some of the applications on the Android Market may not be available for your phone due to an LCD resolution requirement that does not match your phone. In addition, please be aware that 3rd party applications with programming defects may cause issues with your phone, including lock-ups and resets.

Technical Details

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps Radio Link Protocol and Inter-band Operations IS-95 Adapted for PCS Frequency Band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS-651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem Operations Non-Signaling Data Communications

Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
1x EV-DO Related Interface	TIA/EIA/IS-856 TIA/EIA/IS-878 TIA/EIA/IS-866 TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface 1x EV-DO Inter-Operability Specification for HRPD Access Network Interfaces Recommended Minimum Performance Standards for HRPD High Rate Packet Data Access Terminal Test Application Specification (TAS) for High Rate Packet Data Air Interface

LTE Standard	Designator	Description
Basic Air Interface	TS 36.101 TS 36.104	Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) radio transmission and reception Evolved Universal Terrestrial Radio Access (E-UTRA); Base Station (BS) radio transmission and reception

Conformance Test		<p>Evolved Universal Terrestrial Radio Access (E-UTRA);</p> <p>User Equipment (UE) conformance specification;</p> <p>Radio transmission and reception;</p> <p>Part 1: Conformance testing</p>
	TS 36.521-1	<p>Evolved Universal Terrestrial Radio Access (E-UTRA);</p> <p>User Equipment (UE) conformance specification;</p>
	TS 36.521-2	<p>Radio transmission and reception;</p> <p>Part 2: Implementation Conformance Statement (ICS)</p>
	TS 36.521-3	<p>Evolved Universal Terrestrial Radio Access (E-UTRA);</p> <p>User Equipment (UE) conformance specification;</p> <p>Radio transmission and reception;</p> <p>Part 3: Radio Resource Management (RRM) conformance testing</p>

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and those international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.39 inches (1.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.39 inches (1.0 cm) must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.39 inches (1.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.19 statement

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:

(1) This device & its accessories may not cause harmful interference.

(2) This device & its accessories must accept any interference received, including interference that may cause undesired operation

Part 15.21 statement

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience interference with reception (e.g., television), determine if this equipment is causing the harmful interference by turning the equipment off and then back on to see if the interference is affected. If necessary, try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The Connect 4G operates on 4G network, based on Long Term Evolution (LTE) technology and Mobile Broadband 4G networks in the United States*.

Now you can connect easily at high speeds to the Internet, your corporate Intranet, and your email while you're away from the office.

* Service not available everywhere.

* Information subject to change.

Phone Overview

Front View



NOTES All screen shots in this guide are simulated. Actual displays may vary.

Instructions to perform tasks in this guide are based on the default phone settings and may change depending on the software version on your phone.

1. **Proximity Sensor** Senses proximity towards other objects (such as your head) so that touch commands are not accidentally activated during a call.

- NOTES**
- Do not block the sensor or near the sensor to avoid problems with the touchscreen.
 - The use of a film cover produced by manufacturers other than LG can cause a disturbance in touch operation, the display, etc.

2. **Quick Keys**

- **Phone Key** Opens the **Phone** application for access to the dial pad, Call log, Contacts, and Groups.
- **Contacts Key** Opens the **Contacts** application.
- **Messaging Key** Opens the **Messaging** application.
- **Applications Key** Opens the **Applications screen**, where you can view all your installed applications.

3. **Menu Key** Opens an Options menu with options that affect the current screen or application.


4. **Home Key** Returns to the Home screen. If you're already viewing one of the Home screen extension panes, it navigates you to the central Home screen pane. Touch and hold to view the most recently used applications.
5. **Back Key** Returns to the previous screen. Also closes pop-up display items, such as menus and dialog boxes.
6. **Search Key** Opens the Quick Search Box™ from the Home screen to search the phone and the web.
7. **Touchscreen** Displays all the information needed to operate your phone, such as applications, call status, date, time, signal status, and battery strength.
8. **Front Camera Lens** Use to take pictures and video of yourself. Keep clean for optimal performance.
9. **Power/Lock Key** Locks the screen with a single press. Press and hold to open the phone Options menu for the following options: Silent mode, Airplane mode, Restart, Restart, and Power off.
10. **Earpiece** Lets you hear callers and automated prompts.

Rear View



11. **3.5mm Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music.
12. **Camera Lens** Use for taking pictures and recording videos. Keep clean for optimal performance.
13. **Back Cover** Encloses the battery compartment.
14. **Speaker** Allows you to hear sounds and ringers. It also allows you to hear the caller's voice when using Speaker mode.
15. **Microphone** Transmits your voice to the other caller and for Voice-activated functions.

Side View

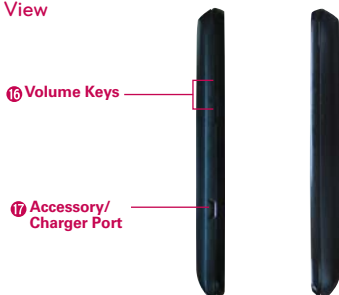

16. **Volume Keys** Allow you to adjust the ringer, media volumes, or the in-call volume during a call.
17. **Accessory/Charger Port** Allows you to connect the phone charger, USB cable, or other compatible accessories.

Installing the Battery and microSD Card

NOTE It is important to fully charge the battery before initial use of the phone.

Installing the battery

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk, use, and standby time. The battery charge level is shown at the top right corner of the screen.



1 Use the fingertip cutout at the bottom of the phone to remove the battery cover.



2 Align the battery contacts with the terminals in the battery compartment and push the battery down until it clicks into place.



3 Place the battery cover over the battery compartment, then press it downward until it clicks into place.

Removing the battery

1. Turn the phone off and use the fingertip cutout at the bottom of the phone to remove the battery cover.



2. Remove the battery from the battery compartment by lifting the bottom of the battery using the fingertip cutout.



Inserting a microSD card

Remove the battery cover (as demonstrated in the previous instructions) and locate the microSD card slot (microSD is inscribed near the slot opening). Position the microSD card with the label side facing up and slide it into place until it is fully inserted and locked in place.



NOTE The microSD card can be easily damaged by improper operation. Please be careful when inserting, removing or handling it.



To remove the microSD card

You must first unmount the microSD card prior to removing it (see section below). Then remove the battery cover and locate the microSD card slot. Carefully push the exposed edge of the microSD card to release it and gently pull it out to remove it.



To unmount the microSD card

It is important to unmount the microSD card to avoid damage to it or data saved on the card.

1. Touch the **Applications Key** .
2. Touch **Settings**  > **Storage**.
3. Touch **Unmount SD card** > **OK**.

Installing the 4G micro-SIM card

Turn the power off. Remove the battery cover and the battery (as demonstrated in the previous instructions). Locate the 4G micro-SIM card slot (a SIM card graphic is inscribed near the slot opening). Position the 4G micro-SIM card with the label side facing up and slide it into place until it is fully inserted and locked in place.



Removing the 4G micro-SIM card

Turn the power off. Remove the battery cover and take the battery out. Locate the 4G micro-SIM card slot. Gently slide the 4G micro-SIM card out to remove it.



Charging the Phone

Your LG Connect 4G comes with an adapter and a USB cable which connect together to charge your phone. To charge your phone:

NOTICE

Please only use an approved charging accessory to charge your LG phone. Improper handling of the Accessory/Charger Port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Connect the USB cable into the adapter. When connecting, as shown below, the LG logo on the USB cable should face toward you.



2. Plug the USB cable (as shown below) into the phone's Accessory/Charger port.

NOTE

Make sure that the 'B' side is facing toward you when inserting the USB cable into the phone.



Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you need to have the necessary USB drivers installed on your PC first. Connect one end of the USB cable to the Accessory/Charger Port on your phone and connect the other end to a USB port on your PC. It is best to use the rear USB port when connecting to a desktop PC. The USB hub should be powered by an external power source.

Optimizing Battery Life

You can extend your battery's life between charges by turning off features that run in the background. You can also monitor how applications and system resources consume battery power.

- ▶ Touch the **Applications Key**  > **Settings**  > **Applications** > **Running services** and select the items that are no longer in use and close them.

Tips to extend the life of your battery

- ▶ Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, use the Settings menu to turn them off (Note that the GPS receiver is only turned on when you're using an application that makes use of it).
- ▶ Turn down screen brightness and set a shorter screen timeout.
- ▶ Turn off automatic syncing for Gmail, Calendar, Contacts, and other applications if you don't need it.
- ▶ Use the Power Control widget to control the wireless connections, GPS connection, Bluetooth power, display brightness, and syncing activity.

To check the battery charge level

- ▶ Touch the **Applications Key**  > **Settings**  > **About phone** > **Status**.

The battery status (Charging or Discharging) and level (as a percentage of fully charged) will be displayed at the top of the screen.

To monitor and control what uses the battery

The Battery use screen allows you to see which applications are consuming the most battery power. Information on this screen allows you to identify downloaded applications you may want to turn off when not being used, so you can get the most out of your battery power.

- ▶ Touch the **Applications Key**  > **Settings**  > **About phone** > **Battery use**.

The screen will display battery usage time. A list of applications or services using battery power are displayed in order of energy used, from greatest amount to least.


- ▶ Touch an application in the Battery use screen to see the details about its power consumption. Different applications offer different kinds of information and they may even include options to modify the settings so you can reduce power consumption by that application.

Setup Wizard

The first time you turn on your phone, the Setup Wizard guides you through signing in to your Google Account. If you don't have one, don't worry, the Setup Wizard will help you create one.

You can also set up social networking accounts, such as Facebook, Twitter, and MySpace.

NOTE This phone supports several applications and services. It is recommended that you purchase a data plan that meets your needs. Contact your service provider for details.


1. Press and hold the **Power/Lock Key**  on the top edge of your phone to turn it on.
2. Follow the Setup Wizard to configure your phone set up including creating or logging in to your Gmail Account.




NOTE If you have an existing Google Account, your contacts from that account are synced to your phone.

Turning the Phone On and Off

Turning the phone on


- ▶ Press and hold the **Power/Lock Key**  for a couple of seconds until the screen turns on.


Turning the phone off

1. Press and hold the **Power/Lock Key**  until the pop-up menu appears.
2. Touch **Power off** in the pop-up menu.
3. Touch **OK** to confirm that you want to turn off the phone.

To unlock the phone



If you don't use the phone for a while, the screen and backlight will shut off to conserve battery power. To unlock the phone:

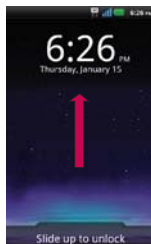1. Press the **Power/Lock Key** .
Your Lock Screen will appear.
 2. Slide the screen up to unlock.
The last screen you were working on opens.
- NOTE** This is the default Lock Screen. If you've set up an Unlock Pattern, use your fingertip to draw the pattern.




To turn the phone sounds off

If you're in a place where your phone sounds may disturb others, you can quickly silence your phone from the Home screen.

1. Press the **Power/Lock Key**  and unlock the screen.
2. Press and hold the **Power/Lock Key** , then touch **Silent mode**.

OR

Press the down **Volume Key**  on the side of the phone until all sounds are turned off or vibration is set.

NOTE The Vibrate setting in the Sound menu affects this mode. If the Vibrate setting is set to **Only when not in Silent mode** (or **Never**), then the down **Volume Key** turns all sounds off. If the Vibrate setting is set to **Only in Silent mode** (or **Always**), the down **Volume Key** will set the phone to vibrate.

Setting Up Your Device

When you turn on your wireless device for the first time, you have the option to quickly set up various accounts. Simply follow the on-screen instructions to complete the initial setup of your wireless device.

To set up your device, follow the steps below:

1. On the Welcome screen, touch **Continue** to set up your device.
2. Select your language and touch **Next**.
3. Set the date and time settings and touch **Next**.
4. Set your internet connection and touch **Next**.
5. Set your Wi-Fi settings and touch **Next**.
6. Touch **Next** to begin the Google Account setup or **Skip** to skip to the next step. With a Google Account, Google applications are automatically synced between your phone and computer regardless of where you make an update.
7. Select the other accounts you want to set up (**Email, MySpace, Facebook, Twitter**, etc.).
6. Touch **Use phone** to start using the phone.

Setting up your Google Account

1. At the setup screen, touch **Create** or **Sign in**.
2. Enter your username and password and any other necessary information (if creating an account).

NOTE Touch the **Back Key**  to close the keyboard.

3. Touch **Sign in**.

Now your Gmail, Google Contacts, and Google Calendar events will all be loaded to your phone automatically.

You can use the area below to record your Google Account information for future reference.

Username: _____@gmail.com

Password: _____

Your Google Account

You must sign into a Google Account to use Gmail, Google Talk, Google Calendar, and other Google Apps; to download applications from Android Market; to back up your settings to Google servers; and to take advantage of other Google services on your phone.



IMPORTANT


- If you want to restore your settings to this phone, from another phone that was running Android release 2.0 or later, you must sign into your Google Account now, during setup. If you wait until after setup is complete, your settings are not restored.
- If you don't have a Google Account, you're prompted to create one.
- If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.
- When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web are synchronized with your phone.
- If you don't sign into a Google Account during setup, you are prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Android Market.
- When you sign in, you're prompted to enter your username and password, using the on-screen keyboard.

Sharing media files



You can easily share your image, video, and music files using Wi-Fi Cast and SmartShare.

Wi-Fi Cast

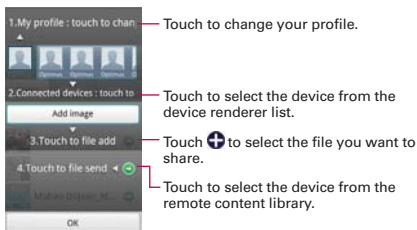To share your media files using Wi-Fi Cast, touch the **Applications Key**  > **Wi-Fi Cast** .




SmartShare

To share your media files using SmartShare, touch the **Applications Key**  > SmartShare .

SmartShare Tips


SmartShare requires a Wi-Fi connection. Please connect both devices to the same Wi-Fi network.

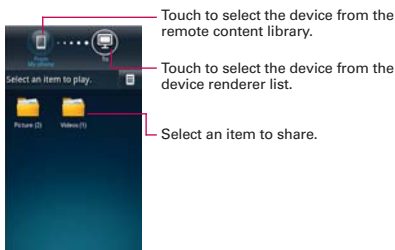


NOTE The difference between Wi-Fi Cast and SmartShare is that Wi-Fi Cast only allows you to share the added/ selected files whereas SmartShare allows you to share all of the files from the "My Phone" library. Moreover, SmartShare can push contents to the renderer device(eg.TV, PC).

Phone's Status Icons



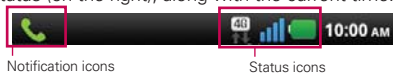



The Status Bar appears at the top of every screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.



If you have more notifications than can fit in the Status Bar, a plus icon  prompts you to open the Notifications panel to view them all.

The following icons indicate the status of your phone.









Call icons

	Microphone muted during a call		Missed call notification
	In call		In call using Bluetooth device
	Speaker on		Privacy call

Calendar & Alarm icons

	Calendar event notification		An alarm is set
---	-----------------------------	---	-----------------




















Email Messaging icons

	Email event received		Sending Email failed
	New message received		Sending message failed
	High priority message received		New voice mail received
	Google Talk message received		New Gmail message received







Sound icons

	Music currently playing		Silent mode is active
	Vibrate mode is active		Wired headset connected

Network icons
















	4G network connected		Download through 4G network
	Using 4G network		Upload through 4G network
	Using EVDO data network		Download through EVDO data network
	EVDO network connected		Upload through EVDO data network
	Downloading data		Uploading data
	GPS on		No Signal
	Acquiring GPS access		Strong network signal
	Airplane mode is on		Weak network signal
	Roaming		Location service on
	No service		

Connectivity icons

	Open Wi-Fi connection detected		Android debugger connected
	Bluetooth on		Bluetooth device connected
	USB connected		Strong Wi-Fi signal

	No Wi-Fi signal		
---	-----------------	--	--

System icons

	More notifications		System secure
	Internal memory full		System alert
	SD card inserted		No SD card inserted
	Google sync started		Error during Google sync
	Battery empty		Battery full
	Battery charging		Battery status unknown(error)
	No SIM card		Unknown SIM card
	Preparing the SD card for use		

Getting to Know the Home Screen

The Home screen is your starting point to access all the features on your phone. It displays application shortcuts, icons, widgets, and other features.

Status Bar

Shows device status information, including the time, signal strength, battery status, and notification icons.

Application Icon


Touch an icon (application, folder, etc.) to open the application and use it.

Quick Keys

Provide easy, one-touch access to the functions you use the most.



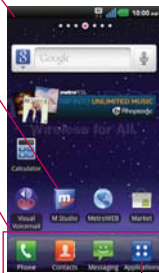

Applications Key

Touch to open the Applications screen to view all of your installed applications.




Quick Keys

The Quick Keys are located at the bottom of the Home screen and Applications screen.

- : Opens the **Phone** application which displays the dial pad so you can dial an unsaved number. It also provides additional tabs to access the Call log, Contacts, and your Groups.
- : Opens your **Contacts** list. You can also access the Phone application, Call log, and your Groups by touching the tabs across the top of the screen.
- : Opens the **Messaging** application.
- : Opens the **Applications** screen and displays phone options and applications.

To return to the Home screen

- ▶ Touch the **Home Key**  at any time, from any application.

To view other Home screen panes

- ▶ Slide your finger left or right across the Home screen. The Home screen spans seven screen widths, allowing more space for icons, widgets, shortcuts, and other items.



TIP! Pinch in on the Home screen to display the mini canvas view, then touch the Home screen canvas you want to view.



Touchscreen

Your touchscreen provides an excellent way to interact with and use your Android phone. With the touch of your finger, you can download and use available applications, make menu selections, and access data saved to your phone.

The following terms are used for describing the different available actions using the touchscreen:

Touch A single finger touch selects items. For example, touch an icon (e.g., application or menu item), touch words (e.g., menu selection or to answer onscreen question), or touch letters and numbers to type.

Touch and hold Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open an Options menu for customizing the Home screen, touch an empty area on the Home screen until the menu pops up.


Drag Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can drag or slide the screen up or down to scroll a list or browse through the different Home screens by swiping from left to right (and vice versa).


Double-tap Double-tap to zoom a web page or a map. For example, quickly double-tap a section of a web page to zoom that section to fit the width of the screen. You can also double-tap to control the zoom in Maps and in other applications.

Pinch-to-Zoom Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the MetroWEB, a map, or pictures.

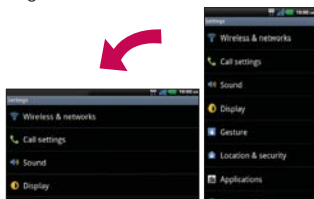

Rotate the screen From many applications, the orientation of the screen rotates with the phone as you turn it from upright to sideways and back again.

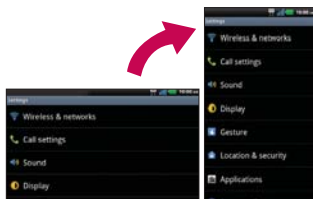

Rotate the phone sideways for landscape orientation.



Rotate the phone upright for portrait orientation.

Capturing the screen If you press the **Home Key**  and **Power/Lock Key**  at the same time, the current image on the screen is captured. You can find the captured image in the Gallery (Note that you cannot capture an image from a video and some applications).


Text Input Methods

Keyboard

You can easily enter text using the on-screen keyboard. The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.



Toggles between different languages.

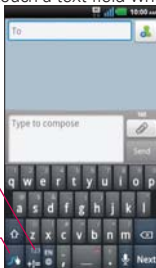Touch and hold to open Swype Help.



Typing tips	
Enter other characters	From the numbers keyboard, touch to change the keyboard. Touch to return to the numbers keyboard.
Enter one capital letter	Touch .
Enter all capital letters	Touch twice. Touch again to revert to lowercase.
Highlight text	Double-tap a word to highlight it. To highlight a range of text, double-tap the screen, then drag the blue highlight markers to highlight the text you want.
Cut or copy selected text	Double tap the desired text to highlight it. Then touch the text and select from Cut or Copy .
Paste the cut or copied text	Touch and hold the location to paste the text, then touch Paste .
Delete a character	Touch . Touch and hold to delete all of the text.
Language toggle	Touch and hold to open a dialog box and select the desired text input language.

Text input settings

To change your text entry settings and see the dictionary of terms you've used, from the Home screen, touch the **Applications Key**  > **Settings**  > **Language & keyboard**.


- To change the default language, touch **Select language**.

Applications: How to View, Open and Switch

All of the applications on your phone, including any applications that you downloaded and installed from Android Market™ or other sources, are grouped together on the Applications screen, which you access from your Home screen. If you have more applications than can fit on the Applications screen, you can slide the screen up or down to view more.

Home screen



Touch  to open the Applications screen.




Applications screen



Slide the screen left or right to bring more icons into view.


Touch an application icon to open the application.

Quick Keys (   )



Touch  to close the Applications screen.

Opening and Closing the Applications screen

Opening the Applications screen

With your LG Connect 4G, it's easy to access the Applications screen no matter what feature you're currently using. Simply touch the **Applications Key** .

Closing the Applications screen


To manually close the Applications screen, touch the **Home Key**  or touch **Home** .

NOTE The Applications screen closes automatically when you touch an icon to open its application. Dragging an icon onto your Home screen also closes the Applications screen automatically.

Customizing the Applications screen



The items on the Applications screen are listed alphabetically within each application category. You can customize the Applications screen by moving the position of applications so that you don't have to scroll the screen up to access the applications you use most often. You can also add additional categories to the screen to organize your files.

Condensing and expanding the application categories



1. From the Home screen, touch the **Applications Key** .
2. Place your thumb and index finger on the screen and move them together in a pinch motion.
3. The screen condenses displaying the application categories in a bar format that lists the number of items within it. Simply touch the category you want to access.

NOTE To return to the expanded view, place your thumb and index finger on the screen and spread them apart.



Displaying applications by category or in an alphabetical list

1. From the Home screen, touch the **Applications Key** .
2. Touch the **Menu Key** , then touch **Layout**.
3. Touch **Category**, **Page**, or **List**.

Moving application positions

1. From the Home screen, touch the **Applications Key** .
2. Touch the **Menu Key**  > **Manage apps**.
3. Touch and hold the application icon and drag it to the position you want, then lift your finger. Application icons to the right of the position shift accordingly.

Adding a category (in case of category layout mode)

1. From the Home screen, touch the **Applications Key** .
2. Touch the **Menu Key**  > **Manage category** > **Add**.
3. Enter the category name, then touch **Save**.
4. Touch the applications or services you want to move into your newly created category, then touch **Move**.

Opening and Switching Applications


Multi-tasking is easy with Android™ because open applications keep running even when you open another application. There's no need to quit an application before opening another. You can use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

Opening an application

- Open an application simply by touching its icon on the screen.

TIP! You can customize your Home screen with the application icons you use most often. Applications are located on the Applications screen, but you can copy any application icon to your Home screen for faster access. No matter where the icon is, on the Applications screen or your Home screen, just touch it to open and use it.



Opening multiple applications


1. Touch an application icon to open it.
2. Touch the **Home Key** .

NOTE If the application icon you want is on your Home screen, simply touch the icon to open and use it.

3. Touch the **Applications Key** .
4. Touch the icon for the other application you want to open.

Switching between multiple applications

1. Touch and hold the **Home Key** .
A screen with the icons of applications that you've used recently will appear.
2. Touch the application icon you want to open or touch the **Back Key**  to return to the current screen.

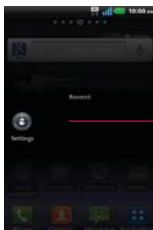

Touch an icon to open an application you've used recently.

Adding application icons to the Home screen

Customize your Home screen with the applications you use most often.



1. Open the Applications screen.
2. Touch and hold the application icon you want to add to your Home screen. Your Applications screen will close so that you can place the icon on the Home screen.
3. Lift your finger to place it or drag the icon to where you want it on the screen, then lift your finger.

NOTE You can place application icons on any of the Home screen panes. Simply drag the icon to the left or right edge of the screen to advance to the other screen panes before lifting your finger.

Working with Menus

There are two kinds of Android menus: Options menus and Context menus.

Options menus

Options menus contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. To open the available options menu, touch the **Menu Key** . Not all applications have Options menus; if you touch the **Menu Key**  on a screen that has no Options menu, nothing will happen.


Some applications have more Options menu items than can fit in the options menu. To view the additional menu items, touch **More**.



Touch **More** to view additional menu items.

Context menus

Context menus contain options that apply to a specific item on the screen. To open a Context menu, touch and hold an item on the screen. Not all items have Context menus. If you touch and hold an item that has no Context menu, nothing will happen.

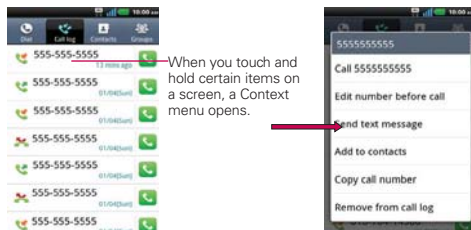

Managing Notifications

Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are in a call.

When you receive a notification, the notification icon will be displayed in the Status Bar. You can open the Notifications panel to view a list of all recent notifications. Depending on your settings, you may hear a notification sound and/or the phone may vibrate.

To open the Notifications panel

- ▶ Touch and drag the Status Bar to the bottom of the screen.

OR

- ▶ From the Home screen, touch the **Menu Key**  > **Notifications**.

The Notifications panel displays your wireless provider and a list of your current notifications, organized into ongoing and event-based notifications.



To respond to a notification

1. Open the Notifications panel. Your current notifications are listed in the panel, each with a brief description.
2. Touch a notification to view it.

The Notifications panel will close and the application that corresponds to your response will open. For example, new voicemail notifications dial your voicemail box and Gmail notifications open the Gmail application so you can read your new messages.

To clear all notifications

1. Open the Notifications panel.
2. Touch the **Clear** button.
All event-based notifications will be cleared; ongoing notifications will remain in the list.

To close the Notifications panel

Touch and drag the tab at the bottom of the Notifications panel to the top of the screen or just press the **Back Key** .

The panel will also close when you touch a notification.

Searching Your Phone and the Web

You can search for information on your phone and on the web by using the Google search application.

Some applications, such as Gmail, Contacts, and MetroWEB have the ability to search contents within those specific applications.

You can conduct the search by typing in the search terms or saying what you're looking for. As you enter text, the search application can provide suggestions so you don't necessarily have to type out your full request.

Phone and Web search using text entry

1. Touch the **Search Key** .


When you touch the **Search Key**  on the Home screen or in other applications that support this, the Quick Search Box will open automatically.




Voice Search
Touch to search by voice.



Provides one-touch shortcut to matching search items and past searches.


In some applications, such as Gmail, Contacts, and MetroWEB, the application's own search box opens when you touch the **Search Key** . This is indicated by the application's icon on the left side of the search box.

No matter what application you're working in (except for Camera), touching the **Search Key**  will open the Quick Search Box.

2. Enter the text you're searching for in the Quick Search Box.



As you type, search results from your phone, previous search terms, and web search suggestions appear. Touch an item to activate that search result.



You can use the Search preferences to configure some aspects of web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches. To access settings, open the application and touch the **Menu Key**  > **Search settings**.

3. Touch  to search for the entered terms.

Locking the Screen

You can lock your screen so that only you can unlock it to make calls, access your data, buy applications, and prevent unauthorized use.

Setting an Unlock Pattern, PIN, or Password for the First Time




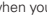


1. Touch the **Applications Key**  > **Settings**  > **Location & security**.
2. Touch **Set up screen lock** (under the **Screen unlock** section of the settings).
3. Touch **Pattern, PIN, or Password**.



Pattern: The first time you set an unlock pattern, you will see a tutorial with instructions on how to create it. Read the tutorial and touch **Next** (twice). Draw your pattern (connect at least 4 dots) and touch **Continue**. Then redraw your pattern and touch **Confirm**.

PIN: Enter a PIN (at least 4 digits) and touch **Continue**. Reenter your PIN and touch **OK** to confirm it.



Password: Enter a password (at least 4 characters) and touch **Continue**. Reenter your password and touch **OK** to confirm it.

From then on, any time you wish to turn the phone on or unlock the screen, you will need to draw your unlock pattern or enter your PIN or password to unlock the screen.

- NOTES**
- You have 5 opportunities to enter your unlock pattern, PIN or password. If you used all the 5 opportunities, you can try again after 30 seconds.
 - When you can't recall your unlock pattern:
 - If you've created a Google Account on the phone, touch **Forgot pattern?**. Then you are required to sign in with your Google Account to unlock your phone.
 - If you haven't created a Google Account on the phone, you need to perform a factory reset (Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset).
1. Turn the power off.
 2. Press and hold the following keys at the same time:
Power/Lock Key  + the down **Volume Key** .
 3. Release the **Power/Lock Key**  and the down **Volume Key**  when you see the Factory Hard Reset screen.
 4. Press the **Power/Lock Key**  to confirm (or press any other key to cancel). When you press the **Power/Lock Key**  to confirm, the message "Are you sure you want to continue with erase?" is displayed.

5. Press the **Power/Lock Key**  and your phone will be restored to the factory settings. To cancel, press the **Volume Keys** .


Changing Your Unlock Pattern, PIN, or Password

1. Touch the **Applications Key**  > **Settings**  > **Location & security**.
2. Touch **Change screen lock** (under the **Screen unlock** section).
3. Draw your current unlock pattern.
4. Touch the type of unlock setting to change it (or touch **None** to remove it).
5. You're prompted to enter your new unlock information.

Customizing the Home Screen

You can personalize your Home screen by adding application icons, shortcuts, widgets, and other items to any Home screen pane. You can also change the wallpaper.

To add an item to the Home screen

1. Go to the Home screen pane where you want to add the item.
2. Touch the **Menu Key**  and touch **Add** or just touch and hold an empty spot on the Home screen pane.

NOTE If there is no available space on a particular Home screen pane, **Add** will not be available; you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen pane.

3. In the menu that opens, touch the type of item you want to add.

You can add the following types of items to the Home screen:

Widgets Add any of a variety of widget applications to your Home screen, including a clock, a music player, a picture frame, Google search bar, a power manager, a calendar of upcoming appointments and Weather widget, and more. Note that more widgets can also be found on Android Market™.



Shortcuts Add shortcuts to applications, a bookmarked web page, a favorite contact, a destination in Maps, a Gmail label, a music playlist, and more. The shortcuts available depend on the applications you have installed.

Folders Add a folder where you can organize other Home screen shortcuts and icons, or folders that contain all your contacts, contacts with phone numbers, or starred contacts. Your folders' contents are kept up-to-date automatically.


To move an item on the Home screen

1. Touch and hold the item.
2. Drag the item to a new location on the screen. Pause at the left or right edge of the screen to drag the item onto the next available Home screen pane.
3. When the item is where you want it, lift your finger.

To remove an item from the Home screen

1. Touch and hold the item (note that the Quick Keys change to an icon of a trash can ).
2. Drag the item to the trash can icon .
3. When the icon turns red, lift your finger.

To change the Home screen wallpaper

1. From the Home screen, touch the **Menu Key**  > **Wallpaper**.
You can also touch and hold an empty spot on the Home screen and then touch **Wallpapers** in the menu that opens.
2. Touch **Gallery**, **Live wallpapers**, or any wallpaper that is displayed.
 - ▶ Touch **Gallery** to use a picture you've taken with your camera as a wallpaper. You can crop the picture before setting it as your wallpaper.
 - ▶ Touch **Live Wallpapers** to open a list of animated wallpapers installed on your phone.
Live wallpapers can change according to the time of day, respond to touching the screen, tell the time, or offer other information.
 - ▶ Touch any available wallpaper and it will automatically be applied to your phone.
3. Touch **Set wallpaper** or **Save** (if necessary).

To rename a folder

1. Touch the folder icon to open it.
2. Touch and hold the folder window's title bar.
3. Enter the new folder name.
4. Touch **OK**.

To reposition Home screen canvases

1. Pinch in on the Home screen to display the mini canvas view.
2. Touch and hold the canvas you want to move, then drag it to the new position and lift your finger.

NOTE You can also add and delete canvases from the mini canvas view by touching the Add icon  (only available when a canvas is deleted) or touching and dragging the canvases to .

Connecting Quickly With Your Contacts

As you build up your list of contacts on your phone, you can use Quick Contact for Android to quickly chat, email, text message, place a call, or to locate your contacts. Quick Contact for Android is a special set of icons that you can use to quickly and easily connect to a contact.

- ▶ Open your Contacts list and touch the contact's picture. A bubble will open with the available options, displayed as icons. This is the Quick Contact bubble. Depending on the contact information saved, the available actions will be displayed above the name.



- ▶ Touch a Quick Contact icon to communicate with the contact. Depending on the icon you've touched, a different application will open.








NOTE Adding a shortcut for a contact to your Home screen allows you to open Quick Contact for that contact without opening the Contacts application.

Connecting to Mobile Networks

When you buy your phone and sign up for service, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.

Different locations may have different mobile networks available.

Initially, your phone is configured to use the fastest mobile network available for data. You can also configure your phone to access a different set of networks entirely, or to behave in specific ways when roaming.



	Connected to the 4G network (LTE).
	Connected to the EVDO network (EVDO revA).
	Connected to a 2G network (1x).
	Signal strength - more bars that are lit, the stronger the wireless signal.
	Connected to another wireless service provider's network (roaming).

The icons in the Status Bar indicate which kind of data network you're connected to and the network signal strength.

When connected to slower networks, you may want to postpone using your phone for data-intensive tasks until you are connected to a faster network again or find a Wi-Fi network to connect to.

To disable data when roaming

You can prevent your phone from transmitting data over other carriers' mobile networks when you leave an area that is covered by your carrier's networks. This is useful for controlling expenses if your cell plan doesn't include data roaming.

1. Touch the **Applications Key**  > **Settings**  > **Wireless & networks** > **Mobile networks** > **Data roaming**.
2. Touch **Data roaming** to remove the checkmark from the box. With **Data roaming** unchecked, you can still transmit data with a Wi-Fi connection.

Connecting to Wi-Fi Networks

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

To use Wi-Fi on your phone, you must connect to a wireless access point. Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

The following Status Bar icons indicate your Wi-Fi status.




Connected to a Wi-Fi network (waves indicate connection strength).





Notification that an open Wi-Fi network is in range.

When you connect to a Wi-Fi network, the phone obtains a network address and other information it needs from the network, using the DHCP protocol.

To configure the phone with a static IP address and other advanced settings, from **Wi-Fi settings** touch the **Menu Key**  > **Advanced**.

To turn Wi-Fi on and connect to a Wi-Fi network

1. Touch the **Applications Key**  > **Settings**  > **Wireless & networks** > **Wi-Fi settings**.
2. If the Wi-Fi box is not checkmarked, touch **Wi-Fi** to turn it on and scan for available Wi-Fi networks.
3. Touch a network to connect to it.
 - If the network is open, you will be prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you will be prompted to enter a password (Ask your network administrator for details).
 - When you're connected to a network, you can touch the network name in the Wi-Fi settings screen for details about the speed, security, address, and related settings.

To receive notifications when open networks are in range

By default, when Wi-Fi is on, you receive notifications in the Status Bar when your phone detects an open Wi-Fi network.

1. Turn on Wi-Fi, if it's not already on.
2. From the Wi-Fi settings screen, touch **Network notification** to checkmark the box. Touch again to remove the checkmark and stop receiving notifications.

To add a Wi-Fi network

You can add a Wi-Fi network so the phone will remember it, along with any security credentials, and connect to it automatically when it is in range. You can also add a Wi-Fi network manually if it does not broadcast its name (SSID) or if you want to add a Wi-Fi network when you are out of its range. To add a secured network, you need to contact the network's administrator to obtain the password or other required security credentials.

1. Turn on Wi-Fi, if it's not already on.
2. From the Wi-Fi settings screen, touch **Add Wi-Fi network**.
3. Enter the **Network SSID** (name) of the network. If the network is secured, touch **Security** and touch the type of security deployed on the network.
4. Enter the required passwords and security credentials.
5. Touch **Save**.

The phone will connect to the wireless network. Any credentials that you entered are saved, so you are connected automatically the next time you come within range of this network.

To forget a Wi-Fi network

You can make the phone forget about the details of a Wi-Fi network that you added. For example, if you don't want the phone to connect to it automatically or if it's a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, touch and hold the name of the network that you want to forget.
3. Touch **Forget network**.


USB connection

USB connection is a feature that allows your LG Connect 4G to connect to a PC using a USB cable.

- ▶ Allows the phone to be used as Mass storage when a microSD card is present in the LG Connect 4G. It also allows you to transfer unprotected content from the phone to the PC and vice versa.

NOTE User content, such as photos, videos, and voice recordings, can be stored on a removable microSD card that is inserted in the LG Connect 4G.

To select a USB mode for a connection

1. Touch the **Applications Key**  > **Settings** > **Connectivity** > **Default connection mode**.
 2. Touch **Mass storage** to connect to the PC.
- ▶ Touch **Charge only** to use only the charging function and not the USB function.

Always ask

You can choose to be asked to confirm the USB connection when connecting to a computer.

When **Always ask** is checkmarked, the USB selection window is displayed.

Using the Status Bar to change the settings

The Status Bar shows the current USB connection mode so you can easily open the Status Bar and change the settings as needed.

When connected via USB, the current USB connection mode also appears on the Notifications panel. Touch the connection setting to display a screen where you can change the USB connection mode.

NOTE If the **Always ask** checkbox is marked, the screen is only provided during USB connection, but is not provided in the notification area.



microSD Card

Unmounting and removing the microSD Card

To safely remove the microSD card from your device, first you need to unmount the microSD card before removing it from the phone.

WARNING!



On the Android OS 2.2, you can download applications from Android Market and can store them on the microSD card as well as on the device. Therefore, skipping the unmount procedure can cause a serious error between the microSD card and the device. In the worst case, the microSD card can become corrupted or damaged.

1. Touch the **Applications Key**  > **Settings**  > **Storage** > **Unmount SD card** > **OK**. Now you can safely remove the microSD card.
2. Remove the back cover.
3. Gently push the exposed edge of the microSD card in with your fingertip to release it from the slot.
4. Carefully pull the microSD card out of the slot.

NOTE You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling them.



microSD Card Settings

Viewing Memory in the microSD Card

1. Touch the **Applications Key**  > **Settings**  > **Storage**.
2. Review the available information.
 - The storage capacity page is divided into three sections: SD card and System Memory.

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Touch the **Applications Key**  > **Settings**  > **Storage**.
2. Touch **Unmount SD card** and **OK** to release the microSD card from device use. The icon appears within the Notifications panel to indicate an unmounted microSD card.
3. Once released, touch **Erase SD card** > **Erase SD card** > **Erase everything**.
 - Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

NOTE The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Connecting Your Device to Your Computer

Before using your device's mass storage capabilities, you need to prepare your device's data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the device memory.

To connect your device to a computer via USB:

1. Use the USB cable that came with your phone to connect the phone to a USB port on your computer.
2. Open the Notifications panel and then touch **USB connected**.
3. Touch the connection mode you want to use to connect to the PC. Choose from the following options: **Charge only**, **Mass storage** or **Internet connection**.

Device memory

The LG Connect 4G has removable memory in the form of a 2GB microSD card. Most applications allow you to choose to save the user content to the removable microSD card.


Using Mass Storage mode

When you connect the phone and PC using a USB cable and set your device's USB connection mode to Mass storage, you will see one removable disk on the PC. You can copy files to/from the removable SD card.

Placing and Ending Calls


You can place calls using the **Phone** application. Calls can be manually dialed using the **Dial** tab. You can also dial from your phone's memory using the **Call log** tab, the **Contacts** tab, or the **Groups** tab.

To open the Phone application

- ▶ From the Home screen, touch the **Phone Key**  in the Quick Keys bar.

To place a call by dialing


1. Touch  to the **Phone** application.

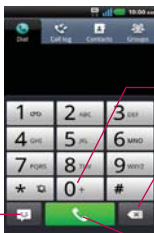



Touch to send a message.

To dial an international number, touch and hold **0+** to enter the plus (+) symbol. Then enter the international prefix for the country; followed by the full phone number.

Touch to erase a digit. Touch and hold to erase the entire number.



Touch the **Call Key**  to dial the number that you entered.

2. Touch the keys on the dial pad to manually enter a phone number.

- If you enter a wrong number, touch the **Delete Key**  to erase digits one by one.
- To erase the entire number, touch and hold the **Delete Key** .
- To dial an international number, touch and hold **0+** to enter the plus (+) symbol. Then enter the international prefix for the country; followed by the full phone number.


3. Touch the **Call Key**  to dial the number that you entered.

- You can use other phone features while the call is underway. If you open another application, the Call icon appears in the Status Bar for the duration of the call.
- Press the **Volume Keys** to adjust the call volume.
- Use the on-screen buttons to enter additional numbers, place the call on hold and take an incoming call, add another call, use the speakerphone, end the call, and other options.

NOTE If you opened other applications while on a call, you'll need to return to the Call screen to end the call. You can touch the **Home Key** , then the **Phone Key**  or drag the Notifications panel down and touch the Call icon. You can also touch the Contact's name or number at the top left corner of the Home screen.

Airplane mode

Some locations may require you to turn off your phone's wireless connections by placing your phone in Airplane mode.



1. Press and hold the **Power/Lock Key** .
2. Touch **Airplane mode**.

NOTE The Wireless & networks menu also has a checkbox to enable or disable Airplane mode.

Answering or Rejecting Calls

When you receive a phone call, the Incoming call screen opens with the caller ID and any additional information about the caller that you have saved in the Contacts list. All incoming calls are recorded in the Call log.


To answer a call

- ▶ If the screen is unlocked, simply touch the **Answer Key** .
- ▶ If the screen is locked, slide the **Answer Key**  to the right to answer.
- ▶ If you were already on a call, the first call is placed on hold while you answer the new call.


NOTE To silence the incoming call ringer, press the Volume Keys.

Unlocked Screen

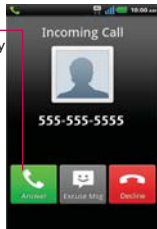

Touch the **Answer Key** to answer the call.

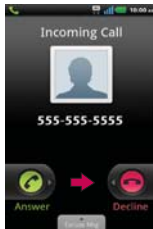

Locked Screen



To decline a call and divert it to voicemail

- ▶ If the screen is unlocked, simply touch the **Decline Key** .
- ▶ If the screen is locked, slide the **Decline Key**  to the left.
- ▶ The caller is sent directly to your voicemail box to leave a message.


Unlocked Screen



Touch the **Send Msg Key** to send a quick message to the caller and forward them to your voicemail.

Touch the **Decline Key** to decline the call and send the caller directly to your voicemail box to leave a message.

Locked Screen

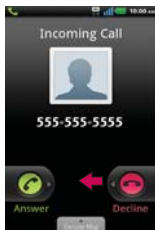



NOTE To silence the ringer, press the Volume Keys.

Working with the Call Log

The Call log is a list of all the calls you've dialed, received, or missed. It offers a convenient way to redial a number, return a call, or add a number to your Contacts.


To open the Call log

- ▶ Touch the **Phone Key**  (from the Quick Keys bar), then touch the **Call log tab**  at the top of the screen.

Calls are listed in the **Call log** tab. The most recent calls are located at the top of the list. Scroll down to see older entries.



To dial a number in the Call log

- From the Call log, touch the **Call Key**  at the right of the call entry. You can also touch and hold the entry to open a Context menu with more options to communicate with that contact in other ways.




To add an entry's number to your Contacts

1. Touch and hold the call entry.
2. Touch **Add to contacts** in the Context menu.
3. Touch **Create new contact** or touch **Add to the existing** and choose an existing contact to add the new number to.

To take other actions on a Call log entry

- Touch a Call log entry to open a screen from where you can call the contact, send the contact a message, add the number to your Contacts list, and learn more about the original call.
- Touch and hold a Call log entry to open a Context menu where you can call the contact, view contact information, edit the number before you redial, and more.

To clear the Call log

- ▶ Touch the **Phone Key**  (from the Quick Keys bar), then touch the **Call log** tab  at the top of the screen. Touch the **Menu Key**  > **Delete all**. Or touch **Delete**, choose the call entries you wish to delete, then touch **Delete** > **OK**.

You can also touch and hold an entry in the log. In the Context menu that opens, touch **Remove from call log** > **OK**.


Calling Your Contacts

Instead of manually dialing phone numbers using the dial pad, you can use your Contacts list to dial quickly and easily.


You can also quickly call a contact by using Quick Contact.

If you have contacts on the web, they're synchronized with your phone when you first synchronize to your GoogleTM Account.

To call a contact

1. Touch the **Contacts Key**  from the Quick Keys bar.
2. Touch the contact you wish to call.
3. Touch the contact's phone number you want to call.



To call a favorite contact

1. Touch the **Contacts Key**  from the Quick Keys bar, then touch the **Groups** tab.
2. Touch **Favorites** and then touch the contact you wish to call.
3. Touch the contact's phone number you want to call.


Voice Dialer

You can use the Voice Dialer application to place a phone call by speaking the name of a contact or a phone number.

To place a call by speaking

1. From the Home screen, touch the **Applications Key**  > **Voice Dialer** . If you have a Bluetooth headset that supports “voice-recognition” or “voice dialing,” you may be able to open Voice Dialer by pressing your headset’s main button or in some other way, and dial by voice using your headset. For details, see the documentation that came with your headset.
2. Say “Call” followed by the name of the contact or say “Dial” followed by a phone number.

Options During a Call

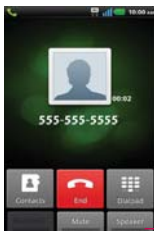

Touch to turn the speakerphone on or off. The Speaker Key lights up to indicate that the speakerphone is on.

WARNING!

To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

Touch to mute the microphone during a call. The Mute Key lights up to indicate that the microphone is muted.

Touch to switch between a Bluetooth headset and the phone.

To mute the microphone during a call

- ▶ Touch the **Mute Key**.

The **Mute Key** lights up to indicate that the microphone is muted. The Mute icon will appear in the Status Bar to remind you that the microphone is turned off.

When viewing the in-call screen, you can unmute the microphone by touching the **Mute Key** again.

The microphone is unmuted automatically when the call ends.

To turn the speakerphone on or off

- ▶ Touch the **Speaker Key**.

The **Speaker Key** lights up to indicate that the speakerphone is on. The Speaker icon will appear in the Status Bar and the sound from your call is played through the phone's speaker.

When viewing the in-call screen, you can turn the speakerphone off by touching the **Speaker Key** again.

The speaker is turned off automatically when the call ends.

WARNING!

To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

To switch between a Bluetooth headset and the phone

When a Bluetooth headset is paired and connected to your phone, you can conduct calls on the headset for hands-free conversation. During a call, you can opt to use the Bluetooth headset or just the phone.

When using the Bluetooth headset during a call, the Ongoing Call notification icon is blue in the Status Bar (the icon is green when using the phone).

- ▶ Touch the **Bluetooth Key** to switch the call from the headset to the phone, or vice versa.


Managing Multiple Calls

Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.

To switch between current calls

- ▶ Touch the **Swap Key** .

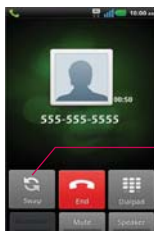


The current call will be placed on hold and you will be connected with the other call.



Touch to swap calls.
The current call will be placed on hold and you will be connected with the other call.


To set up a conference call

Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.

1. Place a call to the first participant.
2. When you're connected, touch **Contacts**  or **Dialpad** .
3. Choose a contact to call from your Contact list or enter the number on the dial pad.
4. After you're connected, touch the **Merge calls Key** . The participant is added to the conference call.



Listening to Your Voicemail

When you have a new voicemail message, the **Voicemail notification** icon  appears in the Status Bar. If you have not set up your voicemail number, or if you need to change it, you can do that in the Call settings.

To listen to your Voicemail

- ▶ Open the Notifications panel and touch **New voicemail**.

OR


- ▶ Touch and hold  on the dial pad to listen or manage your voicemail.

MetroWEB

The MetroWEB feature allows you to access the internet from your device. Access and selections within this feature are dependent upon your service provider. For specific information on MetroWEB access through your phone, contact your service provider.

- NOTES**
- You may incur additional charges for accessing the web and downloading media. For details, contact your service provider.
 - Available icons may vary depending on your region.

Browse web pages

1. Touch the **Applications Key**  > **MetroWEB**  or touch the **MetroWeb** icon on the Home screen. To access a specific web page, touch the URL input field, enter the web address (URL) of the web page, and touch .
2. Touch the **Menu Key**  to access the MetroWEB options. Navigate web pages using the following options:

URL Input Field



Touch here to enter a web address for the web page you wish to access.

































Bookmarks

Touch here to view and edit your bookmarks.

While browsing the web page, use the following options:




- ▶ To zoom in or out, double-tap the screen. You can also use the pinch-to-zoom method. Place your two fingers on the screen and slowly pinch or spread them apart.
- ▶ To view the list of bookmarks, touch **Bookmarks**  next to the URL field. You can also add, edit, or delete a bookmark from this menu.
- ▶ To bookmark the current web page, touch **Bookmarks**  > **Add**. Enter the name for the bookmark and touch **OK**.

- ▶ To reload the current web page, touch the **Refresh Icon** . The Refresh icon appears after the web page finishes loading.
- ▶ To stop loading a web page, touch the **Stop Icon** . The Stop icon appears while a web page is loading.
- ▶ To go to the previous page, touch the **Back Key** .
- ▶ To view the currently active windows, touch the **Menu Key**  > **Windows** . You can open multiple pages and switch back and forth between them.
- ▶ To open a new window, touch the **Menu Key**  > **New window** .
- ▶ To mark and save web pages to read later, touch the **Menu Key**  > **Read it later**.
- ▶ When a web page finishes loading, the RSS Indicator will appear if an RSS feed is available. Touch the **Menu Key**  > **Add RSS Feed**  and select the feed you want to save.
- ▶ To go to a next page in history, touch the **Menu Key**  > **Forward** .
- ▶ To send the web address (URL) of the web page to others, touch the **Menu Key**  > **More**  > **Share page**.
- ▶ To search for text on the web page, touch the **Menu Key**  > **More**  > **Find on page**.
- ▶ To select text on the web page, touch the **Menu Key**  > **More**  > **Select text**. Use your finger to highlight the text you want to select. Touching the screen displays begin and end markers. Move the markers to highlight the text you want, then tap the highlighted text to copy it. The highlighted text is copied to the clipboard and you can paste it anywhere that allows text to be entered.
- ▶ To go back to the home page, touch the **Menu Key**  > **More**  > **Home page**.
- ▶ To add a shortcut of this web page to your Home screen, touch the **Menu Key**  > **More**  > **Set home page**.

- ▶ To add a shortcut of the current page to your home screen, touch the **Menu Key**  > **More**  > **Add shortcut to home**.
- ▶ To view the web page details, touch the **Menu Key**  > **More**  > **Page info**.
- ▶ To view the download history, touch the **Menu Key**  > **More**  > **Downloads**.
- ▶ To customize the MetroWEB settings, touch the **Menu Key**  > **More**  > **Settings**.

Bookmark your favorite web pages

If you know the web address of the web page, you can manually add a bookmark. To add a bookmark:

1. Touch the **Applications Key**  > **MetroWEB** .
2. Touch **Bookmarks**  next to the URL field.
3. Touch **Add**.
4. Enter a page title and a web address (URL).
5. Touch **OK**.



From the bookmark list, touch and hold a bookmark and use the following options:

- ▶ To open the web page in the current window, touch **Open**.
- ▶ To open the web page in a new window, touch **Open in new window**.
- ▶ To edit the bookmark details, touch **Edit bookmark** (only available for Bookmarks you have added).
- ▶ To add the bookmark shortcut to one of the Home screen panes, touch **Add shortcut to Home**.
- ▶ To send the web address (URL) of the web page to others, touch **Share link**.
- ▶ To copy the web address (URL) of the web page, touch **Copy link URL**.

- ▶ To delete the bookmark, touch **Delete bookmark**.
- ▶ To use the web page as your MetroWEB homepage, touch **Set as homepage**.

Changing MetroWEB settings

You can configure a number of MetroWEB settings, such as managing your privacy settings.

- ▶ To open the MetroWEB settings screen, open MetroWEB and touch the **Menu Key**  > **More**  > **Settings**.

Page content settings

PC browser mode Allows you to browse PC version web sites.

Text size Opens a dialog box where you can increase or decrease the size of the text that MetroWEB uses when displaying web pages.

Default zoom Opens a dialog box where you can increase or decrease the magnification level that MetroWEB uses when first opening a web page.

Open pages in overview Checkmark to open web pages zoomed out, in an overview. Uncheckmark to open web pages at 100% size, displaying the top-left corner of the page.

Text encoding Opens a dialog box where you can change the character encoding standard that MetroWEB uses when displaying text on a web page.

Block pop-up windows Checkmark to prevent websites from opening windows unless you request it.

Load images Uncheckmark to omit images when MetroWEB displays a web page. This speeds up web page loading, which can be useful if you have a slow connection.

Auto-fit pages Checkmark to have MetroWEB optimize the presentation of text and other elements of webpages to fit your phone's screen. Checkmarking this option also causes MetroWEB to reflow a column of text to fit the screen if you double-tap the screen directly after zooming with your fingers. Uncheckmark to view pages as designed for a computer

screen so that double-tapping simply switches between zoomed-in and default view.

Landscape-only display Checkmark to display pages in landscape (horizontal) orientation on your screen, regardless of how you are holding the phone.

Enable JavaScript Uncheckmark to prevent JavaScript from running on web pages. Many web pages function correctly only if they can run JavaScript features on your phone.

Enable plug-ins Opens a dialog box to select when to enable plug-ins.

Open in background Checkmark to open new windows in the background when you touch and hold a link, then touch **Open in new window**. This is useful when you are working with windows that take a long time to download and display. Uncheckmark if you prefer new windows to open in place of the current window.

Set home page Opens a dialog box where you can enter the URL of a page that you want to access whenever you open a new MetroWEB window. If you prefer to open new MetroWEB windows more quickly, by not opening any page by default, leave the dialog box blank.

Privacy settings

Clear cache Allows you to clear locally cached content and databases.

Clear history Allows you to clear the MetroWEB history.

Accept cookies Checkmark to allow websites to save and read cookie data.

Clear all cookie data Allows you to clear all MetroWEB cookie data.

Remember form data Checkmark to allow MetroWEB to remember data entered into forms for later use.

Clear form data Allows you to clear all saved form data.

Enable location Checkmark to allow sites to request access to your location.

Clear location access Allows you to clear location access for all websites.

Security settings

Remember passwords Checkmark to allow MetroWEB to save user names and passwords for websites.

Clear passwords Allows you to clear all saved passwords.

Show security warnings Checkmark to show a warning if there is a problem with a site's security.

Advanced settings




Set search engine Allows you to select a search engine.

Website settings Allows you to manage advanced settings for individual websites.

Reset to default Allows you to restore the MetroWEB settings to default.

Maps

To search for a location

1. Touch the **Applications Key**  > **Maps** .
2. Touch the search box at the top of the screen.
3. In the search box, enter the place you're looking for. You can enter an address, a city, or a type of business or establishment. For example, "theater in New York".
4. Touch the **Search icon** .




Red markers indicate search matches on the map.







You can touch a marker to open a balloon that contains a label. Touch the balloon to open a screen with more information about the location, as well as options for obtaining directions.


Getting Directions

Maps can provide directions for travel by car, public transportation, cycling, or by foot.

To get directions

1. Touch the **Applications Key**  > **Maps** .
2. Touch the **Menu Key**  > **Directions**.
3. Enter a starting point in the first text box and your destination in the second text box. You can also select an address from your **Contacts**, **Point on map**, or **My Places**.

To reverse directions, touch the **Menu Key**  > **Reverse Start & End**.
4. Touch the **Car** icon  for driving directions, the **Bicycling** icon  for bicycling directions, the **Bus** icon  for public transportation directions or the **Walking** icon  for walking directions.
5. Touch **Get directions**.
6. Your route is displayed on a map.
7. To view the directions in a list format, touch **List view** .


To switch back to your map route from List view, touch the **Menu Key**  > **Map view**.

Checking the weather

The **Weather** application provides weather forecasts. You can place a Weather widget on your Home screen for a summary of your local weather. Access the **Weather** application for more detailed weather information.


To get details about the weather

After adding the Weather widget on the Home screen, touch it to open the **Weather** application to view summarized and detailed weather information.

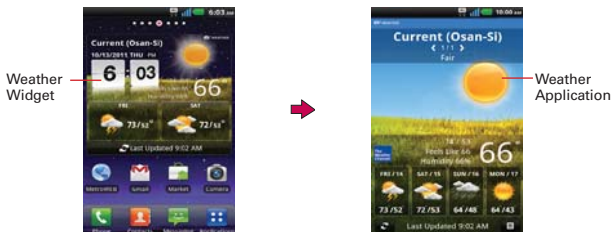

To update or add city

Touch the Weather widget on the Home screen to open the Weather application to view summarized and detailed weather information.


- ▶ Touch the **City list** icon .
- ▶ Touch **Current** to update your current location.
- ▶ Touch **Add** at the bottom of the screen to add a city.
- ▶ Touch a city in the list to display the weather information for that city.
- ▶ Swipe right or left to scroll through the weather information for each of the cities in your list.



Changing Weather Settings

You can configure a number of settings for the **Weather** application.

The location and related settings also affect the display of the Weather widget application.

- ▶ To open the Weather settings screen, touch the **Menu Key**  > **Settings**.

List settings

City list You can add, edit, or remove a city from your list.

General Settings

These settings control how frequently the information on the Weather widget is updated and the temperature unit to use.

Refresh interval Allows you to set how often to update the weather. More frequent updates trade the convenience of current information for increased data use and decreased battery life between charges.

Temperature unit Allows you to use Fahrenheit or Celsius.

Contacts

The **Contacts** application allows you to store names, phone numbers and other information in your phone's memory.

Using Your Contacts

Use the **Contacts** application to add, view, and communicate with your friends and acquaintances.

To open your Contacts application

- ▶ Touch the **Applications Key**  > **Contacts** .

OR

Touch the **Home Key**  > **Contacts**  in the Quick Keys bar.

All of your contacts are displayed alphabetically in a list. If you have a new phone and haven't added any contacts yet, the **Contacts** application will display hints on how to start adding contacts to your phone.

To open a list of your favorite contacts

- ▶ Open your **Contacts** application and touch the **Groups** tab at the top of the screen. Then touch **Favorites**.





Favorites lists the contacts you've added to the list.


To view details about a contact

1. Open your **Contacts** application.
2. Touch the contact whose details you want to view.



Touch an icon to call, message, or open other applications.

- ▶ The **Dial icon**  places a call to the number.
- ▶ The **Message icon**  starts a message.
- ▶ The **Mail icon**  starts an email.
- ▶ The **Chat icon**  starts a chat.

Touch the **Menu Key**  for the following menu options: **Edit contact**, **Share**, **Delete contact**, **Join**, **Add to home screen**, and **More** (Export and **Set speed dial**).

Contact History Tab

By default when you open a Contacts entry, the Contact Info tab is displayed so you can see all of the details you stored. You can also view your history of communication with the contact, including calls, messages, email, etc. Simply touch the Contact History tab at the top of the Contact entry screen.

Photo Tab

The Photo tab displays your Contact's photo albums if their contact information is synced with their profile from a social networking application.

Agenda Tab




The Agenda tab displays synchronized Calendar events if the Contact was invited as a Guest for the event.

Adding Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google™ Account, Microsoft Exchange account, or other accounts that support syncing contacts.

The **Contacts** application tries to join new addresses with existing contacts, to create a single entry. You can also manage that process manually.

To add a new contact

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **New Contact**.
3. If you have more than one account with contacts, touch **Contact type** at the top of the screen and choose the account to which you want to add the contact.
4. Enter the contact's name.
5. Touch a category of contact information, such as phone number and email address, to enter that kind of information about your contact.
6. Touch a category's plus button  to add more than one entry for that category. For example, in the phone number category, add a work number and a home number. Touch the label button to the left of the entry item information to open a drop-down menu of preset labels. For example, **Mobile** and **Work** for a phone number.
7. Touch the **Picture Frame** icon  to select a picture to display next to the name in your list of contacts and in other applications.
8. When you're finished, touch **Save**.


Importing, Exporting, and Sharing Contacts

If you have contacts stored in vCard format on a microSD card you can import them into your Contacts application on your phone. You can also export contacts in vCard format onto a microSD card.

Export to back them up to a computer or other device or so you can send a contact via email.


To import contacts from your microSD card

You can copy contacts, in vCard format, onto your microSD card then import them into your phone.

1. Insert the memory card (that contains the vCard files) into your phone.
2. Open the **Contacts** application.
3. Touch the **Menu Key**  > **More** > **Import/Export**.
4. Touch **Import from SD card**.
5. If you have more than one account on your phone, touch the account into which you want to import the contacts.
6. Touch the contacts you want to import to the microSD card. Then touch **Import**.


To export contacts to your microSD card

You can export all of the contacts on your phone to your microSD card, as vCard files. You can then copy this file to a computer or another device that is compatible with this format, such as an address book application.

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More** > **Import/Export**.
3. Touch **Export to SD card**.
4. Touch the contacts you wish to export to the SD card. To export all contacts, touch **Select all** in the top left corner of the screen. Then touch **Export** and **OK**.

To share a contact

You can share a contact with someone by sending it to them as a vCard file.

1. Open the **Contacts** application.
2. Touch the contact you want to share to view the contact details.
3. Touch the **Menu Key**  > **Share**.
4. Choose the method for sending.
5. Enter the necessary information and share it.

Adding a Contact to Your Favorites

The **Favorites** section contains a short list of the contacts you communicate with most often.

To add a contact to your favorites list

1. Open the **Contacts** application.
2. Touch a contact to view its details.
3. Touch the star to the right of the contact's name.
When the contact is added to your favorites list, the star will be gold-colored.


To remove a contact from your favorites list

1. Open the **Contacts** application and touch the **Groups** tab.
2. Touch **Favorites**, then touch a contact entry to view its details.
3. Touch the gold star to the right of the contact's name.
The grey-colored star will indicate that the contact was removed from your Favorites list.

Searching for a Contact

It's easy to search for a contact by name.

To search for a contact

1. Open the **Contacts** application.
2. Touch the search box or touch the **Search Key** .
3. Start entering the name of the contact you're searching for. As you type, contacts with matching names will appear below the search box.
4. Touch a matching contact in the list to view its details.
You can also search by nickname, email, organization and number.

NOTE The Pinch-to-zoom gesture can be used in your Contacts list. Pinch in to compress the entries into horizontal alphabetical bars, then simply touch the bar with the desired letter to open the entries that begin with that letter.

Editing Contact Details

You can change or add details saved in your contact entries. You can also set specific ringtones to specific contacts or determine whether calls from specific contacts are diverted to your voicemail.

Some contact entries contain information from multiple sources: information that you added manually, information that Contacts joined from multiple accounts to consolidate duplicates, etc.

If you find duplicate entries in Contacts, you can join them into a single entry.

Changes made to information from one source do not automatically change the information on the other sources. For example, if you have information about a contact from a Google Account and an Exchange account and both are configured to sync contacts, changes to the contact from the Google Account are synced to that account on the web, but the information from the Exchange account will remain unchanged.

To edit contact details

1. Open the **Contacts** application.
2. Touch and hold the contact whose details you want to edit. In the Context menu that opens, touch **Edit contact**.
3. Edit the contact information.
4. Touch **Save** to save the changes.

To change a contact's default phone number


The default phone number is used when you initiate a call or send a text message using the context menu (by touching and holding a contact).

1. Open the **Contacts** application.
2. Touch the name of a contact in the list to view its details.
3. Touch and hold the phone number to use as the contact's default phone number.
4. Touch **Make default number** in the menu that opens.
The default phone number is indicated by a checkmark.

To set a ringtone for a contact

1. Open the **Contacts** application.
2. Touch the name of a contact in the list to view its details.
3. Touch **Ringtone** then touch a ringtone to select it.
4. Touch **OK** to save the ringtone to the contact.

To delete a contact

1. Open your **Contacts** list or **Favorites** list.
2. Touch the name of a contact in the list to view its details.
3. Touch the **Menu Key**  > **Delete contact**.
 - ▶ If you delete a contact from Google Contacts (or another account with editable contacts), the contact is also deleted from Contacts on the web the next time you sync your phone.
 - ▶ You can't delete contacts from a read-only account, such as Facebook. Instead, a dialog box informs you that the contact will be hidden.
 - ▶ If the contact contains information from both editable accounts (such as Contacts) and from a read-only account (such as Facebook), a dialog box informs you that the information from the read-only account will be hidden, not deleted.
4. Touch **OK** to confirm that you want to delete the contact.

Communicating with Your Contacts

From the **Contacts** or **Groups** tab, you can quickly call or send a text (SMS) or multimedia message (MMS) to a contact's default phone number. You can also open a list of all the ways you can communicate with that contact.

This section describes ways to initiate communication when viewing your list of contacts. The **Contacts** application shares your contacts with many other applications, such as Gmail™ and Messaging.

To connect by using Quick Contact for Android™

1. Touch a contact's picture to open Quick Contact for Android.

Touch a contact's picture.



2. Touch the icon corresponding to the type of communication you want to start.

The communication icons displayed depend on the types of information you saved in the contact information.

To communicate with a contact

1. Open the **Contacts** application.
2. Touch the contact with whom you want to communicate.
3. In the contact's details screen, touch the way to start communicating with the contact.
 - ▶ The **Dial icon** 📞 places a call to the number.
 - ▶ The **Message icon** 💬 starts a message.
 - ▶ The **Mail icon** ✉️ starts an email.
 - ▶ The **Chat icon** 💬 starts a chat.

NOTE Anytime you see the **Dial icon** 📞 next to a number, such as in your Favorites or Call log, just touch it to call that number.

To call a contact's default number

1. Open the **Contacts** application.
2. Touch and hold the contact you wish to call.
3. Touch **Call contact** in the Context menu that opens.

To send a text or multimedia message to a contact's default number


1. Open the **Contacts** application.
2. Touch and hold the contact you wish to message.
3. Touch **Text contact** in the Context menu that opens.

Selecting Which Contacts are Displayed


You can hide contacts that don't have phone numbers. You can also configure which groups of contacts you want to display in the Contacts list.

To set whether contacts without phone numbers are displayed


If you use your list of contacts only to call people, you can hide any contacts that don't have phone numbers.

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More** > **Display options**.
3. Touch **Only contacts with phones** to select or deselect this option.
When selected, a checkmark will appear.
4. Touch **Apply** to save the settings.

- NOTES**
- You can sort the Contact list by Given name or Family name.
 - You can also view contact names as Given name first or Family name first.

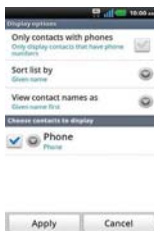


To change which groups are displayed

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More** > **Display options**.
3. Touch an account to open its list of available groups.
4. Touch each group whose contacts you want to view in your Contacts application. Contact types with a checkmark will appear in your contacts list. This action affects only which contacts are displayed. Your sync settings will not be affected.
5. Touch **Apply** to save your settings.

Joining Contacts

When you add an account or add contacts in other ways, such as by exchanging emails, the **Contacts** application attempts to avoid duplication by joining contact information automatically. You can also join contacts manually.

To join contacts


1. Open the **Contacts** application.
2. Touch the contact entry to which you want to add information. The contact name for this entry will remain unchanged after you join with another contact.
3. Touch the **Menu Key**  > **Join**.
4. Touch the contact whose information you want to join with the first contact. The information from the two contacts will be merged and displayed under the name from the first contact.

Separating Contact Information

Each contact entry on your phone may contain 'joined' information from a variety of sources.

If contact information from different sources was joined in error, you can separate the information back into individual contact entries on your phone.

To separate contact information

1. Open the **Contacts** application.
2. Touch the contact entry whose information you want to separate.
3. Touch the **Menu Key**  > **Separate**.
4. Touch **OK** to confirm you want to separate the entries. The contact information will be separated into individual contact entries in the Contacts list.

Email

Opening Email and the Accounts Screen

You can use the **Email** application to read **Email** from providers other than Gmail™. The **Email** application supports the following account types: Microsoft Exchange, Windows Live Hotmail, Yahoo! Mail, Gmail, AOL Mail, and other accounts.

To open the Email application


- ▶ Touch the **Applications Key**  > **Email** .

The first time you open the **Email** application, a setup wizard opens to help you add an Email account.

After the initial setup, Email displays the contents of your Inbox.

The Accounts screen

The Accounts screen lists your Combined Inbox and each of your email accounts.

- ▶ Open the **Email** application. If you're not on the Account screen, touch the **Menu Key**  > **Accounts**.

Each folder and account on the Accounts screen displays the number of unread messages in parenthesis.

You can touch an account to view its Inbox.


The account from which you send email by default is indicated with a checkmark.

Reading Your Messages

You can read messages from the Inbox, or from other folders from the individual accounts.

To read a message

From the Accounts screen, simply touch any account to display it.



You can also go to the folder list of the account by touching the **Menu Key**  > **Folders** from the Inbox.

NOTE When new email arrives, a notification appears in the Status Bar. Drag the Notifications panel downward and touch the email notification.

Responding to a Message

There are many options how you can respond to a received email message. You can reply to it, forward it, or even just delete it.

To reply to or forward a message

- ▶ While reading a message, touch  > **Reply** to reply to the message.
- ▶ While reading a message, touch  > **Forward** to forward the message.


To mark a message as unread

You can set a message to appear as though it has not been read – for example, to remind yourself to read it again later.

- ▶ From the Inbox, touch and hold the desired message, then touch **Mark unread** in the Context menu that opens.

To delete a message

There are a few easy ways to delete a message.

- ▶ While reading a message, touch **Delete**  at the bottom of the screen.
- ▶ From the Inbox, touch the checkbox next to one or more messages, then touch **Delete** at the bottom of the screen.

For many types of accounts, deleted messages are moved to a Trash folder, so you can retrieve them in case they were deleted by mistake.

Microsoft Exchange E-mail Account

The following settings must be entered when setting up a Microsoft Exchange E-mail Account.

- **Email address:** Enter the account e-mail address.
- **Username:** Enter the account username.
- **Password:** Enter the account password.
- **Domain:** Enter the account domain (optional).
- **Server address:** Enter the server address.
- **Use SSL:** Choose whether or not to use SSL for Microsoft Exchange.

Other E-mail Account (POP3 and IMAP4)

The following settings must be entered when setting up a POP3 or IMAP4 E-mail Account.

- **Email address:** Enter the account e-mail address.
- **Password:** Enter the account password.
- **IMAP4/POP3:** Select the protocol type from IMAP4 or POP3.
- **Incoming server:** Enter the incoming e-mail server address.
- **Secure type:** Select the secure type from Off, SSL, or TLS.
- **Outgoing server:** Enter the outgoing e-mail server address.
- **SMTP secure connection:** Select the secure type from Off, SSL, or TLS.
- **Port number:** Normally each account's default number will be displayed.

Gmail

Opening Gmail and Your Inbox

When you open the **Gmail** application, the most recent conversations are displayed in your Inbox.

To open the Gmail application

Touch the **Applications Key**  > **Gmail** .

All of your conversations are displayed in your Inbox unless you delete, archive, or filter them.

The current Google Account is displayed at the top right of the Inbox. If you have more than one account, you can switch accounts to view the messages in each Inbox.


Conversations with new messages are displayed with bold subject lines. To read a message in a conversation, touch its subject line text.

> indicates that this message was sent directly to you.

>> indicates that you were CC'd on this message.

No indicator indicates that this message was sent to a group that includes you.

To open your Inbox when Gmail is running

If you are viewing a message or another label, touch the **Back Key**  until you return to your Inbox.

OR


- ▶ When reading a message, touch the **Menu Key**  > **Go to inbox**

OR

- ▶ When viewing a list of labeled conversations, touch the **Menu Key**  > **More** > **Go to inbox**.

To switch accounts

Gmail displays conversations and messages from one Google Account at a time. If you have more than one account, you can open the Accounts screen to view how many unread messages you have in each account and to switch accounts.

1. From your Gmail Inbox, touch the **Menu Key**  > **Accounts**.



2. Touch the account that contains the email you want to read.

Reading Your Messages

When viewing a list of conversations in your Inbox or in any list of labeled conversations, you can open a conversation to read its messages.

To read a message

- Touch a conversation that contains the message you want to read.


A conversation opens to the first new (unread) message, or to the first starred message, if you've previously starred a message in the conversation.



The Google Talk online status will appear next to the name of the sender of each message if the sender has a Google Account. Touch the contact's picture to open Quick Contact.



When reading messages in a conversation, you can use the buttons at the bottom of the screen to archive the entire conversation or delete it. After you delete a conversation, you can touch **Undo** in the green bar that appears at the top of the screen to undo the last action and restore the message to its previous location.

You can also touch the arrow buttons to read the next, oldest, unread message in a conversation in your Inbox (or the conversation list you're working in).

Touch  on the message header to access options for replying or forwarding the message.

To reread a message


When you open a conversation, messages that you've already read are minimized into a tab that indicates the number of hidden messages.

1. Touch the **Applications Key**  > **Gmail** . Then touch the conversation you want to view and the tab indicating minimized messages.



2. Touch the contact name to open that message.










When reading a message you can touch the **Menu Key**  > **Mark unread** to return a read message to the unread state. For example, to remind yourself to read it again later.


Composing and Sending a Message

You can compose and send a message to people or groups with Gmail addresses or other email addresses.

To compose and send a message

1. Touch the **Applications Key**  > **Gmail**  > **Menu Key**  > **Compose**.
2. Enter a recipient's address.
As you enter text, matching addresses are offered from your Contacts list. You can touch a suggested address or continue entering text to enter a new one.
3. Touch the **Menu Key**  > **Add Cc/Bcc** to copy recipients, if necessary.
4. Enter a subject for the message in the Subject field.
5. Continue into the next field to enter your email message.
6. Touch the **Menu Key**  > **Attach** to add an attachment to the email.
7. Touch **Send**  to send your message.

If you're not ready to send the message, touch  to save the message as a Draft. You can read your drafts by opening messages with the Draft label.


To erase the message, touch the **Menu Key**  > **Discard** (including any saved drafts).

If you aren't connected to a network – for example, if you're working in Airplane mode – the messages that you send are stored on your phone with the Outbox label until you connect to a network again.

Replying to or Forwarding a Message

You can continue an email conversation by replying to a message or by forwarding it.

To reply to or forward a message

1. Touch  on the message header to access options for replying or forwarding the message.
2. Touch **Reply**, **Reply all**, or **Forward**.

Replying to or forwarding messages without changing the subject adds your reply to the current conversation.

Changing the subject starts a new conversation.

The message will open in a new screen where you can add or remove addresses, edit the subject, and add or remove text or attachments.

You can add one or more people to an ongoing conversation by replying to all and then adding the new person's address(es) to the reply.

Note that the conversation text and previous messages are also included in your reply (or forward).


3. Touch **Send**  to send your message.


Working with Conversations in Batches

You can archive, label, delete, or perform other actions on a batch of conversations at once, in your Inbox or in another label.

1. From the Inbox, or a folder with another label, touch the checkbox for all the messages you want to include in the batch.

When you checkmark a conversation, the **Archive**, **Delete**, and **Labels** buttons appear at the bottom of the screen.

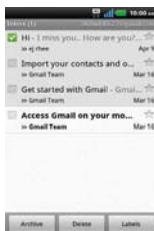

2. Touch **Archive**, **Delete**, or **Labels** or touch the **Menu Key**  > **Add star**, **Report spam**, **Mute**, **Mark unread/read**, **Not important/Mark important**, or **More**(**Deselect all**, **Help**, **About**).


Your action affects the selected batch of messages.

If you accidentally delete a batch of conversations, you can touch **Undo** in the green bar (that appears briefly after the action) at the top of the screen to undo the action and restore the message(s) to the previous location. You can also use **Undo** after muting, archiving, and reporting spam.

Labeling a Conversation

As mentioned previously, conversations are organized by labels. Gmail has several default labels, but you can also add your own through Gmail on the web.

To label a conversation

1. When reading a conversation's messages, touch the **Menu Key**  > **Change labels**.
2. In the dialog box that opens, check the labels you want to assign to the conversation and touch **OK**.

To label a batch of conversations at once


You can assign or change the labels of one or more conversations at once.

1. From your Inbox, or a folder with another label, checkmark the conversations to select a batch.
2. Touch **Labels** at the bottom of the screen.
3. In the dialog box that opens, check the labels you want to assign to the conversation.
4. Touch **OK**.


Starring a Message

You can star an important message or conversation to make it easy to locate again. All starred messages are saved in the Starred label.

To star a message

- ▶ When reading a message, touch the star  in its header.

OR


- ▶ When viewing a list of conversations, touch its star  to star the newest message in the conversation.


To unstar a message

- Touch its star again. The star will turn gray, indicating that the message has been removed from the Starred label.

Viewing Conversations by Label

You can view a list of the conversations that have the same label, including conversations with starred messages.

1. When viewing your Inbox, or a folder with another label, touch the **Menu** Key  > Go to labels.

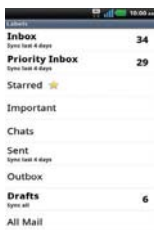


2. Touch a label to view a list of conversations with that label.

NOTE The conversation list will resemble your Inbox. Most of the options available while using your Inbox will also be available while viewing these lists of labeled messages.


Reporting Spam

The Gmail service is quite effective at preventing spam (junk mail) from reaching your Inbox. But when spam does make it through, you can help improve the Gmail service by reporting the conversation as spam.

To report a conversation as spam

- ▶ When reading the email, touch the **Menu Key**  > **More** > **Report spam**.

OR

- ▶ From the Inbox, touch the checkmark box to select the messages you want to report as spam > **Menu Key**  > **Report spam**.

When you report a conversation as spam, the conversation (and all its messages) are removed from your Inbox. You can view the messages you've marked as spam by viewing messages with the Spam label.

Synchronizing Your Messages

The Gmail service has the resources to store all the messages you've ever sent or received; your phone does not. To save space, Gmail downloads only some of your messages to your phone. Use the **Settings** menu to control how and when applications synchronize their data.

To select which conversations to synchronize

1. Touch the **Applications Key**  > **Gmail** .
2. Touch the **Menu Key**  > **More** > **Settings** > choose an account > **Sync inboxes and labels**.

The Synchronization screen opens, displaying a list of your Gmail labels. Below each label is its current synchronization setting:




Sync all, **Sync last 4 days**, or **Sync none** (If Sync none is selected, the labeled conversation is not synchronized).

3. Touch a conversation label whose synchronization settings you want to change.

A dialog box for that conversation label opens, with three options:

- **Sync none** Don't download any conversations that have only this label.
- **Sync last 4 days** Download the previous 4 days (or number of days you set) of conversations.
- **Sync all** Download all conversations with this label.

To set how many days of conversations to synchronize

1. Touch the **Applications Key**  > **Gmail** .
2. Touch the **Menu Key**  > **More** > **Settings** > choose an account > **Sync inboxes and labels**.
3. Touch **Amount of mail to sync**.
4. Enter the number of days and touch **OK**.

Appending a Signature to Your Messages

You can add information to every email you send, such as your name or contact information.

1. Touch the **Applications Key**  > **Gmail** .
2. Touch the **Menu Key**  > **More** > **Settings** > choose an account > **Signature**.



3. Enter a signature or other information.
4. Touch **OK**.



Changing Gmail Settings

You can change a number of settings for Gmail. Each Google Account has its own settings, so your changes affect only the current account. Notification volumes and some synchronization settings can also be changed in the **Settings** menu.

- ▶ Touch the **Applications Key**  > **Gmail**  > **Menu Key**  > **More** > **Settings**. Then touch the desired account.


Messaging

To open Messaging

- ▶ Touch the **Home Key** , then touch **Messaging Key**  in the Quick Keys bar.

The Messaging screen will open, where you can create a new message or open an ongoing message thread.

Touch to create a new message.

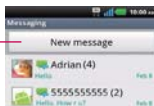

- ▶ Touch **New message** to start a new text or multimedia message.
- ▶ Touch an existing message thread to open it.

To delete a message thread from the Messaging window

1. Touch and hold the message thread.
2. Touch **Delete thread** in the Context menu that opens.
3. Touch **OK** to confirm you want to delete the message thread.

Exchanging Messages

You can send text messages (SMS) of up to 160 characters to another mobile phone. If you keep typing after the limit, your message is converted to a MMS.

Multimedia messages (MMS) can contain text and a picture, a recorded voice, an audio file, a video, or slideshow which can attach media file such as picture and audio.


The **Messaging** application automatically converts a message into a multimedia message if you add a subject or attach a media file.

To send a text message

1. On the Messaging screen, touch **New message**.
2. Enter a mobile phone number in the **To** field.


As you enter the mobile phone number, matching contacts appear. You can touch a suggested recipient or continue entering the phone number.

3. Touch the text field to start entering your message.

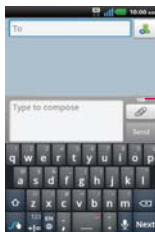


Character counter
Displays number of characters entered and amount remaining.

A counter is displayed in the top right corner of the text field to tell you how many characters are left.



If you touch the **Back Key**  while composing a message, it's saved as a draft in your **Messaging** application. Touch the message to resume composing it.

4. Touch **Send** to send the message.

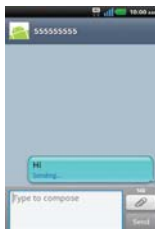Your message is displayed and responses appear in the same window, creating a message thread with that contact.



To create and send a multimedia message

1. On the Messaging screen, touch **New message**.
2. Enter a mobile phone number or email address in the **To** field. As you type, matching contacts appear. You can touch a suggested contact or continue typing.
3. Touch the text field to start entering your message.
4. Touch the **Menu Key**  > **Add subject** to add a message subject.
5. Touch  to open a menu where you can choose the type of media file to attach to the message.
 - ▶ If you touch **Pictures**, you're prompted to select a picture from your Gallery.
 - ▶ If you touch **Capture picture**, the **Camera** application opens so you can take a picture and attach it.
 - ▶ If you touch **Videos**, you're prompted to select a video from your Gallery.
 - ▶ If you touch **Capture video**, the **Camcorder** application opens so you can record a video and attach it.
 - ▶ If you touch **Audio**, you're prompted to select an audio file from your microSD card.
 - ▶ If you touch **Record audio**, the voice recording function opens and allows you to record a spoken message and attach it to your message.
 - ▶ If you touch **Slideshow**, a menu opens and allows you to assemble photos into a slideshow (up to 10 slides) to attach to the message. Use the buttons in the Compose Message screen to preview the message, replace a picture, or remove a slide. Touch **Done** when you finish editing the slideshow.
6. Touch **Send MMS** to send the message.

To respond to messages you receive

If you're working in a message window, messages that you receive from that contact are displayed. Otherwise, you receive a new message notification and a new message icon appears in the Status Bar. When you touch the new message notification, the Message screen opens where you can reply to the message.

If Auto-retrieve is uncheckmarked, you must touch **Download** to view the message.


If the message contains a media file, touch **Play** to view, watch, or listen to it. Touch and hold the media file to open a menu with additional options.

To view details about a message

1. Touch and hold a message in a conversation.
2. Touch **View message details** in the Context menu that opens.

Changing Messaging Settings


You can change a number of Messaging settings.

- ▶ To change Messaging settings, open the **Messaging** application, touch the **Menu Key**  > **Settings**.

How to select the type of keyboard you want to use

1. Touch and hold a text field.
2. Touch **Input method**.
3. Choose between **Swype** and **LG Keyboard**.

You will now be able to enter text using the new keyboard.

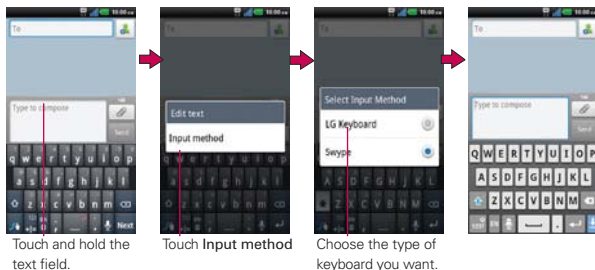

Talk

To open Google Talk and sign in

- ▶ Touch the Applications Key > Talk .

When you first open Google Talk, your Friends list will be displayed. This list includes all of the friends you've added by using Google Talk on the web or on the phone.



To return to your Friends list

You can return to your Friends list while chatting with a friend so that you can invite another friend to chat, add a friend, etc.

- ▶ Touch the Menu Key > Friends list.

To sign out of Google Talk




You can sign out of Google Talk. For example, if you want to limit Google Talk conversations to your computer. Also, signing out can extend your battery life.

- ▶ From your Friends list, touch the **Menu Key**  > **Sign out**.

You will no longer receive chat notifications or see others' Google Talk status in other applications, such as Gmail™.


Chatting with Friends

To chat with a friend

1. Touch the **Applications Key**  > **Talk** .
If you're already chatting with someone, you can touch the **Menu Key**  > **Friends list** to return to the Friends list.
2. Touch the friend you want to chat with.
3. Enter your message and touch **Send**.



The messages that you exchange are displayed on the screen and include information about the chat, such as whether it's on-the-record, the time a message was sent (if there's no response after a short while), etc.

To enter an emoticon (smiley), just touch the **Menu Key**  > **More** > **Insert smiley** to open a list of emoticons.

Your chat session will remain open until you end it.

Friends you're chatting with are displayed at the top of your Friends list, with the most recent message displayed in a black-on-white balloon.

To accept an invitation to chat

When a friend sends you a Google Talk message, you will receive a notification. The friend's name in the Friends list turns white and displays the message.

- ▶ Touch the friend in your Friends list.

OR


- ▶ Open the Notifications panel then touch the chat notification.
A chat window will open where you can exchange messages with your friend.

To switch between active chats

If you have more than one chat going, you can switch between chats.

- ▶ From the Friends list, touch the name of the person you want to chat with.

OR


- ▶ From a chat screen, touch the **Menu Key**  > **Switch chats** and then the friend you want to chat with.

OR

- ▶ While chatting with a friend, swipe left or right across the screen.

To invite a friend to join a group chat

While you're chatting, you can invite additional friends to join a group chat.


1. On a chat screen, touch the **Menu Key**  > **Add to chat**.
2. Touch the name of the friend to invite.

The friend you invited and the current participants will receive an invitation to a group chat. Each one who accepts the invitation will join the group chat. In a group chat, everyone can see everyone else's messages. Group chats appear at the top of your Friends list, with a group chat icon.

To chat on or off-the-record

Your Google Talk messages are stored, so you can review them later and even search for them, in the Chats folder in Gmail. If you'd rather not store the messages in a chat, you can chat off-the-record.

- ▶ While chatting, touch the **Menu Key**  > **Chat off record**.

To return to on-the-record chatting, touch the **Menu Key**  > **Chat on record**.

To end a chat

When you've finished your conversation, it's easy to end a chat session.

- ▶ From your Friends list, touch and hold the friend you want to stop chatting with. In the Context menu that opens, touch **End chat**.



OR


- ▶ From a chat screen, touch the **Menu Key**  > **End chat**.

Changing and Monitoring Online Status

Google Talk allows you to change how you appear to others; you can change your online status and status messages, as well as the picture that appears next to your name on your friends' list.

To change your online status








1. Touch the **Applications Key**  > **Talk** .
2. Touch your email address at the top of your Friends list.
3. In the screen that opens, touch the drop-down status menu and choose an option.

In addition to the standard status settings described in the table on the following page, you can also select a message that you've entered previously or touch the **Menu Key**  > **Clear custom messages** to erase them and start over.



Your status and any message you've entered appear in your friends' lists and in other locations where your status or status message are displayed.

Status Icons

Icons in Google Talk, Gmail, and other applications indicate your and your friends' Google Talk status.

	Available: Signed into Google Talk and available to chat
	Away: Signed into Google Talk but not active
	Busy: Signed into Google Talk but too busy to chat
	Signed out of Google Talk
	Invisible: Signed into Google Talk but appear signed out to others
	Video Chat: Video chat is available.
	Voice Chat: Voice chat is available.

To change your status message

1. Touch the **Applications Key**  > **Talk** .
2. Touch your email address at the top of your Friends list.
3. Enter a new status message in the Status message field.
4. Touch **Done** to save your status message.

To change your picture

1. Touch your email address the top of your Friends list.
2. Touch your picture at the top left of the screen.
3. Touch **Remove** to remove your picture or **Change** to change it.
4. Choose an image from your Gallery.
5. Crop the picture and touch **Save**.


Managing Your Friends List

Your Google Talk Friends list contains the friends you've invited to become friends or whose invitations you've accepted in Google Talk. Friends can invite each other to chat in Google Talk and see each others' online status in Google Talk and other applications, such as in Gmail.

The Google Talk Friends list is sorted by your friends' online status: active chats, online, busy, away, and offline. Within each grouping, friends are listed alphabetically.

To add a friend to your Friends list

You can invite anyone with a Google Account to become your friend in Google Talk, so you can chat with each other and stay up-to-date with each others' online status.

1. From the Friends list, touch the **Menu Key**  > **Add friend**.
2. Enter your friend's Gmail address and touch **Send invitation**.

To view and accept an invitation to become a friend

When a contact invites you to become a friend in Google Talk, you receive a notification in the Status Bar and the invitation appears in your Friends list.

1. Touch the invitation from either the Status Bar or the Friends list.
2. Touch **Accept** to chat with the contact or **Cancel**, if you don't want to chat with and share your Google Talk status with the sender.

To view a list of pending invitations to friends


- ▶ From the Friends list, touch the **Menu Key**  > **More** > **Invites**.

All the friends to whom you've extended invitations to become friends on Google Talk appear in the list until they accept or cancel your invitation.

To view all friends or only those most popular with you

By default, only the friends that you frequently chat with (the most popular) are shown in the Friends list. But you can view all friends instead.


- ▶ In the Friends list, touch the **Menu Key**  > **All friends**.

To switch back to just the friends with whom you chat most frequently, touch the **Menu Key**  > **Most popular** instead.

To add a friend to the 'Most popular' group

You can set a friend to always appear in your Most popular Friends list.

1. From the Friends list, touch and hold a friend's name.


If you don't see the friend's name, touch the **Menu Key**  > **All friends**.


2. Touch **Always show friend** in the Context menu that opens.

To remove a friend from this list, touch and hold the friend's name from the Friends list. In the Context menu that opens, touch **Hide friend**.

To block a friend

You can block a friend from sending you messages. When blocked, your friend will be removed from your Friends list.

1. From the Friends list, touch and hold the friend's name.
If you don't see the friend, touch the **Menu Key**  > **All friends**.
2. Touch **Block friend** in the Context menu that opens.


You can view a list of your blocked friends by opening your Friends list and touching the **Menu Key**  > **More** > **Blocked**. You can unblock a friend by touching the friend's name in the blocked list then touching **OK** in the dialog box that opens.

Changing Google Talk Settings


You can configure Google Talk to send you a notification with the contents of each message that you receive in a chat, and also to sound a ringtone or vibrate the phone.

You can also configure Google Talk to sign you in automatically when you turn on your phone, and you can set whether the mobile indicator is displayed next to your name in other people's Friends lists.

To configure notifications for new Google Talk messages


1. From the Friends list, touch the **Menu Key**  > **Settings**.
2. Checkmark **Invitation notifications** to receive a notification in the Status Bar when a new chat message arrives.
3. Touch **Notifications** in the Text chat settings and Voice & video chat settings to receive a notification in the Status Bar when a new chat message arrives.
4. Touch **Ringtone** in the Text chat settings and Voice & video chat settings to open a list of the ringtones that will ring to notify you of a new chat.
5. Touch **Vibrate** in the Text chat settings and Voice & video chat settings to choose the vibration setting when you receive notification of a new chat.

To show or hide the mobile indicator to friends


1. From the Friends list, touch the **Menu Key**  > **Settings**.
2. Touch **Mobile indicator** to select or deselect it.

If **Mobile indicator** is checkmarked, your friends see an outline of an Android™ next to your name in their Friends list when you're signed into Google Talk on an Android phone.

To set whether you sign into Google Talk automatically

1. From the Friends list, touch the **Menu Key**  > **Settings**.
2. Touch **Sign in automatically** to select or deselect it. When **Sign in automatically** is checkmarked, you are signed into Google Talk when you turn on your phone.



To set Google Talk to change your status

1. From the Friends list, touch the **Menu Key**  > **Settings**.
2. Touch **Automatic away-status** to select or deselect it.

When **Automatic away-status** is checkmarked, your status will automatically be changed to Away when the screen is turned off.

The Phone application

The phone features of your device include many ways to make calls.


- ▶ Touch the **Home Key**  and then the **Phone Key**  in the Quick Keys bar at the bottom of the screen.

The **Phone** application has four tabs across the top of the screen: **Phone**, **Call log**, **Contacts**, and **Groups**. Using these tabs, you can dial manually or make calls automatically from information you've stored in your phone.


Phone

This tab allows you to dial a phone number manually. You can also call voicemail using this keypad.


Call log

This tab displays the history of all your calls. From here you can call or contact any of the entries. To delete an entry, touch and hold the entry and then touch **Remove from call log**. To delete your Call log, touch the **Menu Key**  > **Delete** or **Delete all**.

Contacts

This tab displays your Contacts list. From here you can call or contact any of the entries based on the saved information or manage your Contacts list. Touch the **Menu Key**  to select **Search**, **Sync now**, **New Contact**, **Send**, **Share**, or **More** (**Delete**, **Display options**, **Speed dials**, **Accounts**, **Import/Export**, **My profile**).

Groups

This tab displays your contacts by group for each account type you have set up, starting with Favorites, followed by a list of recent frequent contact. From here you can call or contact any of the entries based on the saved information or manage your list. For additional options, touch the **Menu Key**  to select **New group**, **Send**, **Share**, or **Delete**.

To add a Contact to your list of favorites:



1. Touch the **Contacts** tab and then the Contact entry you want to add to your Favorites.
2. Touch the grey star next to the Contact's name. The star turns gold and the entry is added to your Favorites.

To remove a Favorite, touch the gold star in either the Contacts list or Favorites list. The star turns grey and the entry is removed from your Favorites.



Voice Dialer

Call a Contact by Voice Dialing

You can call numbers directly by saying the contact's name or number.

1. Touch the **Applications Key**  > **Voice Dialer** .
2. Say "Call" or "Dial" then a name or a phone number.
Or you can say "Redial" to redial the last number dialed.
3. If a list of results is displayed, touch the one you want to use.

Open an Application using Voice Dialer


1. Touch the **Applications Key**  > **Voice Dialer** .
2. Say "Open" and then an application name.
3. If a list of results is displayed, touch the one you want to use.
The device opens the corresponding application.

Camera

To open the Camera application, touch the **Applications Key**  > Camera



Getting to know the viewfinder

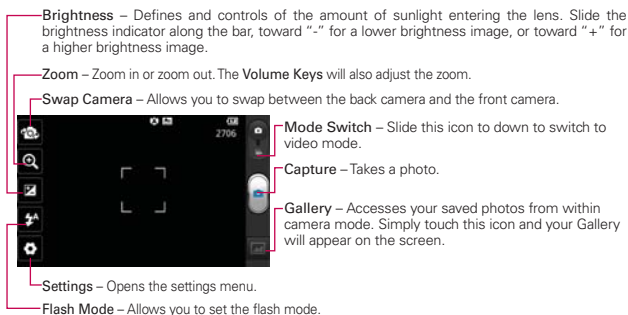

NOTE Default resolution is 5M(2560X1920).

Photo options

You can make adjustments to optimize your shot. The following options are available:

- **Focus:** Allows you to adjust the focus mode to **Auto** or **Face tracking**.
- **Image size:** Allows you to adjust the image size to 5M(2560X1920), 3M(2048X1536), 2M(1600X1200), 1M(1280X960), VGA(640X480), QVGA(320X240).
- **Scene mode:** Adjust for better image capture in different environments. Choose from **Normal**, **Portrait**, **Landscape**, **Sports**, **Sunset**, and **Night**.
- **ISO:** Controls the camera’s sensitivity to light. Choose from **Auto**, **400**, **200**, **100**.
- **White balance:** Improves color qualities under different lighting conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

- **Color effect:** Applies artistic effects to pictures. Choose from **None**, **Mono**, **Sepia**, or **Negative**.
- **Timer:** Allows you to set a timer to delay taking the picture. Choose from **3 sec.**, **5 sec.**, or **10 sec.**
- **Shot mode:** Allows you to select the shot mode. Choose from **Normal**, **Continuous shot**, or **Panorama**.
- **Shutter sound:** Allows you to set the shutter sound. Choose from **Tone 1**, **Tone 2**, **Tone 3**, **Tone 4**, or **Off**.
- **Auto review:** Allows you to set if you want to automatically view the picture after you take it. Choose from **Off**, **On**, **2 sec.**, or **5 sec.**
- **Tag location:** Allows you to select if you want to save the location information for the pictures you take. Choose from **Off** or **On**.


Using the focus mode

You can select from the following focus options:

Auto Sets the camera to focus automatically.

Face tracking Sets the camera to detect and focus on human faces automatically.

Taking a quick photo

1. Open the **Camera** application.
2. Holding the phone horizontally, point the lens toward the subject you want to photograph.
3. Touch the subject on the screen and a focus box will appear in the viewfinder.
4. When the focus box turns green, the camera has focused on your subject.
5. Touch the **Capture** button  to take the picture.

Once you've taken the photo

Your captured photo will appear on the screen until you touch an option or icon to proceed (if Auto review is set to On).

The following options are available after taking a photo:

- Share** Touch to share your photo using **SmartShare, Bluetooth, Email, Facebook, Gmail, Google+, mail@metro, Messaging, Picasa, Social+, Twitter, Wi-Fi Cast** or any other application you've downloaded that supports this feature.
- Set as** Touch to use the image as a **Contact icon** or **Wallpaper**.
- Rename** Touch to edit the name of the selected picture.



Touch to delete the image, then touch **OK** to confirm.

Touch to take another photo immediately. Your current photo will be saved to your Gallery.

Touch to view the Gallery of your saved photos. The thumbnail shows the recently taken photo.

Viewing your saved photos

You can access your saved photos from camera mode. Just touch the photo thumbnail at the bottom right corner of the Camera application.

TIP! Slide your finger left or right to view other photos or videos.

While viewing a photo, touch the screen to access the following options:

Slide show Touch to see your photos played in a slideshow.

Menu Touch to open a menu of options including **Share, Delete, or More.**
More to view the following additional options:

Details Touch to display information about the selected photo (e.g., file type, file size, etc.).

Set as Sets the photo as the icon identifying a contact or set it as your phone wallpaper.

Crop Allows you to manually crop the photo. Use your finger to move or resize the cropping box to encompass only the part of the photo you want to see, then touch **Save**.

Rotate Left Touch to rotate the photo counter-clockwise.

Rotate Right Touch to rotate the photo clockwise.

Video Camera

To open the Video Camera, touch the **Applications Key**  > **Camera** . Slide the Mode Switch icon down to Video mode.

Getting to know the viewfinder

Brightness – Defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar, toward “-” for a lower brightness video, or toward “+” for a higher brightness Video.

Zoom – Zoom in or zoom out. The **Volume Keys** will also set the zoom. Set the zoom before starting a video. You cannot change the zoom setting during recording.

Swap Video Camera – Allows you to swap between the back camera and the front camera.



Mode Switch – Slide this icon to up to switch to camera mode.






Record – Starts video recording.

Gallery – Accesses your saved photos and videos from video camera mode.

Settings – Opens settings options.

Flash Mode – Allows you to set the flash mode.

Recording a quick video

1. Open the **Camera** application.
2. Slide the Mode Switch icon  down to change to Video mode. The Camera mode icon changes to  and the Capture button changes to .
3. The Video camera's viewfinder will appear on the screen.
4. Holding the phone horizontally, point the lens toward the subject of the video.
5. Touch **Record**  once to start recording.
6. The Record dot at the bottom of the viewfinder turns red and the video length timer begins counting.
7. Touch **Stop**  on the screen to stop recording.

After recording a video

A still image representing your video will appear on the screen until you touch an option or icon to proceed (if Auto review is set to On).

The following options are available:

Play Touch to play the video you just recorded.

Share Touch to share your video using **SmartShare**, **Bluetooth**, **Email**, **Gmail**, **mail@metro**, **Messaging**, **Wi-Fi Cast**, **YouTube** or any other compatible applications you have downloaded.

NOTE Additional charges may apply when MMS messages are downloaded while roaming.

Rename Touch to edit the name of the selected video.



Touch to delete the video you just made, and confirm by touching **OK**. The viewfinder will reappear.

Touch to record another video right away. Your current video will be saved in your Gallery.

Touch to view the Gallery of your saved videos. The thumbnail shows the recently recorded video.

Watching your saved videos

1. In the viewfinder, touch the video thumbnail at the bottom right corner of the Camera application.
2. Your Gallery will appear on the screen.
3. Touch the video to play it automatically.

Your Photos and Videos

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the **Volume Keys** on the right side of the phone.

Setting a photo as wallpaper

1. Touch the photo you want to set as wallpaper to open it.
2. Touch **Menu** at the bottom of the screen to open the Options menu. If **Menu** disappears, touch the screen to redisplay it.

3. Touch **More** > **Set as** > **Wallpaper**.
4. Crop the photo, if necessary, then touch **Save**.

Gallery

Opening Gallery and Viewing Your Albums

Open the **Gallery** application to view albums of your pictures and videos.

To open Gallery and view your albums


- ▶ Touch the **Applications Key**  > **Gallery** .

OR


- ▶ Open **Gallery** from the **Camera** application by touching the photo thumbnail at the bottom right corner of the **Camera** application.

The **Gallery** application presents the pictures and videos saved in your external memory including those you've taken with the **Camera** application and those you downloaded from the web or other locations.

If you have a Picasa™ account synchronized with one of your phone's Google™ Accounts, you'll also see your Picasa web albums in **Gallery**.

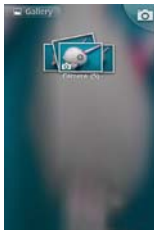

- ▶ Touch an album to open it and view its contents.
The pictures and videos in the album are displayed in chronological order.
- ▶ Touch a picture or video in an album to view it.

- ▶ Return to the main Gallery screen at any time by touching  at the top left corner of the screen.

Working with Albums

Albums are groups of images and videos in folders on your microSD card or in Picasa web albums.


To open an album and view its contents

- ▶ Touch the **Applications Key**  > **Gallery**  and touch the album whose contents you want to view.




- ▶ Use the slider bar at the bottom of the screen to scroll horizontally through your pictures and videos.
- ▶ The date of the images in view is displayed, so you can scroll by date.
- ▶ You can also scroll through an album by swiping the screen left or right.

To change how the contents of an album are displayed

You can view the images and videos in your albums in a chronological grid or in stacks, sorted by the date and the location where they were taken. You switch album views with the Album View switch  at the top right of the screen.


- ▶ Drag the Album View switch  to the left to view the album contents in a chronological grid.

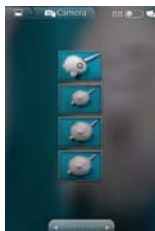

- Drag the Album View switch  to the right to view the album contents in stacks.




Pinch peek

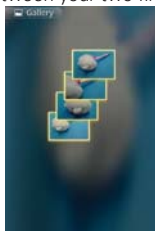When browsing your images in stacks, you can use a spread gesture to open up the contents of an image stack. Photos contained within that stack are then smoothly cycled between your two fingertips.



To Work with Batches of Pictures or Videos

In addition to working with whole albums and with individual pictures, you can select one or more pictures or videos in an album to work on them in batches. For example, to send a few pictures from an album to a friend.

1. Touch the **Applications Key**  > **Gallery** .
2. Open the album that contains the pictures and videos you want to work with as a batch.
3. Touch the **Menu Key** .




4. Touch the pictures and videos you want to work with to checkmark them. Touch a checkmarked item to remove the checkmark.

You can checkmark all items or remove all checkmarks, by touching **Select all** or **Deselect all** at the top of the screen.



5. Use the control buttons at the bottom of the screen to perform actions on the checkmarked items. The control buttons available depend on the mix of items you've selected.

To share an album

You can share the entire contents of one or more albums or individual images or videos from an album.

1. Touch the **Applications Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to share.
4. Touch **Share** at the bottom left corner of the screen and touch the application you would like to use to share the selected albums.
5. Enter the necessary information and share it.

To get details about an album

1. Touch the **Applications Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to see details about.
4. Touch **More** at the bottom right corner of the screen, then touch **Details**.

To delete an album

You can delete an album and its contents from your microSD card.

1. Touch the **Applications Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to delete.

4. Touch **Delete** at the bottom center of the screen. Touch **Confirm Delete** to confirm.

Working with Pictures

Use Gallery to view pictures that you've taken with the **Camera** application, downloaded, copied onto your microSD card or that are stored in Picasa web albums.


To view and browse pictures

1. Touch the **Applications Key**  > **Gallery** , open an album, and touch a picture.



- ▶ Turn the phone to view the picture in vertical (portrait) or horizontal (landscape) orientation. The picture is displayed (but not saved) in the new orientation.
- ▶ Touch the picture to view navigation, zoom, and other control buttons.
- ▶ To zoom, touch a zoom icon (+ or -), use the pinch-to-zoom method, or just double-tap the screen.
- ▶ When the picture is zoomed in, drag the picture to view parts that are not in view.
- ▶ When the picture is zoomed to fit in the window, drag left or right to view the next or previous picture in the album.

To watch a slideshow of your pictures

- ▶ When viewing a picture, touch the screen to view the control buttons then touch **Slide show**.
- ▶ Touch the screen, or touch the **Back Key** , to end the slideshow.

To rotate a picture

1. Touch a picture you want to rotate then touch **Menu**.
2. Touch **More**. A menu opens with tools for working with the picture.



3. Touch **Rotate Left** or **Rotate Right**.
The picture is saved with the new orientation.

To use a picture as a contact icon or as Home screen wallpaper

1. Touch the picture you want to use then touch **Menu**.
2. Touch **More**.
3. Touch **Set as**.
4. Touch **Contact icon** to set the picture to identify a Contact entry or touch **Wallpaper** to set the picture as your wallpaper.
5. If you choose to set as a contact icon, the **Contacts** application will open. Touch the contact that you want to identify with the picture. If you decide to set the picture as your wallpaper, crop it, if necessary then touch **Save**.


To crop a picture

You can crop and save pictures that are stored on your microSD card.

1. Touch the picture you want to crop then touch **Menu**.
2. Touch **More**.
3. Touch **Crop**.

The cropping box appears on top of the picture.

4. Use the cropping box to select the portion of the picture to keep; the rest of the photo will be discarded.
 - ▶ Drag from the inside of the cropping box to move it.
 - ▶ Drag an edge of the cropping box to resize it to any proportion.
 - ▶ Drag a corner of the cropping box to resize it with fixed proportions.

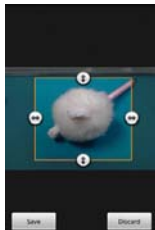

5. Touch **Save** to save a copy of the picture as you cropped it. The original uncropped version remains in your microSD card.

To get details about a picture

1. Touch the picture you want then touch **Menu**.
2. Touch **More**.
3. Touch **Details**.

To share a picture

You can share a picture by sending it to friends or posting it in a Picasa web album.

1. Touch the picture you want to share then touch **Menu**.
2. Touch **Share**.
3. In the menu that opens, touch the application to use to share the selected picture.
4. Enter the necessary information and share it.

To delete a picture

You can delete a picture from your microSD card and internal memory.

1. Touch the picture you want to delete then touch **Menu**.
2. Touch **Delete**, then touch **Confirm Delete** in the dialog box that opens.

Working with Videos

Use the **Gallery** application to play videos that you've taken with the **Camera** application and to share them with friends.

To play videos

- ▶ Open a Gallery album and touch a video.




The video plays in the orientation you recorded it in.






- ▶ Touch the screen while the video is playing to view the playback controls.

To share a video

You can share your videos in a variety of ways, including sending it by email or multimedia message (MMS), or via a Bluetooth device. You even have the option to share your videos publicly by uploading it to the YouTube™ website.

1. Touch the **Applications Key**  > **Gallery** , then touch an album.
2. While viewing an album, touch the **Menu Key** .
3. Touch to checkmark the videos you wish to share.
4. Touch **Share**.
5. In the menu that opens, touch the application you would like to use to share the selected videos.
6. Enter the necessary information and share it.

To delete a video

1. Touch the **Applications Key**  > **Gallery** , then select an album.
2. While viewing an album, touch the **Menu Key** .
3. Touch to checkmark the videos you want to delete.
4. Touch **Delete**.
5. Touch **Confirm Delete**.

Market

Android Market allows you to browse and search for free and paid applications.

To open the Android Market application


- ▶ Touch the **Applications Key**  > **Market**  or touch the **Market** icon  on the Home screen.

When you open **Android Market** application for the first time, you must read and accept the terms of service to continue.



To get help with Android Market

Android Market Help web pages are available from all Android Market screens.

- ▶ Touch the **Menu Key**  > **Help**.

The **MetroWEB** application opens to the Android Market Help page, with links to many help topics.

To browse for applications

You can browse applications by category and sort them in different ways.

1. On the Android Market home page, touch a category. These are displayed as tabs and include **Apps**, **Music**, **Books**, **Movies**, and **Games**.
2. Scroll to the left and right to view and explore sub-categories.




3. Touch an application to open its details screen.

To open a screen with details about an application

- ▶ At any time while browsing Android Market, touch an application to open its details screen.


The Application details screens include a description, ratings, comments, and related information about the application. From this screen, you can download, install, uninstall, and rate the application, and more.

To search for applications

1. Touch  at the top right of the screen or touch the **Search Key** .
2. Enter all or part of an application's name or description, or the developer's name you want to search for then touch .
3. Touch a search result to open that application's details screen.

To return to the Android Market home screen

You can return directly to the Android Market home screen from most other screens in Android Market.

- ▶ Touch the **Market** icon  at the top left corner the screen.

Downloading and Installing Applications

When you find an application you want, you can install it on your phone.

To download and install an application

NOTE Before you can download a paid application, you must set up a billing arrangement.

1. Find an application you want and open its details screen.

In the application's details screen, you can read more about the application, including its cost, overall rating, and comments by users. Scroll down to the Developer Info section to view more applications by this developer, visit the developer's website, or send the developer an email message.



2. Touch **Download** or **Install** (for free applications) or the **Price** button (for paid applications).

If the application requires access to your data or control of any functions on your phone, Market tells you what the application can access.

WARNING!

Read this screen carefully. Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you **accept** on this screen, you are responsible for the results of using this item on your phone.

3. If you agree to the application's access requirements, touch **Accept & download** (for free applications) or **Accept & buy** (for paid applications).

- ▶ If you selected a paid application, you're redirected to the Google™ Checkout screen to pay for the application before it's downloaded to your phone.
- ▶ If you selected a free application (or after touching **Accept & buy** in Google Checkout), you receive a series of notifications as the application is downloaded and then installed on your phone.

When the application is installed, you can touch the notification to open the application or open it by touching its icon in the Applications screen.

You have 15 minutes to try out an application and, if you decide you don't want it, to uninstall it for a refund.

If you have another Android™ phone, you can download a paid application to that phone using the same Android Market account, at no additional charge.

To create a Google Checkout account

You must have a Google Checkout account associated with your Google Account to purchase items from Android Market.

- ▶ On your computer, go to <http://checkout.google.com> to establish a Google Checkout account.

OR

- ▶ The first time you use your phone to buy an item from Android Market, you're prompted to enter your billing information to set up a Google Checkout account.

WARNING!

When you've used Google Checkout once to purchase an application from Android Market, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission.

Music

Transferring Music Files to Your Phone

The **Music** application plays audio files that are stored on your phone's microSD card. Copy audio files from your computer onto the microSD card before you open the **Music** application. The **Music** application supports audio files in numerous formats, including MP3, M4A (DRM-free AAC files, from iTunes®), AMR, MIDI, and OGG Vorbis.

NOTE The LG USB driver needs to be installed on your PC before connecting your phone to transfer music.

To copy music files onto the phone's microSD card

1. Connect the phone to your computer with a USB cable. If the default connection mode is not set to Mass Storage, open the Notifications panel and touch **USB connected > Mass storage > Done**. Your computer will prompt you with different actions to take. Choose to open the folder to view files.
 - ▶ Use the computer to organize your audio files then create a music folder at the top level of the microSD card.
- NOTE** The Connect 4G can use a removable microSD card to store user content, such as photos, videos, and voice recordings.
- If the USB connection mode is set to Mass Storage when connecting the phone to a PC via USB cable, one removable disk drive will be displayed on your PC, one for the internal memory and another for the microSD card (if installed). You can copy files to and from both disk drives."
2. Use the computer to copy music and other audio files into the folder that you created on the microSD card.
 - ▶ You can use subfolders on the microSD card to organize your music files or you can simply copy the audio files to the top level of the microSD card.
 3. To disconnect your phone, open the **Notifications panel** and touch **USB connected > Charge only**. Then disconnect the USB cable from the phone.

Opening Music and Working with Your Library

After you've copied some music onto your microSD card you can open the **Music** application and see your library of music files, sorted in one of four ways.

To open Music and view your music library

- ▶ Touch the **Applications Key**  > **Music** .


The **Music** application searches the microSD card for music files you copied to your card, then builds a catalog of your music based on the information contained in each music file. This can take from a few seconds to several minutes, depending on how many files you have copied onto the microSD card.

When the catalog is complete, the Music library screen opens with tabs that you can touch to view your music library organized by Songs, Albums, Artists, Playlists, and Folders.



While playing the music You can return to the main Library screen in the **Music** application by touching the **Menu Key**  > **Library**.

To search for music in your library

1. Open the main Library screen then touch the **Search Key** .
2. Start typing the name of the artist, album, or track you're looking for. Matching songs are displayed in the list below the search box.
3. Touch a matching song to play it or touch a matching album or artist to view a list of associated songs.

To delete a song from the microSD card

You can delete music from the storage card.

- ▶ Touch and hold a song in a library list. In the Context menu that opens, touch **Delete** > **OK**.

OR

- ▶ On the Playback screen, touch the **Menu Key**  > **Delete** > **OK**.

You can also delete music files from the microSD card when your phone is connected to the computer. To do this, connect your device as Mass storage, browse for the music files you wish to delete and delete them from the folder.


Playing Music

You can listen to music using the phone's built-in speaker, through a wired headset, or through a wireless Bluetooth stereo headset that supports the A2DP profile.

To play music

- ▶ Touch a song in your library to listen to it.

OR

- ▶ While viewing a list of tracks in an album, touch the **Menu Key**  > **Play all**.

The Playback screen opens and the song you touched or the first song in the album or other playlist starts to play. Your music continues to play even when you switch applications or receive a phone call. The tracks in the current playlist play in order until it reaches the end, then stops. If you choose a repeat option, playback only stops when you stop it.











You can return to the Playback screen from most other screens in the **Music** application by touching the currently playing song at the bottom of the screen.

You can return to the Playback screen from any other application by opening the Notifications panel and touching the ongoing music notification.

To control playback

The Playback screen contains several icons that you can touch to control the playback of songs, albums, and playlists:

	Touch to pause playback.
	Touch to resume playback.
	Touch to skip to the next track in the album, playlist, or shuffle.
	Touch to restart the current track or skip to the previous track in the album, playlist, or shuffle.
	Touch to open the current playlist.
	Touch to play the current playlist in shuffle mode (tracks are played in random order).
	Touch to set repeat mode to repeating all songs, repeat current song, or repeat off.
	Touch to set the Dolby Mobile setting, which enhances your music listening.




To control playback volume

In addition to the techniques for setting media volume, you can control the volume of music in the **Music** application.

- ▶ Press the phone's up/down **Volume Keys**.
A panel opens to show the current media volume.
Some headsets include their own volume controls or ways to pause and resume playback or to skip tracks.

To play your tracks in a party shuffle

When you turn on Party Shuffle, the **Music** application plays tracks from your microSD card in random order until Party Shuffle is turned off.

- ▶ In a Library screen, touch the **Menu Key**  > **Party shuffle**.
The **Music** application creates a playlist of tracks selected randomly from your microSD card and starts playing them.
- ▶ View the current playlist that Party Shuffle is playing by touching the **Playlist icon**  on the Playback screen.
- ▶ Add a track to the end of the Party Shuffle playlist by touching and holding the name of a track in your library. In the menu that opens, touch **Add to playlist** > **Current playlist**.
- ▶ Stop Party Shuffle by touching the **Menu Key**  > **Party shuffle off**.


To customize settings in the Playback or a Library screen

From the Playback screen, touch the **Menu Key**  > **Settings**. When viewing the Library, touch the **Menu Key**  > **Settings**.

- ▶ **Show notification** Shows the controller on the notification bar.
- ▶ **Sleep timer** Turns off the player automatically. Touch the following options to apply sleep timer: **Off**, **After 10 minutes**, **After 20 minutes**, **After 30 minutes**, **After 1 hour**, **After 2 hours**
- ▶ **Dolby Mobile** Applies the following sound effect (Dolby) options: **Off**, **Neutral**, **Expansive**, **Bass Boost**, **Treble Boost**, **Vocal Boost**

Landscape view

When holding the phone in landscape orientation, the **Music** application screen changes to fit the screen as shown below:

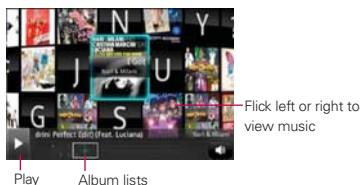

To use a song as a ringtone

You can use a song as your phone ringtone, in place of one of the ringtones that come with the phone.

- ▶ Touch and hold a song in a Library list. In the Context menu that opens, touch **Use as ringtone**.

OR

- ▶ On the Playback screen, touch the **Menu Key**  > **More** > **Use as ringtone**.



Working with Playlists

You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.


To create a playlist

1. When viewing a list of songs in the Library, touch and hold the first song you want to add to the new playlist.
2. Touch **Add to playlist**.
3. Touch **New playlist**.
4. Enter a name for the playlist and touch **Save**.

The new playlist is added to the Playlist library.

You can also add the song that is playing in the Playback screen as the first song in a playlist by touching the **Menu Key**  > **Add to playlist** or touching  > **Save as playlist** to save all the songs in the current playlist as a playlist.

To add a song to a playlist

1. While viewing a list of tracks in the Library, touch and hold a song to display a Context menu.
2. Touch **Add to playlist**.
3. Touch the name of the playlist you want to add the song to.
You can also add the song that is playing in the Playback screen to a playlist by pressing the **Menu Key**  > **Add to playlist**.

To remove a song from a playlist

1. Open a playlist.
2. Touch and hold the song you want to remove then touch **Remove**.



To delete or rename a playlist

1. Open the Playlist library.
2. Touch and hold the playlist to display the Context menu then touch **Delete** or **Rename**.

SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.






To turn SmartShare on and allow sharing contents

1. Touch the **Applications Key**  > **SmartShare**.
2. Touch the **Menu Key**  > **Settings**.
3. Touch **Discoverable** to allow your device to be detected by other devices.
 - ▶ Touch **Always accept request** if you would like to automatically accept sharing requests from other devices.
 - ▶ Touch **Receive files** if you would like to automatically allow upload files to my phone from other devices.
4. Under the My shared contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos**, and **Music**.
5. **SmartShare** is now activated and ready to share contents.

To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC)

NOTE Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC)

1. Touch the **Applications Key**  > **SmartShare** .
2. Touch the top right button  and select the device from the device renderer list.
3. Touch the top left button  and select the device from the remote content library.
4. You can browse the content library.
5. Touch and hold a content thumbnail and touch **Play** or touch the **Menu Key**  > **Play**.

To share contents from your phone to your renderer device(e.g. TV)



NOTE Make sure that your renderer device is properly configured

1. While browsing your pictures or videos using the **Gallery** application, touch and hold a file to select files. Then you will be able to select multiple files to be shared.
2. Touch **Share > SmartShare**
3. **SmartShare** is automatically launched with the selected files
4. Select the device from renderer device list to play the files.

NOTE Follow the similar steps to use the Music player , Camera and Video player to share contents



- NOTICE**
- Check that your device is connected with your home network using Wi-Fi connection to use this application
 - Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list
 - Your device might not be able to play some contents

To download contents from remote content library

1. Touch the **Applications Key**  **> SmartShare**.
2. Touch the top left button  and select the device from the remote content library.
3. You can browse the content library.
4. Touch and hold a content thumbnail and then touch **Download**.

To upload contents from my phone to remote content library

NOTE Make sure that SD card is correctly mounted and the **Receive files** option in Settings menu is checked.

1. Touch the **Applications Key**  > **SmartShare**.
2. Touch the top left button  and select **My phone**.
3. You can browse the content library.
4. Touch and hold a content thumbnail and then touch **Upload**.
5. Select a device from the remote content library to upload files.



NOTICE • Some DLNA enabled devices do not support the DMS upload functionality and will not be uploaded.

Video player

You can play a wide variety of videos using the Video player. The video player supports the following file formats: EVDop, mp4, avi, wmv, mov, mkv (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX/XviD).





NOTE Supported file formats are dependent on the software version of the phone.

To open the Video player application

1. Touch the **Applications Key**  > **Video Player** .
2. Touch the video you want to play.

Playback controls

Touch the screen to display the playback controls. The following options allow you to control the video playback:

	Pause playback.
	Play a video file.
	Touch to play the next video file. Touch and hold to fast-forward playback.
	Touch to start playing the video from the beginning. Touch and hold to rewind playback. To return to the previously played video, touch it twice.



Touch to set the Dolby Mobile setting, which enhances your music listening.

Video player options

The following options are available from the Video player main screen:

- ▶ **Delete** Touch the **Menu Key** > **Delete**, then touch each video to delete. When all files to be deleted have been checkmarked, touch **Delete** > **OK** to confirm.
- ▶ **DivX(R) VOD** Touch the **Menu Key** > **DivX(R) VOD** to view the DivX registration code for your device.

NOTE The screen capture function on the Video player is not supported by your LG Connect 4G.

YouTube™

Opening YouTube and Watching Videos

You can browse, search for, view, upload, and rank YouTube videos on your phone with the **YouTube** application.

To open the YouTube application

- ▶ Touch the **Applications Key** > **YouTube** .



Touch a video to watch it or touch the **Menu Key** to take other actions on the video.



To watch and interact with YouTube videos





- ▶ Touch a video to play it.



- ▶ Touch the screen to view the Playback controls. You can pause and play the video or drag the slider to the point in the video you want to watch.
- ▶ Touch the **Back Key**  to stop playback and return to the videos list.
- ▶ Touch the **Menu Key**  for the following options: **Home**, **Browse**, **Search**, **My Channel**, **Upload**, and **Settings**.

For details about these features, visit the YouTube website.

To search for videos




1. At the top of the main YouTube screen, touch  or touch the **Search Key** .
2. Enter the text to search for or touch the **Microphone icon**  to search by voice.
3. Touch a suggestion below the search box or touch the **Search icon** .
4. Scroll through the search results and touch a video to watch it.

To share your videos on YouTube

You can record and share a video using the **YouTube** application. First, you must create a YouTube account and sign into it on your phone.

You can also share the videos you record with the **Camera** application by uploading them to YouTube.

1. Touch  at the top right of main YouTube screen.

2. If you want to set any configurations manually, touch the screen to open the video camera settings.
3. Point the lens to frame the scene where you want to start.
4. Touch  to start recording.
5. Touch  to stop recording.
6. Touch .





The YouTube Upload details screen is displayed.

7. Enter a title, description, and tags for your video.
8. If you want to share the video with everyone, touch the **Privacy** field and touch **Public**. If not touch **Private** or **Unlisted**.
9. Touch **Upload**.




Voice Recorder

The **Voice Recorder** application records audible files for you to use in a variety of ways. Use them simply to remind you about something you don't want to forget (like a grocery list) or record sound effects that you can attach to a message or set as a ringtone for calls.




Record a Voice Memo

1. Touch the **Applications Key**  > **Voice Recorder** .
2. Touch  to start recording.
3. Speak into the microphone.
4. When you're finished, touch .

The recording is automatically saved to your recordings list.





- ▶ Touch  to listen to your recording.
- ▶ Touch  to record a new voice memo.
- ▶ Touch  to view your list of recordings.

Play a Voice Memo

1. Touch the **Applications Key**  > **Voice Recorder** .
2. Touch .
3. Touch the voice memo you wish to play.

NOTE You can send the voice memo to others by touching and holding a voice memo and touching **Share**.

Managing your Voice Memos

1. Touch the **Applications Key**  > **Voice Recorder** .
2. Touch .
3. Touch the **Menu Key**  and choose from the following options:
 - ▶ Touch **Sort by** to choose how to display the list, either by date or by name.
 - ▶ Touch **Share** to send via **Bluetooth**, **Email**, **Gmail**, **mail@metro**, **Messaging**, **Wi-Fi Cast**, or any other downloaded application that supports sharing.
 - ▶ Touch **Delete** and select the recordings you wish to delete. Then touch **Delete** > **OK**.
 - ▶ Touch **Delete all** > **OK** to delete all of your recordings.

Calendar

Viewing Your Calendar and Events

Open the **Calendar** application to view events you've created or that others have invited you to.

When you first set up your phone, you configured it to use an existing Google Account or you created a new account. The first time you open the **Calendar** application on your phone, it displays any existing calendar events from your Google Account on the web.

You can add additional accounts with Google Calendar or Microsoft Exchange calendars to your phone, and configure them to display in Calendar.

When you first set up Calendar to synchronize events on your phone, it includes events from the previous month through one year in the future. Subsequently, Calendar keeps a year's worth of future events synchronized between your phone and the web, plus any later events that you add to your calendar using Calendar on your phone.

To open the Calendar application

- ▶ Touch the **Applications Key**  > **Calendar** .

Events from each account you've added to your phone and configured to synchronize calendars is displayed in Calendar.

Events from each calendar are displayed in a different color.

To change your calendar view

- ▶ Touch the **Agenda**, **Day**, **Week**, or **Month** tabs above the calendar.

Each view displays the events in your calendar for the period of time specified.

- ▶ To view more information about an event in Agenda, Day, or Week view, touch the event.
- ▶ To view the events of a day in Month view, touch a day. The event will be displayed below the calendar. Touch the event to view its details.

Working in Agenda View

Agenda view is a list of your events in chronological order. All-day and multi-day events are listed at the start of each day.

To switch to Agenda view

- ▶ Touch the **Agenda** tab above the calendar.



To learn more about events in Agenda view

- ▶ Touch an event.

A screen with details about the event opens.

Working in Day View

Day view displays a chart of the events of one day, in a table of one-hour rows. The current time will be highlighted. All-day and multi-day events are displayed at the top. Part of the title of each event is displayed in the rows that correspond to when it occurs.

To switch to Day view

- ▶ Touch the **Day** tab above the calendar.



To learn more about events in Day view

- ▶ Touch an event to view its details.
- ▶ Touch and hold an event to open a Context menu to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

To add an event in Day view

- ▶ Touch and hold an empty spot or an event in the day to open a Context menu then touch **New event** to create a new event at that time.

Working in Week View

Week view displays a chart of the events of one week. All-day and multi-day events are displayed at the top.

To switch to Week view

- ▶ Touch the **Week** tab above the calendar.



To learn more about events in Week view

- ▶ Touch an event to view its details.
- ▶ Touch and hold an event to open a Context menu to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

To add an event in Week view

- ▶ Touch and hold an empty spot or an event in the week to open a Context menu then touch **New event** to create a new event at that time.

Working in Month View

Month view displays a chart of the events of the month. Segments of each day with scheduled events are green in the day's vertical bar.

To switch to Month view

- ▶ Touch the **Month** tab above the calendar.



To view more information about events in Month view

- ▶ Touch a day to display the events below the calendar. You can then touch the event to view more information about it.

Viewing Event Details


You can view more information about an event in a number of ways, depending on the current view.

To view information about an event

- ▶ In Agenda, Day, or Week view, touch an event to view its details.
- ▶ In Month view, touch a day to display the events below the calendar. Then touch an event to view its details.



Touch the **Attending** field to set or change whether you'll attend the event. Other attendees' status is displayed below your own.


Touch the **Reminders** field to change reminder settings, or touch  to add a reminder.

If you have permission to change events, you can touch **Edit** at the bottom of the screen.

Creating an Event

You can use the **Calendar** application on your phone to create events that appear on your phone and in Google Calendar on the web.

To create an event


1. In any Calendar view, touch the **Menu Key**  > **New event** to open an Event details screen for a new event.

You can also touch and hold a spot in Day, Week, or Month view. In the Context menu that opens, touch **New event** to open the Event details screen with that day and time already entered.

2. Add details about the event.



Enter a name, time, and optional additional details about the event.

If you have more than one calendar, you can choose the calendar to which to add the event.

Touch  to add more reminders.

3. Invite guests to the event.

In the **Guests** field, enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas (,). If the people to whom you send invitations use Google Calendar, they'll receive an invitation in Calendar and by email.

4. Touch the **Menu Key**  > **Show extra options**  to add details about the event.

5. Touch **Save** to save the event.

The event is added to your calendar.



Editing or deleting an event

You can edit or delete an event that you created on the phone or on the web. You can also edit or delete events created by others, if they have given you permission.

To edit an event

1. Touch an event to view its details.
2. Touch **Edit** at the bottom of the screen.

The Event Details screen opens.

Touch the **Menu Key**  > **Show extra options**  to add or edit additional event details.

3. Make your changes to the event.
4. Touch **Save** to save the event.

To delete an event

There are a number of ways to delete an event.


- ▶ In Agenda view, touch an event to view its details. Then touch **Delete event** at the bottom of the screen and **OK** to confirm.
- ▶ In Day or Week view, touch and hold the event > **Delete event** > **OK**.


If the event repeats, you're asked whether you want to delete just that occurrence, this and all future occurrences, or all past and future occurrences in your Calendar.

Setting an Event Reminder

You can set one or more reminders for an event, whether or not you created the event or have permission to edit its other details.

To set an event reminder

1. Touch an event to view its details.
2. If no reminder is set, touch  to automatically add a reminder for 10 minutes before the event.


If a reminder is already set, you can add an additional reminder by touching .

3. Touch the **Reminders** field and touch the length of time before the event that you want to be reminded of it.

When the time comes, you receive a notification about the event.

You can use Google Calendar on the web to configure additional reminder settings.

To delete an event reminder

1. Touch an event to view its details.
2. Touch .

Calculator

Allows you to perform simple mathematical calculations.

To open and use the Calculator

- ▶ Touch the **Applications Key**  > **Calculator** .



- ▶ Enter numbers and arithmetic operators on the Basic panel.
- ▶ Drag the Basic panel to the left to open the Advanced panel.
- ▶ Touch and hold the Calculator's display to open a Context menu where you can copy what you've entered and access other tools.
- ▶ Touch **Clear** to delete the last number or operator you entered. Touch and hold **Clear** to delete all of the entered information.

Alarm/Clock

You use the **Alarm/Clock** application to access the Alarm, Timer, World Clock and Stopwatch functions.

To open the Clock application

- ▶ Touch the **Applications Key**  > **Alarm/Clock** .

Setting Alarms

You can set an alarm by modifying an existing alarm or by adding a new one.

To set an alarm

1. Touch **New alarm** or touch an existing alarm to change its time and other attributes to modify it.



2. Enter the alarm time manually by scrolling the **Hour** and **Minute** fields.
 - ▶ Scroll **AM** or **PM** to set for morning or afternoon.
3. Touch the day(s) when you want the alarm to sound in the **Repeat** field. If you don't touch the Repeat setting, the alarm sounds only the one day you set it to.
4. Touch **Snooze duration** to set the amount of time to wait before sounding the alarm again if it is not dismissed.
5. Touch **Vibration** to checkmark the setting and have the phone vibrate, in addition to playing the ringtone.
6. Touch **Alarm tone** to select a ringtone for the alarm, then touch **OK**. The ringtone plays briefly when you select it.
7. Touch **Puzzle lock** to checkmark the setting, which requires you to wake up enough to solve a simple puzzle to dismiss the alarm.
8. Touch **Memo** to enter a name for the alarm.
9. When you're finished, touch **Save**.

Setting the Timer

The Timer can be used to alert you with an audible signal when a set amount of time has passed.

1. Open the **Alarm/Clock** application and touch the **Timer** tab.
2. Set the time by scrolling the **Hour**, **Minute** or **Second** fields.
3. Touch **Vibration** to checkmark the setting and have the phone vibrate when the set time expires.
4. Touch **Alert tone** to select an alert tone for the timer, then touch **OK**.
5. Touch **Start** to begin the time countdown.

Setting the World Clock

Allows you to determine the current time in another time zone or city.

1. Open the **Alarm/Clock** application and touch the **World Clock** tab.
2. Touch **New city** and search through the available cities for the one you want.

Using the Stopwatch

This feature allows you to use your phone as a Stopwatch.

1. Open the **Alarm/Clock** application and touch the **Stopwatch** tab.
2. Touch **Start** to start timing and touch **Stop** to stop the time.
You can use the Lap function by touching **Lap** to record up to 100 lap times.
3. Touch **Reset** or **Resume**.

Polaris Office

Polaris Office 3.0 is a professional Mobile Office Solution which enables users to conveniently view or edit various types of office documents including Word, Excel, and PowerPoint file extensions anywhere, anytime, using their mobile device.

Managing Files

Polaris Office 3.0 provides mobile users with the convenience of managing files including copying, moving, and deleting files and folders right on the device.

Viewing Files

Mobile users now have the convenience of being able to view a wide variety of file types including Microsoft Office documents, Adobe PDF right on their mobile device. When viewing these documents using Polaris Office 3.0, the objects and layout remain unchanged from their original documents.

Editing Microsoft Office Files

Mobile users also have the convenience of being able to create, edit, and save Word, Excel and PowerPoint documents on their mobile device. Saved documents generated or modified using Polaris Office 3.0, are not distorted from the originals.

Settings

The **Settings** application contains most of the tools for customizing and configuring your phone. All of the settings in the **Settings** menu are described in this section.

To open Settings


- ▶ From the Home screen, touch the **Menu Key**  > **Settings** .

OR

- ▶ Touch the **Applications Key**  > **Settings** .

Changing MetroWEB settings

You can configure a number of MetroWEB settings, including several that you can use to manage your privacy.

- ▶ To open the MetroWEB settings screen, touch the **Menu Key**  from MetroWEB and touch **More > Settings**.

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones.

Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

*American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- For those host devices that utilize a USB port as a charging source, check the host device's user manual for the USB-IF logo or some other means to ensure that it has completed the USB-IF compliance program.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/ standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.

- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- Do not use your device for long periods of time while a part of your body is making direct contact with it. The temperature of the product may increase during normal operation and this may result in harming or burning your skin.

Caution:

Avoid potential hearing loss.

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: www.audiology.org

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet: <http://www.nidcd.nih.gov/health/hearing>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

Internet:

<http://www.cdc.gov/niosh/topics/noise/default.html>

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data does not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect, if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA

will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/cgb/cellular.html>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same

phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly

precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (<http://www.fda.gov>), under “C” in the subject index, select Cell Phones > Research.

Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety/>)

International Commission on Nonionizing Radiation Protection (<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)

Health Protection Agency (<http://www.hpa.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are

reading an address book or business card, or writing a “to-do” list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip - dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a “Good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This model phone meets the Government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station

antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.39 inches (1.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.39 inches (1.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.39 inches (1.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 0.77 W/kg and when worn on the body, as described in this user's manual, is 0.95 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely

to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the example to the left, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their

hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you’re talking on a cell phone, it’s recommended that you turn the BT (Bluetooth) mode off for HAC.

According to HAC policy(KDB 285076), we state this handset has not been rated for hearing aid compatibility with respect to the WiFi capability.

For information about hearing aids and digital wireless phones

Wireless Phones and Hearing Aid Accessibility

<http://www.accesswireless.org/Home.aspx>

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.


DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.


Dolby Mobile License notice









Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.



Category	Sub-Category	Question	Answer
BT	Bluetooth Devices	What are the functions available via Bluetooth?	Connecting to Stereo/Mono Headset, Car Kit, FTP server is possible. When it's connected to another phone via Bluetooth, you can receive Contacts data.
BT	Bluetooth Headset	If my Bluetooth headset is connected, can I listen to my music through my 3.5mm wired headphones?	When a Bluetooth headset is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
Data	Contacts Backup	How can I back up Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
Data	Synchronization	Is it possible to set up one-way-sync with Gmail?	Only two-way synchronization is available.
Data	Synchronization	Is it possible to synchronize all the Email folders?	The Inbox is automatically synchronized. You can view other folders by touching the Menu Key  and selecting Folders .
Data	Synchronization	Is it possible to transfer Contacts data from a feature phone to an Android™ phone?	Yes, if your contacts can be extracted into a .CSV file. How to transfer: 1. Create "CSV" file with the contacts on your current phone (you may be able to use the PC suite software provided by LGE). 2. Log into Gmail with your PC. 3. Click Contacts . 4. Click Import . 5. Attach the ".CSV" file. 6. Your contacts will then be synchronized between your Android phone and Gmail.

Category	Sub-Category	Question	Answer
Google™ Service	Gmail Log-In	Should I have to log into Gmail whenever I want to access Gmail?	Once you log into Gmail, you don't need to log in Gmail again.
Google Service	Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
Phone Function	YouTube™	Is it possible to play YouTube videos?	Yes, YouTube videos are supported but may have to be viewed through the YouTube application (and not the Browser).
Phone Function	Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
Phone Function	Ringtone	Is there a file size limitation for when I want to use a .MP3 file as a ringtone?	There is no file size limitation.
Phone Function	Message Time	My phone does not display the time of receipt for messages older than 24 hours. How can I change this?	You will only be able to see the times for messages received the same day.
Phone Function	microSD Card	Is it possible to save applications to the microSD card?	<p>Some applications can be saved to the microSD card.</p> <ol style="list-style-type: none"> 1. From the Home screen, touch the Menu Key  > Settings > Applications > Manage applications. 2. Touch an application > Move to SD card.

Category	Sub-Category	Question	Answer
Phone Function	microSD Card	What is the maximum supported size for a memory card?	32GB memory cards are compatible.
Phone Function	Navigation	Is it possible to install another navigation application on my phone?	Any application that is available on Android Market™ and is compatible with the hardware can be installed and used.
Phone Function	Synchronization	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (Company Email Server) contacts can be synchronized.
Phone Function	Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact with the Wait and Pause functions saved into the number, you will not be able to use those features. You will need to re-save each number.</p> <p>How to re-save numbers with Wait and Pause:</p> <ol style="list-style-type: none"> 1. From the Home screen, touch the Phone Key . 2. Dial the number, then touch the Menu Key . 3. Touch Add 2-sec pause or Add wait.
Phone Function	Security	What are the phone's security functions?	You are able to set the phone to require the entry of an unlock sequence (pattern, PIN, or password) before the phone can be accessed or used.
Phone Function	Unlock Pattern	What should I do if I forget my Unlock Pattern?	After attempting the Unlock Pattern 5 times, you can touch the Forget Pattern? option and use your Google Account information to unlock your phone.

Category	Sub-Category	Question	Answer
Phone Function	Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> 1. From the Home screen, touch the Menu Key . 2. Touch Settings > Location & security. 3. Touch Set up screen lock (under the Screen unlock section of the settings). 4. Touch Pattern. The first time you do this, a short tutorial about creating an unlock pattern appears. 5. Set up by drawing your pattern once > Continue, draw again > Confirm.
Phone Function	Speed Dial	Is Speed Dialing supported?	<p>Yes. You can set Speed Dials as well as save a contact directly on your Home screen.</p> <p>To set a Speed Dial:</p> <ol style="list-style-type: none"> 1. Open the Contacts application, then touch the contact you want. 2. Touch the Menu Key  > Set speed dial. 3. Touch the phone number you want, then touch the Speed Dial to set. <p>To set a Direct Dial shortcut to your Home screen:</p> <ol style="list-style-type: none"> 1. From the Home screen, touch the Menu Key  > Add. 2. Touch Shortcuts > Direct Dial. 3. Select a contact from your Contacts List.
Phone Function	Memory	Will I know when my memory is full?	Yes, you will receive a notification.
Phone Function	Language Support	Is it possible to change the language?	<p>The phone has multi-lingual capabilities.</p> <p>To change the language:</p> <ol style="list-style-type: none"> 1. From the Home screen, touch the Menu Key  > Settings. 2. Touch Language & keyboard > Select language. 3. Touch the desired language.

Category	Sub-Category	Question	Answer
Phone Function	Language Support	Which languages are supported when using Android Market?	The Market application supports English and Spanish. Third party applications may not support all languages.
Phone Function	VPN	How do I set up a VPN?	VPN access configuration is different according to each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.
Phone Function	Screen time out	My screen turns off after only 30 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> 1. From the Home screen, touch the Menu Key . 2. Touch Settings > Display > Screen timeout. 3. Touch the preferred screen backlight timeout time.
Phone Function	Haptic feedback	When I dial a number, the phone still vibrates. How do I turn this off?	<ol style="list-style-type: none"> 1. From the Home screen, touch the Menu Key . 2. Touch Settings > Sound. 3. Touch Haptic feedback to remove the checkmark and disable the function.
Phone Function	Wi-Fi & 4G	When Wi-Fi and 4G are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, use the 4G or Wi-Fi icon at the top of your screen.</p>
Phone Function	Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the trash can icon appears at the bottom-center of the screen. Then, without lifting your finger, drag the icon to the trash can.




Category	Sub-Category	Question	Answer
Phone Function	Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> 1. From the Home screen, touch the Menu Key . 2. Touch Settings > Applications > Manage applications. 3. Touch the application > Uninstall.
Phone Function	Camera	My phone's camera does not take pictures and says "Mount your external SD card." Why doesn't it work?	<p>A microSD card must be inserted in order to use the phone's camera.</p> <p>Verify that the microSD card is mounted on the device.</p> <p>Touch the Menu Key  > Settings > Storage > Mount SD card</p>
Phone Function	Alarm	Can I use music files for my alarm?	<p>Yes. After saving a music file as a ringtone, you can use it for your alarm.</p> <ol style="list-style-type: none"> 1. Touch and hold a song in a library list. In the menu that opens, touch Use as phone ringtone. 2. In an alarm clock setting screen, select the music as a ringtone.
Phone Function	Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Phone Function	Alarm	If my Ringer Volume is set to Off or Vibrate , will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.
Phone Spec	Battery Time	What is the maximum amount of time my phone's battery will last before I need to recharge it?	<p>Talk time : Approx. 455 mins</p> <p>Standby : Approx. 20 days</p>
Phone Spec	Band	Which wireless bands are supported by the phone?	Your phone is able to operate on the 800MHz, 1900MHz, and AWS bands.

Category	Sub-Category	Question	Answer
Recovery Solution	Factory Reset	How can I perform a factory reset if I can't access the phone's setting menu?	<p>How to perform a factory reset:</p> <ol style="list-style-type: none"> 1. Turn the power off. 2. Press and hold the following keys at the same time: Power/Lock Key + the down Volume Key. 3. Release the Power/Lock Key and the volume keys when you see the screen message "Permanently Erase User Data & Reset Settings? Press the Power key to confirm and any other key to cancel." The first message will be displayed in 10 to 12 seconds. 4. Press the Power/Lock Key to confirm (or press any other key to cancel). When you press the Power/Lock Key to confirm, a pop-up appears asking "Are you sure you want to continue with erase?". 5. Press the Power/Lock Key and your phone will be restored to the factory settings. To cancel, press any other key. <p>Attention: If a factory reset is performed, all installed applications and user data will be erased. Please remember to back up any important data before performing a factory reset.</p>
	Battery installing	Phone locked-up and does not function	Remove the battery and install it to restart your phone again. (similar to how you may restart your PC/ computer).
	Power Reset		In the case of a malfunction or lock up error, press and hold the Power/Lock Key for 8 seconds to reset the phone.

This is a step-by-step guide for frequently asked questions. If you run into a problem or are having trouble with a feature, take a look at this section before you contact the Customer Information Center. Thank you.



Contacts

How can I add contacts if I don't have a microSD card inserted or a Google Account?



1. From the Home screen, touch the **Contacts Key**  from the Quick Keys bar.
2. Touch the **Menu Key**  > **New Contact**.
3. Enter the contact's name.
4. Touch a category of contact information, such as Phone or Email, to enter any relevant information about your contact.
5. Touch a category's plus button  to add more than one entry for that category.
6. Touch the Picture icon to select a picture to display next to the name in your list of contacts and in other applications.
7. When you're finished, touch the **Save** button.

Can I import contacts to my LG Connect 4G?



Yes. If you have .vcf files stored on a microSD card, you can import those to your phone.

1. From the Home screen, touch the **Contacts Key**  from the Quick Keys bar.
2. Touch the **Menu Key**  > **More** > **Import/Export**.
3. Touch **Import from SD card**.
4. If you have more than one account on your phone, touch the account into which you want to import the contacts.
5. Touch the importing option and then touch **OK**.

I have a Google Account and have a Contacts List for my Gmail account. How can I sync the list with my phone?



1. From the Home screen, touch the **Contacts Key**  from the Quick Keys bar.
2. Touch the **Menu Key**  > **More** > **Accounts**.

OR

1. From the Home screen, touch the **Menu Key**  > **Settings**.
2. Touch **Accounts & sync**.
3. Touch the **Add account** button and touch **Google** to add a Google Account.
4. Read the instruction and touch **Next** button.
5. Touch the **Sign in** button.
6. Enter your username and password, then touch the **Sign in** button.
7. After setting up the Google Account, checkmark **Sync Contacts** and touch the **Finish** button. During sync,  is displayed on the Status Bar.

NOTE To sync contacts with other applications, please follow that application's instructions.

I added contacts to the Contacts list, but they're not displayed. Why?

1. From the Home screen, touch the **Contacts Key**  from the Quick Keys bar.
2. Touch the **Menu Key**  > **More** > **Display options**.
3. Check whether **Only contacts with phones** is selected.



(When selected, a blue checkmark will appear.)

If **Only contacts with phones** is checkmarked, the phone only displays contacts that have phone numbers. Uncheckmark the option.


4. For the contacts synchronized with your Google Account, you need to add a checkmark to **All Other Contacts**.

NOTE Contacts information which have the same name are joined automatically in the Contacts list. When you add an account or add contacts in other ways, such as by exchanging emails, the **Contacts** application attempts to avoid duplication by joining contact information automatically.



How can I separate the grouped contacts?

1. From the Home screen, touch the **Contacts Key**  from the Quick Keys bar.
2. Locate the contact then touch and hold the contact. The Context menu will open.
3. To separate them, touch the **Menu Key**  > **Separate**.
4. To confirm the selection, touch the **OK** button.


How can I sync contacts?

1. From the Home screen, touch the **Menu Key**  > **Settings**.
2. Touch **Accounts & sync**.


OR

1. From the Home screen, touch the **Contacts Key**  from the Quick Keys bar.
2. Touch the **Menu Key**  > **Accounts**.
3. Touch the **Add account** button and touch an account to add.
4. Follow the on-screen steps displayed, depending on the type of account.




NOTE Each account has different sync timing.

Google Accounts allow you to select (with checkmarks) whether or not you want automatic synchronization. You can also touch the **Menu Key**  and touch **Sync now** to manually synchronize data.

How can I check that my data is synchronizing?

1. From the Home screen, touch the **Menu Key**  > **Settings**.
2. Touch **Accounts & sync**.

OR

1. From the Home screen, touch the **Contacts Key**  from the Quick Keys bar.
2. Touch the **Menu Key**  > **More > Accounts**.
3. Under Manage accounts,  is shown.

Email Information

Unable to access your Email on the LG Connect 4G?

You may need to manually set up your account as a POP3 or IMAP4 account.

Why can't I open email attachments?

To view some file types, you must first download the applications (from the Android Market) that can access those file types.

File types supported by the Email application

- Image: JPG/JPEG, BMP, PNG, GIF, WBMP
- Audio: mp3, wma, EVDOp, wav, amr, ogg, midi(mid), imy, aac, m4a
- Video: mp4, wmv, asf, EVDOp, EVDO2, m4v, avi, divx
- Document: MS office 2003, 2007 (doc, xls, ppt, docx, xlsx, pptx), pdf, txt, rtf, zip

Other Email-Related Issues

Why can't I connect to the Mail Server?

If you are unable to connect to the Mail server but other applications are still able to access the data network, you will need to contact the Email server manager.

Why won't the phone open a file that is supposed to be supported by the phone?

If you are unable to open an image, video, audio, or other attached file, it's possible that the file was saved with the wrong file extension.

Why do my Exchange emails only go back a few days?

Exchange accounts set up on your phone will only synchronize for a specific number of days. Check your settings, the options available are: One day, Three days, One week, Two weeks, and One month.

Why do I get a Connection Error message with my Hotmail account?


When the **Email** application is set to check for new email less than every 15 minutes, this has been known to occur.

Supported Email Features

The chart below details which Email account types (EAS, IMAP4, and POP3) support which features.

	EAS (Exchange ActiveSync)	IMAP4	POP3	Notes
Push	Yes	No	No	Push Email is a feature that instantly notifies you when a new email is received by your email server.
Synchronize with mail server	Yes	Yes	No	If you delete an email message on the server, it will also be deleted on the phone, and vice versa. This feature is not supported by POP3 account types.
Contact/ Calendar Sync	Yes	No	No	

How do I sync Facebook/Myspace/Twitter with my phone?

1. From the Home screen, touch the **Menu Key**  > **Settings** > **Accounts & sync**.
2. Touch the **Add Account** button.
3. Touch **Facebook**, **Myspace** or **Twitter**.
4. Enter your Email address and password, then touch the **Log in** button.
5. Select the type of synchronization you want to set up.

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the

applicable limited warranty period.

- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

If you experience any problems with either the Bluetooth headset or the mobile handset, in each case as may be covered by this limited warranty, you need only return the affected device. For example, if a problem exists with the Bluetooth headset, please DO NOT return your mobile handset with the headset. Likewise, if a problem exists with the mobile handset, please DO NOT return the Bluetooth Headset with the handset.

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.