Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential e shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury :

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- During a lightning storm or when the display is to be left unattended for an extended period of time, unplug it from the wall outlet.

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

• Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.


A2

Connecting the Display

• Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

Connecting the stand base

- **1.** Align the hooks on the stand base with the matching slots in the base of the monitor.
- 2. Insert the hooks into slots.

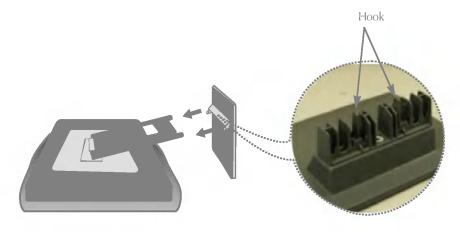

Important


- This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.
- To Remove the Stand Base
 - Do not force to remove the Stand Base, but remove the screws on the back first for your safety.
 - Once you connect the stand base, try not to disconnect it.
- Do not carry the product upside down holding only the stand base. The product may fall and get damaged or injure your foot.

Stand Base

Connecting the Display

Using the Computer


- **1.** Connect the signal cable. When attached, tighten the thumbscrews to secure the connection.
- 2. Connect the power cord into a proper power outlet that is easily accessible and close to the display.

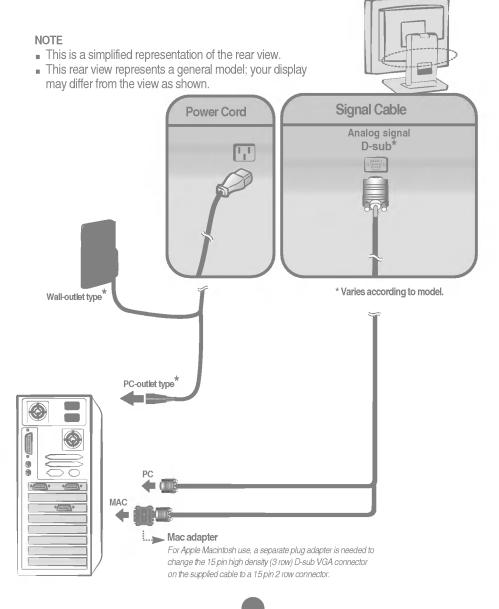

Control Panel Functions

Г

Front Panel Controls

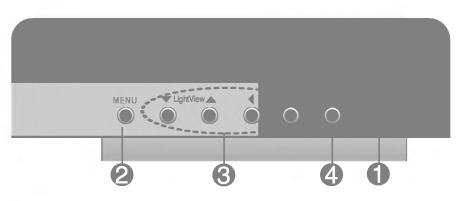

0	Power Button	Use this button to turn the display on or off.
	Power (DPMS) Indicator	This Indicator lights up green when the display operates normally. If the display is in DPM (Energy Saving) mode, this indicator color changes to amber.
2	MENU Button	Use this button to enter or exit the On Screen Display.
3	V ▲ ◀ ► Buttons	Use these buttons to choose or adjust items in the On Screen Display.
4	AUTO/SELECT Button	Use this button to enter a selection in the On Screen Display.

▼ LightView ▲

This function optimizes the brightness, contrast or color value to the surrounding conditions and settings and enables you to enjoy the most suitable picture by adjusting the surroundings (DAY/NIGHT/USER MODE).

- TEXT: For viewing letters
- MOVIE: For viewing movies
- PHOTO: For viewing pictures or the photographs
- USER MODE: This function memorizes the manual adjustment -Brightness, Contrast and Color value on the On Screen Display.



DAY

NIGHT

LISER MODE

TEXT

TEXT

MOVIE PHOTO

< ☆ ►

Bring up Contrast and Brightness adjustment. : ◀ ☆ ► → ▼ ▲ ◀ ► → MENU



When adjusting your display settings, always press the **AUTO/SELECT** button before entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode).

The best display mode is 1024x768.

CONTROLS LOCKED/UNLOCKED

: MENU and 🕨

This function allows you to secure the current control settings, so that they cannot be inadvertently changed. Press and hold the MENU button and ▶ button for 3 seconds: the message **"CONTROLS LOCKED"** appears.

You can unlock the OSD controls at any time by pushing the MENU button and ▶ button for 3 seconds: the message "CONTROLS UNLOCKED" will appear.



Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

To make adjustments in the On Screen Display, follow these steps:

$MENU \longrightarrow \mathbf{V} \blacktriangle \longrightarrow AUTO/SELECT \longrightarrow \mathbf{V} \blacktriangle \blacktriangleleft \blacksquare$	
MENU - AUTO/SELECT	

- 1 Press the MENU Button, then the main menu of the OSD appears.
- 2 To access a control, use the ▼ or ▲ Buttons. When the icon you want becomes highlighted, press the AUTO/ SELECT Button.
- 3 Use the $\bigvee \land \checkmark \checkmark$ **Buttons** to adjust the item to the desired level.
- Accept the changes by pressing the AUTO/SELECT Button.
- 5 Exit the OSD by Pressing the MENU Button.

On Screen Display(OSD) Selection and Adjustment

The following table indicates all the On Screen Display control, adjustment, and setting menus.

- R.A	C!			D-f
BRIGHTNESS	BRIGHTNESS			To adjust the brightness and
CONTRAST	CONTRAST			contrast of the screen
COLOR	PRESET	9300K		To customize the color of the
		6500K		screen
	R/G/B(Us	er Color)		
	GAMMA			
POSITION	V POSITION			To adjust the position of the
	H POSITI	ON		screen
TRACKING	CLOCK			To improve the clarity and
	PHASE			stability of the screen
SETUP	LANGUA	GE		To customize the screen status
	OSD POSITION FACTORY RESET			for a user's operating environment
• : Adjustable				: Adjustable



On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.

BRIGHTNESS / CONTRAST RCB Image: Contrast in the second	• :	BRIGHTNESS To adjust the brightness of the screen.
		CONTRAST To adjust the contrast of the screen.
- T	(
COLOR PRESET 9300K 6500K RED 411111111111	PRESET	9300K/6500K Select the screen color. • 9300K: Slightly bluish white. • 6500K: Slightly reddish white.
BLUE <	RED GREEN BLUE	Set your own color levels.
	GAMMA	Set your own gamma value. (-50~50) On the monitor, high gamma values display whitish images and low gamma values display high contrast images.
<u> </u>		·····
POSITION RCB		Vertical Position To move image up and down.
 Image: Second se		Horizontal Position To move image left and right.

RGB	TRACKING CLOCK PHASE	CLOCK	To minimize any vertical bars or stripes visible on the screen background.The horizontal screen size will also change.
		PHASE	To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.
_		· · · · · · · · · · · · · · · · · · ·	·········
	.	:	······
BGB	SETUP LANGUAGE > ENGLISH OSD POSITION > =		To choose the language in which the control names are displayed.
RGB	LANGUAGE	LANGUAGE OSD POSITION	

Troubleshooting

Check the following before calling for service.

Is the power cord of the display connected?	 Check and see if the power cord is connected properly to the power outlet. 			
Is the power indicator light on?	Press the Power button.			
Is the power on and the power indicator green?	 Adjust the brightness and the contrast. 			
Is the power indicator amber?	 If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen. Make sure if the power is on. Try to turn on the PC. 			
Do you see an "INPUT SIGNAL OUT OF RANGE" message on the screen?	 This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again. 			
Do you see a "NO SIGNAL "message on the screen?	 This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again. 			

Do you see	You can secure the current control settings,
"CONTROLS LOCKED" when you push MENU button?	so that they cannot be inadvertently changed. You can unlock the OSD controls at any time by pushing the MENU button and ▶ button for 3 seconds: the message "CONTROLS UNLOCKED" will appear.

Display Position is incorrect.	 Press the AUTO/SELECT button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display. Check Control Panel> Display> Settings and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
On the screen background, vertical bars or stripes are visible.	 Press the AUTO/SELECT button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in the on screen display.
Any horizontal noise appearing in any image or characters are not clearly portrayed.	 Press the AUTO/SELECT button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, decrease the horizontal bars using the PHASE icon in the on screen display. Check Control Panel> Display> Settings and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color).
The screen color is mono or abnormal.	 Check if the signal cable is properly connected and use a screwdriver to fasten if necessary. Make sure the video card is properly inserted in the slot. Set the color setting higher than 24 bits (true color) at Control Panel - Settings.
The screen blinks.	 Check if the screen is set to interlace mode and if yes, change it to the recommend resolution. Make sure the power voltage is high enough, It has to be higher than AC100-240V 50/60Hz.

Have you installed the display driver?	• Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: http://www.lge.com.
Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?	 Make sure to check if the video card supports Plug&Play function.

zontal Freq. ical Freq. it Form al Input it Form commend 2 2B mal id-by/Suspend /S Off th jht	 ≤ 3W 35.60 cm / 14.02 inches 35.98 cm / 14.17 inches
it Form commend C 2B mal id-by/Suspend /IS Off th ght	RGB Analog (0.7Vp-p/75ohm) VESA 1024 × 768@75Hz VESA 1024 × 768@60Hz : 25W ≤ 3W ≤ 3W 35.60 cm / 14.02 inches 35.98 cm / 14.17 inches
ommend 2 2B mal Id-by/Suspend IS Off th ght	VESA 1024 × 768@60Hz : 25W ≤ 3W ≤ 3W 35.60 cm / 14.02 inches 35.98 cm / 14.17 inches
nal Id-by/Suspend IS Off th ght	.≤ 3W ≤ 3W 35.60 cm / 14.02 inches 35.98 cm / 14.17 inches
id-by/Suspend /S Off th ght	.≤ 3W ≤ 3W 35.60 cm / 14.02 inches 35.98 cm / 14.17 inches
pht	35.98 cm / 14.17 inches
th	15.17 cm / 5.97 inches 4.0 kg (8.82 lbs)
	-5°~30°
100-240V 50/60)Hz 0.6A
rating Conditi Temperature	ons 10°C to 35 °C
Humidity age Condition	
	-20°C to 60 °C 5 % to 95 % non-Condensing
ched(), Deta	-
ched(), Deta	ched (O)
	PC-outlet type
	Temperature Humidity ched(), Deta



Preset Modes (Resolution)


1	VGA	640 x 350	31.468	70
2	VGA	720 x 400	31.468	70
3	VGA	640 x 480	31.469	60
4	VESA	640 x 480	35.000	66.67
5	VESA	640 x 480	37.861	72.8
6	VESA	640 x 480	37.500	75
7	VESA	800 x 600	35.156	56.25
8	VESA	800 x 600	37.879	60
9	VESA	800 x 600	48.077	72
10	VESA	800 x 600	46.875	75
11	MAC	832 x 624	49.725	75
*12	VESA	1024 x 768	48.363	60
13	VESA	1024 x 768	56.476	70
14	VESA	1024 x 768	60.023	75

* Recommended

Unlike CRT monitors, which require a high refresh rate to minimize flickering, TFT technology is inherently flicker-free. If possible, configure your computer for 1024 x 768 addressability at 60Hz vertical refresh rate.

VESA wall mounting

Connected to another object (stand type and wall-mounted type. This monitor accepts a VESA-compliant mounting interface pad.)

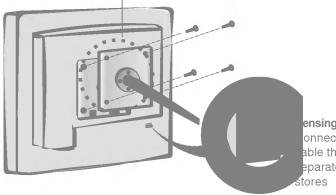

ensington Security Slot- optional onnected to a locking able that can be purchased eparately at most computer tores