User's Guide

L1530S **H

Make sure to read the Important Precautions before using the product. Keep the User's Guide(CD) in an accessible place for furture reference.

See the label attached on the back cover and quote this information to your dealer when you require service.

Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential e shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury:

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- During a lightning storm or when the display is to be left unattended for an extended period of time, unplug it from the wall outlet.

Important Precautions

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

 Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material. Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

Connecting the stand base


1. Place the monitor with its front facing downward on a cushion or soft cloth.

2. Align the hooks on the stand base with the matching slots in the base of the monitor.



Removing the stand base

- $1.\,$ Place the monitor with its front facing downward on a cushion or soft cloth.
- 2. Hold the monitor while pressing the bottom latch downwards and pulling back the stand base, as shown in the figure.

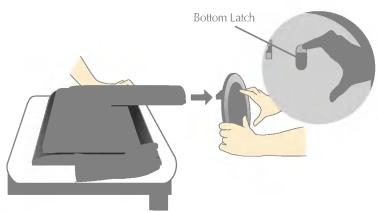


Important

- This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.
- Once you connect the stand base, try not to disconnect it.
- Do not carry the product upside down holding only the stand base. The product may fall and get damaged or injure your foot.


Positioning your display

Adjust the position of the panel in various ways for maximum comfort.


■ Tilt Range: -5°~20°

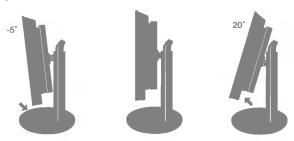

■ Height Range: maximun 2.76 inch (70.0mm)

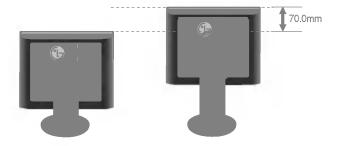

- To adjust height of monitor
 - 1 Push down the top of monitor
 - **2** While pressing the PUSH button.
 - **3** Adjust the height.

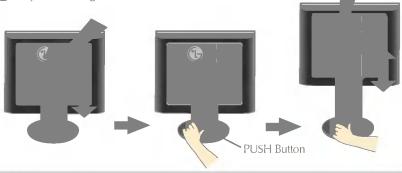


Ergonomic

It is recommended that in order to maintain an ergonomic and comfortable viewing position, the forward tilt angle of the monitor should not exceed 5 degrees.

Connecting the Display


Using the Computer

1. Slide up the **Sliding Door** and tilt the monitor backward for easily connecting the cables.

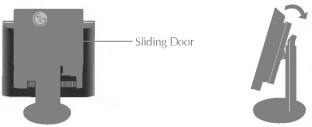


2. Connect the signal cable. When attached, tighten the thumbscrews to secure the connection.

3. Connect the power cord into a proper power outlet that is easily accessible and close to the display.

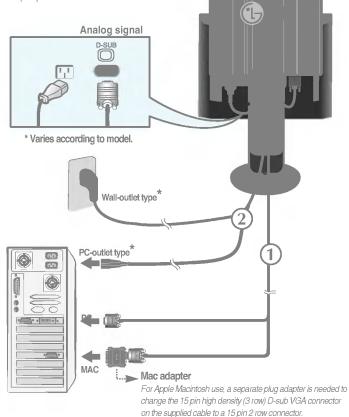

4. Slide down the Sliding Door.

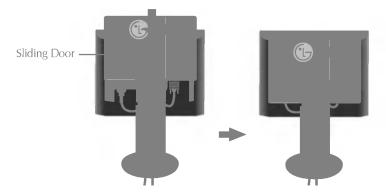


5. Press **b** button on the front switch panel to turn the power on. When monitor power is turned on, the **'Self Image Setting Function'** is executed automatically.


NOTE

'Self Image Setting Function'? This function provides the user with optimal display settings. When the user connects the monitor for the first time, this function automatically adjusts the display to optimal settings for individual input signals. If you want to adjust the monitor while in use, or wish to manually run this function once again, push the 'AUTO' button on the front panel of the monitor. Otherwise, you may execute the 'FACTORY RESET' option on the OSD adjustment menu. However, be aware that this option initializes all the menu items except 'LANGUAGE'.

Control Panel Functions

Front Panel Controls

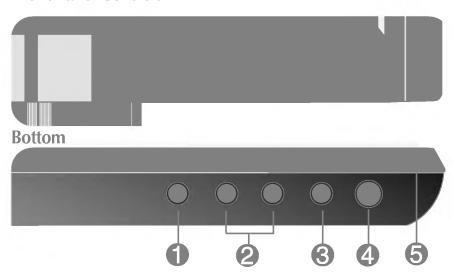

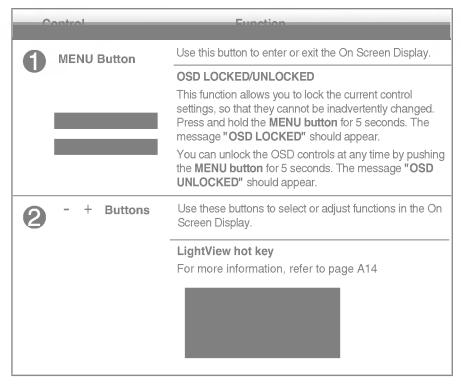

Control Panel Functions

Control Eupotion Use this button to enter a selection in the On Screen SET/AUTO Display. Button **AUTO IMAGE ADJUSTMENT** When adjusting your display settings, always press the SET/AUTO button before entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode). The best display mode is 15 inch monitor: 1024x768 17 inch monitor: 1280x1024 **Power Button** Use this button to turn the display on or off. This Indicator lights up green when the display Power (DPMS) operates normally. If the display is in DPM (Energy Indicator Saving) mode, this indicator color changes to amber.

On Screen Display (OSD) Control Adjustment

Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

Allow the display to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:

$$MENU \rightarrow - + \rightarrow SET/AUTO \rightarrow - + \rightarrow MENU$$

- Press the **MENU Button**, then the main menu of the OSD appears.
- 2 To access a control, use the **or + Buttons**. When the icon you want becomes highlighted, press the **SET/AUTO Button**.
- Use the /+ Buttons to adjust the image to the desired level. Use the SET/AUTO Button to select other sub-menu items.
- Push the **MENU Button** once to return to the main menu to select another function. Push the **MENU Button** twice to exit from the OSD.

Automatic save

With the OSD open, once you have made an adjustment the monitor automatically save any adjustments you have made, even if you exit the menu or open another menu. If you make an adjustment and then wait for the OSD to disappear, the adjustment will also been saved.

The following table indicates all the On Screen Display control, adjustment, and setting menus.


Main manu	Sub-monu		Poforonco
PICTURE	BRIGHTNESS		To adjust the brightness, contrast
	CONTRAST	•	and gamma of the screen
	GAMMA	•	
COLOR	PRESET		To customize the color of the
	RED	•	screen
	GREEN	•	
	BLUE		
POSITION	H POSITION	•	To adjust the position of the
	V POSITION		screen
TRACKING	CLOCK	•	To improve the clarity and
	PHASE		stability of the screen
FACTORY	FACTORY RESET	•	To restore the default settings
RESET	WHITE BALANCE		
SETUP	LANGUAGE	•	To customize the screen status
	OSD H POSITION		for a user's operating environment
	OSD V POSITION	•	
LIGHTVIEW	DAY TEXT/MOVIE/PHOTO	•	To select or customize desired
	NIGHT TEXT/MOVIE/PHOTO	•	image settings
	USER1/2		
	NORMAL		
		•:	Adjustable

NOTE

- The order of icons may differ depending on the model (A10~A14).
- If you set the **LIGHTVIEW** menu, the **PICTURE** and **COLOR** menu will be disabled cannot be changed. However, if **NORMAL** menu (default setting) is selected, the **PICTURE** and **COLOR** menu can be adjusted.

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.

Press the MENU Button, then the main menu of the OSD appears.

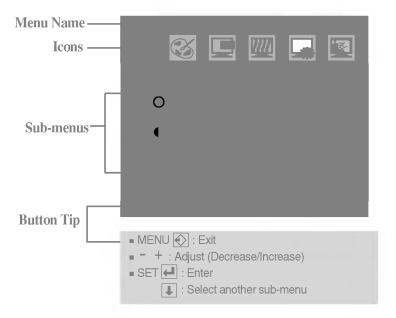

NOTE

OSD (On Screen Display) menu languages on the monitor may differ from the manual.

PICTURE

Ø □ Ⅲ □ □ • **BRIGHTNESS** To adjust the brightness of the screen.

CONTRAST To adjust the contrast of the screen.

GAMMA

Set your own gamma value.: -50/0/50

On the monitor, high gamma values
display whitish images and low gamma
values display high contrast images.

MENU : Exit- : Decrease+ : Increase

■ SET : Select another sub-menu

COLOR



PRESET Select the screen color.

9300K: Slightly bluish white.6500K: Slightly reddish white.

■ **RED** Set your own red color levels.

■ **GREEN** Set your own green color levels.

■ **BLUE** Set your own blue color levels.

MENU : Exit- : Decrease+ : Increase

• SET: Select another sub-menu

POSITION



H POSITION

To move image left and right.

V POSITION

To move image up and down.

MENU : Exit- : Decrease+ : Increase

SET : Select another sub-menu

TRACKING



CLOCK

To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.

PHASE

To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.

MENU : Exit - : Decrease ■ + : Increase

• SET: Select another sub-menu

FACTORY RESET



FACTORY RESET

Restore all factory default settings except "LANGUAGE."

If you want to reset the monitor, select the YES and then press the - or + button to execute.

WHITE **BALANCE**

If the output of the video card is different the required specifications, the color level may deteriorate due to video signal distortion. Using this function, the signal level is adjusted to fit into the standard output level of the video card in order to provide the optimal image. Activate this function when white and black colors are present in the screen.

■ MENU : Exit - : Adjust+ : Adjust

• SET : Select another sub-menu

For example



If this does not improve the screen image, restore the factory default settings. If necessary, perform the white balance function again. This function will be enabled only when the input signal is an analog signal.

If you want to adjust, select the YES and then press the - or + button to execute.

SETUP



LANGUAGE To choose the language in which the control names are displayed.

OSD

To adjust horizontal position of the OSD

H POSITION window on the screen.

OSD

To adjust vertical position of the OSD V POSITION window on the screen.

MENU : Exit - : Decrease + : Increase

• SET: Select another sub-menu

Press the LIGHTVIEW(- /+) Button, then the main menu of the OSD appears. Menu Name -Icons — Sub-menu Name -LIGHTVIEW This feature lets you easily select the best desired DAY image condition optimized to the environment NIGHT (ambient illumination, image types etc). • DAY: Bright ambient illumination • NIGHT: Dark ambient illumination • **TEXT**: For text images (Word processing etc.) ■ - + : Select another sub-menu • MOVIE: For animation images in videos or movies • PHOTO: For pictures or drawings User can preset the **BRIGHTNESS**, USER 1 CONTRAST, GAMMA, and PRESET levels USER 2 and save them for later use. Select the sub-menu using the SET button and save the YES value using the -To adjust the USER1/USER2 /+ buttons. sub-menu function, Press the **SET** Button 0 ■ MENU : Exit - : Decrease+ : Increase ■ SET : Select another sub-menu NORMAL This is under normal operating conditions.

Troubleshooting

Check the following before calling for service.

No imago appoare

- Is the power cord of the display connected?
- Is the power indicator light on?
- Is the power on and the power indicator green?
- Is the power indicator amber?
- Do you see an "OUT OF RANGE" message on the screen?
- Do you see a "CHECK SIGNAL CABLE "message on the screen?

- Check and see if the power cord is connected properly to the power outlet.
- Press the Power button.
- Adjust the brightness and the contrast.
- If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.
- · Make sure if the power is on.
- Try to turn on the PC.
- This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.
- This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again.

Do wou con a "OCD LOCKED" maccage on the corner?

- Do you see "OSD LOCKED" when you push MENU button?
- You can secure the current control settings, so that they cannot be inadvertently changed.
 You can unlock the OSD controls at any time by pushing the MENU button for 5 seconds.
 The message "OSD UNLOCKED" should appear.

Dienlay imago is incorrect

- Display Position is incorrect.
- Press the SET/AUTO button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display.
- Check Control Panel --> Display --> Settings and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
- On the screen background, vertical bars or stripes are visible.
- Press the SET/AUTO button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in the on screen display.
- Any horizontal noise appearing in any image or characters are not clearly portrayed.
- Press the SET/AUTO button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, decrease the horizontal bars using the PHASE icon in the on screen display.
- Check Control Panel --> Display --> Settings and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color).
- The screen color is mono or abnormal.
- Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.
- Make sure the video card is properly inserted in the slot.
- Set the color setting higher than 24 bits (true color) at Control Panel - Settings.
- The screen blinks.
- Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.
- Make sure the power voltage is high enough, It has to be higher than AC100-240V 50/60Hz.

Troubleshooting

Have you installed the display driver?

- Have you installed the display driver?
- Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: http://www.lge.com.
- Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?
- Make sure to check if the video card supports Plug&Play function.

DICTLIDE and COLOR manus can not be activated from the OCD manus

- Are you unable to open the PICTURE or COLOR menus from the OSD menu?
- Ensure that the NORMAL setting is selected for LIGHTVIEW. If LIGHTVIEW is set to DAY TEXT/MOVIE/PHOTO, NIGHT TEXT/MOVIE/PHOTO, or USER1/USER2, the PICTURE and COLOR menus will not function. To make an adjustment, set LIGHTVIEW to NORMAL.

Display	15 inches (38.1cm) Anti-Glare coating 15 inches viewable 0.3 mm pixel pitch	Flat Panel Active matrix-TFT LCD
Sync Input	Horizontal Freq. Vertical Freq. Input Form	30 - 63kHz (Automatic) 56 - 75Hz (Automatic) Separate TTL, Positive/Negative
Video Input	Signal Input Input Form	15 pin D-Sub Connector RGB Analog (0.7Vp-p/75ohm)
Resolution	Max Recommend	VESA 1024 x 768@75Hz VESA 1024 x 768@60Hz
Plug&Play	DDC 2B	
Power Consumption	Normal Stand-by/Suspend DPMS Off	: 25W ≤ 1W ≤ 1W
Dimensions & Woight (with tilt stand)	Width Height Depth Net	36.75 cm / 14.47 inches 39.89 cm / 15.70 inches (Min) 46.89 cm / 18.46 inches (Max) 21.00 cm / 8.27 inches 4.6 kg (10.14 lbs)
Tilt/Height Range		-5°~20° 2.76 inch (70.0mm)
Environmental	Storage Conditior Temperature	10°C to 35°C 10 % to 80 % non-Condensing ns -20°C to 60°C 5 % to 95 % non-Condensing
		ichable (O)

NOTE

Information in this document is subject to change without notice.

Display	17 inches (43.2cm) Anti-Glare coating 17 inches viewable 0.26 mm pixel pitcl		
Sync Input	Horizontal Freq. Vertical Freq. Input Form	30 - 83kHz (Automatic) 56 - 75Hz (Automatic) Separate TTL, Positive/Negative Composite TTL Positive/Negative SOG (Sync On Green)	
Video Input	Signal Input Input Form	15 pin D-Sub Connector RGB Analog (0.7Vp-p/75ohm)	
Resolution	Max Recommend	VESA 1280 x 1024@75Hz VESA 1280 x 1024@60Hz	
Plug&Play	DDC 2B		
Power Consumption	Normal Stand-by/Suspend DPMS Off	: 43W ≤ 1W ≤ 1W	
Dimensions &Weight (with tilt stand)	Width Height Depth Net	39.80 cm / 15.67 inches 41.84 cm / 16.47 inches (Min) 48.84 cm / 19.23 inches (Max) 21.00 cm / 8.27 inches 6.10 kg (13.45 lbs)	
Tilt/Height Range	Height	-5°~20° 2.76 inch (70.0mm)	
	Storage Condition Temperature Humidity Attached(), Deta	ons 10°C to 35°C 10 % to 80 % non-Condensing ns -20°C to 60°C 5 % to 95 % non-Condensing achable (O)	
	v van odnet type of 1 C-odnet type		

NOTE

Information in this document is subject to change without notice.

Preset Modes (Resolution)

• 15 inch monitor

1	VGA	640 x 350	31.468	70
2	VGA	720 x 400	31.468	70
3	VGA	640 x 480	31.469	60
4	VESA	640 x 480	35.000	66.67
5	VESA	640 x 480	37.861	72.8
6	VESA	640 x 480	37.500	75
7	VESA	800 x 600	35.156	56.25
8	VESA	800 x 600	37.879	60
9	VESA	800 x 600	48.077	72
10	VESA	800 x 600	46.875	75
11	MAC	832 x 624	49.725	75
*12	VESA	1024 x 768	48.363	60
13	VESA	1024 x 768	56.476	70
14	VESA	1024 x 768	60.023	75

* Recommended

Unlike CRT monitors, which require a high refresh rate to minimize flickering, TFT technology is inherently flicker-free. If possible, configure your computer for 1024 x 768 addressability at 60Hz vertical refresh rate.

• 17 inch monitor

1	VGA	640 x 350	31.469	70
2	VGA	720 x 400	31.468	70
3	VGA	640 x 480	31.469	60
4	VESA	640 x 480	37.500	75
5	VESA	800 x 600	37.879	60
6	VESA	800 x 600	46.875	75
7	MAC	832 x 624	49.725	75
8	VESA	1024 x 768	48.363	60
9	VESA	1024 x 768	60.123	75
10	MAC	1152 x 870	68.681	75
11	VESA	1152 x 900	61.805	65
12	VESA	1280 x 1024	63.981	60
13	VESA	1280 x 1024	79.976	75

Specifications

Indicator

Normal	green
Stand-by/Suspend	amber
DPMS Off	amber

This monitor meets VESA-compliant mounting interface pad specifications.

1. Remove the Sliding Door.




2. Please the monitor on a piece of cloth or other soft surface with the front side facing downward.

3. Separate the stand base using a screwdriver as shown in the picture.



4. Install the VESA standrad wall mounting.

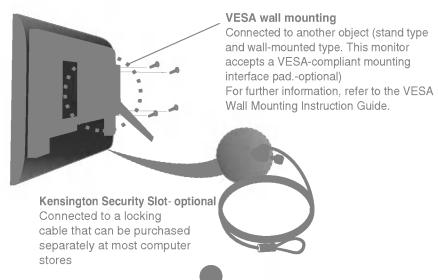

Digitally yours •••••

