User's Guide

L1520B L1720B

Make sure to read the Important Precautions before using the product.

Keep the User's Guide(CD) in an accessible place for furture reference.

See the label attached on the product and quote this information to your dealer when you require service.



Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential eletrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury:

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- During a lightning storm or when the display is to be left unattended for an extended period of time, unplug it from the wall outlet.

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

 Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

On Disposal

- The fluorescent lamp used in this product contains a small amount of mercury.
- Do not dispose of this product with general household waste. Disposal of this product must be carried out in accordance to the regulations of your local authority.

■ Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.


Unfolding the stand base

 $1.\,\,$ Place the monitor with its front facing downward on a cushion or soft cloth.

2. Expand the stand base to its first step degree (65°) pulling it outward with two hands.

3. Further expand the stand base to 90 degrees with slightly more force. Do not apply excessive force to expand the stand base to over 90 degrees, or it may

damage the monitor.

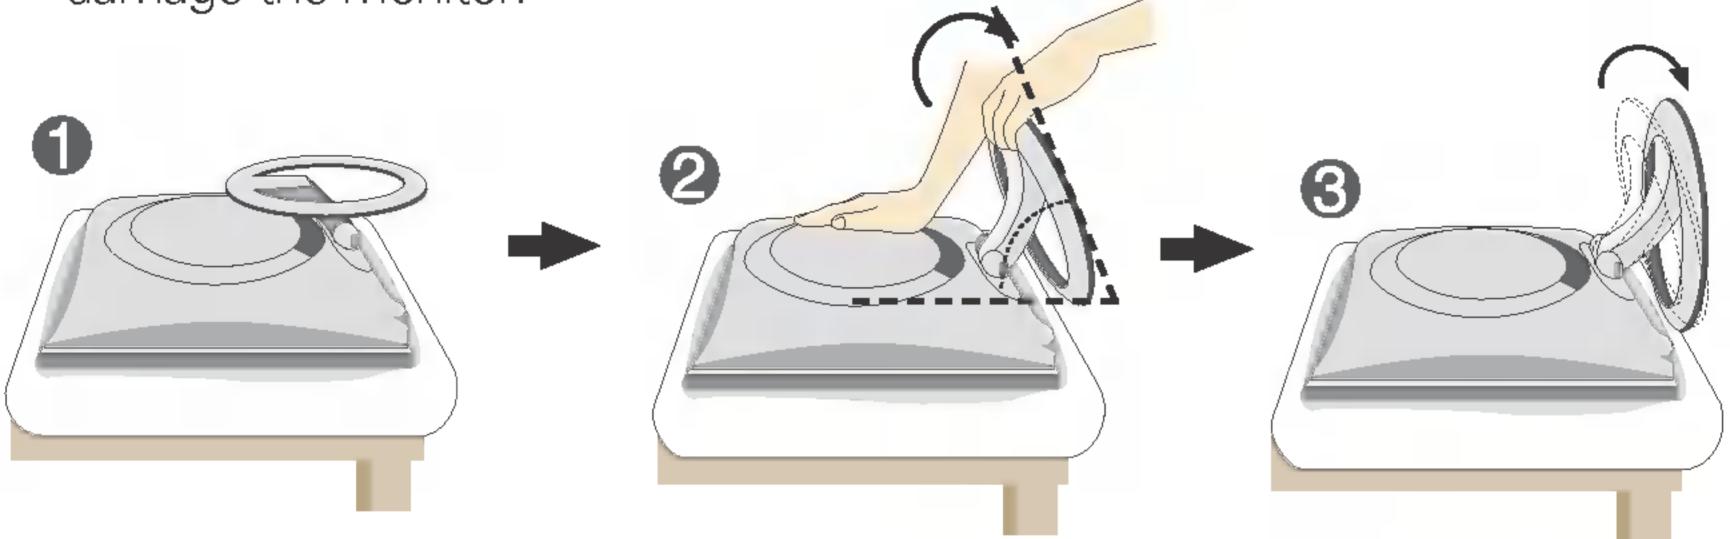


4. Place the monitor upright and adjust the stand base angle as desired. Adjust the stand base angle holding the monitor head part with both hands.



folding the stand base

1. Face the front of the monitor and push it backwards, following the sequence shown in the picture.

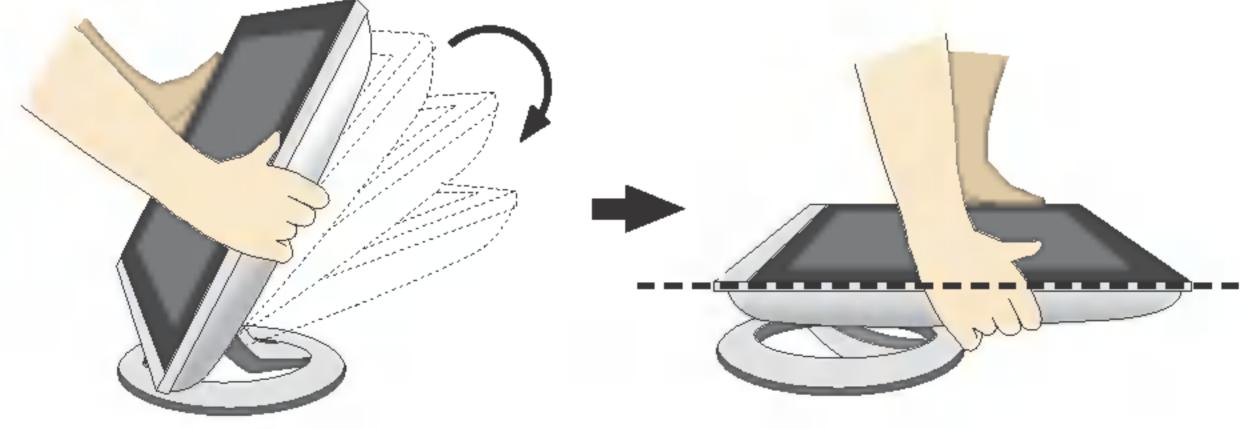


Do not push it over 180 degrees. It may damage the stand base.

This illustration depicts the general model of connection.
Your monitor may differ from the items shown in the picture.




Do not touch or apply force to the monitor screen while expanding or folding the stand base.

Using the Computer

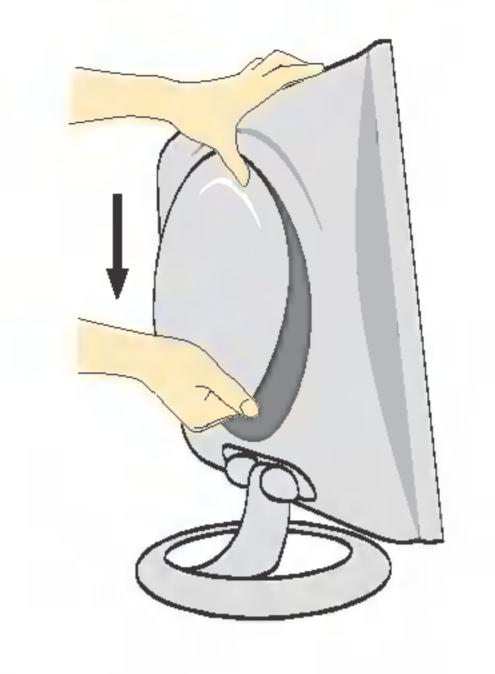

1. Separate the back cap by sliding its lower section downward as shown in the picture.

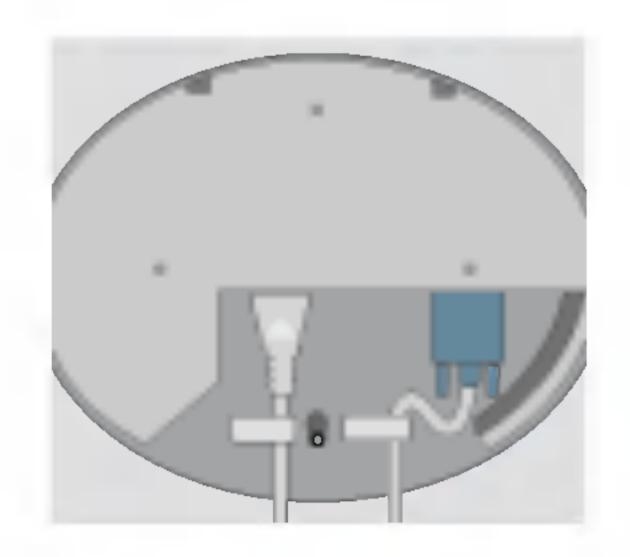

2. Connect the signal input cable and the power cord. (see next page)



3. After the cables are connected, set the back cap into the groove of the upper section and reassemble by pushing upward.




4. Insert the back cap along the bottom grooves on both sides, holding the bottom.


Using the Computer

- 1. Connect the signal cable. When attached, tighten the thumbscrews to secure the connection. ①
- 2. Connect the power cord into a proper power outlet that is easily accessible and close to the display. ②

NOTE

- This is a simplified representation of the rear view.
- This rear view represents a general model; your display may differ from the view as shown.

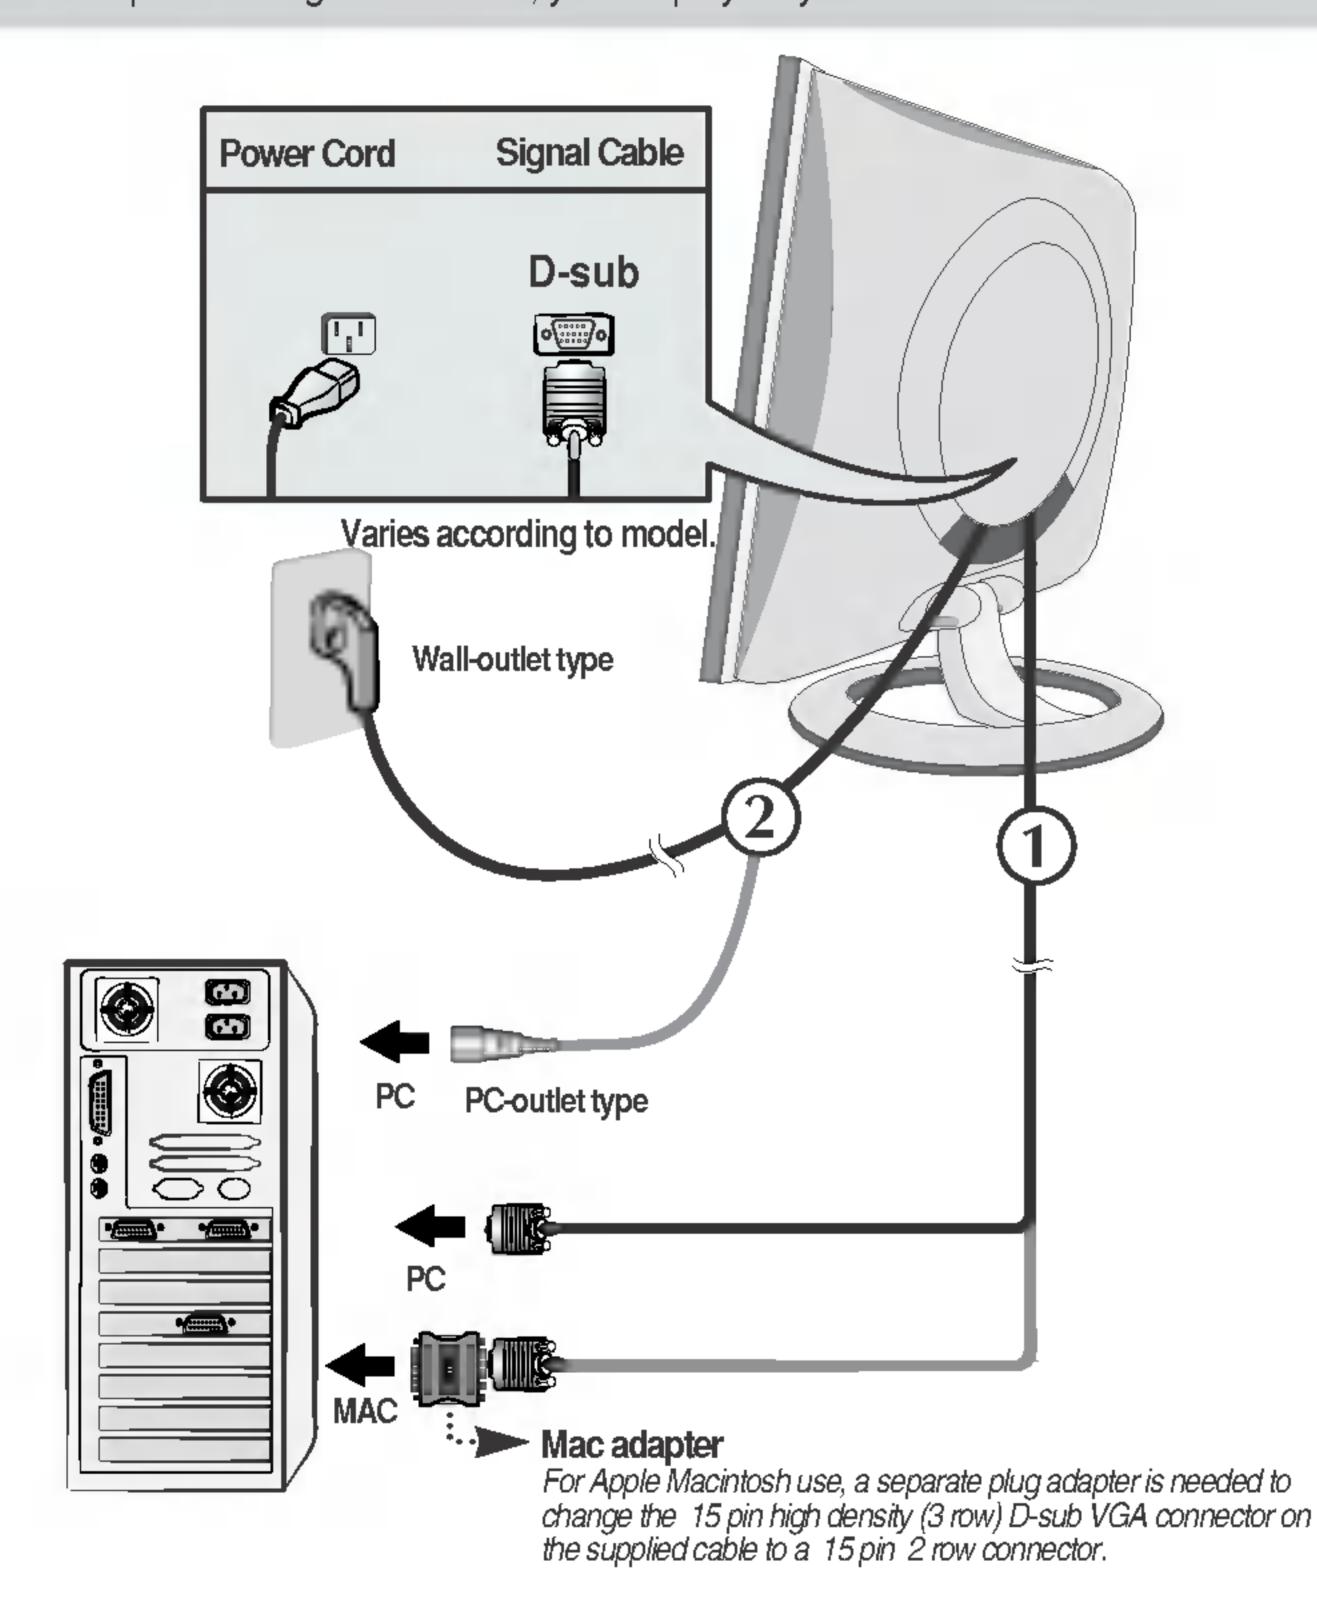


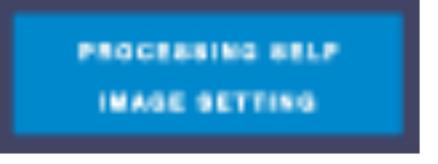

NOTE

'Self Image Setting Function'? This function provides the user with optimal display settings. When the user connects the monitor for the first time, this function automatically adjusts the display to optimal settings for individual input signals. If you want to adjust the monitor while in use, or wish to manually run this function once again, push the 'AUTO/SELECT' button on the front panel of the monitor. Otherwise, you may execute the 'Factory reset' option on the OSD adjustment menu. However, be aware that this option initializes all the menu items except 'Language'.

Front Panel Controls

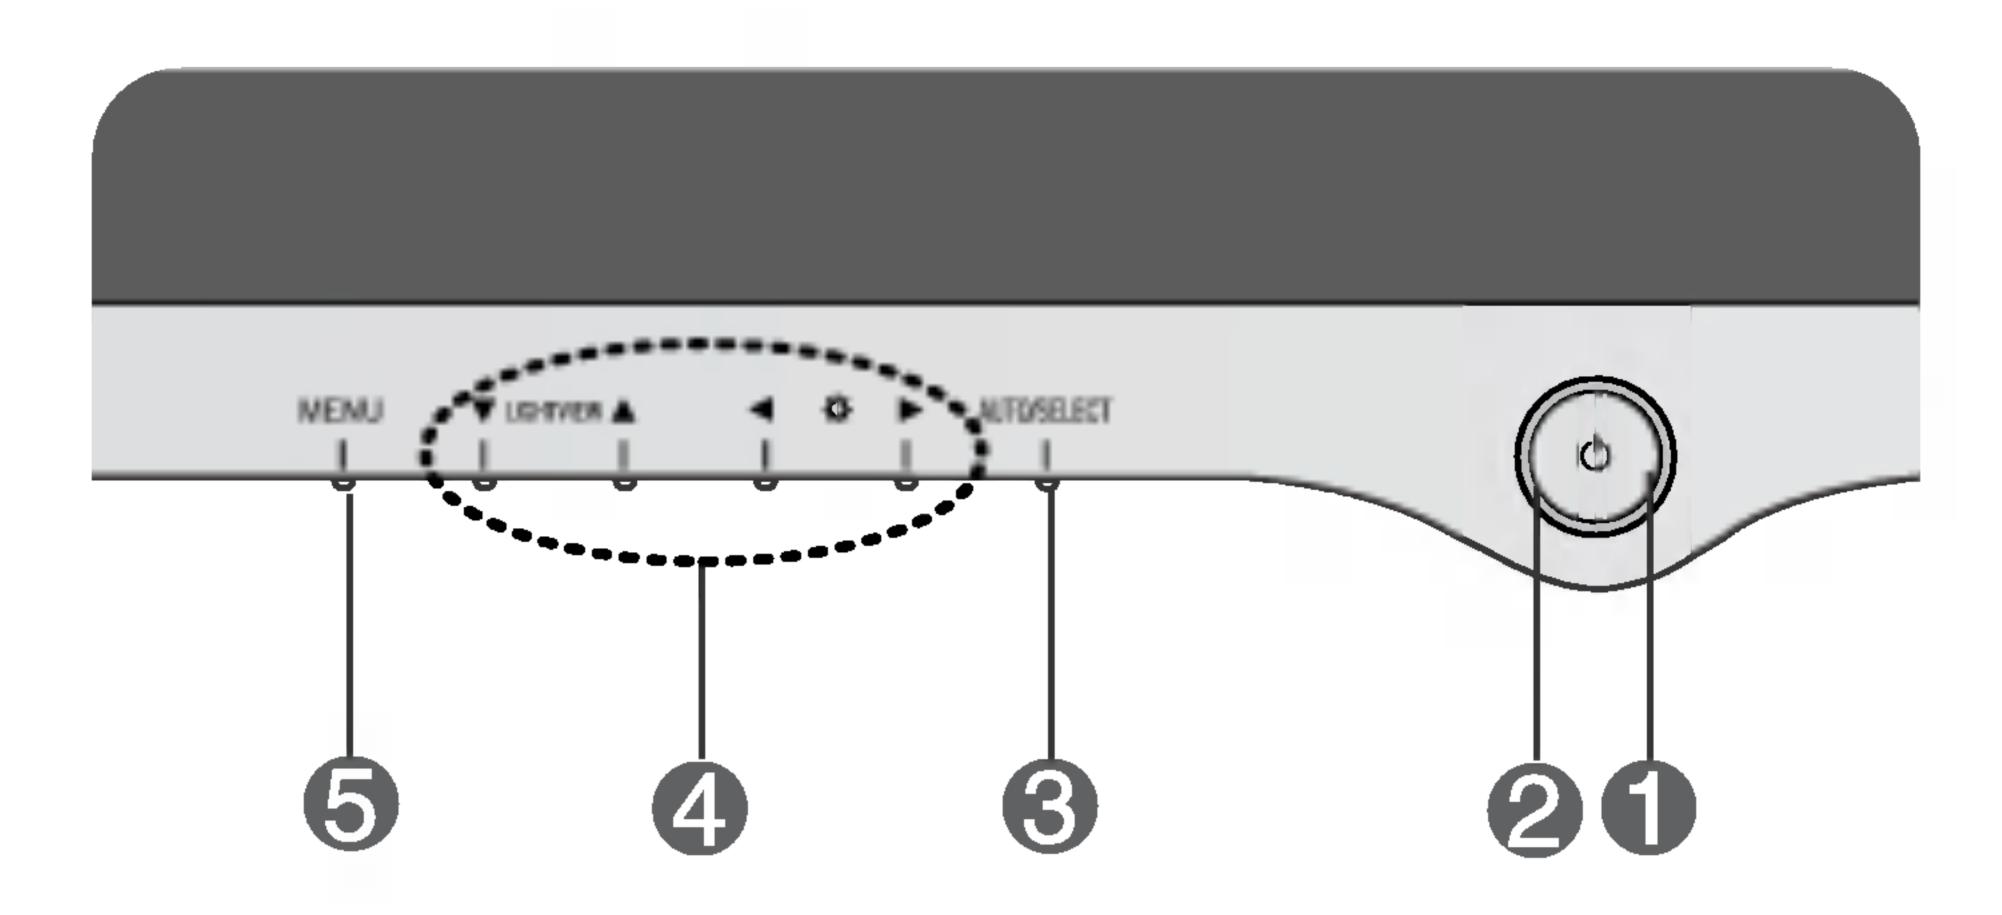

Control		Function	
0	Power Button	Use this button to turn the display on or off.	
2	Power Indicator	This Indicator lights up blue when the display operates normally(On Mode). If the display is in Sleep Mode (Energy Saving), this indicator color changes to amber.	
8	AUTO/SELECT Button	Use this button to enter a selection in the On Screen Display.	
4	▼▲ ◆ ► Buttons	Use these buttons to choose or adjust items in the On Screen Display.	
6	MENU Button	Use this button to enter or exit the On Screen Display.	

Control

Direct Access Function




AUTO IMAGE ADJUSTMENT

PROCESSING AUTO IMAGE ADJUSTMENT When adjusting your display settings, always press the AUTO/SELECT button before entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode). The best display mode is

15 inch monitor : **1024x768** 17 inch monitor : **1280x1024**



▼ LightView ▲

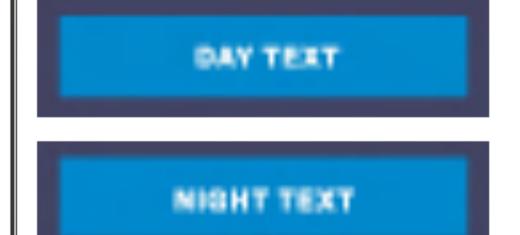

DAY NIGHT

This feature lets you easily select the best desired image condition optimized to the environment (ambient illumination, image types etc).

- DAY: Bright ambient illumination
 NIGHT: Dark ambient illumination
- TEXT: For text images (Word processing etc.)
- MOVIE : For animation images in videos or movies
- PHOTO: For pictures or drawings
- NORMAL : This is under normal operating conditions





Bring up Contrast and Brightness adjustment.



6

OSD LOCKED/UNLOCKED

: MENU

OSD WHLDEKED

This function allows you to secure the current control settings, so that they cannot be inadvertently changed. Press and hold the MENU button for 5 seconds: the message

"OSD LOCKED" appears.

You can unlock the OSD controls at any time by pushing the MENU button for 5 seconds:

the message "OSD UNLOCKED" will appear.


Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

Allow the display to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:

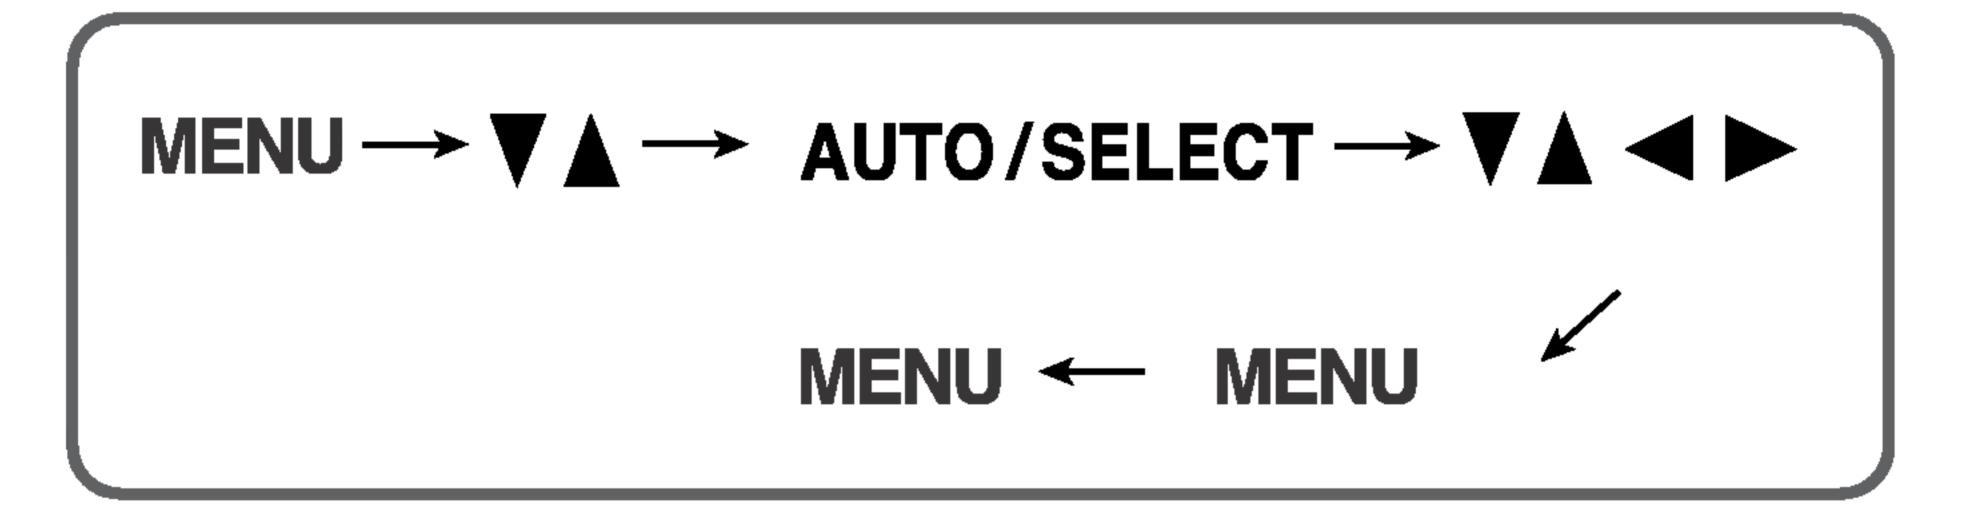

- Press the **MENU Button**, then the main menu of the OSD appears.
- 2 To access a control, use the ▼ or ▲ Buttons. When the icon you want becomes highlighted, press the AUTO/ SELECT Button.
- \Im Use the $\nabla \triangle \blacktriangleleft \blacktriangleright$ Buttons to adjust the item to the desired level.
- Accept the changes by pressing the MENU Button.
- Exit the OSD by Pressing the MENU Button.

On Screen Display(OSD) Selection and Adjustment

The following table indicates all the On Screen Display control, adjustment, and setting menus.

Main menu	Sub menu			Reference	
PICTURE	BRIGHTNESS			To adjust the brightness, contra	
	CONTRAST			and gamma of the screen	
	GAMMA				
COLOR	PRESET 6500K To cu		To customize the color of the		
		9300K		screen	
	RED				
	GREEN				
	BLUE				
POSITION	HORIZON	NTAL		To adjust the position of the	
	VERTICAL			screen	
TRACKING	CLOCK			To improve the clarity and	
PHASE			stability of the screen		
SETUP	SETUP LANGUAGE OSD HORIZONTAL			To customize the screen status	
				for a user's operating environment	
	POSITION	VERTICAL			
	WHITE BA	LANCE			
	POWERIN	IDICATOR			
	FACTOR	YRESET			
	• : Adjustable			Adjustable	

NOTE

The order of icons may differ depending on the model (A9~A11).

On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.


NOTE

OSD (On Screen Display) menu languages on the monitor may differ from the manual.

To adjust the brightness and contrast of the screen

OSD Adjust

∠ BRIGH

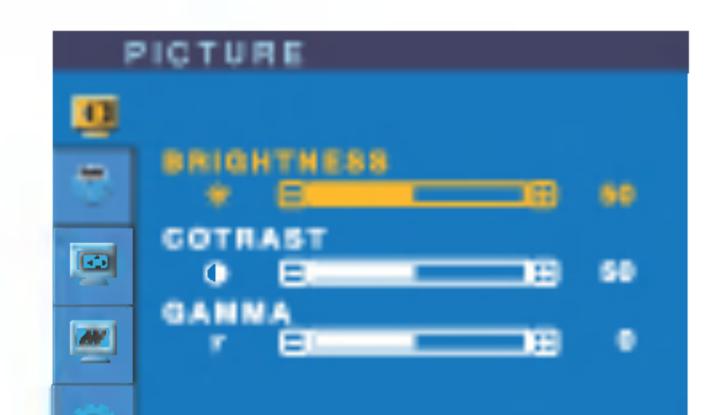

BRIGHTNESS
To adjust the brightness of the screen.

Description

CONTRAST

To adjust the contrast of the screen.

GAMMA
 Set your own gamma value. : -50/0/50
 On the monitor, high gamma values display whitish images and low gamma values display high contrast images.

To customize the color of the screen

OSD Adjust

Description



PRESET 6500K/9300K

Select the screen color.

- 6500K: Slightly reddish white.
- 9300K: Slightly bluish white.


RED GREEN BLUE

Set your own color levels.

To adjust the position of the screen

OSD Adjust

Description

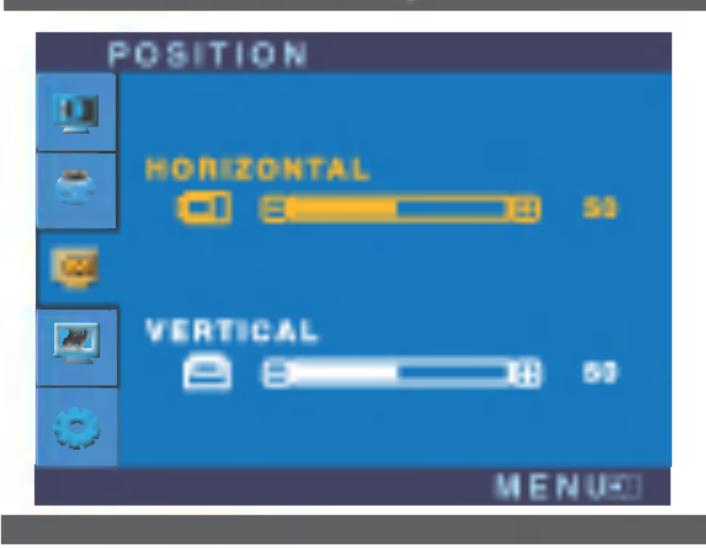



Horizontal Position

To move image left and right.



Vertical Position


To move image up and down.

On Screen Display(OSD) Selection and Adjustment

To improve the clarity and stability of the screen

OSD Adjust Description RACKING To minimize any vertical bars or CLOCK stripes visible on the screen CLOCK background. The horizontal screen size will also change. To adjust the focus of the display. PHASE PHASE This item allows you to remove any horizontal noise and clear or sharpen the image of characters.

To customize the screen status for a user's operating environment

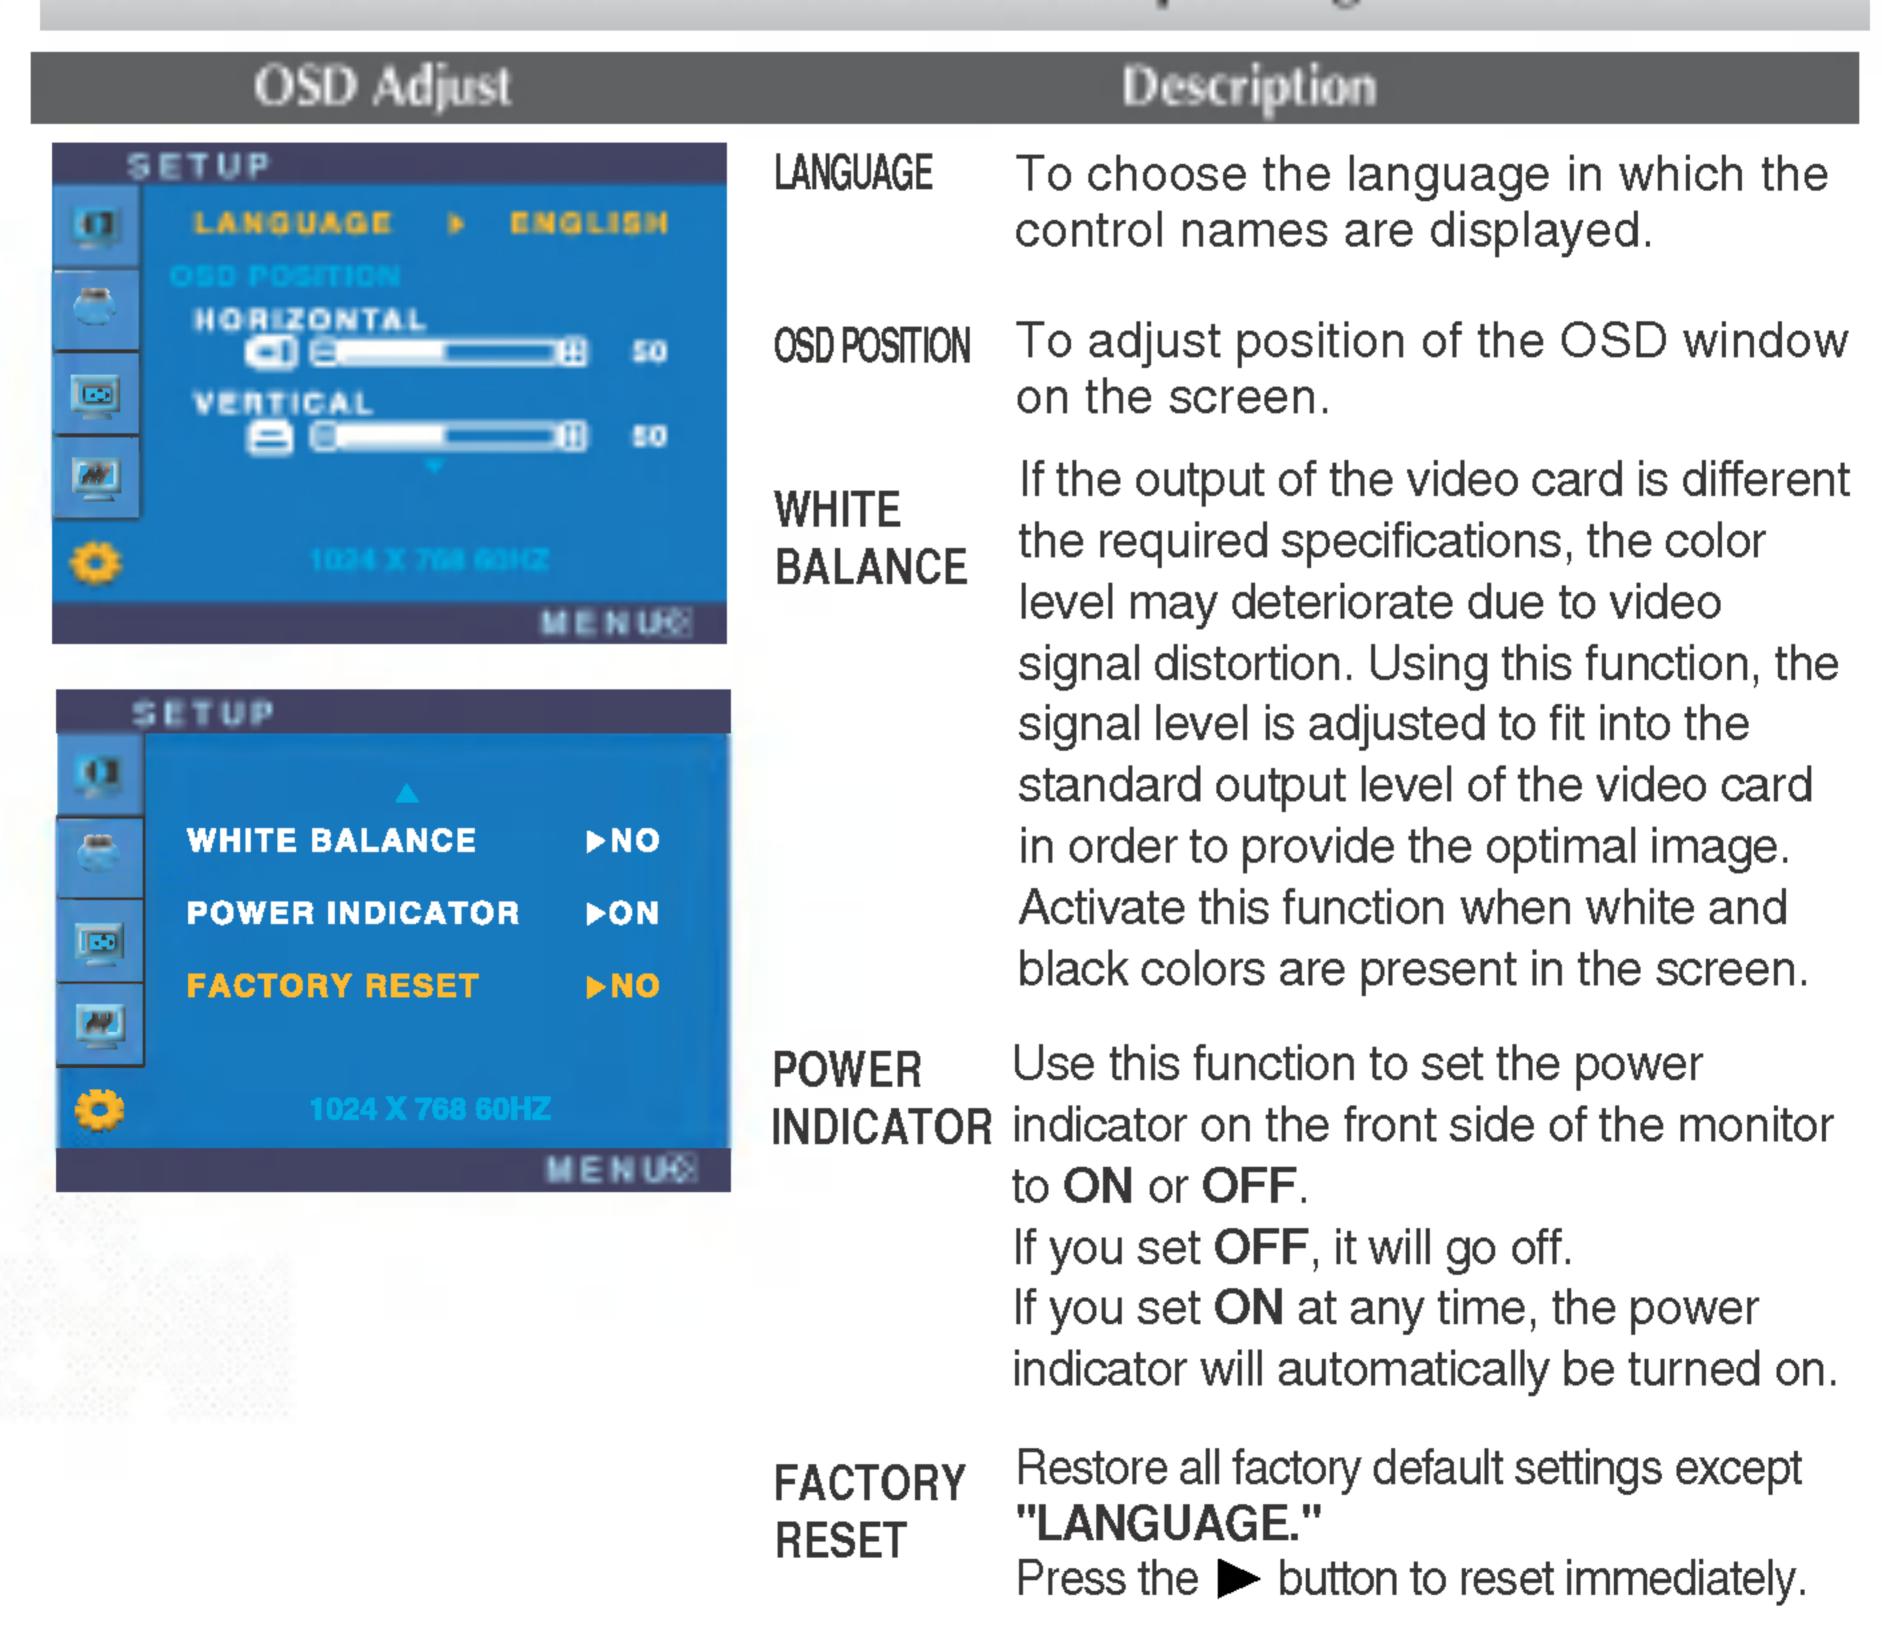

If this does not improve the screen image, restore the factory default settings. If necessary, perform the white balance function again. This function will be enabled only when the input signal is an analog signal.

Check the following before calling for service.

No image appears

- Is the power cord of the display connected?
- Is the power indicator light on?
- Is the power on and the power indicator blue or green?
- Is the power indicator amber?
- Do you see an "OUT OF RANGE" message on the screen?
- Do you see a "CHECK SIGNAL CABLE" message on the screen?

- Check and see if the power cord is connected properly to the power outlet.
- · Press the Power button.
- Adjust the brightness and the contrast.
- If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.
- Try to turn on the PC.
- This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.
- This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again.

Do you see a "OSD LOCKED" message on the screen?

- Do you see "OSD LOCKED" when you push MENU button?
- You can secure the current control settings, so that they cannot be inadvertently changed. You can unlock the OSD controls at any time by pushing the **MENU** button for 5 seconds: the message
 - "OSD UNLOCKED" will appear.

Display image is incorrect

- Display Position is incorrect.
- automatically adjust your display image to the ideal setting.

 If the results are unsatisfactory, adjust the image position using the **H position and V position**

Press the AUTO/SELECT button to

icon in the on screen display.

the on screen display.

- Check Control Panel --> Display --> Settings
 and see if the frequency or the resolution were
 changed. If yes, readjust the video card to the
 recommend resolution.
- On the screen background, vertical bars or stripes are visible.
- Press the AUTO/SELECT button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in
- Any horizontal noise appearing in any image or characters are not clearly

portrayed.

- Press the AUTO/SELECT button to automatically adjust your display image to the ideal setting.
 - If the results are unsatisfactory, decrease the horizontal bars using the **PHASE** icon in the on screen display.
- Check Control Panel --> Display --> Settings
 and adjust the display to the recommended
 resolution or adjust the display image to the ideal
 setting. Set the color setting higher than 24 bits
 (true color).
- The screen color is mono or abnormal.
- Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.
- Make sure the video card is properly inserted in the slot.
- Set the color setting higher than 24 bits (true color) at Control Panel - Settings.
- The screen blinks.
- Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.
- Make sure the power voltage is high enough, It has to be higher than AC100-240V 50/60Hz.

Have you installed the display driver?

- Have you installed the display driver?
- Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?
- Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: http://www.lge.com.
- Make sure to check if the video card supports Plug&Play function.

Display	15 inches (38.1 cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating 15 inches viewable 0.297 mm pixel pitch				
Sync Input	Horizontal Freq. Vertical Freq. Input Form		30 - 63kHz (Automatic) 56 - 75Hz (Automatic) Separate TTL, Positive/Negative		
Video Input	Signal I Input Fo	-	15 pin D-Sub RGB Analog	Connector (0.7Vp-p/75ohm)	
Resolution	Max Recommend		VESA 1024 x 768@75Hz VESA 1024 x 768@60Hz		
Plug&Play	DDC 2B	1			
Power Consumption	On Mod Sleep M Off Mod	lode	≤ 23W ≤ 1W ≤ 1W		
Weight (with tilt stand)	Width Height Depth Net	36.38 cm/ 33.07 cm/	Position 14.32inches 13.02 inches 8.66 inches 3.2 kg (7.05)	36.38 cm / 14.32 inches 35.80 cm / 14.09 inches 11.37 cm / 4.48 inches	
Tilt Range	Tilt		0°~25°		
Power Input	AC 100-	240V~ 50/	60Hz 0.6A		
Environmental	Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature -20°C to 60 °C Humidity 5 % to 95 % non-Condensing				
Tilt Stand	Attache	d(O), Deta	iched ()		
Signal cablePower cord	Attached(), Detached (O) Wall-outlet type or PC-outlet type				

NOTE

Information in this document is subject to change without notice.

Display	17 inches (43.2 cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating 17 inches viewable 0.264 mm pixel pitch			
Sync Input	Horizontal Freq. Vertical Freq. Input Form	30 - 83kHz (Automatic) 56 - 75Hz (Automatic) Separate TTL, Positive/Negative Composite TTL, Positive/Negative SOG (Sync On Green)		
Video Input	Signal Input Input Form	15 pin D-Sub Co RGB Analog (0.7		
Resolution	Max Recommend	VESA 1280 x 10 VESA 1280 x 10		
Plug&Play	DDC 2B			
Power Consumption	On Mode Sleep Mode Off Mode	≤ 35W ≤ 1W ≤ 1W		
&Weight (with tilt stand)	Full (Jp Position	Folded Position	
	Height 37.90 d	cm/15.51 inches cm/14.92 inches cm/9.13 inches 4.5 kg (9.92 lbs)	39.40 cm /15.51 inches 41.20 cm /16.22 inches 12.70 cm / 5.00 inches	
Tilt Range	Tilt	0°~25°		
Power Input	AC 100-240V~ 50/	60Hz 1.0A		
Environmental Conditions	Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature -20°C to 60 °C			
77114 674	Humidity	5 % to 95 % no	n-Condensing	
Tilt Stand	Attached(O), Detached ()			
Signal cable	Attached(), Detached (O)			
Power cord	Wall-outlet type or PC-outlet type			

NOTE

Information in this document is subject to change without notice.

Preset Modes (Resolution)

15 inch monitor

D	isplay Modes	s (Resolution)	Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	VGA	640 x 350	31.468	70
2	VGA	720 x 400	31.468	70
3	VGA	640 x 480	31.469	60
4	VESA	640 x 480	35.000	66.67
5	VESA	640 x 480	37.861	72.8
6	VESA	640 x 480	37.500	75
7	VESA	800 x 600	35.156	56.25
8	VESA	800 x 600	37.879	60
9	VESA	800 x 600	48.077	72
10	VESA	800 x 600	46.875	75
11	MAC	832 x 624	49.725	75
*12	VESA	1024 x 768	48.363	60
13	VESA	1024 x 768	56.476	70
14	VESA	1024 x 768	60.023	75

17 inch monitor

D	isplay Mode	s (Resolution)	Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	VGA	640 x 350	31.469	70
2	VGA	720 x 400	31.468	70
3	VGA	640 x 480	31.469	60
4	VESA	640 x 480	37.500	75
5	VESA	800 x 600	37.879	60
6	VESA	800 x 600	46.875	75
7	MAC	832 x 624	49.725	75
8	VESA	1024 x 768	48.363	60
9	VESA	1024 x 768	60.023	75
10	MAC	1152 x 870	68.681	75
11	VESA	1152 x 900	61.805	65
*12	VESA	1280 x 1024	63.981	60
13	VESA	1280 x 1024	79.976	75

Indicator


*Recommend Mode

Mode	LED Color
On Mode	Blue
Sleep Mode	Amber
Off Mode	Off


How to Install the VESA Standard wall mounting

This monitor meets VESA-compliant mounting interface pad specifications.

1. Please the monitor on a piece of cloth or other soft surface with the front side facing downward and remove the rear cap.

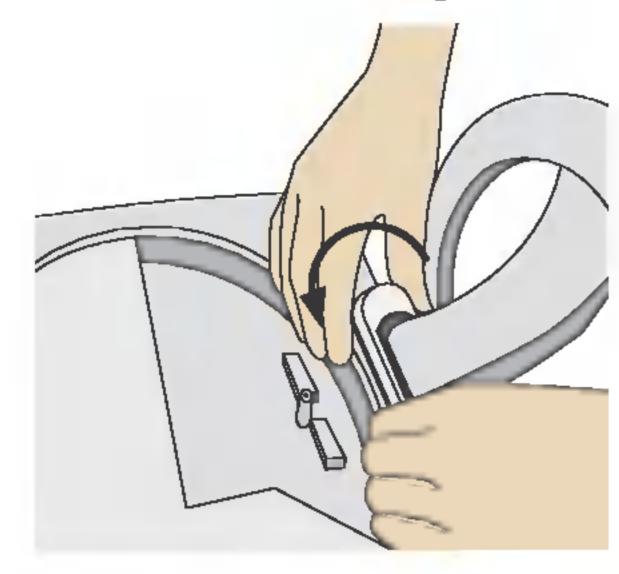


2. Slide off the lower section of the cover base with two hands as shown in the picture.

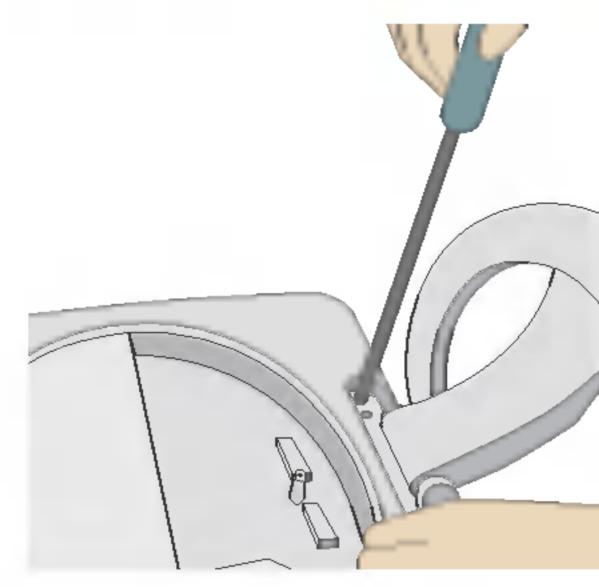

3. Separate the stand base using a screwdriver as shown in the picture.

4. Install the VESA standrad wall mounting.

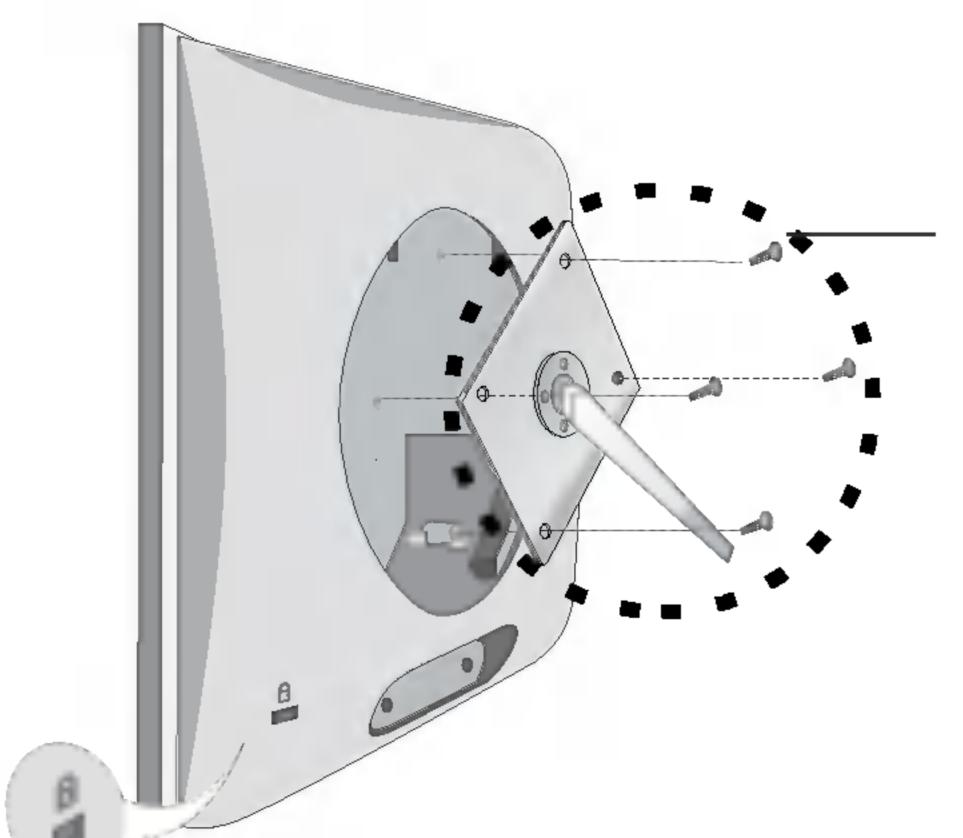

VESA wall mounting

Connected to another object (stand type and wall-mounted type. This monitor accepts a VESA-compliant mounting interface pad.-optional)
For further information, refer to the VESA Wall Mounting Instruction Guide.



Kensington Security Slot- optional

Connected to a locking cable that can be purchased separately at most computer stores

Digitally yours

