

FRIDGE-FREEZER

User's Guide

Please read this User's Guide carefully before operating and keep it handy for reference at all times.

FRIGORIFERO CON CONGELATORE

Istruzioni per l'uso

Nel ringraziarvi per avere acquistato questo prodotto LG, vi raccomandiamo di leggere attentamente le seguenti istruzioni e di conservare questo manuale per eventuali consultazioni future.

ΨΥΓΕΙΟ - ΚΑΤΑΨΥΚΤΗΣ

Οδηγίες Χρήσεως

Παρακαλούμε να διαβάσετε προσεκτικά τις οδηνίες πριν θέσετε σε λειτουγία το ψυγείο και φροντίστε να τις έχετε διαθέσιμες ανά πάσα στινμη

Table of Contents

Introduction	Registration ————————————————————————————————————	4
	Important Safety Instruction ————————————————————————————————————	4
	Identification of Parts	9
Installation	Installation ————————————————————————————————————	
motanation	Starting —	
	Starting —	
^ ! :	Tamparatura Cantral	
Operation	Temperature Control ————————————————————————————————————	
	Super Freezer —	- [13)
	Vacation ————	
	Self Test —	<u> 14</u>
	Lock —	
	Moving Basket —	
	Door Alarm —	<u>15</u>
	Ice Making —	<u> 15</u>
	Defrosting —	<u> 15</u>
	Folding Shelf	<u></u>
	Wine Rack	
uggestion On	Storing Food —	
Food storage	Storing rood	
Care and	General Information ————————————————————————————————————	
Maintenance	Lamp Replacement ————————————————————————————————————	
	To Reverse the Doors	
	Cleaning —	<u></u>

Trouble Shooting

Trouble Shooting

Introduction

Registration

The model and serial number are found on the rear of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase	•
Dealer Purchased From	•
Dealer Address	•
Dealer Phone No.	•
Model No.	-
Serial No.	

Important Safety Instruction

To avoid any risk of personal injury, material damage or incorrect use of the appliance, be sure to observe the following safety precautions. (After reading these owner's instructions, please keep them in a safe place for reference). Remember to hand them over to any subsequent owner.



Warning

Indicates that a danger of death or serious injury exists



Caution

Indicates that a risk of personal injury or material damage exists

Important Safety Instruction

Warning

Precaution

- This fridge-freezer must be properly installed and located in accordance with the Installation Instruction before it is used.
- Never unplug your fridge-freezer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.
- ∑When moving your appliance away from the wall, be careful not to roll over or damage the power cord.
- ∑After your fridge-freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- ∑Pull out the power plug prior to cleaning the fridgefreezer. Never damage, serverely bend, pull out, or twist the power cord because power cord damage may cause a fire or electronic shock. Never place glass products in the freezer because they may be broken when their inner contents are frozen.
- ∑Do not directly spray water inside or outside the fridge/freezer.

 There is a risk of explosion or fire.
- ∑Do not insert the power plug with wet hands. You may receive an electric shock.
- ∑Do not put a container filled with water on top of the appliance.

 If the water spills on to any electrical parts, it may lead
 - If the water spills on to any electrical parts, it may lead to fire or electric shock.
- ∑Do not install the fridge/freezer in a damp place, where it could be splashed with water. Incorrect insulation of the electrical parts may cause an electric shock or file.

Important Safety Instruction

- ∑Do not disassemble, repair or alter the appliance. It may cause fire or abnormal operations, which may lead to injury.
- ∑Pull the power plug out of the socket before replacing the interior light in the refrigerator. Otherwise, there is a risk of electric shock.
- ∑If possible, connect the fridge-freezer to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload.

It will cause electric shock or fire.

Do not modify or extend the Power Cord length

Accessibility of Supply Plug

Supply Cord Replacement

Danger

Don't store

Grounding (Earthing)

The supply plug of the refrigerator-freezer should be placed in easy accessible position for quick disconnection in emergency.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Risk of child entrapment.

Before you throw away your old refrigerator or freezer: Take off the doors.

Leave the shelves in place so that children may not easily climb inside.

Don't store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current. In order to prevent possible electric shock, this appliance must be grounded. Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

Important Safety Instruction

A Warning

- A Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ⚠ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ▲ Do not damage the refrigerant circuit.
- A Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- A The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposal, please consult with service agent or a similarly qualified person.



This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1m 2 in size for every 8g of P600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.

Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.




A Caution

Important Safety Instruction

- ∑If the wall socket is loose, do not insert the power plug.
 - It may cause electric shock or fire.
- Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull it straight out from the outlet. You may disconnect a wire and cause a short circuit.
- ∑Do not use a wet or damp cloth when cleaning the plug. Remove any foreign matter from the power plug pins.
 - Otherwise, there is a risk of fire.
- Σ Do not put your hands into the bottom area of the appliance.
 - Any Sharp edges may cause personal injury...
- \sum_After unplugging the appliance, wait for at least five minutes before plugging it again to the wall socket.
 - Abnormal operation of the freezer may cause material damage.
- \sum If the appliance is not to be used for a long time, pull out the power plug.
 - Any deterioration in the insulation may cause fire.
- Σ Do not let children touch or play with the control panel on the front of the appliance.
- The refrigerant used in fridge/freezer and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliances are damaged prior to disposal.

Identification of Parts

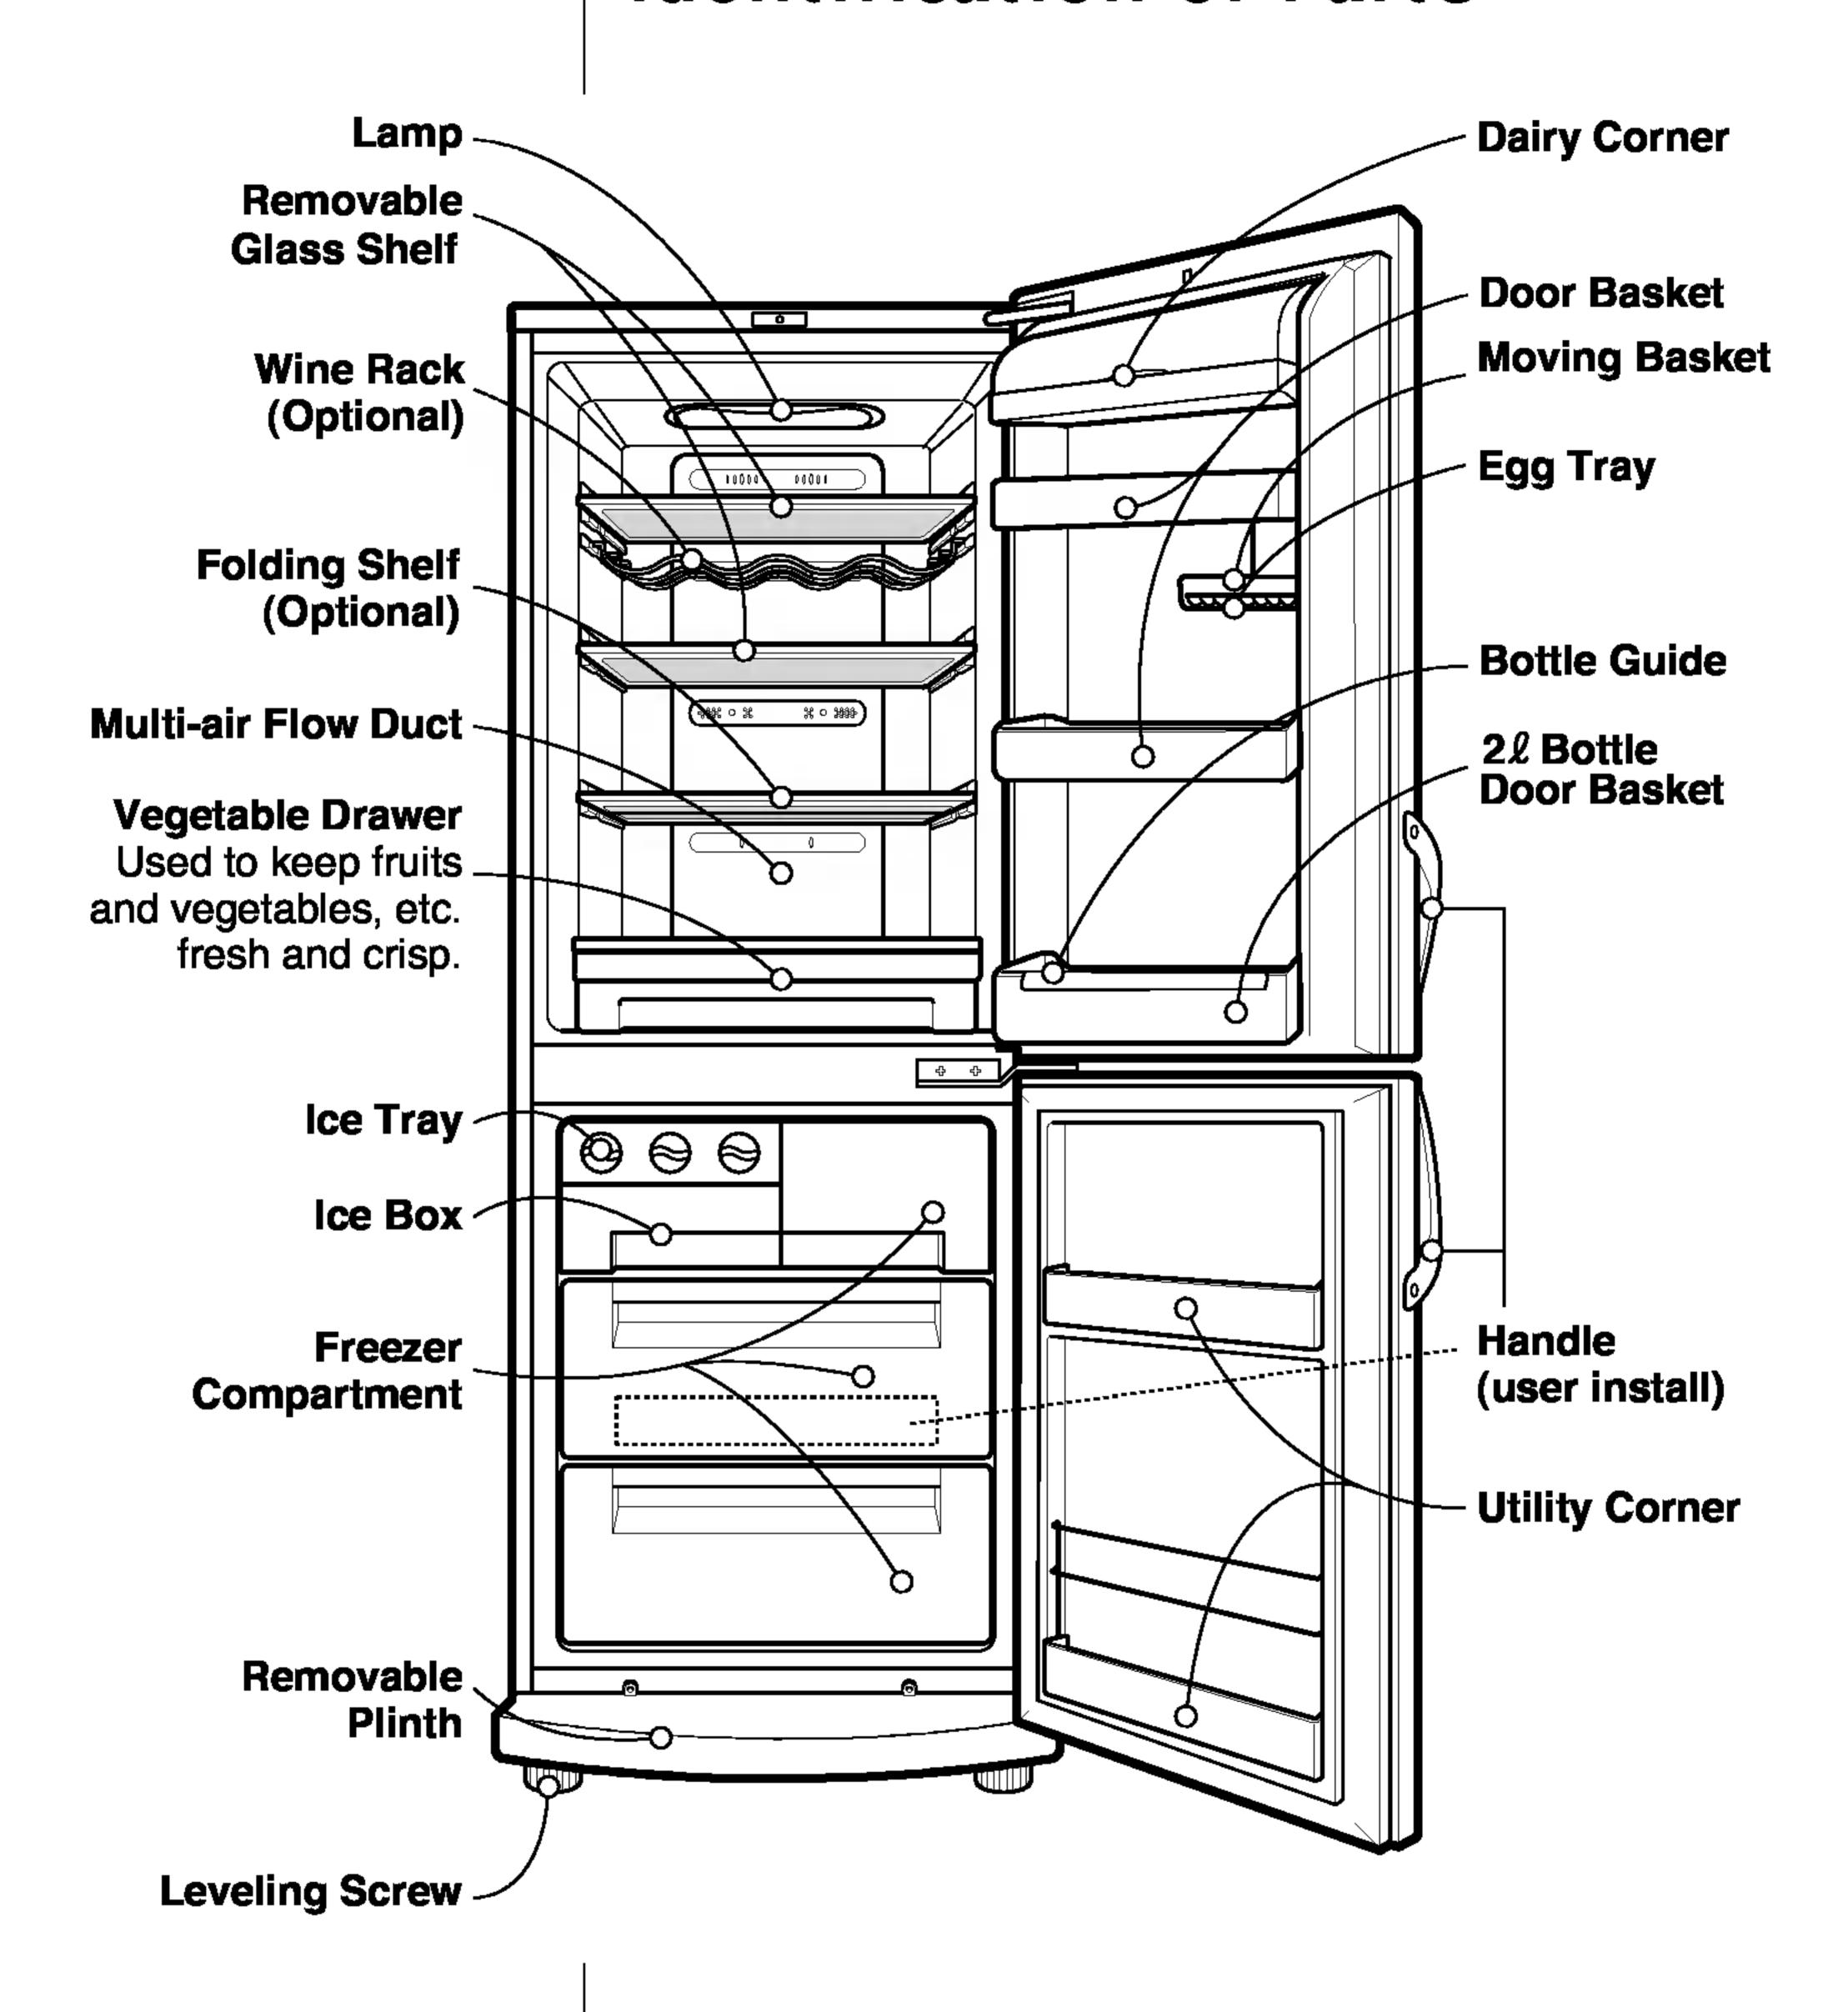

Note

If you find some parts missing from your unit, they may be parts only used in other models. (i.e. the "Miracle Zone" is not included in all models)

Installation

- Select a good location.
 Place your fridge-freezer where it is easy to use.
- 2. Avoid placing the unit near heat sources, direct sunlight or moisture.
- 3. There must be proper air circulation around your fridge-freezer to keep it operating efficiently. If your fridge-freezer is placed in a recessed area in the wall, allow at least 2 inches(5 cm) above.
- 4. To avoid vibration, the unit must be leveled. If required, adjust the leveling screws to compensate for the uneven floor.

The front should be slightly higher than the rear to aid in door closing.

Leveling screws can be turned easily by tipping the cabinet slightly.

Turn the leveling screws counterclockwise () to raise the unit, clockwise () to lower it.

- 5. Clean your fridge-freezer thoroughly and wipe off all dust accumulated during shipping.
- 6. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
- 7. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.

Starting

When your fridge-freezer is installed, allow it 2-3 hours to stabilize at normal operating temperature prior to filling it with fresh or frozen foods.

If power plug is disconnected, allow 5 minutes delay before restarting.


Your fridge-freezer is now ready for use.

Temperature Control

Your fridge-freezer has controls that let you regulate the temperature in the fridge and freezer compartments.

Display Panel For Temperature Control

Adjusting the temperatures and functions

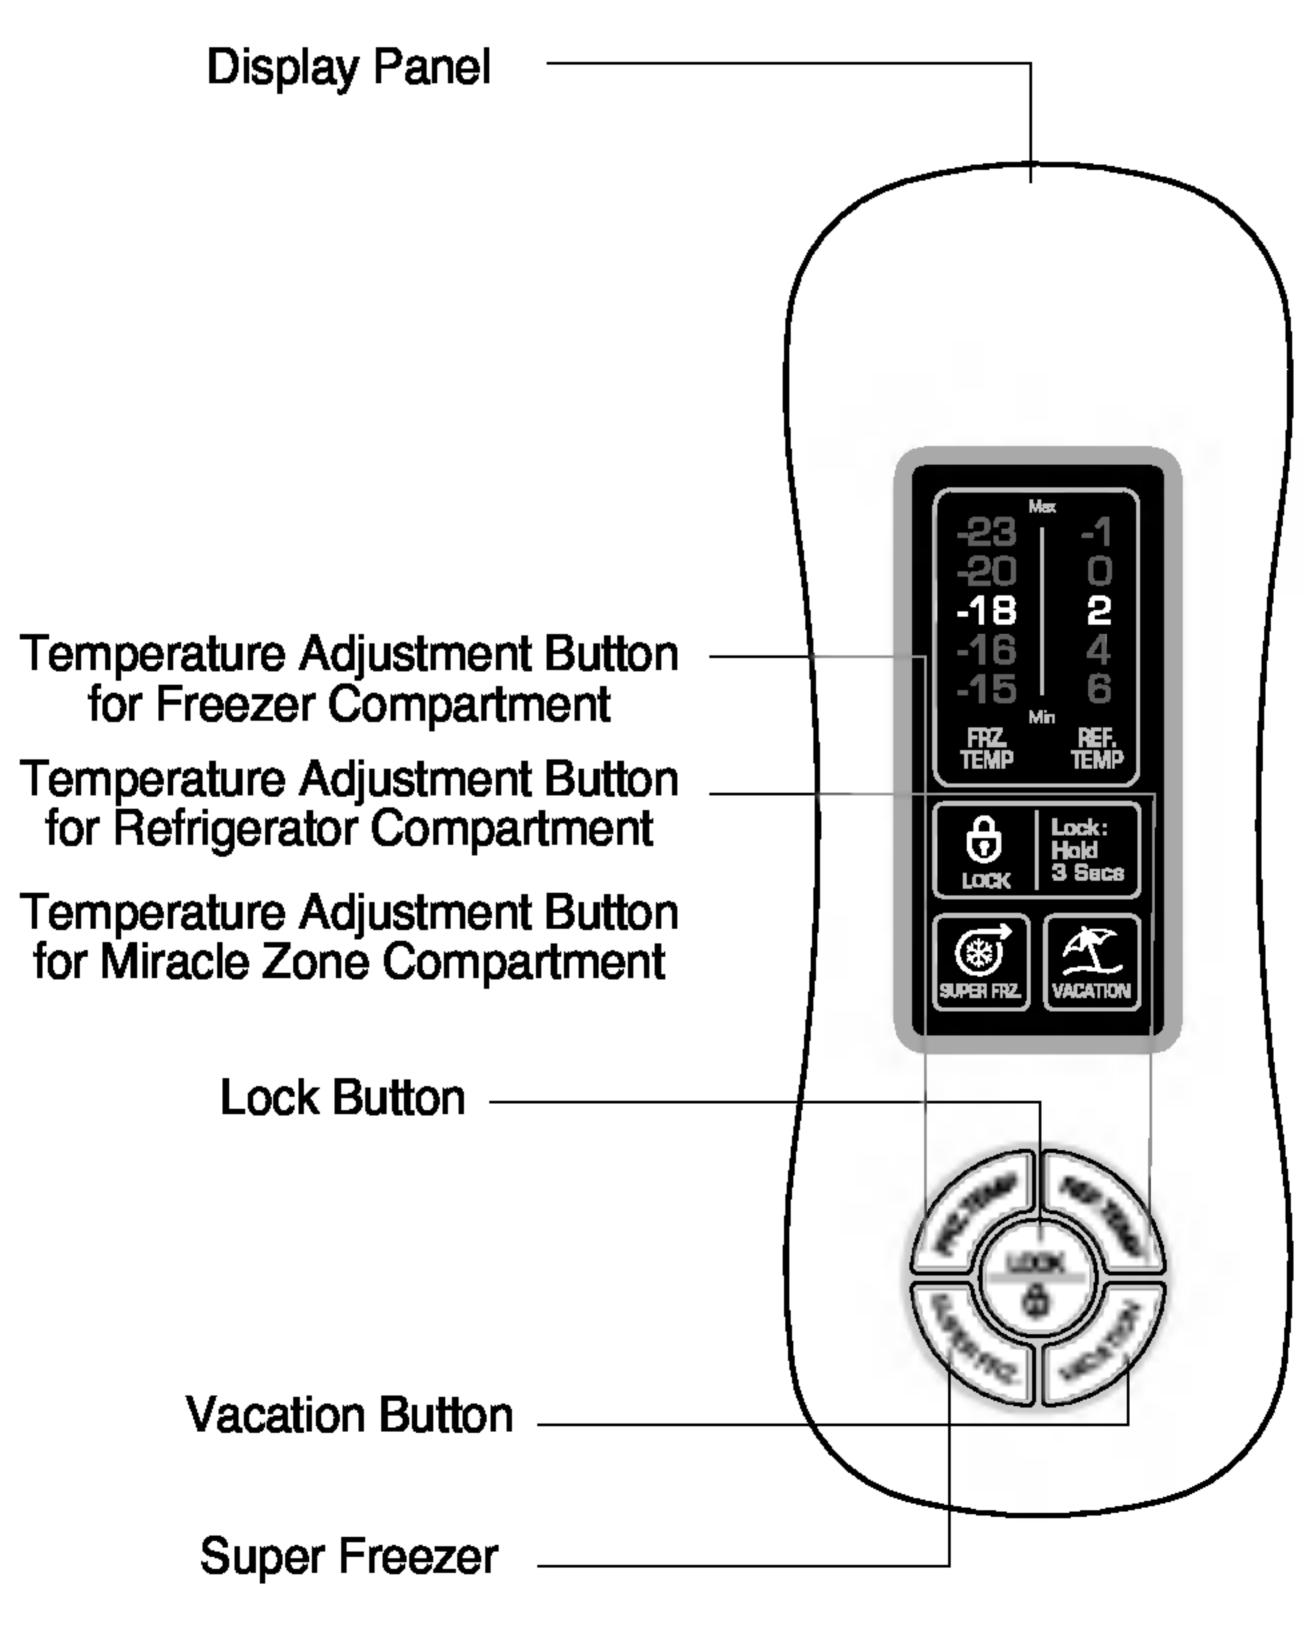

LED Model

Note


How to adjust the temperature in the refrigerator and freezer compartment

All adjust function of LCD Model is operated after pressing any button.

 The initial Temperature of the Freezer and Refrigerator Compartment is -18°C and 2°C respectively. You can now adjust the temperature of the compartments as you want.

LED Model






- When you press the temperature control buttons, the temperature of Pefrigerator and Freezer compartment is repeated in the following order.
 - Refrigeration Compartment: 2°C ¤M°C ¤M1°C ¤M6°C ¤M4°C 4°C

Freezer Compartment:

- -18°C ¤M20°C ¤M23°C ¤M
- -15°C ¤M16°C

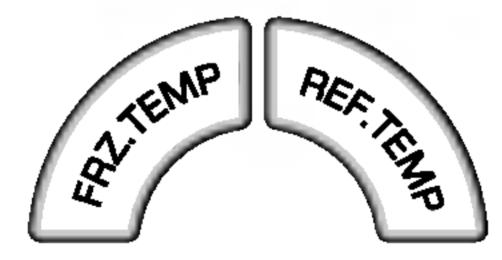

Note

The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator. Pefrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.

Cleaning

Super Feezer

- Please select this function for prompt freezer.
- This function is used when you want to freeze the foods quickly. Press the SUPER FRZ (Super Freezer) button once, and then the quick freeze operation starts with the lamp it.
- The Super Freeze operation takes about 3 hours. When its operation ends, it automatically returns to the previous temperature setting. If you want to stop the quick freeze operation, press the SUPER FRZ button once more, the lamp goes out, and the Super Freeze operation stops and the refrigerator returns to the previous temperature setting.



 The arrow mark graphic remains at the On status after flickering for 4times when selecting Super Freezer is turned "On".

Vacation

 This function makes the fridge-freezer work in a power saving mode which is useful for when you are away on holiday, by reducing energy consumption as much as possible.

Pressing 'VACATION' starts operation with lamp ON and pressing it again stops the operation.



Note

When the Vacation mode is "ON", the other buttons will not operate. When you come back from vacations, press the vacation mode off so that other buttons work and the refrigerator returns to previous temperature setting.


Self Test

- This function automatically detects failure when failure is found in product during the use of refrigerator.
- If the failure occurs at product and it does not operate by pressing any button and normal indication is not done, do not turn the power off and immediately contact with the local service center.
- A lot of time is needed for service engineer to detect the failed part by turning it off.

Lock


For LED Model


- Pressing this button stops operation of other buttons.
- "Locking" or "Un-Locking" is repeated whenever pressing the LOCK button. (For "Locking" or "Un-Locking" press the "LOCK" button for 3 secs.)
- When 'LOCK' is activated, pressing the other buttons would not work.

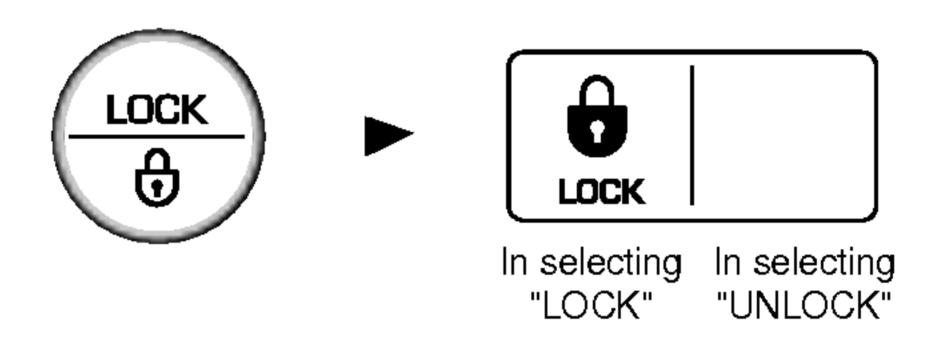

Moving Basket

- This Basket Door can be moved side to side by sliding right or left.
- 2. To remove the Moving Basket, first of all remove front Moving Basket, and lift until bin up bottom of basket unclicks and pull straight out.
- 3. Put back the Moving Basket by sliding it above the desired support slot and firmly bush down until it locks in place. Now put the front Moving Basket back to its support.

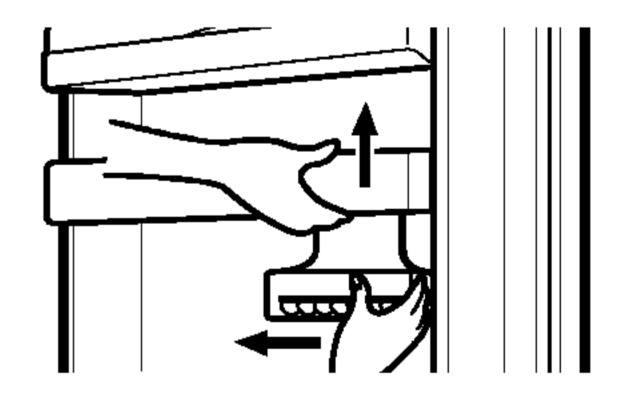

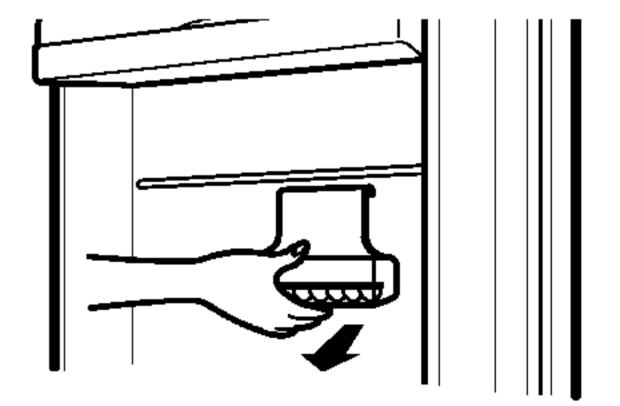

Note

When you move the basket, you had better push the basket bottom side. (like this drawing)

Door Alarm

 When the door of the fridge is left opened for a while, the alarm sounds.


Please contact with the local service center if warning continue to sound even after closing the door.

Ice Making

- Fill water in ice making box of the ice making corner. If water is fully filled the ice will not be separated well and water can be dropped to make ice lumped.
- Ice will be dropped into the ice storage bin by rotating ice separation handle of ice making compartment.



 Potating the ice separation handle before ice is fully frozen may cause the remaining water drop into the ice storage bin to lump the ice together.

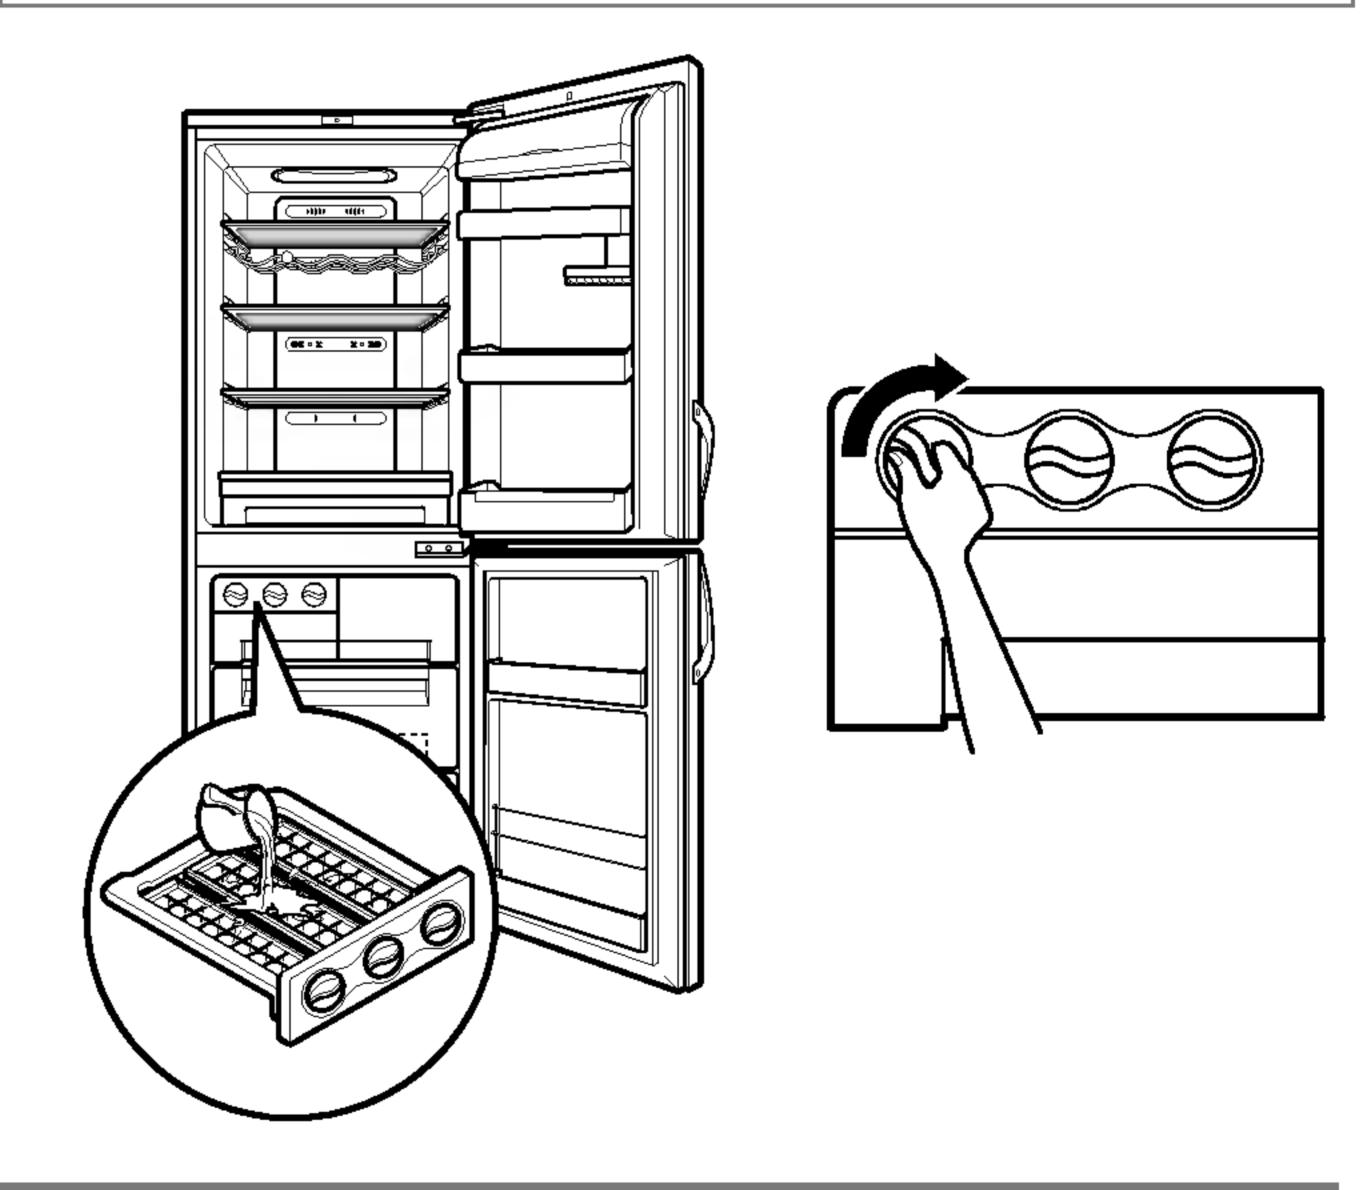

- Tip
- To remove ice cubes easily, run water on the tray before twisting.


Defrosting

- Defrosting takes place automatically.
- The defrosting water flows down to the evaporating tray and is evaporated automatically.

Folding Shelf (Optional)

 You can store taller items such as a gallon or bottles by simply pushing in front half of shelf underneath back half of shelf.


Pull toward you to return to a full shelf.

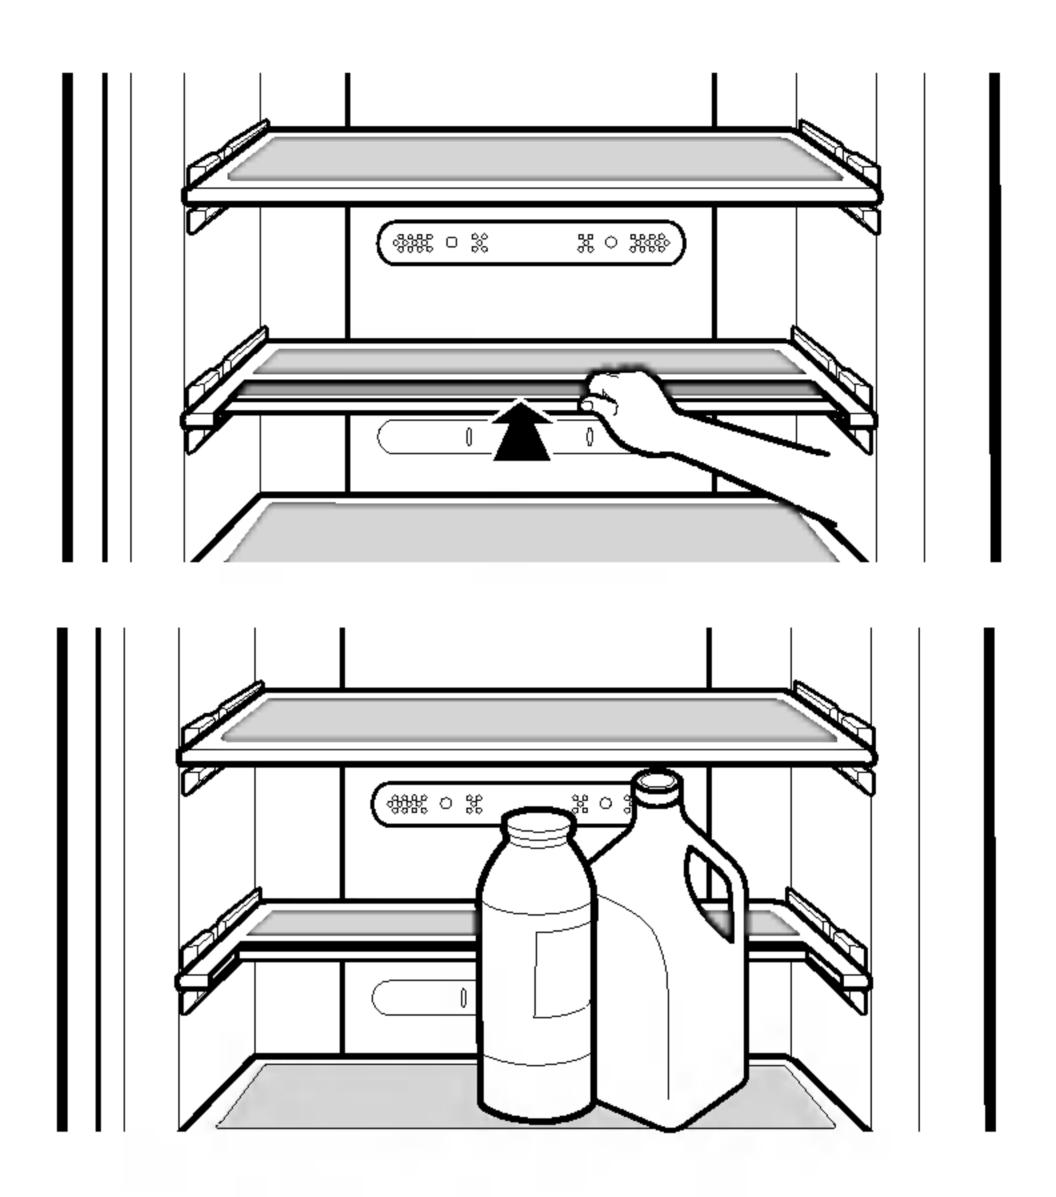

Wine Rack (Optional)

Bottles can be stored laterally with this wine corner.
 Then you can invert the wine rack and place it on the shelf.

This will enable more shelf-place.

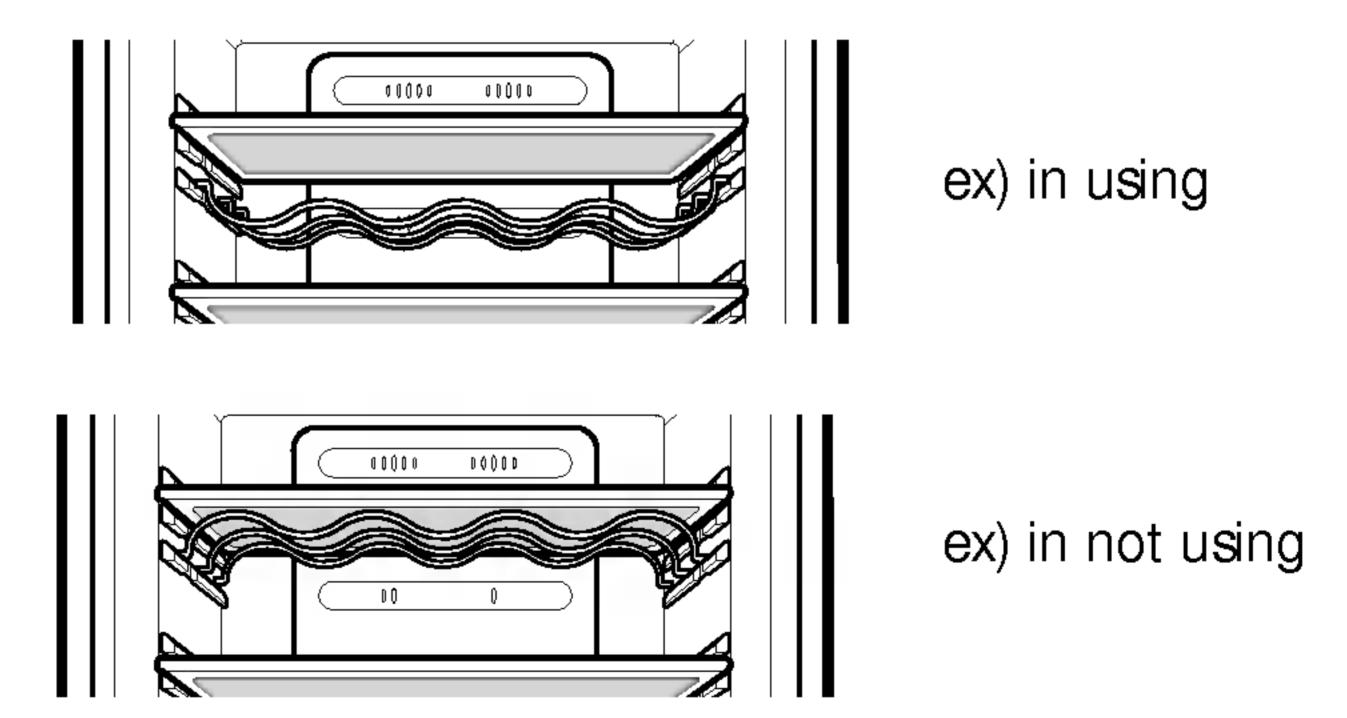

Suggestions on food storage

Storing Food

A Caution

- Do not store food which goes bad easily at low temperature, such as banana, and melon.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- When storing the food, use a container with a lid. This
 prevents moisture from evaporating, and helps food to
 keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.
- Never keep too many foods in door rack, as this may stop the door from fully closing.
- Do not store bottles in the freezer compartment they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- Do not store pharmaceutical products, scientific materials or other temperature sensitive products in the refrigerator.
 - Products that require strict temperature controls must not be stored in the refrigerator.

- Freezer Door Basket, marked ** is -12°C compartment, that is suitable for sort term storage of frozen food.
- If you want to quick freeze new food, you put it middle drawer of freezer compartment, and then press the Super Freezer button.

Note

If you keep the fridge-freezer in a hot, and humid place, frequently open its door or put a lot of vegetables in it, dew may form in it, which has no effect on its performance.

Remove the dew with dust cloth free from care.

General Information

Power Failure

 1~2 hour power failure does no harm to the foods stores. Try to avoid opening and closing the door too frequently.

If You Move


- Take out foods from the fridge-freezer and firmly fix the loose items with tape.
- Turn the leveling screws until they stop before moving the fridge-freezer. Otherwise the screw may scratch the floor or the fridge-freezer cannot move.

Anti Condensation Pipe

- The Anti-Condensation pipe is installed around the front side of fridge-freezer as well as on the partition between fridge compartment and freezer compartment to prevent dewing.
- Especially after installation or when ambient temperature is high, the fridge-freezer may feel hot, which is quite normal.

Lamp Replacement

- 1. Unplug the power cord from the outlet.
- 2. Remove the room lamp lid by taking down while pulling its back projection.

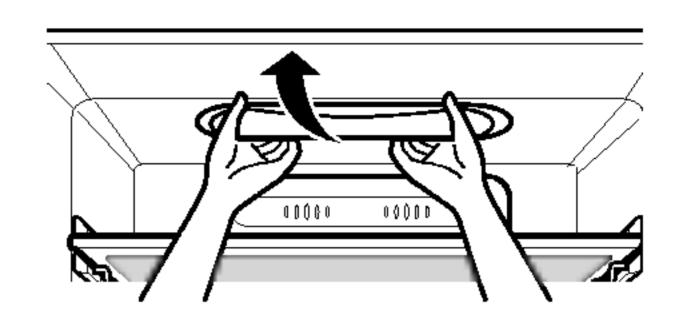

- 3. Remove the lamp by turning it counterclockwise and replace new one.
- 4. Assemble in reverse order of disassembly.
 Replacement bulb must be the same specification as original.

Caution

- You must check the O-RING, which is made by rubber and prevent electric spark.
- Don't touch the lamp, in case of light on the long time. Because it can be very hot.

Note

- Lamp capacity is MAX 30W.
- The lamp will remain "ON" for 7minutes if the door is left open and then it is "OFF" for safety. (If you reopen the door, the lamp is "On".)

To Reverse the Doors

 Your fridge-freezer is designed with reversible doors, do that they may open from either the left of right hand side to suit your kitchen design.

Caution

However, When you want to reverse the doors, you must be calling to service agent.

Cleaning

Before Cleaning

Be sure to unplug the power.

Exterior

Clean the outside of the fridge-freezer with a soft cloth soaked with hot water or liquid detergent. If you use a detergent, be sure to wipe it with a clean wet cloth.

Interior

As above.

After Cleaning

Check that the power cord is not damaged, power plug has not overheated, and that the power plug is tightly inserted into the outlet.

A Warning

Be sure to dry the appliance with a cloth after washing it with water.

Do not use abrasive, petroleum, benzene, thinner, hydrochloride acid, boiling water, rough brush, etc, as they may damage parts of the fridge-freezer.

Trouble Shooting

Before calling for service, check this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Problem

Possible Causes

Fridge-Freezer does not operate

- Power plug may be unplugged from the electric outlet.
 - Plug it in securely.
- House fuse has blown or circuit breaker has tripped.
 - Check and/or replace fuse and reset circuit breaker.
- Power cut.
 Check house lights.

Fridge or Freezer Compartment Temperature too warm

- Temperature control not set on proper position. Refer to Temperature Control section.
- Appliance is placed close to heat source.
- · Warm weather-frequent door openings.
- Door left open for a long time.
- Package holding door open or blocking air duct in freezer compartment.

Vibration or Rattling or Abnormal Noise

- The floor on which the fridge-freezer is installed may be uneven or the fridge-freezer may be unstable.
 - Make it even by rotating the leveling screw.
- Unnecessary objects placed in the back side of the fridge-freezer.

Frost or Ice Crystals on frozen Food

- Door may have been left ajar or package holding door open.
- Too frequent or too long door openings.
- Frost within package is normal.

Moisture forms on Cabinet Surface

This phenomenon is likely to occur in a wet space.
 Wipe it with a dry towel.

Problem

Possible Causes

Moisture collects inside

- Too frequent or too long door openings.
- In humid weather, air carries moisture into fridge when doors are opened.

Fridge has odor


- Foods with strong odors should be tightly covered or wrapped.
- Check for spoiled food.
- Interior needs cleaning.
 Refer to CLEANING section

Door not closing properly

- Food package is keeping door open.
 Move packages that keep door from closing.
- Fridge-freezer is not level. Adjust the leveling screws.
- The floor on which the fridge-freezer is installed may be uneven or the fridge-freezer may be unstable.
 - Slightly raise the front side with the leveling screw.

Interior light does not work

- No power at outlet.
- Light lamp needs replacing.
 Refer to the Lamp Replacement section

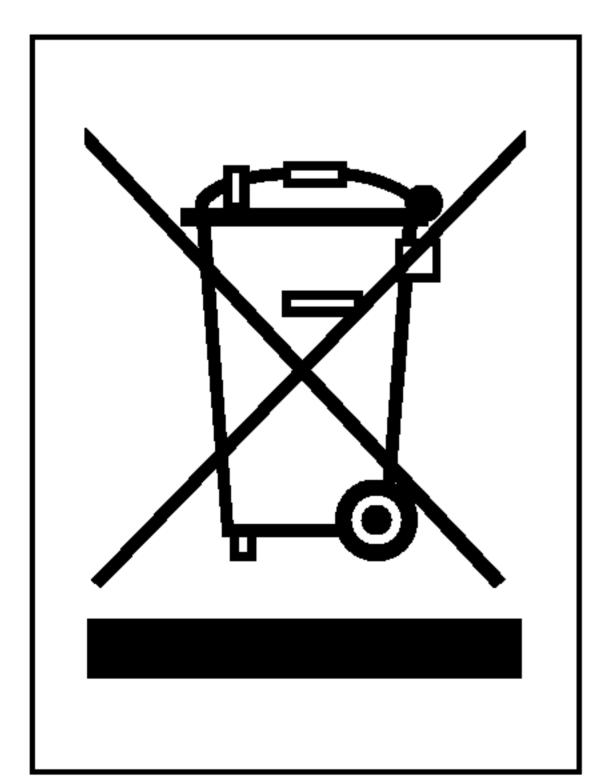

DISPOSAL OF YOUR OLD APPLIANCE

- When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Memo	



LG Twin Tower, 20, Yoido-Dong, Youngdungpo-Gu, Seoul, 150-721, Korea. http://www.lge.com