

KÜHL-GEFRIERSCHRANK

Benutzerhandbuch

Bitte lesen Sie dieses Benutzerhandbuch sorgfältig durch, bevor sie das Gerät in Betrieb nehmen, und bewahren Sie es griffbereit auf, damit Sie jederzeit nachschlagen können

FRIDGE-FREEZER

User's Guide Please read this User's Guide carefully before operating and keep it handy for reference at all times.

REFRIGERATEUR-CONGÉLATEUR

Guide de l'utilisateur Veuillez lire ce guide avec attention avant d'utiliser votre appareil et gardez-le à portée de la main **pour** futures références.

KOEL-VRIESCOMBINATIE

Gebruikershandleiding

Gelieve deze handleiding aandachtig door te nemen voor u met het toestel aan de slag gaat. Hou het altijd bij de hand als referentie.



LG Twin Tower, 20, Yoido-Dong, Youngdungpo-Gu, Seoul, 150-721, Korea. http://www.lge.co.kr

Table of Contents

| Introduction | Registration | |
|---------------------------------------|------------------------------|----------|
| | Important Safety Instruction | |
| | Identification of Parts | |
| | | • |
| Installation | Installation | |
| | Starting | |
| | | • |
| Operation | Temperature Control — | |
| | Super Freezer | |
| | Vacation | |
| | Self Test | |
| | Lock | |
| | Moving Basket | |
| | Door Alarm | |
| | Ice Making | |
| | - | <u> </u> |
| | Defrosting | — |
| | Water Dispenser | |
| | Folding Shelf | |
| | Wine Rack | -46 |
| Currentian On | | |
| Suggestion On | Storing Food | -47 |
| Food storage | | |
| Care and | General Information ———— | 49 |
| Maintenance | Lamp Replacement | |
| | To Reverse the Doors | |
| | | |
| | Cleaning | ย |
| Trouble Shooting | Trouble Shooting | 53 |
| · · · · · · · · · · · · · · · · · · · | | |
| 3 | | |
| | | |

| ntroduction | |
|--------------|--|
| | Registration |
| Introduction | The model and serial number are found on the rear of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here. |
| | Date of Purchase : |
| | Dealer Purchased From : |
| | Dealer Address : |
| | Dealer Phone No. : |
| | Model No. : |
| | Serial No. : |

Important Safety Instruction

To avoid any risk of personal injury, material damage or incorrect use of the appliance, be sure to observe the following safety precautions. (After reading these owner's instructions, please keep them in a safe place for reference). Remember to hand them over to any subsequent owner.



Indicates that a danger of death or serious injury exists



Indicates that a risk of personal injury or material damage exists

Important Safety Instruction

A Warning

| Precaution | This fridge-freezer must be properly installed and located in accordance with the Installation Instruction before it is used. |
|------------|--|
| | • Never unplug your fridge-freezer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet. |
| | • When moving your appliance away from the wall, be careful not to roll over or damage the power cord. |
| | • After your fridge-freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces. |
| | • Pull out the power plug prior to cleaning the fridge- |
| | freezer. Never damage, serverely bend, pull out, or twist the power cord because power cord damage may cause a fire or electronic shock. Never place glass products in the freezer because they may be broken when their inner contents are frozen. |
| | • Do not directly spray water inside or outside the |
| | fridge/freezer. There is a risk of explosion or fire. |
| | Do not insert the power plug with wet hands. You may receive an electric shock. |
| | Do not put a container filled with water on top of the appliance. If the water spills on to any electrical parts, it may lead to fire or electric shock. |
| | • Do not install the fridge/freezer in a damp place, where it could be splashed with water. Incorrect insulation of the electrical parts may cause an electric shock or file. |

| Introduction | |
|---|--|
| | Important Safety Instruction |
| | • Do not disassemble, repair or alter the appliance. It may cause fire or abnormal operations, which may lead to injury. |
| | • Pull the power plug out of the socket before replacing the interior light in the refrigerator. Otherwise, there is a risk of electric shock. |
| Do not modify or extend the Power Cord length | It will cause electric shock or fire. |
| Don't Use an Extention Cord | If possible, connect the fridge-freezer to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload. |
| Accessibility of Supply Plug | The supply plug of the refrigerator-freezer should be placed in easy accessible position for quick disconnection in emergency. |
| Supply Cord Replacement | If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. |
| Danger | Risk of child entrapment. Before you throw away your old refrigerator or freezer: Take off the doors. Leave the shelves in place so that children may not easily climb inside. |
| Don't store | Don't store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. |
| Grounding (Earthing) | In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current. In order to prevent possible electric shock, this appliance must be grounded. Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded. |
| e | 0 |

Introduction

Important Safety Instruction

A Warning

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ▲ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- A Do not damage the refrigerant circuit.
- ▲ Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ▲ The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposal, please consult with service agent or a similarly qualified person.





This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be $1m^2$ in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.

Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

| Introduction | |
|--------------|--|
| | Important Safety Instruction |
| A Caution | If the wall socket is loose, do not insert the power plug. It may cause electric shock or fire. |
| | Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull it straight out from the outlet. You may disconnect a wire and cause a short circuit. |
| | Do not use a wet or damp cloth when cleaning the plug. Remove any foreign matter from the power plug pins. Otherwise, there is a risk of fire. |
| | Do not put your hands into the bottom area of the appliance. Any Sharp edges may cause personal injury |
| | After unplugging the appliance, wait for at least five minutes before plugging it again to the wall socket. Abnormal operation of the freezer may cause material damage. |
| | If the appliance is not to be used for a long time, pull out the power plug. Any deterioration in the insulation may cause fire. |
| | Do not let children touch or play with the control panel on the front of the appliance. |
| | • The refrigerant used in fridge/freezer and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliances are damaged prior to disposal. |
| | |

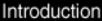

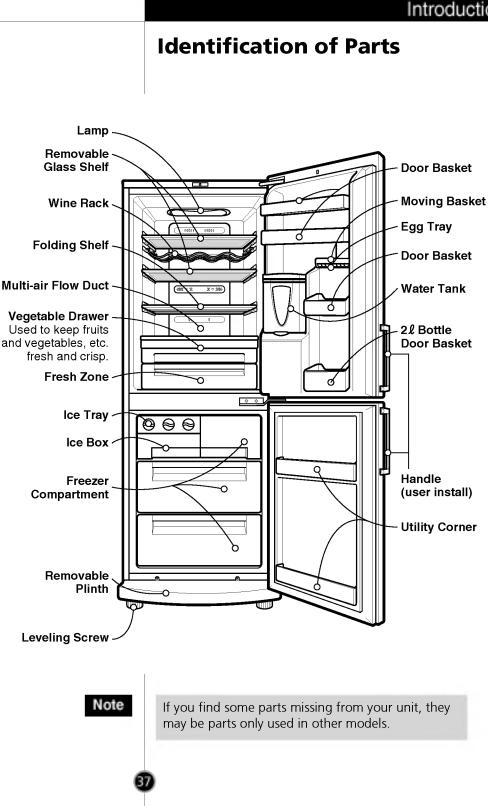

| Installation | | |
|--------------|--------|--------|
| | | |
| | INSTRE | |
| | niola | παιισπ |


| Installation | 1. Select a good location. |
|--------------|---|
| | Place your fridge-freezer where it is easy to use. |
| | Avoid placing the unit near heat sources, direct sunlight or moisture. |
| | 3. To ensure proper air circulation around the fridge - freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall. |
| | 4. To avoid vibration, the unit must be leveled. If required, adjust the leveling screws to compensate for the uneven floor. The front should be slightly higher than the rear to aid in door closing. |
| | Leveling screws can be turned easily by tipping the cabinet slightly. Turn the leveling screws counterclockwise(+>) to raise the unit, clockwise(+>) to lower it. |
| | Clean your fridge-freezer thoroughly and wipe off all dust accumulated during shipping. |
| | 6. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment. |
| | Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet. |
| Starting | When your fridge-freezer is installed, allow it 2-3 hours to stabilize at normal operating temperature prior to filling it with fresh or frozen foods. If power plug is disconnected, allow 5 minutes delay before restarting. Your fridge-freezer is now ready for use. |
| | |

Temperature Control

Your fridge-freezer has controls that let you regulate the temperature in the fridge and freezer compartments.

Display Panel For Temperature Control


Adjusting the temperatures and functions

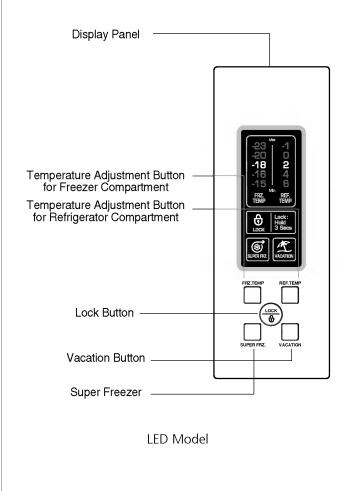

Operation

How to adjust the temperature in the refrigerator and freezer compartment The initial Temperature of the Freezer and Refrigerator Compartment is -18°C and 2°C respectively. You can now adjust the temperature of the compartments as you want.


LED Model

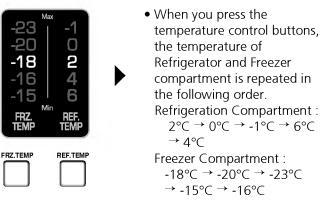

Note


The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator.

Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.

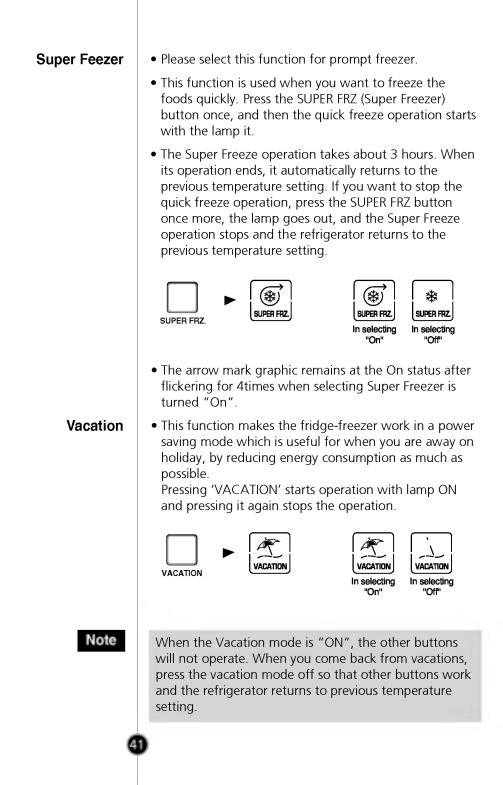


| Operation | |
|---------------|--|
| Self Test | This function automatically detects failure when failure is found in product during the use of refrigerator. If the failure occurs at product and it does not operate by pressing any button and normal indication is not done, do not turn the power off and immediately contact with the local service center. A lot of time is needed for service engineer to detect the failed part by turning it off. |
| Lock | For LED Model Pressing this button stops operation of other buttons. "Locking" or "Un-Locking" is repeated whenever pressing the LOCK button. (For "Locking" or "Un-Locking" press the "LOCK" button for 3 secs.) When 'LOCK' is activated, pressing the other buttons would not work. |
| Moving Basket | LICK In selecting In selecting "LOCK" "UNLOCK" 1. This Basket Door can be moved side to side by sliding right or left. 2. To remove the Moving Basket, first of all remove front Moving Basket, and lift until bin up bottom of basket unclicks and pull straight out. 3. Put back the Moving Basket hy cliding it above |
| Note | Basket by sliding it above the desired support slot and firmly bush down until it locks in place. Now put the front Moving Basket back to its support. When you move the basket, you had better push the basket bottom side. (like this drawing) |

| When the door of the fridge is left opened for a while, the alarm sounds. Please contact with the local service center if warning continue to sound even after closing the door. |
|--|
| Fill water in ice making box of the ice making corner. If water is fully filled the ice will not be separated well and water can be dropped to make ice lumped. Ice will be dropped into the ice storage bin by rotating ice separation handle of ice making compartment. |
| • Rotating the ice separation handle before ice is fully frozen may cause the remaining water drop into the ice storage bin to lump the ice together. |
| |
| • To remove ice cubes easily, run water on the tray before twisting. |
| Defrosting takes place automatically. The defrosting water flows down to the evaporating tray and is evaporated automatically. |
| |

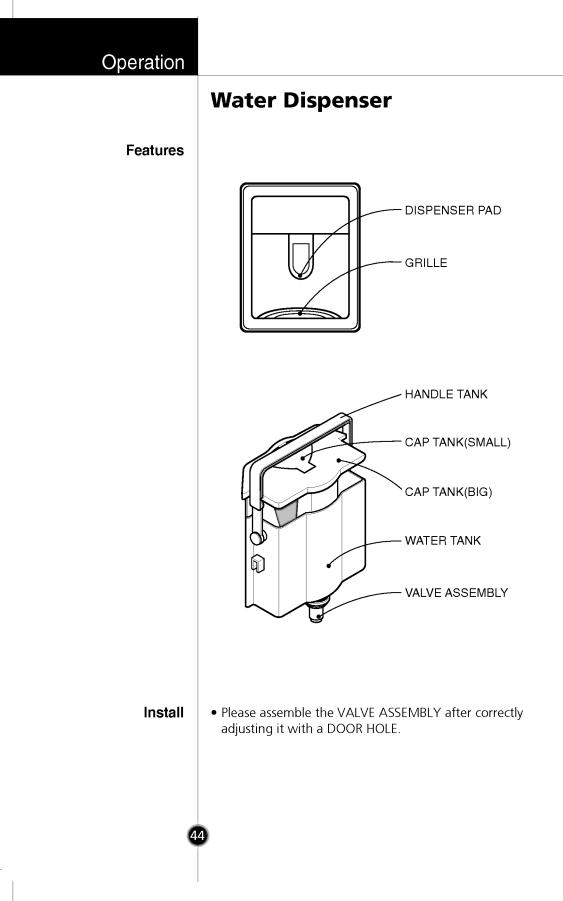

| After turning the HANDLE Tank backward with the WATER TANK installed at the DOOR, Open the CAP TANK (SMALL) and then fill water using a kettle etc. * Fill water while watching a sight glass on the front of the WATER TANK. * Water up to 4.5¢ can be filled. Press and fix the CAP TANK(SMALL). After filling spring water, fix the HANDLE TANK at a |
|---|
| proper position. |
| Press the Dispenser Pad with a cup. If pressing the Pad, water inside of the Dispenser is supplied. |
| 3. If slowly removing a cup from the Pad, water will not fall down. |
| Do not use other beverage (milk, juice, carbonated beverage etc) than spring water. Especially beverage including grain must not be used (may result in failure). |
| |

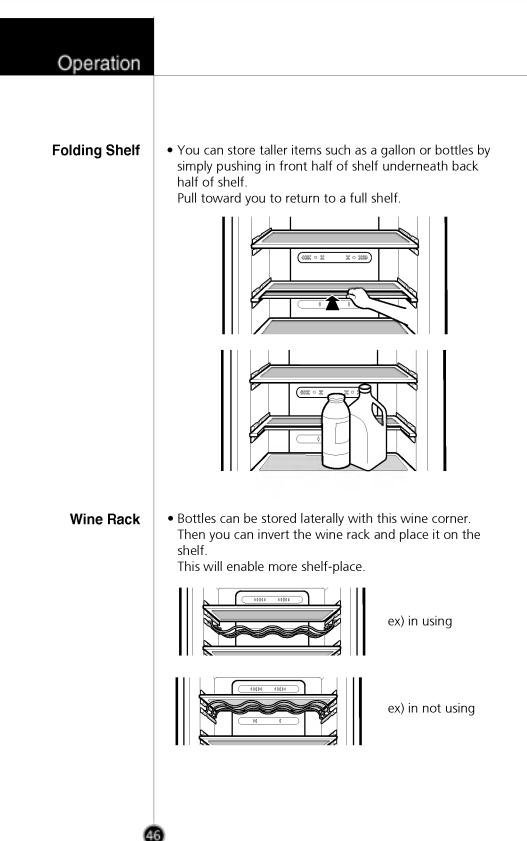

Storing Food

A Caution

- Do not store food which goes bad easily at low temperature, such as banana, and melon.
 - Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
 - When storing the food, use a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
 - Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
 - Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.
 - Never keep too many foods in door rack, as this may stop the door from fully closing.
 - Do not store bottles in the freezer compartment they may break when frozen.
 - Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
 - Do not store pharmaceutical products, scientific materials or other temperature sensitive products in the refrigerator.

Products that require strict temperature controls must not be stored in the refrigerator.

Suggestions on food storage

- Freezer Door Basket, marked $(\star \star)$ is -12°C compartment, that is suitable for sort term storage of frozen food.
- If you want to quick freeze new food, you put it middle drawer of freezer compartment, and then press the Super Freezer button.

Note

If you keep the fridge-freezer in a hot, and humid place, frequently open its door or put a lot of vegetables in it, dew may form in it, which has no effect on its performance.

Remove the dew with dust cloth free from care.

| General Information |
|---|
| |
| 1~2 hour power failure does no harm to the foods stores. Try to avoid opening and closing the door too frequently. |
| Take out foods from the fridge-freezer and firmly fix the loose items with tape. Turn the leveling screws until they stop before moving the fridge-freezer. Otherwise the screw may scratch the floor or the fridge-freezer cannot move. |
| The Anti-Condensation pipe is installed around the front side of fridge-freezer as well as on the partition between fridge compartment to prevent dewing. Especially after installation or when ambient temperature is high, the fridge-freezer may feel hot, which is quite normal. |
| |

Care and Maintenance

| Lamp Replacement | Unplug the power cord from the outlet. Remove the room lamp lid by taking down while pulling its back projection. Remove the lamp by turning it counterclockwise and replace new one. Assemble in reverse order of disassembly. Replacement bulb must be the same specification as original. |
|-------------------------|---|
| ▲ Caution | You must check the O-RING, which is made by rubber and prevent electric spark. Don't touch the lamp, in case of light on the long time. Because it can be very hot. |
| Note | Lamp capacity is MAX 30W. The lamp will remain "ON" for 7minutes if the door is left open and then it is "OFF" for safety. (If you reopen the door, the lamp is "On".) |
| To Reverse the Doors | • Your fridge-freezer is designed with reversible doors, do that they may open from either the left of right hand side to suit your kitchen design. |
| A Caution | However, When you want to reverse the doors, you must be calling to service agent. |
| 6 | 0 |

| | Care and Maintenance |
|-----------------|---|
| | Cleaning |
| Before Cleaning | Be sure to unplug the power. |
| Exterior | Clean the outside of the fridge-freezer with a soft cloth soaked with hot water or liquid detergent. If you use a detergent, be sure to wipe it with a clean wet cloth. |
| Interior | As above. |
| After Cleaning | Check that the power cord is not damaged, power plug has not overheated, and that the power plug is tightly inserted into the outlet. |
| A Warning | Be sure to dry the appliance with a cloth after washing it with water. Do not use abrasive, petroleum, benzene, thinner, hydrochloride acid, boiling water, rough brush, etc, as they may damage parts of the fridge-freezer. |
| 6 | |

Care and Maintenance

| GRILLE and DRIP TRAY | Remove the HOLE part of the GRILLE with the finger. Wipe moisture out around the DOOR part and the DRIP TRAY using a clean cloth. | |
|---------------------------|---|--|
| Exterior Dispenser | Wipe moisture etc out outside of Dispenser and on the Dispenser Pad using a cloth. | |
| Water Tank | Lift the WATER TANK up by pressing the fixing LEVER on the bottom of WATER TANK and then remove it. After removing the CAP TANK (BIG), clean and fully rinse the inside/outside part of the WATER TANK by using neutral cleansing agent. | |
| Cap Tank (Big & Small) | Clean and fully rinse the Cap Tank (Big & Small) by using neutral cleansing agent. Especially for the groove part of the CAP TANK, it is convenient to cleanse it by using a small brush. | |
| Valve Assembly | Clean and fully rinse the VALVE ASSEMBLY by using a small brush. Rinse it while operating the bottom part of the valve assembly. Always fix the Sealing Rubber separated for cleansing at the existing position (may result in water leakage). | |
| 5 | 2 | |

Trouble Shooting

| | Before calling for service, check this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance. |
|---|---|
| Problem | Possible Causes |
| Fridge-Freezer does not operate | Power plug may be unplugged from the electric outlet. Plug it in securely. House fuse has blown or circuit breaker has tripped. Check and/or replace fuse and reset circuit breaker. Power cut. Check house lights. |
| Fridge or Freezer Compartment Temperature too warm | Temperature control not set on proper position. Refer to Temperature Control section. Appliance is placed close to heat source. Warm weather-frequent door openings. Door left open for a long time. Package holding door open or blocking air duct in freezer compartment. |
| Vibration or Rattling or Abnormal Noise | The floor on which the fridge-freezer is installed may be uneven or the fridge-freezer may be unstable. Make it even by rotating the leveling screw. Unnecessary objects placed in the back side of the fridge-freezer. |
| Frost or Ice Crystals on frozen Food | Door may have been left ajar or package holding door open. Too frequent or too long door openings. Frost within package is normal. |
| Moisture forms on Cabinet Surface 5 | This phenomenon is likely to occur in a wet space. Wipe it with a dry towel. |

Trouble Shooting

| Problem | Possible Causes |
|---------------------------------|---|
| Moisture collects inside | Too frequent or too long door openings. In humid weather, air carries moisture into fridge when doors are opened. |
| Fridge has odor | Foods with strong odors should be tightly covered or wrapped. Check for spoiled food. Interior needs cleaning. Refer to CLEANING section |
| Door not closing properly | Food package is keeping door open. Move packages that keep door from closing. Fridge-freezer is not level. Adjust the leveling screws. The floor on which the fridge-freezer is installed may be uneven or the fridge-freezer may be unstable. Slightly raise the front side with the leveling screw. |
| Interior light does not work | No power at outlet. Light lamp needs replacing. Refer to the Lamp Replacement section |



DISPOSAL OF YOUR OLD APPLIANCE

- 1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Memo

| Warranty Certificate For offer a 24-month warranty for this apparatus | | | | |
|--|---|--|--|--|
| to your dealer free, if this xcluded. We are not liabl | we will repair your apparatus at no cost to you or make available apparatus fails due to manufacturing or material defects. Further le for damages due to acts of providence or damages occurring shipping and packaging costs. Your warranty conditions on the | | | |
| aratus : | Serial number : | | | |
| yer: | | | | |
| ate : | Dealer's stamp and signature | | | |
| | For offer a 24-r 4-month warranty period, to your dealer free, if this xcluded. We are not liab bort. The buyer assumes a ply! aratus : yer : | | | |

Warranty conditions for refrigerator

- The warranty period begins on the purchase date and is valid for 24 months. Begin of warranty period is proven if, the buyer submits purchase receipt together with the warranty card, filled in and signed by the seller. The serial number of the product must agree with the number entered onto the warranty card.
- During the warranty period, we will correct any defects at no cost to you, if it can be proven that these are attributed to manufacturing or material defects.
- 3. Damages due to incorrect handling, noncompliance with instructions for use and normal wear are not covered by this warranty. Also, the warranty does not cover wear parts or easily broken parts (for example, viewing glass, light bulbs). The buyer is responsible for any damages during transport as well as shipping and packaging costs.

- 4. We decide whether to make repairs, exchange or replace parts. Exchanged or replaced parts are our property. The original warranty period is not prolonged if a refrigerator is repaired or certain parts are replaced.
- 5. The warranty is nullified if any person intervenes in the apparatus that are not authorised by LG Electronics, if the apparatus is used for commercial purposes.
- Always keep the original packaging, so that if the apparatus requires servicing, it can be transported without damaging it.
- 7. If a repair is covered by this warranty, always contact your dealer or an authorised service centre.
- 8. Further claims are excluded. If parts of these provisions are invalid, they apply in the sense of the wording. The validity of the other provisions is not effected.

Memo

Memo