User's Guide

W1942PE W2042PE W2242PE

Make sure to read the **Important Precautions** before using the product. Keep the User's Guide(CD) in an accessible place for future reference.

See the label attached on the product and give the information to your dealer when you ask for service.



Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential electrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury:

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not drop an object on or apply impact to the product. Do not throw any toys or objects on the product screen.
 - It can cause injury to human, problem to product and damage the display.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- When the display is to be left unattended for an extended period of time, unplug it from the wall outlet.
- In the presence of thunder and lightning, never touch the power cord and signal cable because it can be very dangerous. It can cause electric shock.

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.
- Main power breaker is the power cord and this breaking device must be located at a location where it is easy to operate.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

Leaving a fixed image on the screen for a long time may cause damage to the screen and cause image burn-in. Make sure to use a screen saver on the product. Burn-in and related problems are not covered by the warranty on this product.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

 Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.


On Disposal

- The fluorescent lamp used in this product contains a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

 Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.


Connecting the stand

- 1. Place the monitor with its front facing downward on a cushion or soft cloth.
- Assemble the Stand Base into the Stand Body.Be sure don't pull out the Stop Pin and make the Stand Base direction as shown.

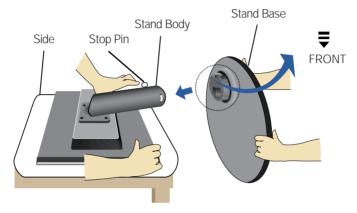

3. Make the monitor stand, then pull out the Stop Pin.

Warning: The tape and locking pin may only be removed from those monitors equipped with a standing base when the base is pulled up. Otherwise, you may be injured by the protruding sections of the stand.

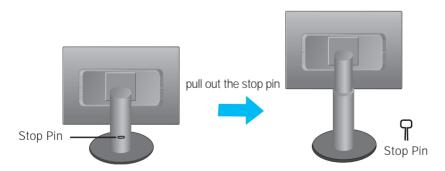

Important


- This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.
- Do not carry the product upside down holding only the stand base. The product may fall and get damaged or injure your foot.

Connecting the Display


 Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

Positioning your display

1. Adjust the position of the panel in various ways for maximum comfort.

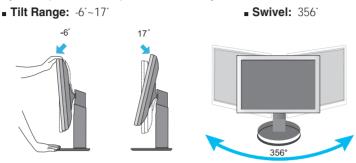

■ Height Range: maximum 4.33 inch (110.0 mm)

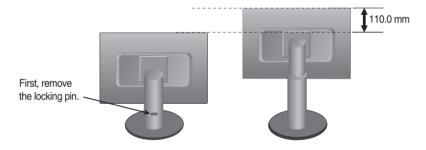


Ergonomic

It is recommended that in order to maintain an ergonomic and comfortable viewing position, the forward tilt angle of the monitor should not exceed 5 degrees.

Using the Pivot function

- **1.** Lift the monitor to its highest height to utilize the Pivot function.
- **2.** Landscape & Portrait: You can rotate the panel 90° clockwise.

 Please be cautious and avoid contact between the monitor head and the Stand Base when rotating the screen to access the Pivot function. If the monitor head touches the Stand Base, then the Stand Base could crack.

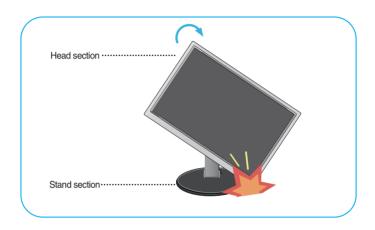

3. For detailed information, please refer to the Pivot Software CD provided.





Connecting the Display

■ Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

Positioning your display

Using the cable holder

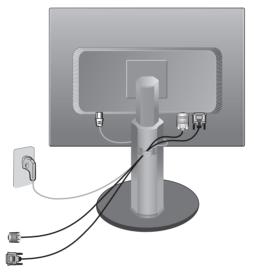

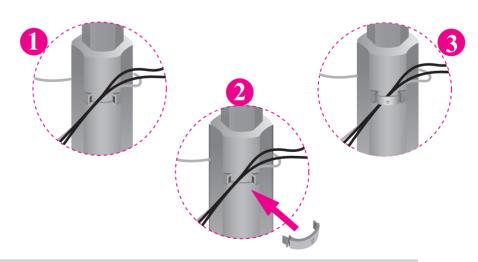


If you want to use the cable holder to let your cables together, please put them through right as shown. For if you don't do like that, you cannot use Pivot function smoothly.

Using the Computer

- Make sure to turn off the computer and product. Connect the cable as below sketch map form ① to ②.
- A Connect DVI Cable
- B Connect Dsub Cable (PC)
- Connect Dsub Cable (Mac)

NOTE

- This is a simplified representation of the rear view.
- This rear view represents a general model; your display may differ from the view as shown.
- User must use shielded signal interface cables (D-sub 15 pin cable, DVI cable) with ferrite cores to maintain standard compliance for the product.

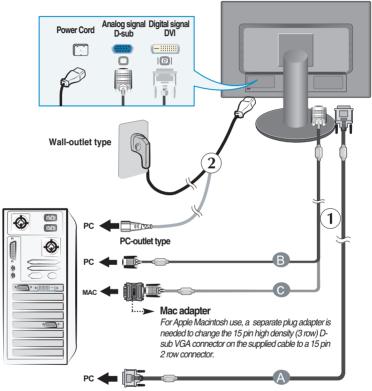

DVI-D(This feature is not available in all countries.)

2. Press \bigcirc button on the front switch panel to turn the power on. When monitor power is turned on, the 'Self Image Setting Function' is executed automatically. (Only Analog Mode)




NOTE


'Self Image Setting Function'? This function provides the user with optimal display settings. When the user connects the monitor for the first time, this function automatically adjusts the display to optimal settings for individual input signals.

'AUTO/SET' Function? When you encounter problems such as blurry screen, blurred letters, screen flicker or tilted screen while using the device or after changing screen resolution, press the AUTO/SET function button to improve resolution.



Front Panel Controls

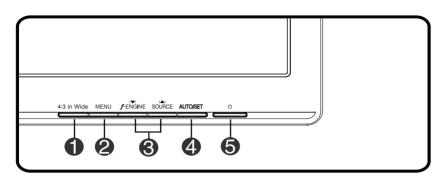

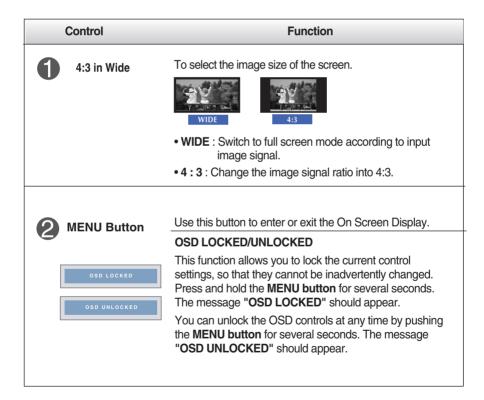

Control Panel Functions

	Control	Function
3	▼ ▲ Buttons	Use these buttons to select or adjust functions in the On Screen Display.
	▼ f •ENGINE	For more information, refer to page A16.
		FENGINE WELL SET IN MEMBERS NORMAL
	▲ SOURCE	Use this button to make D-Sub or DVI connector active. This feature is used when two computers are connected to the display. The default setting is D-Sub.
4	AUTO/SET Button	Use this button to enter a selection in the On Screen Display.
	PROCESSING AUTO IMAGE ADJUSTMENT	AUTO IMAGE ADJUSTMENT When adjusting your display settings, always press the AUTO/SET button before entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode). The best display mode is
		-W1942PE: 1440 x 900 -W2042PE/W2242PE: 1680 x 1050
5	Power Button	Use this button to turn the display on or off.
	Power Indicator	This Indicator lights up blue when the display operates normally(On Mode). If the display is in Sleep Mode (Energy Saving), this indicator color changes to flicker.

On Screen Display (OSD) Control Adjustment

Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

■ Allow the display to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:



- Press the MENU Button, then the main menu of the OSD appears.
- 2 To access a control, use the ▼ or ▲ Buttons. When the icon you want becomes highlighted, press the AUTO/SET Button.
- Use the ▼/ ▲ Buttons to adjust the image to the desired level. Use the AUTO/SET Button to select other sub-menu items.
- Push the MENU Button once to return to the main menu to select another function. Push the MENU Button twice to exit from the OSD.

The following table indicates all the On Screen Display control, adjustment, and setting menus.


Main menu	Sub-menu		Α	D	Reference
PICTURE	BRIGHTNESS CONTRAST				To adjust the brightness, contrast and gamma of the
	GAMMA				screen
COLOR		sRGB			To customize the color of
COLOR	PRESET	6500K			the screen
		9300K			
	RED				
	GREEN				
	BLUE				
	HORIZONTAL				To adjust the position of the
	VERTICAL				screen
TRACKING	CLOCK				To improve the elerity and
	PHASE				To improve the clarity and stability of the screen
	SHARPNESS				
SETUP	LANGUAGE				To customize the screen
	OSD	HORIZONTAL			status for a user's operating
	POSITION VERTICAL				environment
	WHITE BA	LANCE			
	POWER INDICATOR				
	FACTORY RESET				
FLATRON	MOVIE				To select or customize
F-ENGINE	INTERNET				desired image settings
	USER				
NORMAL					
	DEMO				
	: AdjustableA : Analog InputD : Digital Input				

NOTE

■ The order of icons may differ depending on the model (A11~A16).

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.

Press the MENU Button, then the main menu of the OSD appears.

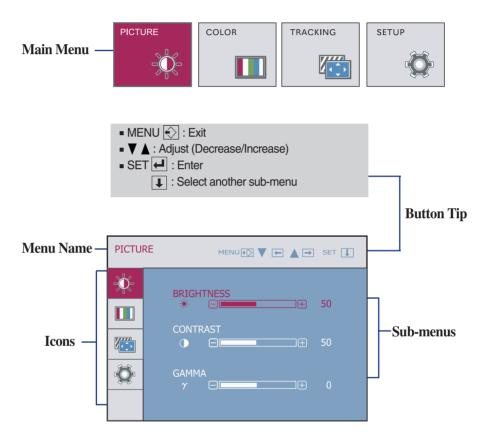

NOTE

 $_{\blacksquare}$ OSD (On Screen Display) menu languages on the monitor may differ from the manual.

Main menu Sub menu Description PICTURE **PICTURE** PICTURE **BRIGHTNESS** To adjust the brightness of the screen. MENU ♠ ▼ ♠ ▲ → SET ↓ To adjust the contrast of the screen. CONTRAST Z.... 000 Set your own gamma value. : -50/0/50 **GAMMA** On the monitor, high gamma values display whitish images and low gamma ■ MENU : Exit values display high contrast images. : Decrease : Increase : Select another sub-menu COLOR **COLOR** Select the screen color. **PRESET** . sRGB: Set the screen color to fit the COLOR MENU♠ ▼ ← ▲ → SET ↓ SRGB standard color * specification. • 6500K: Slightly reddish white. • 9300K: Slightly bluish white. 400 Ö Set your own red color levels. RED Set your own green color levels. GREEN ■ MENU : Exit Set your own blue color levels. BLUE : Decrease

: Increase

: Select another sub-menu

Main menu	Sub menu	Description
TRACKING		
TRACKING MENU® ▼ ■ ▲ ■ SET ↓ HORIZONTAL	HORIZONTAI	L To move image left and right.
VERTICAL 50	VERTICAL	To move image up and down.
TRACKING MERCHAN W H A - SET I	CLOCK	To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.
■ MENU: Exit ■ ▼ : Decrease ■ ▲ : Increase	PHASE	To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.
SET : Select another sub-menu	SHARPNESS	To adjust the clearness of the screen.


Main menu	Sub menu	Description
SETUP	LANGUAGE	To choose the language in which the control names are displayed.
SETUP MUNICIPAL OF A FIRST CONTROL OF THE CONTROL O	OSD POSITION	To adjust position of the OSD window on the screen.
LANGUAGE ENGLISH OSP POSITION HORIZONTAL OSP POSITION HORIZONTAL	WHITE BALANCE	If the output of the video card is different the required specifications, the color level may deteriorate due to video signal distortion. Using this function, the signal level is adjusted to fit into the standard output level of the video card in order to provide the optimal image. Activate this function when white and black colors are present in the screen.
POWER INDICATOR NO NO FACTORY RESET NO ANALOG 1200 x 1024 60Hz MENU: Exit : Adjust	POWER INDICATOR	Use this function to set the power indicator on the front side of the monitor to ON or OFF . If you set OFF , it will go off. If you set ON at any time, the power indicator will automatically be turned on.
SET : Adjust : Select another sub-menu	FACTORY RESET	Restore all factory default settings except "LANGUAGE." Press the button to reset immediately.

If this does not improve the screen image, restore the factory default settings. If necessary, perform the white balance function again. This function will be enabled only when the input signal is an analog signal.

■■ The OSD screen will appear when you touch the SENGINE button on the left side of the monitor.



Main menu Sub menu Description This feature lets you easily select the best desired image condition optimized to the environment (ambient illumination, image types etc). MOVIE: For animation images in videos or movies INTERNET: For text images (Word processing etc.)

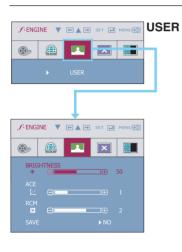

User

You can manually adjust brightness, ACE or RCM. You can save or restore the adjusted value even when using a different environment.

- → (Brightness): Adjusts screen brightness.
- ···ACE(Adaptive Clarity Enhancer): Selects the clarity mode.
- •••RCM(Real Color Management): Selects the color mode.

Green enhance
Flesh tone
Color Enhance

Select the sub-menu using the AUTO/SET button and save the YES value using the , buttons.



NORMAL This is under normal operating conditions.

DEMO This is just for advertising to customer in the shops. It's setting is same with Movie mode and screen is divided by half.

Check the following before calling for service.

No image appears

- Is the power cord of the display connected?
- Check and see if the power cord is connected properly to the power outlet.
- Is the power on and the power indicator blue or green?
- Adjust the brightness and the contrast.
- Is the power indicator amber?
- If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.
- Try to turn on the PC.
- Do you see an "OUT OF RANGE" message on the screen?
- This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.
- Do you see a "CHECK SIGNAL CABLE" message on the screen?
- This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again.

Do you see a "OSD LOCKED" message on the screen?

- Do you see "OSD LOCKED" when you push MENU button?
- You can secure the current control settings, so that they cannot be inadvertently changed.
 You can unlock the OSD controls at any time by pushing the **MENU** button for several seconds: the message
 - "OSD UNLOCKED" will appear.

Display image is incorrect

- Display Position is incorrect.
- Press the AUTO/SET button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display.
- On the screen background, vertical bars or stripes are visible.
- Press the AUTO/SET button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in the on screen display.
- Any horizontal noise appearing in any image or characters are not clearly portrayed.
- Press the AUTO/SET button to automatically adjust your display image to the ideal setting.
 If the results are unsatisfactory, decrease the horizontal bars using the PHASE icon in the on screen display.
- Check Control Panel --> Display --> Settings and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color).

Important

- Check Control Panel --> Display --> Settings and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
- Reasons for Recommending Optimal Resolution: The aspect ratio is 16:10. If the input resolution is not 16:10 (for instance, 16:9, 5:4, 4:3), you might encounter problems such as blurred letters, blurry screen, cut-off screen display or tilted screen.
- The setting method can differ by computer and O/S (Operation System), and resolution mentioned above may not be supported by the video card performance. In this case, please ask to the computer or the video card manufacturer.

Display image is incorrect

- The screen color is mono or abnormal.
- Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.
- Make sure the video card is properly inserted in the slot.
- Set the color setting higher than 24 bits (true color) at **Control Panel Settings**.
- The screen blinks.
- Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.

Have you installed the display driver?

- Have you installed the display driver?
- Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: http://www.lge.com.
- Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?
- Make sure to check if the video card supports Plug&Play function.

Display	19 inches (48.1 cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating					
		_		1 cm		
Visible diagonal size: 48.1 0.285*0.285 mm pixel pito						
Sync Input	Horizontal Freq.		Analog : 30 - 83 kHz (Automatic)			
			Digital: 30 - 83 kHz (Automatic)			
	Vertical Freq.		56 - 75 Hz (Automatic)			
	Input Fo	orm	Separate TTL, Positive/Negative SOG (Sync On Green)			
				(Sync Or al (HDCP)	,	
Video Innot	0:			, ,		
Video Input	Signal I	nput		n D-Sub (ctor (Digital)	
	Input Fo	orm			0.7 Vp-p/ 75 ohm), Digital	
Decelution	Max	71111				
Resolution	IVIAX			Analog : VESA 1440 x 900 @ 75 Hz Digital : VESA 1440 x 900 @ 60 Hz		
	Recommend		VESA 1440 x 900 @ 60 Hz			
Plug&Play	DDC 2E	3				
Power On Mode :		20W(Typ.)				
Consumption	Sleep Mode		≤ 0.3W(Typ.)			
	Off Mod	le	\leq	0.3W		
Dimensions		With S	Stand		Without Stand	
& Weight	Width	44.84 cm	/ 20.3	0 inches	44.84 cm / 20.30 inches	
	Height	40.14 cm	/ 15.8	0 inches	30.06 cm / 11.83 inches	
		51.14 cm	/ 20.1	3 inches		
	Depth	24.16 cm	/ 9.5	1 inches	5.84 cm / 2.29 inches	
	Net			g (10 lbs)		
Tilt Range	Tilt		-6°~	17°		
Power Input	AC 100	-240V~ 50	/60Hz	0.8A		
Environmental	Operati	ng Conditio	ons			
Conditions	Temperature 10°C to 35 °C					
	Humidity 10 % to 80 % non-Condensing			non-Condensing		
	_	Condition		2 to 60 °C		
		nperature midity			on-Condensing	
Stand Base	_				JI-Condensing	
	Attached (), Detached (O)					
Power cord	Wall-outlet type or PC-outlet type					

NOTE

■ Information in this document is subject to change without notice.

Display	20.1 inches (51.1 cm) Flat Panel Active matrix-TFT LCD Anti- Glare coating Visible diagonal size: 51.1 cm 0.258*0.258 mm pixel pitch			
Sync Input	Vertical Freq. Input Form	Analog: 30 - 83 kHz (Automatic) Digital: 30 - 83 kHz (Automatic) 56 - 75 Hz (Automatic) Separate TTL, Positive/Negative SOG (Sync On Green), Digital (HDCP)		
Video Input	Signal Input Input Form	15 pin D-Sub (DVI - D connec RGB Analog ((
Resolution	Max Recommend	•	1680 x 1050 @60 Hz 1680 x 1050 @60 Hz 1050 @60 Hz	
Plug&Play	DDC 2B			
Power Consumption	On Mode : 22W(Typ.) Sleep Mode ≤ 0.3W(Typ.) Off Mode ≤ 0.3W		. ,	
Dimensions & Weight	Height 40.99 cm 51.99 cm	Stand 1 / 18.65 inches 1 / 16.31 inches 1 / 20.46 inches 2 / 9.51 inches 4.64 kg (10.31	Without Stand 47.39 cm / 18.65 inches 31.89 cm / 12.55 inches 5.84 cm / 2.29 inches lbs)	
Tilt Range	Tilt	-6°~ 17°		
Power Input	AC 100-240V~ 50/60Hz 1.0A			
Environmental Conditions	Operating Conditions Temperature 10°C to 35 °C Humidity 10 % to 80 % non-Condensing Storage Conditions Temperature -20°C to 60 °C Humidity 5 % to 90 % non-Condensing			
Stand Base	Attached (), Detached (O)			
Power cord	Wall-outlet type or PC-outlet type			

NOTE

Information in this document is subject to change without notice.

Display	22 inches (55.8 cm) Flat Panel Active matrix-TFT LCD, Anti- Glare coating Visible diagonal size: 55.8 cm 0.282*0.282 mm pixel pitch			
Or on a large of	Horizontal Freq.	·		
Sync Input	nonzoniai Fieq.	Analog: 30 - 83 kHz (Automatic) Digital: 30 - 83 kHz (Automatic)		
	Vertical Freq.	56 - 75 Hz (Automatic)		
	Input Form	Separate TTL, Positive/Negative SOG (Sync On Green), Digital (HDCP)		
Video Input	Signal Input	15 pin D-Sub C		
		DVI - D connector (Digital)		
	Input Form	RGB Analog (0	0.7 Vp-p/ 75 ohm), Digital	
Resolution	Max	Analog : VESA 1680 x 1050 @60 Hz Digital : VESA 1680 x 1050 @60 Hz		
	Recommend	VESA 1680 x 1050 @60 Hz		
Plug&Play	DDC 2B			
Power	On Mode : 22W(Typ.)		,	
Consumption	Sleep Mode Off Mode	≤ 0.3W(Ty≤ 0.3W	rp.)	
Dimensions	With S	Stand	Without Stand	
& Weight	Width 51.57 cm	/ 20.30 inches	51.57 cm / 20.30 inches	
	Height 42.32 cm	/ 16.66 inches	34.46 cm / 13.57 inches	
	53.32 cm	/ 20.60 inches		
	Depth 24.16 cm	m / 9.51 inches 5.91 cm / 2.32 inche		
	Net	5.28 kg (11.73	lbs)	
Tilt Range	Tilt	-6°~ 17°		
Power Input	AC 100-240V~ 50/60Hz 1.0A			
Environmental Conditions	Operating Condition Temperature Humidity	10°C to 35 °C 10 % to 80 % r	non-Condensing	
	Storage Conditions			
	Temperature -20°C to 60 °C			
	Humidity			
Stand Base	Attached (), Detached (O)			
Power cord	Wall-outlet type or PC-outlet type			

NOTE

• Information in this document is subject to change without notice.

Preset Modes (Resolution)

W1942PE

Disp	olay Modes (Resolution)	Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	640 x 350	31.469	70
2	720 x 400	31.468	70
3	640 x 480	31.469	60
4	640 x 480	37.500	75
4 5	800 x 600	37.879	60
6	800 x 600	46.875	75
7	832 x 624	49.725	75
8	1024 x 768	48.363	60
9	1024 x 768	60.123	75
10	1152 x 870	68.681	75
11	1152 x 900	61.805	65
12	1280 x 1024	63.981	60
13	1280 x 1024	79.976	75
14	1440 x 900	55.500	60
*15	1440 x 900	55.935	60
**16	1440 x 900	70.635	75

*Recommend Mode **Only Analog Mode

■ W2042PE/W2242PE

Displ	lay Modes (Resolution)	Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	720 x 400	31.468	70
2	640 x 480	31.469	60
3	640 x 480	37.500	75
4	800 x 600	37.879	60
5	800 x 600	46.875	75
6	1024 x 768	48.363	60
7	1024 x 768	60.123	75
8	1152 x 864	67.500	75
9	1280 x 1024	63.981	60
10	1280 x 1024	79.976	75
11	1680 x 1050	64.674	60
*12	1680 x 1050	65.290	60

*Recommend Mode

Indicator

MODE	LED Color
On Mode	blue
Sleep Mode	flicker
Off Mode	Off

Installing the Wall mount plate

This monitor satisfies the specifications of the Wall mount plate or the interchange device.

- 1. Place the monitor with its front facing downward on a soft cloth.
- 2. Separate the stand after firstly separating 4 screws by using a driver as figure.



3. Install the Wall mount plate.

Wall mount plate(Separate purchase)

This is stand-type or wall mount type and is connectable with Wall mount plate.

Please refer to the installation guide for more details, which is provided when Wall mount plate is purchased.



Digitally yours •••••····

