	Table of Contents	
Introduction	Registration	
	Important Safety Instruction	4
	Identification of Parts	16
Installation	Installation	
mətanation	Starting	
	-	
Operation	Temperature Control	-
	Display Panel	
	How to adjust the temperature in the refrigerator and freezer compartment	
	Fresh 0 Zone(Option)	
	Function	
	Super Freezer	20
	Vacation	20
	• Lock	20
	• On/Off	41
	Memory Feature	
	Door Alarm	
	• Self Test	
	Ice Making	
	Defrosting	-21
	Water Dispenser	22
Suggestion On Food storage	Storing Food	24
Care and	General Information	25
Maintenance	Lamp Replacement	
	Cleaning	26
Trouble Shooting	Trouble Shooting	
		•
	Precaution	
To Reverse the Doors	How to Reverse the Door	
3		

Registration

Introduction

The model and serial number are found on the rear of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purcha	ise :		
Dealer Purchased From		n :	
Dealer Address	s :		
Dealer Phone I	No. :		
Model No. :			
Serial No. :			

Important Safety Instruction

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

A This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can kill or hurt you or others or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

ADANGER You will be killed or seriously injured if you don't follow instructions.

- **A WARNING** You can be killed or seriously injured if you don't follow instructions.
- **A** CAUTION Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

A WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

1. When connecting the power

The dedicated outlet should be used.

- Using several devices at one outlet may cause fire.
- The electric leakage breaker may damage food and the dispenser may be leaked.

Do not allow the power plug to face upward or to be squeezed at the back of the fridge-freezer.

Water may be flown into or the plug may be damaged, which causes fire or electric shock.



Do not allow the power cord bent or pressed by the heavy object to be damaged.

It may damage the power cord to cause fire or electric shock.



Do not extend or modify the length of the power plug.

It causes electric shock or fire by the electric damage of the power cord or others.

Unplug the power plug when cleaning, handling or replacing the interior lamp of the fridge-freezer.

It may cause electric shock or injury.
When replacing the interior lamp of the fridge-freezer, make sure that the rubber ring for preventing the electric spark within the socket is not taken off.



Introduction

Important Safety Instruction

Do not pull out the cord or touch the power plug with wet hands.

• It may cause electric shock or injury.



Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may fire or electric shock.

Make sure of grounding.

The incorrect grounding may cause breakdown and electric shock.



When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

It may cause electric shock or short circuit to make fire.



2. When using the fridge-freezer

Do not place the heavy object or the dangerous object (container with liquid) on the fridge-freezer.

It may be dropped to cause injury, fire or electric shock when opening or closing the door.




Do not cling to the door or the shelves of the door or the home bar of the freezer or the cool chamber.

It may make the fridge-freezer fallen down or damage the hands. Especially, do not allow the children to do the above.



Water tank can fill with potable water only.



Deterioration of insulation of electric parts may cause electric leakage.



Do not use or store inflammable materials ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the fridge-freezer.

It may cause explosion or fire.



Do not place the lit candle within the fridge-freezer to deodorize.

It may cause explosion or fire.



Do not store the medicine or the academic materials at the fridge-freezer.

When the material with the strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.



Do not use the combustible spray near the fridge-freezer.

It may cause fire.



Avoid the heating devices. It may cause fire.

Do not place flower vase, cup, cosmetics, medicine or any container with water on the fridge-freezer.

It may cause fire, electric shock or injury by dropping down.



Use the submerged fridge-freezer after checking it.

It may cause electric shock or fire.



When gas is leaked, do not touch the fridge-freezer or the outlet and ventilate the room immediately.

- The explosion by spark may cause fire or burn.
- Because this fridge-freezer uses natural gas (isobutene, R600a) as the environment-friendly refrigerant, even a small amount



(80~90g) is combustible. When the gas is leaked by the severe damage during delivering, installing or using the fridge-freezer, any spark may cause fire or burn.

Do not spray water at the outside or the inside of the fridge-freezer or do not clean it with benzene or thinner.

Deterioration of insulation of electric parts may cause electric shock or fire.



When any strange smell or smoke is detected from the fridge-freezer, disconnect the power plug immediately and contact to the service center. It may cause fire.



Do not allow any person except the qualified engineer to disassemble, repair or alter the fridgefreezer.

It may cause injury, electric shock or fire.



Do not use the fridge-freezer for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

When disposing the fridge-freezer, remove the packing materials from the door.

It may cause to lock out the child.



Install the fridge-freezer on the solid and level floor.

Installing it on the unstable place may cause death by falling down the fridge-freezer when opening or closing the door.





Do not insert the hands or the metal stick into the exit of cool air, the cover, the bottom of the fridgefreezer, the heatproof grill (exhaust hole) at the backside.

It may cause electric shock or injury.



When you want to dispose the fridge-freezer, contact to the down-block office.

When you want to dispose the large living waste such as electric home appliance and furniture, you'd better contact the local downblock office.



A CAUTION

freezer to fail

Violating this direction may cause injury or damage house or furniture. Always be careful, please.

Do not touch food or containers at (1) the freezer with wet hands. It may cause frostbite.

Wait for 5 minutes or longer when reconnecting the plug. It may cause the operation of the



Do not put bottle in the freezer.

It may freeze the contents to break the bottle to cause injury.

Pull out the power plug not by grasping the cord but the plug of its end.

It may cause electric shock or short circuit to fire.





Do not install the fridge-freezer in the wet place or the place which water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.



Do not insert the hands into the bottom of the fridge-freezer.

The iron plate of the bottom may cause injury.



Carry the fridge-freezer with the handle bar at the bottom of the front and the top of the rear.

Otherwise, your hands may be slipped to cause injury.



Because opening or closing the door of the fridgefreezer may cause injury to the person around it, be careful, please.

Opening or closing the door may cause feet or hands to be caught in the chink in door or the child to be get hurt by the corner.

Do not put any living animal in the fridge-freezer.



ACAUTION

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Precaution

Important Safety Instruction

A WARNING

- This fridge-freezer must be properly installed and located in accordance with the Installation Instruction before it is used.
- Never unplug your fridge-freezer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.
- When moving your appliance away from the wall, be careful not to roll over or damage the power cord.
- After your fridge-freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Pull out the power plug prior to cleaning the fridge-freezer.

Never damage, serverely bend, pull out, or twist the power cord because power cord damage may cause a fire or electronic shock.

Never place glass products in the freezer because they may be broken when their inner contents are frozen.

• Do not directly spray water inside or outside the fridge/freezer.

There is a risk of explosion or fire.

- Do not insert the power plug with wet hands. You may receive an electric shock.
- Do not put a container filled with water on top of the appliance.

If the water spills on to any electrical parts, it may lead to fire or electric shock.

• Do not install the fridge/freezer in a damp place, where it could be splashed with water. Incorrect insulation of the electrical parts may cause an electric shock or file.

- Do not disassemble, repair or alter the appliance. It may cause fire or abnormal operations, which may lead to injury.
- Pull the power plug out of the socket before replacing the interior light in the refrigerator. Otherwise, there is a risk of electric shock.
- If possible, connect the fridge-freezer to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload.

It will cause electric shock or fire.



If possible, connect the fridge-freezer to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload.

The supply plug of the refrigerator-freezer should be placed in easy accessible position for quick disconnection in emergency.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Risk of child entrapment.

Before you throw away your old refrigerator or freezer: Take off the doors.

Leave the shelves in place so that children may not easily climb inside.

Don't store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current. In order to prevent possible electric shock, this appliance must be grounded. Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

Do not modify or extend the Power Cord length

Don't Use on Extension Cord

Accessibility of Supply Plug

> Supply Cord Replacement

A DANGER

Don't store

Grounding (Earthing)

🛦 WARNING

Important Safety Instruction

- ▲ Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ▲ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- A Do not damage the refrigerant circuit.
- ▲ Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ▲ The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposal, please consult with service agent or a similarly qualified person.

This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be $1m^2$ in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.

Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

A CAUTION

 If the wall socket is loose, do not insert the power plug.

It may cause electric shock or fire.

• Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull it straight out from the outlet.

You may disconnect a wire and cause a short circuit.

• Do not use a wet or damp cloth when cleaning the plug. Remove any foreign matter from the power plug pins.

Otherwise, there is a risk of fire.

• Do not put your hands into the bottom area of the appliance.

Any Sharp edges may cause personal injury..

• After unplugging the appliance, wait for at least five minutes before plugging it again to the wall socket.

Abnormal operation of the freezer may cause material damage.


• If the appliance is not to be used for a long time, pull out the power plug.

Any deterioration in the insulation may cause fire.

- Do not let children touch or play with the control panel on the front of the appliance.
- The refrigerant used in fridge/freezer and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliances are damaged prior to disposal.

Introduction

Identification of Parts

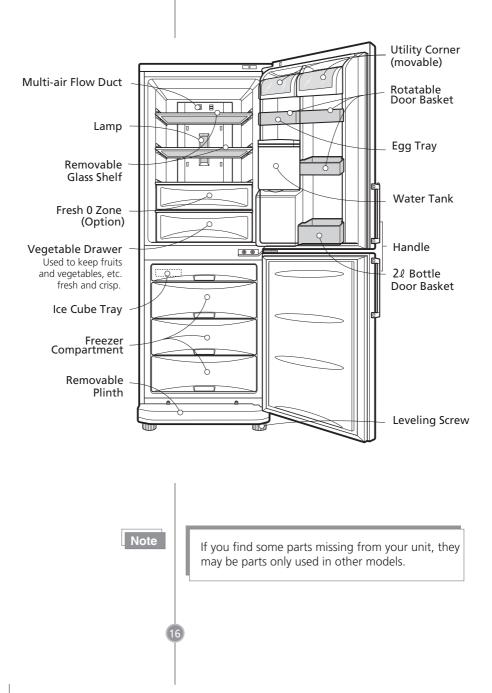


Installation	1 Colort a need la satisfa
mstanation	 Select a good location. Place your fridge-freezer where it is easy to use.
	Avoid placing the unit near heat sources, direct sunlight or moisture.
	3. There must be proper air circulation around your fridge-freezer to keep it operating efficiently.
	 4. To avoid vibration, the unit must be leveled. If required, adjust the leveling screws to compensate for the uneven floor. The front should be slightly higher than the rear to aid in door closing. Leveling screws can be turned easily by tipping the cabinet slightly. Turn the leveling screws counterclockwise(-) to raise the unit, clockwise(-) to lower it.
	Clean your fridge-freezer thoroughly and wipe off all dust accumulated during shipping.
	 Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
	 Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
	8. To ensure proper air circulation around the fridge - freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall.
Starting	When your fridge-freezer is installed, allow it 2-3 hours to stabilize at normal operating temperature prior to filling it with fresh or frozen foods. If power plug is disconnected, allow 5 minutes delay before restarting. Your fridge-freezer is now ready for use.
1	7

Operation

Temperature Control

Your fridge-freezer has two controls that let you regulate the temperature in the fridge and freezer compartments.

Display Panel Display Panel For Temperature Control

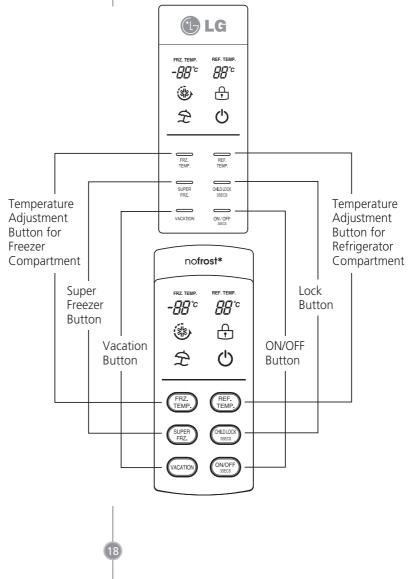

• You can now adjust the temperature of the refrigerator How to adjust and freezer compartment as you want. the temperature in the refrigerator and freezer ER7 TEMP REF. TEMI REE TEME compartment -88° *R*R°° -88°° HH ° FRZ. REF. FRZ. TEMF REF. When you press the temperature control buttons, the temperature of Refrigerator and Freezer compartment is repeated in the following order. **Refrigerator Compartment :** $0^{\circ}C \rightarrow 1^{\circ}C \rightarrow 2^{\circ}C \rightarrow 3^{\circ}C \rightarrow 4^{\circ}C \rightarrow 5^{\circ}C \rightarrow 6^{\circ}C \rightarrow 0^{\circ}C$ Freezer Compartment : $-19^{\circ}\text{C} \rightarrow -20^{\circ}\text{C} \rightarrow -21^{\circ}\text{C} \rightarrow -22^{\circ}\text{C} \rightarrow -23^{\circ}\text{C} \rightarrow -15^{\circ}\text{C}$ \rightarrow -16°C \rightarrow -17°C \rightarrow -18°C \rightarrow -19°C Fresh 0 Zone • This drawer is designed to set up 2°C lower than the temperature of the refrigerator compartment to keep the (Option) contents fresh for longer period. When setting up the refrigerator temperature (REF. TEMP.) to 2°C, the temperature in the fresh drawer is about 0°C. Note The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator. Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.

Super Freezer

Function

- This function is used when you want to freeze the foods quickly. Press the 'SUPER FRZ.' (Super Freezer) button once, and then the quick freeze operation starts with the display light on.
- The Super Freeze operation takes about 3 hours. When its operation ends, it automatically returns to the previous temperature setting. If you want to stop the quick freeze operation, press the 'SUPER FRZ.' button once more, the display light goes out, and the Super Freeze operation stops and the refrigerator returns to the previous temperature setting.



 This function makes the fridge-freezer work in a power saving mode which is useful for when you are away on holiday, by reducing energy consumption as much as possible.

> Pressing 'VACATION' starts operation with display light on and pressing it again stops the operation.



Lock

20

- Pressing this button stops operation of other buttons.
- "Locking" or "Un-Locking" is repeated whenever pressing the 'CHILD LOCK' button. (For "Locking" or "Un-Locking" press the 'CHILD LOCK' button for 3 secs.)
- When 'CHILD LOCK' is activated, pressing the other buttons would not work.




	Operation	
On/Off	 Pressing this button refrigerator power is ON or OFF. ON or OFF is repeated whenever pressing the ON/OFF button. (For ON or OFF press the "On/Off" button for 3 secs.) 	
Memory feature	Function to save the set temperature and vacation status and On/Off status. When the power is turned on after the power failure, it will be restored with the set temperature and vacation status and On/Off status.	
Door Alarm	 3 times of warning of 30 seconds if a minute passes with the door of refrigerator opened or not completely closed. Please contact with the local service center if warning continue to sound even after closing the door. 	
Self Test	 This function automatically detects failure when failure is found in product during the use of refrigerator. If the failure occurs at product and it does not operate by pressing any button and normal indication is not done, do not turn the power off and immediately contact with the local service center. A lot of time is needed for service engineer to detect the failed part by turning it off. 	
Ice Making	 To make ice cubes, fill the ice tray to the water level and place it in the freezer. If ice cubes are required fast, press the 'SUPER FRZ.'button. To remove ice cubes, hold the tray at its ends and twist gently. 	
	To remove ice cubes easily, run water on the tray before twisting.	
Defrosting	Defrosting takes place automatically. The defrosting water flows down to the evaporating tray and is evaporated automatically.	

Operation

Water Dispenser



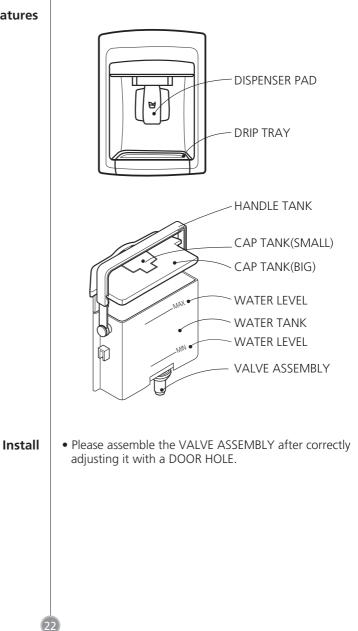

Filling of WATER TANK	 After turning the HANDLE Tank backward with the WATER TANK installed at the DOOR, Open the CAP TANK (SMALL) and then fill water using a kettle etc. Fill water while watching a sight glass on the front of the WATER TANK.
	* Water up to 4.5 ℓ can be filled.
	2. Press and fix the CAP TANK(SMALL).
	3. After filling spring water, fix the HANDLE TANK at a proper position.
Drinking	1. Press the Dispenser Pad with a cup.
	If pressing the Pad, water inside of the Dispenser is supplied.
	3. If slowly removing a cup from the Pad, water will not fall down.
Water level	 MAX: Leakage may happen if the water lever is higher than the lever MAX. The water lever should be kept under the MAX. MIN: There is less pouring water if the water lever is lower than the lever MIN. The water amount should be added before using.
A CAUTION	Do not use other beverage (milk, juice, carbonated beverage etc) than spring water. Especially beverage including grain must not be used (may result in failure).
2	3

Storing Food

Storing Food

- Do not store food which goes bad easily at low temperature, such as banana, and melon.
 - Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
 - When storing the food, use a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
 - Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
 - Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.
 - To adjust the temperature control easily, do not store food near the temperature control dial.
 - Never keep too many foods in door rack, as this may stop the door from fully closing.
 - Do not store bottles in the freezer compartment they may break when frozen.
 - Do not refreeze food that has been thawed. This causes loss of taste and nutrition.

Note

24

If you keep the fridge-freezer in a hot, and humid place, frequently open its door or put a lot of vegetables in it, dew may form in it, which has no effect on its performance.

Remove the dew with dust cloth free from care.


General Information

Power Failure

If You Move

Anti Condensation Pipe

- 1~2 hour power failure does no harm to the foods stores. Try to avoid opening and closing the door too frequently.
 - Take out foods from the fridge-freezer and firmly fix the loose items with tape.
 - Turn the leveling screws until they stop before moving the fridge-freezer. Otherwise the screw may scratch the floor or the fridge-freezer cannot move.
 - The Anti-Condensation pipe is installed around the front side of fridge-freezer as well as on the partition between fridge compartment and freezer compartment to prevent dewing.



• Especially after installation or when ambient


temperature is high, the fridge-freezer may feel hot, which is quite normal.

Lamp Replacement

Use a DC12V 0.75W LED lamp broad.

If LED lamp is damaged, it should be replaced

by the service center in stead of on your own.

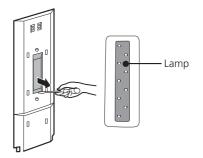

	Cleaning
Before Cleaning	Be sure to unplug the power.
Exterior	Clean the outside of the fridge-freezer with a soft cloth soaked with hot water or liquid detergent. If you use a detergent, be sure to wipe it with a clean wet cloth.
Interior	As above.
After Cleaning	Check that the power cord is not damaged, power plug has not overheated, and that the power plug is tightly inserted into the outlet.
	Be sure to dry the appliance with a cloth after washing it with water. Do not use abrasive, petroleum, benzene, thinner, hydrochloride acid, boiling water, rough brush, etc, as they may damage parts of the fridge-freezer.
	-

	Care and Maintenance
DRIP TRAY	 Slowly pull the DRIP TRAY out. Afte discharging drip water inside the DRIP TRAY, clean and fully rinse the DRIP TRAY. Wipe moisture out around the DOOR part and the DRIP TRAY using a clean cloth.
Exterior Dispenser	Wipe moisture etc out outside of Dispenser and on the DISPENSER PAD using a cloth.
WATER TANK	 Lift the WATER TANK up by pressing the fixing LEVER on the bottom of WATER TANK and then remove it. After removing the CAP TANK (BIG), clean and fully rinse the inside/outside part of the WATER TANK by using neutral cleansing agent.
CAP TANK (Big & Small)	Clean and fully rinse the CAP TANK (Big & Small) by using neutral cleansing agent. Especially for the groove part of the CAP TANK, it is convenient to cleanse it by using a small brush.
VALVE ASSEMBLY	Clean and fully rinse the VALVE ASSEMBLY by using a small brush. Rinse it while operating the bottom part of the valve assembly. Always fix the Sealing Rubber separated for cleansing at the existing position (may result in water leakage).

	Trouble Shooting Before calling for service, check this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.
Problem	Possible Causes
Fridge-Freezer does not operate	 Power plug may be unplugged from the electric outlet. Plug it in securely. House fuse has blown or circuit breaker has tripped. Check and/or replace fuse and reset circuit breaker. Power cut. Check house lights.
Fridge or Freezer Compartment Temperature too warm	 Temperature control not set on proper position. Refer to Temperature Control section. Appliance is placed close to heat source. Warm weather-frequent door openings. Door left open for a long time. Package holding door open or blocking air duct in freezer compartment.
Vibration or Rattling or Abnormal Noise	 The floor on which the fridge-freezer is installed may be uneven or the fridge-freezer may be unstable. Make it even by rotating the leveling screw. Unnecessary objects placed in the back side of the fridge-freezer.
Frost or Ice Crystals on frozen Food	 Door may have been left ajar or package holding door open. Too frequent or too long door openings. Frost within package is normal.
Moisture forms on Cabinet Surface	• This phenomenon is likely to occur in a wet space. Wipe it with a dry towel.

	Trouble Shooting
Problem	Possible Causes
Moisture collects inside	 Too frequent or too long door openings. In humid weather, air carries moisture into fridge when doors are opened.
Fridge has odor	 Foods with strong odors should be tightly covered or wrapped. Check for spoiled food. Interior needs cleaning. Refer to CLEANING section
Door not closing properly	 Food package is keeping door open. Move packages that keep door from closing. Fridge-freezer is not level. Adjust the leveling screws. The floor on which the fridge-freezer is installed may be uneven or the fridge-freezer may be unstable. Slightly raise the front side with the leveling screw.
Interior light does not work	 No power at outlet. Light lamp needs replacing. Refer to the Lamp Replacement section
	Disposal of your old appliance
	 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.
2	9

the left or right hand side to suit your kitchen design.

To Reverse the Doors

Precaution


1. Before reversing the door, first of all,you should take out food and accessories like shelves or trays which are not fixed in the fridge-freezer.

Your fridge-freezer is designed with reversible doors, so that they may open from either

- 2. Use Torque Wrench or Spanner to fix or remove the bolt.
- **3.** Do not lay the fridge-freezer down. This will cause problems.
- **4.** Be careful not to drop the doors in disassembling or assembling.


How to Reverse the Door


- **1**.To separate the door handle **①** of the left side, separate the door cap **②** and unscrew the screw **③** in counterclockwise direction.Separate the door handle **④** of the freezer in the same order.
- 2. After unscrewing the screw ③ of the right hinge cover ⑤ on the top, separate the right hinge cover ⑤ to separate the connecting cable ⑨. Separate the bolt ⑨ fixating the upper right hinge ⑧, and carefully separate the refrigerator door ⑩. Remove the left cover ⑤.
- **3.** After separating the upper left cap^① of the separated refrigerator door ^①, carefully take off the top cap^② and pull the cable ^③ to connect to the hole on the leftside. Set the separated top cap^③ at the regular position and set the cap ^① on the cable hole on the right side. Loosen the screw ^③ ^③ under the cold room door ^①, move it to the left of the stopper ^③ ^③, and then connect it.
- 4. Use a sharp gimlet or knife to disconnect the cap[®] from the cover front [®], loosen the screw[®], and then move the cable[®] to the left to be mounted. Disconnect the cable [®] and the door switch[®] from the disconnected cover front [®], swap the position of the disconnected cable[®] and door switch[®] with the cap[®], mount them, fix them with the screw[®], and then install the cap[®].

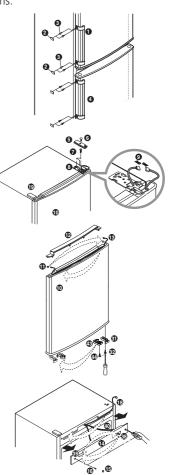



- 5. Loosen the bolt of the Hinge Middle i, remove the Hinge Middle i, and lift up the freezer door to separate it. (When separating the refrigerator door, separate the bush together.)Separate the hinge cover and set it on the separated part of middle hinge a. After unscrewing the screw connected to the bottom cover connect the cover cap on the right side. Loosen the bolt connected to the lower hinge . Unscrew the screw and fixating the door stopper at the bottom of the freezer door and fixate it on the hole on the left side with the door stopper is.
- 6. Set the separate lower hinge ③ and put it in the bag,take out the lower left hinge ④ of the bag and set the lower left hinge ④ on the bottom hole of the left side of the freezer then tighten the bolt ④. After fixating the bottom cover ④ at the regular position, align the freezer door ⑤ on the pin of lower hinge ⑤ to attach it properly. Turn over the separated middle hinge ③ and sheet hinge ② to assemble them. And set the bush ⑤ and washer ③ together to tighten the bolt ④. (When tightening the bolt, be careful not to cause an scratch on the cap decor on top of the freezer door).
- 7. After assembling the door by aligning the hinge hole on the bottom of the refrigerator door (1) and the pin of the middle hinge (2), take out the upper left hinge cover (3) and the left hinge (3) of the bag, After connecting the cable (3), tighten the bolt (2) to screw the screws (3) to the left hinge cover (3) Take the right cap(2) out of the bag and clean up the wire, then install it on the right side of the refrigerator top.
- 8. Move the separated door handle to the right and fixate the screw 3 on the right position to attach the door cap 2. Move the door cap 3 on the right side to the left and attach it. Attach the freezer door handle 2 in the same method as the refrigerator door handle 1.








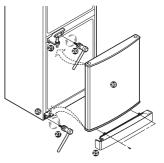



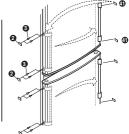

Note

Reversing the doors is not covered by the warranty.

Memo	
3.	2)