

Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

EN ENGLISH



MFL68680478 Rev.00 101017

www.lg.com

TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS	3
IMPORTANT SAFETY INSTRUCTIONS	
Disposal of Your Old Appliance	
INSTALLATION	13
Compartments	
Notes for Movement and Transport	
Notes for Installation	
Dimensions and Clearances	
Ambient Temperature	
Removing the Doors and Drawer	
Refitting the Doors and Drawer	
Leveling and Door Alignment	18
OPERATION	19
Parts and Functions	
Notes for Operation	
Using Control Panel	
Vegetable Drawer	26
Glide'N' Serve	26
Automatic Icemaker	27
SMART FUNCTIONS	28
Using Smart Diagnosis™	
MAINTENANCE	20
Notes for Cleaning Cleaning the Door Basket	
Cleaning the Shelf	
Cleaning the Vegetable Drawer	
TROUBLESHOOTING	2.5

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

•If the appliance is equipped with a lock (some countries only), keep the key out of reach of children.

For use in Europe:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Installation

- •This appliance should only be transported by two or more people holding the appliance securely.
- •Ensure that the socket outlet is properly grounded, and that the earth pin on the power cord is not damaged or removed from the power plug. For more details on grounding, inquire at an LG Electronics customer information centre.
- •This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate socket outlet that is installed and grounded in accordance with all local codes and ordinances.
- •If the power cord is damaged or the hole of the socket outlet is loose, do not use the power cord and contact an authorized service centre.
- Do not plug the appliance into a multi socket adapter which does not have a power cable(mounted). Failure to do so may result in fire.
- Do not modify or extend the power cable.

- Avoid using any extension cords or double adaptor. The appliance should be connected to a dedicated power line which is separately fused.
- •Do not use a multi socket outlet which is not properly grounded(portable). Upon using a properly-grounded multi socket outlet (portable), use a product with the current capacity of the power code rating or higher. Failure to do so may result in electric shock or fire due to the heat of multi socket outlet. The power may be shut off when the circuit breaker is operated.
- •Install the appliance in a place where is easy to unplug the power plug of the appliance.
- •Be careful not to point the power plug up or let the appliance lean against the power plug.
- •Install the appliance on a firm and level floor.
- •Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, or rain or temperatures below freezing.
- •Do not place the appliance in direct sunlight or expose it to the heat from heating appliances such as stoves or heaters.
- •Be careful not to expose the rear of the appliance when installing.
- Be careful not to let the appliance door fall during assembly or disassembly.
- •Be careful not to pinch, crush, or damage the power cable during assembly or disassembly of the appliance door.
- Do not connect a plug adapter or other accessories to the power plug.

Operation

- •Do not use the appliance for any purpose (storage of medical or experimental materials or shipping) other than any domestic household food storage use.
- •In case of flood, disconnect the power plug and contact the LG Electronics customer information centre.
- •Unplug the power plug during a severe thunderstorm or lightening or when not in use for a long period of time.
- •Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.
- •If water penetrates electrical parts of the appliance, disconnect power plug and contact an LG Electronics customer information centre.
- •Do not place hands or metallic objects inside the area emitting the cold air, cover or heat releasing grille on the back.
- •Do not apply excessive force or impact to the back cover of the appliance.
- •Do not put animals, such as pets into the appliance.
- •Be careful of nearby children when you open or close the appliance door. The door may bump the child and cause injury.
- Avoid the danger of children getting trapped inside the appliance. A child trapped inside the appliance can cause suffocation.
- Do not place heavy or fragile objects, containers filled with liquid, combustible substances, flammable objects(such candles, lamps, etc.), or heating devices(such as stoves, heaters, etc.) on the appliance.

- •If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately. This appliance uses a very eco-friendly gas (isobutane, R600a) as the refrigerant. Although it uses a small amount of the gas, it is still combustible gas. Gas leakage during appliance transport, installation or operation can cause fire, explosion or injury if sparks are caused.
- •Do not use or store flammable or combustible substances (ether, benzene, alcohol, chemical, LPG, combustible spray, insecticide, air freshener, cosmetics, etc.) near the appliance.
- •Immediately unplug the power plug and contact an LG Electronics customer information centre if you detect a strange sound, odour, or smoke coming from the appliance.
- •Fill with potable water only into icemaker or dispenser water tank.

Maintenance

- •Disconnect the power cord before cleaning the appliance or replacing the inside lamp (where fitted).
- •Securely plug the power plug in the socket outlet after completely removing any moisture and dust.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the socket outlet.
- •Do not spray water or inflammable substances(toothpaste, alcohol, thinner, benzene, flammable liquid, abrasive, etc.) over the interior or exterior of the appliance to clean it.
- •Do not clean the appliance with brushes, cloths or sponges with rough surfaces or which are made of metallic material.

- •Only qualified service personnel from LG Electronics service centre should disassemble, repair, or modify the appliance. Contact an LG Electronics customer information centre if you move and install the appliance in a different location.
- •Do not use a hair drier to dry the inside of the appliance or place a candle inside to remove the odours.
- Do not use mechanical devices or other means to accelerate the defrosting process.

Disposal

- •When discarding the appliance, remove the door gasket while leaving the shelves and baskets in place and keep children away from the appliance.
- •Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.

Technical Safety

- •Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- •Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- •The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. Consult with service agent or a similarly qualified person before disposing of them.

- •This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- Refrigerant leaking out of the pipes could ignite or cause an explosion.
- •If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes. In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance is used should correspond to the amount of refrigerant used. The room must be 1 m² in size for every 8 g of R600a refrigerant inside the appliance.
- •The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.
- •Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.
- •This appliance is intended to be used in household and similar applications only. It should not be used for commercial, or catering purposes, or in any mobile application such as a caravan or boat.
- •Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.



CAUTION

To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

Installation

- •Do not tilt the appliance to pull or push it when transporting.
- •Make sure not to get a body part such as a hand or foot stuck while moving the appliance.

Operation

- •Do not touch frozen food or the metal parts in the freezer compartment with wet or damp hands. It may cause frostbite.
- •Do not place glass containers, bottles or cans (especially those containing carbonated drinks) in the freezer compartment, shelves or ice bin that will be exposed to temperatures below freezing.
- •The tempered glass on the front side of the appliance door or the shelves can be damaged by an impact. If it is broken, do not touch it with wet hands, as this may result in injury.
- •Do not place heavy objects on top of the door in door.
- •Do not use the door in door as a chopping board and ensure it is not scratched by a sharp tool, as this may cause appliance damage.
- •Do not hang from the appliance door, storage room, shelf or fridge door in door or climb up into it.
- Do not store an excessive amount of water bottles or containers. for side dishes on the door baskets. The basket may break or your hand may bump into the surrounding structure, causing injury.

- •Keep food organized inside the appliance.
- •Prevent animals from nibbling on the power cable or water hose.
- •Do not open or close the appliance door with excessive force.
- •If the hinge of the product door is damaged or operates improperly, stop using the appliance and contact an authorized service centre.
- •Do not damage the refrigerant circuit.
- •Do not place any electronic appliance (such as heater and mobile phone) inside the appliance.
- •Do not clean glass shelves or covers with warm water when they are cold. They may break if exposed to sudden temperature changes.
- •Never eat frozen foods immediately after they have been taken out in the freezer compartment.
- •Do not insert your hands into the mechanical part of the automatic icemaker such as the ice bin or the ice dispenser.
- •Do not use a thin crystal cup or chinaware when dispensing.
- •Do not remove the cover of the automatic icemaker. Touching any mechanical part of the automatic icemaker. It may result in injury.
- •Make sure not to get a hand or foot stuck upon opening or closing the appliance door.
- •Do not open the door of the appliance with the door in door open, or do not open the door in door while the door of the appliance is open. The door in door may be struck by the edge of the appliance and damaged.

Maintenance


- •Do not insert the shelves upside down. The shelves may fall, causing injury.
- •To remove frost from the appliance, contact an LG Electronics customer information centre.
- •Dispose of the ice inside the ice bin in the freezer compartment during an extended power outage.
- Connect the water supply line (for plumbed models only) to a
 potable water source only. Otherwise, impurities in the water may
 cause illness.

Disposal of Your Old Appliance



- This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream
- Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
- You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see www.lg.com/global/recycling.

Compartments

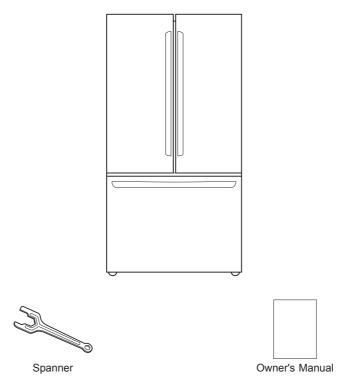

• The appearance or components of the appliance may differ from model to model.

Notes for Movement and Transport

- Remove all food from inside the appliance.
 Then, transport the appliance only after fixing
 fragile parts such as shelves and the door
 handle with tape. Failure to do so may cause
 appliance damage.
- Pull the power plug out, insert and fix it into the power plug hook at the rear or on top of the appliance. Failure to do so may cause damage to the power plug or floor scratch.
- When transporting the appliance, more than two people should transport the appliance carefully. Dropping the appliance, which is extremely heavy, may cause personal injury or appliance failure.
- When transporting the appliance over a long distance, keep the appliance upright. The appliance may fall over, causing malfunctions. Never transport the appliance laying down as it can cause a refrigerant circulation malfunction when it is turned back on again.


Notes for Installation

- Install the appliance on a solid and flat area.
 - If the appliance is installed on an uneven floor, it can cause vibration and noise causing the appliance to fall resulting in injury. It could also cause the doors not to close correctly and introduce moisture inside the unit during operation.
- If the appliance front or rear is not level, adjust the front feet so that it can be corrected. Severe cases may need the floor to be packed out with strips of thin timber.
- Avoid placing the unit near heat sources, direct sunlight or moisture.
- Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
- After connecting the power supply cord (or plug) to the outlet, Wait two or three hours before you put food into the appliance. If you add food before the appliance has cooled completely, your food may spoil.
- After installing the appliance, connect the power plug into a socket outlet. Before moving and discarding the appliance, disconnect the plug from the socket outlet.

Dimensions and Clearances

 Too small of a distance from adjacent items may result in degradation of freezing capability and increased electricity costs. Allow over 50mm clearance from each adjacent wall when installing the appliance.



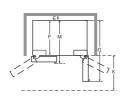

-	Size
Α	655 mm
В	907 mm
С	1717 mm
D	1745 mm
E	50 mm
F	583 mm
G	1060 mm
K	610 mm
M	720 mm

Ambient Temperature

- The appliance is designed to operate within a limited range of ambient temperatures, depending on the climate zone. Do not use the appliance at a temperature exceeding the limit.
- The internal temperatures could be affected by the location of the appliance, the ambient temperature, the frequency of door opening and so on.
- The climate class can be found on the rating label

Climate Class	Ambient Temperature Range °C
SN (Extended Temperate)	+10 - +32
N (Temperate)	+16 - +32
ST (Subtropical)	+16 - +38
T (Tropical)	+16 - +43 / +10 - +43*

- *Australia, India, Kenya
- The appliances rated from SN to T are intended to be used at an ambient temperature between 10 °C and 43 °C.

Removing the Doors and Drawer

When it is necessary to move the appliance through a narrow opening, removing the doors is the recommended procedure.


WARNING

 Disconnect the power cord, house fuse or circuit breaker before installing or service the appliance. Failure to follow these instructions may result in death, fire or electric shock.


If your entrance door is too narrow for the appliance to pass through, remove the appliance doors and pass the appliance laterally.

Both Fridge Doors


 Open the door. Remove the top hinge cover screw and the hinge cover.

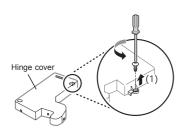


2 Disconnect all the wire harnesses.

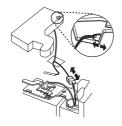

3 Rotate hinge lever counterclockwise. Lift the top hinge free of the hinge lever latch.

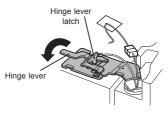

4 Lift the door from the middle hinge pin and remove the door.

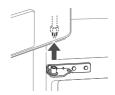


A CAUTION


- When lifting the hinge free of the latch, be careful that the door does not fall forward.
- Place the door on a non-scratching surface with the inner side facing up.

The Freezer Drawer


- 1 Pull the drawer open to full extension.
- 2 Gently lift and pull out the ice bin.

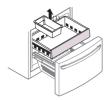

3 Lift the pullout drawer and big drawer up, then pull it straight out.

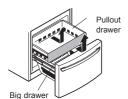


4 Remove the screws from the rails at both ends.

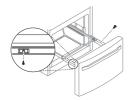

5 Grip both sides of the door and pull it up to remove it from the rails.



6 Hold both rails and push them in simultaneously.

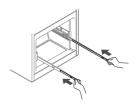

A CAUTION

- Be careful of sharp hinges on both sides of the drawer.
- Do not sit or stand on the freezer drawer.

NOTE

 When you lay the drawer down, be careful not to damage the floor.

Refitting the Doors and Drawer

Mount them in the reverse sequence of removal after the appliance is passed through the access door.

Leveling and Door Alignment


Leveling

The appliance has two front leveling legs. Adjust the legs to alter the tilt from front-to-back or side-to side. If the appliance seems unsteady, or the doors do not close easily, adjust the appliance's tilt using the instructions below:

1 Turn the leveling leg to the left to raise that side of the appliance or to the right to lower it. It may take several turns of the leveling leg to adjust the tilt of the appliance.

NOTE

- A flare nut wrench works best, but an openendwrench will suffice. Do not over-tighten.
- Open both doors and check to make sure that they close easily. If the doors do not close easily, tilt the appliance slightly more to the rear by turning both leveling legs to the left. It may take several more turns, and be sure to turn both leveling legs the same amount.

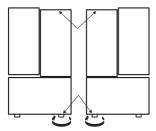


Door Alignment

Both the left and right fridge doors have an adjustable nut, located on the bottom hinge, to raise and lower them to align properly.


If the space between the doors is uneven, follow the instructions below to align the doors evenly:

Use the wrench to turn the nut in the door hinge to adjust the height. Turn the nut to the right to raise the door or to the left to lower it.

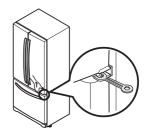

OPERATION

Parts and Functions

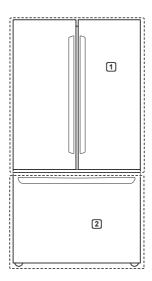


1 Fridge

Fresh food compartment.

2 Freezer

Frozen food compartment

• The appearance or components of the appliance may differ from model to model.

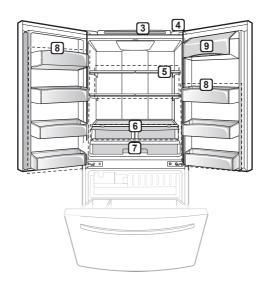

3 Control Panel

To set the freezer and fridge temperatures.

[4] Smart Diagnosis Unit

Use this function when contacting LG Electronics customer information centre to help make an accurate diagnosis when the appliance operates abnormally or a failure occurs.

5 Adjustable Fridge Shelf

Shelves are adjustable to meet individual storage needs.

6 Vegetable Drawer

This is where fruits and vegetables are stored to remain fresh for as long as possible.

7 Glide'N'Serve


Store food items at a different temperaturethan the regular fridge area.

8 Fixed Door Bin

Store chilled food or drinks.

9 Dairy Bin

Store dairy products.

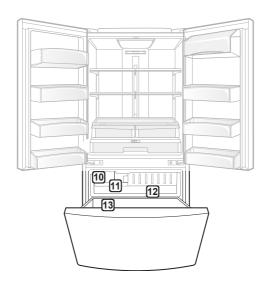

10 Automatic Icemaker

This is where ice is automatically produced and stored.

• When not being used to make ice, the icemaker can be used as a freezer door basket.

11 Ice Bin

If a large amount of ice is needed, transfer the ice in the in-door ice bin to an ice storage bin in the freezer.

12 Pullout Drawer

Provide extra storage within the freezer compartment.

13 Big drawer and Divider

Provide storage for large food items.

A CAUTION

• To reduce the risk of scratching the door or breaking the center door mullion, make sure that the appliance door mullion is always folded in.

Notes for Operation

- Do not use the ice water dispenser tank for beverages other than drinking water.
- Users should keep in mind that frost can form
 If the door is not closed completely, if the
 humidity is high during the summer, or if the
 freezer door is opened frequently.
- Ensure there is sufficient space between food stored on the shelf or door basket to allow the door to close completely.
- Opening the door lets warm air enter the appliance, and may cause the internal temperature to rise.
- Do not open or close the appliance door excessively.
- The LED lamp is only intended for use in domestic appliances and is not suitable for household room illumination.
- If you are leaving the appliance turned off for an extended period of time, remove all food and unplug the power cord. Clean the interior, and leave the doors slightly ajar to prevent mold from growing in the appliance.

Suggestion for Energy Saving

- Ensure there is sufficient space between stored foods. This allows cold air to be circulated evenly and lowers electricity bills.
- Store hot food only after it has cooled in order to prevent dew or frost.
- When storing food in the freezer compartment, set the freezer temperature lower than the temperature indicated on the appliance.
- Do not set the temperature of the appliance lower than needed. For ice making in normal climates, the freezer temperatures should be set to -18 or colder.
- Do not put food near the temperature sensor of the fridge compartment. Keep a distance of at least 3 cm from the sensor.
- Please note that a temperature rise after defrosting has a permissible range in the appliance specifications. If you wish to minimise the impact this may have on the food storage due to a temperature rise, seal or wrap the stored food in several layers.
- The automatic defrosting system in the appliance ensures that the compartment remains free of ice buildup under normal operating conditions.

Storing Foods Effectively

- Store frozen food or refrigerated food inside sealed containers.
- Check the expiration date and label (storage instructions) before storing food in the appliance.
- Do not store food for a long period of time (more than four weeks) if it spoils easily at a low temperature.
- Place the refrigerated food or frozen food in each fridge or freezer compartment immediately after purchasing.
- Avoid refreezing any food which has been completely thawed. Freezing any food which has been completely thawed again will lower its taste and nutrition.
- Do not wrap and store vegetables with newspaper. Printing material of newspaper or other foreign substances may smear and contaminate food.
- Do not overfill the appliance. Fill less than 70 % of the space. Cold air can not circulate properly if the appliance is overfilled.
- Cool hot food before storing. If too much hot food is placed inside, the internal temperature of the appliance can increase and negatively affect other foods stored in the appliance.
- If you set an excessively low temperature for food, it may become frozen. Do not set a temperature lower than the required temperature for the food to be stored correctly.
- Always keep the appliance clean.
- If there are chill compartments in the appliance, do not store vegetables and fruits with higher moisture content in the chill compartments as they may freeze due to the lower temperature.
- In the event of a blackout, call the electricity company and ask how long it is going to last.
 - You should avoid door openings while the power is off.
 - When the power supply gets back to normal, check the condition of the food.

Max Freezing Capacity

- The Express Freeze function will allow the freezer to its maximum freezing capacity. This generally takes up to seven hours, however, it will automatically turn off after a given time and can also be turned off manually at any given time.
- To get better air circulation, insert all inner parts like baskets, drawers, and shelves.

Using Control Panel

Units and Functions



1 Freezer Temperature

• This sets the freezer target temperature.

2 Fridge Temperature

• This sets the fridge target temperature.

3 Express Freeze

• This sets Express Freeze functions.

4 Door Alarm

• This sets the alarm sound which is activated when the appliance door is opened.

• The actual control panel may differ from model to model.

Notes for Use the Control Panel

- The control panel will turn on in any of the following cases.
 - -When the power is turned on
 - -When a button is pressed
 - When the appliance door (fridge compartment, freezer compartment) is opened
 - When the appliance door (fridge compartment, freezer compartment, door in door) is opened
 - When the appliance door (fridge compartment, freezer compartment, refreshment center) is opened
- The control panel will turn off automatically for energy saving in any of the following cases.
 - When one minute has passed after turning on the power
 - When no button operation is carried out for 20 seconds after a desired button is pressed
 - When 20 seconds has passed after the appliance door (fridge compartment, freezer compartment) is opened and closed
 - When 20 seconds has passed after the appliance door (fridge compartment, freezer compartment, refreshment center) is opened and closed
- If the control panel is smeared with a foreign substance or the buttons are operated with cloth or gloves, the operation may be restricted.
- If the control panel is wet, it may not operate or buttons may malfunction. Wipe off any water or moisture from the control panel before using the appliance.

Setting the Temperature

This sets the fridge temperature or freezer temperature.

- Press the Fridge button or Freezer button to adjust the temperature.
- The initial temperature is set.

- Fridge : 3 °C
- Freezer : -18 °C

• The temperature can be adjusted.

Fridge: from 1 °C to 8 °CFreezer: from -13°C to -21 °C

 The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within the appliance.

NOTE

- The default temperature setting may vary depending on the appliance.
- Wait until two or three hours have passed after connecting the appliance to the outlet before storing food in the appliance.
- The appliance can automatically detect problems during the operation.
- If a problem is detected, the appliance may not operate and an error code is displayed even when any button is pressed.
- When this occurs, do not turn off the power and immediately contact the LG Electronics customer information centre. If you turn off the power, the repair technician from the LG Electronics customer information centre. It may have difficulty finding the problem.

Setting Express Freeze

The function can quickly freeze a large amount of ice or frozen foods.

- When you press the Express Freeze button, the Express Freeze icon lights on the control panel.
- The function is enabled and disabled in turn each time you press the button.
- The Express Freeze function automatically terminates after a specific period has passed.

Door Open Alarm


If the appliance doors are open for a short while (approximate 1min.), a sound will be audible that will repeat every 30 seconds.

 To turn on/off door alarm mode, press briefly the Door Alarm button. If the door alarm continues to sound after the door is closed, contact the service center

Vegetable Drawer

You can control the amount of humidity in the moisture-sealed crispers. Store vegetables or fruits requiring more or less humidity in separate crispers. Adjust the control to any setting between Vegetables and Fruit.

- Fruit lets moist air out of the crisper for best storage of fruits.
- **Vegetables** keeps moist air in the crisper for best storage of fresh, leafy vegetables.

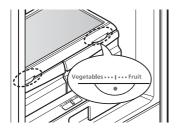


A CAUTION

• The glass shelf over the crisper may not be firmly secured. Be careful when tilting.

Glide'N' Serve

The Glide'N'Serve provides storage space with available temperature. This drawer can be used for large party trays, deliitems, or beverages. (this drawer should not be used for vegetables as they will freeze.).

Set the control lever to COLD to provide normal fridge temperature. Use the COLDER setting for meats or other deli items.

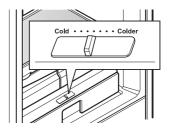


Automatic Icemaker

The automatic icemaker can automatically make 12 cubes at a time, 50-110 pieces within a 24hr period if conditions are favorable. This amount may vary according to the environment (ambient temperature around the appliance, frequency of the door being opened, amount of food stored in the appliance, etc.).

- If the ice bin is completely filled with ice, ice production will stop.
- Sound of ice dropping into the ice bin is normal
- The icemaker produces ice normally when approximately 48 hours have passed after the appliance is initially installed.
- Discard ice produced for the first time without usina it.
- While the automatic icemaker is operating, do not touch it with your hands directly.
- If ice cubes are stored in the ice bin for a long period of time, they may clump together and may not be separated easily. In such a case, clean the ice bin before using it.

Turning the Automatic Icemaker On or Off

To turn off the automatic icemaker, set the icemaker switch to OFF (O). To turn on the automatic icemaker, set the switch to ON (I).

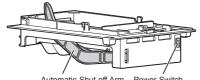

Power Switch Automatic Shut off Arm

Keeping the power turned on to the icemaker before the water line is connected can damage the icemaker.

The icemaker water valve will buzz as the icemaker fills with water. If the power switch is in the **ON** (I) position, it will buzz even if it has not yet been hooked up to water. To stop the buzzing, move the power switch to OFF (O).

NOTE

• Do not keep the power turned on to the icemaker before the water line is connected, it can damage the icemaker.

Preparing for Vacation

Set the icemaker power switch to OFF (O) and shut off the water supply to the appliance.

If the ambient temperature will drop below freezing, have a qualified technician drain the water supply system to prevent serious property damage due to flooding caused by ruptured water lines orconnections.

It can prevent serious property damage due to flooding caused by ruptured water lines orconnections.

NOTE

• The ice bin should be emptied any time the icemaker on/off switch is turned to the OFF (O) position.

Using Smart Diagnosis™

Smart Diagnosis™ Using a Smart Phone

• For appliances with the or logo Use this function if you need an accurate diagnosis by an LG Electronics customer information centre when the appliance malfunctions or fails.

Smart Diagnosis™ can not be activated unless the appliance is connected to power. If the appliance is unable to turn on, then troubleshooting must be done without using Smart Diagnosis™.

Smart Diagnosis™ Through the Customer Information Centre

Use this function if you need an accurate diagnosis by an LG Electronics customer information center when the appliance malfunctions or fails. Use this function only to contact the service representative, not during normal operation.

Open both fridge door and freezer door, and then hold the phone on the upper right speaker hole.



- Press and hold the Fridge button for three seconds or longer while continuing to hold your phone to the speaker.
 - The control panel will be turned off, and then "3" will be displayed on the fridge temperature display part.
- 3 After the data transfer is complete, the service agent will explain the result of the Smart Diagnosis™.

NOTE

- Position the phone so that its microphone is aligned with the speaker hole.
- The Smart Diagnosis[™] sound is generated after pressing the Fridge button for three seconds.
- Hold the phone to the upper right speaker hole and wait while the data is transmitted.
- Do not take the phone off the speaker hole while the data is transmitted.
- The data transfer sound may be harsh to the ear while the Smart Diagnosis™ data is being transmitted, but do not take the phone off the speaker hole for accurate diagnosis until the data transfer sound has stopped.
- When the data transfer is complete, the transfer completion message is displayed and the control panel is automatically turned off and then on again after a few seconds.
 Afterwards the customer information centre explains the diagnosis result.
- The Smart Diagnosis[™] function depends on the local call quality.
- The communication performance will improve and you can transmit a better signal if you use a land line home phone.
- If the Smart Diagnosis[™] data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis[™] service.

Notes for Cleaning


- When removing a shelf or drawer from inside the appliance, remove all stored foods from the shelf or drawer to prevent injury or damage to the appliance.
 - Otherwise, injury may occur due to the weight of stored foods.
- If cleaning the outside air vents of the appliance by means of vacuuming, then the power cord should be unplugged from the outlet to avoid any static discharge that can damage the electronics or cause an electric shock
- Detach the shelves and drawers and clean them with water, and then dry them sufficiently, before replacing them.
- Regularly wipe the door gaskets with a wet soft towel.
- Door basket spills and stains should be cleaned as they can compromise storage ability of the basket and could even be damaged.
- After cleaning, check if the power cable is damaged, warm or improperly plugged.
- Keep the air vents on the exterior of the appliance clean.
 - Blocked air vents can cause fire or appliance damage.

- Waxing external painted metal surfaces helps provide rust protection. Do not wax plastic parts. Wax painted metal surfaces at least twice a year using appliance wax (or auto paste wax). Apply wax with a clean, soft cloth.
- For the appliance exterior, use a clean sponge or soft cloth and a mild detergent in warm water. Do not use abrasive or harsh cleaners. Dry thoroughly with a soft cloth.
 - This may cause discoloration or damage to the appliance.
 - Flammable substances: alcohol (ethanol, methanol, isopropyl alcohol, isobutyl alcohol, etc.), thinner, bleach, benzene, flammable liquid, abrasive, etc.
- For the appliance exterior, use a clean sponge or soft cloth and a mild detergent in warm water. Do not use abrasive or harsh cleaners. Dry thoroughly with a soft cloth.
- Never clean the shelves or containers in the dishwasher.
 - -The parts may become deformed due to the heat
- If the appliance is equipped with an LED lamp, do not remove lamp cover and LED lamp in any attempt to repair or service it.
 Please, contact the LG Electronics customer information centre.

Cleaning the Door Basket

Removing the Fridge Door Baskets

Hold both edges of the basket and remove it by lifting it upward.

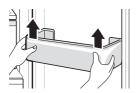

Cleaning the Shelf Removing the Fridge Shelf

Tilt up the front of the shelf and lift it straight up. Pull the shelf out.



Refitting the Fridge Shelf

Tilt the front of the shelf up and guide the rear shelf hooks into the slots at the desired height. Then, lower the front of the shelf so that the hooks drop into the slots.



A CAUTION

 Make sure that shelves are level from one side to the other. Failure to do so may result in the shelf falling or food spilling.

Cleaning the Vegetable Drawer

Removing the Vegetable Drawer

- 1 Fully open the fridge door.
- 2 Lift and pull the front of the fresh vegetable drawer box until pull it out.



A CAUTION

 Please note that injuries can be caused by the weight of stored food items when removing the vegetable drawer.

Removing the Vegetable Drawer Box

1 Fully open the fridge door and pull out all the shelves.




A CAUTION


- To avoid injury, always empty the shelves and vegetable drawers before removing them.
- Tilt the cover slightly and support it with one hand while pulling it out.



3 Open the convertible pantry and lift the front side of the vegetable drawer box with both hands.

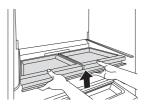

4 Slide one hand under the vegetable drawer box and tilt the box up slightly to remove it.

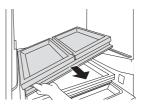

Refitting the Vegetable Drawer

Mount them in the reverse order of the removal process.

TROUBLESHOOTING

Symptoms	Reason	Solution
There is no refrigeration or freezing.	Is there a power interruption?	Check the power of other appliances.
	If the power plug unplugged from the outlet?	Plug the power plug in the outlet properly.
There is poor refrigeration or freezing.	Is the fridge or freezer temperature set to its warmest setting?	Set the fridge or freezer temperature to 'Medium'.
	Is the appliance in direct sunlight, or is it near a heat generating object such as cooking oven or heater?	Check the installation area and reinstall it away from heat generating objects.
	Did you store hot food without cooling it first?	Cool the hot food first before putting it in the fridge or freezer compartment.
	Did you put in too much food?	Maintain an appropriate space between food.
	Are the appliance doors completely closed?	Completely close the door and make sure that stored food is not obstructing in the door.
	Is there enough space around the appliance?	Adjust the installation position to make enough space around the appliance.
The appliance contains a bad smell.	Is the fridge or freezer temperature set to 'Warm'?	Set the fridge or freezer temperature to 'Medium'.
	Did you put in food with a strong smell?	Store foods with strong smells in a sealed containers.
	Vegetables or fruit may have spoiled in the drawer?	Throw away rotten vegetables and clean the vegetable drawer. Do not store vegetables too long in the vegetable drawer.
The inside lamp in the appliance does not turn on.	Does the inside lamp in the appliance turn off?	It is hard for customers to replace the inside lamp in the appliance as they are not serviceable. If the inside lamp does not turn on, please contact the LG Electronics customer information centre.

Symptoms	Reason	Solution
	Is the appliance leaning forward?	Adjust the front feet to raise the front side slightly.
The appliance door is not	Were the shelves properly assembled?	Refit the shelves if needed.
closed tightly.	Did you close the door with excessive force?	If you apply too much force or speed when closing the door, it may remain briefly open before closing. Make sure that you do not slam the door closed. Close without force.
It is difficult to open the appliance door.	Did you open the door right after you closed it?	If you try to open the appliance door within one minute after you closed it, you may have difficulties because of the pressure inside the appliance. Try to open the appliance door again in a few minutes so that the internal pressure stabilizes.
Door mullion does not fold in and out properly.	Are front leveling legs extended, appliance level, and doors aligned?	Once the door baskets are filled, the doors may become misaligned, preventing the door mullion or the Auto Open Door function from working properly. Extend both front leveling legs fully so they are in firm contact with the floor. Follow the instruction in the Door Alignment section to raise the left appliance door until the door mullion is once again working properly. Adjust the right appliance door so it aligns with the left appliance door.
	Did you store hot food without cooling it first?	Cool the hot food first before putting it inside the fridge or freezer.
There is condensation inside the appliance or on the bottom of the vegetable drawer	Did you leave the appliance door open?	Although the condensation will disappear soon after you close the appliance door, you can wipe it with a dry cloth.
	Do you open and close the appliance door too frequently?	Condensation can form due to the temperature difference from the outside. Wipe out the dampness with a dry cloth.
cover.	Did you put warm or moist food inside without sealing it in a container?	Store food in a covered or sealed container.

Symptoms	Reason	Solution
	Doors may not be closed properly?	Check if the food item inside the appliance is blocking the door and make sure that the door is tightly closed.
Frosts has formed in the	Did you store hot food without cooling it first?	Cool the hot food first before putting it in the fridge or freezer compartment.
freezer compartment.	Is the air entry or exit of the freezer compartment blocked?	Make sure that air entry or exit is not blocked so that the air can circulate inside.
	Is the freezer compartment overfilled?	Maintain an appropriate space between items.
Frost or condensation has formed	ndensation appliance door improperly	Frosts or condensation can form if the outside air penetrates inside the appliance.
inside or outside the appliance.	Is the installation environment humid?	Condensation can appear on the exterior of the appliance if the installation area is too humid or on a humid day such as a rainy day. Wipe off any moisture with a dry cloth.
	Is the appliance installed on a weak floor or improperly leveled?	Install the appliance on a solid and flat area.
The appliance is noisy and generates	Does the rear of the appliance touch the wall?	Adjust the installation position to allow enough clearance around the appliance.
abnormal sounds.	Are objects scattered behind the appliance?	Remove the scattered objects from behind the appliance.
	Is there an object on top of the appliance?	Remove the object on top of the appliance.
The side or front of the appliance is warm.	There are anti condensation pipes fitted to these areas of the appliance to reduce condensation forming from around the door area.	The heat releasing pipe to prevent condensation is installed on the front and side of the appliance. You may feel it particularly hot right after the appliance is installed or during the summer. You can be assured that this is not a problem and is quite normal.
There is water inside or outside of the appliance.	Is there water leakage around the appliance?	Check if the water has leaked from a sink or another place.
	Is there water on the bottom of the appliance?	Check if the water is from the thawed frozen food or a broken or dropped container.

Symptoms	Reason	Solution
	Did you install the appliance recently?	The ice maker produces ice normally when approximately 48 hours have passed after the appliance is installed.
	Did you connect the water supply pipe to the appliance and open the supply valve?	Connect the water supply pipe to the appliance and open the supply valve completely.
	Is the water supply hose bent?	If the water supply hose is bent, the water flow could be compromised.
The automatic icemaker does not produce ice or produces a small amount of ice.	Have you dispensed a large amount of ice recently?	It takes approximately 24 hours to produce more ice in the automatic icemaker. Please wait.
	Did you set the ice maker switch or the automatic icemaker button on the control panel to ON?	 Press I on the automatic icemaker switch or set ON for the automatic icemaker button on the control panel. (For more details on how to use, visit LG electronics website or use your smart device.)
	Is the temperature of the freezer compartment set too high?	 If the set temperature is too warm, ice will be produced slowly or not at all. Set the Freezer temperature to -18 °C for normal operation of the automatic icemaker.
	Have you been opening the appliance door frequently?	If you open the appliance door frequently, cold air will escape, lowering the speed of ice production. Do not open and close the appliance door frequently.
	Is the appliance door completely closed?	If the appliance door is not completely closed, the temperature of the freezer compartment will increase, slowing down the ice production speed. Close the appliance door completely.
Ice is not dispensed.	Unable to hear the sound of ice coming out?	In the control panel, select the modes for cubed ice and crushed ice alternately to dispense the ice.
	Is the ice path blocked? (You can check the ice passage by separating the ice bin.)	Ice may not be dispensed properly if the ice passage is blocked. Check the ice and clean the ice path regularly.
Ice is not dispensed.	Unable to hear the sound of ice coming out?	In the control panel, select the modes for cubed ice and crushed ice alternately to dispense the ice.
	Is the ice path blocked? (You can check the ice passage by separating the ice bin.)	Ice may not be dispensed properly if the ice passage is blocked. Check the ice and clean the ice path regularly.

Symptoms	Reason	Solution
Water does not come out.	The supply valve may be turned off? (For Plumbed models Only)	Open the water supply valve.
	The water dispenser tank may be empty? (Non plumbed models only)	Fill the water dispenser tank.
	Is the water supply valve closed? (For Plumbed models Only)	Open the water supply valve.
	Are you using unfiltered water?	Unfiltered water can contain a large amount of various heavy metals or foreign substances, so the filter may be clogged in the early stage regardless of the life of the filter.
Water tastes strange.	Is the taste of water different when comparing it with the taste of water from the previous water purifier?	Has the purified water or cold water not been used for an extended period of time?
	Has it been a long time since you installed and replaced the filter?	If an expired filter is used, the purification performance may decline. It is recommended to replace the filter according to the filter replacement period.
	Have you flushed out the filter properly in the initial stage after installing it?	When you install or replace the filter for the first time, you need to remove air and activated carbon residue from inside the filter. Use the appliance after dispensing and discharging approximately 5 litres of purified water from the dispenser by pressing the water dispensing lever. (Activated carbon is harmless to humans.)
	Has the purified water or cold water not been used for an extended period of time?	The taste of old water may change due to bacterial growth. Use the product after dispensing and discharging approximately 5 litres (approximately three minutes) from the water dispenser.
Clicking noises	The defrost control will click when the automatic defrost cycle begins and ends. The thermostat control (or appliance control on some models) will also click when cycling on and off.	Normal Operation

Symptoms	Reason	Solution
Rattling nosies	Rattling noises may come from the flow of appliance, the water line on the back of the unit (for plumbed models only), or items stored on top of or around the appliance.	Normal Operation
	Appliance is not resting evenly on the floor.	Floor is weak or uneven or leveling legs need to be adjusted. See the Door Alignment section.
	Appliance with linear compressor was moved while operating.	Normal operation. If the compressor does not stop rattling after three minutes, turn the power to the appliance off and then on again.
Whooshing nosies	Evaporator fan motor is circulating air through the fridge and freezer compartments.	Normal Operation
	Air is being forced over the condenser by the condenser fan.	Normal Operation
Gurgling nosies	Appliance flowing through the cooling system	Normal Operation
Popping nosies	Contraction and expansion of the inside walls due to changes in temperature.	Normal Operation
Vibrating	If the side or back of the appliance is touching a cabinet or wall, some of the normal vibrations may make an audible sound.	To eliminate the noise, make sure that the sides and back do not make any contact with any wall or cabinet.

