



User Guide

Please read this manual carefully before operating your set and retain it for future reference.

Contents

About LG webOS TV

Home Tutorial	4
Manage Home	6
Prepare Live TV	8
Network Setting	8
About User Guide	10

How to Operate TV

Using the Remote Control	11
To View More Features of the Remote Control	13
Launching Apps through QUICK ACCESS	15
SIMPLINK (HDMI-CEC)	16
Shortcuts to Accessibility	17
Using a Keyboard and Mouse	18
Using a Gamepad	18

Enjoy Live TV

Live Menu	19
Guide	20
Checking Program Info	21
Who.Where.What?	22
Using MAGIC LINK	24
TV Scheduler	26
Watching Internet Channel (LG Channels)	27

How to Use Variety of Contents

LG Content Store	28
Account Management	29
Search Content	29
Use App & Contents	30

Connect Other Devices

Home Dashboard	32
Mobile Connection	33
Share Smartphone Screen	35
Connecting USB	36
Photo & Video	37

Music	43
Use Home IoT Devices	46
Share Computer Content	47
Share Computer Screen	49

Benefits of Smart TV

Enjoying Internet	50
Notifications	53

Tour List of Settings

Quick Settings	54
Picture	55
Sound	63
Channels	69
Connection	71
General	74
Safety	81
Accessibility	85

Troubleshooting

Perform Check-up with the Quick Help	87
Abnormal Operation	88
Screen Issues	88
Sound Issues	91
PC Connection Issues	92
Movie Playback Issues	93
Network Connection Issues	95
LG Account Issues	96
Contents Issues	97
Internet Browser Issues	97


Notice

Software Update	98
Supported Resolution : HDMI-DTV	99
Supported Resolution : HDMI-PC	102
Supported Resolution : Component	105
License Information	107

About LG webOS TV

Home Tutorial

Using the Home Feature of the LG webOS TV

You can open the Home screen by pressing the  button on your remote control. Roll the **Wheel (OK)** button on the Magic Remote to scroll through the menu. You can open apps and content or use various features of the smart TV.

- Standard remote control allows you to scroll through the menu with the  /  buttons.




- ① Launch **Search**.
To see the details, click the **How to Use Variety of Contents** → **Search Content** in **User Guide**.
- ② Launch **Quick Settings**.
To see the details, click the **Tour List of Settings** → **Quick Settings** in **User Guide**.
- ③ Launch **Notifications**.
To see the details, click the **Tour List of Settings** → **About This TV** → **Notifications** in **User Guide**.
- ④ Returns to the most recently used TV or external input.
- ⑤ You can get recommendations from various channels and programs.
 - You must connect to the network to use the recommendation feature.
- ⑥ You can run, move, and delete the apps installed on your TV.

- **App List** and **○○'s Popular Content** are automatically shown on the screen each time the TV is turned on. If you don't want the home screen to be displayed, set **Home Auto Launch** of ⚙️ → ⓘ → **General** → **Additional Settings** → **Home Settings** as **Off**.
- The availability of and access to Contents and Services in LGE Device are subject to change at any time without prior notice.
- Available features vary depending on the region or service.

Using Basic Home

Set ⚙️ → ⓘ → **General** → **Additional Settings** → **Home Settings** → **Home Style** to **Basic Home**.

Press the 🏠 button on the remote control. You can combine frequently used apps on a single screen and use whichever you want at any time.

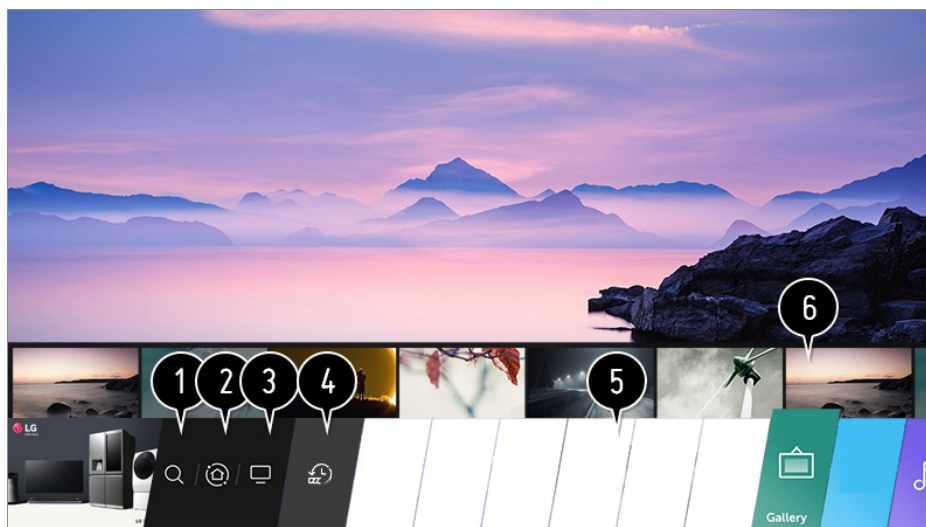

- 1 Launch **Search**.
To see the details, click the **How to Use Variety of Contents** → **Search Content** in **User Guide**.
- 2 Move to the **Home Dashboard**.
You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.
For more information, see **Connect Other Devices** → **Home Dashboard** in **User Guide**.
- 3 Move to the TV input you used recently.
- 4 Move to the recently used app.
Long-press the 🏠 button on the remote control or focus on the **Recents**.
You can run or close a recently used app in the list provided in the Preview area at the top.
- 5 You can run, move, and delete the apps installed on your TV.
- 6 Focus on each App area. It provides the Preview at the top.
You can check or run useful features of each app and recommended content on the Preview without entering into the app.

- Some apps may not provide the Preview.
- The home screen will be displayed automatically when the TV is turned on. If you don't want the home screen to be displayed, set **Home Auto Launch** of ⚙️ → ⓘ → **General** → **Additional Settings** → **Home Settings** as **Off**.
- The availability of and access to Contents and Services in LGE Device are subject to change at any time without prior notice.


Manage Home

Manage LG WebOS TV Home

Editing **New Home**

You can change the order of the displayed apps or content lists by pressing the 🏠 button on the remote control.

Roll the **Wheel (OK)** button on the Magic Remote to scroll through the menu. You can enter edit mode by selecting ✎ located at the bottom of the screen.

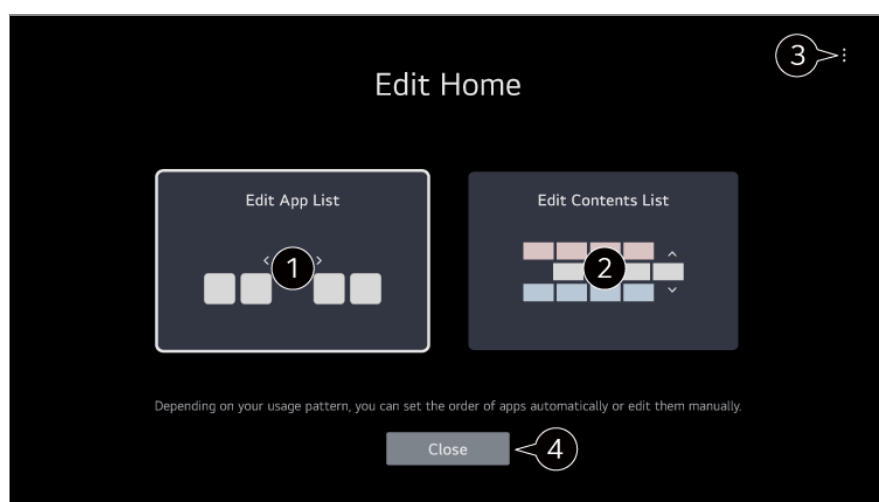

❶ Enters the **Edit App List** mode.

- After selecting the app you wish to edit from **App List** on the Home screen, press and hold the **Wheel (OK)** button on the remote control, or select the **Edit App List** button located in the last area of **App List** to enter **Edit App List** mode.

❷ Enters the **Edit Contents List** mode.

You can directly edit the order of the content list displayed in Home.

❸ **Reset App Order** : Resets the order of items in the app list.

Home Settings : When turning the power on, go to the screen that sets the Home behavior or advertising display.

User Guide : Move to the **User Guide** app.

- Items that can be set may vary depending on the edit mode.

④ Exits edit mode.

Editing Basic Home

01 Set  →  → **General** → **Additional Settings** → **Home Settings** → **Home Style** to **Basic Home**.

Press the  button on the remote control.



02 Select the app you want to edit, then press and hold the **Wheel (OK)** button on the Remote Control.

This will activate the app edit mode.

Or you can select the Edit mode button at the far right corner of the Home list to enter the App Edit mode.


03 To move the app to your desired position, go to the position and press the **Wheel (OK)** button.

To delete an app, select the  icon above the app.

- You can move and delete as many apps as you wish before exiting the edit mode.
- You can also move apps with the  /  buttons on your remote control.

04 After the editing is done, press the  at the top right to exit the App Edit mode.

- The default TV app cannot be edited.

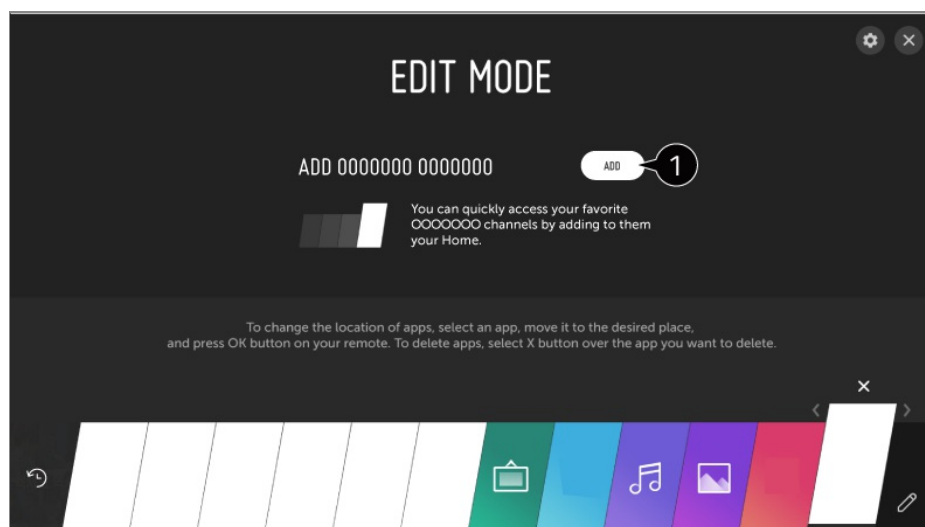

① You can add your favorite video service channel to the list.

- This feature is available only when the network is connected.

- Some models may not be supported.


Prepare Live TV

Watching TV broadcasting

01 Connect the broadcast antenna / cable to the TV.

You may also connect a piece of equipment that can receive broadcasting such as a set-top box instead of the antenna / cable.

Run the ⚙️ → ⓘ → **Connection** → **Device Connector** and select the **Set-Top Box** that appears in the device list, and you can see it.

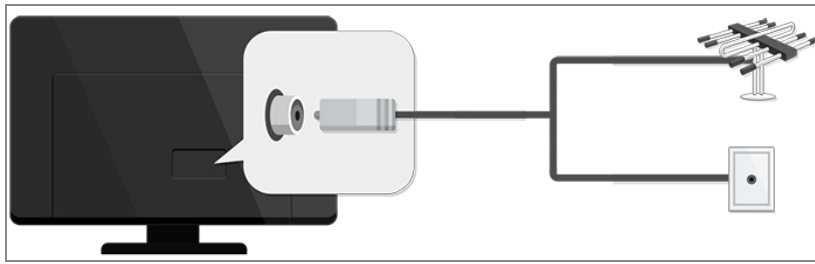

02 Start the ⚙️ → ⓘ → **Channels** → **Channel Tuning** → **Auto Tuning**.

Finds and adds only channels being broadcast.


- To solve a problem related to this function, refer to **Troubleshooting** section of the **User Guide**.

Network Setting

Network Setting

If you configure settings for the network, you can use various services such as online contents and applications.

Setting a Wired Network

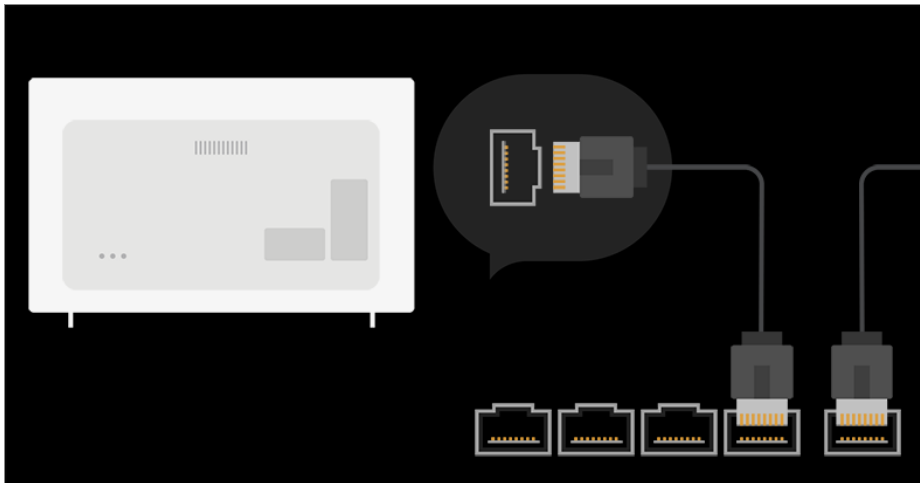

01 Connect the LAN port of the TV and the router using a LAN cable.
The router should be connected to the Internet beforehand.

- When you connect the TV to the network with a LAN cable, the TV is automatically connected to the network if the router supports DHCP.

If the network is not automatically connected

02 Press the  button on the remote control.

03 Select  → **Connection** → **Wired Connection (Ethernet)**.

To see the details, click the **Tour List of Settings** → **Connection** → **Wired Connection (Ethernet)** in **User Guide**.

Setting a Wireless Network



01 Turn on the power of the router connected to the Internet.

02 Press the  button on the remote control.

03 Select  → **Connection** → **Wi-Fi Connection**.

04 When the network search is complete, the list of networks available for connection is shown.

05 Select a network to connect.

If your Wireless Router is password protected, enter the password configured for the router.

To see the details, click the **Tour List of Settings → Connection → Wi-Fi Connection** in **User Guide**.

Network Setting Warnings

- Use standard LAN cable (connect to Cat7 or higher with an RJ45 connector, 10 Base-T, or 100 Base TX LAN port).
- Resetting the modem may fix some network connection problems. Turn the power OFF, disconnect and reconnect it, and then turn the power on to solve the problem.
- LG Electronics is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- The network connection may not work properly because of network settings or the Internet service provider.
- DSL service must use a DSL modem and cable service must use a cable modem. Since only a limited number of network connections may be available, TV network settings may not be used depending on the contract with Internet service provider. (If the contract does not allow more than one device per line, only the already-connected PC may be used.)
- A wireless network can experience interference from other devices that use the 2.4 GHz frequency (wireless phone, Bluetooth device, or microwave oven). Although interference can also happen when using the 5 GHz frequency, it is less likely to occur.
- The wireless environment can make wireless network service run slowly.
- Failure to turn off all local home networks may cause excessive traffic on some devices.
- The access point device must support wireless connections and wireless connection feature must be enabled on the device to have AP (access point) connection. Contact the service provider for availability of wireless connections on the access point.
- Check SSID and security settings of the AP. Refer to the appropriate documentation for SSID and security settings of the AP.
- Invalid settings of network devices (wired / wireless line sharer, hub) can cause the TV to operate slowly or not operate properly. Install the devices correctly according to the appropriate manual and network.
- The connection method may differ depending on the AP manufacturer.
- To solve a problem related to this function, refer to **Troubleshooting** section of the **User Guide**.

About User Guide




About User Guide

For information on each feature of the LG webOS TV, consult the **User Guide** available on the TV.

If you press  in the top right of the screen, a brief instruction for the user guide is shown.

If the function description screen of the **User Guide** has , press  to go to the corresponding function or setting directly.

Text color in this User Guide is used to indicate the following:

-  Red : the names of the remote control buttons.
-  Yellow : the buttons and the text to be displayed on the TV screen.
-  Green : the names of the TV input connectors.
- The images and information in the **User Guide** may differ depending on the model and operating environment.
- Product specifications may be changed without prior notice due to upgrade of product functions.

How to Operate TV










Using the Remote Control


Using the Remote Control Button

Briefly press or press and hold remote control button to access various functions.







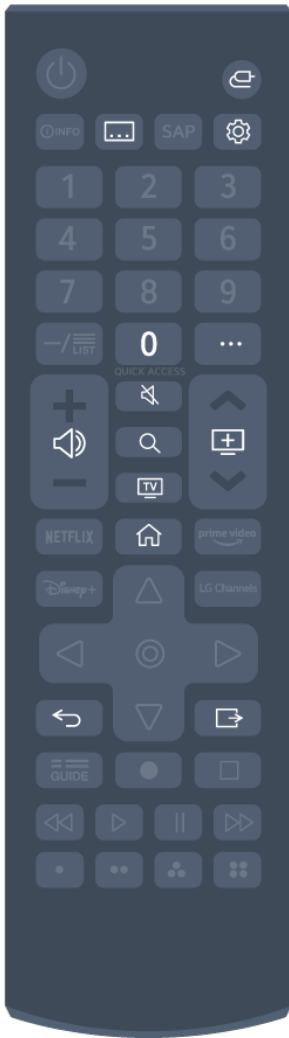






For buttons with #, please long-press (hold for more than a second).

-  : The **Search** screen will be displayed.
-  : Enters the Quick Settings menu.
-  : Selects an input source.
-  : The **QUICK ACCESS** edit screen appears.
-  : It displays the additional buttons on the remote control.
-  : Select to turn off the sound from the TV.
-  : Enter the **Accessibility** menu.
-  : Displays the Home menu.
-  : Displays the list used previously.



For buttons with #, please long-press (hold for more than a second).


-  : Selects an input source.
-  : It displays the caption.
-  : Enters the Quick Settings menu.
- **0 #** : The **QUICK ACCESS** edit screen appears.
-  : It displays the additional buttons on the remote control.
-  : Select to turn off the sound from the TV.
-  # : Enter the **Accessibility** menu.
-  : The **Search** screen will be displayed.
- **TV** : You can watch TV or LG Channels.
-  : Displays the Home menu.
-  # : Displays the list used previously.
-  : Move to the previous step.
-  : Closes the menu.

- The marks and positions of the remote control buttons may vary depending on the model.
- Available features may vary depending on the country.

To View More Features of the Remote Control

To View More Features of the Remote Control

You can control more features or external devices connected to your TV by using the buttons displayed on your TV screen.

- 01 Press the  button on the remote control.
- 02 Using the remote control, select your desired button on **More Actions** displayed on your TV screen.



- ❶ When you select a device, the **More Actions** turns into the remote control for the device. If a sound bar is connected, the **More Actions** can be used as a remote control for the sound bar.
 - For more information, see **How to Operate TV → Universal Remote Control** in **User Guide**.
 - You need Magic Remote to use universal remote control function.
- ❷ Various kinds of information related to the program you are watching will appear at the bottom of the screen.
 - To see the details, click the **Enjoy Live TV → Using MAGIC LINK** in **User Guide**.
- ❸ You can capture your TV screen.
 - Some models may not be supported.
 - You can view / delete screen-captured images in the **Photo & Video** app.
 - You can copy screen-captured images to USB storage device in the **Photo & Video** app.
(Some models may not be supported.)
- ❹ Connect to the **User Guide**.
Select the **User Guide** in some TV settings items, and you can see the User Manual of the item.
- ❺ The information of the TV program you are watching and the external input is displayed on the screen.
- ❻ You can set the video/sound mode for watching sports games.
- ❼ You can watch the live TV and use the external input at the same time by splitting the screen.
 - To see the details, click the **Enjoy Live TV → Multi-view** in **User Guide**.
 - Some models may not be supported.

⑧ You can set features related to the program you are watching.

- Available features may vary depending on the broadcast signal.
- The types of buttons appearing on the **More Actions** vary, depending on the region and the type of connected device.

Launching Apps through QUICK ACCESS

Using Apps Quickly and Easily with **QUICK ACCESS**

Press and hold a number button on the remote control to open an app or to activate an external input registered to the button.

Setting the **QUICK ACCESS**

01 Launch the app or select the channel or input you wish to assign.

02 Press and hold the number button (**1~8**) you want to register.

No. **9** is fixed to **Quick Help**.


03 When the registration pop-up window appears, select **Yes**.

- If you press and hold a number button that has already been registered, the registered function will be performed.
- To see the items that can be registered, select a number that has not been registered in the **QUICK ACCESS** edit mode.
- If you are in a mode where **QUICK ACCESS** cannot run, no action will be performed.
- If you delete a registered app, **QUICK ACCESS** will be deregistered as well.

Checking and Editing **QUICK ACCESS**

Press and hold the number **0** button on the remote control.

The **QUICK ACCESS** edit screen appears.

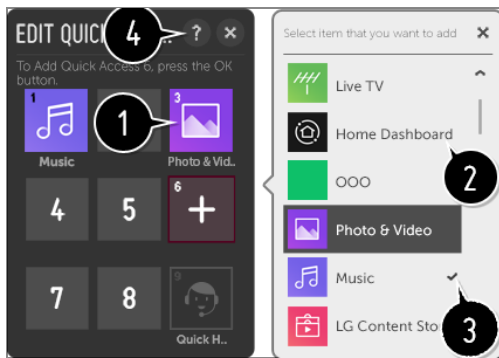




- ❶ Selecting a number that has already been registered allows deregistering it.
- ❷ When you select a number that has not been registered, items that can be registered will be shown.
- ❸ An item that has been registered to a different number is indicated with a check mark.
- ❹ You can view a brief instruction for this function.

SIMPLINK (HDMI-CEC)

Using SIMPLINK

You can conveniently control and use various multimedia devices connected through HDMI with the TV remote control.

- 01 Connect the SIMPLINK HDMI Output port to the TV **HDMI IN** port with an HDMI cable.
 - 02 Press the  button on the remote control.
 - 03 Select  → **Connection** → **HDMI Device Settings**.
 - 04 Set **SIMPLINK (HDMI-CEC)** to **On**.
 - 05 Configure the **Auto Power Sync** settings to **On** or **Off**. (If Auto Power Sync is set to **On**, turning on a SIMPLINK-linked device will turn the TV on. When you turn off the TV, the device will also be turned off.)
 - 06 Turn on the connected device. When the TV automatically connects to the device, the input will switch.
If the device is not automatically connected to the TV, click the Input button.
- This feature works only with devices with the  logo. Check for the SIMPLINK logo on the external device.
There may be a problem using the device if the device does not meet the required specifications.

- A high-speed HDMI[®] cable with CEC (Consumer Electronics Control) function is required to use SIMPLINK. Pin 13 of the high-speed HDMI[®] cable is used for data transfer between devices.
- If you want to output sound to the external audio equipment connected through the HDMI cable, set **SIMPLINK (HDMI-CEC)** to **On**.

Supported SIMPLINK Functions

Instant Play

When you start a multimedia device, you can immediately watch content from the device on the TV without having to control anything.

Controlling devices with the TV remote control

Enables the user to control multimedia devices with the TV remote control to watch content.

- The pointer function of the Magic Remote can be limited.

Main Power Off

If **Auto Power Sync** is set to **On** in the **HDMI Device Settings** and you turn off your TV, the devices connected to your TV via SIMPLINK will also be turned off.

- This feature is only available in certain devices.

Main Power On

If **Auto Power Sync** is set to **On** in the **HDMI Device Settings**; turning on a SIMPLINK-linked device will turn the TV on.

- If **SIMPLINK (HDMI-CEC)** is set to **Off**, **Auto Power Sync** cannot be set to **On**.
- Some models may not be supported.

Shortcuts to Accessibility

Shortcuts to **Accessibility**

You may go directly to **Accessibility** without entering the Advanced Settings menu.

Press and hold the  button on your remote control.

You can set **Menu Transparency**, **High Contrast**, etc.

Using a Keyboard and Mouse

Using a USB Wired / Wireless Mouse

Connect your mouse to the USB port. Use the mouse to move the pointer on the TV screen and select the menu you want.

- The right button and the special buttons on the mouse do not work.
- When using a wireless USB mouse / keyboard, the experience may be affected by the distance and wireless condition.

Using a USB Wired / Wireless Keyboard

Connect your keyboard to the USB port. You can enter text with the connected keyboard device.

- It is not possible to enter text on some screens.
- It is recommended that you use a product that has been tested for compatibility with LG TVs.
LOGITECH K360, LOGITECH K400, LOGITECH K750, LG Electronics MKS-1200
- You can change the input language by pressing the language switch key or the right Alt key, And also can change by pressing the Ctrl key and the Space key at same time.
- Wireless USB keyboard use may be affected by the usage range and the wireless environment.
- To enter text in the text field, use the on-screen keyboard on your TV screen or a USB keyboard.

Using a Gamepad

Using a Gamepad

Connect your gamepad to the USB port on the TV if the game requires a gamepad.


- It is recommended that you use a gamepad that has been tested for compatibility with LG TVs.
LOGITECH F310, LOGITECH F510, LOGITECH F710, LOGITECH Rumblepad 2, LOGITECH Cordless Rumblepad 2, LOGITECH Dual Action Gamepad, MICROSOFT Xbox 360 Controller (cable), SONY Playstation(R)3 Controller

Enjoy Live TV

Live Menu

Using Live Menu

You can use the relevant features with ease when watching TV broadcasts.

- 01 Press the  button on the remote control. Select **TV** from the Home screen.
- 02 Move the Magic Remote's pointer to the left side of the TV screen.
You can bring it up by pressing the **LIST** button on the remote control even when you are not watching any broadcasts.



- ① **Recommended** : Get channel and program recommendations based on your viewing history.
- ② **Channels** : View a list of broadcast content that is currently being broadcast.
- ③ **Guide** : You can view programs and the schedule of each program.

To see the details, click the **Enjoy Live TV → Guide** in **User Guide**.

- ④ **TV Scheduler** : You can set the date and time of the desired broadcasting program, and watch the program.

To see the details, click the **Enjoy Live TV → TV Scheduler** in **User Guide**.


- The channels displayed in Channel List are a configuration of channels provided by the broadcast service provider. Therefore, if the broadcast service provider has changed its channel configuration without notice, the channels displayed in Channel List may differ from the actual TV channels.
- Because channel information displayed in Channel List includes information provided by external Electronic Program Guide (EPG) providers, it may differ from the actual TV channels.
- To receive proper recommendation services, you need to set up your network, region and auto tuning.
- The configurable items differ depending upon model.

Guide

Viewing Guide


You can view programs and the schedule of each program.

Press the remote control's **LIST** button, and select the **Guide** tab on the left side of the screen.

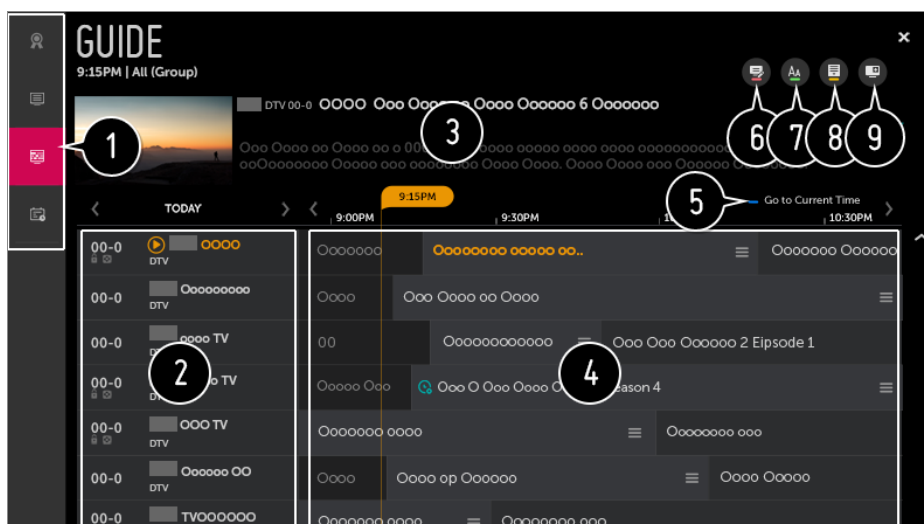

- ① Click on each area, and you can move to the app.
- ② You can view information on the channel and broadcaster.
- ③ You can view information about the program you are currently watching as well as the

focused program information.

- ④ Select the  button or the title of the desired program. You can view more information on the program and perform **WATCH** or **REMINDER**, etc.
 - ⑤ You will be taken to the program list for the current date and time.
 - ⑥ Launch **Channel Manager**.
 - ⑦ You can change the size of the program list to adjust the number of channels displayed on the screen.
 - ⑧ Sets the filter.
 - ⑨ You can turn on / off Mini TV.
- Program information is not displayed for channels with no provided broadcast information.

Viewing Set-Top Box Guide


After connecting the Set-Top Box, you can view programs and the schedule of the Set-Top Box and use the Magic Remote.

- Some models may not be supported.

Checking Program Info

Viewing Program Information

While watching a live broadcast press the **Wheel (OK)** button. The Channel Banner appears.

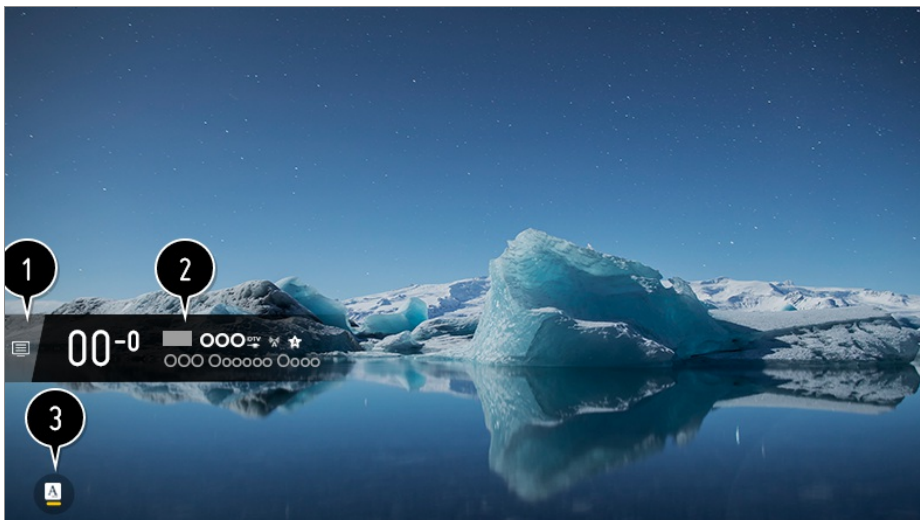

① Move to the **Channels**.

To see the details, click the **Enjoy Live TV** → **Live Menu** in **User Guide**.

② It displays the information about the program you are watching. Select a channel banner to enter the detailed information pop-up to see the detailed program information or run additional features related to the banner.

You can view broadcast information about other channels using the ▲ / ▼ buttons.

You can view broadcast information about the channel you are currently watching using the ◀ / ▶ buttons.

Press the  button on the remote control to move the banner's position.

- The features can be controlled only within the detailed information pop-up.

③ If the program you are watching includes information such as **Closed Caption** or **Audio Language**, you can set these features.

•  : You can set **Closed Caption**.

•  : You can set **Audio Language**.

- Only available with digital broadcasts.

•  : You can set **Multi Audio**.

- Only available with analog broadcasts.

- Available features may vary depending on the broadcast signal.

Who.Where.What?

Using **Who.Where.What?**

Provides a variety of information related to the scene you are currently watching.

- Information may vary depending on the program.
- Some models may not be supported.



Entering **Who.Where.What?**

Method 1. Press the **Wheel (OK)** button on your remote control.

Press **Who.Where.What?** on the channel banner.



Method 2. If the information is recognized while you are watching a program, a notification will appear automatically. Please click on the displayed notification.

- To receive automatic recommendations, you must set  →  → **General** → **AI Service** → **Who.Where.What?** to On.



Method 3. It can also be used with the speech recognition feature.
Example) Who is this person?/Where is this place?/What is this bag?

- Some models may not be supported.

Checking **Who.Where.What?** Information

A variety of information related to the scene you are watching appears on the screen.
Select the information you want to view the details.
Store the information in **Wish List** and come back anytime you want.



- Available in Live TV or HDMI. However, some OTT devices with universal remote control settings are not supported.
- You must connect to the network and agree to the terms of use before you use it.
- It is not available if you are watching **LG Channels** (IP channel) or in a mode that does not support screen capture.

Using MAGIC LINK

Using **MAGIC LINK**


It offers various videos and information related to the program you are currently watching.

If you are watching a program via a set-top box, you should complete the universal remote control settings to use the **MAGIC LINK** function properly. For more information, see **How to Operate TV → Universal Remote Control** in **User Guide**.

01 Press the **Wheel (OK)** button on your remote control. The Channel Banner appears.



- 02 Press the **MAGIC LINK** button in the Channel Banner.
- 03 Various kinds of information related to the program you are watching will appear at the bottom of the screen.
Select the desired information.

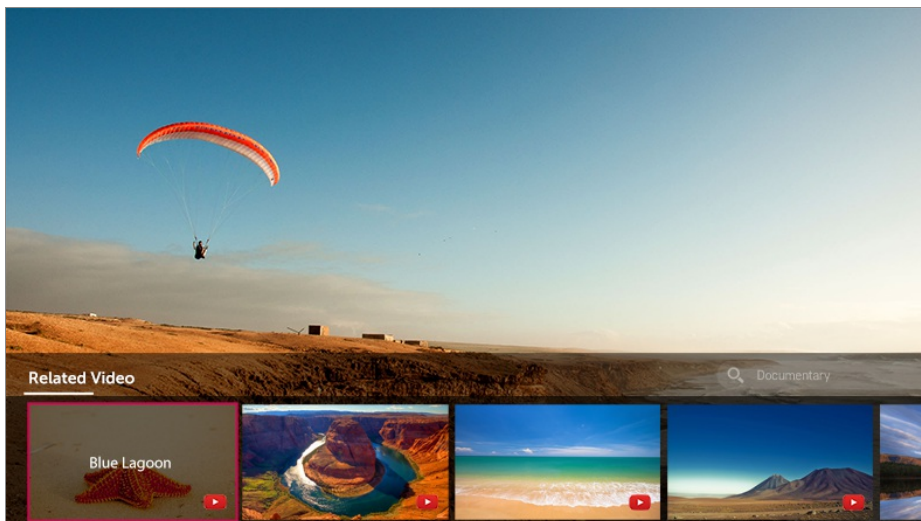


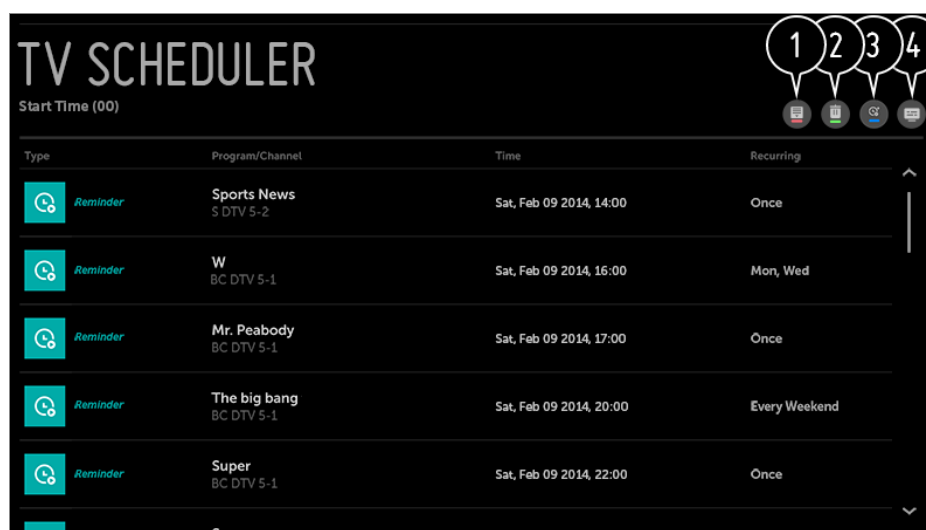
- The search range may vary depending on the country.
- While **MAGIC LINK** is in use, the content provided may not always match the program that you are watching at the time. Change the channel with the Magic Remote before using **MAGIC LINK**.
- Some adult-only channels or locked channels do not support this function.
- The search results may vary depending on the information on the program you are watching.
- Some set-top boxes may not support the **MAGIC LINK** function.
- Only set-top boxes connected via **HDMI IN** are supported.

TV Scheduler

Using TV Scheduler

This function is used to set the time and date for watching a specific program.

- 01 Press the remote control's **LIST** button, and select the **TV Scheduler** tab on the left side of the screen.
- 02 Select the  at the top right.



- ① You can change the alignment order or apply the filter.
- ② You can set the Delete Mode.
- ③ You can set the New Reminder.
- ④ Launch **Guide**.



Schedule by Program

You can select a show to schedule it for watching.

- 01 Press the remote control's **LIST** button, and select the **Guide** tab on the left side of the screen.
 - 02 Select the program you want.
If you want to watch a live broadcast, click the **WATCH** button.
In case of an upcoming program, click the **REMINDER** button.
- Applies to digital broadcasting.

Manual Scheduling

You can select the date, time, and channel to watch the channels.

- 01 Press the remote control's **LIST** button, and select the **TV Scheduler** tab on the left side of the screen.
- 02 Select the  at the top right.
- 03 Select the  at the top right.
- 04 Select **CREATE MANUALLY**.
- 05 Set the date, time, and channel to watch.




- Some models may not be supported.

Watching Internet Channel (LG Channels)

Watching Internet Channel

You can watch real-time broadcasts through this service over the Internet.

You can see information on new Internet Channels or manage the channels you like in **LG Channels**.

- 01 Press the  button on the remote control.
- 02 Select  → **Channels**.
- 03 Set **LG Channels** to **On**.
- 04 You can watch an Internet Channel in **TV**.
- 05 While watching an Internet Channel, click the  button on the Remote control. You can start the **LG Channels**.
- 06 You can use the 'Interactive Channel' service that enables users to conveniently enjoy content related to the current channel without having to switch apps.
You can use the 'Interactive Channel' by pushing the buttons on your remote control or clicking your screen according to the instructions that appear on the Internet channel screen.

- Some models may not be supported.
- Some Internet channels may not support this service.
- Some content can cause a switch from **TV** app to a different app.
- The TV should be connected to a network with Internet access.

- You cannot receive the service if you change the **LG Services Country**.
- Live Playback and recording are not available for internet channels.
- Internet Channel services may be stopped or changed without prior notice by the broadcasting company.

How to Use Variety of Contents


LG Content Store



Using **LG Content Store**

You can quickly and conveniently browse for **TV Shows**, **Movies**, and more to watch immediately. You can also download and use apps from various categories such as education, entertainment, lifestyle, news, and games.

01 Press the  button on the remote control.

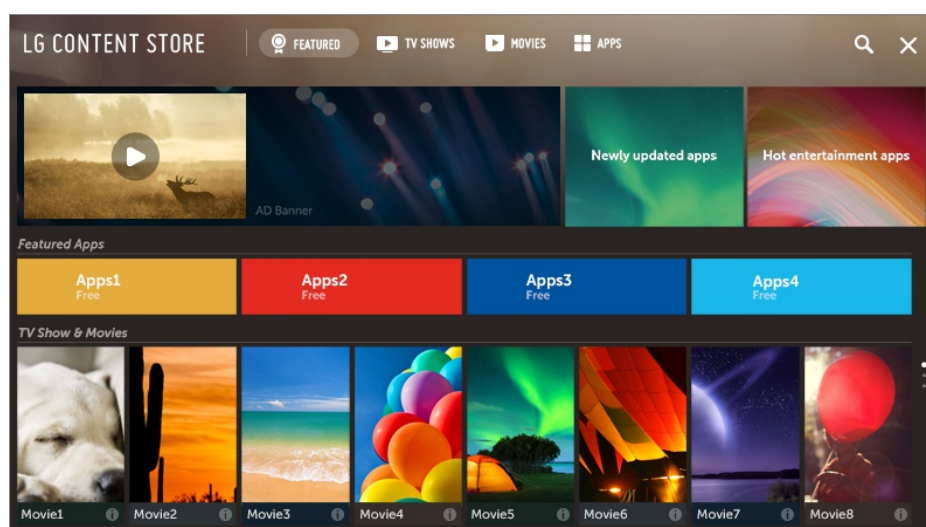02 Launch **LG Content Store**.



- Depending on the model, the provided contents may differ or some features may be limited.
- Exercise caution when in used by children. Children may have access to inappropriate online content through this product. You can block inappropriate online content by restricting access to some apps.
Configure the settings in  →  → **Safety** → **Application Locks**.

Recommended Content on the Main Screen

You can view recommendations for the most popular content and apps in each category on the **LG Content Store** main screen. Choose a piece of content to watch it, or choose an app to download it.

- Some models may not be supported.
- This feature is available only when the network is connected.

Account Management



Managing your LG Account


In **Account Management**, you can use your email address to create a new LG account. For more information, see **Tour List of Settings → General → Account Management** in **User Guide**.

Search Content

Search

Search allows you to find and use a variety of content. You can search for image, video and music files.

- 01 Press the  button on the remote control.
- 02 Launch .
- 03 Search for a variety of content and information using the desired search terms.

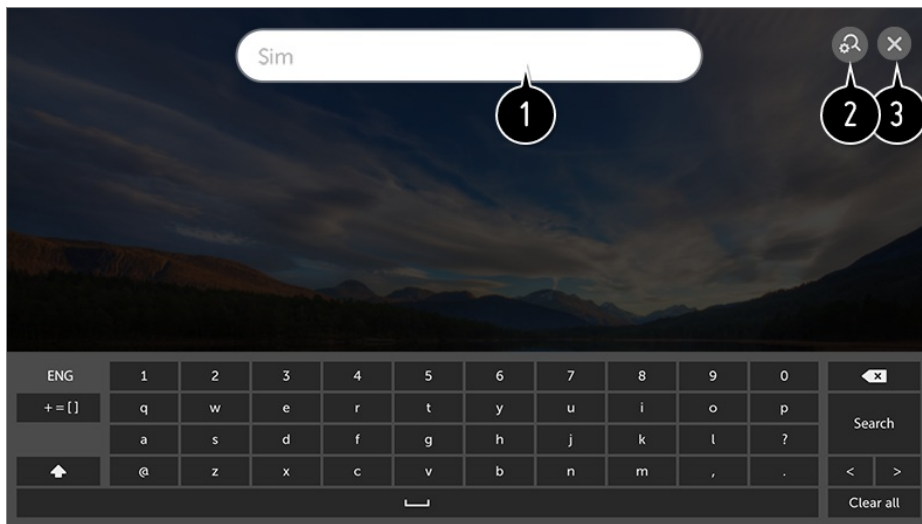



- ① Enter a search term.
 - ② Change the settings of the features provided by **Search**.
 - ③ Exit the Search.
- Some apps provide a feature that lets you search within your TV. If you run a search in such apps, the search will be carried out in **Search**.
 - Search results may vary depending on the channel, region, network settings, and whether you have agreed to the terms and conditions.

Use App & Contents

Installing Apps


You can install various apps on your TV from the **LG Content Store**.

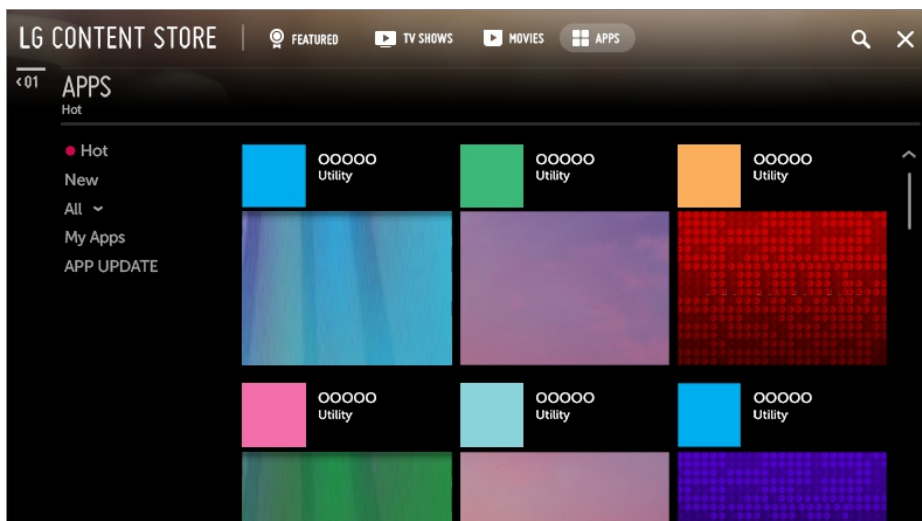


- 01 Press the  button on the remote control.
 - 02 Launch **LG Content Store**.
 - 03 Select the **APPS** category shown at the top of the screen.
The list of available apps in the selected category will be shown.
 - 04 Select an app to set up from the list.
 - 05 Read the details of the app and then press **install**.
 - 06 When the installation is complete, you can run the app immediately.
- Available categories may vary depending on the country or service status.
 - If the storage on your TV is insufficient, you can install the apps by connecting an external memory device.
 - Some USB storage devices may not be supported or may not work properly.
 - USB stick containing apps from other TVs may not be used.
 - You can delete apps you have downloaded in the **APPS** item's **My Apps**.

Watching VOD Content


You can immediately enjoy dramas, movies, and more with real-time streaming.

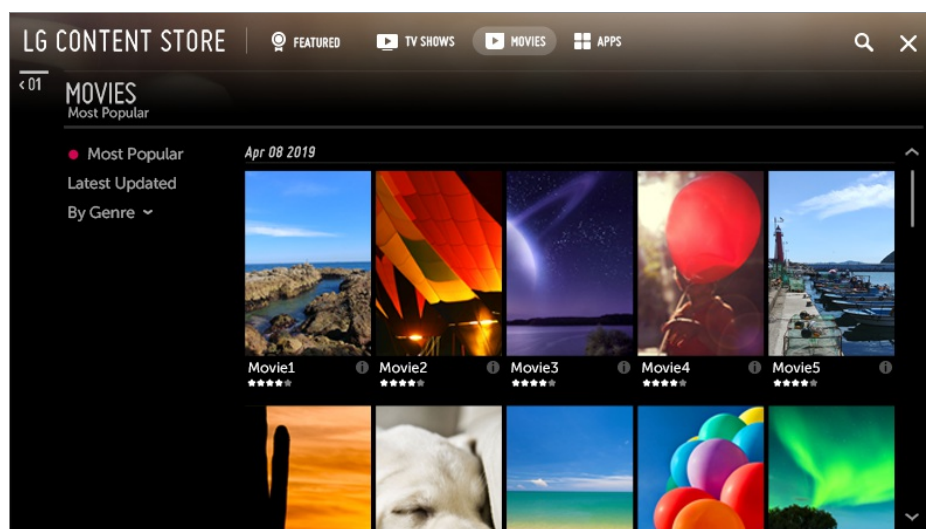

- 01 Press the  button on the remote control.
- 02 Launch **LG Content Store**.
- 03 Select your desired category from the categories shown at the top of the screen, such as **TV Shows** and **Movies**.
The list of available content in the selected category will be shown.
- 04 Select an item from the list.

05 You can play your desired content.

An app may be required to play the content. If not installed, install the app to play the content.

- Some models may not be supported.
- Available categories may vary depending on the country or service status.
- To see detailed information about the content, select the title in the bottom and the  area.


Connect Other Devices

Home Dashboard

Using Home Dashboard

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.

Press and hold the  button on your remote control.

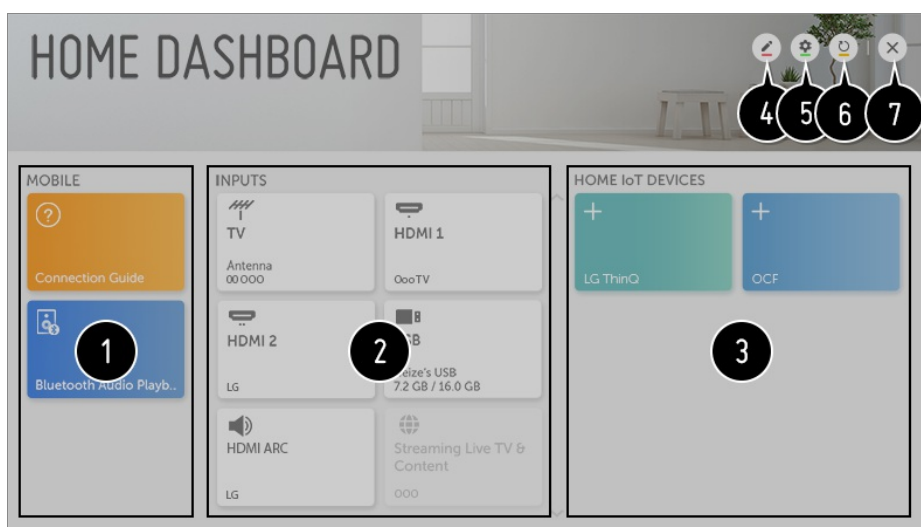

- 1 You can check and select the smart device connected with the LG ThinQ app.
Please refer to **Connect Other Devices → Mobile Connection** in **User Guide** for more information on the action.
You can play sound from a smart device connected via Bluetooth.

Please refer to **Connect Other Devices → Playing Sound from a Smart Device through the TV's Speakers** in **User Guide** for more information on the action.

- ② You can check and select the external device connected through the external input port or network.
You can check or change the output speaker currently selected.
- ③ You can check and control the device connected via the Home IoT.
Please refer to **Connect Other Devices → Use Home IoT Devices** in **User Guide** for more information on the action.
- ④ You can edit the name or change the icon of a device connected to the **Inputs**.
You can edit the name of a device connected to the **Home IoT Devices** or **SHOW / HIDE** the device.
 - Some devices cannot be edited.
- ⑤ **LG ThinQ Account** : You can log in/out to and from the LG ThinQ account you created on mobile.
OCF Connection : If you set it to be **On**, any device that supports OCF other than LG ThinQ products will be linked too.
Notice : If you turn it **On**, you can receive notifications about the status of the Home IoT Devices.
Device Connector : You can start the **Device Connector** app.
- ⑥ It refreshes the device list.
- ⑦ Exit the **Home Dashboard**.
 - The configurable items differ depending upon model.

Mobile Connection

Mobile Connection

You can use a variety of features by connecting the TV to a smart device.



Connecting Your Smart Device to a TV Using the LG ThinQ App

- 01 Download the LG ThinQ app from the app store of your smart device.
You can download the app easily by scanning the QR code.
 - Android




• iOS



- 02 Connect your TV and smart device to the same Wi-Fi network.
You can check the Wi-Fi network of TV at  →  → **Connection** → **Wi-Fi Connection**.
- 03 Run the LG ThinQ app installed on your smart device.
- 04 Follow the instructions from LG ThinQ app to connect your smart device to the TV.
When your account information of LG ThinQ is linked to the TV, you can manage the IoT devices linked to your account using **Home Dashboard** of the TV.

Controlling Your TV with the LG ThinQ App

You can tap the buttons on your smart device's screen to control the TV.

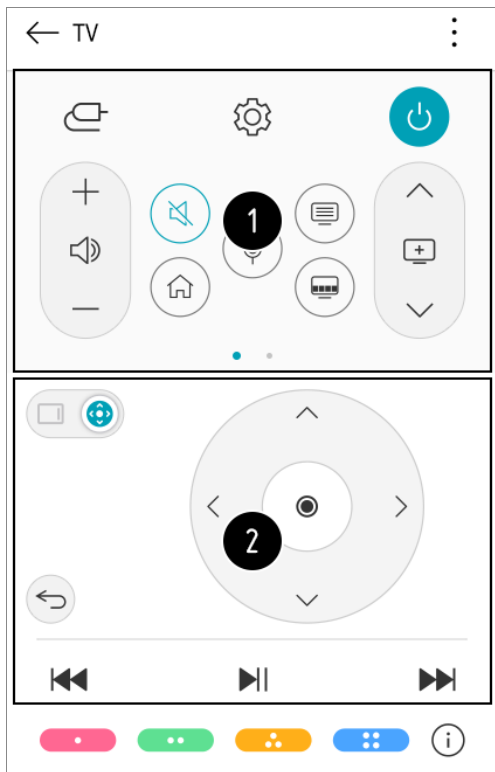

- ❶ When watching a broadcast, you can control the channel, volume, etc. or select the external input with voice commands instead of using the remote control.
 - ❷ You can use the same functions as the Magic Remote's pointer and arrow keys.
- Some controls may be limited in external input mode.
 - The app's screen and functionality are subject to change without prior notice.
 - Available features may differ depending on your country and OS.

Share Smartphone Screen

To See the Mobile Device's Screen on the TV

- 01 Enable Screen Share mode on the mobile device.
 - 02 Your TV will be displayed in the list of available devices.
 - 03 Select your TV and request connection.
 - 04 Select **Yes** in the connection request popup window.
 - 05 After the connection is established, the TV will display the screen of the connected device.
- For a reliable connection always keep the connected device to your TV updated to the

latest OS version.

- A non-LGE device might not connect even when it is detected.
- Connect the device to a 5 GHz router because the performance may be affected by your wireless environment.
- The response rate may vary depending upon the user's environment.
- It differs among devices. When trying to connect to a device, refer to the device's User's Guide for more information.
- If the connection fails repeatedly, turn off the TV and the device you are trying to connect. Then turn them back on and try again.

Connecting USB

Connecting USB

Connect a USB storage device (USB HDD, USB stick) to the USB port on the TV to enjoy the content files stored on the USB storage device on your TV.

Tips for Using a USB Storage Device

- A USB storage device that has a built-in automatic recognition program or uses its own driver might not be recognizable.
- Some USB storage devices may not be supported or may not work properly.
- If you use a USB extension cable, the USB storage device may not be recognized or may not work properly.
- Please use only USB storage devices formatted with the FAT32 or NTFS file system provided by Windows OS.
- It is recommended that you use an external USB HDD with a rated voltage of 5V or less and a rated current of 500 mA or less.
- It is recommended that you use a USB hub or USB HDD with a power supply. (If the power supplied is not sufficient, the USB storage device may not be detected properly.)
- It is recommended that you use a USB stick of 32 GB or less or a USB HDD of 2 TB or less.
- If a USB HDD with power-saving function does not work turn the hard drive off and on again to make it work properly. For more information about the USB HDD, see the Owner's manual.
- Data on a USB storage device may be damaged. It is recommended that you back up any important files. Users are responsible for data management. The manufacturer bears no

responsibility.






- Press the  button on the remote control. To remove the USB storage device, press the **Eject** button, which appears at the top when you focus on the USB storage device you want to remove. If you disconnect the USB storage device without selecting **Eject**, an error may occur in your TV or storage device.
- For more information on other connection methods, go to  →  → **Connection** → **Device Connector**.
- Press and hold the  button on your remote control. Select the connected USB from **Home Dashboard** → **Inputs** and select the **Format** button to format the USB storage device. After format, all the data of USB storage device will be deleted and formatted as NTFS or FAT32 file system.
- When connecting a USB storage device, a random file / folder can be created to provide Smart TV services such as the saving and retrieving of thumbnail images.

Photo & Video

Viewing Photos and Videos

You can view photos and videos using the **Photo & Video** app.

- 01 Press the  button on the remote control.
- 02 Run the **Photo & Video** app.
- 03 Select your desired storage device.
- 04 Select and view your desired photo or video.



- 1 Select your desired type of content and viewing method.

② Select and delete the desired content.

- You cannot delete files that are shared from other devices.


③ Select the content you want to play. You can only select the same type of content as you first selected.

④ Launch **Search**.

- Certain content may not be displayed on the list if the number of all content exceeds 40,000.

Photo Player

Selecting a photo in the **Photo & Video** app runs the photo player. You can view your saved photos.

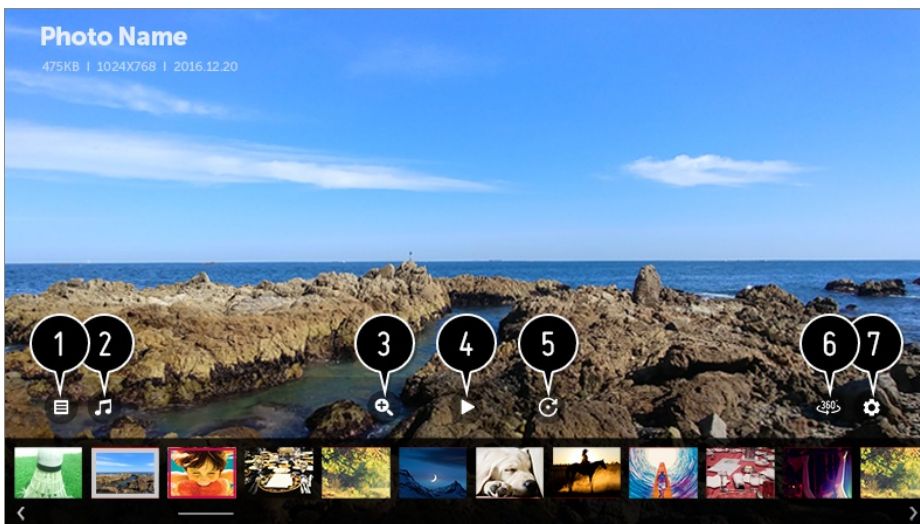

① Returns to the entire content list.

② You can play background music by running the music player.

③ You can zoom the photos in / out.

④ Starts the slide show.

⑤ Rotates photos.

⑥ 360-degree photos can be viewed in 360 degrees.

- Using the 360° VR Play on a normal photo may distort the image.
- Some models may not be supported.


⑦ You can set the size of a photo or change the speed and effect of a slide show.

Supported Photo Files

File Format	Format	Resolution
jpeg, jpg, jpe	JPEG	Minimum : 64 × 64 Maximum Normal Type : 15360 (W) × 8640 (H) Progressive Type : 1920 (W) × 1440 (H)
png	PNG	Minimum : 64 × 64 Maximum : 5760 (W) × 5760 (H)
bmp	BMP	Minimum : 64 × 64 Maximum : 1920 (W) × 1080 (H)

Video Player


Selecting a video in the **Photo & Video** app runs the video player. You can view your saved videos.

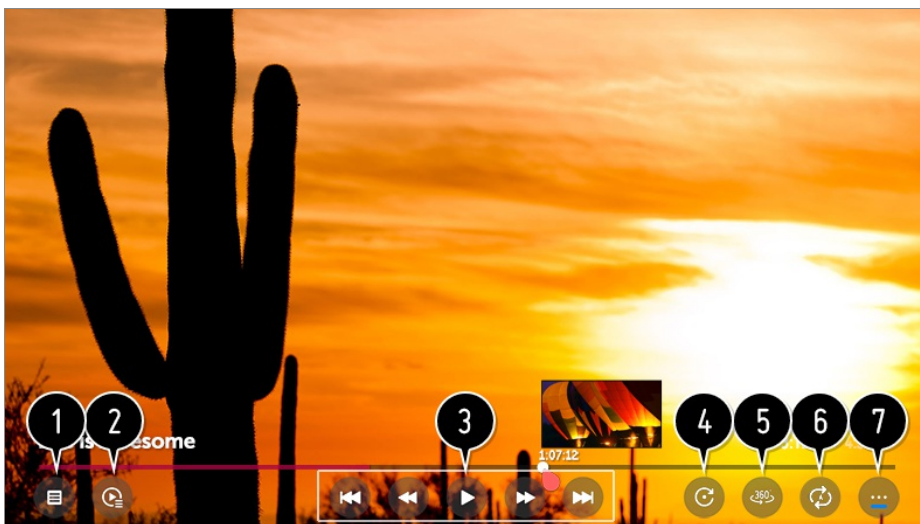

- 1 Returns to the entire content list.
- 2 You can select other content by displaying the playlist while watching a video.
- 3 You can control basic video playback functions.
- 4 Rotates videos.

- Some models may not be supported.
- 5 360-degree videos can be viewed in 360 degrees.
 - Using the 360° VR Play on a normal video may distort the image.
 - Some models may not be supported.
 - 6 You can do the settings related to play on repeat of the video.
 - 7 You can set additional options.

Setting Additional Options

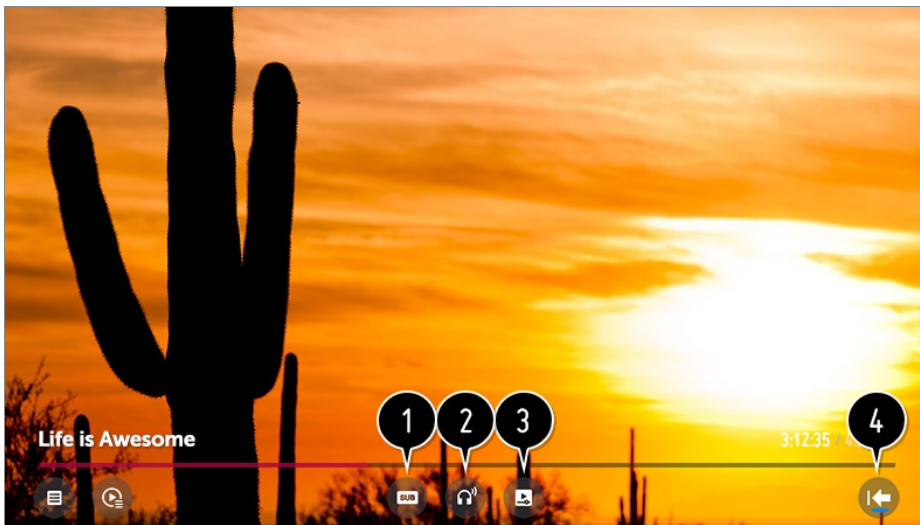

- 1 You can change subtitle settings.
- 2 You can set audio tracks.
- 3 You can set continue watching to resume playing from the last viewed scene.
- 4 Returns to the basic operation screen.

Supported Video Files

Maximum Data Transfer Rate:

- Full HD video
 - H.264 1920 × 1080@60P BP/MP/HP@L4.2 Maximum 40Mbps
 - HEVC 1920 × 1080@60P Main/Main10@L4.1 Maximum 40Mbps
- ULTRA HD video (ULTRA HD models only)
 - H.264 3840 × 2160@30P BP/MP/HP@L5.1 Maximum 50Mbps
 - HEVC 3840 × 2160@60P Main/Main10@L5.1 Maximum 60Mbps
- HFR video (HFR support models only)

HEVC 3840 × 2160@120P Main/Main10@L5.2 Maximum 60Mbps

- Dolby Vision video (Dolby Vision support models only)
HEVC 3840 × 2160@60P Main/Main10@L5.1 Maximum 50Mbps
- 8K video (8K model connected to the 8K Upgrader only)
VP9 7680 × 4320@60P Maximum 50Mbps
AV1 7680 × 4320@60P Maximum 50Mbps
HEVC 7680 × 4320@60P Main/Main10@L6.1 Maximum 100Mbps

Supported External Subtitles

smi, srt, sub (MicroDVD, SubViewer 1.0/2.0), ass, ssa, txt (TMPlayer), psb (PowerDivX), dcs (DLP Cinema)

Supported Embedded Subtitles Format:

Matroska (mkv) : Sub Station Alpha (SSA), Advanced Sub Station Alpha (ASS), SRT
MP4 : Timed Text

Supported Video Codecs

Extension	Codec	
asf wmv	Video	VC-1 Advanced Profile (except for WMVA), VC-1 Simple and Main Profiles
	Audio	WMA Standard (except for WMA v1 / WMA Speech)
avi	Video	Xvid (GMC is not supported), H.264/AVC, Motion Jpeg, MPEG-4
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3), Dolby Digital, LPCM, ADPCM, DTS
mp4 m4v mov	Video	H.264/AVC, MPEG-4, HEVC, AV1
	Audio	Dolby Digital, Dolby Digital Plus, AAC, MPEG-1 Layer III (MP3), Dolby AC-4

3gp 3g2	Video	H.264/AVC, MPEG-4
	Audio	AAC, AMR-NB, AMR-WB
mkv	Video	MPEG-2, MPEG-4, H.264/AVC, VP8, VP9, HEVC, AV1
	Audio	Dolby Digital, Dolby Digital Plus, AAC, PCM, DTS, MPEG-1 Layer I, II, MPEG-1 Layer III (MP3)
ts trp tp mts	Video	H.264/AVC, MPEG-2, HEVC
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3), Dolby Digital, Dolby Digital Plus, AAC, PCM, Dolby AC-4
mpg mpeg dat	Video	MPEG-1, MPEG-2
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3)
vob	Video	MPEG-1, MPEG-2
	Audio	Dolby Digital, MPEG-1 Layer I, II, DVD-LPCM

- Dolby AC-4 : Some models may not be supported.
- AV1 : It is only supported when the 8K Upgrader is connected to the 8K model.

Cautions for Video Playback

- Some user-created subtitles may not work properly.
- A video file and its subtitle file must be located in the same folder. For subtitles to be displayed properly, make sure that the video file and the subtitle file have the same name.
- Subtitles on a Network Attached Storage (NAS) device may not be supported depending on the manufacturer and model.
- Streams that include Global Motion Compensation (GMC) and Quarterpel Motion Estimation (Qpel) are not supported.
- ULTRA HD video (ULTRA HD models only) : 3840 × 2160, 4096 × 2160

Some HEVC-encoded ULTRA HD videos other than the content officially provided by LG Electronics may not be played.
Some codecs can be supported after a software upgrade.


Extension	Codec	
mkv / mp4 / ts	Video	H.264/AVC, HEVC
	Audio	Dolby Digital, Dolby Digital Plus, AAC


- Only Window Media Audio V7 and later are supported.
- The AAC main profile is not supported.
- Video files created by some encoders may not be played.
- Video files in a different format than specified may not be played properly.
- Video files stored on a USB storage device that does not support High Speed may not be played properly.
- DTS codecs are supported only for playbacks of USB and HDMI video files.

Music

Playing Music


You can listen to music by using the **Music** app.

- 01 Press the  button on the remote control.
- 02 Run the **Music** app.
- 03 Select your desired storage device.
You can select your desired songs from all of your storage devices and add them to **My Playlist**.
- 04 Select your desired music content and enjoy it.

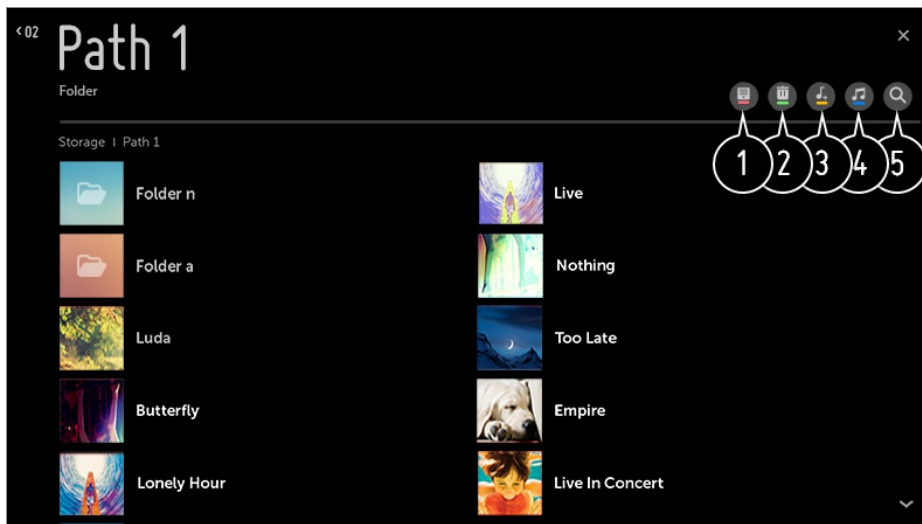

- ① Select the desired type of content list.
- ② Select and delete the desired content.
 - You cannot delete files that are shared from other devices.
- ③ Select content and add it to **My Playlist**.
- ④ Open the music player.
- ⑤ Launch **Search**.

Using the Music Player

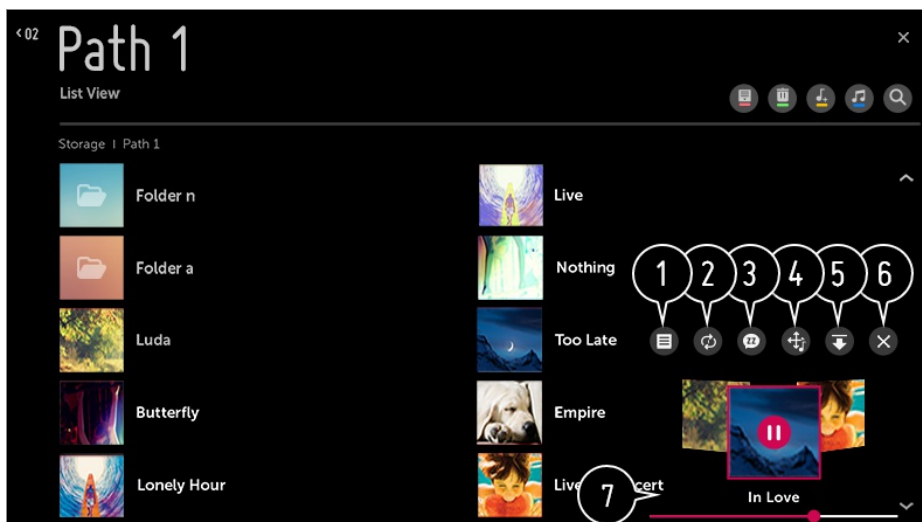

- ① You can play music from the selected storage device.
- ② You can set repeat playback and random playback.
- ③ You can listen to music with the screen turned off.
- ④ You can change the position of the music player.
- ⑤ You can minimize the music player.

6 This feature closes the music player.

7 Lyrics are available for music files that provide them.

In some music files, you can choose a lyric section and move the playback position.

- The lyrics feature is only supported on some devices.
- The lyrics may not be displayed in sync depending on the lyrics data in the music file.
- Reopen your music player by pressing the VOLUME key on your remote control.
- You may not be able to use the music player for some features.

Audio Format

File Format	Item	Info
mp3	Bit rate	32 kbps ~ 320 kbps
	Sample freq.	16 kHz ~ 48 kHz
	Support	MPEG-1, MPEG-2
	Channels	mono, stereo
wav	Bit rate	-
	Sample freq.	8 kHz ~ 96 kHz
	Support	PCM
	Channels	mono, stereo
ogg	Bit rate	64 kbps ~ 320 kbps
	Sample freq.	8 kHz ~ 48 kHz
	Support	Vorbis



wma	Channels	mono, stereo
	Bit rate	128 kbps ~ 320 kbps
	Sample freq.	8 kHz ~ 48 kHz
	Support	WMA
flac	Channels	up to 6 ch
	Bit rate	-
	Sample freq.	8 kHz ~ 96 kHz
	Support	FLAC
	Channels	mono, stereo

- The number of supported channels may vary depending upon the sample frequency.


Use Home IoT Devices

Using Home IoT Devices

You can check and control the status of the connected Home IoT Devices.

- 01 Install LG ThinQ app on your smartphone.
- 02 Log in to your LG ThinQ account, and register your own LG ThinQ device.
- 03 Press the  button on the remote control and select **Home Dashboard**.
- 04 Press the  at the top right to select the **LG ThinQ Account**.
- 05 Log in to your LG ThinQ account. A list of the registered LG ThinQ devices will appear.

- To register your own OCF (Open Connectivity Foundation) Supporting Device, select the **OCF** Guide to change the settings as directed.
- If you are controlling the external device from your mobile app, you might not be able to control the device from your TV. Quit the mobile app to control it from your TV.

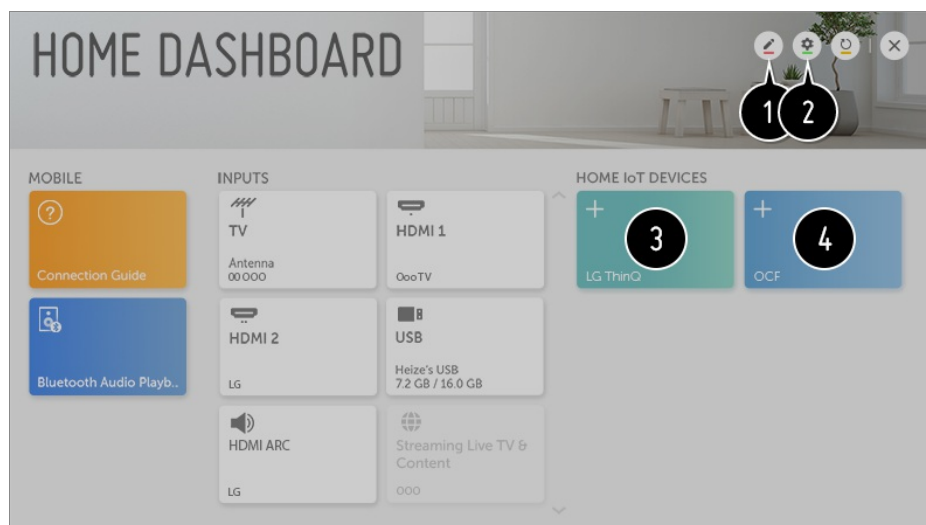

- 1 You can change the name of the device connected to the **Home IoT Devices** or **SHOW / HIDE** the device.
 - 2 **LG ThinQ Account** : You can log in/out to and from the LG ThinQ account you created on mobile.
OCF Connection : If you set it to be **On**, any device that supports OCF will be linked.
Notice : If you turn it **On**, you can receive notifications about the status of the Home IoT Devices.
Device Connector : You can start the **Device Connector** app.
 - 3 After logging in, the device registered on the LG ThinQ account can be displayed. When the device is displayed in the list, the card will disappear.
 - 4 You can connect your own OCF (Open Connectivity Foundation) Supporting Device to the TV to use. When the device is completely connected, the card will disappear.
- The configurable items differ depending upon model.
 - Only some of the LG ThinQ and OCF (Open Connectivity Foundation) Supporting Device are supported, and we plan to continue to add support for more devices.
 - When resetting the TV, it also requires resetting the OCF (Open Connectivity Foundation) Supporting Device connected to the set.

Share Computer Content

What Is Content Share?

Content Share allows you to enjoy videos, music and photos saved on your PC.

Play the Content with Sharing Software on the PC

If you have Windows 7 or later installed on your PC, you can play music, video, photos, etc. on your TV without needing to install a separate program.

- 01 Connect your TV and PC to the same network. PCs installed with Windows 7 or later also need to be connected to a network.
 - 02 Right-click the music / video / photo file you wish to play, then select your model using the “Play To” feature built into Windows 7 or later to play the file.
To play on other devices like your mobile phone refer to the relevant user guide.
- Even when multiple TVs or devices are connected, the selected file is played through only one device. The playback rate may vary depending on the network connection.

Use the SmartShare PC Software to Play the Content Saved on the PC

You can use SmartShare PC Software to connect the music / videos / photos saved on the PC to your home network and play them on your TV.

- 01 Configure the TV and PC installed with SmartShare on the same network.
 - The SmartShare service is only available when the TV and server PC are connected to a single router.
 - 02 Download and install SmartShare PC Software from the LG website (www.lg.com). Before installation, exit all programs running on the PC, such as a firewall or an anti-virus software.
 - 03 Run SmartShare PC Software and configure the share settings.
 - 04 Shared videos and photos are played from the **Photo & Video** APP on the TV. Shared music files are played from the **Music** APP on the TV.
- The server should be running in order to watch the shared file on your TV.
 - For information on how to use the SmartShare PC Software, refer to the software’s help section.

Matters That Require Special Attention during Content Share

- Check your network settings if the Content Share option does not work properly.
- May not work properly on a wireless network. It is recommended that you connect to a wired network.

- May not work properly depending on the network environment.
- If multiple TVs are connected to one device, the content may not be played properly depending upon server performance.
- To watch the 1080p video through Content Share function; a router that uses 5 GHz frequency is required. If a 2.4 GHz router is used, the video may not play properly.
- The Content Share function may not be supported for a router that does not support multi-cast. For more information, refer to the user guide that came with your router or contact the manufacturer.
- Captions are only supported on some connected devices.
- SmartShare PC Software is recommended for reading captions.
- When a new subtitle file is added, disable the shared folder and then enable it again.
- The DRM files in the connected device will not play.
- Even for the file format supported by the TV, the supported file format may differ depending on the connected device environment.
- If there are too many folders or files in a folder, it may not work properly.
- The information on the file imported from the connected device may not be displayed correctly.
- Depending upon the encoding, some streams may not play in Content Sharing mode.

Share Computer Screen

To See the PC Screen on the TV

Connect Wireless

- 01 Enable Screen Share mode on the PC. Your TV will be displayed in the list of available devices.
 - 02 Select your TV and request connection.
 - 03 After the connection is established, the TV will display the screen of the connected device.
- For a reliable connection always keep the connected device to your TV updated to the latest OS version.
 - It is recommended that you use this function at close range.
 - Though it can be connected without a wireless router, connecting your device to a 5 GHz router is recommended because the performance can be affected by the surrounding

wireless environment.

- The response rate may vary depending upon the user's environment.
- It's different from Windows version. For more information on the device you want to connect to, refer to its user guide.
- If the connection fails repeatedly, turn off the TV and the device you are trying to connect. Then turn them back on and try again.

Connect wired

Connect the PC to your TV using an HDMI cable.

Benefits of Smart TV

Enjoying Internet


Using the **Web Browser**

You can enter the website when you input the web address on the URL bar.



If you input the search word, it will find the information about search word base on the search engine.

01 Press the  button on the remote control.

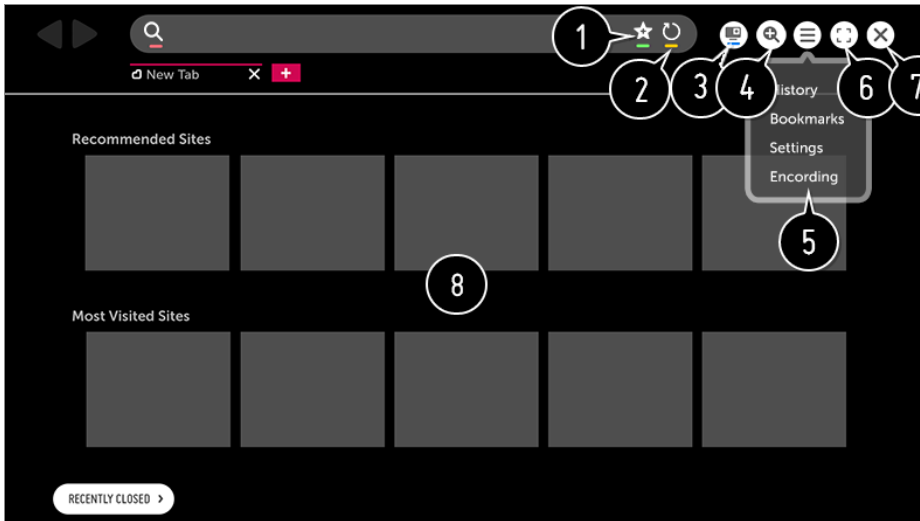02 Run the **Web Browser** application.



- ❶ You can add or delete the current page in **Bookmarks**.
 - ❷ Reloads the current page.
 - ❸ You can turn on / off Mini TV.
 - ❹ Zooms in or out of the screen.
 - ❺ **History** : You can open or delete the history list.
Bookmarks : You can open or delete the bookmark list.
Settings : You can configure simple settings for the browser.
Encoding : You can change the language when the content is not properly displayed on the web page.
 - ❻ You can use the browser in full screen mode.
To go back to the original screen, use the Remote Control to move the pointer to the top of the screen. **Exit Full Screen** will display.
 - ❼ Exit the **Web Browser**.
 - ❽ The **Recommended Sites** and **Most Visited Sites** are displayed on a new tab.
The **Recommended Sites** may not be available in your country.
To hide the **Recommended Sites**, choose **Off** in **Settings** → **Show Recommended Sites**.
- The **Web Browser** supports only HTML5 media, it does not support Flash Plug-in.
 - The **Web Browser** does not support plug-in installation.
 - On the **Web Browser**, it may not be possible to play media files in formats other than : JPEG / PNG / GIF
 - The **Web Browser** may be closed if there is insufficient memory space.
 - On the **Web Browser**, only fonts embedded in the TV are used. Therefore, text may be displayed in different fonts than the ones on the PC.
 - The **Web Browser** does not support file and font downloads.
 - Since the **Web Browser** is a TV browser, it may function differently than PC browsers.
 - Some contents may not be played properly.

- Exercise caution when in used by children. Children may have access to inappropriate online content through this product.
You can block inappropriate online content by restricting access to some apps.
Configure the settings in  →  → **Safety** → **Application Locks**.
- To solve a problem related to this function, refer to **Troubleshooting** section of the **User Guide**.

Setting the **Web Browser**

Press  at the top of the screen and select the **Settings**.

On Startup

You can set the startup page of the browser to **Open the New Tab page / Continue where I left off / Home page**.

Search Engines

You can select the default search engine.

- Search engine settings may be subject to change without notice based on the supplier's circumstances.

Show Recommended Sites

You can change the settings so that **Recommended Sites** are displayed.

Always Show Bookmarks Bar

You can change the settings so that the **Bookmarks** bar is always displayed.

Private Browsing

You can configure the settings not to leave records after searching.

Site Filtering

Approved Sites : You can configure the settings to open the previously registered web pages only.

Blocked Sites : You can configure the settings to block specific websites.

- To use the **Site Filtering** function, you should enter the TV password.
The initial password is set as "0000".

Pop-up Blocker

You can block pop-ups using the settings.

Do Not Track

You can request your visit history not be recorded in the server.

Adaptive Streaming using JavaScript

If this is set to **Off**, the resolution of the videos played in **Web Browser** is limited to 720p.


Notifications

Using Notifications

You can view all notifications from TV apps and LG service at the same time. You can view and delete each notification message, and directly move to the app or website using notifications that support shortcuts.

01 Press the  button on the remote control.

02 Go to  → **General** → **About This TV** and select **Notifications**.

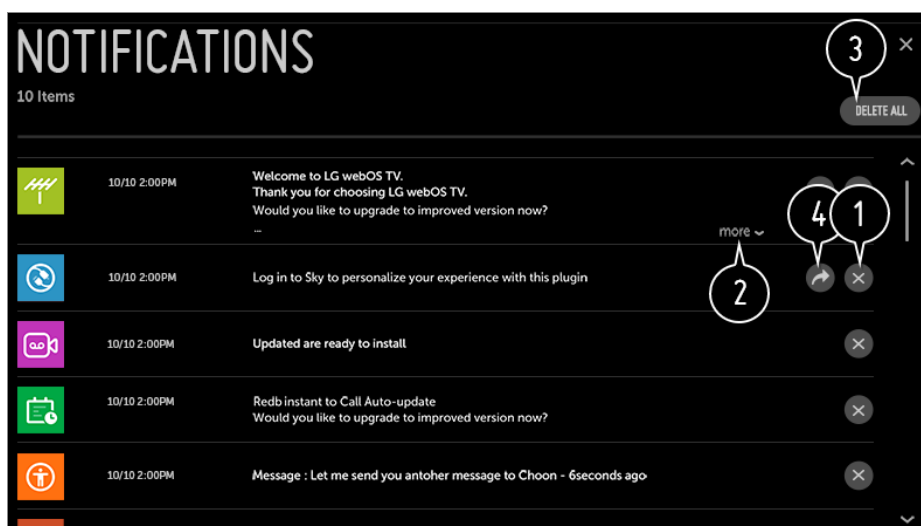

① You can delete notifications.

② For notifications with long content, press **more** to open them in full view.

③ You can delete all notifications.

④ You can launch the APP or move to URL.


Tour List of Settings

Quick Settings

To Use Setting Function Quickly

Displays a set of light-weight controls quickly and simply such as **Picture Mode**, **Aspect Ratio**, **Sound Out** and so on.

Press the  button on the remote control.

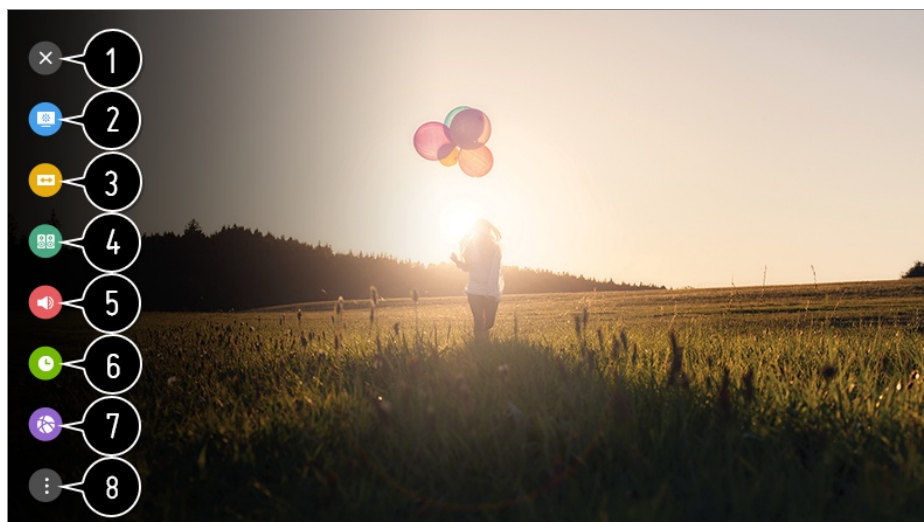

- ❶ Closes the Quick settings.
 - ❷ You can set the **Picture Mode**.
 - ❸ You can set the **Aspect Ratio**.
 - ❹ You can set the **Sound Mode**.
 - ❺ You can choose the **Sound Out**.
 - ❻ You can set the **Sleep Timer**.
 - ❼ Move to the **Connection** screen.
 - ❽ You can set more options.
- Press and hold the **Wheel (OK)** on the remote control during configuration to move to the corresponding menu.

Picture

Selecting Picture Mode

⚙️ → ⓘ → **Picture** → **Picture Mode Settings** → **Picture Mode**

Select the picture mode that is best suited to your viewing environment, preferences or video type.

When You use Normal Signals

Vivid

Sharpens the image by increasing the contrast, brightness and sharpness.

Standard

Displays the picture with normal contrast, brightness and sharpness levels.

APS

APS (Auto Power Saving) mode reduces power consumption by using dimming control.

Cinema

Suitable picture for movies.

Sports / Soccer

Suitable picture for sports games. Sharpens the image of rapid movements such as kicking or throwing a ball.

- The name of the sport may differ depending on region.

Game

Suitable picture for gameplay.

HDR Effect

This feature lets you enjoy a more dynamic, clearer image by correcting the light and dark areas of the display.

This feature provides a realistic image, even when the source image's gradation level is high.

- If you set **Picture Mode** to **HDR Effect**, you will not be able to use some of **Picture Mode Settings**.

technicolor® **Expert**

Colors adjusted by Technicolor's renowned color scientists, who work on Hollywood's premium content.

Expert (Bright Room) / **Expert (Dark Room)**

Allows an expert, or anyone who loves picture quality, to tune to the best picture quality. This option is an adjustment menu provided for ISF-certified picture quality tuning experts. (The ISF logo can be used only in connection with an ISF-certified TV.)

ISFccc : Imaging Science Foundation Certified Calibration Control.

When You Use the HDR / Advanced HDR / Dolby Vision Signals

Vivid

Sharpens the image by increasing the contrast, brightness and sharpness.

Standard

In a normal viewing environment, it opens a screen that can properly show the expressiveness and brightness of HDR.

Cinema Home

The screen appears brighter and clearer than that of the **Cinema** screen.

Cinema

Suitable picture for HDR video signal.


Game

Suitable picture for gameplay.

technicolor® **Expert**

Colors adjusted by Technicolor's renowned color scientists, who work on Hollywood's premium content.

- If an HDR / Advanced HDR / Dolby Vision video signal is input to the models that do not support the HDR / Advanced HDR / Dolby Vision technology, normal signal picture mode options will be made available.

- The configurable items differ depending upon model.
- Depending upon the input signal, the available picture modes may be different.
- When watching online service content, the Picture Mode may be changed to match the content being shown.
-  Expert is an option that allows a picture quality expert to fine-tune the quality of the standard picture. Thus, it may not be effective for a normal picture.
- **Picture Mode** changes may modify **Energy Saving** and **Motion Eye Care** settings and it can affect energy consumption. You can adjust their settings manually in the **Energy Saving** and **Picture Options** menu.



Fine-Tuning Picture Mode

 →  → **Picture** → **Picture Mode Settings**

This feature allows you to adjust the selected picture mode in detail.

Backlight

Controls the level of screen brightness by adjusting the backlight. The closer to 100 the brighter.

- Decrease the **Backlight** to reduce energy consumption.
- Depending on the **Energy Saving** (**Auto** / **Maximum**), you may not be able to adjust the **Backlight**.
In this case, navigate to  →  → **Picture** → **Energy Saving** and set to **Off** or **Minimum**.

OLED LIGHT

Adjusts the display brightness by varying the brightness of the OLED panel.

Contrast

Adjusts the contrast of the bright and dark areas of the picture. The closer to 100, the higher the contrast will be.

Brightness

Adjusts the overall screen brightness. The closer to 100, the brighter the screen will become.

Sharpness

Adjusts the sharpness of the image. The closer to 50, the sharper and clearer the image will be.

Color

Tones down or up the colors displayed on the screen. The closer to 100 the deeper the color.

Tint

Adjusts the color balance between red and green displayed on the screen. The closer to Red 50, the redder the color will be. The closer to Green 50, the greener the color will be.

Color Temperature

Adjusts the color temperature from cold to warm.

- The settings you specify only applies to the currently selected input mode.
To apply your current picture settings to all input modes, select **Apply to All Inputs**.
- Depending upon the input signal or the selected picture mode, the available options may differ.
- The configurable items differ depending upon model.

Resetting Picture Mode

 →  → **Picture** → **Picture Mode Settings** → **Reset**

This option will reset the Picture settings.

- You can reset the Picture modes separately by selecting the Picture mode you wish to reset and enabling it.

Setting the Advanced Control Options

 →  → **Picture** → **Picture Mode Settings** → **Advanced Controls / Expert Controls**

Dynamic Contrast

Corrects the difference between the bright and dark areas of the screen for optimal results depending on the brightness of the picture.

Dynamic Tone Mapping

Suitable contrast settings based on image brightness of the HDR content.

Dynamic Color

To make the image more colorful and lively adjust the Color and saturation of the

picture.

Preferred Color

Adjusts the colors of skin, grass and sky to your personal preferences.

Color Gamut

Selects the range of Colors to display. Set color gamut to **Auto** according to the signal, or display more vivid and richer color in the order of **Extended** and **Wide**.

Super Resolution

Adjusts the resolution to make dim and blurred images clearer.

Gamma

Adjusts the medium brightness of the picture.

White Balance

Adjusts the overall color temperature of the screen as desired.

Color Management System

This is used when experts control it by using a test pattern. You can control it by selecting areas of six colors (**Red** / **Green** / **Blue** / **Cyan** / **Magenta** / **Yellow**). For normal images, adjustments may not result in noticeable Color changes.

Peak Brightness

Adjust peak brightness for the brightest luminance.

- Depending upon the input signal or the selected picture mode, the available options may differ.
- The configurable items differ depending upon model.

Setting Picture Options

 →  → **Picture** → **Picture Mode Settings** → **Picture Options**

Noise Reduction

Removes small dots that stand out so as to make the image clean.

MPEG Noise Reduction

Reduces the noise produced during the creation of digital video signals.

Smooth Gradation

It reduces jaggies in the picture for a smooth picture.

Black Level

Compensates the screen brightness and contrast by adjusting the darkness of the screen.

Real Cinema

Provides a cinema-like experience.

Motion Eye Care

Automatically adjusts brightness and reduces image blur based on image data which reduces eyestrain.

- Turning this option **Off** may increase energy consumption.

LED Local Dimming

Maximizes the contrast ratio by making the bright areas of the screen brighter and the dark areas of the screen darker.

- **Off** : Disables the LED Local Dimming function.
- **Low** / **Medium** / **High** : Changes the contrast ratio.
- Turning this option **Off** may increase energy consumption.

TruMotion

Suitable the image quality of fast-moving pictures.

- **Off** : Turns off the **TruMotion**.
- **Smooth** : Softens fast-moving pictures.
- **Clear** : Makes fast-moving pictures clearer.
- **User** : Sets **TruMotion** manually.
 - **De-Judder** : Adjusts juddering on the screen.
 - **De-Blur** : Reduces the blurring effects of motion.

- **OLED Motion / Motion Pro** : Make fast-moving pictures clearer using the light control.

- The advanced settings can be changed only in **User** mode.

AI Brightness

It automatically corrects the brightness of the screen in accordance with the brightness around the TV.

- Depending upon the input signal or the selected picture mode, the available options may differ.
- The configurable items differ depending upon model.

Setting the Screen Size

 →  → **Picture** → **Aspect Ratio Settings** → **Aspect Ratio**

16:9

Displays an aspect ratio of 16:9.

Original

Changes the aspect ratio to 4:3 or 16:9 depending upon the input video signal.

4:3

Displays an aspect ratio of 4:3.

Vertical Zoom

You can adjust the vertical dimension of the screen and align the screen vertically by using **Adjust Zoom Ratio** and **Adjust Screen Position**.

All-Direction Zoom

You can adjust the horizontal / vertical / diagonal dimensions of the screen and align the screen horizontally / vertically by using **Adjust Zoom Ratio** and **Adjust Screen Position**.

- The configurable items differ depending upon model.
- Viewing content from an external device or, for an extended period of time, having fixed text such as the program name or using an aspect ratio of 4:3 may result in image sticking.
- Depending upon the input signal, the available screen sizes may be different.

View Screen with **Just Scan**

 →  → **Picture** → **Aspect Ratio Settings** → **Just Scan**

If you turn this feature **On**, you can view the content in the aspect ratio that is in the broadcast signal or content source. If the edge of the screen is not clean please turn it **Off**.

If set to **Auto**, the feature switches between **On** or **Off** status depending on the information contained in the video signal.

- The items that can be selected may vary depending on the current input.

To Use Energy Saving Feature

 →  → **Picture** → **Energy Saving**

Reduces power consumption by adjusting peak screen brightness.

Auto

TV sensor detects the ambient lighting and automatically adjusts the screen brightness.

- Some models may not be supported.

Off

Turns off the Energy Saving mode.

Minimum / Medium / Maximum

Applies the pre-set Energy Saving mode.

Screen Off

Screen is turned off and only sound is played.

Press any button except the power and the volume buttons to turn the screen back on.

- If you use **Energy Saving** function, brightness of your TV will be affected.

Using Picture Test

 →  → **Picture** → **Picture Test**

First of all, start the Picture Test to see whether the video signal output is normal, and then select whether there is an error.

If there are no problems in the test picture check the connected external device or broadcast signal.

To Use **Eye Comfort Mode** Feature

 →  → **Picture** → **Additional Settings** → **Eye Comfort Mode**

The color temperature will be adjusted to reduce eye fatigue.

On

The color temperature of your TV screen is adjusted.

Off

Turns off the **Eye Comfort Mode**.

- Some models may not be supported.

Sound

Enabling **Adaptive Sound Control**

 →  → **Sound** → **Adaptive Sound Control**

Automatically optimize sound based on content type. This setting is only available for Internal TV Speaker.

In the list, click **On** to enable this mode.

- If this feature is turned on, you can't adjust the Sound Mode manually.

Sound Mode Settings

 →  → **Sound** → **Sound Mode Settings**

Sound Mode

You can select the most suitable sound mode for each genre.

- **Standard** : Optimizes the sound for all types of content.
- **Cinema** : Optimizes the sound for cinemas.
- **Clear Voice III** : Boosts voice clarity.

- **Sports / Soccer** : Optimizes the sound for sports games.
- **Music** : Optimizes the sound for music.
- **Game** : Optimizes the sound for gameplay.

Balance

You can adjust the volume of the left and right speakers.

DTS Virtual:X / Virtual Surround Plus / Virtual Stadium Surround Plus / ULTRA Surround / ULTRA Stadium Surround / OLED Surround

Enjoy an immersive soundscape with the virtual multi-channel surround sound effect.

- This option can be enabled if **Sound Mode** is set to **Standard**.
- For models that support **Dolby Atmos**, set **Dolby Atmos** to **Off**.

Dolby Surround

If you set the **Dolby Surround** menu **On**, the general content (Non-Dolby Atmos Content) can add Dolby Surround effects, (Similar to Dolby Atmos). To enjoy three-dimensional surround sound in general content (Non Dolby Atmos Content), turn on **Dolby Surround**. Note that **Dolby Atmos** must also be turned on to use **Dolby Surround** feature.

Equalizer

You can set the desired sound by adjusting the equalizer directly. (100Hz / 300Hz / 1kHz / 3kHz / 10kHz)

- This option can be enabled if **Sound Mode** is set to **Standard**.



Reset

You can reset the sound effect settings.

- This option can be enabled if **Sound Mode** is set to **Standard**.
- The configurable items differ depending upon model.

Setting Sound Out

 →  → **Sound** → **Sound Out**

- When **Instant Game Response** is set to **On**, audio delays may occur if you set **Sound Out** to **Bluetooth** / **WiSA Speakers** / **Optical** / **HDMI ARC**. Switch to **Internal TV Speaker** or change  →  → **Sound** → **Additional Settings** →

HDMI Input Audio Format to PCM.

Internal TV Speaker

Audio is played through the TV's internal speakers.

Optical

You can connect an audio device that supports **Optical** to the optical digital audio output port to enjoy your TV's sound in richer quality and greater convenience.

- Only available for models with an optical digital port.
- For some devices, you can adjust the volume using the TV remote control.
- You can set **Digital Sound Out** (**Auto** / **Pass Through** / **PCM**) and LG Sound Sync (**On** / **Off**).

HDMI ARC

Sound from the TV can be output through an external audio device connected via a **HDMI (ARC)** port.

- Select **HDMI ARC** to automatically turn on SIMPLINK. Once SIMPLINK is turned off, the output speaker settings automatically revert to the default settings for uninterrupted audio output.
- You can set **Digital Sound Out** (**Auto** / **Pass Through** / **PCM**) and **eARC** (**On** / **Off**).

Digital Sound Out

You can configure the **Digital Sound Out** settings.

- These settings are available only when an **Optical** / **HDMI ARC** is selected.
- When **Pass Through** is enabled, sound effects may not be output.
- The codec output with a device may differ from input signals.

	Sound Input	Digital Sound Output
PCM	All	PCM
Auto / Pass Through	MPEG	PCM
	Dolby Digital	Dolby Digital

Dolby Digital Plus / Atmos	(Optical) Dolby Digital (HDMI ARC) Dolby Digital Plus / Atmos
Dolby TrueHD (HDMI only)	(Optical) Dolby Digital (HDMI ARC) Dolby Digital Plus / Atmos (HDMI ARC eARC On) TrueHD ¹⁾
HE-AAC	Dolby Digital
DTS	DTS
DTS Express	DTS
DTS-HD MA	(Optical / HDMI ARC) DTS (HDMI ARC eARC On) DTS-HD ¹⁾ / DTS

1) Supported only when **Digital Sound Out** is set to **Pass Through**, and the input is set to the HDMI.

- Dolby TrueHD , eARC : Some models may not be supported.

Bluetooth

You can connect wirelessly a Bluetooth audio device or a Bluetooth headset to enjoy your TV's sound in richer quality and greater convenience.

- If you have recently connected device that the sound bar supports LG Sound Sync, this feature automatically tries connecting to that device.
- LG Sound Sync devices will automatically try to connect to the recently used devices when you turn the TV on.
- We recommend that you connect an LG audio device that supports LG Sound Sync, using LG TV mode or LG Sound Sync mode on the device.
- Some models may not be supported.
- Press **Device Selection** to view the connected devices or any devices that can be connected and connect to any one of them.

- You can use the TV remote control to adjust the volume of some Bluetooth devices.
- If the device fails to connect, check the power of the device to connect to and check if the audio device is working properly.
- Depending on the type of the Bluetooth device, the device may not connect correctly or an abnormal behavior may occur such as unsynchronized video and audio.
- Sound may stutter or sound quality may be reduced if:
 - the Bluetooth device is too far from the TV;
 - there are obstacles between the Bluetooth device and the TV; or
 - used together with radio equipment such as a microwave oven or wireless LAN.
- If the **Picture Mode** is set to **Game** and **Sound Out** is set to **Bluetooth**, the **Picture Mode** changes to **Standard**.

WiSA Speakers

You can wirelessly connect the TV to the **WiSA Speakers** to enjoy high-quality sound. Select **DEVICE LIST** to adjust detailed settings for **WiSA Speakers**.

- Some models may not be supported.
- To use the WiSA speakers, you need to connect the exclusive dongle.
- Connection issues between the WiSA Dongle and WiSA Speaker may occur in environments with wireless interference. In this case, contact the speaker manufacturer.
- For more information on the purchase of WiSA authorized products, check on www.wisaassociation.org.

Audio Out (Line Out) / Wired Headphones

Select **Wired Headphones** or **Audio Out (Line Out)** to optimise audio output according to the device connected.

- Some models may not be supported.
- If you connect the wired headphones while the TV is powered on, it automatically detects the wired headphones and redirects audio through them.

Playing Audio through the TV's Internal Speakers and External Audio Device Simultaneously

Audio can be played through multiple devices simultaneously.

Internal TV Speaker + Optical

Audio is played through the TV's built-in speakers and the audio device connected to the digital optical audio output port simultaneously.

Internal TV Speaker + Wired Headphones

Audio is played through the TV's internal speakers and the **Wired Headphones** simultaneously.

- Some models may not be supported.
- If you connect the wired headphones while the TV is powered on, it automatically detects the wired headphones and redirects audio through them.

Performing Sound Test

 →  → **Sound** → **Sound Test**

Start the Sound Test to check that the sound signal output is normal, and then select whether there is an error.

If there are no problems in the test, check the connected external device or broadcast signal.

- Sound test is possible by Internal TV Speaker only.

TV Installation Type

 →  → **Sound** → **Additional Settings** → **TV Installation Type**

This mode optimizes the sound based on the TV setup.

Stand Type I

Use this if the distance between your TV stand and the wall is significant.

Stand Type II

Use this if your TV stand is close to the wall. This will reduce bass reflex and give you clearer sound quality.

Wall-mounted Type

Use this if your installed TV is wall-mounted type.

- The configurable items differ depending upon model.
- Some models may not be supported.

Setting Volume Mode

 →  → **Sound** → **Additional Settings** → **Volume Mode**

Auto Volume

Set to **On**. This adjusts the volume automatically for each broadcasting company so you can always listen to channel audio at the desired volume even after changing channels.

Volume Increase Amount

Select **Low** / **Medium** / **High** to adjust the volume range. Higher values increase volume increments.

Adjusting AV Synchronization

 →  → **Sound** → **Additional Settings** → **AV Sync Adjustment**

Adjusts the synchronization of the sound from the speaker that is working. The closer to (+), the slower the audio output.

If you select **Bypass**, Outputs the broadcast signals or the sound from external devices without any audio delay. The audio may be output before the video because of the time the TV takes to process the video input.

HDMI Input Audio Format

 →  → **Sound** → **Additional Settings** → **HDMI Input Audio Format**

You can set the audio format for each HDMI input. When the voice delivered through the HDMI port is not synchronized, set it to **PCM**.

Channels

Using Auto Tuning

 →  → **Channels** → **Channel Tuning** → **Auto Tuning**

This function automatically searches and remembers channels that are available for viewing.

- If the **Antennas** or **Cable** is not connected properly, channels are not added.
- **Auto Tuning** finds and adds only channels being broadcast.
- A password box will appear in **Safety** mode.

To Use Manual Channel Tuning

⚙️ → ⓘ → **Channels** → **Channel Tuning** → **Manual Tuning**

Adjusts channels manually and saves the results.

You can check the signal strength of digital broadcasting.


Edit Channels

You can edit the selected channels from all the stored channels or add / delete them to / from the favorite channels.

Edit All Channels List

⚙️ → ⓘ → **Channels** → **Channel Manager** → **Edit All Channels**

You can lock or unlock the selected channels from all the stored channels or you can set them to be skipped when switching channels.

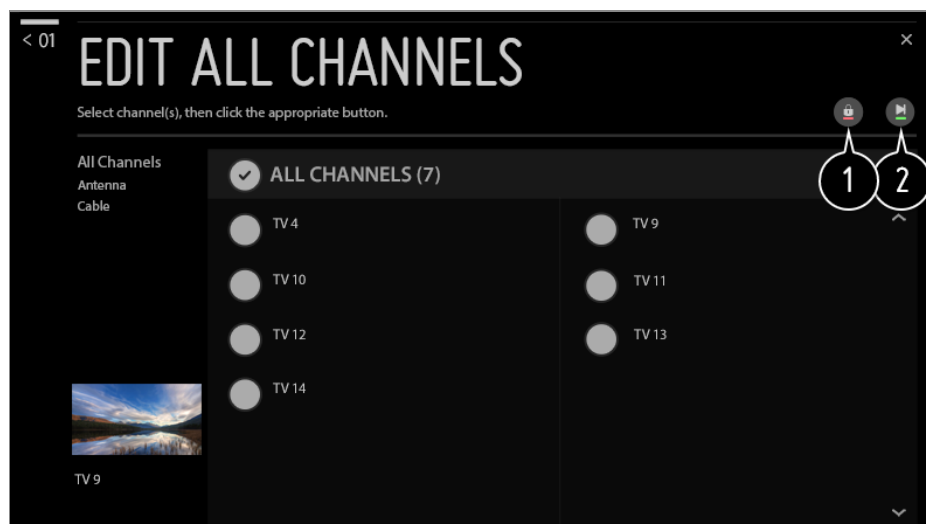


- 1 Lock the selected channels or unlock the locked channels.
- 2 Set the selected channels to be skipped when switching channels, or disable the skipping option of the channels previously set to be skipped.

Edit Favorite Channels List

⚙️ → ⓘ → **Channels** → **Channel Manager** → **Edit Favorites**

You can add / delete desired channels to / from the favorite channels, change their positions, etc.

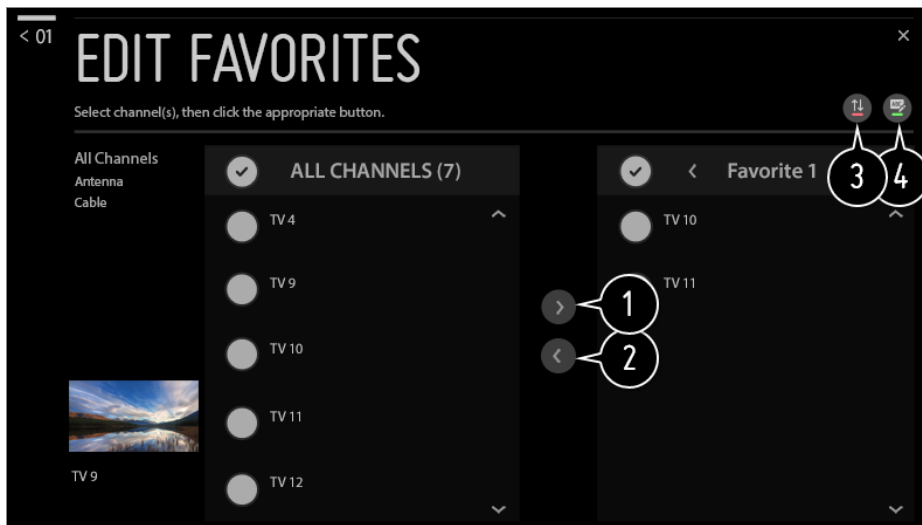

- ❶ Select the desired channels from the all channels list and press the button to add them to the favorite channels list.
 - ❷ Delete the selected channels from the favorite channels list.
 - ❸ Select one or more channels in the Preferred Channels list, press the button, and then select the position to move it to. The selected channels will move to the position you selected.
 - ❹ Change the name of the favorite channels list.
- If you have set up the Internet channels, you can also lock them, set them to be skipped, or add them to the favorite channels list.
(Some models may not be supported.)

Watching Internet Channel

You can watch real-time broadcasts through this service over the Internet.

You can see information on new Internet Channels or manage the channels you like in **LG Channels**.

To see the details, click the **Enjoy Live TV → Watching Internet Channel (LG Channels)** in **User Guide**.

- Some models may not be supported.

Connection

Setting the TV Name

 →  → **Connection** → **TV Name**

You can use the screen keyboard to set the name for the smart TV to be used on the network.

- Up to 25 characters can be entered using the English alphabet.

Setting a Wired Network

 →  → **Connection** → **Wired Connection (Ethernet)**

The TV will be connected automatically to the network if a cable connection is established.

To change network connection settings, select **Edit** in Network Settings.

- The IPv6 setup does not support **Edit**.

Setting a Wireless Network

 →  → **Connection** → **Wi-Fi Connection**

You can check and connect to the available wireless Internet networks; if you have set up the TV for a wireless network.

Add a Hidden Wireless Network

You can add a wireless network if you input the name of the network directly.

Connect via WPS PBC

Connects easily when the PBC (WPS) button of a wireless AP that supports PBC is pressed.

Connect via WPS PIN

Connects easily when the PIN of the wireless AP that you wish to connect to is entered in to the AP configuration webpage.

Advanced Wi-Fi Settings

You can enter a wireless network if you input the information of the network directly.

- The IPv6 setup does not support **Edit**.

Using **Device Connector**

 →  → **Connection** → **Device Connector**

This feature is to enable you to easily set the connection between the TV and external devices.

Follow instructions in **Device Connector**.

Using **Mobile TV On**

 →  → **Connection** → **Mobile TV On**

If **Turn on via Wi-Fi** or **Turn on via Bluetooth** is set to **On**; you can turn on your TV using an application that supports **Mobile TV On** or see the screen of the application on your TV.

- The TV should be connected to a network.
- The TV and the device to be used should be connected to the same network.
- The **Turn on via Wi-Fi** feature must be used in an app on a smart device that supports the feature.
- The **Turn on via Bluetooth** feature can only be used with certain LG Electronics smartphones.
- The TV must be plugged in.
- To connect for the first time make sure the device to be used is ready to connect.
- Some models may not be supported.

Screen Share Settings

 →  → **Connection** → **Screen Share Settings**

You can press the **Delete Pairing History** to delete the connections of the devices connected to the TV by the Screen Share.

Perform **HDMI Device Settings**

 →  → **Connection** → **HDMI Device Settings**

You can link information of devices connected to the TV via the HDMI cable to set the devices to be controlled by the TV remote control.

Auto Device Detection

It automatically sets to enable you to control the devices connected via the HDMI with

the Magic Remote.

SIMPLINK (HDMI-CEC)

You can conveniently control and use various multimedia devices connected through HDMI with the TV remote control.

To see the details, click the **How to Operate TV → SIMPLINK (HDMI-CEC)** in **User Guide**.

Auto Power Sync

If Auto Power Sync is set to **On**, turning on a SIMPLINK-linked device will turn the TV on. When you turn off the TV, the device will also be turned off.

- The configurable items differ depending upon model.

Link To Devices for Voice Control

 →  → **Connection → Link To Devices for Voice Control**

It sets to enable you to command by speaking to the connected device to control the TV at a distance.

- The configurable items differ depending upon model.

General

Configuring Language Settings

 →  → **General → Language**

You can choose the menu language displayed on the screen and the audio language of the digital broadcast.

Menu Language

You can select one of the menu languages to be displayed on the screen. The language for the speech recognition will be automatically set to the selected language for the menu.

- The speech recognition is only applied to some models.

Audio Language

You can choose the language you want when watching a digital broadcasting program, which includes multiple audio languages.
For programs that do not support multiple languages, the default will be used.

- Applies to digital broadcasting.

Keyboard Languages

Select the language to use the on-screen keyboard.

Setting the Location

 →  → **General** → **Location**

You can change the location setting of your Smart TV.

Service Area Zip Code

This function is used to set the broadcast location of the TV by entering your zip code.

LG Services Country

If you haven't selected **Set Automatically**, you can select the country manually.

- You must set the country manually when you are not connected to the network.
- The configurable items differ depending upon model.

Setting Time & Date

 →  → **General** → **Time & Date**

You can check or change the time while watching the TV.

Set Automatically

The TV time is automatically set to the time of digital broadcasting information sent from the broadcasting station or the time sent from the server.

Time / Date / Time Zone

You can set the time and date manually if the automatically set current time is incorrect.

Setting Sleep Timer

 →  → **General** → **Timers** → **Sleep Timer**

Sets the TV to turn off at a specified time.

If you do not want to use **Sleep Timer**, select **Off**.

Automatically Turning the TV On or Off

 →  → **General** → **Timers** → **Timer Power On / Timer Power Off**

You can set the Power On / Off time for the TV.

If you do not want to use **Timer Power On / Timer Power Off**, select **Off**.

- To use **Timer Power On / Timer Power Off** set the time correctly.
- If you do not press a button for 120 minutes after the TV is turned on by a feature like **Timer Power On**, the TV will turn off automatically.
To ensure the TV does not automatically turn off set **2 Hours Auto Power Off** to **Off**.
(Some models may not be supported.)

Creating LG Account

 →  → **General** → **Account Management**

In **Account Management**, you can use your email address to create a new LG account.



- 01 Select **CREATE ACCOUNT**. Read and accept the Terms of Service.
- 02 Enter an ID and a password. Your ID must be your email address.
- 03 Enter your birthday.
- 04 Select **OK**. Go to your email to verify your email address. Please verify your email before the time expires.
- 05 Log in with your new account to start using the service.

- Some models may not be supported.
- Internet connection is required to create an account.
- Required information may vary depending upon the country.
- You may be restricted from the service depending upon your age.
- To solve a problem related to this function, refer to **Troubleshooting** section of the **User Guide**.

Managing your LG Account

 →  → **General** → **Account Management**

You can manage the information of your LG account.

- 01 Press the  button on the remote control.
- 02 Go to  → **General** → **Account Management** to log in.

Personal Information

You can view or edit your information of the account currently logged in.
You can change the password or press **EDIT** to edit your personal information.

- Some models may not be supported.

Setting the AI Service

 →  → **General** → **AI Service**

You can enable the recommended services based on the usage history.

Voice Recognition

Voice Recognition Service

You can select a speech recognition service.

- The services available may vary depending on your settings for language or country.

Voice Recognition Settings

You can apply settings for voice recognition features.

Voice Recognition Help

You can see the list of features you can use through voice control.

Who.Where.What?

You can get recommendations for the information related to the broadcast you are watching.

- Some models may not be supported.

Personalized Recommendation (Network)

You can get recommendations for viewing history based channels and content through the network.

- **On** : Recommendations based on your viewing history are provided.

- **Off** : Recommendations based on popularity are provided.

AI Recommendation

You can get content recommendation messages according to your content viewing history and app usage history.

Usage Data Reset

It resets the content view history and the app usage history. If you reset them, it takes some time to receive recommendations for contents again.

- The configurable items differ depending upon model.

Using Power Saving Mode

 →  → **General** → **Power Saving Mode**

Set power options to reduce energy consumption.

HDD Power Saving Mode

If you set the mode to **On**, the USB HDD connected to the TV will go into power-saving mode when it has been left unattended for an extended period of time.

About This TV

 →  → **General** → **About This TV**

You can check the information about Customer Services. (Software Update, TV Information, and so on.)

You can run the **Notifications** and the **User Guide** to check a notification received while you are using the TV or see the features guide. To check the status of the TV, please run the **Quick Help**.

Home Settings

 →  → **General** → **Additional Settings** → **Home Settings**

Home Auto Launch

You can set Home to launch automatically when turning on the TV.

Home Style

You can set the Home Style.

Home Promotion

You can turn on or off the advertisements on the Home screen.

- The configurable items differ depending upon model.

TV Power Settings

 →  → **General** → **Additional Settings** → **Quick Start+**

This setting puts your TV in standby mode when it's turned off so it will start up more quickly the next time it's turned on.

Set **Quick Start+** to **On**.

- Some models may not be supported.
- Turning this option on may increase energy consumption.

Advertisement

 →  → **General** → **Additional Settings** → **Advertisement**

If your TV is connected to the Internet, webOS may use a frequency capping cookie to keep track of the number of times an ad is shown on your TV.

This information is used to help limit the number of times the same ad is displayed. You can clear this cookie or turn it on or off at any time by going to the **Advertisement** setting on your TV.

No personally identifiable information is tied to this cookie.

- Some models may not be supported.

To Set Power Indicator

 →  → **General** → **Additional Settings** → **Standby Light**


You can turn the standby light on or off.

- Some models may not be supported.

To Use Settings Help

 →  → **General** → **Additional Settings** → **Settings Help**

If you select the setting menus; you will see the hints of the settings. Turn on / off description box in Settings.

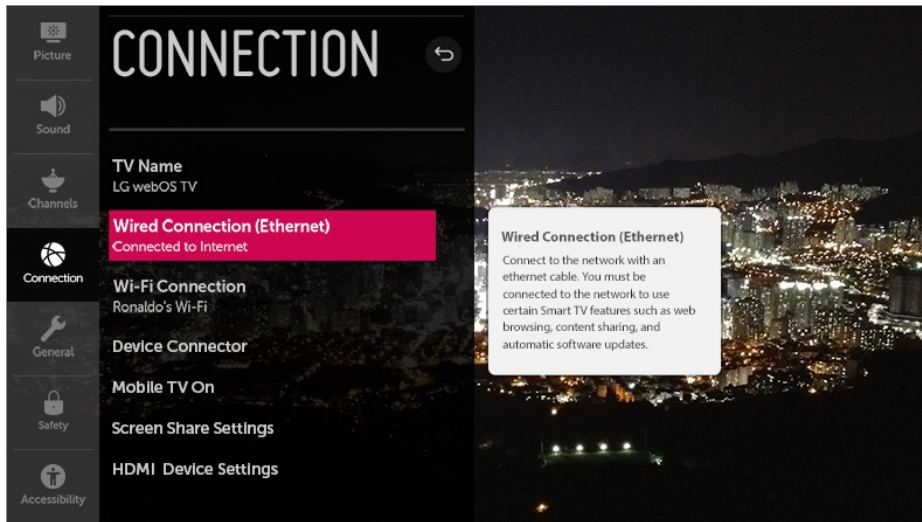

Using the Screen Saver

⚙️ → ⓘ → **General** → **Additional Settings** → **Screen Saver**

When the currently displayed app has not received any user input for an hour, it will be replaced by a **Screen Saver**.

- Setting the **Screen Saver** feature to **Off**, maintains the same display for an extended period, which may compromise quality. The compromised screen may not be recoverable.

Screen Saver Promotion

⚙️ → ⓘ → **General** → **Additional Settings** → **Screen Saver Promotion**

You can turn on or off the advertisements displayed on screen savers of certain apps. Setting to **On** enables you to turn off the advertisements displayed on the screen saver.

Configuring the Screen When There Is No Signal

⚙️ → ⓘ → **General** → **Additional Settings** → **No Signal Image**

You can turn on or off the image displayed when there is no signal.

On

The default image is displayed if there is no signal.

Off

The **No Signal** message is displayed if there is no signal.

Switching TV Modes

 →  → **General** → **Additional Settings** → **Home/Store Mode**

You can choose between **Home Mode** and **Store Mode**.

To use the TV at home, select **Home Mode**.

Select **Store Mode** only when the TV will be displayed in store. The **Store Mode** provide settings optimized for store display.

Restoring the Default Settings

 →  → **General** → **Reset to Initial Settings**



Return TV to its initial settings. This will return all settings to their default values.

After reset, the TV will automatically turn off and on.

- If **Safety** is set to **On**; you should type the password to **Reset to Initial Settings**.
- Do not turn off the power during initialization.
- We recommend that you reset the TV to **Reset to Initial Settings** before you sell it or transfer it to a third party.

Safety

Enabling TV Program Locks

- 01 Press the  button on the remote control.
- 02 Select  → **Safety**.
- 03 Set **Safety** to **On**.
- 04 Select the **TV Program Locks**.

TV Lock

Locks the TV shows you do not want your children to watch. In addition, locks the TV shows of your choice based on ratings by using the parental control function (V-Chip).

- Children Age : TV-Y (Preschool children aged 2-6 years), TV-Y7 (Advise school children aged over 6)

- Fantasy Violence : TV-Y7 (Advise school children; Suitable for children aged over 7 years. May contain fantasy violence.)
 - General Age : TV-G (General Audience. All ages admitted.) TV-PG (Parental Guidance Suggested. Some material may not be suitable for preschool children.) TV-14 (Parents Strongly Cautioned. Some material may not be suitable for children under 14.) TV-MA (Adults Only. Not suitable for children under 17.)
 - Sexually Suggestive Dialogue : TV-PG or TV-14
 - Adult Language (Violent Language) : TV-PG, TV-14 or TV-MA
 - Sexual Situations (Sexually Explicit) : TV-PG, TV-14 or TV-MA
 - Violence : TV-PG, TV-14 or TV-MA
- The configurable items differ depending upon model.

Movie Lock

Blocks films that are broadcast and contain inappropriate content, based on the Motion Picture Association of America (MPAA) rating.

- G : (General Audiences) All ages admitted
 - PG : (Parental Guidance Suggested) Some material may not be suitable for children.
 - PG-13 : (Parents Strongly Cautioned) Some material may be inappropriate for children under 13.
 - R : (Restricted) Under 17 requires accompanying parent or adult guardian.
 - NC-17 : No one 17 and under admitted.
 - X : Adults only
- The configurable items differ depending upon model.

Downloadable Rating

This function is only enabled when the TV receives the Region5 rated data. The name of the rating option may differ.

- Supported only in the digital mode.
- The initial password is set as "0000".
- Some models may not be supported.

Enabling TV Program Locks

- 01 Press the  button on the remote control.
- 02 Select  → **Safety**.

03 Set **Safety** to **On**.

04 Select the **TV Program Locks**.

TV Rating English

Select Canadian English Rating System.

- E : Exempt
- C : Children
- C8+ : Children aged 8 or older
- G : All ages admitted
- PG : Parental Guidance Suggested
- 14+ : 14 or older
- 18+ : Adults only
- Off : View all programs

- The configurable items differ depending upon model.

TV Rating French

Select Canadian French Rating System.

- E : Exempt
- G : All ages admitted
- 8+ : Children aged 8 or older
- 13+ : Suitable for 13 years and over
- 16+ : Suitable for 16 years and over
- 18+ : Adults only
- Off : View all programs

- The configurable items differ depending upon model.




Downloadable Rating

This function is only enabled when the TV receives the Region5 rated data. The name of the rating option may differ.

- Supported only in the digital mode.
- The initial password is set as "0000".
- Some models may not be supported.

Enabling Channel Locks



Blocks the channels that contain inappropriate contents for children. The channels can be selected but the screen is blank and the audio is muted. To watch a locked channel, enter the password.

- 01 Press the  button on the remote control.
- 02 Select  → **Safety**.
- 03 Set **Safety** to **On**.
- 04 Select the **Channel Locks**.
- 05 Select the Channels to lock.
- 06 Select .
- 07 Select the **LOCK**.

- The initial password is set as “0000”.

Enabling Application Locks



You can lock or unlock the application.

- 01 Press the  button on the remote control.
- 02 Select  → **Safety**.
- 03 Set **Safety** to **On**.
- 04 Select the **Application Locks**.
- 05 Select the Applications to lock.

- The initial password is set as “0000”.
- The lock function is not immediately available for the currently running application.

Enabling Input Locks

You can lock or unlock the Inputs.

- 01 Press the  button on the remote control.
- 02 Select  → **Safety**.
- 03 Set **Safety** to **On**.
- 04 Select the **Input Locks**.
- 05 Select the Inputs to lock.

- The initial password is set as “0000”.

Reset Password











 →  → **Safety** → **Reset Password**

Set or change the password for the TV.

- The initial password is set as “0000”.

Resetting a Lost Password

If you lose the password you set, you can reset it as follows:

- 01 Press the  button on the remote control.
- 02 Move the focus to  → **Safety** → **Reset Password**.
- 03 Press  (**Channels**)  →  (**Channels**)  →  (**Channels**)  →  (**Channels**)  on the remote control. The master password input window will appear.
- 04 Enter the numbers “0313” in the master password input window, then press **Enter**. The password will be reset.

Accessibility

To Use Audio Guidance

 →  → **Accessibility** → **Audio Guidance**

If **Audio Guidance** is set to **On**, audio guides will be provided in various situations, such as when you change channels, adjust the volume or change settings and input signals.

Speed

Adjust the speed of spoken guide.

Volume

Adjust the volume of spoken guide.

Pitch

Adjust the tone of spoken guide.

- This feature is available on certain languages only.

- Some models may not be supported.
- The configurable items differ depending upon model.
- For visually impaired users.
- Setting the **Audio Guidance** to **On** automatically switches the **TV Power Sound** (only available on certain models) to **On** as well.

Setting up Menu Transparency

 →  → **Accessibility** → **Menu Transparency**

By setting this feature to **On**, you can make some of the menus (e.g. Live Menu, **Search**, etc.) transparent.

To Set Closed Caption

 →  → **Accessibility** → **Closed Caption**

View closed captions when the TV station provides closed captioned programming. Program closed captions work only on digital / analog broadcasts or external input. (**AV IN** port is available in certain models only.)

Change **Closed Caption** to **On** and select caption setting.

Analog Mode

CC 1 - CC 4 (Closed Captioning) / **TEXT 1 - TEXT 4**

Displays the audio portion of a TV program as text on the TV screen. **CC 1** is the most common mode in use.

Field 1 data channels : two Captions (CC1, CC2), two Text (T1, T2).

Field 2 data channels : two Captions (CC3, CC4), two Text (T3, T4).

Digital Mode

According to the digital broadcasting type you are watching, you can select the caption in **HD Mode** or the **UHD Mode**.

- In the case of HD broadcasting, you can set the size and color of the caption at the **HD Mode Option**. Please select **Set By Program** or **Custom**. You can adjust detailed options such as the size and color of the caption by selecting the **Custom**.

TV Power Sound

 →  → **Accessibility** → **TV Power Sound**

This feature lets you turn on / off the sound effects that you hear when your TV is

switched on or off.

- Some models may not be supported.

Changing the Menu to High-Contrast Screen

 →  → **Accessibility** → **High Contrast**



When this feature is set to **On**, it adjusts the background of some of the menus on the screen and font colors to highlight the contrast between the light and dark areas.

Troubleshooting

Perform Check-up with the Quick Help

Perform Check-up with the **Quick Help**

When the TV malfunctions, you can get help to solve the problem.

01 Press  button on the remote control and select  → **General** → **About This TV** → **Quick Help**.

- You can also long-press the number **9** button of the remote control to run the **Quick Help**.

02 You can perform the **Check the status of TV / Self-Diagnosis of TV Settings**.
Select the problematic item, and you can get help to solve the problem.

Self-Diagnosis of TV Settings

Select the item that matches the symptom to find instructions that can help you solve the problem.

Check the status of TV

You can check your TV's current status for the selected item.

- When there is no related content in the **Quick Help**, please refer to the **Troubleshooting**


in **User Guide**.

- If you still fail to solve the problem, please contact our Customer Service Center.

Abnormal Operation

Power / Remote Control Errors


If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.

 I cannot turn on the TV.

- Please make sure your TV power plug is correctly connected to the outlet.
- If you are using a multi-outlet, check if it is working properly. To check whether a power strip is working properly, plug the TV's power plug directly to a wall outlet and observe its operation.
- Try to power on using the button on your TV set.

 The screen does not appear for some time after power-on.

- This is because there is a noise-removal process to eliminate any possible noise that may appear during power-on. This does not mean the product is defective.

 I cannot turn the TV on with the remote control.

- Please make sure your TV power plug is correctly connected to the outlet.
- Replace the batteries in the remote control. (Use alkaline batteries.)
- Check whether there are any obstacles in front of the TV's remote control sensor. Sound bars or other obstacles placed in front of the TV's lower receiver may obstruct IR signal reception.

Screen Issues


Screen Issues


If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.

First of all, perform a  →  → **Picture** → **Picture Test** for check any abnormalities in the TV.



If you are using a set-top box, turn it off, and then turn it back on.


Make sure that the set-top box is correctly connected to your TV.

 It says there is no signal on the screen.

- Check whether the coaxial cable or the cable connected to the external device is properly connected to the TV.
- Go to  to choose the connected input.
- Check if your external device, such as set-top box or Blu-ray player, is turned on.



 I cannot see some channels.


- Start the  →  → **Channels** → **Channel Tuning** → **Auto Tuning**.
- If you are using a set-top box, consult its supplier.

 The screen shakes after the momentary appearance of vertical / horizontal lines and net pattern.

- Connect wireless telephones, hairdryers, electrical drills, etc. to a different power outlet. The problem may be caused by high-frequency electronic devices such as another TV or strong electro-magnetic sources nearby.

 A digitally broadcasted program stops or its screen is broken.


- This happens when a signal is weak or reception is unstable. Adjust the antenna direction or check the cable connection.
-  →  → **Channels** → **Channel Tuning** → **Manual Tuning**
If the signal strength is too low in **Manual Tuning**, contact the broadcasting station or management office to have the signals checked.
- If you are using a set-top box, consult its supplier.



 I see vertical lines in all four edges of the screen, or the colors are blurred when I try to connect to HDMI.

-  →  → **Picture** → **Aspect Ratio Settings** → **Just Scan**









Set **Just Scan** to **Off**.

Just Scan shows you the original image as it is. You may see noise in all four directions on the screen if the signal contains noise.



 I don't see anything, or the image keeps flickering when I try to connect the HDMI cable.



- Check whether your HDMI[®] cable is compliant with the specifications. You may experience flickering or a blank screen if the HDMI[®] cable is faulty (bent, broken).
- Make sure that the cable is correctly connected to the port. Bad or loose contact may cause display problems on the screen.
- If using a UHD set-top box, adjust  →  → **Picture** → **Additional Settings** → **HDMI ULTRA HD Deep Color**.

 The screen looks too dim or dark.

-  →  → **Picture** → **Picture Mode Settings** → **Picture Mode**
Switch **Picture Mode** to your desired picture mode. (**Standard**, **Vivid**, etc.)
This applies to the current input mode only.
-  →  → **Picture** → **Picture Mode Settings** → **Picture Options** → **Motion Eye Care**
Switch **Motion Eye Care** to **Off**. This applies to the current input mode only.
-  →  → **Picture** → **Energy Saving**
Switch **Energy Saving** to either **Off** or **Minimum**.
-  →  → **Picture** → **Additional Settings** → **Eye Comfort Mode**
Switch **Eye Comfort Mode** to **Off**.

 The screen is in black and white or displaying strange colors.

- Check the input mode or cable connection.
- Go to  to choose the connected input.
- You may get a black and white screen if you have connected to the **COMPONENT IN** but selected the **AV**.
Go to  and choose **Component**.
- When you are connecting to the **AV IN** or **COMPONENT IN**, check to ensure each cable is matched with the corresponding color connection. For component cables, make sure the video (red) cable and audio (red) cable are connected properly.

- **AV IN / COMPONENT IN** ports are available in certain models only.
- Information on customer service for product problems is available in  →  → **General** → **About This TV** on the TV.

Sound Issues


Sound Issues



If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.

First of all, perform a  →  → **Sound** → **Sound Test** to check for any abnormalities in the TV.



If you are using a set-top box, turn it off, and then turn it back on.


Make sure that the set-top box is correctly connected to your TV.



 The screen is fine, but it does not play any sound.

- Try another channel.
- If you use a set-top box, there will be no sound if you have set the volume of the set-top box or your TV to 0 or enabled Mute. Set the volume to an appropriate level.
-  →  → **Sound** → **Sound Out**
Set the **Sound Out** to **Internal TV Speaker + Optical** or **Internal TV Speaker**, and then check it once again. If you can hear the sound just fine, you need to set the external speakers connected such as a soundbar.



 There is no sound coming from one of the speakers.


-  →  → **Sound** → **Sound Mode Settings** → **Balance**
Adjust the balance as necessary with the Navigation button in **Balance**.
- When you are connecting to the **AV IN / COMPONENT IN**, check if the audio left / right (white / red) cables are correctly connected. (**AV IN / COMPONENT IN** ports are available in certain models only.)

 The TV sound is not synchronized with the picture, or the sound sometimes breaks up.

- If this happens on only some of the channels, it may be caused by the broadcasting company's transmission signal. Please have your broadcasting services provider (wired / cable) diagnose the problem.
- If all channels are out of sync, go to  →  → **Sound** → **Additional Settings** → **AV Sync Adjustment** and adjust the sync.
- If you are using a set-top box, consult its supplier.

 The volume changes when I change the channel.



- The volume of different broadcasting stations' transmission output may vary.
-  →  → **Sound** → **Additional Settings** → **Volume Mode** → **Auto Volume**
Set **Auto Volume** to **On**.
- If you are using a set-top box, consult its supplier.

 The sound does not work or only the background music is played in some programs.
(Programs produced for export by broadcasting companies)

- **Wheel (OK)** → 
Set your language preference in **Audio Language**.

PC Connection Issues

PC Connection Issues


Press and hold the  button on the remote control to select the  on the top right of **Home Dashboard**. In the Edit mode, set the icon of the HDMI terminal connected to the PC to **PC** to apply the video and aspect ratio settings that are aligned with the PC. To connect a different device to the same input terminal, you need to set the icon again because the settings of the Edit icon will not be automatically restored.



If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.


 The screen remains blank after it is connected to a PC.

- Check that the PC is properly connected to the TV.

- Turn the TV off and back on using the remote control.
- Restart the PC with the TV on.
- Set to a resolution that supports the PC input.
- To use dual monitors, check that the PC or notebook supports dual-monitor mode.
- Reconnect the high speed HDMI cable.
- If you have connected the RGB output port of your PC to the **HDMI IN** of your TV, you need an RGB to HDMI gender.
You will not see anything on the screen if you use an HDMI to RGB gender.

 The screen is cut off or moved to one side after it is connected to a PC.

- Set the PC's resolution to one supported by the TV. For more information, see **Notice → Supported Resolution : HDMI-PC** in **User Guide**.
- Set the connected HDMI device's name to PC.
Press and hold the  button on your remote control. Select  in the upper right corner and change the icon of the HDMI terminal connected to **Inputs** to PC.

 The sound does not play when the PC is connected with an HDMI cable.

- Configure LGTV as your default device in Control Panel → Sound in your PC settings.
- Consult your manufacturer on whether your graphics card supports HDMI audio output.

Movie Playback Issues

Movie Playback Issues

If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.


For more information about supported files, see **Connect Other Devices → Photo & Video** in the **User Guide**.

 I cannot find a file in the **Photo & Video**.

- Check whether the files saved on your USB storage device can be read by the PC.
- Check that the file extension is supported.



 I see a message that says the file is not supported.


- Check that the file plays without any problems on the video player on a PC. (Check for file damage.)
- Check that the file extension is supported.
- Check that the resolution is supported.
- Check that the video codec is supported.
- Check that the frame rate is supported.

 I get a message saying “This audio is not supported” or the video is playing normally but the audio is not.

- Check that the file plays without any problems on the video player on a PC. (Check for file damage.)
- Check that the file extension is supported.
- Check that the audio codec is supported.
- Check that the bit rate is supported.
- Check that the sample frequency is supported.
- Check that the number of audio channels is supported.

 I cannot see the subtitles.

- Check that the file plays without any problems on the video player on a PC. (Check for file damage.)
- Check that the video and subtitle files have the same name.
- Also check that both the video file and the subtitle file are in the same folder.
- Check that the subtitle file format is supported.
- Check that the language is supported.
(You can check the language of the subtitle file by opening the file in the Notepad.)
- If subtitles encoding is incorrectly set, subtitles may not be displayed properly.
Select  →  in the control panel at the bottom of the video playback screen and change the **CODE PAGE** value.
- If you play a video file stored on another device by using the content sharing feature, subtitles may not be available depending on the program you use.
- Subtitles are not supported if you are playing video through an NAS unit. Consult your NAS manufacturer.

 My USB storage device is not recognized when connected.

- Check whether it is a USB storage device supported by the TV.
For more information, see **Connect Other Devices** → **Connecting USB** in **User Guide**.

Network Connection Issues

Network Connection Issues

If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.

You can check the network connection status as shown below.

-  →  → **Connection** → **Wired Connection (Ethernet)**
-  →  → **Connection** → **Wi-Fi Connection** → **Advanced Wi-Fi Settings**



When X appears next to TV

- Check the TV or the AP (Router).
- Check the connection status of the TV, AP (Router) and Cable Modem.
- Power off and power on in the following order;
 1. The Cable Modem, wait for the Cable Modem to reset.
 2. The AP (Router), wait for the AP (Router) to reset.
 3. The TV.
- If you are using a wireless connection, change the SSID (Network name) and wireless channel of AP (Router).
- If you are using a static IP, enter the IP directly.
- Contact internet service provider or AP (Router) companies.



When X appears next to Gateway

- Check the AP (Router) or consult your Internet service provider.
- Unplug the power cord of the AP (Router), Cable Modem, wait 10 seconds. Reapply power.
- Initialize (Reset) on the AP (Router) or Cable Modem.

- Contact internet service provider or AP (Router) companies.
- Check the AP (Router) manufacturer's website to make sure your router has the latest firmware version installed.



When X appears next to DNS

- Check the AP (Router) or consult your Internet service provider.
- Unplug the power cord of the Cable Modem or the AP (Router), wait 10 seconds. Reapply power.
- Initialize (Reset) on the AP (Router) or Cable Modem.
- Check that the MAC address of the TV / AP (Router) is registered with your Internet service provider. (The MAC address displayed on the pane of the network status window should be registered with your Internet service provider.)

LG Account Issues

LG Account Issues

If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.

I have already signed up on the TV. Do I still have to sign up again at the website (www.lgappstv.com)?

- If you have already signed up on your TV, you do not have to sign up again on the website.
You can sign into the website by using the same ID and password and entering the additional information to complete the email verification process.

I forgot my ID / Password. What should I do?

- You can initialize the password through E-mail when you select **FORGOT PASSWORD?** on the sign in screen.
- If you signed up on a PC, you can find your ID / Password on the website (www.lgappstv.com).




- In some countries, access to the website (www.lgappstv.com) may be restricted.

Contents Issues

Contents Issues

If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.

 I cannot see any content in HOME.

- You may not be able to see the content if the service country setting has been changed. Change to the service country you are going to use the service from in  →  → **General** → **Location** → **LG Services Country**.
(Some models may not be supported.)
- If you cannot see some apps, it may be because you deleted them. Please reinstall the appropriate app.
- If the app is deleted, you can download the app at **LG Content Store** and re-install it. Go to  → **LG Content Store** to find and install the app you want.
- The type of supported content differs by country.
- The content offerings are subject to change or interruption by the service provider.

Internet Browser Issues

Internet Browser Issues

If you experience any of the problems below while using the product, please check the following. There may not be a problem with the product.

 Some parts of a particular website are not visible when I am using the Internet.

- The **Web Browser** supports only HTML5 media, it does not support Flash Plug-in.
- The **Web Browser** does not support plug-in installation.

- On the **Web Browser**, it may not be possible to play media files in formats other than : JPEG / PNG / GIF
- You cannot save attachments or images.

 The Internet browser automatically shuts down when I visit a website.

- The Internet browser may be forced to shut down if the available memory size is not sufficient to accommodate the image information for a website.

 When watching a video in **Web Browser**, the video is forced off.

- You may be able to fix this by setting **Settings** → **Adaptive Streaming using JavaScript** to **Off** in **Web Browser**. The setting is not applied to tabs that were open before the change, and is only applied to tabs opened after the change.

Notice

Software Update

To Update Software

Uses software update to check and obtain the latest version.

CHECK FOR UPDATES

 →  → **General** → **About This TV** → **Check for updates**

- When checking for the latest update version, you can perform updates only if an update file of a later version is available.
- The TV automatically checks your software version but, if necessary, you can perform a manual check.

Automatic Update without notification

 →  → **General** → **About This TV** → **Allow Automatic Updates**

- If **Allow Automatic Updates** is selected, when an update is available, the update automatically starts without prompting a question.
- If **Allow Automatic Updates** is not selected, when an update is available, the update will start after prompting a question.
- The configurable items differ depending upon model.
- The latest version can be obtained via digital broadcast signals or internet connections.
- Changing the channel while downloading the software via digital broadcast signal interrupts the download process. Returning to the initial channel allows downloading to resume.
- If software is not updated, certain functions may not work properly.
- In some countries, **Allow Automatic Updates** is not displayed if you are not connected to the Internet.

Supported Resolution : HDMI-DTV

HDMI-DTV Supported Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640 × 480p	31.46	59.94
	31.5	60
720 × 480p	31.46	59.94
	31.5	60
720 × 576p	31.25	50
1280 × 720p	37.5	50
	44.95	59.94
	45	60

1920 × 1080i	28.12	50
	33.71	59.94
	33.75	60
1920 × 1080p	26.97	23.97
	27	24
	28.12	25
	33.71	29.97
	33.75	30
	56.25	50
	67.43	59.94
	67.5	60
1920 × 1080p (ULTRA HD, 8K models only)	112.5	100
	134.86	119.88
	135	120
3840 × 2160p (ULTRA HD, 8K models only)	53.94	23.97
	54	24
	56.25	25

	67.43	29.97
	67.5	30
	112.5	50
	134.86	59.94
	135	60
3840 × 2160p ¹⁾²⁾ (ULTRA HD, 8K models only)	225	100
	269.73	119.88
	270	120
4096 × 2160p (ULTRA HD, 8K models only)	53.94	23.97
	54	24
	56.25	25
	67.43	29.97
	67.5	30
	112.5	50
	134.86	59.94
	135	60
4096 × 2160p ¹⁾²⁾ (ULTRA HD, 8K models only)	225	100

	269.73	119.88
	270	120
7680 × 4320p (8K models only)	107.89	23.97
	108	24
	110	25
	131.87	29.97
	132	30
	220	50
	263.74	59.94
	264	60

1) (ULTRA HD models only) Supported when **HDMI ULTRA HD Deep Color** is set to **On**.

2) (8K models only) Supported when **HDMI ULTRA HD Deep Color** is set to **4K**.

Supported Resolution : HDMI-PC

HDMI-PC Supported Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
------------	-------------------------------	----------------------------

640 × 350	31.46	70.09
720 × 400	31.46	70.08
640 × 480	31.46	59.94
800 × 600	37.87	60.31
1024 × 768	48.36	60
1152 × 864	54.34	60.05
1360 × 768	47.71	60.01
1280 × 1024 (ULTRA HD, 8K models only)	63.98	60.02
1920 × 1080 (Full HD, ULTRA HD, 8K models only)	67.5	60
1920 × 1080 (ULTRA HD, 8K models only)	134.86	119.88
	135	120
2560 × 1440 ¹⁾ (ULTRA HD 50/60 Hz models only)	88.78	59.95
2560 × 1440 ¹⁾²⁾ (ULTRA HD 100/120 Hz, 8K models only)	182.99	119.99
3840 × 2160 (ULTRA HD, 8K models only)	53.94	23.97
	54	24

	56.25	25
	67.43	29.97
	67.5	30
	112.5	50
	134.86	59.94
	135	60
3840 × 2160 ¹⁾²⁾ (ULTRA HD 100/120 Hz, 8K models only)	225	100
	269.73	119.88
	270	120
4096 × 2160 (ULTRA HD, 8K models only)	53.94	23.97
	54	24
	56.25	25
	67.43	29.97
	67.5	30
	112.5	50
	134.86	59.94
	135	60

4096 × 2160 ¹⁾²⁾ (ULTRA HD 100/120 Hz, 8K models only)	225	100
	269.73	119.88
	270	120

1) (ULTRA HD models only) Supported when **HDMI ULTRA HD Deep Color** is set to **On**.

2) (8K models only) Supported when **HDMI ULTRA HD Deep Color** is set to **4K**.

- Supported HDMI-PC port may differ by model. Refer to the manual that is provided with the product.

Supported Resolution : Component

Component Supported Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
720 × 480i	15.73	59.94
	15.75	60
720 × 480p	31.47	59.94
	31.5	60
1280 × 720p	44.96	59.94
	45	60
1920 × 1080i	33.72	59.94

	33.75	60
1920 × 1080p	67.43	59.94
	67.5	60

Component Port Connecting Information

Component ports on the TV	Y	P _B	P _R
---------------------------	---	----------------	----------------

Video output ports on DVD player	Y	P _B	P _R
----------------------------------	---	----------------	----------------

Y	B-Y	R-Y
---	-----	-----

Y	Cb	Cr
---	----	----

Y	Pb	Pr
---	----	----

Signal	Component
480i	O
480p	O
720p / 1080i	O
1080p	O

License Information

License Information

Supported licenses may differ by model.

Dolby

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.

DTS

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together, DTS 2.0 Channel, DTS 2.0+Digital Out, DTS-HD, and DTS Virtual:X are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

HEVC

