



OWNER'S MANUAL

AIR CONDITIONER



Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

ENGLISH

Hydro Kit



www.lg.com

MFL67086810
Rev.07_102125

Copyright © 2018-2025 LG Electronics. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

| | |
|---|----------|
| READ ALL INSTRUCTIONS BEFORE USE | 4 |
| Safety Messages..... | 4 |
| WARNING | 4 |
| CAUTION | 7 |

OPERATION

| | |
|---|-----------|
| Product Introduction | 10 |
| Typical Installation Scene..... | 10 |
| Remote Controller | 12 |
| Operation Setting..... | 13 |
| Operation mode | 13 |
| AI / Auto operation..... | 13 |
| Temperature Setting | 15 |
| Temperature setting..... | 15 |
| DHW Heating operation | 16 |
| View temperature | 16 |
| Low Noise Mode | 17 |
| Low noise mode | 17 |
| Wi-Fi pairing | 19 |
| Wi-Fi pairing | 19 |
| Defrost Mode | 21 |
| Defrost mode..... | 21 |
| Lock Setting | 23 |
| Lock setting - all, on/off, mode, DHW lock..... | 23 |
| Date Setting | 25 |
| Date setting..... | 25 |
| Timer Setting | 26 |
| Timer setting..... | 26 |
| Simple timer..... | 27 |
| Turn-off reservation..... | 27 |
| Turn-on reservation | 28 |

Schedule Setting..... 29
 How to enter schedule29
 Daily schedule.....29
 Schedules & Edit.....29
 Schedules & Edit - Add schedule30
 Exception day.....30
 DHW Tank Heating & DHW Tank Heater Operation30
Using Thermostat..... 31
 How to use Thermostat.....31
 Emergency operation31

MAINTENANCE AND SERVICE

Maintenance 33
 Maintenance activities33
 When the unit is not going33
 Operation instructions33
Service..... 34
 Call the service immediately in the following situations.....34

TROUBLESHOOTING

Before Calling for Service 35
 Troubleshooting Tips35

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk.
Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING

- Always ground the product.
 - There is a risk of electric shock.
- Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.
 - There is risk of fire or electric shock.
- Do not use a multi outlet. Always use this appliance on a dedicated circuit and breaker.
 - It can cause electric shock or fire.
- For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center. Do not disassemble or repair the product by yourself.

- There is risk of fire or electric shock.
- Always ground the product as per the wiring diagram. Do not connect the ground wire to gas or water pipes lightning rod or telephone ground wire.
 - There is risk of fire or electric shock.
- Install the panel and the cover of control box securely.
 - There is risk of fire or electric shock due to dust, water etc.
- Use the correctly rated breaker or fuse.
 - There is risk of fire or electric shock.
- Do not modify or extend the power cable. If the power cable or cord has scratches or skin peeled off or deteriorated then it must be replaced.
 - There is risk of fire or electric shock.
- For installation, removal or reinstall, always contact the dealer or an Authorized Service Center.
 - There is risk of fire, electric shock, explosion, or injury.
- Do not install the product on a defective installation stand. Be sure that the installation area does not deteriorate with age.
 - It may cause product to fall.
- Never install the outdoor unit on a moving base or a place from where it can fall down.
 - The falling outdoor unit can cause damage or injury or even death of a person.
- When the product is soaked (flooded or submerged) in water, contact an Authorized Service Center for repair before using it again.
 - There is risk of fire or electric shock.
- Be sure to check the refrigerant to the used. Please read the label on the product.
 - Incorrect refrigerant can prevent the normal operation of the unit.
- Don't use a power cord, a plug or a loose socket which is damaged.
 - Otherwise it may cause a fire or electrical shock.
- Do not touch, operate, or repair the product with wet hands.

- There is risk of electric shock or fire.
- Do not place a heater or other heating appliances near the power cable.
 - There is risk of fire and electric shock.
- Do not allow water to run into electric parts. Install the unit away from water sources.
 - There is risk of fire, failure of the product, or electric shock.
- Do not store or use or even allow flammable gas or combustibles near the product.
 - There is risk of fire.
- Indoor/outdoor wiring connections must be secured tightly and the cable should be routed properly so that there is no force pulling the cable from the connection terminals.
 - Improper or loose connections can cause heat generation or fire.
- Safely dispose off the packing materials. Like screws, nails, batteries, broken things etc after installation or service and then tear away and throw away the plastic packaging bags.
 - Children may play with them and cause injury.
- Make sure to check that the power device is not dirty, loose or broken and then Turn on the power.
 - Dirty, loose or broken power device can cause electric shock or fire.
- In outdoor unit the step-up capacitor supplies high voltage electricity to the electrical components. Be sure to discharge the capacitor completely before conducting the repair work.
 - An charged capacitor can cause electrical shock.
- When installing the unit, use the installation kit provided with the product.
 - Otherwise the unit may fall and cause severe injury.
- Be sure to use only those parts which are listed in the service parts list. Never attempt to modify the equipment.
 - The use of inappropriate parts can cause an electrical shock, excessive heat generation or fire.

- Do not use the product in a tightly closed space for a long time. Perform ventilation regularly.
 - Oxygen deficiency could occur and hence harm your health.
- Do not open the front grille of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)
 - There is risk of physical injury, electric shock, or product failure.
- If strange sounds, smell or smoke comes from product. Immediately turn the breaker off or disconnect the power supply cable.
 - There is risk of electric shock or fire.
- Ventilate the product room from time to time when operating it together with a stove, or heating element etc.
 - Oxygen deficiency can occur and hence harm your health.
- Turn the main power off and unplug the unit when cleaning or repairing the product.
 - There is risk of electric shock or fire.
- Take care to ensure that nobody especially kids could step on or fall onto the outdoor unit.
 - This could result in personal injury and product damage.
- Take care to ensure that power cable could not be pulled out or damaged during operation.
 - There is risk of fire or electric shock.
- Do not place anything on the power cable.
 - There is risk of fire or electric shock.
- When flammable gas leaks, turn off the gas and open a window for ventilation before turning the product on.
 - Do not use the telephone or turn switches on or off. There is risk of explosion or fire.

CAUTION

- Two or more people must lift and transport the product.
 - Avoid personal injury.

- Do not install the product where it will be exposed to sea wind (salt spray) directly.
 - It may cause corrosion on the product.
- Keep level even when installing the product.
 - To avoid vibration or noise.
- Do not install the product where the noise or hot air from the outdoor unit could damage or disturb the neighborhoods.
 - It may cause a problem for your neighbors and hence dispute.
- Always check for gas (refrigerant) leakage after installation or repair of product.
 - Low refrigerant levels may cause failure of product.
- Do not use the product for special purposes, such as preserving foods, It is not a precision refrigeration system.
 - There is risk of damage or loss of property.
- Do not block the inlet or outlet of air flow.
 - It may cause product failure.
- Use a soft cloth to clean. Do not use harsh detergents, solvents or splashing water etc.
 - There is risk of fire, electric shock, or damage to the plastic parts of the product.
- Do not step on or put anything on the product. (outdoor units)
 - There is risk of personal injury and failure of product.
- Do not insert hands or other objects through the air inlet or outlet while the product is operating.
 - There are sharp and moving parts that could cause personal injury.
- Be cautious when unpacking and installing the product.
 - Sharp edges could cause injury.
- If the refrigerant gas leaks during the repair, do not touch the leaking refrigerant gas.
 - The refrigerant gas can cause frostbite (cold burn).
- Do not tilt the unit when removing or uninstalling it.


- The condensed water inside can spill.
- If the refrigerant gas leaks during the installation, ventilate the area immediately.
 - Otherwise it can be harmful for your health.
- Dismantling the unit, treatment of the refrigerant oil and eventual parts should be done in accordance with local and national standards.
- Do not expose your skin or kids or plants to the cool or hot air draft.
 - This could harm to your health.
- If the refrigerant gas leaks during the installation, ventilate the area immediately.
 - Otherwise it can be harmful for your health.
- Do not expose your skin or kids or plants to the cool or hot air draft.
 - This could harm to your health.
- Use a firm stool or ladder when cleaning, maintaining or repairing the product at an height.
 - Be careful and avoid personal injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- If anyone other than a licensed professional installs, repairs, or alters LG Electronics air conditioning products, the warranty is voided.
 - All costs associated with repair are then the full responsibility of the owner.
- Do not install the unit in potentially explosive atmospheres.

OPERATION

Product Introduction



Typical Installation Scene

<Type 1>

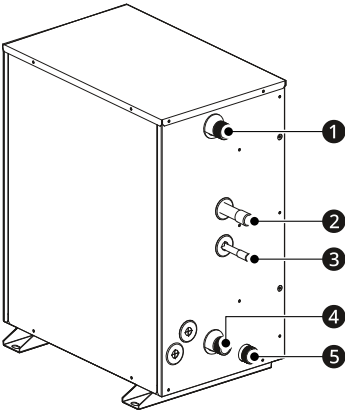

- ① Water Out
- ② Gas side
- ③ Liquid side
- ④ Water In
- ⑤ Drain

<Type2>

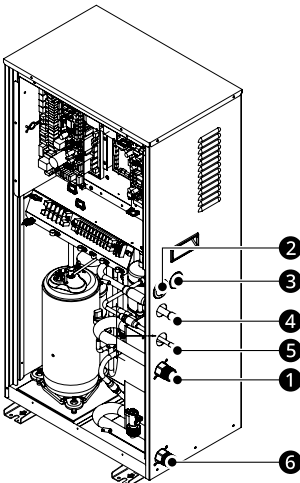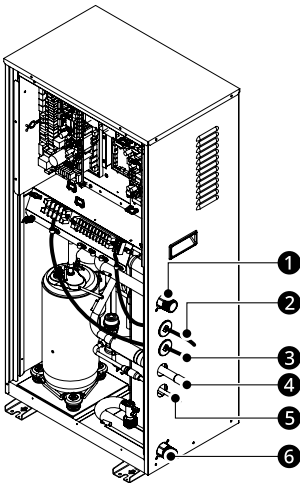


- ❶ Water Out
- ❷ Communication Cable
- ❸ Power Cable
- ❹ Gas side
- ❺ Liquid side
- ❻ Water In

CAUTION

- Use of power supply separate power for the indoor unit. (Do not connect and use from the power terminal of the outdoor unit.)

Remote Controller

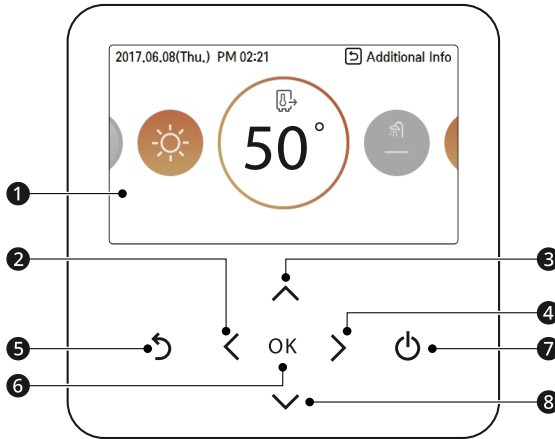

❶ Operation display window

Operation and Settings status display

❷ Left button

When you change the menu's setting value

❸ Up button

When you change the menu's setting value

❹ Right button

When you change the menu's setting value

❺ Back button

When you move to the previous stage from the menu's setting stage

❻ OK button

When you save the menu's setting value

❼ On/Off button

When you turn ON/OFF the air conditioner

❽ Down button

When you change the menu's setting value

Operation Setting

Operation mode

You can easily control the desired operation mode.

In the main screen, press [**<**, **>** (left/right)] button to select the operation mode or home leave or hold category, and press [**▲**, **▼** (up/down)] button to set the operation mode.

※ Some products may not support some operation modes.


| Mode | Description |
|-----------|--|
| Cool | The product yields cool water to use in FCU cooling. |
| Heat | The product yields hot water to use in under floor heating or FCU heating. |
| AI / Auto | In this mode, heating set point is automatically determined by pre-defined temperature profile |

AI / Auto operation


This mode is only applied to heating.

In order to save energy and to give highest comfort, setting temperature will follow outside temperature. If outdoor temperature decreases, heating capacity for the house will increase automatically in order to keep same room temperature. All parameters will be set by installer during start-up procedure and will be adapted to the site characteristic.


- 1 Select AI / Auto mode.

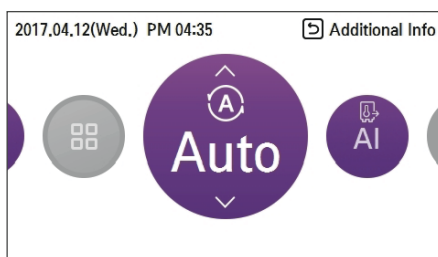

2 Select the desired temperature category.

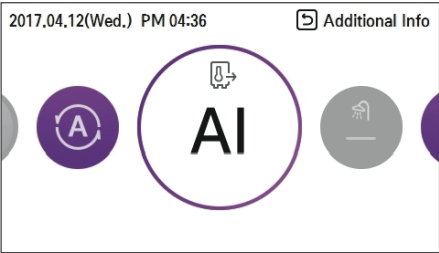

3 Adjust the desired temperature level by press [**▲**, **▼** (up/down)] button.

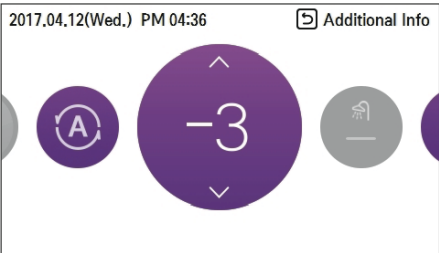

NOTE


- Decreasing temperature profile by 3°C (based on room air temperature)
<Temperature adjust step (unit : °C)>
Cold -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5 **Hot**
-

Temperature Setting

Temperature setting

You can easily control to the desired temperature.


- In the main screen, press [**<**, **>** (left/right)] button to select the desired temperature category, and press [**▲**, **▼** (up/down)] button to set the desired temperature.
 - In the cooling, heating, and AI/auto mode, the desired temperature control is possible.

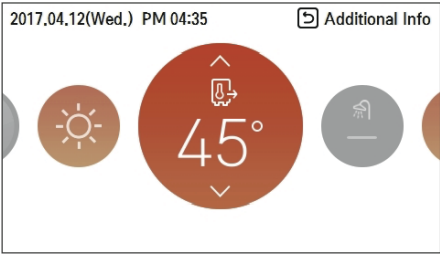

| Mode | Description |
|---------------------------|---|
| Room temperature | Room temperature setting is available when remote room air sensor (sold separately) is installed. |
| Leaving water temperature | If the desired temperature is lower than the water temperature, the heating is not performed. Set the desired temperature higher than the water temperature. |
| DHW tank temperature | DHW tank temperature setting is available when DHW tank is installed. |
| Water inlet temperature | This operation is changed to the temperature sensor only, the inlet temperature sensor, and temperature control logic is the same as the leaving water temperature operation. |

DHW Heating operation

Funtion to set whether or not to use a installed DHW tank

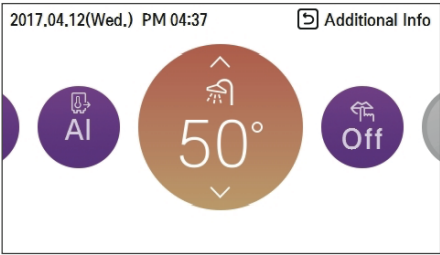


NOTE

- This function is not used when the DHW tank is not installed.
- If you want to know more information, refer function on installation information section.

View temperature

You can check the current temperature.

- In the main screen, you can enter the monitoring screen by pressing [Back] button.

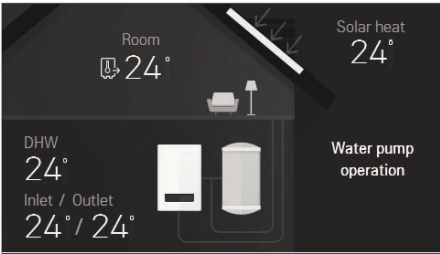


| Mode | Description |
|------------------------|--|
| Room temperature | View room temperature |
| Inlet temperature | View inlet temperature |
| Outlet temperature | View outlet temperature |
| DHW temperature | View DHW temperature (Only displayed when DHW heating mode) |
| Solar heat temperature | View solar power temperature (Only displayed when DHW water heating mode) |

Low Noise Mode


Low noise mode

Low Noise mode is that the unit works at reduced capacity so that the noise produced by the unit drops.


- 1 In the menu screen, press [**<**, **>** (left/right)] button to select "setting" category, and press [OK] button to move to the setting list screen.

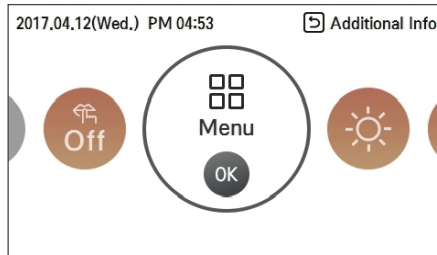


OK

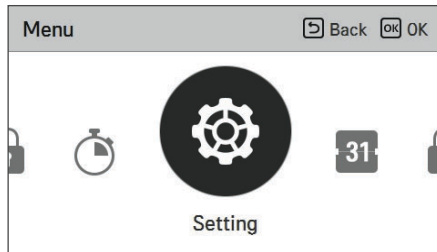

2 In the setting list, if you press [**▲**, **▼** (up/down)] button, you can turn on/off Low Noise Mode.

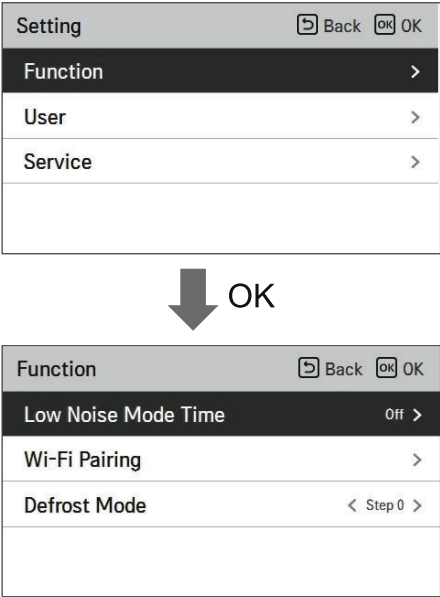

3 Press [**<**, **>** (left/right)] button to select the parts and press [**▲**, **▼** (up/down)] button to adjust the time.

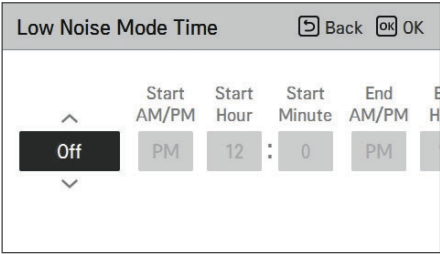

⚠ CAUTION

- This implies that the heating and cooling capacity will also drop. Beware of this when a certain level of heating or cooling is required.
- Low Noise mode operation may not work while the product is proceeding higher priority operation such as defrost operation, anti-freezing operation, and etc.



Wi-Fi pairing

Wi-Fi pairing

This function is only available on some products.

Wi-Fi pairing is the activation of the AP mode function of the Wi-Fi module connected to the indoor unit.

- 1 In the menu screen, press [**<**, **>** (left/right)] button to select "setting" category, and press [OK] button to move to the setting list screen.

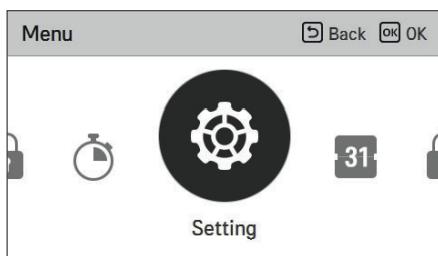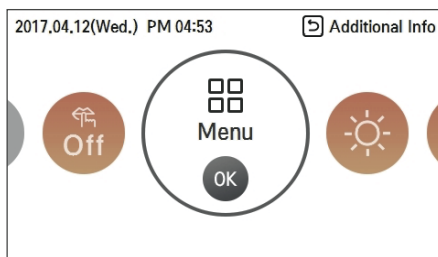

2 In the setting list, if you press [**▲**, **▼**(up/down)] button, you can turn on/off Wi-Fi pairing.

| | |
|----------|----------|
| Setting | Back OK |
| Function | > |
| User | > |
| Service | > |
| | |



OK

| | |
|---------------------|------------|
| Function | Back OK |
| Low Noise Mode Time | Off > |
| Wi-Fi Pairing | > |
| Defrost Mode | < Step 0 > |
| | |



OK


| | |
|---------------|----------|
| Wi-Fi Pairing | Back OK |
| Wi-Fi Pairing | |
| Apply | |

Defrost Mode


Defrost mode

Defrost Mode is the function to set defrost mode operation of outdoor unit.

- 1 In the menu screen, press [**<**, **>** (left/right)] button to select "setting" category, and press [OK] button to move to the setting list screen.

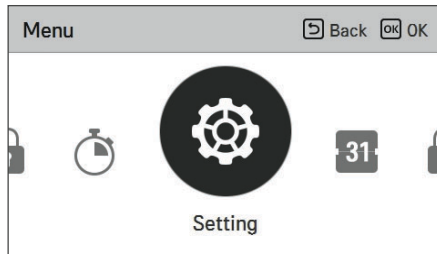

2 In the setting list, if you press [**▲**, **▼**(up/down)] button, you can turn on/off Defrost Mode.

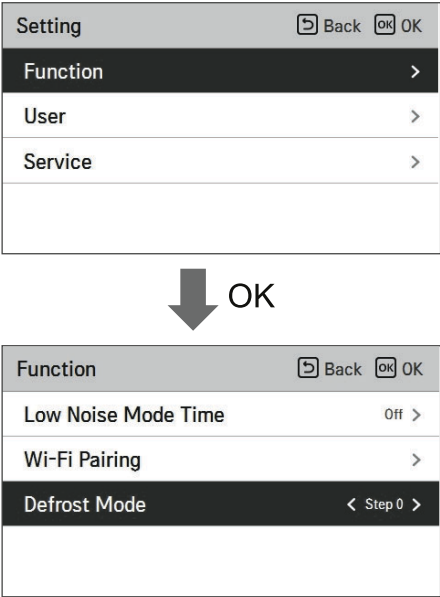

Setting value:



- Not use (STEP0)
- Forced snow removal (STEP1)
- Fast defrost setting (STEP2)
- Forced snow removal + fast defrost (STEP3)

Lock Setting

Lock setting - all, on/off, mode, DHW lock

- It is the function to lock the button operation of the remote controller so that children or other persons cannot use it without permission.
- It is the function to limit the desired temperature range that can be set in the wired remote controller.

- 1 In the menu screen, press [◀, ▶ (left/right)] button to select "lock setting" category, and press [OK] button to move to the lock setting list screen.

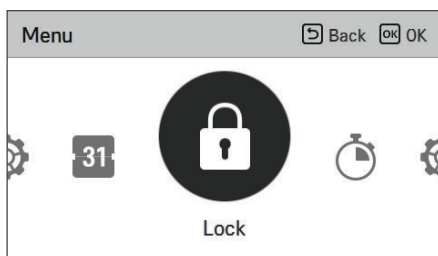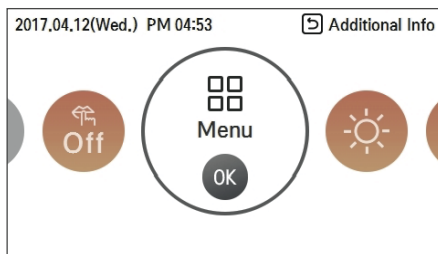

- 2 In the lock setting list, if you press [▲, ▼ (up/down)] button, you can turn on/off the corresponding lock function.

| Lock | | Back | OK |
|-------------|-------------|------|----|
| All Lock | < Release > | | |
| On/Off Lock | < Release > | | |
| Mode Lock | < Release > | | |
| DHW Lock | < Release > | | |

| Mode | Description |
|-------------|--|
| All lock | It locks all button operation of the remote controller. |
| On/Off lock | It locks the On/Off button operation of the remote controller. |
| DHW lock | It locks the DHW On/Off button operation of the remote controller. |
| Mode lock | It locks the operation mode button operation of the remote controller. |

Date Setting

Date setting

Set the date displayed on the remote controller.

- In the user setting list, select the date category, and press [OK] button to move to the detail screen.
- After the setting, if you press [OK] button, the setting is saved and moves to the previous screen.

| | |
|-----------------|-------------------|
| User | Back OK OK |
| External Device | |
| Date | 2016.5.18(Wed.) > |
| Time | PM 02:02 > |
| Summer Time | Off > |
| Password | Off > |



| | | |
|---|------------|--|
| Date | Back OK OK | |
| <div><div>2016</div><div>Month</div><div>Day</div><div>5</div><div>18</div></div> | | |

Timer Setting

Timer setting

Set the time displayed on the remote controller.

- In the user setting list, select the time category, and press [OK] button to move to the detail screen.
- After the setting, if you press [OK] button, the setting is saved and moves to the previous screen.
- In the screen, Time display can be presented in the form of AM / PM or 24 hours standard.

User

Back

OK

External Device

Date

2016.5.18(Wed.)

>

Time

PM 02:04

>

Summer Time

Off

>

Password

Off

>



Time

Back

OK

Time Format

Hour

Minute

24 Hours

08

:

44

Time

Back

OK

Time Format

AM/PM

Hour

Minute

12 Hours

AM

8

:

44

Simple timer

You can easily set the timer in the range of 1~7 hours in the units of 1 hour.

| | | | |
|----------------------|--|------|-------|
| Timer | | Back | OK OK |
| Simple Timer | | On | > |
| Turn-On Reservation | | Off | > |
| Turn-Off Reservation | | Off | > |
| | | | |



OK

| | | | |
|--|--|------|-------|
| Simple Timer | | Back | OK OK |
| <div> <div> ^ 1 v </div> <div>hours, left to stop.</div> <div>▶ Start</div> </div> | | | |

NOTE

- If the product operation is On, the easy timer turns off the operation after the corresponding time.
- If the product operation is Off, the easy timer turns on the operation after the corresponding time.
- If the easy timer operation is turned On/Off before the timer operation, the set timer will be cleared.

Turn-off reservation

The product is automatically turned Off at the set timer time.

| | | | |
|----------------------|--|------|-------|
| Timer | | Back | OK OK |
| Simple Timer | | Off | > |
| Turn-On Reservation | | Off | > |
| Turn-Off Reservation | | On | > |
| | | | |

It provides 2 Time formats, 12Hours(AM/PM) or 24Hours reference.

Turn-Off Reservation

BackOKOK

Minute

23

:

00

Start

Turn-Off Reservation

BackOKOK

Hour

PM

:

11

Minute

:

00

Start

NOTE

- Even if the Turn-off Reservation operation is turned On/Off after the setting and before the timer operation, the set timer is not cleared.

Turn-on reservation

The product is automatically turned On at the set timer time.

| | |
|----------------------|----------|
| Timer | BackOKOK |
| Simple Timer | Off > |
| Turn-On Reservation | On > |
| Turn-Off Reservation | Off > |

It provides 2 Time formats, 12Hours(AM/PM) or 24Hours reference.

Turn-On Reservation

BackOKOK

Minute

14

:

00

Start

Turn-On Reservation

BackOKOK

AM/PM

AM

:

12

Minute

:

00

Start



NOTE

- Even if the Turn-on Reservation operation is turned On/Off after the setting and before the timer operation, the set timer is not cleared.

Schedule Setting

How to enter schedule

- In the menu screen, press [**<**, **>** (left/right)] button so select the schedule category, and press [OK] button to move to the schedule setting list screen.
- In the schedule setting list screen, press [**▲**, **▼** (up/down)] button to select the menu to set, and press [OK] button to move to the detail screen.

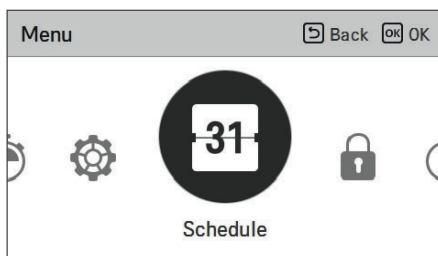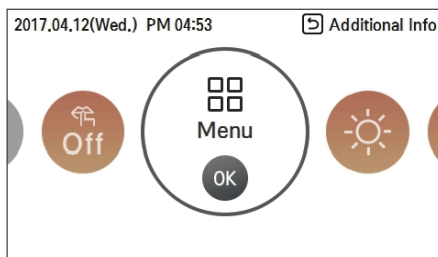

Daily schedule

It is the function that can check the status of the timer (schedule) saved in the remote controller.

- In the schedule list, select the daily schedule status category, and press [OK] button to move to the detail daily schedule status screen.
- You can use the remote controller's [**<**, **>** (left/right)] button to check the timer information of other dates.
- You can use the remote controller's [**▲**, **▼** (up/down)] button to check the corresponding date's other timer information.
- Select the timer information, and press [OK] button to move to the corresponding timer's edit screen.

Schedules & Edit

It is the function that can check the status of the timer (schedule) saved in the remote controller.

- In the schedule list, select the daily schedule status category, and press [OK] button to move to the daily schedule status detail screen.
- You can use the remote controller's [**<**, **>**(left/right)] button to check other date's timer information.
- You can edit the saved schedule's timer information.
 - Select the schedule to edit using [**▲**, **▼**(up/down)] button, and press [OK] button to move to the edit screen.
- Select the timer information, and press [OK] button to move to the corresponding timer's edit screen.

Schedules & Edit - Add schedule

Description of each stage in Add schedule

In 'Stage 1', it sets the period to perform the timer.

In 'Stage 2', it sets the day of week to perform the timer.

- You can select 'Everyday / Weekend / Weekdays / Individual selection'.

In 'Stage 3', it sets the start time for the timer.

In 'Stage 4', it sets the timer operation information.

- If 'Stop' is selected, you cannot set the mode / temperature / fan speed.

When stages 1~4 are completed, along with the message of 'schedule is added', it moves to View and edit schedule screen.

Exception day

It is the function to automatically stop the operation on the set timer day.

- In the schedule list, select the exception day category, and press [OK] button to move to the Exception day designation detail screen.
- In the exception day, you can check, and add/change/delete the exception day information saved in the remote controller.
 - To add an exception day, in the Exception day registration detail screen, designate year/month/day, and press [OK] button to save the Exception day.
 - Select the Exception day to edit using [**▲**, **▼**(up/down)] button, and press [OK] button to move to the edit screen.
 - In the exception day edit screen, you can check, delete/change the corresponding exception day's setting contents.
 - When you change the exception day information, you need to save it after the change.

DHW Tank Heating & DHW Tank Heater Operation

This function is schedule programming about DHW tank heating and DHW tank heater operation.

Two schedule programming for DHW tank heating and another Two schedule programming for DHW tank heater operation are possible.

Using Thermostat

The term "thermostat", which is widely used in this chapter, is a kind of 3rd party accessory. LG Electronics does not supply thermostat and it should be supplied 3rd party manufacturers. Room thermostat can be used for easy and convenience control. To utilize thermostat more efficiently and correctly, this chapter presents information about using thermostat.

CAUTION

- Some electro-mechanical type thermostat has internal delay time to protect compressor. In that case, mode change can takes time more than user's expectation. Please read thermostat manual carefully if the product does not response quickly.
- Setting temperature range by thermostat can be different with that of the product. The heating or cooling set temperature should be chosen within the setting temperature range of the product.

How to use Thermostat

To find how to turn on and off, how to set target temperature, how to change operating mode, etc, please refer thermostat operating manual provided by thermostat manufacturer.

Emergency operation

• Definition of terms

- Trouble : a problem which can stop system operation, and can be resumed temporally under limited operation without certificated professional's assist.
- Error : problem which can stop system operation, and can be resumed ONLY after certificated professional's check.
- Emergency mode : temporary heating operation while system met trouble.

• Objective of introducing 'Trouble'

- Not like airconditioning product, Air-to-Water heat pump is generally operation in whole winter season without any system stopping.
- If system found some problem, which is not critical to system operating for yielding heating energy, the system can temporarily continue in emergency mode operation with end user's decision.

• Classified trouble

- Trouble is classified two levels according to the seriousness of the problem. : Slight trouble and Heavy trouble
- Slight trouble : Sensor trouble. In most case, this trouble is concerned with sensor problems. The unit is operating under emergency mode operation(level 1).
- Heavy trouble : Compressor cycle trouble. Emergency mode operation(level 2) is performed by optional electric heater.
- Option trouble : a problem is found for option operation such as water tank heating. In this trouble,the troubled option is assumed as if it is not installed at the system.

• Emergency operation level

- When system met trouble, it stops operation and wait for user's decision : Calling service center or starting emergency operation.

32 OPERATION

- To start emergency operation, user simply push ON / OFF button once more.
- Two different levels are prepared for emergency operation : High temperature cycle and low temperature cycle.
- In emergency operation mode, user can not adjust target temperature.

※ It can not be operated, if the electric heater accessory is not installed.

| | DIPSwitch | Target Leaving WaterTemperature | Target Room AirTemperature | Target Sanitary WaterTemperature |
|---------------------------|-----------|------------------------------------|-------------------------------|-------------------------------------|
| High temperature cycle | OFF | 50°C(122°F) | 24°C(75°F) | 50°C(122°F) |
| Low temperature cycle | ON | 30°C(86°F) | 19°C(66°F) | 50°C(122°F) |

- **Duplicated trouble : Option trouble with slight or heavy trouble**
 - If option trouble is occurred with slight (or heavy) trouble at the same time, the system puts higher priority to slight (or heavy) trouble and operates as if slight (or heavy) trouble is occurred.
 - Therefore, sometimes sanitary water heating can be impossible in emergency operation mode. When sanitary water is not warming up while emergency operation, please check if sanitary water sensor and related wiring are all Ok.
- **Emergency operation is not automatically restarted after main electricity power is reset.**
 - In normal condition, the product operating information is restored and automatically restarted after main electricity power is reset.
 - But in emergency operation, automatic re-start is prohibited to protect the product.
 - Therefore, user must restart the product after power reset when emergency operation has been running.

MAINTENANCE AND SERVICE

Maintenance


Maintenance activities

In order to ensure optimal availability of the unit, a number of checks and inspections on the unit and the field wiring have to be carried out at regular intervals, preferably yearly. This maintenance should be carried out by your local agreed technician.

When the unit is not going

⚠ CAUTION

- If the product is not used for long time, we strongly recommend NOT TO SWITCH OFF THE POWER SUPPLY to the product.
- If power is not supplied, some special product-protecting actions (such as water pump anti-locking) will not be performed.

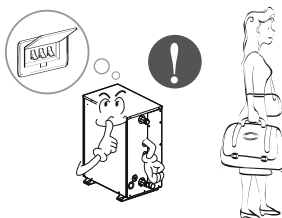

Operation instructions

- Do not disconnect the power supply of Hydro Kit during the operation.
Stop the Hydro Kit followed by outdoor unit and then only remove the power supply.

⚠ WARNING

- If you remove the power supply of the Hydro Kit in the mid of operation, it will leads to damage of the product by freezing and bursting of Plate type Heat Exchanger.
- Do not remove the power supply even at the occurrence of “CH14” Error. As the error is due to the shortage of water flow, please eliminate any sludge and scales inside the water tubes to ensure free water pumping, remove foreign particles(dust, sand, trash, rusted pieces) from the water tubes along with cleaning the strainer. After cleaning the strainer, to remove the error message (not displayed), turn off the outdoor unit followed by Hydro Kit and then disconnect power supply of Hydro Kit. And then connect power supply and restart the unit for the normal operation.

WARNING

- The service will be charged if the system failure is due to strainer blockage.
Strainer cleaning period: Once in every 3 months and whenever CH14 error occurs.
- If the system stopped and displaying any error message(CH**) please follow below procedure. Do not remove the power supply of the Hydro Kit. Contact L.G service centre.
- Do not change the water pipes randomly. When changing the water pipes there is a possibility of foreign material entry and bubble formation as well. This leads to freezing of Plate type heat exchanger of Hydro Kit.
When it is essential to change the water pipes, proceed only after separating the pipes from Hydro Kit. The inner side of the new pipes must be washed thoroughly to remove the foreign materials and then connect the pipes with the Hydro Kit.

Service

Call the service immediately in the following situations

- 1) Anything abnormal such as burning smell, loud noise etc. happen. Stop the unit and turn the breaker off. Never try to repair by yourself or restart the system in such cases.
- 2) Main power cord is too hot or damaged.
- 3) Error code is generated by self diagnosis.
- 4) Water leaks from indoor unit.
- 5) Any switch, breaker (safety, earth) or fuse fails to work properly.

User must carry routine checkup & cleaning to avoid unit's poor performance.

In case of special situation, the job must be carried out by the only service person.

TROUBLESHOOTING

Before Calling for Service

Check the following points before requesting repairs or service. If the malfunction persist, please contact your dealer.

Troubleshooting Tips

ENGLISH

| Case | Explanation |
|--|---|
| Hydro Kit does not operate. | • Have you made a mistake in timer operation? |
| | • Has the fuse blown or has the circuit breaker been tripped? |
| The room has a peculiar odor. | • Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room. |
| Hydro Kit does not operate for about 3 minutes when restart. | • This is the protector of the mechanism. |
| | • Wait about three minutes and operation will begin. |
| Does not cool or heat effectively. | • The room may have been very hot when the Hydro Kit was first turned on. Allow time for it to cool down. |
| | • Has the setting temperature been set incorrectly? |
| The unit operation is noisy. | • Refrigerant flow sound <ul style="list-style-type: none">- While the system is being started or stopping, sound from the refrigerant flow may be heard. |
| | • Sound for the indoor unit heat exchanger <ul style="list-style-type: none">- During the cooling operation, a sound may be heard from the indoor unit heat exchanger due to water freezing or melting. |
| | • Water noise <ul style="list-style-type: none">- During starting or stopping of the unit, noise can appear in water piping |
| | • During defrost <ul style="list-style-type: none">- Noise can appear in unit due to defrosting of water. |

| Case | Explanation |
|--|---|
| Steam is raised in outdoor unit. | <ul style="list-style-type: none">• Steam from outdoor heat exchanger<ul style="list-style-type: none">- During defrosting operation, ice on the outdoor heat exchanger is melted, resulting in making steam. |
| Remote controller display is faint,or no display at all. | <ul style="list-style-type: none">• Has the circuit breaker been tripped? |

NOTE

- - Max Allowable pressure High side : 4.2 MPa / Low Side : 2.4 MPa
 - Max Allowable water temperature High side : 80 °C / Low side : 10 °C
 - Max Allowable water pressure : 0.98 Mpa (0.3 ~ 10 kgf/cm²)
-

Memo

Memo

Memo



Manufacturer :

LG Electronics Inc.

84, Wanam-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do, KOREA

UK Importer: LG Electronics U.K. Ltd

Velocity 2, Brooklands Drive, Weybridge, KT13 0SL

Eco design requirement

- The information for Eco design is available on the following free access website.

<https://www.lg.com/global/support/cedoc/cedoc>