



English You can download the web manuals for this product at the following

websites. (Keyword: SH7PE, SL5PE, SL5E, SE3KE)

Česky Můžete si stáhnout webové návody k obsluze tohoto produktu

z následujících webových stránek.

(Klíčové slovo: SH7PE, SL5PE, SL5E, SE3KE)

Dansk Du kan downloade webvejledningen til dette produkt på følgende

websteder. (Nøgleord: SH7PE, SL5PE, SL5E, SE3KE)

Español Puede descargar los manuales web de este producto en los

siguientes sitios web. (Palabra clave: SH7PE, SL5PE, SL5E, SE3KE)

Suomi Voit ladata tuotteen verkko-oppaat seuraavilta verkkosivuilta.

(Avainsana: SH7PE, SL5PE, SL5E, SE3KE)

Français Vous pouvez télécharger le quide Web pour ce produit sur les sites

suivants. (Mot-clé: SH7PE, SL5PE, SL5E, SE3KE)

Deutsch Sie können die Webhandbücher für dieses Produkt auf den folgenden

Websites herunterladen, (Schlüsselwort: SH7PE, SL5PE, SL5E,

SE3KE)

Ελληνικά Μπορείτε να κατεβάσετε τα ενχειρίδια web νια αυτό το προϊόν

στις παρακάτω τοποθεσίες web.

(Λέξη-κλειδί : SH7PE, SL5PE, SL5E, SE3KE)

Magyar A termék internetes útmutatóját a következő weboldalakról töltheti

le. (Kulcsszó: SH7PE, SL5PE, SL5E, SE3KE)

Bahasa Anda dapat mengunduh manual web untuk produk ini di situs web

berikut. (Kata kunci: SH7PE, SL5PE, SL5E, SE3KE)

Italiano È possibile scaricare i manuali online di questo prodotto dai sequenti

siti Web. (Parola chiave : SH7PE. SL5PE. SL5E. SE3KE)

Казақша Бұл өнімге арналған пайдаланушы нұсқаулығын төмендегі

веб-сайттарынаң жүктеп алуға болады. (Негізгі сөз :

SH7PE, SL5PE, SL5E, SE3KE)

한국어 웹 매뉴얼은 동해 보다 상세한 제품정보를 확인 할 수 있습니다.

아래의 사이트를 참조하세요. (키워드: SH7PE. SL5PE. SL5E.

SE3KE)

Nederlands U kunt de internethandleidingen voor dit product vanaf de volgende

websites downloaden. (Term: SH7PE, SL5PE, SL5E, SE3KE)

Norsk Du kan laste ned webhåndbøker for dette produktet fra de følgende

webområdene. (Nøkkelord: SH7PE, SL5PE, SL5E, SE3KE)

www.lg.com/id-manual

Indonesia









Polski Instrukcje obsługi tego produktu można pobrać na następujących

stronach internetowych. (Słowo kluczowe: SH7PE, SL5PE, SL5E,

SE3KE)

Português Pode transferir os manuais na Internet deste produto nos websites

que se seguem. (Palavra-chave: SH7PE, SL5PE, SL5E, SE3KE)

Русский Онлайн-руководства для данного устройства можно

скачать на следующих веб-сайтах.

(Ключевое слово: SH7PE, SL5PE, SL5E, SE3KE)

Slovenčina Webové príručky pre tento výrobok môžete stiahnuť na

nasledujúcich webových stránkach. (Kľúčové slovo: SH7PE, SL5PE,

SL5E, SE3KE)

Svenska Du kan hämta produktens onlinehandböcker på följande

webbplatser. (Nyckelord: SH7PE, SL5PE, SL5E, SE3KE)

台灣語

你可以於下列網站下載本產品的網頁手冊。

(關鍵字: SH7PE, SL5PE, SL5E, SE3KE)

Türkçe Bu ürünün web kılavuzlarını aşağıdaki web sitelerinden

indirebilirsiniz. (Anahtar sözcük : SH7PE, SL5PE, SL5E,

SE3KE)

Українська Завантажити веб-посібники для цього виробу можна на

веб-сайтах, поданих нижче. (Ключове слово : SH7PE,

SL5PE, SL5E, SE3KE)

O'zbekcha Ushbu mahsulot uchun go'llanmalarni guyidagi veb-saytlarda yuklab

olishingiz mumkin. (Kalit so'z : SH7PE, SL5PE, SL5E, SE3KE)

日本語 この製品のWeb版取扱説明書は次のWebサイトからダウン

ロードできます。 (キーワード: SH7PE, SL5PE, SL5E,

SE3KE)

Português Você pode fazer download dos manuais na Web deste produto nos

Do Brasil seguintes sites. (Palavra-chave : SH7PE, SL5PE, SL5E, SE3KE)

עברית באפשרותך להוריד את מדריכי ההפעלה שבאינטרנט עבור מוצר זה

מאתרי האינטרנט הבאים. (מילת מפתח: SH7PE, SL5PE, SL5E, SE3KE)

العربية يمكنك تنزيل دلائل هذا المنتج الموجودة على الويب من مواقع الويب التالية.

(الكلمة الرئيسية: SH7PE, SL5PE, SL5E, SE3KE)

· www.lg.com/id-manual



SuperSign: http://partner.lge.com













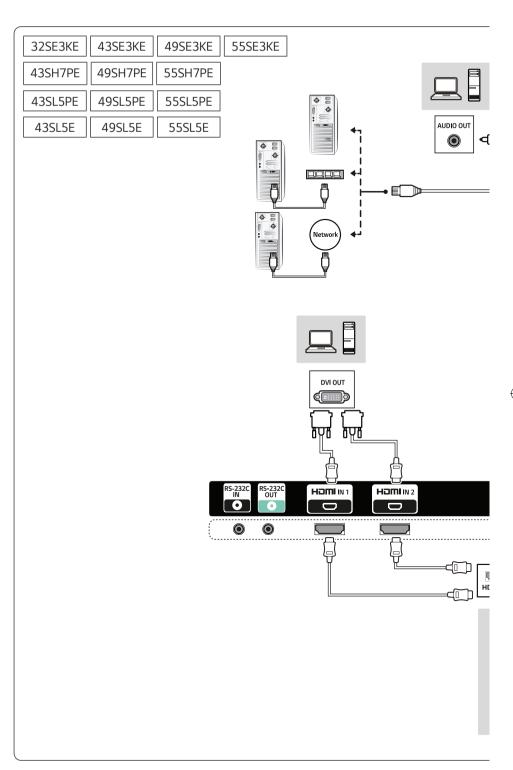







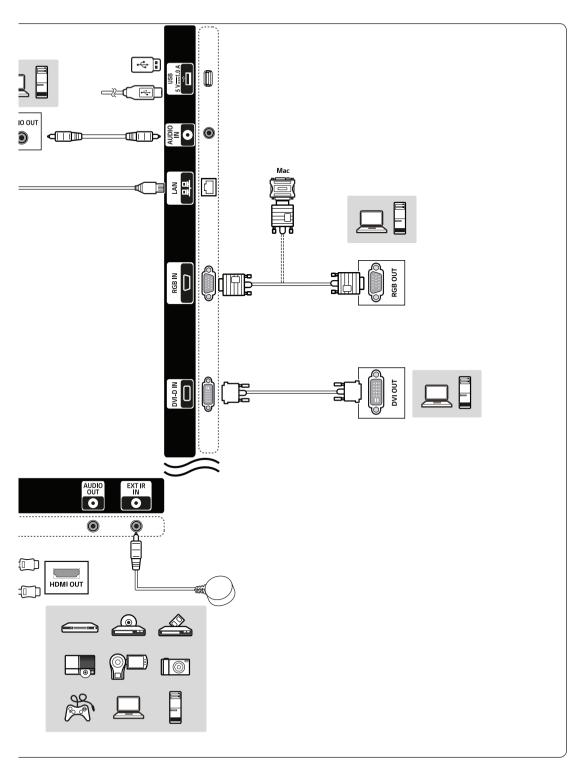




(










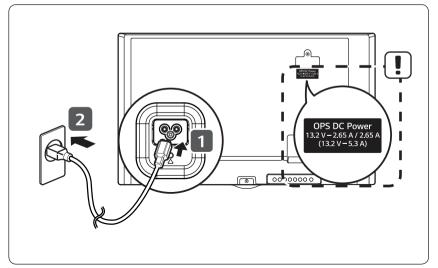

**SH7PE, **SL5PE



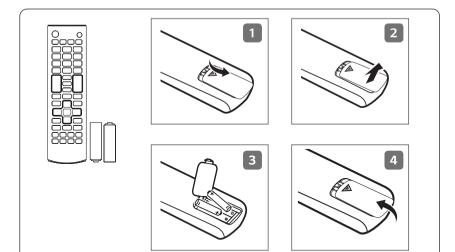





















(TAIWAN ONLY)

限用物質含有情況標示聲明書

設備名稱:LCD 顯示器·型號(型式):						
	限用物質及其化學符號					
單元	鉛	汞	鎘	六價鉻	多溴聯苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	(Cr+6)	(PBB)	(PBDE)
電路板	-	0	0	0	0	0
外殼	0	0	0	0	0	0
金屬支架	-	0	0	0	0	0
玻璃面板	-	0	0	0	0	0
配件(例:纜線,遙控器)	-	0	0	0	0	0

備考1. *○ ″ 係指該項限用物質之百分比含量未超出百分比含量基準值。


備考2. "- " 係指該項限用物質為排除項目。

























Please read this manual carefully before operating your set and retain it for future reference.

43SH7PE	43SL5PE	43SL5E	32SE3KE
49SH7PE	49SL5PE	49SL5E	43SE3KE
55SH7PE	55SL5PE	55SL5E	49SE3KE
			55SE3KE

www.lg.com

TABLE OF CONTENTS

SAFETY PRECAUTIONS	3
- Precautions In Installing the Product	3
- Precautions for using AC Adapter and	
Electrical Power	5
- Precautions For Moving the Product	
- Precautions For Using the Product	8
- Mounting on a Wall	S
LICENSES	10
ASSEMBLY AND PREPARATION	V 11
- Optional Accessories	
- Parts and Buttons	
- Connecting the Stand	
- Using the IR Receiver	
- Portrait Layout	
- Attaching and removing the LG Logo Bracke	
- Installing on a Wall	
REMOTE CONTROL	2/
- Displaying the Device Name Connected to Input Port	
- White Balance Adjust Menu	
- Write balance Adjust Wend	∠\
MAKING CONNECTIONS	27
- Connecting to a PC	27
- External Device Connection	
- Using the Input List	
TROUBLESHOOTING	. 29
PRODUCT SPECIFICATIONS	3 2

SAFETY PRECAUTIONS

Please read these safety precautions carefully before using the product.



MARNING

If you ignore the warning message, you may be seriously injured or there is a possibility of accident or death.



If you ignore the caution message, you may be slightly injured or the product may be damaged.



· Indoor Use Only.

Precautions In Installing the Product



WARNING

- · Keep away from heat sources like electrical heaters.
 - Electrical shock, fire, malfunction, or deformation may occur.
- · Keep the packing anti-moisture material or vinyl packing out of the reach of children.
 - Anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital. Additionally, vinyl packing can cause suffocation. Keep it out of the reach of children.
- · Do not put heavy objects on the product or sit upon it.
 - If the product collapses or is dropped, you may be injured. Children must pay particular attention.
- Do not leave the power or signal cable unattended on the pathway.
 - The passerby can trip or fall, which can cause electrical shock, fire, product breakdown, or injury.
- Install the product in a neat and dry place.
 - Dust or moisture can cause electrical shock, fire or product damage.
- If you can smell smoke or other odors or hear a strange sound unplug the power cord and contact the service center.
 - If you continue to use without taking proper measures, electrical shock or fire can occur.
- If you dropped the product or the case is broken, turn off the product and unplug the power cord.
 - If you continue to use without taking proper measures, electrical shock or fire can occur. Contact the service center.

- Do not drop an object on or apply pressure to the product. Do not throw any toys or objects on the product screen.
 - It can cause injury to human, problem to product and damage the display.
- Do not let the product fall or drop when connecting it with an external device.
 - This may cause injury and/or damage to the product.
- When connecting it to a game device, keep a distance of four times the diagonal measurement of the screen from the
 device.
 - If the product falls because of the short cable, this may cause injury and/or damage to the product.
- Leaving a fixed image on the screen for a long time may cause damage to the screen and cause image retention.
 To use the product for a long period of time, use a screen saver on the PC or utilize the residual image prevention function on the product, and when the product is not used, turn off the power. Image retention and related problems are not covered by the warranty on this product.
- · Do NOT install this product on a wall where there is high risk of exposure to oil fumes or mist.
 - This may damage product and cause it to fall.

CAUTION

- Make sure the product ventilation holes are not blocked. Install the product in a suitably wide place (more than 100 mm from the wall).
 - If you install the product too close to the wall, it may be deformed or fire can break out due to internal heat.
- · Do not block the ventilation hole of the product by a tablecloth or curtain.
- The product can be deformed or fire can break out due to overheating inside the product.
- Install the product on a flat and stable place that has no risk of dropping the product.
 - If the product is dropped, you may be injured or the product may be broken.
- · Install the product where no EMI occurs.
- · Keep the product away from direct sunlight.
 - The product can be damaged.
- If you install the product in a place that does not meet the recommended conditions, this may cause serious damage to the product's picture quality, life cycle, and appearance. Please check with LG or a qualified installer before installing. This caution applies to a place where there is an abundance of fine dust or oil mist, chemical substances are used, the temperature is very high or low, the humidity is very high, or the product is likely to remain turned on for a long period of time (airport and train station), failure to do so will invalidate the warranty.
- Do not install the product in an area with poor ventilation (e.g.on a bookshelf, in a closet) or outside and avoid placing on cushions or carpets.
- In addition, do not install it where there are heating objects such as lighting equipment.

Precautions for using AC Adapter and Electrical Power

WARNING

- If water or any foreign substance goes inside the product (TV, monitor, power cord, or AC adapter), disconnect the
 power cord immediately and contact the service center.
 - Otherwise, this may cause a fire or electric shock due to damage to the product.
- Do not touch the power plug or AC adapter with wet hands. If the pins of the plug are wet or dusty, wipe and dry them before use.
 - Otherwise, this may cause a fire or electric shock.
- Make sure to completely insert the power cord into the AC adapter.
 - If loosely connected, the poor connection may cause a fire or electric shock.
- Be sure to use power cords and AC adapters provided or approved by LG Electronics, Inc.
 - The use of non-approved products may cause a fire or electric shock.
- When unplugging the power cord, always pull it by the plug. Do not bend the power cord with excessive force.
 - The power line can be damaged, which may cause electric shock or fire.
- Be careful not to step or place heavy objects (electronic appliances, clothing, etc.) on the power cord or AC adapter.
 Be careful not to damage the power cord or AC adapter with sharp objects.
 - Damaged power cords may cause a fire or electric shock.
- · Never disassemble, repair or modify the power cord or AC adapter.
 - This may cause a fire or electric shock.
- · Make sure to connect the power cable to the grounded current.
 - You may be electrocuted or injured.
- · Use the rated voltage only.
 - The product can be damaged, or you may be electrocuted.
- In the presence of thunder and lightning, never touch the power cord and signal cable because it can be very dangerous.
 - It can cause electric shock.
- Do not connect several extension cords, electrical appliances, or electrical heaters to a single outlet. Use a power strip with a grounding terminal designed for exclusive use with the computer.
 - A fire can break out due to overheating.
- Do not touch the power plug with wet hands. Additionally, if the cord pin is wet or covered with dust, dry the power plug completely or wipe dust off.
 - You may be electrocuted due to excess moisture.

- If you don't intend to use the product for a long time, unplug the power cable from the product.
 - Covering dust can cause a fire, or insulation deterioration can cause electric leakage, electric shock or fire.
- · Fix the power cable completely.
 - If the power cable is not fixed completely, a fire can break out.
- Do not insert a conductor (like a metal chopstick) into one end of the power cable while the other end is connected
 to the input terminal on the wall. Additionally, do not touch the power cable right after plugging into the wall input
 terminal.
 - You may be electrocuted.
- The appliance coupler is used as the disconnect device.
- Please make sure the device is installed near the wall outlet to which it is connected and that the outlet is easily
 accessible.
- As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if the
 unit is turned off.



- Be sure to keep the outlet, AC adapter, and pins of the power plug clean from dust and etc.
 - This may cause a fire.
- Do not unplug the power cord while the product is in use.
- Electrical shock can damage the product.
- Use only the power cord supplied with the unit. If you use another power cord, make sure that it is certified by the applicable national standards when not provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

Precautions For Moving the Product



MARNING

- · Make sure to turn off the product.
 - You may be electrocuted or the product can be damaged.
- · Make sure to remove all cables before moving the product.
 - You may be electrocuted or the product can be damaged.
- · Make sure the panel faces forward and hold it with both hands to move. If you drop the product, the damaged product can cause electric shock or fire. Contact an authorized the service center for repair.
- · Make sure the product is turned off, unplugged, and all cables have been removed. It may take 2 or more people to carry larger apparatus. Do not press against or put stress on the front panel of the apparatus.



! CAUTION

- Do not shock the product when moving it.
 - You may be electrocuted or the product can be damaged.
- Do not dispose the product-packing box. Use it when you move.

Precautions For Using the Product


WARNING

- · Do not disassemble, repair or modify the product at your own discretion.
 - Fire or electric shock accident can occur.
 - Contact the service center for check, calibration or repair.
- · When the display is to be left unattended for an extended period of time, unplug it from the wall outlet.
- · Keep the product away from water.
 - Fire or electric shock accident can occur.
- Do not shock or scratch the front and sides of the screen with metallic objects.
 - Otherwise, it may cause damage to the screen.
- · Avoid high temperatures and humidity.

! CAUTION

- · Do not put or store inflammable substances near the product.
 - There is a danger of explosion or fire due to careless handling of the inflammable substances.
- When cleaning the product, unplug the power cord and scrub gently with a soft cloth to prevent scratching. Do not
 clean with a wet cloth or spray water or other liquids directly onto the product. An electric shock may occur. (Do not
 use chemicals such as benzene, paint thinners, or alcohol.)
- · Take a rest from time to time to protect your vision.
- · Keep the product clean at all times.
- Take a comfortable and natural position when working with a product to relax the muscles.
- · Take a regular break when working with a product for a long time.
- · Do not press strongly upon the panel with a hand or sharp object such as nail, pencil, or pen, or make a scratch on it.
- · Keep the proper distance from the product.
 - Your vision may be impaired if you look at the product too closely.
- Set the appropriate resolution and clock by referring to the User's Guide.
 - Your vision can be impaired.
- · Use authorized detergent only when cleaning the product. (Do not use benzene, thinner, or alcohol.)
 - Product can be deformed.
- Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g. on shelves above the unit).
- Batteries should not be exposed to excessive heat. For example, keep away from direct sunlight, open fireplace, and electric heaters.
- Do NOT place non-rechargeable batteries in charging device.
- · Using headsets (earphones) for a long time or listening loudly can cause damage to your hearing.

• Spray water onto a soft cloth 2 to 4 times, and use it to clean the front frame; wipe in one direction only. Too much moisture may cause staining.

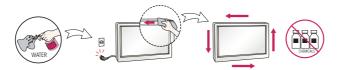

- Do not use products using high voltage around the Monitor. (e.g., a bug zapper)
 - Monitor may have malfunction as its electrical shock.

Mounting on a Wall

Do NOT install this product by yourself as you may injure yourself or cause damage to product. Please contact service
personnel authorised by manufacturer.

LICENSES

Supported licenses may differ by model. For more information of the licenses, visit www.lq.com.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.

ASSEMBLY AND PREPARATION

! CAUTION

- Always use genuine components to ensure safety and product performance.
- · The product warranty will not cover damage or injury caused by the use of counterfeit components.


NOTE

- The accessories provided with your product may vary depending on the model or region.
- Product specifications or contents in this manual may be changed without prior notice due to upgrade of product functions.
- · SuperSign Software & Manual
 - Downloading from the LG Electronics website.
 - Visit the LG Electronics website (http://partner.lqe.com) and download the latest software for your model.
- · The warranty will not cover any damage caused by using the product in an excessively dusty environment.

Optional Accessories

Without prior notice, optional accessories are subject to change to improve the performance of the product, and new accessories may be added. The illustrations in this manual may differ from the actual product and accessories.

Stand kit

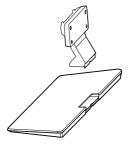





Stand

Stand Spacers

ScrewsDiameter 4.0 mm x Pitch 0.7 mm

	ST-322T	32SE3KE
		43SH7PE
	ST-432T	43SL5*
		43SE3KE
	ST-492T	49SH7PE
		49SL5*
		49SE3KE
		55SH7PE
		55SL5*
		55SE3KE

32SE3KE	-
43SH7PE	
43SL5*	
43SE3KE	
49SH7PE	
49SL5*	2 EA
49SE3KE	
55SH7PE	
55SL5*	
55SE3KE	

Model	Length (including spring washer)	Quantity
32SE3KE	10 mm	6 EA
43SH7PE/ 43SL5* 43SE3KE 49SH7PE/ 49SL5* 49SE3KE	14 mm	8 EA
55SH7PE/ 55SL5* 55SE3KE		

OPS kit



KT-OPSA



Screws



Connecting Cable



Card (Easy Setup Guide)



Power Cord

OPS kit

(Only for **SH7PE/**SL5PE model)



KT-OPSD



Screws



Connecting Cable



Card (Easy Setup Guide)



Connecting Cable

Media Player kit

(It may not be supported depending on the model.)







Media Player MP500/ MP700

Screws Diameter 3.0 mm x Pitch 0.5 mm x Length 6mm

CD (Owner's Manual)/ Cards

Wi-Fi Dongle kit








NOTE

- Cable holder/Cable tie may not be available in some areas or for some models.
- Optional accessories are available for some models. If necessary, please purchase them separately.
- Before you attach the OPS kit or Media Player, connect the cable to the port.
- Please turn off the power before connecting or removing the Wi-Fi dongle kit.

Parts and Buttons

The image may be different according to the model.

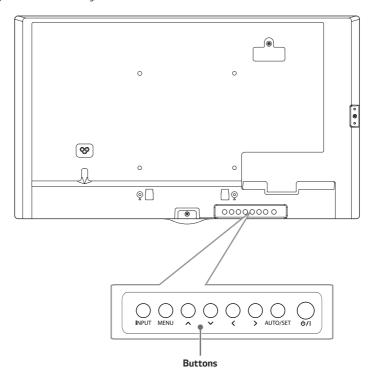


- INPUT: Changes the input source.
- MENU: Accesses the main menus, or saves your input and exits the menus.
- Adjust the up and down.
- **\ >**: Moves left and right.
- AUTO/SET: Displays the current signal and mode.
- U/l: Turns the power on or off.

Connecting the Stand


- For certain models only.
- The image may be different according to the model.

32SE3KE


1

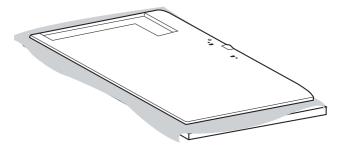



2

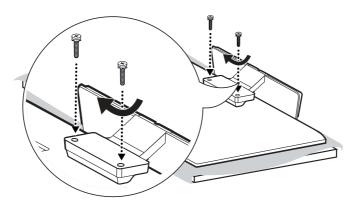

43/49/55SH7PE, 43/49/55SL5*, 43/49/55SE3KE

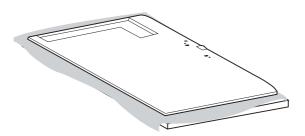

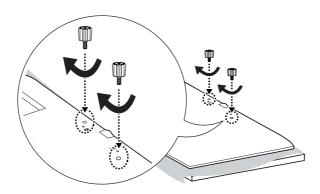


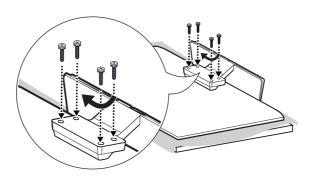

Using the IR Receiver

- The image may be different according to the model.

This allows a remote control sensor to be placed in a custom location. Then that display can control other displays via an RS-232C cable. Install the IR receiver towards the front of the set.

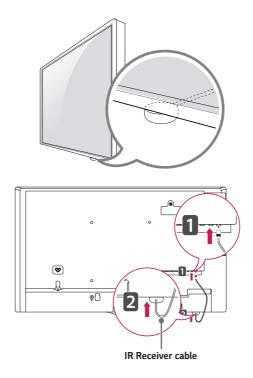



- When you see from the back of the set, if the IR receiver cable does not face front, the signal reception range may shorten.
- The IR receiver is made with a magnet.It is detachable at the bottom (typical installation) or back (wall installation) of the set.
- Make sure that you unplug the power cord before connecting or removing the IR Receiver.

Portrait Layout

When installing in a portrait layout, rotate the monitor counterclockwise 90 degrees (when facing the screen).




Using Kensington Lock

(This is not available for all models.)

The Kensington security system connector is located at the back of the monitor. For more information on installation and use of this system, refer to the manual provided with the Kensington security system or visit http://www.kensington.com.

Connect the Kensington security system cable between the monitor and a table.

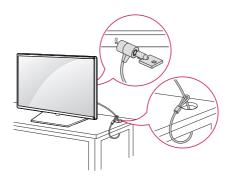




- · The Kensington security system is optional. You can obtain additional accessories from most electronics retail stores.
- The illustration shows a general example of installation and may look different from the actual product.

Attaching and removing the LG Logo Bracket


- For certain models only.
- The image may be different according to the model.

Removing the LG Logo Bracket

1 Lay a clean cloth on the floor, and then put the monitor on it with the screen face down. Using a screwdriver, remove the screw that secures the LG Logo Bracket to the bottom rear of the monitor.

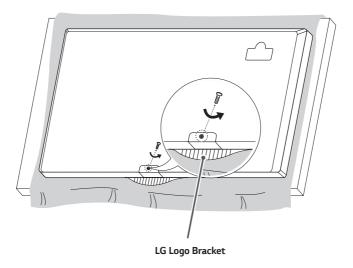


2 After removing the screw, remove the LG Logo Bracket. When re-attaching the LG Logo Bracket, repeat the process in reverse order.

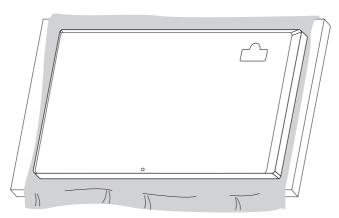


Attaching the LG Logo Bracket on the right side

1 Lay a clean cloth on the floor, and then put the monitor on it with the screen face down. Using a screwdriver, remove the screw that secures the LG Logo Bracket to the bottom rear of the monitor.

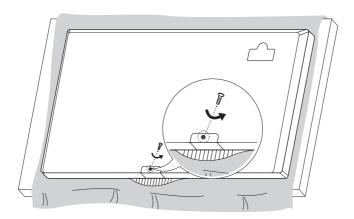


2 After removing the screw, remove the LG Logo Bracket. Attach the LG Logo Bracket with a screw, aligning it with the hole on the right side.

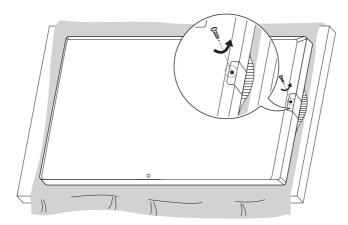


Installing on a Wall

For proper ventilation, allow a clearance of 100 mm on each side and from the wall. Detailed installation instructions are available from your dealer, see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.

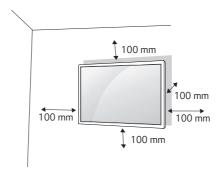

To install your monitor on a wall, attach a wall mounting bracket (optional part) to the back of the monitor. Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.

- 1 Use only screws and wall mounting brackets that conform to VESA standards.
- 2 Screws which are longer than standard length may damage the inside of the monitor.
- 3 A non-VESA standard screw may damage the product and cause the monitor to fall. LG Electronics is not liable for any accidents related to the use of non-standard screws.
- 4 Please use VESA standard as below.
- 785 mm and above
 - * Fixing screws: Diameter 6.0 mm x Pitch 1.0 mm x Length 12 mm

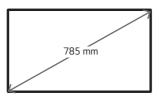



! CAUTION

- Disconnect the power cord before moving or installing the monitor to avoid risk of electric shock.
- · If you install the monitor on a ceiling or slanted wall, it may fall and result in injury. Use an authorized LG wall mount and contact your local dealer or qualified personnel to assist with the installation.
- Do not over tighten the screws as this may damage the monitor and void your warranty.
- · Use only screws and wall mounting brackets that meet the VESA standard. Any damage or injuries caused by misuse or use of improper accessories are not covered by the warranty.
- · To prevent injury, this apparatus must be securely attached to the wall in accordance with the installation instructions. (This pertains only to Australia and New Zealand.)




NOTE

- · The wall mount kit includes the installation guide and all necessary parts.
- · The wall mounting bracket is optional. You can obtain additional accessories from your local dealer.
- The length of screws required may differ depending on the wall mount. Be sure to use the correct length.
- · For more information, please refer to the guide provided with the wall mount.


REMOTE CONTROL

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully to use the monitor correctly. To install batteries, open the battery cover, place batteries (1.5 V AAA) matching \bigoplus and \bigoplus terminals to the labels inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse. The illustrations may differ from the actual accessories.

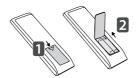

! CAUTION

- · Do not mix old and new batteries, as this may damage the remote control.
- Be sure to point the remote control toward the remote control sensor on the monitor.
- · Some features of the remote control may not be supported in certain models.

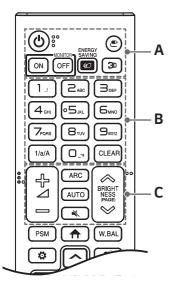

Α

(POWER) Turns the monitor on or off.

MONITOR ON Turns the monitor on.

MONITOR OFF Turns the monitor off.

ENERGY SAVING © Adjusts the brightness of the picture to reduce energy consumption.

(INPUT) Selects the input mode.

30 Used for viewing 3D videos.

В

1/a/A Toggles between numerical and alphabetical.

Number and Alphabet buttons Enters numerical or alphabetical characters depending upon the setting.

CLEAR Deletes the entered numerical or alphabetical character.

\mathbf{C}


Volume Up/Down Button Adjusts the volume.

ARC Selects the Aspect Ratio mode.

AUTO Automatically adjusts picture position and minimizes image instability (available for RGB input only).

(MUTE) Mutes all sounds.

BRIGHTNESS Adjusts the brightness of the display. PAGE function is not supported in this model.

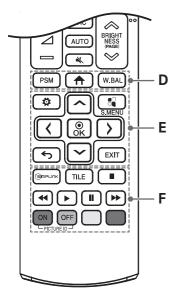

D

PSM Selects the Picture Mode.

(HOME) Activates the Launcher.

W.BAL Enters the White Balance menu.

Ε

 $\boldsymbol{\diamondsuit}$ (SETTINGS) Accesses the main menus or saves your input and exit menus.

S.MENU SuperSign menu key.

Navigation Buttons Scrolls through menus or options.

Selects menus or options and confirms your input.

← (BACK) Allows you to move back one step in the user interaction function.

EXIT Quit all OSD tasks and applications.

F

(SIMPLINK Allows you to control various multimedia devices to enjoy multimedia simply by using the remote control through the SimpLink menu.

TILE Selects the TILE Mode.

PICTURE ID ON/OFF When the Picture ID number matches the Set ID number, you can control whichever monitor you want in multi-display format.

USB Menu Control Buttons Controls media playback.

Trick key May not be supported on some models.

Displaying the Device Name Connected to an Input Port

Display which devices are connected to which external input ports.

- 1 Access the Input list screen and press the red (input label) button on the remote control.
- 2 You can assign an input label for every input except USB.



- · External inputs supported: HDMI, DVI-D, OPS
- · Labels available: PC, DTV
- The input labels are displayed on the Input Label screen or at the top left of the screen when you change the external
 input setting.
- For DTV/ PC-compatible signals, such as 1080p 60 Hz, the screen settings may change according to the input label. The Just Scan option is available if a PC is connected as an external device.

White Balance Adjust Menu

Press the W.BAL button on the remote control.

- R-Gain: Adjusts the level of red. The higher the number, the redder the set. Decrease the number if the screen looks too red.
- G-Gain: Adjusts the level of green. The higher the number, the greener the set. Decrease the number if the screen looks too green.
- B-Gain: Adjusts the level of blue. The higher the number, the bluer the set. Decrease the number if the screen looks too blue.
- Backlight: Adjusts the brightness. The higher the number, the brighter the set. This works in the same way as the backlight of the user menu.
- · Reset: Resets the white balance value to the factory settings.

MAKING CONNECTIONS

You can connect various external devices to your monitor. Change the input mode and select the external device you want to connect. For more information about external device connections, see the user manual provided with each device

Connecting to a PC

Some of the cables are not provided.

This monitor supports the Plug and Play* feature.

* Plug and Play: a feature that enables a PC to recognize devices attached by the user without device configuration or user intervention when powering up.

External Device Connection

Connect a HD receiver, DVD, or VCR player to the monitor and select an appropriate input mode.

Some of the cables are not provided. For the best picture and sound quality, connecting external devices to your monitor using HDMI cables is recommended.

NOTE

- · For the best image quality, using the monitor with HDMI connection is recommended.
- To comply with the specifications of the product, use a shielded interface cable with ferrite core, such as a D-sub 15-pin cable and DVI-D/HDMI cable.
- If you turn the monitor on when the set is cold, the screen may flicker. This is normal.
- · Sometimes red, green, or blue spots may appear on the screen. This is normal.
- Use a High Speed HDMI®/™ cable.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- · Recommended HDMI Cable Types
 - High-Speed HDMI®/™ Cable
 - High-Speed HDMI®/™ Cable with Ethernet
- If you cannot hear any sound in HDMI mode please check your PC settings. Some PCs require you to manually change the default audio output to HDMI.
- If you want to use HDMI-PC mode, you must set your PC/DTV to PC mode.
- · You may experience compatibility issues if you use HDMI-PC mode.
- · Make sure the power cable is disconnected.
- · If you connect a gaming device to the monitor, use the cable provided with the gaming device.
- High Speed HDMI®/™ cables transmit a HD signal up to 1080p and higher.
- · ETHERNET supports only 100 BASE-T.

! CAUTION

- · Connect the signal input cable and tighten it by turning the screws clockwise.
- Do not press the screen with your finger for a prolonged period as this may result in temporary distortion on the screen.
- Avoid displaying static images on the screen for a long period of time to prevent image retention. Use a screensaver
 if possible.
- · A wireless communication device near your monitor can affect the image.

Using the Input List



RGB-> HDMI1 -> HDMI2 -> DVI-D -> OPS

TROUBLESHOOTING

No image is displayed.

Problem	Action	
Is the product power cord connected?	Check if the power cord is correctly plugged into the power outlet.	
Does the "Invalid Format" message appear?	 The signal from the PC (Graphics card) is out of the vertical or horizontal frequency range of the product. Adjust the frequency range by referring to the Specifications in this manual. 	
Does the "No Signal" message appear?	The signal cable between PC and product is not connected. Check th signal cable. Access the input menu to check the input signal.	

The Unknown Product message appears when the product is connected.

Problem	Action
Did you install the driver?	Check if the Plug and Play function is supported by referring to the
	graphics card user manual.

The screen image looks abnormal.

Problem	Action
Is the screen position wrong?	Check if the graphics card resolution and frequency are supported by the product. If the frequency is out of range, set to the recommended resolution in the [Control Panel] → [Display] → [Setting] menu. (The settings may differ depending on your operating system.)
The screen is displayed abnormally.	The proper input signal is not connected to the signal port. Connect the
	signal cable that matches with the source input signal.

After-image appears on the product.

Problem	Action
After-image appears when the product is turned off.	If you use a fixed image for a long time, the pixels may be damaged. Use the screen-saver function.
	When a dark image is displayed on the screen after an image with high contrast (black and white or gray), this may cause image sticking. This is normal for LCD screen products.

The audio function does not work.

Problem	Action	
No sound? • See if the audio cable is connected properly.		
	Adjust the volume.	
	See if the sound is set properly.	
Sound is too dull. • Select the appropriate equalizer sound.		
Sound is too low.	Adjust the volume.	

Screen color is abnormal.

Problem	Action
Screen has poor color resolution (16	Set the number of colors to more than 24 bits (true color). Select
colors).	$[Control Panel] \rightarrow [Display] \rightarrow [Settings] \rightarrow [Color Table]$ in Windows.
	(The settings may differ depending on your operating system.)
Screen color is unstable or mono-colored.	Check the connection status of the signal cable. Or, re-insert the PC graphics card.
Do black spots appear on the screen?	Several pixels (red, green, blue, white, or black color) may appear on the screen, which can be attributable to the unique characteristics of the LCD panel. This is not a malfunction of the LCD.

The operation does not work normally.

Problem	Action
The power suddenly turned off.	• Is the Timer set?
	Check the power control settings. Power interrupted.




Image sticking does not occur when using constantly changing images but may occur when using a fixed image for an
extended period of time. Therefore, it is recommended that you use the instructions below to decrease the likelihood
of image sticking occurring when using a fixed image. It is recommended that you change the screen at least once
every 12 hours at the very minimum; if done more frequently, the prevention of image sticking is more effective.

Recommended operating conditions

1 Change the background and the character colors using the same time interval.



When changing colors, using complementary colors helps to prevent image sticking.

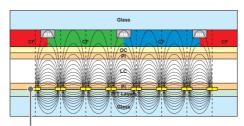

ITO or MoTi Pixel Layer

Change the image using the same time interval.





Make sure that the characters or images before changing the image remain in the same location after changing the image.

What is image sticking?

When the LCD panel displays a static image for an extended period of time, it can cause a voltage difference between the electrodes that operate the liquid crystals. When the voltage difference between the electrodes builds up over time, liquid crystals have a tendency to remain aligned in one direction. During this process, a previously displayed image remains visible. This phenomenon is referred to as image sticking.

PRODUCT SPECIFICATIONS

The product specifications below may be changed without prior notice due to upgrade of product functions. "~" refers to alternating current (AC), and "——" refers to direct current (DC).

LCD screen	Screen type	Thin Film Transistor (TFT)
LCD SCICCII	эсгест сурс	Liquid Crystal Display (LCD) Screen
Video signal	Maximum resolution	1920 x 1080 @ 60 Hz
video signal	Waximum resolution	
		- This may not be supported on some OS or graphics card
		types.
	Recommended resolution	1920 x 1080 @ 60 Hz
		- This may not be supported on some OS or graphics card
		types.
	Horizontal frequency	Analog: 30 kHz to 83 kHz
		Digital: 30 kHz to 83 kHz
	Vertical frequency	Analog: 50 Hz to 75 Hz
		Digital: 56 Hz to 60 Hz
	Synchronization	Separate Sync, Digital
Input/output ports HDMI1 IN, HDMI2 IN, DVI-D LAN, OPS Embedded battery		IN, RGB IN, Audio IN/OUT, EXT IR IN, USB, RS-232C IN/OUT,
		Applied
Environmental	Operating Temperature	0 °C to 40 °C
Conditions	Operating Humidity	10 % to 80 %
	Storage Temperature	-20 °C to 60 °C
	Storage Humidity	5 % to 85 %

* Applicable only for models that support the speakers

Audio	RMS Audio Output	10 W + 10 W (R + L)
	Input Sensitivity	0.7 Vrms
	Speaker Impedance	6 Ω

43SH7PE

LCD screen	Pixel pitch	0.4902 mm (H) X 0.4902 mm (V)
Power	Rated power	AC 100-240 V~ 50/60 Hz 2.1 A
	Power consumption	On Mode: 75 W (Typ.)
	·	Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width	Head	969.6 mm x 563.9 mm x 54.0 mm / 10.5 kg
x Height x Depth) / Weight	Head + Stand	969.6 mm x 622.2 mm x 193 mm / 13.0 kg

49SH7PE

LCD screen	Pixel pitch	0.55926 mm (H) X 0.55926 mm (V)
Power	Rated power	AC 100-240 V~ 50/60 Hz 2.2 A
	Power consumption	On Mode: 90 W (Typ.)
		Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width	Head	1102.2 mm x 638.5 mm x 54.0 mm / 14.3 kg
x Height x Depth) / Weight	Head + Stand	1102.2 mm x 696.8 mm x 219.6 mm / 17.6 kg

55SH7PE

LCD screen	Pixel pitch	0.630 mm (H) x 0.630 mm (V)
Power	Rated power	AC 100-240 V~ 50/60 Hz 2.3 A
	Power consumption	On Mode: 100 W (Typ.)
		Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width	Head	1238 mm x 714.9 mm x 54.0 mm / 17.5 kg
x Height x Depth) / Weight	Head + Stand	1238 mm x 773.4 mm x 219.6 mm / 20.8 kg

43SL5PE

LCD screen	Pixel pitch	0.4902 mm (H) X 0.4902 mm (V)
Power	Rated power	AC 100-240 V~ 50/60 Hz 2.1 A
	Power consumption	On Mode: 70 W (Typ.)
	·	Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width	Head	969.6 mm x 563.9 mm x 54.0 mm / 10.5 kg
x Height x Depth) / Weight	Head + Stand	969.6 mm x 622.2 mm x 193 mm / 13.0 kg

49SL5PE

LCD screen	Pixel pitch	0.55926 mm (H) X 0.55926 mm (V)	
Power	Rated power	AC 100-240 V~ 50/60 Hz 2.2 A	
	Power consumption	On Mode: 80 W (Typ.)	
		Sleep Mode: ≤ 0.5 W	
		Off Mode: ≤ 0.5 W	
Dimensions (Width	Head	1102.2 mm x 638.5 mm x 54.0 mm / 14.3 kg	
x Height x Depth) / Weight	Head + Stand	1102.2 mm x 696.8 mm x 219.6 mm / 17.6 kg	

55SL5PE

LCD screen	Pixel pitch	0.630 mm (H) x 0.630 mm (V)
Power	AC 100-240 V~ 50/60 Hz 2.3 A	
	Power consumption	On Mode: 90 W (Typ.)
		Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width	Head	1238 mm x 714.9 mm x 54.0 mm / 17.5 kg
x Height x Depth) / Weight	Head + Stand	1238 mm x 773.4 mm x 219.6 mm / 20.8 kg

43SL5E

LCD screen	Pixel pitch	0.4902 mm (H) X 0.4902 mm (V)
Power	Rated power	AC 100-240 V~ 50/60 Hz 0.9 A
	Power consumption	On Mode: 70 W (Typ.)
	·	Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width x Height x Depth) / Weight	Head	969.6 mm x 563.9 mm x 54.0 mm / 10.5 kg
	Head + Stand	969.6 mm x 622.2 mm x 193 mm / 13.0 kg

49SL5E

LCD screen	Pixel pitch	0.55926 mm (H) X 0.55926 mm (V)
Power	Rated power	AC 100-240 V~ 50/60 Hz 1.0 A
	Power consumption	On Mode: 80 W (Typ.)
		Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width x Height x Depth) / Weight	Head	1102.2 mm x 638.5 mm x 54.0 mm / 14.3 kg
	Head + Stand	1102.2 mm x 696.8 mm x 219.6 mm / 17.6 kg

55SL5E

LCD screen	Pixel pitch	0.630 mm (H) x 0.630 mm (V)
Power	Rated power AC 100-240 V~ 50/60 Hz 1.1 A	
	Power consumption	On Mode: 90 W (Typ.)
		Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width x Height x Depth) / Weight	Head	1238 mm x 714.9 mm x 54.0 mm / 17.5 kg
	Head + Stand	1238 mm x 773.4 mm x 219.6 mm / 20.8 kg

32SE3KE

LCD screen	Pixel pitch	0.36375 mm (H) x 0.36375 mm (V)
Power	Rated power	AC 100-240 V~ 50/60 Hz 0.8 A
	Power consumption	On Mode: 45 W (Typ.)
	·	Sleep Mode: ≤ 0.5 W
		Off Mode: ≤ 0.5 W
Dimensions (Width	Head	729.4 mm x 428.9 mm x 55.5 mm / 5.4 kg
x Height x Depth) / Weight	Head + Stand	729.4 mm x 481 mm x 154.2 mm / 6.2 kg

43SE3KE

LCD screen	Pixel pitch	0.4902 mm (H) X 0.4902 mm (V)	
Power	Rated power	AC 100-240 V~ 50/60 Hz 0.9 A	
	Power consumption	On Mode: 55 W (Typ.)	
	·	Sleep Mode: ≤ 0.5 W	
		Off Mode: ≤ 0.5 W	
Dimensions (Width	Head	969.6 mm x 563.9 mm x 54.0 mm / 10.0 kg	
x Height x Depth) / Weight	Head + Stand	969.6 mm x 622.2 mm x 193 mm / 12.5 kg	

49SE3KE

LCD screen	Pixel pitch	0.55926 mm (H) X 0.55926 mm (V)	
Power	Rated power AC 100-240 V~ 50/60 Hz 1.0 A		
	Power consumption	On Mode: 60 W (Typ.)	
		Sleep Mode: ≤ 0.5 W	
		Off Mode: ≤ 0.5 W	
Dimensions (Width	Head	1102.2 mm x 638.5 mm x 54.0 mm / 14.3 kg	
x Height x Depth) / Weight	Head + Stand	1102.2 mm x 696.8 mm x 219.6 mm / 17.6 kg	

55SE3KE

LCD screen	Pixel pitch	0.630 mm (H) x 0.630 mm (V)	
Power	Rated power AC 100-240 V~ 50/60 Hz 1.1 A		
	Power consumption	On Mode: 65 W (Typ.)	
		Sleep Mode: ≤ 0.5 W	
		Off Mode: ≤ 0.5 W	
Dimensions (Width x Height x Depth) / Weight	Head	1238 mm x 714.9 mm x 54.0 mm / 17.5 kg	
	Head + Stand	1238 mm x 773.4 mm x 219.6 mm / 20.8 kg	

RGB (PC) Support Mode

Resolution	Horizontal frequency (kHz)	Vertical frequency (Hz)
720 x 400	31.468	70.8
640 x 480	31.469	59.94
800 x 600	37.879	60.317
1024 x 768	48.363	60.0
1280 x 720	44.772	59.855
1280 x 960	60	60
1152 x 864	57.717	59.934
1280 x 1024	63.981	60.02
1920 x 1080	67.5	60

HDMI/ DVI-D /OPS (PC) Support mode

Resolution	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 x 480	31.469	59.94
800 x 600	37.879	60.317
1024 x 768	48.363	60
1280 x 720	44.772	59.855
1366 x 768	47.7	60
1280 x 1024	63.981	60.02
1680 x 1050	65.29	59.954
1920 x 1080	67.5	60

HDMI/ DVI-D /OPS (DTV) Support Mode

Resolution	Horizontal frequency (kHz)	Vertical frequency (Hz)
480/60p	31.5	60
576/50p	31.25	50
720/50p	37.5	50
720/60p	45	60
1080/50i	28.1	50
1080/60i	33.75	60
1080/50p	56.25	50
1080/60p	67.5	60

NOTE

- Resolutions available for the Input Label option in RGB, HDMI, DVI-D, OPS input modes.
 - PC resolutions: 640 x 480 / 60 Hz, 1280 x 720 / 60 Hz, 1920 x 1080 / 60 Hz
 - DTV resolutions: 480p, 720p, 1080p
- Vertical frequency: The product display functions by the screen image changing dozens of times every second like a fluorescent lamp. The vertical frequency or refresh rate is the number of image displays per second. The unit is Hz.
- Horizontal frequency: The horizontal interval is the time taken to display one horizontal line. When 1 is divided by
 the horizontal interval, the number of horizontal lines displayed every second can be tabulated as the horizontal
 frequency. The unit is kHz.



Make sure to read the Safety Precautions before using the product.

The model and serial numbers of the SET are located on the back and one side of the SET. Record it below should you ever need service.

energy \}	E F
ENERGY STAR	ı

ENERGY STAR® is a set of power-saving guidelines issued by the U.S.Environmental Protection Agency (EPA).

As an ENERGY STAR® Partner LGE U. S. A., Inc. has determined that this product meets the ENERGY STAR® guidelines for

meets the ENERGY STAR® guidelines for energy efficiency.

Refer to ENERGYSTAR.gov for more information on the ENERGY STAR $^{\tiny{(0)}}$ program.

MODEL	
SERIAL	

Temporary noise is normal when powering ON or OFF this device.





Please read this manual carefully before operation and retain it for future reference.

L18

CONTENTS

Expert Controls

SETTINGS4	- Display	17
- Home4	Picture Mode Settings	
Global Buttons	Aspect Ratio	
Dashboard	Rotation	
Content Manager	Expert Controls	
- Ez Setting5	- Sound	21
Video Wall	Sound Mode Settings	
On/Off Scheduler	Audio Out	
Server Setting	AV Sync Adjustment	
Fail Over	Digital Audio Input	
Data Cloning	- Admin	23
Sync Mode	Admin Lock	
- General7	Change Password	
Language	Lock Mode	
System Information	Reset to Initial Settings	
Set ID	Ez Download	
Time & Date	Factory Reset	
Power	- Picture ID	25
Network		
Safety Mode		

CONTENT MANAGER	26
- Content Manager	26
Player	
Scheduler	
Playlist	
IR CODE CONTROLLING MULTIPLE	35
PRODUCTS	37
- Connecting cables	37
- Communication Parameter	
- Command Reference List	39
- Transmission/Reception Protocol	13

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to <code>opensource@lge.com</code>.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

NOTE

- · Software-related content may be changed without prior notice due to upgrades of the product functions.
- · Some features described in the User Manual may not be supported in certain models and countries.
- SNMP 2.0 is supported.

SETTINGS

Home

Global Buttons

- Input: Navigate to the external input selection screen.
- Settings: Navigate to the Settings screen.

Dashboard

· This feature displays key information about your Signage monitor in the center of the home screen. In the Dashboard, you can manually change settings by selecting the corresponding items.



· If the dashboard is locked, the focus does not move.

Content Manager

- Player: Play a variety of content including images, videos, music and SuperSign content.
- · Scheduler: Manage schedules for content that will be played at different times.
- · Playlist: Create a playlist with photos and videos.

Ez Setting

Video Wall

SETTINGS / ♥ → Ez Setting → Video Wall

Set Video Wall options to create a wide visual canvas.

- Tile Mode: Turn Tile Mode on or off. Display a single integrated screen on multiple Signage monitors.
- **Natural Mode**: Display the image excluding the area that overlaps with the monitor's bezel so that the image displayed has a more natural feel to it.
- White Balance Setting: Set the white balance. (menu location, picture mode, white pattern, color temperature, RGB qain and backlight)
- · Reset: Reset to initial settings.

On/Off Scheduler

SETTINGS / ♥ → Ez Setting → On/Off Scheduler

Set a schedule to use your signage by time and day of the week.

- On/Off Time Setting: Set on/off times for each day of the week.
- · Holiday Setting: Set holidays by date and by day of the week. (This feature may not be available for all models.)

Server Setting

SETTINGS / ♥ → Ez Setting → Server Setting

Set up to connect your signage to a SuperSign server. (The name of this feature may be different on some models.)

- CMS Server
- Link Server

Fail Over

SETTINGS / ♥ → Ez Setting → Fail Over

This feature enables automatically switching to other input sources in **order of priority** if the primary signal is interrupted. It also enables the automatic playback of the photo and video content stored on your device.

- · Off: Turn off the Fail Over function.
- · Auto: Switch to other input sources in the predetermined order if there is no signal from the current input.
- Manual: Set switching priorities for inputs when there is no signal. In case there are multiple video signals, the current
 input switches to the input with the highest priority.
- · Reset: Reset to initial settings.
- USB: You can set this option to Off. Video. or Photo.
 - Off: Disable the Fail Over USB function.
 - Video: If you set this feature to Auto, a video is played back when there is no input signal. If you set this feature to
 Manual, a movie is played back when there is no signal from any of the prioritized inputs.
 - **Photo**: If you set this feature to **Auto**, a photo slideshow is played back when there is no input signal. If you set this feature to **Manual**, a photo slideshow is played back when there is no signal from any of the prioritized inputs.

Data Cloning

SETTINGS / ♥ → Ez Setting → Data Cloning

This feature is used to copy and import the settings of the device to other devices.

- Export Setting Data: Export the settings of the device to another device.
- Import Setting Data: Import the settings of another device into the device.

Sync Mode

SETTINGS / ♥ → Ez Setting → Sync Mode

Sync up time and content among multiple signages.

- · Sync Mode: Sync up time and content among multiple signages.
 - Master: Select as the Master.
 - Slave: Play content at the same time as the Master monitor.
- Contents Sync: Sync the start times of content (videos or images that have been distributed by SuperSign Software) played back on the Master and Slave monitors.
 - On/Off: Enable or disable Content Sync feature.
- Time Sync: Sync the Slave monitors' clocks to the Master monitor's at a specified time via RS-232C.
 - Off(0-24): Set the sync time.
- · This feature may not be available for all models.

General

Language

SETTINGS / ☼ → General → Language

You can select the menu language to be displayed on the screen.

• Menu Language: Sets the language of your Signage monitor.

System Information

SETTINGS / ♥ → General → System Information

This feature displays information such as the device name, software version, and storage space.

Set ID

SETTINGS / ♥ → General → Set ID

- Set ID (1-1000): Assigns a unique Set ID number to each product when several products are connected via RS-232C. Assign numbers ranging from 1 to 1000 and exit the option. You can control each product separately by using the Set ID you assigned to each product. (For some models, the range of assign numbers is 1-255.)
- Auto Set ID: Automatically assigns a unique Set ID number to each product when several products are connected for display. (This feature may not be available for all models.)
- Reset Set ID: Reset the Set ID of the product to 1. (This feature may not be available for all models.)

Time & Date

SETTINGS / ♥ → General → Time & Date

This feature enables you to view and change the time and date on the device.

- · Set Automatically: Set Time and Date.
- Daylight Saving Time: Set the start and end times for Daylight Saving Time. The DST start/end times function only
 when you set them more than one day apart from each other.
- Time Zone: Configure the continent, country/region and city.
 - Select manual in City to set Custom Time Zone.

Power

SETTINGS / ♥ → General → Power

Power-related feature settings

No Signal Power Off(15 min.)

Set whether to use the 15 Min Auto Off feature.

- You can set this option to On or Off.
- If you set this feature to On, the product turns off when it has remained in No Signal status for 15 minutes.
- If you set this feature to Off, the 15 Min Force Off feature is disabled.
- It is recommended that you set this feature to Off if you intend to use the product for long periods of time as the feature turns the power of the product off.

No IR Power Off

Set whether to use the No IR Power Off feature.

- · You can set this option to Off, 2 hours, 4 hours, 6 hours, or 8 hours.
- If you set this feature to 2 hours, 4 hours, 6 hours or 8 hours, the product turns off if there is no input from the
 remote control for the corresponding period.
- If you set this feature to Off, the No IR Power Off feature is disabled.

DPM

Set the Display Power Management (DPM) mode.

- If this feature is not set to Off, the monitor will enter DPM mode when there is no input signal.
- · If you set this feature to Off, DPM is disabled.
- · You can set this feature to Off. 5 sec. or 10 sec..

DPM Wake Up Control

Set conditions for releasing the DPM status according to the digital signal processing of the connected DVI/HDMI port.

- When set to Clock, the set checks for digital clock signals and releases the DPM status once it finds the clock signal.
- When set to Clock+DATA, the set releases the DPM status when both the clock signal and data of the digital signal
 are entered.
- · This feature may not be available for all models.

PM Mode

- Power Off(Default): Sets the normal DC off mode.
- Sustain Aspect Ratio: Identical to normal DC off mode except that the Switching IC remains on. On certain models,
 this applies only to a specific input mode (DisplayPort) and has the same effect as Screen Off
 Always in other input modes.
- Screen Off: Switches to Screen Off status when entering DPM, Auto Power Off (15 min, 4 hours), or Abnormal Shut Down mode.
- Screen Off Always: Switches to Screen Off status when entering DPM, Auto Power Off (15 min, 4 hours), Off Time
 Scheduling, or Abnormal Shut Down mode, or when there is input from the remote control's
 Power button or the monitor's Off button.
- Screen Off & Backlight On: Partially turns on the backlight to keep the display at a proper temperature when in Screen Off status.
- · This feature may not be available for all models.



In order for the screen to switch from Screen Off to On status, there must be input from the remote control's Power
or Input button, or the monitor's On button.

Power On Delay(0-250)

- · This feature prevents overload by implementing a power-on delay when multiple monitor sets turn on.
- · You can set the delay interval in the range of 0 to 250 seconds.
- · This feature may not be available for all models.

Power On Status

- · Select the operating status of the monitor when the main power has turned on.
- · You can choose from among PWR (Power On), STD (Standby), and LST (Last Status).
- PWR (Power On) keeps the monitor powered on when the main power has turned on.
- STD (Standby) switches the monitor to Standby status when the main power has turned on.
- LST (Last Status) switches the monitor back to its previous status.

Wake On LAN

- Set whether to use Wake On LAN.
- You can set the feature to On or Off for wired network.
- Wired Network: When set to On, the Wake On LAN feature is enabled, letting you turn the product on remotely through a wired network.

Power On/Off History

Display the device's power on/off history.

Network

SETTINGS / ☼ → General → Network

Wired Connection (Ethernet)

Wired Connection: Connects the monitor to a local area network (LAN) via the LAN port and configures wired
network settings. Only wired network connections are supported. After setting up a physical
connection, the display will automatically connect without any adjustments on most networks.
A small number of networks may require the display settings to be adjusted. For detailed
information, contact your Internet provider or consult your router manual.

Wireless Network Connection

If you have set your monitor up for a wireless network, you can view and connect to available wireless Internet networks.

- Input the new SSID: You can add a wireless network by manually typing in its name.
- · Access Point Search: Search access point again.
- WPS PBC: Press the button on the wireless router that supports PBC to easily connect to the router.



 When connected to a network that supports IPv6, you can select IPv4/IPv6 in the advanced wired/wireless network setting. But, IPv6 connection only supports automatic connection.

Tips for Network Settings

- Use a standard LAN cable (Cat5 or higher with an RJ45 connector) with this display.
- Many network connection problems during set up can often be fixed by re-setting the router or modem. After
 connecting the display to the home network, quickly power off and/or disconnect the power cable of the home
 network router or cable modem, Then power on and/or connect the power cable again.
- Depending on the Internet service provider (ISP), the number of devices that can receive INTERNET service may be limited by the applicable terms of service. For details, contact your ISP.
- LG is not responsible for any malfunction of the display or Internet connection failures due to communication errors/malfunctions associated with your Internet connection or other connected equipment.
- · LG is not responsible for problems within your INTERNET connection.
- You may experience undesired results if the network connection speed does not meet the requirements of the content being accessed.
- Some INTERNET connection operations may not be possible due to certain restrictions set by the Internet service
 provider (ISP) supplying your Internet connection.
- · Any fees charged by an ISP including, without limitation, connection charges are your responsibility.



- If you want to access the Internet directly on your display, the INTERNET connection should always be on.
- If you cannot access the Internet, check the network conditions from a PC on your network.
- When you use Network Setting, check the LAN cable or check if DHCP in the router is turned on.
- If you do not complete the network settings, the network may not function correctly.

! CAUTION

- · Do not connect a modular phone cable to the LAN port.
- Since there are various connection methods, please follow the specifications of your telecommunication carrier or INTERNET service provider.
- · Network setting menu will not be available until the display connected to physical network.
- When a Wi-Fi dongle is used with a model that has only one USB input port, the distribution or content schedule via the SuperSign software is not available.

Tips for When Configuring Wireless Network Settings

- The wireless network may be affected by interference from a device that uses 2.4 GHz frequency, such as a wireless telephone, Bluetooth device or microwave. Interference may also be caused by a device that uses 5 GHz frequency such as Wi-Fi devices.
- · The wireless network service may run slowly depending on the surrounding wireless environment.
- Some devices may have a network traffic jam if any local home networks are turned on.
- To connect to a wireless router, a router that supports wireless connection is necessary; the wireless connection
 function of the corresponding router must also be activated. Ask the router manufacturer whether the router
 supports wireless connection.
- To connect to a wireless router, verify the SSID and security settings of the wireless router. Please refer to the user guide of the corresponding router regarding SSID and security settings of the wireless router.
- The monitor may not work properly if network devices (wire/wireless router or hub, etc.) are incorrectly set up. Be sure to install the devices correctly by referring to their user guides before configuring the network connection.
- The connection method may vary according to the manufacturer of the wireless router.

Safety Mode

SETTINGS / ☼ → General → Safety Mode

Set to this function for safe performance.

ISM Method

If a still image is displayed on the screen for an extended period of time, image sticking can occur. The ISM method is a feature that prevents image sticking.

Mode

- · Sets the ISM Method mode.
- · Normal: Disables the ISM Method.
- Move: Moves the image's position on the screen by 3 pixels in a certain order to remove image sticking. (This feature
 is disabled if There is no input signal.)
- Inversion: Inverts screen colors to remove image sticking. (This feature is disabled if There is no input signal.)
- · Color Wash: Alternately displays a white pattern and a color pattern to remove image sticking.
- · White Wash: Displays a white pattern to remove image sticking.
- Washing Bar: Displays a bar on the screen to make the image move smoothly. You can download a desired image and display it on the bar.
- User Image: Plays your photos or movies using a USB storage device.

Timer

- Immediately: Performs the ISM function immediately.
- Repeat: Performs the ISM function for the amount of time set in Time if the still image is maintained for the period set in Period.
- · Schedule: Performs the ISM function according to settings in Repeat Day, Start Time and End Time.
- · This feature may not be available for all models.

Period

- This option is available only when Timer is set to Repeat.
- · You can set the period between 1 and 24 hours.
- The ISM function is performed if the still image is maintained for the set period.

Time

- · This option is available only when Timer is set to Repeat.
- You can select from among 1 10 min / 20 min / 30 min / 60 min / 90 min / 120 min / 180 min / 240 min.
- The ISM function is performed for the set time.

Bar Image

- · This option is only available when Washing Bar is selected.
- Off: Displays a bar with a fixed resolution of 300 x 1080, then moves the bar.
- On: Displays a user-downloaded image, and moves the image. The image height is fixed at 1080 and the original
 width is maintained. However, the width is fixed at 300 if the original width is less than 300.
- If you download only 1 image, the image is displayed alone and the bar moves.
- If multiple images are downloaded, up to 4 images are consecutively displayed per cycle.

Bar Color

- · This option is applied when Bar Image is Off.
- · This option is only available when Washing Bar is selected.
- · You can choose from 6 colors: Red / Green / Blue / White / Black / Gray

Bar Transparency

- · This option is only available when Washing Bar is selected.
- · Off: Displays the bar opaquely.
- On: Displays the bar translucently. (Transparency: 50 %)

Bar Direction

- This option is only available when **Washing Bar** is selected.
- · Left to Right: The bar moves from left to right.
- · Right to Left: The bar moves from right to left.

Repeat Day

- This option is available only when Timer is set to Schedule.
- · None: Performs the set schedule only once.
- · Monday-Sunday: The ISM function is performed on scheduled days and for scheduled period.
- · This feature may not be available for all models.

Start Time

- · This option is available only when Timer is set to Schedule.
- · Sets the start time of the ISM function.
- This feature may not be available for all models.

End Time

- This option is available only when Timer is set to Schedule.
- · Sets the end time of the ISM function.
- This feature may not be available for all models.

How to Download an ISM Bar Image in Ez Download

- 1 In order to download an image in Ez Download, there must be an image file in an 'ism_bar' or 'ISM_BAR' folder on your USB storage device.
- 2 Delete the existing content stored on the internal memory before downloading a new image file.
- 3 Add [ISMBAR] as a prefix to the name of a file to distinguish the file from others (EPK, Logo, No Signal, etc.).
- 4 Download ISM photos or movies in Ez Download.

NOTE

- · You can download multiple images up to 5 MB in total.
- The total bit size of images must be under 50 MB for the images to be downloaded.
 For example, in the case of a 500 KB image with a resolution of 1920 x 1080, its bit size calculated by image decoding is about 7.91 MB (1920 * 1080 * 32 bit/1024/1024/8). Therefore, if you download 7 images of the same size, the total size of the images is about 3.5 MB, which falls within 5 MB. However, their total bit size is 7.91 MB * 7 = 55.3 MB, which exceeds the maximum bit size of 50 MB, so they cannot be downloaded.

How to Download an ISM Photo/Movie in Ez Download

- 1 In order to download a user image in Ez Download, there must be an user image file in an "ism or ISM" folder on your USB storage device.
- 2 Delete the existing content stored on the internal memory before downloading a new image file.
- 3 Add [ISMPHO] as a prefix to the name of a file for photos or [ISMMOV] if the file contains movies to distinguish the file from others (EPK, Logo, No Signal, etc).
- 4 Download ISM photos or movies in Ez Download.

Expert Controls

SETTINGS / ☼ → General → Expert Controls

PC/OPS Control

- PC/OPS Power Control: Enable you to control the power of the OPS as you turn on/off the display.
- Disable: Disable OPS Power Control.
- Sync (On): Synchronize the monitor's power status only when the monitor is on.
- Sync (On/Off): Synchronize the monitor's power status with the OPS.
- Control Interface Selection: This feature enables you to configure communication with the OPS connected to your
 monitor.
 - **Display**: Enable communication with external serial ports.
 - OPS: Enable communication with the OPS connected to your monitor.
- · This feature may not be available for all models.

Background Image

This feature enables you to set the default background image.

- Booting Logo Image: Change the logo image that appears when the device boots up. If you set this feature to Off, the Booting Logo does not appear.
 - Image Download: Download Booting Logo Image files onto your monitor. In order to download a Booting Logo Image, there must be a Booting Logo Image file in a "LG_MONITOR" on your USB storage device.



- The feature to update the Booting Logo Image only supports JPEG files of 1 MB or smaller can be used as Booting Logo Images.
- · Progressively encoded JPEG files are not applicable.
- · Make sure that Booting Logo Images have a resolution suitable for the screen resolution of the monitor.
- The maximum resolution for a Booting Logo Image is Full HD (1920 \times 1080) and HD (1360 \times 768). The minimum resolution for a Booting Logo Image is 64 \times 64.
- No Signal Image: Change the image that appears when there is no signal. If you set this option to Off, no image
 appears when there is no signal.
 - Image Download: Download No Signal Image files onto your monitor. In order to download an image, there must be an No Signal Image file in a "lg_sig" or "LG_SIG" folder on your USB storage device. The maximum total size of images to be downloaded: The total size should not exceed 10240KB (10MB).



- The feature to update No Signal Images only supports JPEG files of 1 MB or smaller.
- · Progressively encoded JPEG files are not applicable.
- The maximum resolution for a No Signal Image is Full HD (1920 x 1080) and HD (1360 x 768). The minimum resolution for a Booting Logo Image is 64 x 64.
- No Signal Image files with a resolution of Full HD (1920 x 1080) can cause image sticking.
- · Only No Signal Image files with English names are displayed correctly.

Input Manager

Specify a label for each input source.

SIMPLINK Setup

- When the SIMPLINK Setup is set to On, you can use the SIMPLINK provided by LG Signage.
- Device ID: Set the ID of the device connected via CEC wiring. You can choose a value between All and E.
- **Standby**: Sets the scenarios for sending and receiving the OpStandBy (0x0c) command. Detailed scenarios are as follows:

	Transmission	Reception
All	0	0
Send Only	0	Х
Receive Only	Х	0
Off	Х	Х

Crestron

- This function enables synchronization with applications provided by Crestron.
- **Server**: This menu sets the server's IP address for the network connection with the server (equipment provided by Crestron).
- Port (1024-65535): This menu sets the port for the network connection with the server. The default port number is 41794.
- IP ID (3~254): This menu sets a unique ID for synchronizing with the application.

Display

Picture Mode Settings SETTINGS / ♣ → Display → Picture Mode Settings

Picture Mode

This feature enables you to choose the optimal picture mode for your installation environment.

- · Mall/QSR, Transportation, Education, Gov.&Corp.: Display the picture optimally for your installation environment.
- Normal: Display the picture at normal contrast, brightness, and sharpness.
- APS: Adjust the screen brightness to reduce power consumption.
- Expert, Calibration: Allow an expert, or anyone who loves picture quality, to manually tune to the best picture quality.



- The kinds of Picture Mode you can select may vary depending on the input signal.
- Expert is an option that allows a picture quality expert to fine-tune the picture quality using a specific image. Thus, it may not be effective for a normal picture.

Customize

- **Backlight**: Adjust the brightness of the screen by adjusting the brightness of the backlight. The closer the value is to 100, the brighter the screen is.
- Contrast: Adjust the difference between the light and dark areas of the picture. The closer the value is to 100, the greater the difference is.
- Brightness: Adjust the overall brightness of the screen. The closer the value is to 100, the brighter the screen is.
- **Sharpness**: Adjust the sharpness of the edges of objects. The closer the value is to 50, the clearer and the sharper the edge becomes.
- Color: Soften or deepen the tints on the screen. The closer the value is to 100, the deeper the colors become.
- **Tint**: Adjust the balance between red and green levels displayed on the screen. The closer to Red 50, the redder the color will be. The closer to Green 50, the greener the color will be.
- Color Temperature: The higher you set the color temperature, the cooler the colors on the screen will feel. The lower
 you set the color temperature, the warmer the colors on the screen will feel.
- Expert Controls: Customize the advanced options.
 - **Dynamic Contrast**: Optimize the difference between the light and dark parts of the screen according to the brightness of the image.
 - Color Gamut: Select the range of colors available.
 - **Dynamic Color**: Adjust the tint and saturation of the image for a more vivid and lively display.
 - Color Filter: Accurately adjust color and tint by filtering a specific color area of RGB space.
 - **Preferred Color**: Adjust the skin tint, grass tint, and sky tint to your preference.
 - Gamma: Adjust gamma settings to compensate for the brightness of the input signal.
 - White Balance: Adjust the overall color fidelity of the screen to your liking. In Expert mode, you can fine-tune the
 picture using the Method/Pattern options.
 - Color Management System: Experts use the color management system when they adjust the colors by using
 the test pattern. The color management system allows you to make an adjustment
 by selecting from among 6 different color spaces (Red/Yellow/Blue/Cyan/Magenta/
 Green) without affecting other colors. In a normal picture, you may not notice the
 color changes you have made.

- · Picture Option: Customize the picture options.
 - Noise Reduction: Remove randomly popping dots to make the picture look clearer.
 - MPEG Noise Reduction: Reduce the noise generated in the process of creating a digital video signal.
 - Black Level: Adjust the brightness and contrast of the screen by adjusting the black level of the screen.
 (Recommended settings according to input signal: RGB 0–255: High, RGB 16–235: Low, YCbCr. Low)
 - Real Cinema: Optimize the video image for a cinematic look.
- Apply to All Inputs: Copies the current value of the detailed setting menu to the entire input, and applies only to the selected picture mode.
- Reset: Reset the picture settings. Because the picture settings are reset according to the monitor's picture mode, please select the picture mode before resetting the picture settings.

Aspect Ratio

SETTINGS / ♥ → Display → Aspect Ratio

This feature enables you to change the picture size to view the picture at its optimal resolution.

- Full: Stretch the picture to fill the screen.
- · Original: Display the picture at its original resolution.

Rotation

SETTINGS / ♥ → Display → Rotation

OSD Rotation

- · This feature rotates the screen clockwise.
- You can set this feature to Off/90/270.
- · When set to off, this feature is deactivated.
- It is recommended that you use content designed to be used in Portrait mode.
- · This feature may not be available for all models.

Position

· You can set the location of the rotated OSD as Top/Center/Bottom.

Pivot Mode

· This feature pivots the screen 180°.

Expert Controls

SETTINGS / ♦ → Display → Expert Controls

Energy Saving

- Smart Energy Saving: Automatically adjust the brightness of the screen according to the brightness of the picture to save energy.
 - On: Enable the Smart Energy Saving feature.
 - Off: Disable the Smart Energy Saving feature.
- Brightness Control: Adjust the brightness of the screen to save energy.
 - Off: Disable the Brightness Control function.
 - Minimum/Medium/Maximum: Use energy saving according to the energy saving level set for the monitor.
 - Screen Off: Turn off the screen after 3 seconds.
- · Brightness Scheduling: Adjust the backlight at specified times.
 - You can set this feature to On/Off.
 - Add schedule by setting the schedule time and backlight value.
 - If the current time has not been set, Brightness Scheduling is disabled.
 - You can add up to six schedules, and they are sorted in ascending order by time.
 - You can delete a schedule by selecting it from the list and pressing the **OK** button.

Adjust (RGB-PC)

This feature enables you to configure the PC display options in RGB mode.

- Auto Config.: Automatically adjust the screen position, time, and phase. The image displayed on the screen can be
 unstable for a few seconds in the process of the configuration.
- Resolution: Choose between 1024 x 768, 1280 x 768 and 1360 x 768 resolution.
- Position/Size/Phase: Adjust the options when the picture is not clear, especially when characters are shaky, after the
 auto configuration.
- · Reset to Initial Settings: Resets the options to default.
- · This feature may not be available for all models.

Sound

Sound Mode Settings

SETTINGS / \Rightarrow Sound \rightarrow Sound Mode Settings

Sound Mode

The best sound quality will be selected automatically depending on the video type currently being watched.

- Standard: This sound mode works well for content of all types.
- · Cinema: Optimize sound for watching movies.
- Clear Voice: Enhance voices so they can be heard more clearly.
- · Sports: Optimize sound for watching sports.
- Music: Optimize sound for listening to music.
- · Game: Optimize sound for playing video games.

Balance

- Balance: Adjust the output volume for the left speaker and the right speaker.
- This feature may not be available for all models.

Equalizer

• Equalizer: Manually adjust sound by using the equalizer.

Reset

· Reset: Resets sound settings.

Audio Out

SETTINGS / ♥ → Sound → Audio Out

- Off: Disables the use of Audio Out. (No audio outputted.)
- Variable: You can specify an output range for the external audio device connected to the monitor and adjust the
 volume within the range. You can change the volume of an external audio device within the range of 0 to
 100 (the same as the Signage speaker volume). However, there may be a difference in the actual volume
 level outputted.
- Fixed: Set a fixed audio output level for the external audio device.
 - If there is no external input, no external audio is outputted.
 - The variable audio output level 100 is the same as the fixed audio output level.
- · This feature may not be available for all models.

AV Sync Adjustment

SETTINGS / ☼ → Sound → AV Sync Adjustment

This feature adjusts audio timing to synchronize video and audio.

- Internal Monitor Speaker (-5~15): Adjust the sync of sound from the internal speakers. Moving closer to speeds up the audio output, while moving closer to + slows down the audio output, compared to the default value.
- **Bypass**: Output the broadcast signals or the sound from external devices without any audio delay. Audio may be outputted earlier than video due to the processing time for video that is inputted into the monitor.

Digital Audio Input

SETTINGS / ♦ → Sound → Digital Audio Input

This feature enables you to choose an input source for audio output.

- Digital: Output the audio contained in the digital signal inputted from the connected digital input source (HDMI, DISPLAYPORT, or OPS).
- Analog: Output audio from the digital input source (HDMI, DISPLAYPORT, or OPS) connected to the monitor through the Audio In port.
- · This feature may not be available for all models.

Admin

Admin Lock

SETTINGS / ♥ → Admin → Admin Lock

It keeps the existing settings because the Off/On button in the User menu only affects the active/inactive status of the submenu.

Change Password

SETTINGS / ☼ → Admin → Change Password

This feature enables you to set the password you use to enter the Installation menu.

- 1 Enter a new 4-digit password.
- 2 Enter the same password again in the Confirm Password field for confirmation.

Lock Mode

SETTINGS / ♥ → Admin → Lock Mode

Home Dashboard Lock

This feature enables you to restrict changes made to dashboard lock settings on the Home screen.

USB Lock

This feature restricts you from using a USB.

OSD Lock

This feature restricts you from using the OSD interface.

IR Operation Lock

- · If you set this feature to Off (Normal), you can use your remote control.
- If you set this feature to On (Power Key Only), you can only use the power key.
- If you set this feature to **On (Block All)**, you cannot use your remote control.

Local Key Lock

- This feature enables you to configure the Local Key Operation Lock feature so that settings or content cannot be changed.
- If you set this feature to Off (Normal), you can use the local keys on the monitor.
- · If you set this feature to On (Power Key Only), you can only use the power key.
- · If you set this feature to On (Block All), you cannot use the local keys.



- If IR Operation Lock and Local Key Operation Lock are both set to On (Block All), General > Power > Power On Status
 value switches to 'PWR'. Changing this value is not impossible to ensure the correct powering on operation. (To
 prevent mistakes by the user)
- If IR Operation Lock is set to On (Power Key Only, Block All), you can go to the menu screen by pressing and holding the Settings key for more than 5 seconds and entering the password.

Reset to Initial Settings

SETTINGS / ♥ → Admin → Reset to Initial Settings

This feature resets all items except the Quick Start items (Language, Time, and Auto Power Off) to their initial settings.

Ez Download

SETTINGS / ♥ → Admin → Ez Download

Users can easily download Software Update, Logo Image, No Signal Image, Data Cloning and etc. from Ez Download.

Factory Reset

SETTINGS / ♣ → Admin → Factory Reset

This feature resets the items applicable for Reset to Initial Settings, Date, Time, Language, Network IP, and the Input Label Internal Storage files.


However, Calibration mode's RGB gain is an exception.

Picture ID

· This only applies to certain models.

Picture ID is used to change the settings of a specific set (display) using a single IR receiver for multi-vision. Communication is possible between a monitor with an IR receiver and other monitors using RS-232C cables. Each monitor is identified by a Set ID. Setting **Picture ID** allows you to only use the remote control with monitors with a **Set ID** that matches the **Picture ID**.

1 Assign **Set ID** to the installed monitors as shown below:

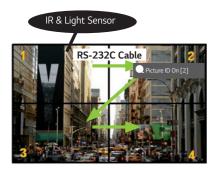

- 2 Press the red Picture ID On button on the remote control.
- 3 Make sure that the Picture ID you set is identical to the **Set ID** of the monitory you wish to control.
- A set with a **Set ID** that is different from the **Picture ID** cannot be controlled by IR signals.



- If Picture ID has been set to 2, only the upper right monitor, which has a Set ID of 2, can be controlled by IR signals.
- If you press the green Picture ID Off button on your remote control, the Picture ID for all monitors are turned off. If
 you then press any button on the remote control, all monitors can be controlled by IR signals regardless of their Set
 ID's.

CONTENT MANAGER

Content Manager

Player



The Content Manager app's player feature enables you to play video content, image content, template content and playlist content in an integrated way.

Play

- 1 Select your desired type of content from the tab on the left and then select your desired content.
- 2 Click **Play** in the upper right-hand corner of the screen and enjoy the content you have selected.

Scheduler

HOME / ↑ → (Scheduler)

The Content Manager app's scheduler feature enables certain content to be played at a scheduled time through a playlist or external input.

Creating a Schedule

- 1 Click **Add New Schedule** in the upper right-hand corner of the screen.
- 2 Choose between Playlist and Input.
- 3 1) If you have selected **Playlist**, select the playlist you wish to schedule the playback of.
 - 1-1) You can cancel schedule creation by clicking the Cancel button.
 - 2) If you have selected **Input**, select the external input source you wish to schedule the playback of.
 - 2-1) You can cancel schedule creation by clicking the Cancel button.
- 4 Enter schedule information and create a new schedule.
 - 1) You can go back to the Playlist / Inputs screen by clicking the Back button.
 - 2) You can go back to the Scheduler screen by clicking the Cancel button.
- 5 Watch the playlist or external input you selected play back at its scheduled time.

Deleting a Schedule

- 1 Click **Delete** in the upper right-hand corner of the screen.
- 2 Select the schedules you wish to delete.
- 3 Click Delete.
- 4 Check that the schedules have been deleted

Playing a Schedule Now

- 1 On the Scheduler screen, select the schedule you wish to play.
- 2 After selecting the desired schedule, select **Play Now** on the bottom right corner of the screen.
- 3 Watch the playlist or external input you selected plays back.

Editing a Schedule

- 1 On **Scheduler**, select the schedule you wish to edit.
- 2 After selecting the desired schedule, select **Edit** on the bottom right corner of the screen.
- 3 If the selected schedule is a playlist, playlist edit window will appear. If it is an external input, external input edit window will appear. Select the **Playlist / Input** you wish to edit.
 - 1) You can cancel schedule editing by clicking the Cancel button.
- 4 Enter schedule information to edit a schedule.
 - 1) You can go back to the **Playlist / Inputs** screen by clicking the Back button.
 - 2) You can go back to the Scheduler screen by clicking the Cancel button.
- 5 Check the edited Scheduler.
- 6 Watch the playlist or external input you selected play back at its scheduled time.



- When creating and editing a schedule, you cannot include characters that cannot be used in file names on Windows

 such as \, \, \, \, *, *, *, *, *, *, *, and | in the name of the schedule file. You cannot create a schedule if file names include such characters.
- In addition, if the playlist linked to the schedule contains content files whose names include such characters, you cannot move or copy the playlist.
- If the schedule creation time overlaps, the previously created schedule is deleted.
- If there is an existing schedule with the same name, change the name to create a schedule.
- · Schedule does not work while Scheduling list app is running.

Playlist

HOME / ↑ → (Playlist)

This feature creates playlist using content in a USB and automatically plays back the created playlist when the monitor is turned on.

Create Playlist

- 1 Click Create New Playlist in the upper right-hand corner of the screen.
- 2 Select the desired content and click **Complete**.
- 3 Check the created playlist.

Power On Play Setting

- 1 Click **Power On Play** in the upper right-hand corner of the screen.
- 2 Select the desired playlist and click **Complete**.
- 3 Check the selected playlist play back when the monitor is turned on.

Delete Playlist

- 1 Click **Delete** in the upper right-hand corner of the screen.
- 2 Select the desired playlists and click **Delete**.
- 3 Check that the playlists have been deleted.

Photo Playback Speed Setting

- 1 Click **Settings** in the upper right-hand corner of the screen.
- 2 Select the desired time and click **Save**. (You can set this feature to 5/10/20/30.)
- 3 Check the playback speed when the playlist plays back.

Edit Playlist

1 Select the playlist you wish to edit.

Add Content

- 1 Click **Add Content** in the upper right-hand corner of the screen.
- 2 Select the desired content and click **Complete**.
- 3 Check that the content has been added.

Change Content Order

- 1 Click **Change Order** in the upper right-hand corner of the screen.
- 2 Select and move the desired content.
- 3 After moving the content to the desired location, click **Complete**.
- 4 Check that the content order has been changed.

Delete Content

- 1 Click **Delete** in the upper right-hand corner of the screen.
- 2 Select the desired content and click **Delete**.
- 3 Check that the content has been deleted.

Supported Media File Formats

Supported Video File Formats

- Maximum data transfer rate: 20 Mbps (Megabits per second)
- Maximum supported resolution: 1920 x 1080 @ 30p (only Motion JPEG 640 x 480 @ 30p)

Extension		Codec			
.asf, .wmv	Video	MPEG-4 Part2, Xvid, H.264/AVC, VC1(WMV3, WVC1), MP43			
	Audio	WMA Standard, WMA9(Pro), MP3, AAC, AC3			
.avi	Video	MPEG-2, MPEG-4 Part2, Xvid, H.264/AVC			
	Audio	HE-AAC, LPCM, ADPCM, MPEG-1 Layer I, MPEG-1 Layer II, Dolby Digital, MPEG-1 Layer III (MP3)			
.ts, .trp, .tp, .mts,	Video	H.264/AVC, MPEG-2, H.265/HEVC			
.m2ts	Audio	MPEG-1 Layer I, MPEG-1 Layer II, MPEG-1, Layer III (MP3), Dolby Digital, Dolby Digital, Plus, AAC, HE-AAC			
.vob	Video	MPEG-1, MPEG-2			
	Audio	Dolby Digital, MPEG-1 Layer I, MPEG-1, Layer II, DVD-LPCM			
.mp4, .m4v, .mov	Video	MPEG-2, MPEG-4 Part2, Xvid, H.264/AVC			
	Audio	AAC, MPEG-1 Layer III (MP3)			
.mkv	Video	MPEG-2, MPEG-4 Part2, Xvid, H.264/AVC			
	Audio	HE-AAC, Dolby Digital, MPEG-1 Layer III (MP3), LPCM			
motion JPEG	Video	MJPEG			
	Audio	LPCM, ADPCM			
.mpg, .mpeg, .mpe	Video	MPEG-1, MPEG-2			
	Audio	MPEG-1 Layer I, MPEG-1 Layer II, Dolby Digital, LPCM			
.dat	Video	MPEG-1, MPEG-2			
	Audio	MP2			
.flv	Video	Sorenson H.263, H.264/AVC			
	Audio	MP3, AAC, HE-AAC			
.3gp	Video	H.264/AVC, MPEG-4 Part2			
	Audio	AAC, AMR(NB/WB)			

Supported Photo File Formats

File type	Format	Resolution		
.jpeg, .jpg, .jpe	Supported file format	SOF0: Baseline		
		SOF1: Extend Sequential		
		SOF2: Progressive		
	Photo size	Minimum: 64 (W) x 64 (H)		
		Maximum: Normal Type: 15360 (W) x 8640 (H)		
		Progressive Type: 1920 (W) x 1440 (H)		
.png Supported file format Interlace, Non-Interlace		Interlace, Non-Interlace		
Photo size Minimum: 64 (W) x		Minimum: 64 (W) x 64 (H)		
		Maximum: Interlace: 1200 (W) x 800 (H)		
		Non-Interlace: 9600 (W) x 6400 (H)		
.bmpPhoto sizeMinimum: 64 (W) x 64 (H)		Minimum: 64 (W) x 64 (H)		
		Maximum: 9600 (W) x 6400 (H)		

Supported Music File Formats

File type Format		Info				
MP3	Bit rate	32 Kbps - 320 Kbps				
	Sample freq.	16 kHz - 48 kHz				
	Support	MPEG-1, MPEG-2, Layer3				
AAC	Bit rate	Free Format				
	Sample freq.	8 kHz - 48 kHz				
	Support	ADIF, ADTS				
M4A	Bit rate	Free Format				
	Sample freq.	8 kHz - 48 kHz				
	Support	MPEG-4				
WAV	Bit rate	64 kbps - 1.5 Mbps				
	Sample freq.	8 kHz - 48 kHz				
	Support	LPCM				
	Bit depth	8 bit / 16 bit / 24 bit				
WMA	Bit rate	128 Kbps - 320 Kbps				
	Sample freq.	8 kHz - 48 kHz				
	Support	WMA7, WMA8, WMA9 Standard				
WMA 10 Pro	Bit rate	- 768 Kbps				
	Sample freq.	M0: up to 2 Channel @ 48 kHz (Except LBR mode)				
		M1: up to 5.1 Channel @ 48 kHz				
		M2: up to 5.1 Channel @ 96 kHz				
	Support	WMA 10 Pro				
OGG	Bit rate	Free Format				
	Sample freq.	8 kHz - 48 kHz				
	Support	OGG Vorbis				



• The playback speed of BMP and PNG files can be slower than JPEG.

Tips for using USB storage devices

- · Only USB storage devices are recognized.
- USB storage devices connected to the monitor through a USB hub may not work properly.
- USB storage devices that use an automatic recognition program may not be recognized.
- USB storage devices that use their own drivers may not be recognized.
- The recognition speed of a USB storage device may depend on each device.
- Please do not turn off the display or unplug the USB device when the connected USB storage device is working.
 When the device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- Please do not connect the USB storage device which was artificially maneuvered on the PC. The device may cause
 the product to malfunction or fail to be played. Remember to only use USB storage devices that store normal music,
 image, and/or movie files.
- · Storage devices formatted with utility programs that are not supported by Windows may not be recognized.
- Please connect power to a USB storage device (over 0.5 A) which requires an external power supply. Otherwise, the
 device may not be recognized.
- · Please connect a USB storage device with the cable offered by the device maker.
- · Some USB storage devices may not be supported or operated smoothly.
- · Some models do not support USB external hard disks.
- File alignment methods of the USB storage device is similar to Windows XP and filenames can include up to 100 English characters.
- Be sure to back up important files since data stored in a USB memory device may be damaged. We will not be responsible for any data loss.
- If the USB HDD does not have an external power source, the USB device may not be detected. So make sure to connect it to an external power source.
 - Please use a power adapter for an external power source. No USB cable is provided for an external power source.

- If your USB storage device has multiple partitions, or if you use a USB multi-card reader, you can use up to four partitions or USB memory devices.
- If a USB storage device is connected to a USB multi-card reader, its volume data may not be detected.
- If the USB storage device does not work properly, remove it and connect it again.
- The speed at which a USB storage device is detected differs from device to device.
- If the USB storage device is connected in Standby Mode, a specific hard disk will automatically be loaded when the display is turned on.
- The recommended capacity is 1 TB or less for a USB external hard disk and 32 GB or less for USB memory.
- · Any device with more than the recommended capacity may not work properly.
- If a USB external hard disk with a Energy Saving feature does not work, turn the hard disk off and on again to make it
 work properly.
- USB storage devices (USB 2.0 or below) are also supported. However, they may not work properly in the videos list.
- · A maximum of 999 folders or files can be recognized under one folder.
- Only use USB storage devices that have been formatted with the FAT32 file system. Storage devices formatted with utility programs that are not supported by Windows may not be recognized.
- · USB 3.0 may not work properly.
- · For some USB storage devices, data may be damaged under high temperature.
- Playing back content using 2 or more USB ports is not recommended.

IR CODE

- All models do not support the HDMI/USB function.
- Some key codes may not be supported depending on the model.

		Remarks
08	(Power)	Remote control button
C4	MONITOR ON (Monitor On)	Remote control button
C5	MONITOR OFF (Monitor Off)	Remote control button
95	(Energy Saving)	Remote control button
OB .	INPUT (Select input)	Remote control button
10	Number Key 0	Remote control button
11	Number Key 1	Remote control button
12	Number Key 2	Remote control button
13	Number Key 3	Remote control button
14	Number Key 4	Remote control button
15	Number Key 5	Remote control button
16	Number Key 6	Remote control button
17	Number Key 7	Remote control button
18	Number Key 8	Remote control button
19	Number Key 9	Remote control button
2		Remote control button
03	∠ = (Vol -)	Remote control button
E0	BRIGHTNESS (Brightness) (Page Up)	Remote control button
E1	BRIGHTNESS (Brightness) ❤ (Page Down)	Remote control button
DC	3D (3D)	Remote control button
32	1/a/A	Remote control button
2F CLEAR		Remote control button
7E	Simplink	
79	ARC (Aspect Ratio)	Remote control button
4D	PSM (Picture Mode)	Remote control button
09	ベ (MUTE)	Remote control button

Code (Hex)	Function	Remarks
43	☆ (Settings/Menu)	Remote control button
99	Auto Configuration	Remote control button
40	ヘ (Up)	Remote control button
41	✓ (Down)	Remote control button
06	> (Right)	Remote control button
07	∢ (Left)	Remote control button
44	® (OK)	Remote control button
28	← (BACK)	Remote control button
7B	TILE (Tile)	Remote control button
5B	EXIT (Exit)	
72	Picture ID On (red)	Remote control button
71	Picture ID Off (green)	
63	Yellow	Remote control button
61	Blue	
5F	W.Bal	Remote control button
3F	¶ (S.Menu)	Remote control button
7C ♠ (Home)		Remote control button

CONTROLLING MULTIPLE PRODUCTS

· This only applies to certain models.


Use this method to connect several products to a single PC. You can control several products at a time by connecting them to a single PC.


In the Option menu, the Set ID must be between 1 and 1000 without being duplicated.

Connecting cables

• The image may be different according to the model. Connect the RS-232C cable as shown in the picture.

The RS-232C protocol is used for communication between the PC and product. You can turn the product on/off, select an input source and adjust the OSD menu from your PC.

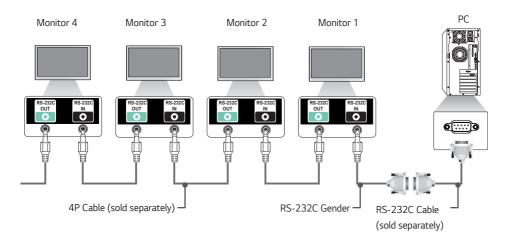

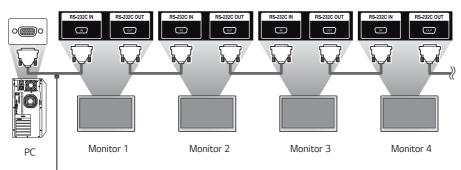

RS-232C Cable (sold separately)


Communication Parameter

Baud Rate: 9600 BPS Data Length: 8 bits Parity Bit: None Stop Bit: 1 bit Flow Control: None Communication Code: ASCII



NOTE

- · When using 3-wire connections (non-standard), an IR daisy chain cannot be used.
- Be sure to only use the provided gender to connect properly.
- · When you have daisy-chained multiple Signage products to control them simultaneously, if you attempt to turn on/off the master device in a continuous manner, some products may not turn on. In this case, you can turn those monitors on by pressing the **MONITOR ON** button, not the Power button.

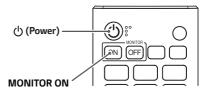

Command Reference List

		Command		Data
		1	2	(Hexadecimal)
01	Power	k	a	00 to 01
02	Select Input	х	b	See Select Input
03	Aspect Ratio	k	С	See Aspect Ratio
04	Brightness Control	j	q	See Energy Saving
05	Picture Mode	d	х	See Picture Mode
06	Contrast	k	g	00 to 64
07	Brightness	k	h	00 to 64
08	Sharpness	k	k	00 to 32
09	Color	k	i	00 to 64
10	Tint	k	j	00 to 64
11	Color Temperature	х	u	70 to D2
12	Balance	k	t	00 to 64
13	Sound Mode	d	у	See Sound Mode
14	MUTE	k	е	00 to 01
15	Volume Control	k	f	00 to 64
16	Clock 1 (year/month/day)	f	a	See Clock 1
17	Clock 2 (hour/minute/second)	f	х	See Clock 2
18	Daylight Saving Time	S	d	See Daylight Saving Time
19	Auto Power Off	f	g	00 to 01
20	No IR Power Off	m	n	00 to 04
21	Language	f	i	See Language
22	Set Default	f	k	00 to 02
23	Current Temperature	d	n	FF
24	Key	m	С	See Key
25	Time Elapsed	d	l	FF

		Command		Data
		1	2	(Hexadecimal)
26	Check product serial number	f	у	FF
27	Software Version	f	z	FF
28	White Balance Red Gain	j	m	00 to FE
29	White Balance Green Gain	j	n	00 to FE
30	White Balance Blue Gain	j	0	00 to FE
31	White Balance Red Offset	s	х	00 to 7F
32	White Balance Green Offset	S	у	00 to 7F
33	White Balance Blue Offset	s	z	00 to 7F
34	Backlight	m	g	00 to 64
35	Screen Off	k	d	00 to 01
36	Tile Mode	d	d	00 to FF
37	Check Tile Mode	d	z	FF
38	Tile ID	d	i	See Tile ID
39	Natural Mode (In Tile Mode)	d	j	00 to 01
40	Tile H Position	d	е	00 to 32
41	Tile V Position	d	f	00 to 32
42	Tile H Size	d	g	00 to 32
43	Tile V Size	d	h	00 to 32
44	DPM Mode Settings	f	j	00 to 07
45	DPM Wake Up Control	S	n, Ob	00 to 07
46	Remote Control/Local Key Operation Lock	k	m	00 to 01
47	Power On Delay	f	h	00 to FA
48	Select Fail Over Mode	m	i	00 to 02
49	Select Fail Over Input	m	j	See Select Fail Over Input
50	Remote Control Key Lock	t	р	00 to 02

		Command		Data
		1	2	(Hexadecimal)
51	Local Key Lock	t	0	00 to 02
52	Status Check	S	v	See Status Check
53	Screen Fault Detection	t	z	00 to 01
54	PM Mode	S	n, 0c	00 to 04
55	Screen Off Always	S	n, Od	00 to 01
56	Auto Config.	j	u	01
57	Digital Audio Input	S	n, 04	00 to 01
58	Audio Out	S	n, aa	00 to 02
59	OSD Rotation	t	h	00 to 02
60	Pivot Mode	t	a	00 to 01
61	Brightness Scheduling Mode	S	m	00 to 01
62	Brightness Scheduling	S	S	See Brightness Scheduling
63	Sync Mode	t	g	00 to 01
64	Time Sync Settings	S	n, 16	00 to 19
65	Timer Power On Scheduling	f	b	00 to 01
66	Timer Power Off Scheduling	f	С	00 to 01
67	Timer Power Off (Repeat Mode / Time)	f	е	See Timer Power Off
68	Timer Power On (Repeat Mode / Time)	f	d	See Timer Power On
69	Holiday Setting Mode	S	n, 1a	00 to 01
70	Holiday Setting	S	n, 1b	See Holiday Setting
71	Power On Status	t	r	00 to 02
72	Wake On LAN	f	w	00 to 01
73	ISM Method	j	р	See ISM Method
74	Booting Logo Image	S	n, a3	00 to 01
75	No Signal Image	S	n, a9	00 to 01

		Command		Data
		1	2	(Hexadecimal)
76	H Position	f	q	00 to 64
77	V Position	f	r	00 to 64
78	H Size	f	S	00 to 64
79	Home Dashboard Lock	S	n, 9d	00 to 01
80	USB Lock	S	n, 9e	00 to 01
81	OSD Lock	k	l	00 to 01
82	Change Password	S	n, a7	See Change Password
83	Apply to all inputs	S	n, 52	01
84	OSD Location	S	n, ac	00 to 02
85	Fail Over USB Input	S	n, 0a	00 to 02
86	Check Fan Failure	d	w	00 to 01
87	Network Settings	S	n, 80(81)(82)	See Network Settings
88	Natural Size	S	n, a5	00 to 64



- Commands may not work when there is no external input used.
- Some commands may not be supported on some models.
- During USB operations such as DivX or EMF, all commands except Power (ka) and Key (mc) are not executed and treated as NG.

Transmission/Reception Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

- * [Command1]: Identifies between the factory setting and the user setting modes.
- * [Command2]: This command is used to control the monitor.
- * [Set ID]: Used for selecting a set you want to control. A unique Set ID can be assigned to each set ranging from 1 to 255 (01H to FFH) or from 1 to 1000 (001H to 3e8H) under Settings in the OSD menu. Selecting '00H' or '000H' for Set ID allows the simultaneous control of all connected monitors (The maximum value may differ depending on the model.)
- * [Data]: Transmits command data. Data count may increase depending on the command.
- * [Cr]: Carriage Return. This parameter corresponds to '0x0D' in ASCII code.
- * []: White Space. This parameter corresponds to '0x20' in ASCII code.

Acknowledgment

[Command2][][Set ID][][OK/NG][Data][x]

- * The product transmits an ACK (acknowledgment) based on this format when receiving normal data. At this point, if the data is FF, it indicates the present status data. If the data is in data write mode, it returns the data of the PC computer.
- * If a command is sent with Set ID '00' (=0x00) or '000'(= 0x000), the data is reflected to all monitors and they do not send an acknowledgment (ACK).
- * If you send "FF" as the value of the data in control mode via RS-232C, you can check the value currently set for the relevant feature (not applicable to some features)
- * Some commands may not be supported on some models.

01. Power (Command: k a)

Controls the power on/off status of the monitor.

Transmission

[k][a][][Set ID][][Data][Cr]

Data 00: Off 01: On

Acknowledgment

[a][][Set ID][][OK/NG][Data][x]

- The Acknowledgment signal is returned properly only when the monitor is fully powered on.
- * There may be a delay between the Transmission and Acknowledgment signals.
- * This feature may not be available for all models.

04. Power Saving (Command: j q)

Configures the Power Saving mode.

Transmission

[j][q][][Set ID][][Data][Cr]

Data 00: Off

01: Minimum

02: Medium

03: Maximum 05: Screen Off

Acknowledgment

[q][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

02. Select Input (Command: x b)

Selects an input signal.

Transmission

[x][b][][Set ID][][Data][Cr]

Data 20: AV

40: Component

60: RGB

70: DVI-D (PC)

80: DVI-D (DTV)

90: HDMI (HDMI1) (DTV)

A0: HDMI (HDMI1) (PC)

91: HDMI2/OPS (DTV)

A1: HDMI2/OPS (PC)

CO: DISPLAYPORT (DTV)
DO: DISPLAYPORT (PC)

Acknowledgment

[b][][Set ID][][OK/NG][Data][x]

* Some input signals may not be available for all models.

05. Picture Mode (Command: d x)

Selects a picture mode.

Transmission

[d][x][][Set ID][][Data][Cr]

Data 00: Mall/QSR

01: General

02: Gov./Corp.

03: Transportation

04: Education

05: Expert (Expert 1)

06: Expert (Expert 2)

08: APS

11: Calibration

Acknowledgment

[x][][Set ID][][OK/NG][Data][x]

 $^{\star}\,$ Some picture modes may not be available for all models.

03. Aspect Ratio (Command: k c)

Adjusts the aspect ratio of your monitor.

Transmission

[k][c][][Set ID][][Data][Cr]

Data 02: Full Screen

06: Original

Acknowledgment

[c][][Set ID][][OK/NG][Data][x]

 The aspect ratio may differ depending on the model's input configuration.

06. Contrast (Command: kg)

Adjusts the screen contrast.

Transmission

[k][g][][Set ID][][Data][Cr]

Data 00-64: Contrast 0-100

Acknowledgment

[q][][Set ID][][OK/NG][Data][x]

07. Brightness (Command: k h)

Adjusts the screen brightness.

Transmission

[k][h][][Set ID][][Data][Cr]

Data 00-64: Brightness 0-100

Acknowledgment

[h][][Set ID][][OK/NG][Data][x]

11. Color Temperature (Command: x u)

Adjusts the screen color temperature.

Transmission

[x][u][][Set ID][][Data][Cr]

Data 70-D2: 3200K-13000K

Acknowledgment

[u][][Set ID][][OK/NG][Data][x]

08. Sharpness (Command: k k)

Adjusts the screen sharpness.

Transmission

[k][k][][Set ID][][Data][Cr]

Data 00-32: Sharpness 0-50

Acknowledgment

[k][][Set ID][][OK/NG][Data][x]

12. Balance (Command: kt)

Adjusts the sound balance.

Transmission

[k][t][][Set ID][][Data][Cr]

Data 00-64: Left 50-Right 50

Acknowledgment

[t][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

09. Color (Command: ki)

Adjusts the screen colors.

Transmission

[k][i][][Set ID][][Data][Cr]

Data 00-64: Color 0-100

Acknowledgment

[i][][Set ID][][OK/NG][Data][x]

13. Sound Mode (Command: d y)

Selects a sound mode.

Transmission

[d][y][][Set ID][][Data][Cr]

Data 01: Standard

02: Music

03: Cinema

04: Sports

05: Game

07: Clear Voice

Acknowledgment

[y][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

10. Tint (Command: kj)

Adjusts the screen tints.

Transmission

[k][j][][Set ID][][Data][Cr]

Data 00-64: Tint Red 50-Green 50

Acknowledgment

[j][][Set ID][][OK/NG][Data][x]

14. Mute (Command: k e)

Mutes/unmutes audio.

Transmission

[k][e][][Set ID][][Data][Cr]

Data 00: Mute on (Volume off)

01: Mute off (Volume on)

Acknowledgment

[e][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

17. Clock 2 (Hour/Minute/Second) (Command: f x)

Sets the Clock 2 values (hour/minute/second).

Transmission

[f][x][][Set ID][][Data1][][Data2][][Data3][Cr]

Data 1 00-17: 00-23 hours

Data 2 00-3B: 00-59 minutes

Data 3 00-3B: 00-59 seconds

- * Enter "fx [Set ID] ff" to view the Time 2 (hour/minute/second) settings.
- * This feature is only available when Clock 1 (year/month/day) has been set.

Acknowledgment

[x][][Set ID][][OK/NG][Data1][Data2][Data3][x]

15. Volume Control (Command: k f)

Adjusts the playback volume.

Transmission

[k][f][][Set ID][][Data][Cr]

Data 00-64: Volume 0-100

Acknowledgment

[f][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

16. Clock 1 (year/month/day) (Command: f a)

Sets the Clock 1 (year/month/day) values and Auto Time.

Transmission

1. [f][a][][Set ID][][Data1][][Data2][][Data3][Cr]
2. [f][a][][Set ID][][0][0][][Data1][Cr]

1. When setting Clock 1 (year/month/day)

Data 1 00-: 2010 -

Data 2 01-0C: January - December

Data 3 01-1F: 1-31

- * The minimum and maximum values for Data1 differ depending on the product's release year.
- * Enter "fa [Set ID] ff" to view Clock 1 (year/month/day) settings.

2. When Setting Auto Time

Data 1 00: Auto

01: Manual

 $^{\star}~$ To view the set value of the Auto time, enter "fa [Set ID] 00 ff".

Acknowledgment

1. [a][][Set ID][][OK/NG][Data1][Data2][Data3][x]

2. [a][][Set ID][][OK/NG][0][0][Data1][x]

18. Daylight Saving Time (Command: s d)

Sets Daylight Savings Time.

Transmission

[s][d][][Set ID][][Data1][][Data2][]

[Data3][][Data4][][Data5][][Cr]

Data1 00: Off (Data2-5: FF)

01: Start Time

02: End Time

Data2 01~0C: January - December

Data3 01-06: Week 1 - 6

 $^{\star}\,$ The maximum value of [Data3] may vary depending on the date.

Data4 00-06: (Sunday - Saturday) Data5 00-17: 00 - 23 hours

If you wish to read the start/end times,

enter FF for parameters [Data2] through [Data5].

(Example 1: sd 01 01 ff ff ff ff - Checks the start time.

Example 2: sd 01 02 ff ff ff ff - Checks the end time.)

* This feature only works when Clock 1 (year/month/day) and Clock 2 (hour/minute/second) have been set.

Acknowledgment

[d][][Set ID][][OK/NG][Data1][Data2] [Data3][Data4][Data5][x]

19. No Signal Power Off (Command: f g)

Sets the No Signal Power Off function.

Transmission

[f][g][][Set ID][][Data][Cr]

Data 00: Off (Not turned off after 15 minutes)

01: On (Turned off after 15 minutes)

Acknowledgment

[g][][Set ID][][OK/NG][Data][x]

22. Initial Value Settings (Command: fk)

Executes Reset.

(Initialize Screen can only be executed in RGB input mode.)

Transmission

Acknowledament

[f][k][][Set ID][][Data][Cr]

Data 00: Picture Reset

01: Initialize Screen

02: Reset to Initial Settings

[k][][Set ID][][OK/NG][Data][x] * This feature may not be available for all models.

20. No IR Power Off (Command: m n)

Activates Auto Power Off when there is no IR signal.

Transmission

[m][n][][Set ID][][Data][Cr]

Data 00: Off (Not turned off after 2/4/6/8 hours)

01: 2 hours (Turned off after 2 hours)

02: 4 hours (Turned off after 4 hours)

03: 6 hours (Turned off after 6 hours)

04: 8 hours (Turned off after 8 hours)

Acknowledgment

[n][][Set ID][][OK/NG][Data][x]

23. Current Temperature (Command: d n)

Checks the current temperature of the product.

Transmission

[d][n][][Set ID][][Data][Cr]

Data FF: Status Check

Acknowledgment

[n][][Set ID][][OK/NG][Data][x]

* The temperature is displayed in hexadecimal.

21. Language (Command: fi)

Sets the OSD language.

Transmission

[f][i][][Set ID][][Data][Cr]

Data 00: Czech

- 01: Danish
- 02: German
- 03: English
- 04: Spanish (Europe)
- 05: Greek
- 06: French 07: Italian
- 08: Dutch
- 09: Norwegian
- 0A: Portuguese
- OB: Portuguese (Brazil)
- OC: Russian
- 0D: Finnish
- 0E: Swedish
- OF: Korean
- 10: Chinese (Cantonese) 11: Japanese
- 12: Chinese (Mandarin)
- 13: Arabic

Acknowledgment

[i][][Set ID][][OK/NG][Data][x]

* Some languages may not be available for all models.

24. Key (Command: m c)

Sends a key code for the IR remote control.

Transmission

[m][c][][Set ID][][Data][Cr]

Data IR_KEY_CODE

Acknowledgment

[c][][Set ID][][OK/NG][Data][x]

- * For key codes, see IR Codes,
- * Some key codes may not be supported depending on the model.

25. Time Elapsed (Command: d l)

Displays the time that has elapsed after your monitor has turned on.

Transmission

[d][l][][Set ID][][Data][Cr]

Data FF: Read status

Acknowledgment

[I][][Set ID][][OK/NG][Data][x]

* The data received is displayed in hexadecimal.

29. White Balance Green Gain (Command: j n)

Adjusts the green gain value for white balance.

Transmission

[j][n][][Set ID][][Data][Cr]

Data 00-FE: Green Gain 0-254

FF: Checks green gain value

Acknowledgment

[n][][Set ID][][OK/NG][Data][x]

26. Product Serial Number Check (Command: f y)

Checks the serial number of the product.

Transmission

[f][y][][Set ID][][Data][Cr]

Data FF: Check product serial number

Acknowledgment

[y][][Set ID][][OK/NG][Data][x]

* Data is in ASCII format.

30. White Balance Blue Gain (Command: j o)

Adjusts the blue gain value for white balance.

Transmission

[j][o][][Set ID][][Data][Cr]

Data 00-FE: Blue Gain 0-254

FF: Checks blue gain value

Acknowledgment

[o][][Set ID][][OK/NG][Data][x]

27. Software Version (Command: f z)

Checks the software version of the product.

Transmission

[f][z][][Set ID][][Data][Cr]

Data FF: Check the software version

Acknowledgment

[z][][Set ID][][OK/NG][Data][x]

31. White Balance Red Offset (Command: s x)

Adjusts the red offset value for white balance.

Transmission

[s][x][][Set ID][][Data][Cr]

Data 00-7F: Red Offset 0-127

FF: Checks red offset value

Acknowledgment

[x][][Set ID][][OK/NG][Data][x]

28. White Balance Red Gain (Command: j m)

Adjusts the red gain value for white balance.

Transmission

[i][m][][Set ID][][Data][Cr]

Data 00-FE: Red Gain 0-254

FF: Checks red gain value

Acknowledgment

[m][][Set ID][][OK/NG][Data][x]

32. White Balance Green Offset (Command: s y)

Adjusts the green offset value for white balance.

Transmission

[s][y][][Set ID][][Data][Cr]

Data 00-7F: Green Offset 0-127 FF: Checks green offset value

Acknowledgment

[y][][Set ID][][OK/NG][Data][x]

33. White Balance Blue Offset (Command: s z)

Adjusts the blue offset value for white balance.

Transmission

[s][z][][Set ID][][Data][Cr]

Data 00-7F: Blue Offset 0-127

FF: Checks blue offset value

Acknowledgment

[z][][Set ID][][OK/NG][Data][x]

36. Tile Mode (Command: d d)

Sets a tile mode and values for the tile rows and columns.

Transmission

[d][d][][Set ID][][Data][Cr]

Data 00-FF: The first byte - tile column

- The second byte tile row
- * 00, 01, 10, and 11 mean that the tile mode is off.

 * The maximum value may differ depending on the model.

Acknowledgment

[d][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

34. Backlight (Command: m g)

Adjusts the backlight brightness.

Transmission

[m][g][][Set ID][][Data][Cr]

Data 00-64: Backlight 0-100

Acknowledgment

[g][][set ID][][OK/NG][Data][x]

35. Screen Off (Command: k d)

Turns off/off the screen.

Transmission

[k][d][][Set ID][][Data][Cr]

Data 00: Screen On

01: Screen Off

Acknowledgment

[d][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

37. Tile Mode Check (Command: d z)

Checks the tile mode.

Transmission

[d][z][][Set ID][][Data][Cr]

Data FF: Check Tile Mode

Acknowledgment

[z][][Set ID][][OK/NG][Data1][Data2][Data3][x]

Data 1 00: Tile Mode off

01: Tile Mode on

Data 2 00-0F: Tile column

Data 3 00-0F: Tile row

* This feature may not be available for all models.

38. Tile ID (Command: d i)

Sets the tile ID value of the product.

Transmission

[d][i][][Set ID][][Data][Cr]

Data 01-E1: Tile ID 1-225

FF: Checks the Tile ID

* The data value cannot exceed the value of row x column.

Acknowledament

[i][][Set ID][][OK/NG][Data][x]

- * If you enter a value that exceeds the value of row x column for the Data parameter (except for OxFF), Ack becomes NG.
- * This feature may not be available for all models.

39. Natural Mode (In Tile Mode) (Command: d j)

To display the image naturally, the part of the image that would normally be displayed in the gap between the monitors is omitted.

Transmission

[d][j][][Set ID][][Data][Cr]

Data 00: Off 01: On

Acknowledgment

[j][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

42. Tile H Size (Command: d g)

Adjusts the H Size in Tile Mode. (Before adjusting the Tile H Size, set the Tile H Position as 0 X 32. This function is only available when Tile Mode is set to On and Natural Mode is set to Off.)

Transmission

[d][g][][Set ID][][Data][Cr]

Data 00 - 32: 0 - 50

Acknowledgment

[g][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

40. Tile H Position (Command: d e)

Adjusts the H Position in Tile Mode. (This function is only available when Tile Mode is set to On and Natural Mode is set to Off.)

Transmission

[d][e][][Set ID][][Data][Cr]

Data 00 - 32: -50(Left) - 0(Right)

* Left/Right values vary depending on the tile H Size.

Acknowledgment

[e][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

43. Tile V Size (Command: d h)

Adjusts the V Size in Tile Mode. (Before adjusting the Tile V Size, set the Tile V Position as 0 X 00. This function is only available when Tile Mode is set to On and Natural Mode is set to Off.)

Transmission

[d][h][][Set ID][][Data][Cr]

Data 00 - 32: 0 - 50

Acknowledament

[h][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

41. Tile V Position (Command: d f)

Adjusts the V Position in Tile Mode. (This function is only available when Tile Mode is set to On and Natural Mode is set to Off.)

Transmission

[d][f][][Set ID][][Data][Cr]

Data 00 - 32: 0(Down) - 50(Top)

* Vertical values vary depending on the tile V Size.

Acknowledgment

[f][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

44. DPM (Command: fj)

Sets the DPM(Display Power Management) function.

Transmission

[f][j][][Set ID][][Data][Cr]

Data 00: Off

01: 5 seconds

02: 10 seconds

03: 15 seconds

04: 1 minute

05: 3 minute

06: 5 minute

07: 10 minute

Acknowledgment

[i][][Set ID][][OK/NG][Data][x]

45. DPM Wake Up Control (Command: s n, 0b)

Sets the DPM deactivation Control mode.

Transmission

[s][n][][Set ID][][0b][][Data][Cr]

Data 00: Sets the clock mode

01: Sets the clock + data mode

 When the monitor is turned off, the power key works even in On (01) mode.

Acknowledgment

[n][][Set ID][][OK/NG][0b][Data][x]

* This feature may not be available for all models.

46. Remote Control/Local Key Operation Lock (Command: k m)

Adjusts the remote control/local key (front) lock.

Transmission

[k][m][][Set ID][][Data][Cr]

Data 00: Off (Lock Off)

01: On (Lock On)

Acknowledgment
[m][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

47. Power On Delay (Command: fh)

Sets the schedule delay for when the power turns on. (Unit: seconds)

Transmission

[f][h][][Set ID][][Data][Cr]

Data 00-FA: Min 0- Max 250 (sec)

Acknowledgment

[h][][Set ID][][OK/NG][Data][x]

* The maximum value may differ depending on the model.

48. Fail Over Mode (Command: mi)

Sets an input mode for fail over.

Transmission

[m][i][][Set ID][][Data][Cr]

Data 00: Off

01: Auto

02: User Setting

Acknowledgment

[i][][Set ID][][OK/NG][Data][x]

49. Fail Over Input Select (Command: m j)

Selects an input source for fail over. (This feature is only available when Fail Over is set to Custom.)

Transmission

[m][j][][Set ID][][Data1][][Data2][][Data3][][Data4]

... [][DataN][Cr]

Data 1-N (Input priority 1-N)

60: RGB

70: DVI-D

90: HDMI

C0: Display Port

91: HDMI2/SDI/OPS

Acknowledament

[j][][SetlD][][OK/NG][Data1][Data2][Data3][Data4] ...[DataN] [x]

* Some input signals may not be available for all models.

* The data number (N) may vary depending on the model. (The data number depends on the number of supported input signals.)

50. Remote Control Key Lock (Command: t p)

Configures the settings of the product's remote control key.

Transmission

[t][p][][Set ID][][Data][Cr]

Data 00: Unlocks all keys

01: Locks all keys except Power key

02: Locks all keys

Acknowledgment

[p][][Set ID][][OK/NG][Data][x]

51. Local Key Operation Lock (Command: t o)

Configures the local key operation settings of the product.

Transmission

[t][o][][Set ID][][Data][Cr]

Data 00: Unlocks all keys

01: Locks all keys except Power key

02: Locks all keys

Acknowledgment

[o][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

54. PM Mode (Command: s n, Oc)

Sets the PM mode.

Transmission

[s][n][][Set ID][][0c][][Data][Cr]

Data 00: Power Off

01: Sustain Aspect Ratio

02: Screen Off

03: Screen Off Always

04: Screen Off & Backlight On

Acknowledgment

[n][][Set ID][][OK/NG][0c][Data][x]

* This feature may not be available for all models.

52. Status Check (Command: s v)

Checks the current signal of the product.

Transmission

[s][v][][Set ID][][Data][][FF][Cr]

Data 02: Check whether there is a signal 10: RGB Sensor OK/NG(Check Screen)

Acknowledgment

[v][][Set ID][][OK/NG][Data][Data1][x]

Data 02 (when a signal is found)

Data 1 00: No signal

01: Signal present

Data 10 (Check Screen)

Data 1 00: Check Screen result NG

07: Check Screen result OK

* When Check Screen is set to Off or not supported, execution results are rendered "NG"

55. Screen Off Always (Command: j p)

If you activate the Screen Off Always feature, the monitor enters Screen Off mode regardless of whether or not you have activated PM mode.

Transmission

[j][p][][Set ID][][Data][Cr]

Data 00: On (Screen on)

01: Off (Screen off)

* This feature may not be available for all models.

Acknowledgment

[n][][Set ID][][OK/NG][0d][Data][x]

Automatically corrects the position and shaking of the picture. (Works only in RGB-PC input mode.)

Transmission

[j][u][][Set ID][][Data][Cr]

56. Auto Config. (Command: j u)

Data 01: Execute

Acknowledgment

[u][][Set ID][][OK/NG][Data][x]

53. Screen Fault Detection (Command: t z)

Sets the Screen Fault Detection feature.

Transmission

[t][z][][Set ID][][Data][Cr]

Data 00: Off

01: On

Acknowledgment

[z][][Set ID][][OK/NG][Data][x]

57. Digital Audio Input (Command: s n, 04)

Sets Digital Audio Input.

Transmission

[s][n][][Set ID][][04] [] [Data][Cr]

Data 00: Digital

01: Analog

Acknowledgment

[n][][Set ID][][OK/NG][04][Data][x]

60. Pivot Mode (Command: t a)

Controls Pivot Mode.

Transmission

[t][a][][Set ID][][Data][Cr]

Data 00: Off 01: On

Acknowledgment

[a][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

58. Audio Out (Command: s n, aa)

Controls the Audio Out mode.

Transmission

[s][n][][Set ID][][a][a][][Data][Cr]

Data 00: Off

01: Variable

02: Fixed

Acknowledgment

[n][][Set ID][][OK/NG][a][a][Data][x]

* This feature may not be available for all models.

61. Brightness Scheduling Mode (Command: s m)

Selects a Brightness Scheduling mode.

Transmission

[s][m][][Set ID][][Data][Cr]

Data 00: Off

01: On

Acknowledgment
[m][][Set ID][][OK/NG][Data][x]

- * This feature does not work if the current time is not set.
- * This feature may not be available for all models.

59. OSD Rotation (Command: t h)

Sets the OSD Rotation mode.

Transmission

[t][h][][Set ID][][Data] [Cr]

Data 00: Off

01: 90 degrees

02: 270 degrees

Acknowledgment

[h][][Set ID][][OK/NG][Data] [x]

62. Brightness Scheduling (Command: s s)

Sets Brightness Scheduling.

Transmission

[s][s][][Set ID][][Data1][][Data2][][Data3][Cr]

Data1

1. f1 to f6 (data reading)

F1: Reads the 1st quick brightness control's data

F2: Reads the 2nd quick brightness control's data

F3: Reads the 3rd quick brightness control's data F4: Reads the 4th quick brightness control's data

r4: Reads the 4th quick brightness controls dat

F5: Reads the 5th quick brightness control's data F6: Reads the 6th quick brightness control's data

2 FF: Reads all stored lists

3. e1 to e6 (Deletes one index), e0 (Deletes all indexes)

E0: Deletes all quick brightness controls

E1: Deletes the 1st quick brightness control

E2: Deletes the 2nd quick brightness control

E3: Deletes the 3rd quick brightness control

E4: Deletes the 4th quick brightness control E5: Deletes the 5th quick brightness control

E6: Deletes the 6th quick brightness control

4. 00-17: 00 - 23 hours

Data2 00-3B: 00 - 59 minutes

Data3 00-64: Backlight 0 - 100

- * To read or delete a list of quick brightness controls you have set, [Data2][Data3] must be set to FF.
- If you want to read a complete list of quick brightness controls you have set through FF, do not enter any values in [Data2][Data3].
- * If you want to read a complete list of quick brightness controls you have set through FF, NG is acknowledged if there is no stored list.

Example 1: ss 01 f1 ff ff - Reads the 1st index data from the quick brightness control.

Example 2: ss 01 ff – Reads all index data from the quick brightness control.

Example 3: ss 01 e1 ff ff - Deletes the 1st index data from the quick brightness control.

Example 4: ss 01 07 1E 46 - Adds a schedule whose time is 07:30 and whose backlight is 70.

Acknowledgment

[s][][Set ID][][OK/NG][Data1][Data2][Data3][x]

* This feature may not be available for all models.

63. Sync Mode (Command: t g)

Selects a Sync Mode settings.

Transmission

[f][g][][Set ID][][Data][Cr]

Data 00: Off

01: On

Acknowledgment

[g][][Set ID][][OK/NG][Data][x]

* This feature may not be available for all models.

64. Time Sync (Command: s n, 16)

Sets the time to synchronize.

Transmission

[s][n][][Set ID][][1][6][][Data][Cr]

Data 00: Off

01: Sets to 00:00

02: Sets to 1:00 AM

18: Sets to 11:00 PM

19: Plays back immediately (once)

Acknowledgment

[n][][Set ID][][OK/NG][][1][6][][Data][x]

- * This feature does not work if there is no Master monitor.
- * The settings screen is displayed only on the Master monitor.
- * This feature does not work if the current time is not set.
- * This feature may not be available for all models.

65. Timer Power On Scheduling (Command: f b)

Sets the Timer Power On Scheduling function.

Transmission

[f][b][][Set ID][][Data][Cr]

ata 00: Off

01: On

Acknowledgment

[b][][Set ID][][OK/NG][Data][x]

66. Timer Power Off Scheduling (Command: f c)

Sets the Timer Power Off Scheduling function.

Transmission

[f][c][][Set ID][][Data][Cr]

Data 00: Off

01: On

Acknowledgment

[c][][Set ID][][OK/NG][Data][x]

67. Timer Power On (Repeat Mode / Time) (Command: f d)

Sets the Timer Power On (Repeat Mode / Time) function.

Transmission

[f][d][][Set ID][][Data1][][Data2][][Data3][Cr]

- 1. f1h to f7h (data reading)
- F1: Reads the 1st Timer Power On's data
- F2: Reads the 2nd Timer Power On's data
- F3: Reads the 3rd Timer Power On's data
- F4: Reads the 4th Timer Power On's data
- F5: Reads the 5th Timer Power On's data
- F6: Reads the 6th Timer Power On's data
- F7: Reads the 7th Timer Power On's data
- 2. e1h to e7h (Deletes one index), e0h (Deletes all indexes)
- E0: Delete all Timer Power On's
- E1: Delete the 1st Timer Power On
- E2: Delete the 2nd Timer Power On
- E3: Delete the 3rd Timer Power On
- E4: Delete the 4th Timer Power On
- E5: Delete the 5th Timer Power On
- E6: Delete the 6th Timer Power On
- E7: Delete the 7th Timer Power On
- 3. 01h to 0ch (Timer Power On days setting)
- 01: Repeat Once
- 02: Repeat Daily
- 03: Repeat from Monday to Friday
- 04: Repeat from Monday to Saturday
- 05: Repeat from Saturday to Sunday
- 06: Repeat on Sunday
- 07: Repeat on Monday
- 08: Repeat on Tuesday
- 09: Repeat on Wednesday
- OA: Repeat on Thursday
- **OB: Repeat on Friday**
- OC: Repeat on Saturday
- Data2 00-17: 00 23 hours
- Data 3 00-3B: 00 59 minutes
- * To read or delete a Timer Power On you have set, [Data2][Data3] must be set to FFH
- Example 1: fd 01 f1 ff ff Reads the 1st index data in Timer Power On.
- Example 2: fd 01 e1 ff ff Reads the 1st index data in Timer Power On.
- Example 3: fd 01 04 02 03 Sets the Timer Power On as Monday - Saturday 02:03.
- * This feature only works when Clock 1 (year/month/day) and Clock 2 (hour/minute/second) have been set.

Acknowledgment

[d][][Set ID][][OK/NG][Data1][Data2][Data3][x]

68. Timer Power Off (Repeat Mode / Time) (Command: fe)

Sets the Timer Power Off (Repeat Mode / Time) function.

Transmission

[f][e][][Set ID][][Data1][][Data2][][Data3][Cr]

- 1. f1h to f7h (data reading)
- F1: Reads the 1st Timer Power Off's data
- F2: Reads the 2nd Timer Power Off's data
- F3: Reads the 3rd Timer Power Off's data
- F4: Reads the 4th Timer Power Off's data
- F5: Reads the 5th Timer Power Off's data
- F6: Reads the 6th Timer Power Off's data F7: Reads the 7th Timer Power Off's data
- 2. e1h to e7h (Deletes one index), e0h (Deletes all indexes)
- E0: Delete all Timer Power Off's
- E1: Delete the 1st Timer Power Off
- E2: Delete the 2nd Timer Power Off
- E3: Delete the 3rd Timer Power Off
- E4: Delete the 4th Timer Power Off
- E5: Delete the 5th Timer Power Off
- E6: Delete the 6th Timer Power Off
- E7: Delete the 7th Timer Power Off
- 3. 01h to 0ch (Timer Power Off days setting)
- 01: Repeat Once
- 02. Repeat Daily
- 03: Repeat from Monday to Friday
- 04: Repeat from Monday to Saturday
- 05: Repeat from Saturday to Sunday
- 06: Repeat on Sunday
- 07: Repeat on Monday
- 08: Repeat on Tuesday
- 09: Repeat on Wednesday
- OA: Repeat on Thursday
- **OB: Repeat on Friday**
- OC: Repeat on Saturday
- Data2 00-17: 00 23 hours
- Data 3 00-3B: 00 59 minutes
- * To read or delete a Timer Power Off you have set, [Data2][Data3] must be set to FFH.

Example 1: fe 01 f1 ff ff - Reads the 1st index data in Timer Power Off.

Example 2: fe 01 e1 ff ff - Reads the 1st index data in Timer Power Off.

Example 3: fe 01 04 02 03 - Sets the Timer Power Off as Monday - Saturday 02:03.

* This feature only works when Clock 1 (year/month/day) and Clock 2 (hour/minute/second) have been set.

Acknowledgment

[e][][Set ID][][OK/NG][Data1][Data2][Data3][x]

69. Holiday Setting Mode (Command: s n, 1a)

Sets the Holiday Schedule mode to On or Off.

Transmission

[s][n][][Set ID][][1][a][][Data][Cr]

Data 00: Holiday Schedule Off 01: Holiday Schedule On

Acknowledgment

[n][][Set ID][][OK/NG][][1][a][][Data][x]

- * This feature does not work if the current time is not set.
- * This feature may not be available for all models.

70. Holiday Setting (Command: s n, 1b)

Sets holiday schedules

Transmission

[s][n][][Set ID]][][1][a]

[][Data1][][Data2][][Data3] [][Data4] [Cr]

Data1

- 1. f1 to f7 (data reading)
- f1: Reads the 1st Holiday Schedule's data
- f2: Reads the 2nd Holiday Schedule's data
- f3: Reads the 3rd Holiday Schedule's data
- f4: Reads the 4th Holiday Schedule's data
- f5: Reads the 5th Holiday Schedule's data
- f6: Reads the 6th Holiday Schedule's data
- f7: Reads the 7th Holiday Schedule's data
- 2. FF: Reads all stored lists
- 3. e1 to e7 (Deletes one index), e0 (Deletes all indexes)
- e0: Deletes all holiday schedules
- e1: Deletes the 1st holiday schedule
- e2: Deletes the 2nd holiday schedule
- e3: Deletes the 3rd holiday schedule
- e4: Deletes the 4th holiday schedule
- e5: Deletes the 5th holiday schedule
- e6: Deletes the 6th holiday schedule
- e7: Deletes the 7th holiday schedule
- 4. 01 0c: January December (Start Month)

Data2 01~1F: 01 - 31 (Start Day)

Data3 01 - Oc: January - December (End Month)

Data4 01~1F: 01 - 31 (End Day)

- * To read or delete a Holiday Schedule you have set, [Data2][Data3] [Data4] must be set to FF.
- * To read all Holiday Schedules you have set, [Data1][Data2][Data3] [Data4] must be set to FF.

Example 1: sn 01 1b f1 ff ff ff - Reads the 1st index data in Holiday Schedule.

Example 2: sn 01 1b ff ff ff ff - Reads all index data in Holiday Schedule.

Example 3: sn 01 1b e1 ff ff ff - Deletes the 1st index data in Holiday Schedule.

Example 4: sn 01 1b 01 07 0c 18 - Sets and adds the holiday schedule from January 7 to December 24.

- * Schedules that have been set in advance are not added.
- * This feature does not work if the current time is not set.
- * This feature may not be available for all models.

Acknowledgment

[s][][Set ID][][OK/NG][Data1][Data2][Data3][x]

71. Power On Status (Command: tr)

Sets the Power On status of the monitor.

Transmission

[t][r][][Set ID][][Data][Cr]

ata 00: LST (Maintains the previous power status)

01: STD (Keeps the power off)

02: PWR (Keeps the power on)

Acknowledgment

[r][][Set ID][][OK/NG][Data][x]

72. Wake On LAN (Command: f w)

Selects a Wake On LAN option.

Transmission

[f][w][][Set ID][][Data][Cr]

Data 00: Off

01: On

Acknowledgment

[w][][Set ID][][OK/NG][Data][x]

73. ISM Method (Command: j p)

Sets the ISM Method function.

Transmission

[j][p][][Set ID][][Data][Cr]

Data 01: Inversion

02: Move

04: Remove (white pattern)

08: Standard

20: Remove (colored pattern)

80: Washing Bar

90: User Image

* If Timer is set to Immediately, the jp command operates.

Acknowledgment

[p][][Set ID][][OK/NG][Data][x]

74. Booting Logo Image (Command: s n, a3)

Sets the Booting Logo Image mode.

Transmission

[s][n][][Set ID][][a][3][][Data][Cr]

Data 00: Off 01: On

01.011

Acknowledgment

[n][][Set ID][][OK/NG][a][3][Data][x]

* This feature may not be available for all models.

75. No Signal Image (Command: s n, a9)

Turns on/off No Signal Image.

Transmission

[s][n][][Set ID][][a][9][][Data][Cr]

Data 00: Off 01: On

Acknowledgment

[n][][Set ID][][OK/NG][a][9][Data][x]

* This feature may not be available for all models.

76. H Position (Command: f q)

Adjusts the horizontal position of the screen. (This feature only works when Tile Mode is set to Off.)

* The operational range varies depending on the RGB input resolution. (Works only in RGB-PC input mode.)

Transmission

[f][q][][Set ID][][Data][Cr]

Data 00-64: Minimum -50 (Left) - Maximum 50 (Right)

Acknowledgment

[q][][Set ID][][OK/NG][Data][x]

77. V Position (Command: fr)

Adjusts the vertical position of the screen. (This feature only works when Tile Mode is set to Off.)

 The operational range varies depending on the RGB input resolution. (Works only in RGB-PC input mode.)

Transmission

[f][r][][Set ID][][Data][Cr]

Data 00 - 64: Minimum -50 (Down) - Maximum 50 (Up)

Acknowledgment

[r][][Set ID][][OK/NG][Data][x]

78. H Size (Command: f s)

Adjusts the horizontal size of the screen. (This feature only works when Tile Mode is set to Off.)

 * The operational range varies depending on the RGB input resolution. (Works only in RGB-PC input mode.)

Transmission

[f][s][][Set ID][][Data][Cr]

Data 00 - 64: Minimum -50 (Small) - Maximum 50 (Large)

Acknowledgment

[s][][Set ID][][OK/NG][Data][x]

79. Home Dashboard Lock (Command: s n, 9d)

Sets Home Dashboard Lock.

Transmission

[s][n][][Set ID][][9][d][][Data][Cr]

Data 00: Off 01: On

Acknowledgment

[n][][Set ID][][OK/NG][9][d][Data][x]

* This feature may not be available for all models.

82. Change Password (Command: s n, a7)

Changes password.

Transmission

[s][n][][Set ID][][a][7][][Data1][Data2][Data3] [Data4][][Data5][Data6][Data7][Data8][Cr]

Data 1-4: 0-9 (Previously set password)

Data 5-8: 0-9 (New password)

Acknowledgment

[n][][Set ID][][OK/NG][a][7][][Data1][Data2] [Data3] [Data4][][Data5][Data6][Data7][Data8][x]

* This feature may not be available for all models.

80. USB Lock (Command: s n, 9e)

Sets USB Lock.

Transmission

[s][n][][Set ID][][9][e][][Data][Cr]

Data 00: Off

01: On

Acknowledgment

[n][][Set ID][][OK/NG][9][e][Data][x]

* This feature may not be available for all models.

83. Apply to all inputs (Command: s n, 52)

Applies the picture mode and low value of the current input to the same video value of all inputs.

Transmission

[s][n][][Set ID][][5][2][][Data][Cr]

Data 01: Apply

Acknowledgment

[n][][Set ID][][OK/NG][5][2][Data][x]

* This feature may not be available for all models.

81. OSD Lock (Command: k l)

Selects an OSD Display option.

Transmission

[k][l][][Set ID][][Data][Cr]

Data 00: Off (OSD Lock: Off)

01: On (OSD Lock: On)

Acknowledgment

[I][][Set ID][][OK/NG][Data][x]

84. OSD Position (Command: s n, ac)

Changes the screen position when the OSD Rotation function is set to On.

Transmission

[s][n][][Set ID][][a][c][][Data][Cr]

00: Top

01: Medium

02: Bottom

Acknowledgment

[n][][Set ID][][OK/NG][a][c][Data][x]

85. Fail Over USB Input (Command: s n, 0a)

Selects a USB status for fail over.

Transmission

[s][n][][Set ID][][0a][][Data] [Cr]

Data 00: Off

01: Picture

02: Photos

Acknowledgment

[n][][Set ID][][OK/NG][0a][Data] [x]

86. Fan Failure Check (Command: d w)

Check the fan malfunction.

Transmission

[d][w][][Set ID][][Data][Cr]

Data FF: Read status

Acknowledgment

[w][][Set ID][][OK/NG][Data][x]

Data 00: Fan failure

01: Fan normal

* This feature may not be available for all models.

87. Network Setting (Command: s n, 80 or 81 or 82) Configures network and DNS settings.

Transmission

[s][n][][Set ID][][Data1][][Data2][]
[Data3][][Data4][][Data5][Cr]

Data 1 80: Configures/views the temporary IP mode (Auto/Manual), subnet mask, and gateway.

81: Configures/views the temporary DNS address.

82: Saves temporary settings and views information about the current network.

* If Data1 is 80

Data2 00: Auto

01: Manual

FF: Views the temporary IP mode (Auto/Manual), subnet mask, and gateway.

** If Data2 is 01 (Manual),

Data3: Manual IP address

Data4: Subnet mask address

Data5: Gateway address

* If Data1 is 81,

Data2 DNS address

FF: Displays the temporary DNS address.

* If Data1 is 82,

Data 2 80: Applies the temporary IP mode (Auto/ Manual), subnet mask, and gateway.

81: Applies the temporary DNS address

FF: Information on the current network (IP, subnet gateway and DNS)

*** An example of settings,

1. Auto: sn 01 80 00

2. Manual: sn 01 80 01 010177223241 255255254000 010177222001(IP:10.177.223.241, subnet: 255.255.254.0, gateway: 10.177.222.1)

3. Network read: sn 01 80 ff

4. DNS setting: sn 01 81 156147035018 (DNS: 156.147.35.18)

5. Applying the settings: sn 01 82 80 (applies the saved IP mode (auto/manual), subnet mask, and gateway), sn 01 82 81 (applies the saved DSN)

* Each IP address contains 12 decimal digits.

Acknowledgment

[n][][Set ID][][OK/NG][Data1][Data][x]

- * This feature is available only for wired networks.
- * This feature may not be available for all models.

88. Natural Size (Command: s n, a5) Sets the Natural Size feature.

Transmission

[s][n][][Set ID][][a][5][][Data][Cr]

Data 00 - 64: Natural Size 0 - 100

Acknowledgment

[n][][Set ID][][OK/NG][a][5][Data][x]

