



OWNER'S MANUAL

Color Video Camera

Please read this manual carefully before operating your set and retain it for future reference.

MODEL

LCB5300-BN

LCB5300-BP

LCB5300 Series



MFL67860048



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

REGULATORY INFORMATION: FCC Part 15

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- A suitable conduit entries, knock-outs or glands shall be provided in the cable entries of this product in the end user.

- **Caution:** Danger of explosion if battery is incorrectly replaced. Replaced only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.
- Holes in metal, through which insulated wires pass, shall have smooth well rounded surfaces or shall be provided with brushings.

This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning: Do not install this equipment in a confined space such as a bookcase or similar unit.

Warning: Wiring methods shall be in accordance with the National Electric Code, ANSI/NFPA 70.

Warning: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Warning: To reduce a risk of fire or electric shock, do not expose this product to rain or moisture.

Caution: This installation should be made by a qualified service person and should conform to all local codes.

Caution: To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Caution: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

To disconnect power from mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

Disposal of your old appliance



1. This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.
2. Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
3. You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see www.lg.com/global/recycling



LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC and 2011/65/EU.

European Standards Centre:

Krijgsman 1, 1186 DM Amstelveen The Netherlands

- Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Cautions for Safe Operation

Power Supply

This camera must always be operated AC 24 V or DC 12 V. Certified/Listed Adaptor which comply with LPS.

Handling of the unit

Be careful not to spill water or other liquids on the unit. Be cautious not to get combustible or metallic material inside the body. If used with foreign matter inside, the camera is liable to fail or to get cause of fire or electric shock.

- Remove dust or dirt on the surface of the lens with a blower.
- Use a dry soft cloth to clean the body. If it is very dirty, use a cloth dampened with a small quantity of neutral detergent then wipe dry.
- Avoid the use of volatile solvents such as thinners, alcohol, benzene and insecticides. They may damage the surface finish and/or impair the operation of the camera.

Operating and storage location

Avoid viewing a very bright object (such as light fittings) during an extended period. Avoid operating or storing the unit in the following locations.

- Extremely hot or cold places (operating temperature -10 °C to 50 °C, however, we recommend that the unit be used within a temperature range of 0 °C to 45 °C)
- Damp or dust place
- Places exposed to rain
- Places subject to strong vibration
- Close to generators of powerful electromagnetic radiation such as radio or TV transmitters.

Contents

Features	8	White Balance settings	28
Part Names and Functions	9	Day & Night Setting	29
Connections	11	Motion Detection Setting.....	30
Precautions	11	3D-DNR Setting	31
Connection Overview	11	Privacy Mask Setting	31
Connecting Display device	12	Special Menu Settings	33
Connecting Power Source.....	12	SYSTEM Setting	37
Connecting RS-485 Device.....	13	Specification	38
Connecting Alarm Device.....	14		
Connecting Day&Night Switch.....	15		
Mounting the Lens.....	16		
Flange-back Adjustment	18		
Mounting the camera	19		
Menu Operation	20		
OSD Menu control buttons.....	20		
OSD Menu Overview	21		
General Operation.....	24		
Exposure Settings.....	24		

Features


This Color Video Camera is designed for installation in a video surveillance system.

This manual contains instructions on how to install and manage the Color Video Camera in your video surveillance system.

Should you require any technical assistance, please contact authorized service center.

- High resolution and high sensitivity with a 6 mm (1/3 Type) Exview HAD II CCD.
- Automatically switch between DC 12 V and AC 24 V.
- Smart motion detector.

Part Names and Functions

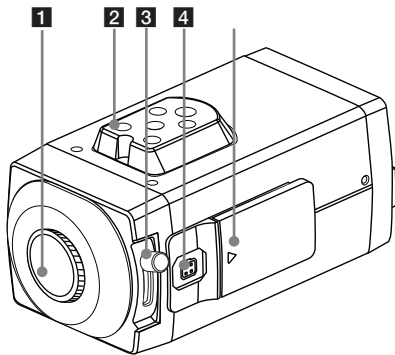

1 Lens mount cap

The lens mount of the camera is covered using a cap to protect it. Remove the lens cap covering the lens.

2 Camera installation bracket

The bracket can be fixed at the top or bottom of the camera.

3 Flange-back adjustment lever


4 Lens iris output connector (LENS)

This 4-pin connector is used to send the Iris control signal and power supply to an auto-iris type lens.

5 Setup menu control buttons

Use these buttons to set the menu options.

Part Names and Functions

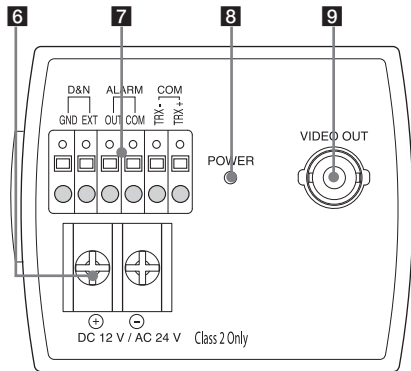

6 Power input terminal

Supplies AC 24 V or DC 12 V from an external power source.

7 External Device Connectors

- D&N
Connect the external switch to set the D&N function manually.
- ALARM (Alarm Output Terminal)
Connect to the alarm input of an external device.
- COM (COMMUNICATION)
Connect to an external controller of RS-485 format.

8 Power indicator

Lights when the camera is powered.

9 Video output connector (BNC type)


Supplies analog video signal (composite) to the connected device such as a DVR or monitor.

Connections

Precautions

- Be sure to switch off the unit before installation and connection.
- A qualified service person, complying with all applicable codes, should perform all required hardware installation.
- Do not expose the power and connection cable to moisture, which may cause damage to the unit.


Connection Overview

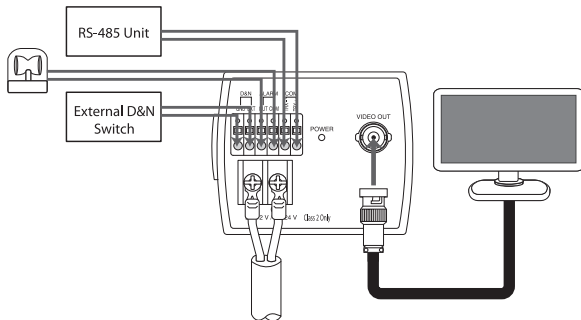

Connections

Connecting Display device


The video signal connection between the camera and the monitor.

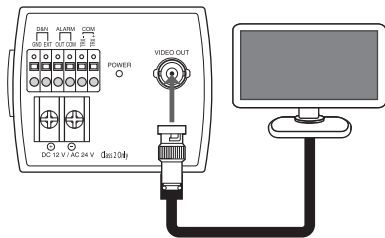

Connecting Power Source

Connect power, using the method listed below:


1. Remove the insulation on the power cable as illustrated. **(1)**
2. Attach the terminal tips. **(2)**
3. Connect the power source. (recommended power adapter is AC 24 V/0.5A, DC 12 V/0.5A or above)

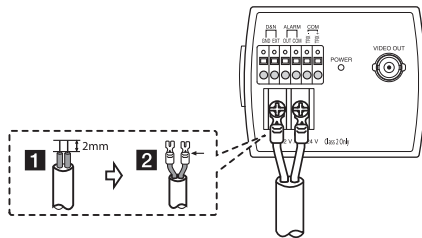

Connections

Connecting RS-485 Device

Use these ports to connect an external device of RS-485 format.

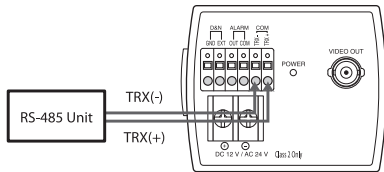

RS-485 Protocol

Data Communication Format

- Data Length: 1 Byte (8 Bit)
- Start/Stop Bit: 1 Bit
- Parity Bit: None
- Baud rate: 9 600 bps

Format

BYTE1	BYTE2	BYTE3
0xE5	0x86	Camera ID

BYTE4	BYTE5	BYTE6
CODE1	CODE2	*C.S.

*C.S. = Check Sum

- The data of total 6 bytes is transmitted from the external RS-485 device to the camera.
- BYTE 6 : The value of Check Sum from 'BYTE 1 ' to 'BYTE 5 '.
- ex) In case of transmission, 0xC5, 0x5F, 0x02, 0x00, 0x0A"
- C.S. = 0xC5 +0x5F +0x02 +0x00 +0x0A = 0x0130
- therefore, C.S. = 0x30

Commands


Function	Command
OSD Menu ON/OFF	E5, 86, ID, 41, 02, C.S.

Connections

LEFT Button	E5, 86, ID, 12, 80, C.S.
Right Button	E5, 86, ID, 12, 90, C.S.
Up Button	E5, 86, ID, 11, 80, C.S.
Down Button	E5, 86, ID, 11, 90, C.S.
Menu Button	E5, 86, ID, 41, 01, C.S.


Connecting Alarm Device

Alarm terminals are used to connect the alarm (relay) devices such as sensors, door switches, etc. Connect the alarm (relay) device to the alarm (relay) output terminal. Alarm signal outputs at an event occurrence.

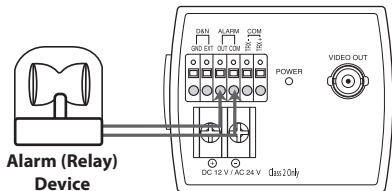

Contact Ratings

- Maximum load current is ± 130 mA.
- Do not connect any system or device that has over 40 Vp-p bias voltage on the contact terminal.

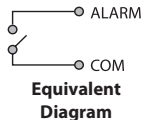


Note:

Use a relay unit if the voltage or current of the connected device exceeds the ratings.

Connections


Connecting Day&Night Switch

Connect the external D&N switch to the D&N terminal.

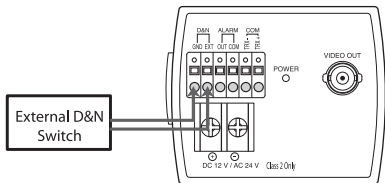


Day function

When you open the external switch, the D&N function is set to Day mode.

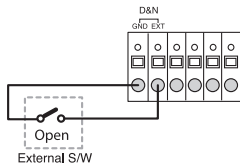

Night function

When you close the external switch, the D&N function is set to night mode.

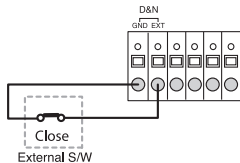


Note:

If you use the external D&N function, you should set the DAY/NIGHT option to EXT on the setup menu.

Connections

Mounting the Lens

1. Remove the lens mount cap from the camera.

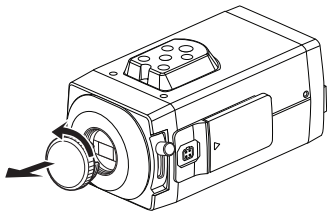


2. Install the auto-iris lens.

- 2-1. CS mount type lens

Carefully align the lens mount with the camera opening, then turn the lens slowly to install it.

- 2-2. C mount type lens

To allow for flange- back adjustment, install the C-mount adaptor (option) on the lens mount, then carefully align the lens mount with the camera opening and turn the lens slowly to install it.

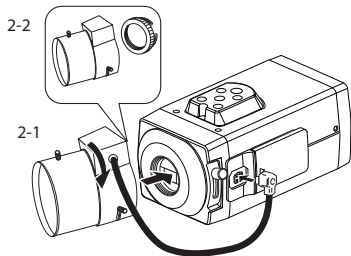

3. Connect the lens plug to the lens iris output connector (LENS) on the side of the camera.

When using lenses from other makers, the plug shape may not correspond to the terminal on the camera.

In such a case, remove the original plug and using a soldering iron, connect a lens iris plug according to the diagram. (Refer to next page.)


Note:

Turn off the camera essentially before the lens connection or replacement.

Connections

Lens iris output connector


Pin layout for the lens iris output connector.

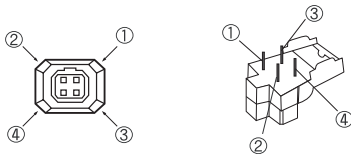


No.	DC type lenses
1	Damping -
2	Damping +
3	Drive +
4	Drive -

Rewire the lens iris plug

1. Cut off the plug of the lens cable, cut off approximately 8 mm of the insulation, and then strip approximately 2 mm of the ends of the cable sheaths.



2. Solder the ends of the cable wires to the ends of the pins, and then attach the cover of the lens iris plug.

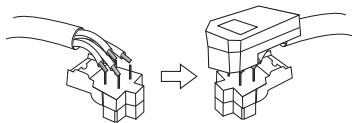

Connections


Flange-back Adjustment

The adjustment is required only when a lens without focus-adjusting mechanism is mounted, or when a lens with adjusting mechanism is mounted and focus that is more accurate is needed.

1. Loosen the flange-back fixing lever.
2. Up and down the flange-back adjusting lever to obtain a focused point while watching the monitor screen.
3. Tighten the flange-back fixing lever.

Note:

The object may be out of focus when using a source of near-infrared light than using the visible light.

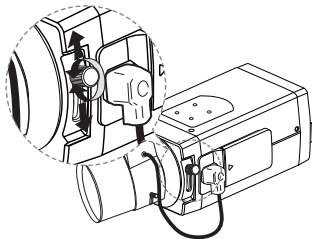


Connections

Mounting the camera

The mounting bracket can be secured on either the top or bottom of the camera. Use the same set of screws to attach the mounting bracket on the camera.

Note:


If using a camera mounting bracket, select a location that is strong enough to bear the full weight of the camera and the mounting bracket for long periods, and install the camera and mounting bracket securely.

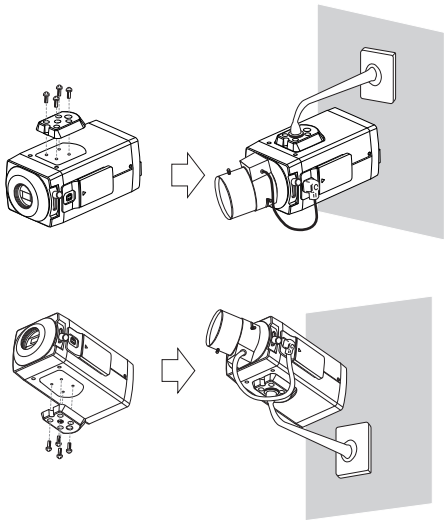





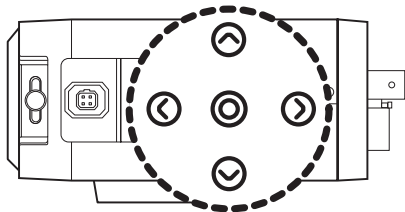

Menu Operation

OSD Menu control buttons

This camera utilizes an on-screen user MENU. To set items on the menu, use the following buttons.



BUTTON	Description
 UP button	Used to move upper direction on the menu screen. Use this button to select an item or adjust the parameters.
 DOWN button	Used to move lower direction on the menu screen. Use this button to select an item or adjust the parameters.
 RIGHT button	Moves the cursor to the right. Used to increment the value selected in the menu. The parameter changes each time this button is pressed.
 LEFT button	Moves the cursor to the left. Used to decrement the value selected in the menu. The parameter changes each time this button is pressed.
 SET button	Executes selections and displays a submenu for an item with the  mark.

Menu Operation

OSD Menu Overview

The following table shows the list of menu items and options. You can adapt the camera to your requirements by setting up the respective items in these menus.

Main Menu	Sub Menu	Contents		
EXPOSURE	ALC /ELC	BACKLIGHT	OFF/BLC/HSBLC	
		BRIGHTNESS	0 to 100	
		AGC	OFF/LOW/MIDDLE/HIGH	
		SHUTTER	x512, ..., x2, AUTO, OFF, A.FLK, 1/160, ..., 1/120 000	
		SENS-UP	OFF / AUTO	
		EXIT	RET/ TOP/ END	
WHITE BAL	ATW	-		
	AUTO	-		
	AWC → SET KEY	-		
	MANUAL	RED	-100 to 100	
		BLUE	-100 to 100	
	EXIT	RET/ TOP/ END		

DAY/ NIGHT	AUTO	BURST	ON/OFF		
		LEVEL	LOW/ MIDDLE/ HIGH/USER		
		DWELL TIME	3 SEC to 60 SEC		
	EXT	BURST	ON/OFF		
	DAY	-			
	NIGHT	BURST	ON/OFF		
EXIT	RET/ TOP/ END				
MOTION DET	OFF	-			
	ON	AREA SETUP	AREA SELECTION	1 to 8	
			STATE	ON / OFF	
			POSITION ←→	0 to 7	
			POSITION ↑↓	0 to 5	
			SIZE ←→	1 to 8	
			SIZE ↑↓	1 to 6	
	SENSITIVITY	0 to 100			
	DISPLAY	OUTLINE / MASK1 / MASK2 / OFF			
	ALARM OUT	MESSAGE / OFF			
	EXIT	RET/ TOP/ END			
3D-DNR	0 to 100				

Menu Operation

PRIVACY MASK	OFF		-	
	ON	RECTANGLE	MASK SELECTION	1 to 8
			DISPLAY	OFF / MOSAIC / COLOR1 to COLOR8
			POSITION ←→	2 to 98
			POSITION ↑↓	2 to 98
			SIZE ←→	4 to 100
			SIZE ↑↓	4 to 100
		CIRCLE	MASK SELECTION	1 to 4
			DISPLAY	OFF / MOSAIC / COLOR1 to COLOR8
			POSITION ←→	0 to 100
			POSITION ↑↓	0 to 100
			SIZE ←→	1 to 15
			SIZE ↑↓	1 to 15
			RADIUS	1 to 100

PRIVACY MASK	ON	POLYGON	MASK SELECTION	1 to 2
			DISPLAY	OFF / MOSAIC / COLOR1 to COLOR8
SHAPE			-	
POSITION			-	
	EXIT	RET/ TOP/ END		
SPECIAL	D-ZOOM	OFF	-	
		ON	ZOOM	x 1.0 to x 16.0
			PAN	-100 to 100
	TILT		-100 to 100	
	D-EFFECT	OFF / MIRROR / V-FLIP / ROTATE		
	SHARPNESS	0 to 100		
	COLOR	0 to 100		
	SYNC	INT / LL		
	USER TITLE	ON / OFF		
	LANGUAGE	ENG/CHN/KOR/JAP/FRE/ITA/SPA/POR/DUT/GER/POL/RUS/TUR/ARA/HEB		
EXIT	RET/ TOP/ END			


Menu Operation

SYSTEM	FACTORY RESET	-	
	COMMUNICATION	CAMERA ID	OFF / 1 to 255
		PROTOCOL	LG / PELCO-D / PELCO-P
		BAUDRATE	2400 bps, 4800 bps, 9600 bps
		SAVE & REBOOT	-
EXIT	RET/ TOP/ END		
EXIT	RET/ TOP/ END		

Menu Operation

General Operation

1. Press [SET] button.
[CAMERA SETTING] menu appears on the monitor.

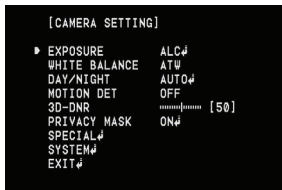


2. Use [UP] or [DOWN] button to select an option then press [SET] button.
Submenu appears on the monitor.
3. Use [UP] or [DOWN] button to select a submenu option.
4. Use [LEFT] or [RIGHT] button to select a value.
 - RET: Return to the previous.
 - TOP: Return to the CAMERA SETTING menu screen.
 - END: Exit the setup menu.

Exposure Settings

You can set the exposure options using the EXPOSURE menu.

1. Select [EXPOSURE] option on the [CAMERA SETTING] menu.
2. Use [LEFT] or [RIGHT] button to select a mode.
3. Press [SET] button and the [EXPOSURE] menu appears.

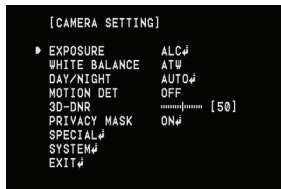

Menu Operation

Backlight setting

Use Backlight option to view the object clearly in backlight conditions.



1. Select [Backlight] option.
2. Use [LEFT] or [RIGHT] button to select a mode then press [SET].
 - BLC: Camera's backlight compensation feature helps alleviate issues of visibility in high contrast areas. Set the BLC limit.
 - HSBL: Use for masking brightness of the specific area to view the subject more clearly. The HSBL mode is automatically activated regardless of Day and Night mode.

- > AREA SETTING: Use [LEFT] or [RIGHT] button to select a area then use [UP] or [DOWN] button to select a [ON] or [OFF]. Press [SET] to exit the Area setting menu.
- > GRAY SCALE: Use [LEFT] or [RIGHT] button to select a gray scale. (GRAY, D.GRAY, BLACK)
- > USER SCALE: Use [LEFT] or [RIGHT] button to select a bright level. (5 level)
- > MASK: Use [LEFT] or [RIGHT] button to select [ON] or [OFF].
If you set the [MASK] to [ON], the mask function is activate only when the [HSBLC] is automatically activated in low luminance scene.

- OFF: Not used.

Menu Operation

BRIGHTNESS setting

You can increase the brightness of the darkened video. If you set the brightness to lower value, the image is darkened. If you set the brightness to higher value, the image gets bright.



1. Select [BRIGHTNESS] option.
2. Use [LEFT] or [RIGHT] button to set the bright level.

AGC (Automatic Gain Control) setting

If the images are too dark, change the maximum [AGC] value to make the images brighter. But noise is increase.



1. Select [AGC] option.
2. Use [LEFT] or [RIGHT] button to select a mode.

Menu Operation

SHUTTER (Shutter Speed) setting

Select the desired shutter speed for camera exposure. You can change the shutter speed to higher speed to capture fast-moving subjects, though the image becomes darker.



1. Select [SHUTTER] option.
2. Use [LEFT] or [RIGHT] button to set shutter speed.
 - AUTO: Adjust the [LOW LIMIT] and [HIGH LIMIT].
 - > LOW LIMIT: Use [LEFT] or [RIGHT] button to set the [LOW LIMIT].
 - > HIGH LIMIT: Use [LEFT] or [RIGHT] button to set the [HIGH LIMIT].

Note:

When the SHUTTER is set to AUTO, the picture may become

unstable if the camera faces a bright fluorescent light directly. Therefore, take care when installing.

SENS-UP setting

If pictures are not clear due to darkness, this SENS-UP operation would increase the sensitivity of picture.



1. Use [UP] or [DOWN] button to select [SENS-UP] option.
2. Use [LEFT] or [RIGHT] button to select mode.
 - AUTO: Adjust the sensitivity of the picture automatically.
 - > SENS-UP LIMIT: Use [LEFT] or [RIGHT] button to set the SENS-UP limit.
 - OFF: Not used.


Menu Operation

Note:

If you set to one of the [SHUTTER] options except [AUTO] on the [SHUTTER] menu, the [SENS-UP] setting is not available and [---] mark is displayed.

White Balance settings

Select the method by which the camera shifts its output colors to compensate for the color of a light source.

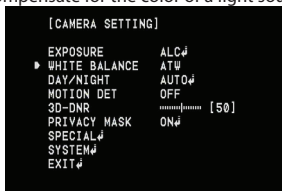


1. Select [WHITE BAL] option.
2. Use [LEFT] or [RIGHT] button to select a mode then press [SET].
 - ATW (Auto-Tracing White Balance): Use [LEFT] or

[RIGHT] button to select the ATW.

- AUTO : Use [LEFT] or [RIGHT] button to select the [AUTO].
- AWC➡SET KEY: If you select the [AWC➡SET KEY] mode, you will be able to set up the White Balance automatically.
- MANUAL: You can set the white balance options manually. Push the [AWC➡SET KEY] mode, and then adjust White Balance. You can set the RED and BLUE in the [MANUAL] mode.
 - > RED: Obtains the optimum amount of red gain.
 - > BLUE: Obtains the optimum amount of blue gain.

Menu Operation

Day & Night Setting

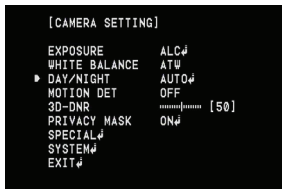

1. Select [DAY/NIGHT] option.
2. Use [LEFT] or [RIGHT] button to select mode for Day/Night function.
 - AUTO: You will be able to change the Day/Night mode automatically.

Note:

If you set the AGC to [OFF] on the [EXPOSURE] menu, the AUTO mode of the DAY/NIGHT function is not available and [--] mark is displayed.

- > BURST: Use [LEFT] or [RIGHT] button to select [ON] or [OFF].

- > LEVEL: Use [LEFT] or [RIGHT] button to select a level.
- > DWELL TIME: Use [LEFT] or [RIGHT] button to select a dwell time.
- EXT : Switches between color picture and black-and-white picture when an external day/night switching signal is received.
 - > BURST: Use [LEFT] or [RIGHT] button to select [ON] or [OFF].
- DAY: Color mode enabled.
- NIGHT: Black-and-white mode enabled.
 - > BURST: Use [LEFT] or [RIGHT] button to select [ON] or [OFF].


Note:

Select the BURST [ON] or [OFF] when the color noise occurs on the screen in NIGHT Mode after operating the Line-Lock.

Menu Operation

Motion Detection Setting


The motion detection detects the moving objects in the scene by monitoring changes in brightness level. You can select the level of sensitivity for motion detection to 8 zone.

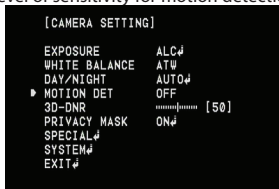

1. Select [MOTION DET] option.
2. Use [LEFT] or [RIGHT] button to select a [ON] and press [SET]. The [MOTION DETECTION] menu appears.
3. Select [AREA SETUP] option.
 - Use [LEFT] or [RIGHT] button to select a area (1/8 to 8/8) on the [AREA SELECTION].
 - Use [LEFT] or [RIGHT] button to set up the [ON] or [OFF] on the [STATE].
- Use [UP] or [DOWN] to select an option then use [LEFT] or [RIGHT] button to adjust the option.
 - > POSITION \leftrightarrow : Moves horizontal position of the mask.
 - > POSITION \updownarrow : Moves vertical position of the mask.
 - > SIZE \leftrightarrow : Enlarge or decrease the horizontal size of the mask.
 - > SIZE \updownarrow : Enlarge or decrease the vertical size of the mask.
4. Use [SENSITIVITY] option to obtain the optimum detection level.
5. Use [LEFT] or [RIGHT] button to select the [DISPLAY] option.
6. Use [LEFT] or [RIGHT] button to select the [ALARM OUT] option.

Menu Operation


3D-DNR Setting

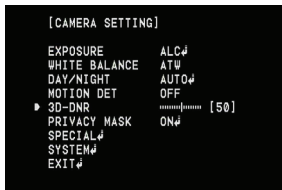

1. Select [3D-DNR] option.
If pictures are not clear due to brightness, this option would reduce the noise of picture.
2. Use [LEFT] or [RIGHT] button to select a value.

Privacy Mask Setting

This function is aiming at the protection of personal privacy, selecting a screen part black not to be displayed in the screen. Up to 14 zones can be registered.

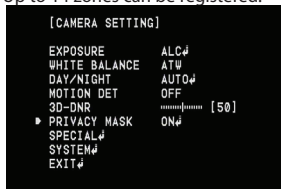

1. Select [PRIVACY] option.
2. Use [LEFT] or [RIGHT] button to select a [ON] and press [SET]. The PRIVACY SETUP menu appears.
 - RECTANGLE :
 - > Use [LEFT] or [RIGHT] button to select a mask (MASK1 to MASK8) on the [MASK SELECTION].
 - > Use [LEFT] or [RIGHT] button to set up the

Menu Operation

OFF, MOSAIC, COLOR 1 to COLOR 8 on the [DISPLAY] option.

> Use [UP] or [DOWN] to select an option then use [LEFT] or [RIGHT] button to adjust the option.

- POSITION \leftrightarrow : Moves horizontal position of the mask.
- POSITION \updownarrow : Moves vertical position of the mask.
- SIZE \leftrightarrow : Enlarge or decrease the horizontal size of the mask.
- SIZE \updownarrow : Enlarge or decrease the vertical size of the mask.

• CIRCLE :

- > Use [LEFT] or [RIGHT] button to select a mask (MASK1 to MASK4) on the [MASK SELECTION].
- > Use [LEFT] or [RIGHT] button to set up the OFF, MOSAIC, COLOR 1 to COLOR 8 on the [DISPLAY] option.
- > Use [UP] or [DOWN] to select an option then

use [LEFT] or [RIGHT] button to adjust the option.

- POSITION \leftrightarrow : Moves horizontal position of the mask.
- POSITION \updownarrow : Moves vertical position of the mask.
- SIZE \leftrightarrow : Enlarge or decrease the horizontal size of the mask.
- SIZE \updownarrow : Enlarge or decrease the vertical size of the mask.
- RADIUS SIZE : You can adjust the RADIUS SIZE (1 to 100).

• POLYGON :

- > Use [LEFT] or [RIGHT] button to select a mask (MASK1 to MASK2) on the [MASK SELECTION].
- > Use [LEFT] or [RIGHT] button to set up the OFF, MOSAIC, COLOR 1 to COLOR 8 on the [DISPLAY] option.
- > Use the [LEFT], [RIGHT], [UP], [DOWN], [SET] button to draw the polygon on the [SHAPE].

Menu Operation


- > Use the [LEFT], [RIGHT], [UP], [DOWN], [SET] button to move the polygon on the [POSITION].

Notes:

- You can adjust the mask color manually except for COLOR 8.
- RED, GREEN, BLUE and TRANSPARENCY adjustments are applied in common from COLOR 1 to COLOR 7, after mask setting.

Special Menu Settings

This menu lets you adjust and set up D-ZOOM, D-EFFECT, SHARPNESS, COLOR, SYNC, USER TITLE, LANGUAGE function by yourself in the [SPECIAL] menu.

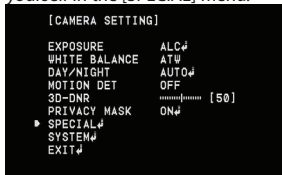

1. Select [SPECIAL] option.
2. Press [SET] button and the [SPECIAL] menu appears.

D-ZOOM (Digital Zoom) Setting

You can select the digital zoom level.



1. Select [D-ZOOM] option on the [SPECIAL] menu.
2. Use [LEFT] or [RIGHT] button to select a [ON] then press [SET] the DIGITAL ZOOM menu appears. When you set to ON, the displayed image can be shaking.
3. Use [UP] or [DOWN] to select a option then use [LEFT] or [RIGHT] button to select a level.
 - ZOOM: Use [LEFT] or [RIGHT] button to enlarge the screen.

Menu Operation

- PAN: Use [LEFT] or [RIGHT] button to move the screen.
- TILT: Use [LEFT] or [RIGHT] button to move the screen.

Note:

If you set the [D-ZOOM] to [ON], the ZOOM level is set to [x1.0] automatically.

D-EFFECT (Digital effect) Setting

You can select the digital effect.



1. Select [D-EFFECT] option on the [SPECIAL] menu.
2. Use [LEFT] or [RIGHT] button to select a digital effect.

- MIRROR: Turn on the mirror effect.
- ROTATE: Rotate the picture. (180°)
- V-FLIP: Flip the picture vertically.
- OFF: Turn off the digital effect.

SHARPNESS Setting

The degree to which the boundary of the two portions is clearly distinguished.



1. Select [SHARPNESS] option on the [SPECIAL] menu.
2. Use [LEFT] or [RIGHT] button to change a adjust the option. If you set the sharpness value to higher, the image outline becomes sharp. If you set to lower value, the image outline becomes dim.

Menu Operation

COLOR Setting

You can switch the displayed picture to gray scale or color.



1. Select [COLOR] option on the [SPECIAL] menu.
2. Use [LEFT] or [RIGHT] button to change a adjust the option.

SYNC Setting



1. Select [SYNC] option on the [SPECIAL] menu.
2. The [SYNC] option is set to [INT] automatically.

Note:

AC24V Adaptor have to use for the [LL] mode setting.

Menu Operation

USER TITLE Setting

You can use the camera identification to assign a number and character to the camera. To disappear the user title, select [OFF].

1. Select [USER TITLE] option on the [SPECIAL] menu.
2. Use [LEFT] or [RIGHT] button to select a [ON] then press [SET]. The USER TITLE menu appears.



3. Use [UP], [DOWN], [LEFT] or [RIGHT] button to select a character or number then press [SET] button.
 - CLR: Clear all entered characters and numbers.
 - POS: Move the USER TITLE position on the screen using the arrow buttons.
 - END: Confirm your selection or exit the setting
 - **1** (Blank): Inserts a space at the cursor position.

- / : Moves cursor to left or right.

LANGUAGE Setting


Select the viewer language for the camera setup menu and OSD information display.



1. Select [LANGUAGE] option on the [SPECIAL] screen.
2. Press [LEFT] or [RIGHT] button to select a language.

Menu Operation

SYSTEM Setting

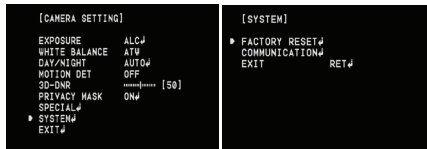

1. Select the [SYSTEM] menu.
2. Press [SET] button and the [SYSTEM] menu appears.
3. Use [UP] or [DOWN] button to select the option.
 - **FACTORY RESET:** To reset the camera setting to factory setting, select the [FACTORY RESET] option.
 - **COMMUNICATION**
 - > **CAMERA ID:** You can use the camera identification [CAMERA ID] to assign a number to the camera. Use [LEFT] or [RIGHT] to select a CAMERA ID.
 - > **PROTOCOL:** Select a protocol for RS-485 communication.

- > **BAUD RATE:** Set the speed of communication between the camera and the RS-485 unit.
- > **SAVE & REBOOT:** To confirm the communication settings.

4. Press [SET] button to confirm your selection.

Notes:

- You need to set up [SAVE & REBOOT] for save [CAMERA ID], [PROTOCOL], [BAUD & RATE] changes.
- The menu screen is move to top menu, after set up [FACTORY RESET].

Specification

Item		LCB5300-BN	LCB5300-BP
Signal System		NTSC	PAL
Total Pixels number		520 000 Pixels	610 000 Pixels
Effective Pixels number		480 000 Pixels	570 000 Pixels
Image Sensor		6 mm (1/3 Type) Exview HAD II CCD	
ISP		XDI-V	
Lens		C / CS Mount	
Horizontal Resolution	Color	650 TV Lines	
	B / W	700 TV Lines	
S/N Ratio		50 dB	
Day & Night		ICR (AUTO / DAY / NIGHT / EXT)	
Sens-up		OFF / AUTO(x2, ... x512) /MANUAL(x2, ... x512)	
Minimum Illumination (F1.2, 30 IRE)	Color	0.03 lx (Sens-up Off), 0.000 3 lx (Sens-up Auto), 0.000 1 lx (Sens-up X512)	
	B / W	0.002 lx (Sens-up Off), 0.000 03 lx (Sens-up Auto), 0.000 001 lx (Sens-up X512)	
White Balance		ATW / AUTO / AWC → SET KEY / MANUAL	
Digital Zoom		X16	
IRIS Control		DC	
Scanning Frequency (H/V)		15.734 kHz / 59.94 Hz	15.625 kHz / 50 Hz
Sync. System		Internal / Line Lock	

Specification

Auto Gain Control	OFF/ LOW/ MIDDLE/ HIGH	
Exposure	ALC / ELC	
Video Output	1 Vp-p Composite (75 Ω)	
Electronic Shutter	1/60 to 1/120 000	1/50 to 1/120 000
Protocol	RS-485 : LG, Pelco-D, Pelco-P	
Backlight Compensation	BLC / HSBLC / OFF	
Motion Detection	8 Zones	
Privacy Masking	14 Mask Zones	
3D-DNR	2D + 3D-DNR	
Digital Effect	Off / V-Flip / Mirror / Rotate	
Control Method	RS-485, Coaxial Communication	
Power Source	DC 12V / AC 24V	
Power Consumption	240 mA	
Operating Temperature/ Humidity	-10 °C to 50 °C / 0 % RH to 80 % RH	
Storage Temperature/ Humidity	-20 °C to 60 °C / 0 % RH to 85 % RH	
Dimension (W x H x D)	67.36 mm x 61.50 mm x 133. 90 mm	
Weight	362 g	

